Linux Lab v0.4 Manual

TinyLab Community | Tinylab.org

May 31, 2020

目录

1.	Linux Lab Overview	7
	1.1 Project Introduction	7
	1.2 Project Homepage	7
	1.3 Demonstration	8
	1.3.1 Basic Operations	8
	1.3.2 Cool Operations	8
	1.4 Project Functions	8
	1.5 Project History	9
	1.5.1 Project Origins	9
	1.5.2 Problems Solved	9
	1.5.3 Project Born	9
2 .	Linux Lab Installation	10
	2.1 Hardware and Software Requirement	10
	2.2 Docker Installation	10
	2.3 Choose a working directory	11
	2.4 Download the lab	12
	2.5 Run and login the lab	12
	2.6 Update and rerun the lab	13
	2.7 Quickstart: Boot a board	14
3.	Linux Lab Kickstart	15
	3.1 Using boards	15
	3.1.1 List available boards	15
	3.1.2 Choosing a board	16
	3.1.3 Using as plugins	16
	3.1.4 Configure boards	17
	3.2 Build in one command	17
	3.3 Detailed Operations	18
	3.3.1 Downloading	18

	3.3.2 Checking out	19
	3.3.3 Patching	19
	3.3.4 Configuration	20
	3.3.5 Building	21
	3.3.6 Saving	21
	3.3.7 Booting	22
4.	Linux Lab Advance	24
	4.1 Using Linux Kernel	24
	4.1.1 non-interactive configuration	24
	4.1.2 using kernel modules	25
	4.1.3 using kernel features	26
	4.2 Using Uboot Bootloader	27
	4.3 Using Qemu Emulator	29
	4.4 Using Toolchains	29
	4.5 Using Rootfs	30
	4.6 Debugging Linux and Uboot	31
	4.6.1 Debugging Linux	31
	4.6.2 Debugging Uboot	32
	4.7 Test Automation	32
	4.8 File Sharing	35
	4.8.1 Install files to rootfs	35
	4.8.2 Share with NFS	35
	4.8.3 Transfer via tftp	36
	4.8.4 Share with 9p virtio	36
	4.9 Learning Assembly	38
	4.10 Running any make goals	38
	4.11 Moro Usago	38

5.	Linux Lab Development	39
	5.1 Choose a board supported by qemu	39
	5.2 Create the board directory	39
	5.3 Clone a Makefile from an existing board	39
	5.4 Configure the variables from scratch	39
	5.5 At the same time, prepare the configs	39
	5.6 Choose the versions of kernel, rootfs and uboot	40
	5.7 Configure, build and boot them	41
	5.8 Save the images and configs	42
	5.9 Upload everything	42
6.	\mathbf{FAQs}	43
	6.1 Docker Issues	43
	6.1.1 Speed up docker images downloading	43
	6.1.2 Docker network conflicts with LAN	43
	6.1.3 Why not allow running Linux Lab in local host	43
	6.1.4 Run tools without sudo	43
	6.1.5 Network not work	44
	6.1.6 Client. Timeout exceeded while waiting headers	44
	6.1.7 Restart Linux Lab after host system shutdown or reboot	45
	6.2 Qemu Issues	45
	6.2.1 Why kvm speedding up is disabled	45
	6.2.2 Poweroff hang	46
	6.2.3 How to exit qemu	46
	6.2.4 Boot with missing sdl2 libraries failure	46
	6.3 Environment Issues	47
	6.3.1 NFS/tftpboot not work	47
	6.3.2 How to switch windows in vim	47
	6.3.3 How to delete typo in shell command line	47
	6.3.4 Language input switch shortcuts	48
	6.3.5 How to tune the screen size	48

欢迎加入 Linux Lab 用户组,联系微信: tinylab, 公众号: 泰晓科技

	6.3.6 How to work in fullscreen mode	49
	6.3.7 How to record video	49
	6.3.8 Linux Lab not response	50
	6.3.9 VNC login with failures	50
	6.3.10 Ubuntu Snap Issues	51
	6.4 Lab Issues	51
	6.4.1 No working init found	51
	6.4.2 linux/compiler-gcc7.h: No such file or directory	51
	6.4.3 linux-lab/configs: Permission denied	51
	6.4.4 scripts/Makefile.headersinst: Missing UAPI file	52
	6.4.5 unable to create file: net/netfilter/xt_dscp.c	52
	6.4.6 how to run as root	52
7.	Contact and Sponsor	53




Subscribe Wechat:

1. Linux Lab Overview

1.1 Project Introduction

This project aims to create a Qemu-based Linux development Lab to easier the learning, development and testing of Linux Kernel.

Linux Lab is open source with no warranty – use at your own risk.

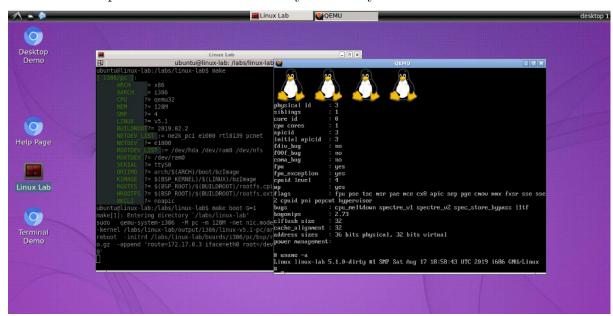

1.2 Project Homepage

- Homepage
 - http://tinylab.org/linux-lab/
- Repository
 - https://gitee.com/tinylab/linux-lab
 - https://github.com/tinyclub/linux-lab

Related Projects:

- Cloud Lab
 - Linux Lab Running Environment Manager
 - http://tinylab.org/cloud-lab
- Linux 0.11 Lab
 - Learning Linux 0.11

- Download it to labs/linux-0.11-lab and use it in Linux Lab directly
- http://tinylab.org/linux-0.11-lab
- CS630 Qemu Lab
 - Learning X86 Linux Assembly
 - Download it to labs/cs630-gemu-lab and use it in Linux Lab directly
 - http://tinylab.org/cs630-qemu-lab

1.3 Demonstration

1.3.1 Basic Operations

- Basic Usage
- Learning Uboot
- Learning Assembly
- Boot ARM Ubuntu 18.04 on Vexpress-a9 board
- Boot Linux v5.1 on ARM64/Virt board
- Boot Riscv32/virt and Riscv64/virt boards

1.3.2 Cool Operations

- One command of testing a specified kernel feature
- One command of testing multiple specified kernel modules
- Batch boot testing of all boards
- Batch testing the debug function of all boards

1.4 Project Functions

Now, Linux Lab becomes an intergrated Linux learning, development and testing environment, it supports:

Items	Description
Boards	Qemu based, 8+ main Architectures, 15+ popular boards
Components	Uboot, Linux / Modules, Buildroot, Qemu, Linux v 2.6.10 $\sim 5.\mathrm{x}$ supported
Prebuilt	All of above components has been prebuilt
Rootfs	Support include initrd, harddisk, mmc and nfs, Debian availab for ARM
Docker	Cross toolchains available in one command, external ones configurable
Acess	Access via web browsers, available everywhere via web vnc or web ssh

Items	Description
Network	Builtin bridge networking, every board has network (except Raspi3)
Boot	Support serial port, curses (bash friendly) and graphic booting
Testing	Support automatic testing via make test target
Debugging	debuggable via make debug target

Continue reading for more features and usage.

1.5 Project History

1.5.1 Project Origins

About 9 years ago, a tinylinux proposal: Work on Tiny Linux Kernel accepted by embedded linux foundation, therefore I have worked on this project for serveral months.

1.5.2 Problems Solved

During the project cycle, several scripts written to verify if the adding tiny features (e.g. gc-sections) breaks the other kernel features on the main cpu architectures.

These scripts uses qemu-system-ARCH as the cpu/board simulator, basic boot+function tests have been done for ftrace+perf, accordingly, defconfigs, rootfs, test scripts have been prepared, at that time, all of them were simply put in a directory, without a design or holistic consideration.

1.5.3 Project Born

They have slept in my harddisk for several years without any attention, untill one day, docker and novnc came to my world, at first, Linux 0.11 Lab was born, after that, Linux Lab was designed to unify all of the above scripts, defconfigs, rootfs and test scripts.

2. Linux Lab Installation

2.1 Hardware and Software Requirement

Linux Lab is a full embedded Linux development system, it needs enough calculation capacity and disk & memory storage space, to avoid potential extension issues, here is the recommended configuration:

Hardware	Requirement	Description
Processor	$X86_64, > 1.5GHz$	Must choose 64bit X86 while using virtual machine
Disk	>=50G	System (25G), Docker Images(~5G), Linux Lab (20G)
Memory	>=4G	Lower than 4G may have many unpredictable exceptions

If often use, please increase disk storage to 100G~200G and memory storage to 8G.

And here is a list for verified operating systems for references:

OS	System&Kernel Version	Docker version	Others
Ubuntu	16.04 + 4.4	18.09.4	terminator
Ubuntu	18.04 + 5.0/4.15	18.09.4	Linux v5.3 has issue

Some engineers have run CentOS, Windows 10 and Mac OSX, welcome to take a look at the systems running Linux Lab and share yours, for example:

```
$\text{tools/docker/env.sh}$
System: Ubuntu 16.04.6 LTS
Linux: 4.4.0-176-generic
Docker: Docker version 18.09.4, build d14af54
```

2.2 Docker Installation

Docker is required by Linux Lab, please install it at first:

- Linux, Mac OSX, Windows 10

 Docker CE
- older Windows (include some older Windows 10)
 Install Ubuntu via Virtualbox or Vmware Virtual Machine

Before running Linux Lab, please make sure the following command works without sudo and without any issue:

\$ docker run hello-world

In China, to use docker service normally, please **must** configure one of chinese docker mirror sites, for example:

- Aliyun Docker Mirror Documentation
- USTC Docker Mirror Documentation

More docker related issues, such as download slowly, download timeout and download errors, are cleary documented in the 6.1 section of FAQs.

The other issues, please read the official docker docs.

Notes for Ubuntu Users - doc/install/ubuntu-docker.md

Notes for Windows Users:

- Please make sure your Windows version support docker: Official Docker Documentation
- Linux Lab only tested with 'Git Bash' in Windows, please must use with it
 - After installing Git For Windows, "Git Bash Here" will come out in rightbutton press menu

2.3 Choose a working directory

If installed via Docker Toolbox, please enter into the /mnt/sda1 directory of the default system on Virtualbox, otherwise, after poweroff, the data will be lost for the default /root directory is only mounted in DRAM.

\$ cd /mnt/sda1

For Linux, please simply choose one directory in ~/Downloads Or ~/Documents.

\$ cd ~/Documents

For Windows and Mac OSX, to compile Linux normally, please enable or create a case sensitive filesystem as the working space at first:

Windows:

```
1 $ cd /path/to/cloud-lab
2 $ fsutil file SetCaseSensitiveInfo ./ enable
```

Mac OSX:

```
$ hdiutil -type SPARSE create -size 60g -fs "Case-sensitive Journaled HFS+" -volname labspace labspace.dmg

2 $ hdiutil attach -mountpoint ~/Documents/labspace -no-browse labspace.dmg

3 $ cd ~/Documents/labspace
```

Notes: Docker Images, Linux and Buildroot source code require many storage space, please reserve at least 50G for them.

2.4 Download the lab

Use Ubuntu system as an example:

Download cloud lab framework, pull images and checkout linux-lab repository:

```
1  $ git clone https://gitee.com/tinylab/cloud-lab.git
2  $ cd cloud-lab/ && tools/docker/choose linux-lab
```

2.5 Run and login the lab

Launch the lab and login with the user and password printed in the console:

```
1 $ tools/docker/run linux-lab
```

Login with Bash:

```
1 $ tools/docker/bash
```

Re-login the lab via web browser:

```
1 $ tools/docker/webvnc
```

The other login methods:

```
1 $ tools/docker/vnc
2 $ tools/docker/webssh
```

Choose one of the method:

```
$ tools/docker/login list # List, choose and record
$ tools/docker/login vnc # Choose one directly and record for late login
```

Summary of login methods:

Login Method	Description	Default User	Where
bash	docker bash	ubuntu	localhost
vnc	normal vnc	ubuntu	$local host + VNC\ client$
webvnc	web desktop	ubuntu	anywhere via internet
webssh	web ssh	ubuntu	anywhere via internet

Since vnc clients differs from operating systems, we use webvnc by default to make sure auto login vnc for all systems.

If really want to use local vnc clients, please install a vnc client, for example: vinagre, then specify it like this:

```
1 $ tools/docker/vnc vinagre
```

If the above command not work normally, based on the information printed above, please configure the vnc client yourself.

2.6 Update and rerun the lab

If want a newer version, we **must** back up any local changes at first, for example, save the container:

```
$ tools/docker/commit linux-lab
```

And then update everything:

```
1 $ tools/docker/update linux-lab
```

If fails, please try to clean up the containers:

```
1 $ tools/docker/rm-all
```

Or even clean up the whole environments:

```
1 $ tools/docker/clean-all
```

Then rerurn linux lab:

```
1 $ tools/docker/rerun linux-lab
```

2.7 Quickstart: Boot a board

Issue the following command to boot the prebuilt kernel and rootfs on the default vexpress-a9 board:

```
1 $ make boot
```

Login as root user without password(password is empty), just input root and press Enter:

```
Welcome to Linux Lab

linux-lab login: root

uname -a
Linux linux-lab 5.1.0 #3 SMP Thu May 30 08:44:37 UTC 2019 armv71 GNU/Linux
```

3. Linux Lab Kickstart

3.1 Using boards

3.1.1 List available boards

List builtin boards:

```
1
   $ make list
 2
   [ aarch64/raspi3 ]:
 3
         ARCH
                   = arm64
 4
          CPU
                  ?= cortex-a53
 5
         LINUX
                  ?= v5.1
 6
         ROOTDEV ?= /dev/mmcblk0
 7
   [ aarch64/virt ]:
 8
         ARCH
                   = arm64
 9
          CPU
                  ?= cortex-a57
10
         LINUX
                  ?= v5.1
         ROOTDEV ?= /dev/vda
11
12
   [ arm/versatilepb ]:
         ARCH
13
                  = arm
          CPU
                  ?= arm926t
14
         LINUX
                  ?= v5.1
15
         ROOTDEV ?= /dev/ram0
16
   [ arm/vexpress-a9 ]:
17
18
          ARCH
19
          CPU
                  ?= cortex-a9
20
         LINUX
                  ?= v5.1
21
         ROOTDEV ?= /dev/ram0
22
   [ i386/pc ]:
23
         ARCH
                   = x86
          CPU
                  ?= i686
25
         LINUX
                  ?= v5.1
         ROOTDEV ?= /dev/ram0
26
27
   [ mipsel/malta ]:
28
          ARCH
                   = mips
29
          CPU
                  ?= mips32r2
30
         LINUX
                  ?= v5.1
         ROOTDEV ?= /dev/ram0
31
32
   [ ppc/g3beige ]:
33
         ARCH
                   = powerpc
34
          CPU
                  ?= generic
35
         LINUX
                ?= v5.1
         ROOTDEV ?= /dev/ram0
36
37
   [ riscv32/virt ]:
38
          ARCH
39
          CPU
                  ?= any
40
         LINUX
                  ?= v5.0.13
41
         ROOTDEV ?= /dev/vda
42
   [ riscv64/virt ]:
43
          ARCH
44
          CPU
                  ?= any
                  ?= v5.1
45
         LINUX
         ROOTDEV ?= /dev/vda
46
   [ x86_64/pc ]:
47
48
          ARCH
                   = x86
49
          CPU
                  ?= x86_64
50
         LINUX
                  ?= v5.1
51
         ROOTDEV ?= /dev/ram0
```

ARCH, PLUGIN and FILTER arguments are supported:

and more:

```
$ make list-board # only ARCH

$ make list-short # ARCH and LINUX

$ make list-base # no plugin

$ make list-plugin # only plugin

$ make list-full # everything
```

3.1.2 Choosing a board

By default, the default board: vexpress-a9 is used, we can configure, build and boot for a specific board with BOARD, for example:

```
1 $ make BOARD=malta
2 $ make boot
```

If using board, it only works on-the-fly, the setting will not be saved, this is helpful to run multiple boards at the same and not to disrupt each other:

```
1 $ make board=malta boot
```

This allows to run multi boards in different terminals or background at the same time.

Check the board specific configuration:

```
1 $ cat boards/arm/vexpress-a9/Makefile
```

3.1.3 Using as plugins

The 'Plugin' feature is supported by Linux Lab, to allow boards being added and maintained in standalone git repositories. Standalone repository is very important to

ensure Linux Lab itself not grow up big and big while more and more boards being added in.

Book examples or the boards with a whole new cpu architecture benefit from such feature a lot, for book examples may use many boards and a new cpu architecture may need require lots of new packages (such as cross toolchains and the architecture specific qemu system tool).

Here maintains the available plugins:

- C-Sky Linux
- Loongson Linux

3.1.4 Configure boards

Every board has its own configuration, some can be changed on demand, for example, memory size, linux version, buildroot version, qemu version and the other external devices, such as serial port, network devices and so on.

The configure method is very simple, just edit it by referring to current values (boards /<BOARD>/Makefile), this command open local configuration (boards/<BOARD>/.labconfig) via vim:

```
1 $ make local-edit
```

But please don't make a big change once, we often only need to tune linux version, this command is better for such case:

If want to upstream your local changes, please use board-edit and board-config, otherwise, local-edit and local-config are preferrable, for they will avoid conflicts while pulling remote updates.

3.2 Build in one command

v0.3+ version add target dependency by default, so, if want to compile a kernel, just run:

It will do everything required, of course, we still be able to run the targets explicitly.

And futher, with the timestamping support, finished targets will not be run again during the late operations, if still want, just clean the stamp and run it again:

```
$ make cleanstamp kernel-build

$ make kernel-build

Or

$ make force-kernel-build
```

To clean all of the stamp files:

```
1 $ make cleanstamp kernel
```

This function also support uboot, root and qemu.

3.3 Detailed Operations

3.3.1 Downloading

Download board specific package and the kernel, buildroot source code:

```
1 $ make source APP="bsp kernel root uboot"
2 Or
3 $ make source APP=all
4 Or
5 $ make source all
```

Download one by one:

```
9 $ make source kernel
10 $ make source root
11 $ make source uboot
```

3.3.2 Checking out

Checkout the target version of kernel and builroot:

```
1 $ make checkout APP="kernel root"
```

Checkout them one by one:

```
$ make kernel-checkout

$ make root-checkout

4 Or

5 

6 $ make checkout kernel

7 $ make checkout root
```

If checkout not work due to local changes, save changes and run to get a clean environment:

The same to gemu and uboot.

3.3.3 Patching

Apply available patches in boards/<BOARD>/bsp/patch/linux and patch/linux/:

```
$ make kernel-patch

Or

make patch kernel

$ make patch kernel
```

3.3.4 Configuration

3.3.4.1 Default Configuration

Configure kernel and buildroot with defconfig:

```
1 $ make defconfig APP="kernel root"
```

Configure one by one, by default, use the defconfig in boards/<BOARD>/bsp/:

```
$ make kernel-defconfig

$ make root-defconfig

4 Or

5 

6 $ make defconfig kernel

7 $ make defconfig root
```

Configure with specified defconfig:

```
$ make B=raspi3
$ make kernel-defconfig KCFG=bcmrpi3_defconfig
$ make root-defconfig KCFG=raspberrypi3_64_defconfig
```

If only defconfig name specified, search boards/ at first, and then the default configs path of buildroot, u-boot and linux-stable respectively: buildroot/configs, u-boot/configs, linux-stable/arch//configs.

3.3.4.2 Manual Configuration

```
$ make kernel-menuconfig

$ make root-menuconfig

4 Or

5 

6 $ make menuconfig kernel

7 $ make menuconfig root
```

3.3.4.3 Old default configuration

3.3.5 Building

Build kernel and buildroot together:

```
1 $ make build APP="kernel root"
```

Build them one by one:

```
$ make kernel-build # make kernel

$ make root-build # make root

Or

$ make build kernel

$ make build root
```

3.3.6 Saving

Save all of the configs and rootfs/kernel/dtb images:

```
1 $ make save APP="kernel root"
2 $ make saveconfig APP="kernel root"
```

Save configs and images to boards/<BOARD>/bsp/:

```
$ make kernel-saveconfig

$ make root-saveconfig

$ make root-save

$ make kernel-save

5

6 Or

7

8 $ make saveconfig kernel

9 $ make saveconfig root

10 $ make save kernel

11 $ make save root
```

3.3.7 Booting

Boot with serial port (nographic) by default, exit with ctrl+a x, poweroff, reboot or pkill qemu (See poweroff hang):

```
1 $ make boot
```

Boot with graphic (Exit with CTRL+ALT+2 quit):

Note: real graphic boot require LCD and keyboard drivers, the above boards work well, with linux v5.1, raspi3 and malta has tty0 console but without keyboard input.

vexpress-a9 and virt has no LCD support by default, but for the latest qemu, it is able to boot with G=1 and switch to serial console via the 'View' menu, this can not be used to test LCD and keyboard drivers. xppts specify the eXtra qemu options.

```
$ make b=vexpress-a9 CONSOLE=ttyAMAO boot G=1 LINUX=v5.1
$ make b=raspi3 CONSOLE=ttyAMAO XOPTS="-serial vc -serial vc" boot G=1 LINUX=v5.1
```

Boot with curses graphic (friendly to bash login, not work for all boards, exit with ESC+2 quit OT ALT+2 quit):

```
1 $ make b=pc boot G=2 LINUX=v4.6.7
```

Boot with PreBuilt Kernel, Dtb and Rootfs:

```
$ make boot PBK=1 PBD=1 PBR=1
cor
smake boot k=0 d=0 r=0
or
smake boot kernel=0 dtb=0 root=0
```

Boot with new kernel, dtb and rootfs if exists:

Boot with new kernel and uboot, build them if not exists:

```
1 $ make boot BUILD="kernel uboot"
```

Boot without Uboot (only versatilepb and vexpress-a9 boards tested):

```
1 $ make boot U=0
```

Boot with different rootfs (depends on board, check /dev/ after boot):

```
$ make boot ROOTDEV=/dev/ram // support by all boards, basic boot method

$ make boot ROOTDEV=/dev/nfs // depends on network driver, only raspi3 not work

$ make boot ROOTDEV=/dev/sda

$ make boot ROOTDEV=/dev/mmcblk0

$ make boot ROOTDEV=/dev/vda // virtio based block device
```

Boot with extra kernel command line (XKCLI = eXtra Kernel Command LIne):

```
1 $ make boot ROOTDEV=/dev/nfs XKCLI="init=/bin/bash"
```

List supported options:

```
$ make list ROOTDEV

$ make list BOOTDEV

$ make list CCORI

$ make list NETDEV

$ make list LINUX

6 $ make list UBOOT

7 $ make list QEMU
```

And more <xxx>-list are also supported with list <xxx>, for example:

```
$ make list features

$ make list modules

$ make list gcc
```

4. Linux Lab Advance

4.1 Using Linux Kernel

4.1.1 non-interactive configuration

A tool named scripts/config in linux kernel is helpful to get/set the kernel config options non-interactively, based on it, both of kernel-getconfig and kernel-setconfig are added to tune the kernel options, with them, we can simply "enable/disable/setstr/setval/getstate" of a kernel option or many at the same time:

Get state of a kernel module:

Enable a kernel module:

```
$ make kernel-setconfig m=minix_fs
Setting kernel config: m=minix_fs ...

output/aarch64/linux-v5.1-virt/.config:CONFIG_MINIX_FS=m

Enable new kernel config: minix_fs ...
```

More control commands of kernel-setconfig including y, n, c, o, s, v:

Option	Description	
у	build the modules in kernel or enable anther kernel options.	
С	build the modules as pluginable modules, just like $\mathtt{m}.$	
0	build the modules as pluginable modules, just like \mathtt{m} .	
n	disable a kernel option.	
s	RTC_SYSTOHC_DEVICE="rtc0", set the rtc device to rtc0	
v	v=PANIC_TIMEOUT=5, set the kernel panic timeout to 5 secs.	

Operates many options in one command line:

```
$ make kernel-setconfig m=tun,minix_fs y=ikconfig v=panic_timeout=5 s=DEFAULT_HOSTNAME=linux-
lab n=debug_info
2 $ make kernel-getconfig o=tun,minix,ikconfig,panic_timeout,hostname
```

4.1.2 using kernel modules

Build all internel kernel modules:

List available modules in modules/, boards/<BOARD>/bsp/modules/:

```
1 $ make module-list
```

If m argument specified, list available modules in modules/, boards/<BOARD>/bsp/modules/ and linux-stable/:

Enable one kernel module:

```
$ make kernel-getconfig m=minix_fs
   Getting kernel config: MINIX_FS ...
3
   output/aarch64/linux-v5.1-virt/.config:CONFIG_MINIX_FS=m
4
5
6
   $ make kernel-setconfig m=minix_fs
7
   Setting kernel config: m=minix_fs ...
8
9
   output/aarch64/linux-v5.1-virt/.config:CONFIG_MINIX_FS=m
10
   Enable new kernel config: minix_fs ...
11
```

Build one kernel module (e.g. minix.ko):

```
$ make module M=fs/minix/
Or
$ make module m=minix
```

Install and clean the module:

```
1 $ make module-install M=fs/minix/
2 $ make module-clean M=fs/minix/
```

More flexible usage:

```
$ make kernel-setconfig m=tun

$ make kernel x=tun.ko M=drivers/net

$ make kernel x=drivers/net/tun.ko

$ make kernel-run drivers/net/tun.ko
```

Build external kernel modules (the same as internel modules):

4.1.3 using kernel features

Kernel features are abstracted in 'feature/linux/, including their configurations patchset, it can be used to manage both of the out-of-mainline and in-mainline features.

```
$ make feature-list
 1
 2
   [ feature/linux ]:
 3
      + 9pnet
 4
      + core
 5
        - debug
 6
         module
 7
       ftrace
 8
         v2.6.36
 9
          * env.g3beige
10
          * env.malta
11
          * env.pc
12
          * env.versatilepb
13
        - v2.6.37
14
          * env.g3beige
15
      + gcs
16
        - v2.6.36
17
          * env.g3beige
18
          * env.malta
19
          * env.pc
20
          * env.versatilepb
21
      + kft.
22
        - v2.6.36
23
          * env.malta
24
          * env.pc
25
26
        - v2.6.38
```

Verified boards and linux versions are recorded there, so, it should work without any issue if the environment not changed.

For example, to enable kernel modules support, simply do:

```
$ make feature f=module

make kernel-olddefconfig

make kernel
```

For kft feature in v2.6.36 for malta board:

```
$ make BOARD=malta
$ sexport LINUX=v2.6.36
$ make kernel-checkout
$ make kernel-patch
$ make kernel-defconfig
$ make feature f=kft
$ make kernel-olddefconfig
$ make kernel
$ make kernel
$ make boot
```

4.2 Using Uboot Bootloader

Choose one of the tested boards: versatilepb and vexpress-a9.

```
1 $ make BOARD=vexpress-a9
```

Download Uboot:

```
1 $ make uboot-source
```

Checkout the specified version:

```
1 $ make uboot-checkout
```

Patching with necessary changes, BOOTDEV and ROOTDEV available, use flash by default.

```
1 $ make uboot-patch
```

Use tftp, sdcard or flash explicitly, should run make uboot-checkout before a new uboot-patch:

```
$ make uboot-patch BOOTDEV=tftp

make uboot-patch BOOTDEV=sdcard

make uboot-patch BOOTDEV=flash
```

BOOTDEV is used to specify where to store and load the images for uboot, ROOTDEV is used to tell kernel where to load the rootfs.

Configure:

```
$ make uboot-defconfig
$ make uboot-menuconfig
```

Building:

```
1 $ make uboot
```

Boot with BOOTDEV and ROOTDEV, use flash by default:

```
1 | $ make boot U=1
```

Use tftp, sdcard Or flash explicitly:

We can also change ROOTDEV during boot, for example:

```
1 $ make boot U=1 BOOTDEV=flash ROOTDEV=/dev/nfs
```

Clean images if want to update ramdisk, dtb and uImage:

```
1 $ make uboot-images-clean $ make uboot-clean
```

Save uboot images and configs:

```
1 $ make uboot-save
2 $ make uboot-saveconfig
```

4.3 Using Qemu Emulator

Builtin qemu may not work with the newest linux kernel, so, we need compile and add external prebuilt qemu, this has been tested on vexpress-a9 and virt board.

At first, build qemu-system-ARCH:

```
$ make B=vexpress-a9

$ make qemu-download

$ make qemu-checkout

$ make qemu-patch

$ make qemu-defconfig

$ make qemu

$ make qemu

$ make qemu
```

qemu-ARCH-static and qemu-system-ARCH can not be compiled together. to build qemu-ARCH-static, please enable qemu_us=1 in board specific Makefile and rebuild it.

If QEMU and QTOOL specified, the one in bsp submodule will be used in advance of one installed in system, but the first used is the one just compiled if exists.

While porting to newer kernel, Linux 5.0 hangs during boot on qemu 2.5, after compiling a newer qemu 2.12.0, no hang exists. please take notice of such issue in the future kernel upgrade.

4.4 Using Toolchains

The pace of Linux mainline is very fast, builtin toolchains can not keep up, to reduce the maintaining pressure, external toolchain feature is added. for example, ARM64/virt, CCVER and CCPATH has been added for it.

List available prebuilt toolchains:

```
1 $ make gcc-list
```

Download, decompress and enable the external toolchain:

```
1 $ make gcc
```

Switch compiler version if exists, for example:

```
$ make gcc-switch CCORI=internal GCC=4.7
$ make gcc-switch CCORI=linaro
```

If not external toolchain there, the builtin will be used back.

If no builtin toolchain exists, please must use this external toolchain feature, currently, aarch64, arm, riscv, mipsel, ppc, i386, x86_64 support such feature.

GCC version can be configured in board specific Makefile for Linux, Uboot, Qemu and Root, for example:

```
1 GCC[LINUX_v2.6.11.12] = 4.4
```

With this configuration, GCC will be switched automatically during defconfig and compiling of the specified Linux v2.6.11.12.

To build host tools, host gcc should be configured too(please specify b=i386/pc explicitly):

4.5 Using Rootfs

Builtin rootfs is minimal, is not enough for complex application development, which requires modern Linux distributions.

Such a type of rootfs has been introduced and has been released as docker image, ubuntu 18.04 is added for arm32v7 at first, more later.

Run it via docker directly:

```
1 $ docker run -it tinylab/arm32v7-ubuntu
```

Extract it out and run in Linux Lab:

ARM32/vexpress-a9 (user: root, password: root):

```
$ tools/root/docker/extract.sh tinylab/arm32v7-ubuntu arm

$ make boot B=vexpress-a9 U=0 V=1 MEM=1024M ROOTDEV=/dev/nfs ROOTFS=$PWD/prebuilt/fullroot/tmp

/tinylab-arm32v7-ubuntu
```

ARM64/raspi3 (user: root, password: root):

```
$ tools/root/docker/extract.sh tinylab/arm64v8-ubuntu arm

$ make boot B=raspi3 V=1 ROOTDEV=/dev/mmcblk0 ROOTFS=$PWD/prebuilt/fullroot/tmp/tinylab-arm64v8-ubuntu
```

More rootfs from docker can be found:

```
$\text{docker search arm64 | egrep "ubuntu|debian"}$$ arm64v8/ubuntu Ubuntu is a Debian-based Linux operating system 25$$ arm64v8/debian Debian is a Linux distribution that's composed 20$$
```

4.6 Debugging Linux and Uboot

4.6.1 Debugging Linux

Compile the kernel with debugging options:

```
$ make feature f=debug

k make kernel-olddefconfig

make kernel
```

Compile with one thread:

```
1 $ make kernel JOBS=1
```

And then debug it directly:

```
1 $ make debug
```

It will open a new terminal, load the scripts from .gdb/kernel.default, run gdb automatically.

To customize kernel gdbinit script, simply copy one and edit it manually:

```
1 $ cp .gdb/kernel.default .gdb/kernel.user
```

It equals to:

to automate debug testing:

```
1 $ make test-debug linux
2 or
3 $ make test DEBUG=linux
```

find out the code line of a kernel panic address:

```
1 $ make kernel-calltrace func+offset/length
```

4.6.2 Debugging Uboot

to debug uboot with .gdb/uboot.default:

```
1 $ make debug uboot
2 or
3 $ make boot DEBUG=uboot
```

to automate uboot debug testing:

The same to kernel gdbinit script, customize one for uboot:

```
1 $ cp .gdb/uboot.default .gdb/uboot.user
```

4.7 Test Automation

Use aarch64/virt as the demo board here.

```
1 $ make BOARD=virt
```

Prepare for testing, install necessary files/scripts in system/:

```
$ make rootdir

make root-install

make root-rebuild
```

Simply boot and poweroff (See poweroff hang):

```
1 $ make test
```

Don't poweroff after testing:

1 | \$ make test TEST_FINISH=echo

Run guest test case:

| \$ make test TEST_CASE=/tools/ftrace/trace.sh

Run guest test cases (COMMAND_LINE_SIZE must be big enough, e.g. 4096, see cmdline_size feature below):

\$ make test TEST_BEGIN=date TEST_END=date TEST_CASE='ls /root,echo hello world'

Reboot the guest system for several times:

1 \$ make test TEST_REBOOT=2

NOTE: reboot may 1) hang, 2) continue; 3) timeout killed, TEST_TIMEOUT=30; 4) timeout continue, TIMEOUT_CONTINUE=1

Test a feature of a specified linux version on a specified board(cmdline_size feature is for increase command_line_size to 4096):

\$ make test f=kft LINUX=v2.6.36 b=malta TEST_PREPARE=board-init,kernel-cleanup

NOTE: board-init and kernel-cleanup make sure test run automatically, but kernel-cleanup is not safe, please save your code before use it!!

Test a kernel module:

| \$ make test m=hello

Test multiple kernel modules:

\$ make test m=exception,hello

Test modules with specified ROOTDEV, nfs boot is used by default, but some boards may not support network:

| | \$ make test m=hello,exception TEST_RD=/dev/ram0

Run test cases while testing kernel modules (test cases run between insmod and rm-mod):

```
$ make test m=exception TEST_BEGIN=date TEST_END=date TEST_CASE='ls /root,echo hello world'
TEST_PREPARE=board-init,kernel-cleanup f=cmdline_size
```

Run test cases while testing internal kernel modules:

Run test cases while testing internal kernel modules, pass kernel arguments:

```
1 | $ make test m=lkdtm lkdtm_args='cpoint_name=DIRECT cpoint_type=EXCEPTION'
```

Run test without feature-init (save time if not necessary, FI=feature_init):

Run test with module and the module's necessary dependencies (check with make kernel -menuconfig):

```
$ make test m=lkdtm y=runtime_testing_menu,debug_fs lkdtm_args='cpoint_name=DIRECT cpoint_type =EXCEPTION'
```

Run test without feature-init, boot-init, boot-finish and no test_prepare:

```
1 | $ make boot-test m=lkdtm lkdtm_args='cpoint_name=DIRECT cpoint_type=EXCEPTION'
```

Test a kernel module and make some targets before testing:

```
1 $ make test m=exception TEST=kernel-checkout, kernel-patch, kernel-defconfig
```

Test everything in one command (from download to poweroff, see poweroff hang):

```
$ make test TEST=kernel,root TEST_PREPARE=board-init,kernel-cleanup,root-cleanup
```

Test everything in one command (with uboot while support, e.g. vexpress-a9):

```
make test TEST=kernel,root,uboot TEST_PREPARE=board-init,kernel-cleanup,root-cleanup,uboot-cleanup
```

Test kernel hang during boot, allow to specify a timeout, timeout must happen while system hang:

```
1 $ make test TEST_TIMEOUT=30s
```

Test kernel debug:

```
1 $ make test DEBUG=1
```

4.8 File Sharing

To transfer files between Qemu Board and Host, three methods are supported by default:

4.8.1 Install files to rootfs

Simply put the files with a relative path in system/, install and rebuild the rootfs:

4.8.2 Share with NFS

Boot the board with ROOTDEV=/dev/nfs:

```
1 $ make boot ROOTDEV=/dev/nfs
```

Host:

4.8.3 Transfer via tftp

Using tftp server of host from the Qemu board with the tftp command.

Host:

```
1 $ ifconfig br0
2 inet addr:172.17.0.3 Bcast:172.17.255.255 Mask:255.255.0.0
3 $ cd tftpboot/
4 $ ls tftpboot
5 kft.patch kft.log
```

Qemu Board:

Note: while put file from Qemu board to host, must create an empty file in host firstly. Buggy?

4.8.4 Share with 9p virtio

To enable 9p virtio for a new board, please refer to qemu 9p setup. qemu must be compiled with --enable-virtis, and kernel must enable the necessary options.

Reconfigure the kernel with:

```
CONFIG_NET_9P=y
CONFIG_NET_9P_VIRTIO=y
CONFIG_NET_9P_DEBUG=y (Optional)
CONFIG_9P_FS=y
CONFIG_9P_FS_POSIX_ACL=y
CONFIG_PCI=y
CONFIG_VIRTIO_PCI=y
CONFIG_PCI_HOST_GENERIC=y (only needed for the QEMU Arm 'virt' board)
```

If using -virtfs or -device virtio-9p-pci option for qemu, must enable the above PCI related options, otherwise will not work:

-device virtio-9p-device requires less kernel options.

To enable the above options, please simply type:

```
$ make feature f=9pnet
$ make kernel-olddefconfig
```

Docker host:

Host:

```
$ make BOARD=virt
1
2
3
   $ make root-install
                             # Install mount/umount scripts, ref: system/etc/init.d/S50sharing
4
   $ make root-rebuild
5
6
   $ touch hostshare/test
                              # Create a file in host
7
   $ make boot U=0 ROOTDEV=/dev/ram0 PBR=1 SHARE=1
8
9
10
   $ make boot SHARE=1 SHARE_DIR=modules # for external modules development
11
12
   $ make boot SHARE=1 SHARE_DIR=output/aarch64/linux-v5.1-virt/ # for internal modules
13
   $ make boot SHARE=1 SHARE_DIR=examples # for c/assembly learning
```

Qemu Board:

```
1 $ ls /hostshare/  # Access the file in guest
2 test
3 $ touch /hostshare/guest-test  # Create a file in guest
```

Verified boards with Linux v5.1:

boards	Status
aarch64/virt	virtio-9p-device (virtio-9p-pci breaks nfsroot)
arm/vexpress-a9	only work with virtio-9p-device and without uboot booting
arm/versatilepb	only work with virtio-9p-pci
$x86_64/pc$	only work with virtio-9p-pci
i386/pc	only work with virtio-9p-pci
riscv64/virt	work with virtio-9p-pci and virtio-9p-dev

boards	Status
riscv32/virt	work with virtio-9p-pci and virtio-9p-dev

4.9 Learning Assembly

Linux Lab has added many assembly examples in examples/assembly:

```
$ cd examples/assembly
$ 1s

aarch64 arm mips64el mipsel powerpc powerpc64 README.md x86 x86_64

4 $ make -s -C aarch64/

5 Hello, ARM64!
```

4.10 Running any make goals

Linux Lab allows to access Makefile goals easily via <xxx>-run, for example:

-run goals allows to run sub-make goals of kernel, root and uboot directly without entering into their own building directory.

4.11 More Usage

Read more:

- Why Using Linux Lab V1.0 (In Chinese)
- Why Using Linux Lab V2.0 (In Chinese)

5. Linux Lab Development

This introduces how to add a new board for Linux Lab.

5.1 Choose a board supported by qemu

list the boards, use arm as an example:

l \$ qemu-system-arm -M ?

5.2 Create the board directory

Use vexpress-a9 as an example:

\$ mkdir boards/arm/vexpress-a9/

5.3 Clone a Makefile from an existing board

Use versatilepb as an example:

\$ cp boards/arm/versatilebp/Makefile boards/arm/vexpress-a9/Makefile

5.4 Configure the variables from scratch

Comment everything, add minimal ones and then others.

Please refer to doc/qemu/qemu-doc.html or the online one http://qemu.weilnetz.de/qemu-doc.html.

5.5 At the same time, prepare the configs

We need to prepare the configs for linux, buildroot and even uboot.

Buildroot has provided many examples about buildroot and kernel configuration:

```
buildroot: buildroot/configs/qemu_ARCH_BOARD_defconfig
kernel: buildroot/board/qemu/ARCH-BOARD/linux-VERSION.config
```

Uboot has also provided many default configs:

```
1 uboot: u-boot/configs/vexpress_ca9x4_defconfig
```

Kernel itself also:

```
1 kernel: linux-stable/arch/arm/configs/vexpress_defconfig
```

Linux Lab itself also provide many working configs too, the -clone target is a good helper to utilize existing configs:

```
$ make list kernel
  v4.12 v5.0.10 v5.1
3
  $ make kernel-clone LINUX=v5.1 LINUX_NEW=v5.4
4
  $ make kernel-menuconfig
5
  $ make kernel-saveconfig
6
7
  $ make list root
8
  2016.05 2019.02.2
  $ make root-clone BUILDROOT=2019.02.2 BUILDROOT_NEW=2019.11
  $ make root-menuconfig
  $ make root-saveconfig
```

Edit the configs and Makefile untill they match our requirements.

```
1 $ make kernel-menuconfig
2 $ make root-menuconfig
3 $ make board-edit
```

The configuration must be put in boards/<BOARD>/ and named with necessary version info, use raspi3 as an example:

```
$ make kernel-saveconfig

$ make root-saveconfig

$ ls boards/aarch64/raspi3/bsp/configs/

buildroot_2019.02.2_defconfig linux_v5.1_defconfig
```

2019.02.2 is the buildroot version, v5.1 is the kernel version, both of these variables should be configured in boards/SDARD>/Makefile.

5.6 Choose the versions of kernel, rootfs and uboot

Please use tag instead of branch, use kernel as an example:

```
1 $ cd linux-stable
2 $ git tag
3 ...
4 v5.0
5 ...
6 v5.1
7 ..
8 v5.1.1
9 v5.1.5
10 ...
```

If want v5.1 kernel, just put a line "LINUX = v5.1" in boards/<BOARD>/Makefile.

Or clone a kernel config from the old one or the official defconfig:

```
$ make kernel-clone LINUX_NEW=v5.3 LINUX=v5.1

Or

make B=i386/pc

pushd linux-stable && git checkout v5.4 && popd

make kernel-clone LINUX_NEW=v5.4 KCFG=i386_defconfig
```

If no tag existed, a virtual tag name with the real commmit number can be configured as following:

```
LINUX = v2.6.11.12
LINUX[LINUX_v2.6.11.12] = 8e63197f
```

Linux version specific ROOTFS are also supported:

```
ROOTFS[LINUX_v2.6.12.6] ?= $(BSP_ROOT)/$(BUILDROOT)/rootfs32.cpio.gz
```

5.7 Configure, build and boot them

Use kernel as an example:

```
$ make kernel-defconfig
$ make kernel-menuconfig
$ make kernel
$ make kernel
$ make boot
```

The same to rootfs, uboot and even qemu.

5.8 Save the images and configs

5.9 Upload everything

At last, upload the images, defconfigs, patchest to board specific bsp submodule repository.

Firstly, get the remote bsp repository address as following:

```
$ git remote show origin
2
     remote origin
     Fetch URL: https://gitee.com/tinylab/qemu-aarch64-raspi3/
3
     Push URL: https://gitee.com/tinylab/qemu-aarch64-raspi3/
4
5
     HEAD branch: master
6
     Remote branch:
7
       master tracked
8
     Local branch configured for 'git pull':
9
       master merges with remote master
10
     Local ref configured for 'git push':
       master pushes to master (local out of date)
```

Then, fork this repository from gitee.com, upload your changes, and send your pull request.

6. FAQs

6.1 Docker Issues

6.1.1 Speed up docker images downloading

To optimize docker images download speed, please edit DOCKER_OPTS in /etc/default/docker via referring to tools/docker/install.

6.1.2 Docker network conflicts with LAN

We assume the docker network is 10.66.0.0/16, if not, we'd better change it as following:

```
$ sudo vim /etc/default/docker
DOCKER_OPTS="$DOCKER_OPTS --bip=10.66.0.10/16"

$ sudo vim /lib/systemd/system/docker.service
ExecStart=/usr/bin/dockerd -H fd:// --bip=10.66.0.10/16
```

Please restart docker service and lab container to make this change works:

```
1 $ sudo service docker restart
2 $ tools/docker/rerun linux-lab
```

If lab network still not work, please try another private network address and eventually to avoid conflicts with LAN address.

6.1.3 Why not allow running Linux Lab in local host

The full function of Linux Lab depends on the full docker environment managed by Cloud Lab, so, please really never try and therefore please don't complain about why there are lots of packages missing failures and even the other weird issues.

Linux Lab is designed to use pre-installed environment with the docker technology and save our life by avoiding the packages installation issues in different systems, so, Linux Lab would never support local host using even in the future.

6.1.4 Run tools without sudo

To use the tools under tools without sudo, please make sure add your account to the docker group and reboot your system to take effect:

```
$ sudo usermod -aG docker $USER
2 $ newgrp docker
```

6.1.5 Network not work

If ping not work, please check one by one:

• DNS issue

if ping 8.8.8.8 work, please check /etc/resolv.conf and make sure it is the same as your host configuration.

• IP issue

if ping not work, please refer to network conflict issue and change the ip range of docker containers.

6.1.6 Client. Timeout exceeded while waiting headers

This means must configure one of the following docker mirror sites:

- Aliyun Docker Mirror Documentation
- USTC Docker Mirror Documentation

Potential methods of configuration in Ubuntu, depends on docker and ubuntu versions:

/etc/default/docker:

```
1 echo "DOCKER_OPTS=\"\$DOCKER_OPTS --registry-mirror=<your accelerate address>\""
```

/lib/systemd/system/docker.service:

```
ExecStart=/usr/bin/dockerd -H fd:// --bip=10.66.0.10/16 --registry-mirror=<your accelerate address>
```

/etc/docker/daemon.json:

```
1 {
2     "registry-mirrors": ["<your accelerate address>"]
3 }
```

Please restart docker service after change the accelerate address:

```
$ sudo service docker restart
```

For the other Linux systems, Windows and MacOS System, please refer to Aliyun Mirror Speedup Document.

6.1.7 Restart Linux Lab after host system shutdown or reboot

If want to restore the installed softwares and related configurations, please save the container manually:

```
1 $ tools/docker/commit linux-lab
```

After host system (include virtual machine) shutdown or reboot, you can restart the lab via the "Linux Lab" icon on the desktop, or just like before, issue this command:

```
$ tools/docker/run linux-lab
```

Current implementation doesn't support the direct 'docker start' command, please learn it.

If the above methods still not restart the lab, please refer to the methods mentioned in the 6.3.9 section.

If resume from a suspended host system, the lab will restore automatically, no need to do anything to restart it, just use one of the 4 login methods mentioned in the 2.4 section, for example, start a web browser to connect it:

```
$ tools/docker/vnc
```

6.2 Qemu Issues

6.2.1 Why kvm speedding up is disabled

kvm only supports both of qemu-system-i386 and qemu-system-x86_64 currently, and it also requires the cpu and bios support, otherwise, you may get this error log:

```
1 modprobe: ERROR: could not insert 'kvm_intel': Operation not supported
```

Check cpu virtualization support, if nothing output, then, cpu not support virtualization:

```
$ cat /proc/cpuinfo | egrep --color=always "vmx|svm"
```

If cpu supports, we also need to make sure it is enabled in bios features, simply reboot your computer, press 'Delete' to enter bios, please make sure the 'Intel virtualization technology' feature is 'enabled'.

6.2.2 Poweroff hang

Both of the poweroff and reboot commands not work on these boards currently (LINUX=v5.1):

- mipsel/malta (exclude LINUX=v2.6.36)
- aarch64/raspi3
- arm/versatilepb

System will directly hang there while running poweroff or reboot, to exit qemu, please pressing CTRL+a x Or using pkill qemu.

To test such boards automatically, please make sure setting Test_TIMEOUT, e.g. make test TEST_TIMEOUT=50.

Welcome to fix up them.

6.2.3 How to exit qemu

Where	How	
Serial Port Console	CTRL+a x	
Curses based Graphic	ESC+2 quit Or ALT+2 quit	
X based Graphic	CTRL+ALT+2 quit	
Generic Methods	poweroff, reboot, kill, pkill	

6.2.4 Boot with missing sdl2 libraries failure

That's because the docker image is not updated, just rerun the lab (please must not use tools/docker/restart here for it not using the new docker image):

```
1  $ tools/docker/pull linux-lab
2  $ tools/docker/rerun linux-lab
3
4  Or
5  6  $ tools/docker/update linux-lab
```

With tools/docker/update, every docker images and source code will be updated, it is preferred.

6.3 Environment Issues

6.3.1 NFS/tftpboot not work

If nfs or tftpboot not work, please run modprobe nfsd in host side and restart the net services via /configs/tools/restart-net-servers.sh and please make sure not use tools/docker/trun.

6.3.2 How to switch windows in vim

CTRL+w is used in both of browser and vim, to switch from one window to another, please use CTRL+Left or CTRL+Right key instead, Linux Lab has remapped CTRL+Right to CTRL+w and CTRL+Left to CTRL+p.

6.3.3 How to delete typo in shell command line

Long keypress not work in novnc client currently, so, long Delete not work, please use alt+delete or alt+backspace instead, more tips:

Function	Vim	Bash
begin/end	^/\$	Ctrl + a/e
forward/backward	w/b	Ctrl + Home/end
cut one word backword	db	Alt + Delete/backspace
cut one word forward	dw	Alt + d
cut all to begin	d^	Ctrl + u
cut all to end	d\$	Ctrl + k
paste all cutted	p	Ctrl + y

6.3.4 Language input switch shortcuts

In order to switch English/Chinese input method, please use CTRL+s shortcuts, it is used instead of CTRL+space to avoid conflicts with local system.

6.3.5 How to tune the screen size

There are tow methods to tune the screen size, one is auto scaling by noVNC, another is pre-setting during launching.

The first one is setting noVNC before connecting.

```
1 * Press the left sidebar of noVNC web page
2 * Disconnect
3 * Enable 'Auto Scaling Mode' via 'Settings -> Scaling Mode: -> Local Scaling -> Apply'
4 * Connect
```

The second one is setting screen_size while running Linux Lab.

The screen size of lab is captured by xrandr, if not work, please check and set your own, for example:

Get available screen size values:

```
$ xrandr --current
 1
 2
   Screen 0: minimum 1 x 1, current 1916 x 891, maximum 16384 x 16384
 3
   Virtual1 connected primary 1916x891+0+0 (normal left inverted right x axis y axis) 0mm x 0mm
       1916x891
                      60.00*+
 4
       2560x1600
                      59.99
 5
 6
       1920x1440
                      60.00
 7
       1856x1392
                      60.00
 8
       1792x1344
                      60.00
 9
       1920x1200
                      59.88
10
       1600x1200
                      60.00
11
       1680x1050
                      59.95
12
       1400x1050
                      59.98
13
       1280x1024
                      60.02
14
       1440x900
                      59.89
15
       1280x960
                      60.00
16
       1360x768
                      60.02
17
       1280x800
                      59.81
18
       1152x864
                      75.00
19
       1280x768
                      59.87
20
       1024x768
                      60.00
21
       800x600
                      60.32
22
       640x480
                      59.94
```

Before running rm command, please save all of your data, for example, save the container:

```
1 $ tools/docker/commit linux-lab
```

Choose one and configure it:

```
1 $ cd /path/to/cloud-lab
2 $ tools/docker/rm-all
3 $ SCREEN_SIZE=800x600 tools/docker/run linux-lab
```

If want the default one, please remove the manual setting at first:

```
1 $ cd /path/to/cloud-lab
2 $ rm configs/linux-lab/docker/.screen_size
3 $ tools/docker/rm-all
4 $ tools/docker/run linux-lab
```

6.3.6 How to work in fullscreen mode

Open the left sidebar, press the 'Fullscreen' button.

6.3.7 How to record video

• Enable recording

Open the left sidebar, press the 'Settings' button, config 'File/Title/Author/Category/Tags/Description' and enable the 'Record Screen' option.

• Start recording

Press the 'Connect' button.

• Stop recording

Press the 'Disconnect' button.

• Replay recorded video

Press the 'Play' button.

• Share it

Videos are stored in 'cloud-lab/recordings', share it with help from showdesk.io.

6.3.8 Linux Lab not response

The VNC connection may hang for some unknown reasons and therefore Linux Lab may not response sometimes, to restore it, please press the flush button of web browser or re-connect after explicitly disconnect.

6.3.9 VNC login with failures

If VNC login return "Disconnect timeout", wait a while and press the left 'Connect' button again, otherwise, check as following:

At first, check the containers' status (Up: Ok, Exit: Bad):

```
$\text{docker ps -a}$
CONTAINER ID IMAGE COMMAND CREATED STATUS PORTS NAMES

$\text{19a61ba075b5 tinylab/linux-lab "/tools/lab/run"} 4 days ago Up 4 days 22/tcp, 5900/tcp linux-lab-21575

$\text{75dae89984c9 tinylab/cloud-ubuntu-web "/startup.sh"} 8 days ago Up 8 days \ldots \ldots 443/tcp cloud-ubuntu-web
```

If the status is 'Exit', that means container may be shutdown or may never up, run it again to resume for the shutdown case:

```
1 $ tools/docker/run linux-lab
```

Otherwise, check the running logs:

```
1 $ tools/docker/logs linux-lab
```

If normal, that means the login account and password may have been invalid for some exceptions, please regenerte new account and password with the coming steps:

Note: The clean command will remove some containers and data, please do necessary backup before run it, for example, save the container:

```
1 $ tools/docker/commit linux-lab
```

VNC login fails while using mismatched password, to fix up such issue, please clean up all and rerun it:

```
1 $ tools/docker/clean linux-lab
2 $ tools/docker/rerun linux-lab
```

If the above command not work, please try this one (It will clean more data, please do necessary backup)

```
1 $ tools/docker/clean-all
2 $ tools/docker/rerun linux-lab
```

6.3.10 Ubuntu Snap Issues

Users report many snap issues, please use apt-get instead:

- users can not be added to docker group and break non-root operation.
- snap service exhausts the /dev/loop devices and break mount operation.

6.4 Lab Issues

6.4.1 No working init found

This means the rootfs.ext2 image may be broken, please remove it and try make boot again, for example:

```
$ rm boards/aarch64/raspi3/bsp/root/2019.02.2/rootfs.ext2
$ make boot
```

make boot command can create this image automatically.

6.4.2 linux/compiler-gcc7.h: No such file or directory

This means using a newer gcc than the one linux kernel version supported, the solution is switching to an older gcc version via make gcc-switch, use i386/pc board as an example:

```
1 $ make gcc-list
2 $ make gcc-switch CCORI=internal GCC=4.4
```

6.4.3 linux-lab/configs: Permission denied

This may happen at make boot while the repository is cloned with root user, please simply update the owner of cloud-lab/ directory:

```
1  $ cd /path/to/cloud-lab
2  $ sudo chown $USER:$USER -R ./
3  $ tools/docker/rerun linux-lab
```

To make a consistent working environment, Linux Lab only support using as general user: 'ubuntu'.

6.4.4 scripts/Makefile.headersinst: Missing UAPI file

This means MAC OSX not use Case sensitive filesystem, create one using hadiutil or Disk Utility yourself:

```
$ hdiutil create -type SPARSE -size 60g -fs "Case-sensitive Journaled HFS+" -volname labspace labspace.dmg

2 $ hdiutil attach -mountpoint ~/Documents/labspace -no-browse labspace.dmg

3 $ cd ~/Documents/labspace
```

6.4.5 unable to create file: net/netfilter/xt_dscp.c

This means Windows not enable filesystem's case sensitive feature, just enable it:

```
1 $ cd /path/to/cloud-lab
2 $ fsutil file SetCaseSensitiveInfo ./ enable
```

6.4.6 how to run as root

By default, no password required to run as root with:

```
1 $ sudo -s
```

7. Contact and Sponsor

Our contact wechat is **tinylab**, welcome to join our user & developer discussion group.

Contact us and Sponsor via wechat:





联系我们

捐赠项目

Figure 1: contact-sponsor