


WEBENCH® Design Report

VinMin = 5.0V VinMax = 60.0V Vout = 3.3V lout = 5.0A Device = LM76005QRNPRQ1 Topology = Buck Created = 2025-06-14 15:03:50.235 BOM Cost = \$4.44 BOM Count = 14 Total Pd = 2.39W

Design: 6 LM76005QRNPRQ1 LM76005QRNPRQ1 5V-60V to 3.30V @ 5A

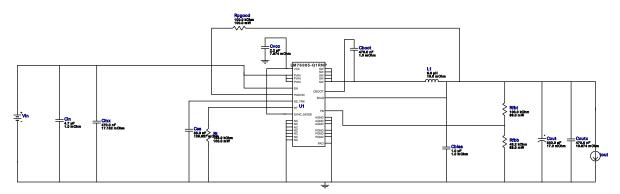

#### **Design Alerts**


#### **Component Selection Information**


The LM76005-Q1 is qualified for Automotive applications. All passives and other components selected in this design may not be qualified for Automotive applications. The user is required to verify that all components in the design meet the qualification and safety requirements for their specific application.


#### **Electrical BOM**


Name	Manufacturer	Part Number	Properties	Qty	Price	Footprint
Cbias	Kemet	C0603C105K8PACTU Series= X5R	Cap= 1.0 uF ESR= 1.0 mOhm VDC= 10.0 V IRMS= 0.0 A	1	\$0.01	0603 5 mm <sup>2</sup>
Cboot	MuRata	GRM155R61A474KE15D Series= X5R	Cap= 470.0 nF ESR= 1.0 mOhm VDC= 10.0 V IRMS= 0.0 A	1	\$0.02	0402 3 mm <sup>2</sup>
Cin	MuRata	GCM32DC72A475KE02L Series= X7S	Cap= 4.7 uF ESR= 1.0 mOhm VDC= 100.0 V IRMS= 6.0 A	1	\$0.45	1210_220 15 mm²
Cinx	TDK	C2012X7S2A474K125AB Series= X7S	Cap= 470.0 nF ESR= 17.152 mOhm VDC= 100.0 V IRMS= 1.58068 A	1	\$0.10	0805 7 mm <sup>2</sup>
Cout	Panasonic	6SVPC330M Series= SVPC	Cap= 330.0 uF ESR= 17.0 mOhm VDC= 6.3 V IRMS= 3.39 A	1	\$0.47	SM_RADIAL_6.3AMM 80 mm²
Coutx	TDK	C1608X7R1H474K080AC Series= X7R	Cap= 470.0 nF ESR= 10.974 mOhm VDC= 50.0 V IRMS= 1.57483 A	1	\$0.05	0603 5 mm <sup>2</sup>
Css	TDK	CGA3E3X7S2A333K080AB Series= X7S	Cap= 33.0 nF ESR= 139.637 mOhm VDC= 100.0 V IRMS= 462.26 mA	1	\$0.03	0603 5 mm <sup>2</sup>
Cvcc	TDK	C1608X6S1C225K080AC Series= X6S	Cap= 2.2 uF ESR= 7.674 mOhm VDC= 16.0 V IRMS= 1.87823 A	1	\$0.03	0603 5 mm <sup>2</sup>


Name	Manufacturer	Part Number	Properties	Qty	Price	Footprint
_1	Bourns	SRP1250-6R0M	L= 6.0 μH 10.0 mOhm	1	\$0.89	
						SRP1250 253 mm <sup>2</sup>
Rfbb	Vishay-Dale	CRCW040243K2FKED Series= CRCWe3	Res= 43.2 kOhm Power= 63.0 mW Tolerance= 1.0%	1	\$0.01	0402 3 mm <sup>2</sup>
Rfbt	Vishay-Dale	CRCW0402100KFKED Series= CRCWe3	Res= 100.0 kOhm Power= 63.0 mW Tolerance= 1.0%	1	\$0.01	0402 3 mm <sup>2</sup>
Rpgood	Vishay-Dale	CRCW0603100KFKEA Series= CRCWe3	Res= 100.0 kOhm Power= 100.0 mW Tolerance= 1.0%	1	\$0.01	0603 5 mm <sup>2</sup>
Rt	Vishay-Dale	CRCW0603133KFKEA Series= CRCWe3	Res= 133.0 kOhm Power= 100.0 mW Tolerance= 1.0%	1	\$0.01	0603 5 mm <sup>2</sup>
U1	Texas Instruments	LM76005QRNPRQ1	Switcher	1	\$2.35	RNP0030B 48 mm <sup>2</sup>
	Cinx P	d		IC	Ti	

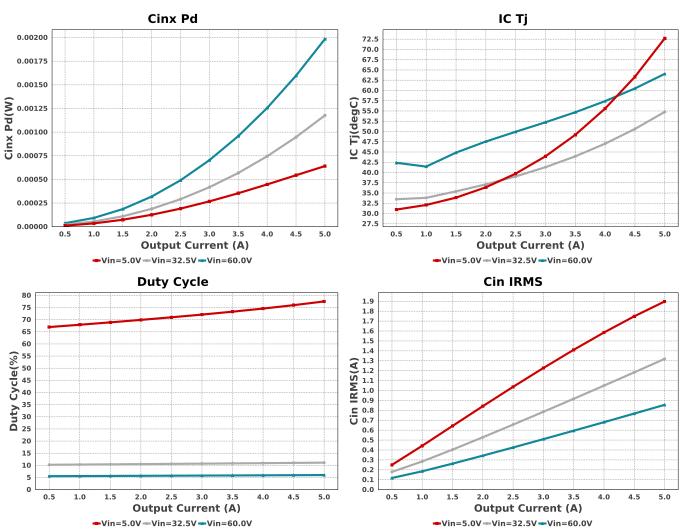

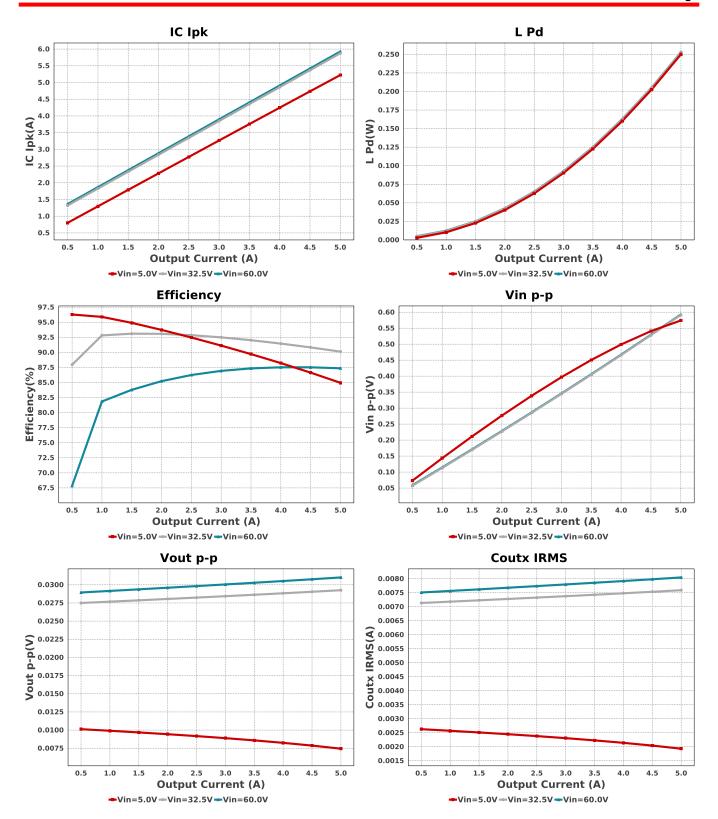

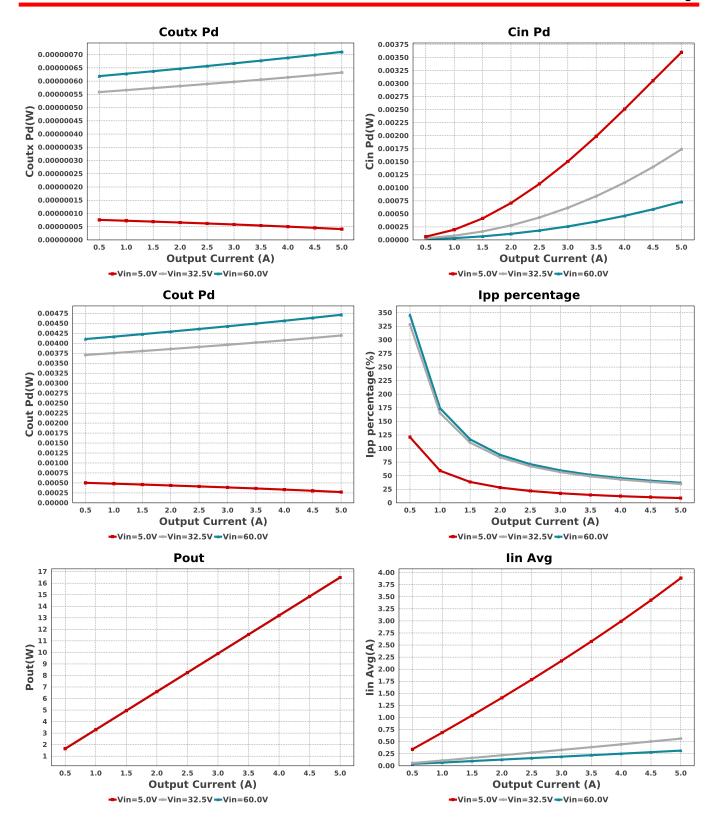

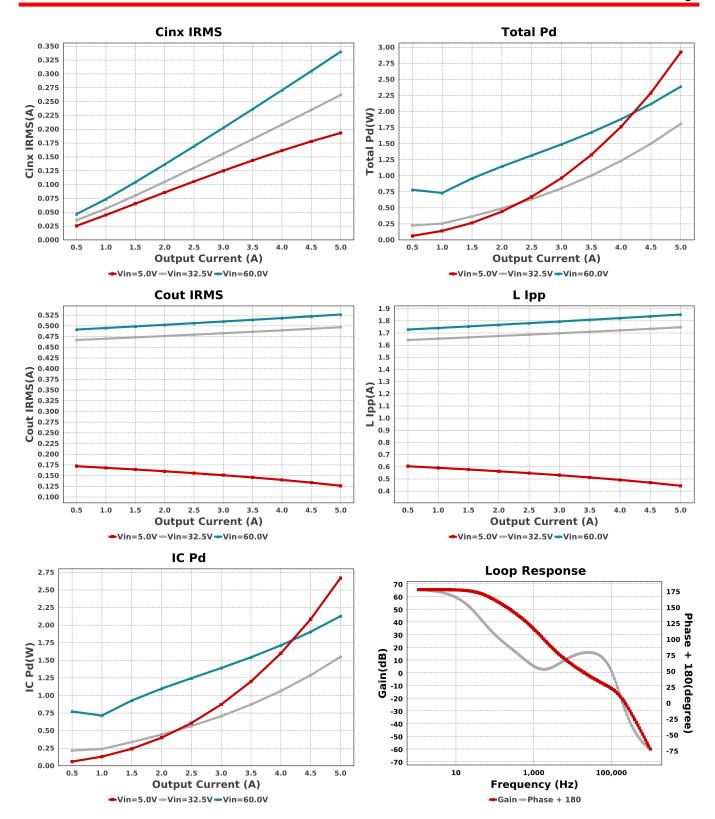

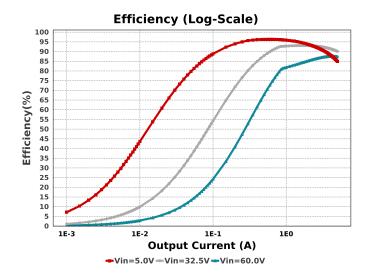

### **Operating Values**

#	Name	Value	Category	Description
1.	Cin IRMS	855.24 mA	Capacitor	Input capacitor RMS ripple current
2.	Cin Pd	731.44 μW	Capacitor	Input capacitor power dissipation
3.	Cinx IRMS	340.097 mA	Capacitor	Bulk capacitor RMS ripple current
4.	Cinx Pd	1.984 mW	Capacitor	Bulk capacitor power dissipation
5.	Cout IRMS	526.624 mA	Capacitor	Output capacitor RMS ripple current
6.	Cout Pd	4.715 mW	Capacitor	Output capacitor power dissipation
7.	Coutx IRMS	8.047 mA	Capacitor	Output capacitor_x RMS ripple current
8.	Coutx Pd	710.56 nW	Capacitor	Output capacitor_x power loss
9.	IC lpk	5.926 A	IC	Peak switch current in IC
	IC Pd	2.128 W	IC IC	IC power dissipation
	IC Ti	64.043 degC	IC	IC junction temperature
	,	•	IC IC	·
12.	IC Tolerance	20.0 mV	IC IC	IC Feedback Tolerance
13.	ICThetaJA Effective	16.0 degC/W		Effective IC Junction-to-Ambient Thermal Resistance
14.	lin Avg	314.8 mA	IC	Average input current
15.	lpp percentage	37.043 %	Inductor	Inductor ripple current percentage (with respect to average inducto
				current)
	L lpp	1.852 A	Inductor	Peak-to-peak inductor ripple current
	L Pd	252.86 mW	Inductor	Inductor power dissipation
	Cin Pd	731.44 µW	Power	Input capacitor power dissipation
	Cinx Pd	1.984 mW	Power	Bulk capacitor power dissipation
	Cout Pd	4.715 mW	Power	Output capacitor power dissipation
	Coutx Pd	710.56 nW	Power	Output capacitor_x power loss
22.	IC Pd	2.128 W	Power	IC power dissipation
23.	L Pd	252.86 mW	Power	Inductor power dissipation
24.	Total Pd	2.388 W	Power	Total Power Dissipation
25.	BOM Count	14	System	Total Design BOM count
			Information	
26.	Cross Freq	19.993 kHz	System	Bode plot crossover frequency
o=	D . O .	0.000.0/	Information	D / 1
27.	Duty Cycle	6.008 %	System	Duty cycle
		07.057.0/	Information	
28.	Efficiency	87.357 %	System	Steady state efficiency
		Ď.	Information	T. 15 . D. 1. 1. (DOM
29.	FootPrint	439.0 mm <sup>2</sup>	System	Total Foot Print Area of BOM components
			Information	
30.	Frequency	303.052 kHz	System	Switching frequency
			Information	
31.	Gain Marg	-21.316 dB	System	Bode Plot Gain Margin
			Information	
32.	lout	5.0 A	System	lout operating point
			Information	
33.	Low Freq Gain	65.403 dB	System	Gain at 1Hz
			Information	
34.	Mode	FCCM	System	Conduction Mode
			Information	
35.	Phase Marg	79.451 deg	System	Bode Plot Phase Margin
	Ŭ	ŭ	Information	·
36.	Pout	16.5 W	System	Total output power
			Information	, ,
		C 4 4 4		T / I POM O /
37.	Total BOM	\$4.44	System	Total BOM Cost

#	Name	Value	Category	Description
38.	Vin	60.0 V	System Information	Vin operating point
39.	Vin p-p	592.89 mV	System Information	Peak-to-peak input voltage
40.	Vout	3.3 V	System Information	Operational Output Voltage
41.	Vout Actual	3.315 V	System Information	Vout Actual calculated based on selected voltage divider resistors
42.	Vout Tolerance	3.439 %	System Information	Vout Tolerance based on IC Tolerance (no load) and voltage divider resistors if applicable
43.	Vout p-p	31.013 mV	System Information	Peak-to-peak output ripple voltage

## **Design Inputs**

Name	Value	Description	
lout	5.0	Maximum Output Current	
SoftStart	15.0 ms	Soft Start Time (ms)	
VinMax	60.0	Maximum input voltage	
VinMin	5.0	Minimum input voltage	
Vout	3.3	Output Voltage	
base_pn	LM76005-Q1	Base Product Number	
source	DC	Input Source Type	
Та	30.0	Ambient temperature	
UserFsw	300.0 k	Customer Selected Frequency	

# WEBENCH® Assembly

### Component Testing

Some published data on components in datasheets such as Capacitor ESR and Inductor DC resistance is based on conservative values that will guarantee that the components always exceed the specification. For design purposes it is usually better to work with typical values. Since this data is not always available it is a good practice to measure the Capacitance and ESR values of Cin and Cout, and the inductance and DC resistance of L1 before assembly of the board. Any large discrepancies in values should be electrically simulated in WEBENCH to check for instabilities and thermally simulated in WebTHERM to make sure critical temperatures are not exceeded.

#### Soldering Component to Board

If board assembly is done in house it is best to tack down one terminal of a component on the board then solder the other terminal. For surface mount parts with large tabs, such as the DPAK, the tab on the back of the package should be pre-tinned with solder, then tacked into place by one of the pins. To solder the tab town to the board place the iron down on the board while resting against the tab, heating both surfaces simultaneously. Apply light pressure to the top of the plastic case until the solder flows around the part and the part is flush with the PCB. If the solder is not flowing around the board you may need a higher wattage iron (generally 25W to 30W is enough).

### Initial Startup of Circuit

It is best to initially power up the board by setting the input supply voltage to the lowest operating input voltage 5.0V and set the input supply's current limit to zero. With the input supply off connect up the input supply to Vin and GND. Connect a digital volt meter and a load if needed to set the minimum lout of the design from Vout and GND. Turn on the input supply and slowly turn up the current limit on the input supply. If the voltage starts to rise on the input supply continue increasing the input supply current limit while watching the output voltage. If the current increases on the input supply, but the voltage remains near zero, then there may be a short or a component misplaced on the board. Power down the board and visually inspect for solder bridges and recheck the diode and capacitor polarities. Once the power supply circuit is operational then more extensive testing may include full load testing, transient load and line tests to compare with simulation results.

#### Load Testing

The setup is the same as the initial startup, except that an additional digital voltmeter is connected between Vin and GND, a load is connected between Vout and GND and a current meter is connected in series between Vout and the load. The load must be able to handle at least rated output power + 50% (7.5 watts for this design). Ideally the load is supplied in the form of a variable load test unit. It can also be done in the form of suitably large power resistors. When using an oscilloscope to measure waveforms on the prototype board, the ground leads of the oscilloscope probes should be as short as possible and the area of the loop formed by the ground lead should be kept to a minimum. This will help reduce ground lead inductance and eliminate EMI noise that is not actually present in the circuit.



#### **Design Assistance**

- 1. The LM76005-Q1 is qualified for Automotive applications. All passives and other components selected in this design may not be qualified for Automotive applications. The user is required to verify that all components in the design meet the qualification and safety requirements for their specific application
- 2. Master key: 3A09369785B968091A003B956300BD89[v1]
- 3. LM76005-Q1 Product Folder: http://www.ti.com/product/LM76005%2Dq1: contains the data sheet and other resources.

#### Important Notice and Disclaimer

TI provides technical and reliability data (including datasheets), design resources (including reference designs), application or other design advice, web tools, safety information, and other resources AS IS and with all faults, and disclaims all warranties. These resources are intended for skilled developers designing with TI products. You are solely responsible for (1) selecting the appropriate TI products for your application, (2) designing, validating and testing your application, and (3) ensuring your application meets applicable standards, and any other safety, security, or other requirements.

These resources are subject to change without notice. TI grants you permission to use these resources only for development of an application that uses the TI products described in the resource. Other reproduction and display of these resources is prohibited. No license is granted to any other TI intellectual property right or to any third party intellectual property right. TI disclaims responsibility for, and you will fully indemnify TI and its representatives against, any claims, damages, costs, losses, and liabilities arising out of your use of these resources.

Providing these resources does not expand or otherwise alter TI's applicable Terms of Sale or other applicable terms available either on ti.com or provided in conjunction with TI products.