Simics cheatsheet

Simics Usage

1.1 Glossary & Documentation

Simics Base	simics executable + the set of supporting shared librarie (DLLs) + tools		
simulation	running of code (target) on a model/platform (target) with advancement of time		
host	a computer where simulation runs		
target	a simulated code running in its isolated memory region, e.g. Linux or Windows guest		
platform	a complete runnable model: full set-up of devices with CPU or with at least a clock provider		
package	a set of devices, oftentimes constituting 1 platform, distributed as a whole in an archive and unpacked into 1 directory		
[Simics] Script	simple Unix-shell-like language (a wrapper over Python) used for connecting devices and command line automation		
Simics User's Guide	documentation on Simics usage — both command line and Eclipse		

Below \$ stands for Unix shell prompt, > for Simics prompt.

1.2 Set up a workspace with platform package

- path/to/simics-base/bin/project-setup .
 bin/addon-manager -c # remove default package associations
- # allow scripts & shared libraries be found:
- \$ bin/addon-manager -s /path/to/platform-package
- \$ bin/addon-manager -s /path/to/additional/package

1.3 Start up

\$./simics targets/platf/platf.simics

Shell command line arguments \rightarrow Simics command line correspondence:

\$./simics start.simics

\$./simics
> run-command-file start.simics

\$./simics script.py

\$./simics
> run-python-file script.py

\$./simics -e '\$config_variable1=value; \$config_var2=value' start.simics
but NOT ./simics start.simics -e \$varibables ...

\$./simics
> \$ config_variable=value
> \$config_var2=value
> run-command-file start.simics

1.4 Environment & Packages

- > version # list of installed packages
- \$./simics -v # the same
- > pwd # current directory where simics is running
- > list-directories # where Simics searches files

To debug chain of called auxiliary scripts (include)s:

\$./simics -script-trace targets/platf/platf.simics

1.5 Commands for running simulation

- > c[ontinue]
- > r[un] 100 cycles # or 10 steps or 0.1 seconds
- > ptime [-all] # to show target's time

1.6 Printing device structure

To find devices by name/class or interface name:

- > list-objects -all name # searches also for the class
- > list-objects -all substr = mem # object names containing mem
- > list-objects -all iface = my_interface # by interface name

To examine device structure (Simics components and devices) of a given component myPlatform:

- # 1-level representation: immediate children myPlatform:
- > list-objects namespace = myPlatform
- # multi-level one: all children of myPlatform with all hierarchy:
- > list-objects namespace = myPlatform -tree

To find all objects with the same class as given device:

- > platf.myDevice->classname my_class
- > list-objects -all my_class
- > list-objects -all class = my_class

1.7 Registers

print all registers:

- > print-device-regs platf.myDevice
- # print fields of register myRegister:
- > print-device-reg-info platf.myDevice.myBank.myRegister

1.7.1 Writing/reading with side effects

- > write-device-reg
 - platf.myDev.bank.myBank.myGrp.myReg 0x1
- # (Register groups like my Grp may be omitted in devices)
- > read-device-reg_platf.myDev.bank.myBank.myGrp.myReg

1.7.2 Writing/reading **without** side effects (aka set/get)

It's done through attributes:

```
# To set to value 0x1
```

platf.myDev->myBank_myGrp_myReg = 0x1

To get the value:

platf.myDev->myBank_myGrp_myReg

1.8 Device information

1.8.1 Model information

To find info about class/module/package for your device:

> help platf.myDev

Class myClass

Provided By

myModule (from myPackage)

...then documentation about the device is printed.

- # To list all classes provided by a module:
- > list-classes -m myModule
- # Configuration information
- > platf.myDev.info

1.8.2 Runtime information

Runtime information:

- > platf.myDev.status
- # pretty-print device attributes with values:
- > list-attributes platf.myDev
- # to search all attributes/registers containing mem:

list-attributes platf.myDevice substr = mem

1.9 Debugger commands

To use **Simics** to debug target:

dis[assemble] # show assembler commands at current address

Break points:

break address

break-hap Core-Magic-Instruction

1.10 Examining current state

pselect show currently running CPU memory-map print all mapped devices pregs print all CPU registers probe-address addr path to target addr

1.11 x86-specific and platform-specific commands

memory-trace addr path to target addr

pregs to know x86 mode (16/32/64-bit), 1st line

reset-button-press to reboot the target power-button-press to press power button

1.12 Moving files target ←→ host

> start-simicsfs-server

target\$ mkdir a
target\$ simicsfs-client a

1.13 Saving info

Save logs from current point

> start-command-line-capture filename

Save simics variables to file

- > start-command-line-capture filename
- > list-variables
- > stop-command-line-capture

1.14 Check points

```
write-configuration "checkpoint_name" — save checkpoint read-configuration "checkpoint_name" — restore it back
```

1.15 Connects — attributes that point to other devices

to set connect attribute:

- > platf.myDevice->myConnect = "platf.anotherDevice"
- # to zero connect attribute:
- > platf.myDevice->myConnect = FALSE

1.16 Miscellaneous

To dump network packages (for analysis with Wireshark):

> pcap-dump link=ethernet_switch0 filename=myFile

2 Simics DML 1.4 Programming & C/DML API

2.1 Glossary & Documentation

DML	Device Modelling Language is a wrapper over C for writing (fast) devices. Its compiler is included into Simics Base.		
device	any Simics class for modelling real devices. Different Simics devices communicate via <i>interfaces</i> .		
Model Builder User's Guide	overview of Simics/DML programming		
DML 1.4 Reference Manual	language specification		
API Reference Manual	API function list for DML & C, describes ownership rules		

2.2 Create stub device

```
$ bin/project-setup --device example-dev
$ ls modules/example-dev
test/ example-dev.dml Makefile module_load.py
```

The header of example-dev.dml is then:

```
dml 1.4; // Obligatory .dml header
device example_dev; // Class name.
// Note: - changed to underscore _
```

2.3 Create stub interface with Python wrapper

```
    $ bin/project-setup --interface sample
    $ ls modules/sample-interface
    Makefile sample-interface.dml sample-interface.h
```

Python support is enabled by IFACE_FILES in the Makefile. The generated C struct name is sample_interface_t.

2.4 Arithmetics

2.4.1 RHS is int64, LHS truncates

Assignments are equivalent to casts and hence can truncate:

```
local uint8 x = 0xffff // results in x == 0xff
```

All aritmetic operators like +, * convert its operands to int64:

```
local uint16 i = 0x7fff; local int8 j = 2; // let us sum them:

calculates as int64 \rightarrow 0x8001

local int16 x = \underbrace{i+j}_{\text{truncates}} // finally results in x == 1
```

2.4.2 Comparisons act as uint64 or int64: ==, <, <=

Comparisons on only uint64 act as proper uint64, however in comparisons int64 vs. uint64 the operands are converted to int64!

```
local uint64 u; 

u = -1; // equivalent to u = cast(-1, uint64) = 2^{64} - 1, all ones 

u == -1 // FALSE! Equivalent to int64(u) == int64(-1), 

// where upper bit is cropped: int64(u) == (2^{63} - 1). 

u == cast(-1, uint64) // true. As comparison is b/w two uint64 

u > -1 // true, but unlike C! it's int64(u) > int64(-1): 2^{63} - 1 > 1
```

2.5 Syntax

2.5.1 Statements

```
// Printing through log statements:
log log-type, level, groups: "format-string", arg1, ..., argN;
default default 0 (no group)
// (The "format-string" is the same as in C, see 'man 3 printf')
```

```
    log-level usage rule
    messages to be read by all, esp. errors
    crucial events for boards/devices, e.g. their resets
    any other messages to be read by device driver writers or validators
    internal device debug messages
```

```
// Dynamic allocation (like malloc() in C):
local type * x = new type;
// e.g. for int array:
local int * x = new int[100];
delete x; // Deallocation like free() in C
// Raising/catching exceptions:
try {
    throw; // YES, no data can be carried by exception
} catch {
    ...
}
```

2.5.2 Expressions

```
sizeof value //: int — get byte size of the value sizeoftype type //: int — get byte size of the type x[10:8] // Get bits 10—8 of integer x: x[8] // Get bit 8 of integer x:
```

2.5.3 Types

uint1...uint64 and int1...int64.

2.5.4 Methods

They are called *methods*, not functions, because they accept **implicit** 1st argument — object (current device), like C++ methods.

2.5.5 Bitfields

```
bitfields 32 {
   uint3 upper_bits @ [31:29];
   ...
}
```

2.5.6 Object declarations

2.5.7 Module variables and other data objects

DML construct	check- pointed	fields	address- mapped	arbitrary data
session	-	-	-	+
saved	+	-	-	-
attribute	+	-	-	+
unmapped register	+	+	-	-
[normal] register	+	+	+	-


2.5.8 Interfaces


Definition in .dml:

Obligatory definition in C (.h) file:

2.5.9 Explaining connects and implements

- (connect)s are for **out**bound calls
- implement s are for inbound calls

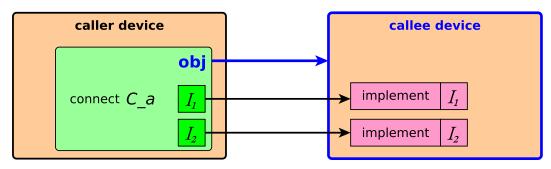

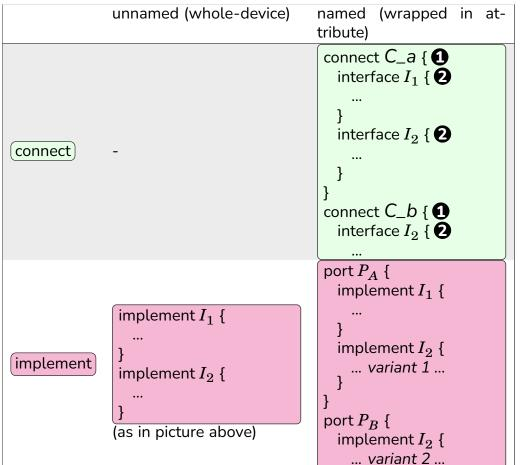

To make the whole (connect) required:

- param configuration = "required";
 // other variants: "optional" (default), "pseudo", "none"
- 2 Individual interfaces are already **required** by default, to make them optional:

```
param required = false;
```

2.6 Debugging with Gdb

To debug simics and its modules itself:

Terminal #1:

- \$ make clobber-my-module
- \$ make D=1 my-module
- \$./simics
- > pid
- 12345

Terminal #2:

- \$ bin/gdb
- >>> attach 12345
- >>> br file.dml:100 # set break point on line 100 of file.dml
- >>> continue

Back to terminal #1:

> run-command-file targets/platf/platf.simics

2.6.1 Using gdb for debugging target

```
load-module gdb-remote new-gdb-remote 50000 # open port 50000
```

2.7 Attribute values

attr_value_t is a C union that can hold one of a few predefined types. Attributes values are allocated/packed by:

attr_value_t $x = SIM_make_attr_T(cType val)$, and extracted by:

cType val = $SIM_attr_T(x)$, where T and cType can be:

T	type spec	cType — DML/C type
uint64, int64	i	uint64, int64
boolean	b	bool
	f	
floating	ı	double
string	S	char*
object	0	conf_object_t
list	$[x_1x_n]$	fixed-width tuple with n elements of types x_1 ,
		\dots , x_n
list	[x *]	arbitrary-width array of x
list	[x+]	non-empty arbitrary-width array of x
list	$[x\{m:n\}]$	array of x with $m \leq size \leq n$
list	$[x\{n\}]$	fixed-width tuple with n elements of x
dict	D	array of attr_dict_pair_t
data	d	uint8*
nil	n	void or x*
invalid		(none, used for indicating errors)

List items are accessed by $SIM_attr_list_item$. Type specs can be OR'ed as $x_1|x_2$. Type spec is used in param type = "...". For first 4 types there are predefined DML templates uint64_attr, int64_attr, bool_attr, double_attr.

2.8 Attribute initialization

Execution stage	SIM_object_is configured(obj)	SIM_is restoring state()
Create object at 1st platform init	-	-
Load checkpoint	-	+
Load micro-checkpoint (reverse execution)	+	+
Manual attribute assignment (hot plug from Simics command line)	+	-

2.9 Standard register templates

2.10 Compile-time statements & conditional compilation

```
param p1 = 10; # Non-overridable parameter
param p2 default "value"; # Overridable parameter
template myTemplate {
    param p3; # undefined value — must be given on myTemplate in-
stantiation
    ...
}
// Compile-time if
#if (p1 == 20) {
    ...
} #else #if {
    ...
} #else {
    ...
}
// Compile-time ternary operator #? #:
param mode = p1 == 20 #? "equal 20" #: "not equal 20";
// Represent value of parameter as string
param p1_str = stringify(p1); // results in "10"
```

2.11 Hash tables

```
import "simics/util/hashtab.dml";
...
local ht_str_table_t tab; // str — string (aka const char*) keys.
ht_init_str_table(&tab, /*keys_owned*/ true);
local double *value = new double; *value = 10.0;
ht_insert_str(&table, "key", cast(value, void *));
local double *get_back = cast(ht_lookup_str(&tab, "key"), double*);
assert *get_back == 10.0;
```

There are also tables for **int** keys or general (common) keys.

2.12 The secret of DML

Many "internal" features like registers and even connects are actually normal templates for objects (is object;) in plain DML defined in

1.4/dml-builtins.dml and thus they can be expanded.

2.13 CAPI

Component

It's possible to do most things in C, e.g. create device by SIM_create_object, though normally it's done from Python components.

3 Simics configuration and build system


3.1 Glossary & Documentation

Python this language is used for connecting devices together (writing

components), for writing some (slow) devices, for unit-testing a special Simics class that forms a namespace tree and (typi-

cally) in its nodes contains instances of device classses. Components implement required component interface and op-

tional component_connector interface.

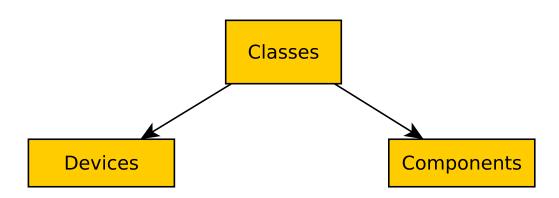

3.2 Creating devices dynamically


- > create-myDevice-comp
- > connect system.mydev system.some.connect
- > instantiate-components

3.3 Modules/Components/Classes


A Simics module includes classes, there are 2 types of them:

- devices, typically written in DML
- components, typically written in Python


A typical layout with 1-to-1 device-component correspondence:



In simplest case there are no components for a device, so its platform *platf* will have to instantiate and configure the device:



There can be a module with 1 component and many classes:

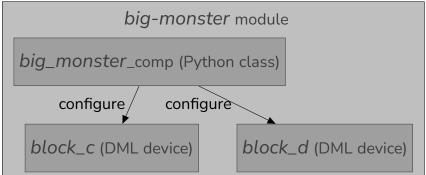

3.4 Connecting devices

• from Script:

```
platf.device_1 -> connect_1 = platf.device_2
```

• from Python:

```
conf.platf.device_1.connect_1 = conf.platf.device_2
```

3.5 Components vs functions

Components/connectors are used:

- when there is a need to unite big number of devices to prevent pollution of the surrounding namespace
- when this is a separate device that can be used across different packages independently

3.6 Structure of components

3.7 Calling device code from Python

Then the interface can be invoked from **Simics** command line via Python:

```
@conf.platf.device.ifaces.iface_1.method_1(1, None)
```

Copyright © 2021—2022 Andrey Makarov https://github.com/a-mr/simics-cheatsheet Version 6.0.100