Lab::VISA

original set of slides © Daniel Schröer

VISA, GPIB, etc.

- Instruments can be connected in various ways:
 Serial port, GPIB, VXI, TCP/IP, etc.
- GPIB (hardware and software)
 - GPIB (IEEE488): Standard by Hewlett-Packard
 - Physical layer IEEE488.1
 - Command layer IEEE488.2
 - SCPI (Standard Commands for Programmable Instruments)
- VISA (software)
 - Virtual Instrument Software Architecture
 - VXI, GPIB, serial, or computer-based instruments
 - NI-VISA library is one implementation of the VISA standard

Lab::VISA

 Lab::VISA is software to control instruments in the lab via VISA (e.g. voltage sources, multimeters, etc.)

- Alternative to LabView, Gpplus, etc.
- But very different: no GUI, just API

Lab::VISA design goals

Flexible

- Allow any kind of measurement procedure
- Control anything that has GPIB or serial connection

Safe

 Make sure you never drive voltage sources to fast and destroy your gates

Helpful

- Automatically collect additional information about the data ("metadata")
- User should have to type in additional information only once and then never again

Lab::VISA is in Perl

- Lab::VISA is written in Perl and C
- To be used from programs written in Perl
- Perl: interpreted scripting language
- Runs on almost every OS
- Extremely good in reading data files, manipulating data, etc.
- Allows to write quick and dirty scripts that get the job done
- Also allows to write clean fullsize programs
 - => ideal for experimental physics

Lab::VISA architecture

- Divided into three parts
- Build on top of each other
- Provide increasing comfort
- Measurement scripts can be based on any of these stages
- Lab::VISA is the lowest layer. It makes the NI-VISA library accessible from perl and therefor allows to make any standard VISA call
- Lab::Instrument package makes communication with instruments easier by silently handling the protocol involved
- Lab::Tools is the highest abstraction layer. Provides support for writing good measurement scripts. Offers means of saving data and related meta information to disk, plotting data, etc.

Lab::VISA architecture

```
your (tiny) measurement program / script
|Lab::Instrument::HP34401A| |L::I::KnickS252| |L::I::Yokogawa7651|
                            |Lab::Instrument::Source|
                    +--+---+
                    |Lab::Instrument|
                       +---+
                      |Lab::VISA|
                    |NI-VISA Library|
                    +---+
             |GPIB Library|
                               |Serial connection
         GPIB connection |
                               |TCP/IP connection
                               IUSB connection
               | Instrument |
                            |Instrument|
```

Example 1: Use only Lab::VISA

- looks like example programs from the NI VISA manual
 - protocol overhead is pain in the neck. NOT GOOD.

```
#!/usr/bin/perl
use strict;
use Lab::VISA;
# Initialize VISA system and
# Open default resource manager
my ($status,$default_rm)=Lab::VISA::viOpenDefaultRM();
if ($status != $Lab::VISA::VI SUCCESS) {
  die "Cannot open resource manager: $status":
# Open one resource (an instrument)
my $gpib=21;
                    # we want to open the instrument
                    # with GPIB address 21
my $board=0;
              # connected to GPIB board 0 in our computer
my $resource_name=sprintf("GPIB%u::%u::INSTR",$board,$gpib);
($status, my $instr)=Lab::VISA::viOpen(
  $default rm,
                  # the resource manager session
  $resource name, # a string describing the
  $Lab::VISA::VI NULL,# access mode (no special mode)
  $Lab::VISA::VI NULL # time out for open (no time out)
if ($status != $Lab::VISA::VI SUCCESS) {
  die "Cannot open instrument $resource name. status: $status";
(...)
```

```
(...)
# Now we are going to send one command and read the result.
# We send the simple SCPI command "*IDN?" which asks the instrument
# to identify itself. Of course the instrument must support this
# command, in order to make this example work.
my $cmd="*IDN?";
($status, my $write cnt)=Lab::VISA::viWrite(
                # the session identifier
  $instr.
  $cmd.
                  # the command to send
  lenath($cmd)
                    # the length of the command in bytes
if ($status != $Lab::VISA::VI SUCCESS) {
  die "Error while writing: $status";
# Now we will read the instruments reply
                  # indicates if the operation was successful
($status,
my $result.
                   # the answer string
my $read cnt)=
                      # the length of the answer in bytes
  Lab::VISA::viRead(
     $instr.
                 # the session identifier
     300
                 # read 300 bytes
if ($status != $Lab::VISA::VI SUCCESS) {
  die "Error while reading: $status";
# The result string will be 300 bytes long, but only $read cnt
# bytes are part of the answer. We cut away the rest.
$result=substr($result,0,$read cnt);
print $result;
```

Example 2: Use Lab::Instrument

Much nicer!

```
#!/usr/bin/perl
use strict;
use Lab::Instrument::HP34401A;
my $gpib=21; # we want to open the instrument
my $board=0;
                    # with GPIB address 21
              # connected to GPIB board 0 in our computer
# Create an instrument object
my $hp=new Lab::Instrument::HP34401A($board,$gpib);
# Use the id method to query the instruments ID string
my $result=$hp->id();
print $result;
```

Example 3: My first real measurement!


- How about doing a gate sweep?
- That's easy!

```
#!/usr/bin/perl
use strict;
use Lab::Instrument::HP34401A;
use Lab::Instrument::Yokogawa7651;
# Connect to voltage source
my $yoko=new Lab::Instrument::Yokogawa7651({
  GPIB address => 14,
  gate protect => 0,
});
# Connect to multimeter
my $hp=new Lab::Instrument::HP34401A(0,21);
# Sweep Yokogawa from 0 to 1 volt (10 steps)
for (my $volt=0; $volt<=1; $volt=$volt+0.1) {
  # set Yokogawa
  $yoko->set voltage($volt);
  # wait a second
  sleep(1);
  # read multimeter
  my $vmeas=$hp->read voltage dc();
  # print values
  print $volt,"\t",$vmeas,"\n";
```

Lab::Tools

- Provides additional tools to write better measurement scripts
- Store metadata alongside data
 - date and time
 - settings of additional instruments
 - ratio of voltage divider
 - color of the shirt you are wearing
 - everything that might be important for a later interpretation of the data
- Don't repeat yourself
 - Use above collected information automatically
 - Automatically plot data with correct axes, scaling, labels etc.

Metadata philosophy

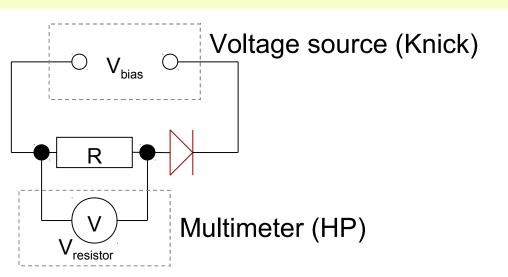

Axes

- Axis "bias voltage" (C1)
- Axis "diode current" (C2 / R)
- Axis "diode resistance"
 (R * (C1 / C2 1))
- unit
- expression
- description...

Constants

• R = 1000 Ohm

Columns

- C1: V_{bias}
- C2: V_{resistor}
- unit
- description...

1.5	+8.19300500E-01
1.4	+7.23413000E-01
1.3	+6.28083900E-01
1.5	+8.19300500E-01

Plots

- Plot "diode current" axis "diode current" over axis "bias voltage"
- Plot "diode resistance" axis "diode resistance" over axis "bias voltage"
- logscale
- grid
- ranges...

Example 4: Using Lab::Measurement

metadata, live plot

```
#!/usr/bin/perl
use strict:
use Lab::Instrument::KnickS252;
use Lab::Instrument::HP34401A;
use Lab::Measurement;
use Time::HiRes qw/usleep/;
my $start voltage = 1.5;
my \$end voltage = -3.5;
my $step
              = -0.05:
my $knick qpib
              = 14;
my $hp_gpib
               = 21:
my $sample
               = "Zenerdiode";
my $title
            = "Messung mit Lab::Measurement";
                = << COMMENT;
my $comment
Reihenschaltung aus Widerstand 1kOhm und Zenerdiode.
COMMENT
my $knick=new Lab::Instrument::Knick$252({
  'GPIB board' => 0,
  'GPIB_address' => $knick_gpib,
  'gate protect' => 0.
my $hp=new Lab::Instrument::HP34401A(0,$hp_gpib);
my $measurement=new Lab::Measurement(
             => $sample.
  sample
          => $title.
  filename base => 'zener kennlinie',
  description => $comment,
  live plot
            => 'diode current',
```

```
constants
                  => 'R'.
     'name'
                  => '1000',
     'value'
columns
     'unit'
                => 'V'.
                 => 'V_{bias}',
     'label'
     'description' => 'Bias Voltage',
     'unit'
                 => 'Amplifier output',
     'description' => 'Voltage drop on serial resistor',
axes
                => 'V'.
     'unit'
     'expression' => '$C0',
     'label'
                 => 'V_{bias}',
     'description' => 'Bias voltage',
                 => ($start_voltage < $end_voltage)
                  ? $start voltage
                  : $end_voltage,
                  => ($start_voltage < $end_voltage)
     'max'
                  ? $end voltage
                  : $start_voltage,
     'unit'
                => 'mA'.
     'expression' => '1000*($C1/R)',
                 => 'I {diode}'.
     'description' => 'Current through diode',
                 => '-1.2'.
     'min'
     'max'
                  => '1.2'.
```

'unit'

=> 'Ohm'.

```
=> 'Ohm',
        'unit'
       'expression' => 'R * (C0/C1 - 1)',
                   => 'R_{diode}',
       'description' => 'Diode resistance',
              => {
  plots
     'diode current' => {
                   => 'line'.
        'type'
        'xaxis'
                   => 0.
        'yaxis'
                   => 1,
        'grid'
                   => 'xtics vtics'.
     'diode resistance' => {
        'type'
                   => 'line'.
        'xaxis'
                   => 0,
        'vaxis'
                   => 2.
                   => 'xtics vtics'.
        'grid'
        'logscale'
                    => 'v'.
$measurement->start block();
  my $volt = $start voltage;
  ($volt - $end voltage) / $step < 0.5;
  $volt += $step
  $knick->set voltage($volt);
  usleep(500000):
  my meas = property (10,0.0001);
  $measurement->log_line($volt,$meas);
my $meta = $measurement->finish measurement();
```

More utilities: plotter.pl, make_overview.pl

plotter.pl

- Reads measurement file, list avaible plots (axes etc)
- Creates postscript or pdf output

make_overview.pl:

- Reads all measurements in a directory
- Generates a postscript or pdf file with plots for each measurement, including the metadata (i.e. constants, parameters, color of your shirt) (via LaTeX)
- Great for completing your lab book

Other Lab::VISA features

- "Gate protect" safety mechanism
 - Makes sure that no voltage is changed to fast
 - Big voltage steps are automatically split into small, slow steps
- Date/time handling
 - Date/time column can contain timestamp for every data point
 - Plot data as function of time
- Measurements with higher dimensionality
 - Each trace/sweep/line is a "block"
 - Two-dimensional plots, selections of traces, etc.