## The OpenSMOKE++ Suite Version 0.11.0.beta

February 20, 2019

OpenSMOKE++ is a general framework for numerical simulations of reacting systems with detailed kinetic mechanisms, including thousands of chemical species and reactions. The framework is entirely written in object-oriented C++ and can be easily extended and customized by the user for specific systems, without having to modify the core functionality of the program. The OpenSMOKE++ framework can handle simulations of ideal chemical reactors (plug-flow, batch, and jet stirred reactors), shock-tubes, rapid compression machines, and can be easily incorporated into multi-dimensional CFD codes for the modeling of reacting flows. OpenSMOKE++ provides useful numerical tools such as the sensitivity and rate of production analyses, needed to recognize the main chemical paths and to interpret the numerical results from a kinetic point of view. Since simulations involving large kinetic mechanisms are very time consuming, OpenSMOKE++ adopts advanced numerical techniques able to reduce the computational cost, without sacrificing the accuracy and the robustness of the calculations.

## Copyrights

OpenSMOKE++ Suite© Copyright 2008-2018 by Alberto Cuoci All rights reserved

This software is subject to the terms of the license agreement hereinafter. This software may be used or copied only in accordance with the terms of this agreement. The software is and remains the sole property of Alberto Cuoci. Whenever the OpenSMOKE++ Suite is used to produce any publication, a detailed reference to the OpenSMOKE++ Suite should be reported.

The OpenSMOKE++ Suite can be used for non-commercial purposes only and cannot be freely distributed. The user is not allowed to use the OpenSMOKE++ Suite for commercial purposes. For any commercial use please contact the author at the following email address: alberto.cuociOpolimi.it

## License agreement

Using this software implies the following terms and conditions acceptance. Any publication written using the OpenSMOKE++ Suite must report the following references:

- 1. Cuoci, A., Frassoldati, A., Faravelli, T., Ranzi E., OpenSMOKE++: An object-oriented framework for the numerical modeling of reactive systems with detailed kinetic mechanisms, Computer Physics Communications, 192, p. 237-264 (2015), DOI: 10.1016/j.cpc.2015.02.014
- Cuoci, A., Frassoldati, A., Faravelli, T., Ranzi, E., Numerical Modeling of Laminar Flames with Detailed Kinetics Based on the Operator-Splitting Method, Energy and Fuels, 27 (12), pp. 7730-7753 (2013), DOI: 10.1021/ef4016334

## Limited warranty

THIS SOFTWARE IS PROVIDED "AS IS" AND WITHOUT WARRANTIES AS TO PERFORMANCE OF MERCHANTABILITY OR ANY OTHER WARRANTIES WHETHER EXPRESSED OR IMPLIED. BECAUSE OF THE VARIOUS HARDWARE AND SOFTWARE ENVIRONMENTS INTO WHICH THIS LIBRARY MAY BE INSTALLED, NO WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE IS OFFERED. THE USER MUST ASSUME THE ENTIRE RISK OF USING THE LIBRARY.

## Main contributors

- Alberto Cuoci: kernel and core functions, ideal reactors, 1D-flame solvers, flamelet solvers, ODE, DAE and NLS solvers, CHEMKIN interpreter, graphical post-processor
- Alessandro Stagni: analysis and reduction of kinetic mechansims, portability to Mac OSX and Linux, microgravity droplet, thermodynamics of liquid mixtures
- Mauro Bracconi: heterogeneous catalytic chemistry, ISAT (In Situ Adaptive Tabulation), portability to Linux
- Stefano Rebughini: heterogeneous catalytic chemistry, portability to Linux
- Mattia Bissoli: interfaces with third-party ODE and DAE solvers, internal combustion enegines, sensitivity analysis
- Giancarlo Gentile: reactor networks, heterogeneous gas-solid chemistry

## Acknowledgments

We thank the members of CRECK Modeling Group at Politecnico di Milano for their many suggestions, bug reports, valuable comments on the source code, functionality, and documentation.

# Contents

Co	tents	4
1	ntroduction           .1 Organization            .2 How the OpenSMOKE++ Solvers work	
2	nstallation  1 List of supported operating systems  2 Microsoft Windows 2.2.1 Installation of solvers 2.2.1.1 Manually setting the environment variables 2.2.2 Installation of license file 2.2.3 Notes about the OpenSMOKE++ Graphical Post-Processor  3 Linux 2.3.1 Installation of solvers 2.3.2 Installation of license file 2.3.3 Notes about the OpenSMOKE++ Graphical Post-Processor 2.3.4 Check your installation 2.3.5 Notes about shared libraries  4 Mac OS X 2.4.1 Installation of solvers 2.4.2 Installation of license file 2.4.3 Notes about the OpenSMOKE++ Graphical Post-Processor 2.4.4 Check your installation	10 10 11 11 12 12 13 14 14 15 15
3	Quick start         .1 Selection of thermodynamic data and kinetic mechanism         .2 Pre-processing of kinetic mechanism         .3 Preparation of batch reactor simulation         .4 Analysis of results (without graphical post-processor)         .5 Analysis of results with OpenSMOKE++ Graphical PostProcessor         .6 Sensitivity analysis	18 18 19 20
4	Kinetic pre-processor	24
5	deal reactors	25
6	Main dictionaries  1 Dictionary: CHEMKIN-PreProcessor 6.1.1 Additional comments 1.2 Dictionary: Batch Reactor 6.2.1 Additional comments 1.3 Dictionary: Perfectly Stirred Reactor 6.3.1 Additional comments	29 29 32 32
	.4 Dictionary: Shock Tube Reactor	35 35

CONTENTS 5

	6.5	Dictionary: Plug Flow Reactor	
	0.0	6.5.1 Additional comments	
	6.6	Dictionary: PremixedLaminarFlame1D	
	a =	6.6.1 Additional comments	
	6.7	Dictionary: CounterFlowDiffusionFlame1D	
		6.7.1 Additional comments	
	6.8	Dictionary: Thermodynamic Equilibrium	
		6.8.1 Additional comments	
	6.9	Dictionary: LaminarFlamelet	
		6.9.1 Additional comments	
	6.10	Dictionary: LookUpTables	
		6.10.1 Additional comments	
	6.11	$Dictionary:\ Microgravity Droplet/Thermogravimetric\ Analysis\ .\ .\ .\ .\ .\ .\ .\ .\ .\ .\ .\ .\ .\$	57
_	a 1		
7		p-Dictionaries	64
	7.1	Sub-Dictionary: Comments	
		7.1.1 Additional comments	
		7.1.2 Example	
	7.2	Sub-Dictionary: ODE-Parameters	
		7.2.1 Additional comments	
		7.2.2 Example	
	7.3	Sub-Dictionary: Output-Options	68
		7.3.1 Additional comments	68
		7.3.2 Example	70
	7.4	Sub-Dictionary: Sensitivity-Analysis	70
		7.4.1 Additional comments	70
		7.4.2 Example	70
	7.5	Sub-Dictionary: Gas-Status	70
		7.5.1 Additional comments	73
		7.5.2 Examples	74
	7.6	Sub-Dictionary: Rapid-Kinetics	74
		7.6.1 Additional comments	74
		7.6.2 Example	76
	7.7	Sub-Dictionary: XY-Profile	76
		7.7.1 Additional comments	76
		7.7.2 Example	76
	7.8	Sub-Dictionary: Parametric-Analysis	78
		7.8.1 Additional comments	78
		7.8.2 Examples	80
	7.9	Sub-Dictionary: Adaptive-Grid1D	80
		7.9.1 Additional comments	80
		7.9.2 Example	82
	7.10	Sub-Dictionary: ODE-TridiagonalBlock-Parameters	82
		7.10.1 Additional comments	82
		7.10.2 Example	85
	7.11	Sub-Dictionary: DAE-TridiagonalBlock-Parameters	85
		7.11.1 Additional comments	85
		7.11.2 Example	87
	7.12	Sub-Dictionary: NLS-TridiagonalBlock-Parameters	87
		7.12.1 Additional comments	87
		7.12.2 Example	89
	7.13	Sub-Dictionary: FalseTransient-Parameters	91
	3	7.13.1 Additional comments	91
		7.13.2 Example	_
	7.14	Sub-Dictionary: Fiber	
		Sub-Dictionary: PolimiSoot	93

CONTENTS 6

		Sub-Dictionary: HMOM	
		Sub-Dictionary: OnTheFlyROPA	
		Sub-Dictionary: OnTheFlyPostProcessing	
		Sub-Dictionary: OnTheFlyCEMA	
		Sub-Dictionary: LiquidMixture	
		Sub-Dictionary: GasMixture	
		Sub-Dictionary: LewisNumbers	
	7.23	Sub-Dictionary: AutoignitionDelayTimes	
		7.23.1 Additional comments	
		7.23.2 Example	
	7.24	Sub-Dictionary: DynamicBoundaries	
		7.24.1 Additional comments	
		7.24.2 Example: TEMPERATURE_VELOCITY_SLOPES	
		7.24.3 Example: FIXED_STRAINRATE_FUEL_TEMPERATURE_SLOPE	
		7.24.4 Example: FIXED_STRAINRATE_OX_TEMPERATURE_SLOPE	
		7.24.5 Example: FIXED_BALANCE_FUEL_VELOCITY_SLOPE	
		7.24.6 Example: FIXED_BALANCE_OX_VELOCITY_SLOPE	107
	7.25	Sub-Dictionary: KineticsModifier	107
		7.25.1 Additional comments	114
0			
8		orials	115
	8.1	Autoignition of a mixture of hydrogen and air	
		8.1.1 Setup	
		8.1.2 Results	
		8.1.3 Note	
	8.2	Ignition delay times for propane autoignition	
		8.2.1 Setup	
		8.2.2 Results	
		8.2.3 Note	
	8.3	Simulating a Shock-Tube experiment	
		8.3.1 Setup	
		8.3.2 Results	
		8.3.3 Note	
	8.4	Perfectly Stirred Reactor	121
		8.4.1 Setup	121
		8.4.2 Results	122
_			
9		ended reactions	125
	9.1	Extended Fall-off reactions	
	9.2	Extended PLOG Reactions	126
10	Duk	olications using OpenSMOKE++	127

# Introduction

The OpenSMOKE++ Suite is a collection of standard solvers for performing kinetic analyses with detailed kinetic mechanisms, with hundreds of species and thousands of reactions. The word solver has to be intended as an independent program, built with the aim to perform a specific task (for example to simulate a batch reactor, or to model a shock-wave, etc. ). Thus, in the following, the OpenSMOKE++ Suite definition will be used to refer to the collection of OpenSMOKE++ standard solvers. The list of available solvers (which is continuously growing) includes:

- 1. a kinetic pre-processor, a utility which is able to read, pre-process and analyze kinetic mechanisms written in the CHEMKIN format [?, ?, ?]. Its main purpose is to rewrite the kinetic scheme in a XML format which can be efficiently used by the OpenSMOKE++ Suite solvers;
- 2. a collection of solvers (i.e. independent executable files), one for each system to simulate. In other words, the OpenSMOKE++ Suite provides the solver dedicated to the simulation of plug flow reactors, the solver dedicated to the simulation of batch reactors, and so on. These solvers are completely independent from each other, but need the same pre-processed kinetic mechanism in XML format generated by the kinetic pre-processor described above;
- 3. a graphical post-processor, to easily post-process the simulation results. It is able not only to plot the usual profiles of temperature, pressure, composition, etc. along the time or space coordinate, but it is extremely useful to rapidly perform sensitivity analyses, rate of production analyses, and to draw flux diagrams. The figure below show a schematic diagram of the OpenSMOKE++ Suite.

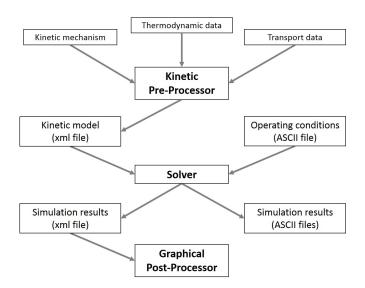


Figure 1.1: The OpenSMOKE++ Suite structure

## 1.1 Organization

The OpenSMOKE++ Suite consists of several executable files, libraries and utilities which are organized in several folders, as reported in the following:

- bin
- docs
- examples
- kinetic-mechanisms
- lib
- quick-start
- tutorials

#### bin

The bin folder contains the executable files to pre-process kinetic schemes in CHEMKIN format, to simulate ideal reactors (batch, perfectly stirred, plug-flow reactors, and shock tubes) and to graphically post-process the results. Together with the executables, the bin folder includes the needed dll libraries (for Microsoft Windows users) or the needed shared libraries (for Linux users) are available. We recommend to leave these libraries in the same bin folder containing the executable files.

#### docs

The docs folder contains documentation files.

#### examples

The examples folder, as suggested by the name, contains several examples to learn how to run the simulation for the ideal reactors available in the OpenSMOKE++ Suite. We strongly recommend to look at the examples reported in this folder to have more information about the most advanced options. All the examples can be simulated by simply double-clicking on the Run.bat file (for Microsoft Windows users) or running the Run.sh file (for Linux users).

#### kinetic-mechanisms

The kinetic-mechanisms folder contains several kinetic schemes in CHEMKIN format freely available from the web. Most of them are from the CRECK Modeling Group at Politecnico di Milano and can be downloaded at the following address: http://creckmodeling.chem.polimi.it/. For each kinetic scheme, at least the thermodynamic and the kinetic files are provided.

#### lib

The lib folder (available only for Linux platforms) contains the shared libraries needed to run the solvers and the graphical post-processor. In particular, the current version of OpenSMOKE++ Suite includes shared libraries for Boost C++, Intel MKL, and Sundials Suite.

#### quick-start

The quick-start folder contains the examples described in the Quick-Start Section (Chapter 3) of this User's Guide.

## tutorials

The Tutorial folder contains the examples described in the Tutorials Section (Chapter 8) of this User's Guide.

## 1.2 How the OpenSMOKE++ Solvers work

All the OpenSMOKE++ Suite solvers, together with the kinetic pre-processor, do not have any graphical interface. They are based on input files in ASCII format. Only the graphical post-processor works with a GUI (Graphical User Interface), based on the QT libraries. This means that if you want to pre-process a kinetic mechanism (together with the thermodynamic and transport properties) or you want to simulate a reactor, your input conditions must be provided through one or more input files. These are simple ASCII files which can be written and modified using a generic text editor, like Notepad, Notepad++, Microsoft Word, gedit, etc. In the following lines, an example of perfectly stirred reactor is reported:

```
// Example of input file for OpenSMOKE++
1
2
   Dictionary Perfectly Stirred Reactor
3
4
   {
             @KineticsFolder POLIMI H2CO NOX 1311;
5
                               Adiabatic — Constant Pressure;
            @Type
6
             @InletStatus
                               Inlet-Composition;
7
             @Residence Time
                              1 s;
8
            @Volume
                               100 cm3;
9
   }
10
11
   Dictionary Inlet — Composition
12
13
   {
             @Temperature
                                 1000. K :
14
                                 101325. Pa ;
15
             @Pressure
             @EquivalenceRatio 1.;
16
                                 H2 1.;
17
             @FuelMoles
             @OxidizerMoles
                                 O2 21 N2 79;
18
   }
19
```

The main rules to write the input files are listed below:

- 1. The comments must be preceded by the // keyword. A comment can be inserted at the beginning or in the middle of a line. Every word or number reported after the // keyword is considered as a comment and ignored.
- 2. The input data must be organized in Dictionaries, i.e. homogeneous input data have to be collected together in the same structure (see the example above).
- 3. Each dictionary is defined by the Dictionary word, followed by the name of the dictionary. The options belonging to this dictionary have to be reported between the { and the } symbols.
- 4. Each keyword begins with the @ symbol, usually requires one or more options (bool variables, number, strings, etc.)
- 5. Each input line must end with the; symbol.

In the example reported above, which refers to a steady-state, perfectly stirred reactor, two different dictionaries were defined, with names equal to PerfectlyStirredReactor and Inlet-Composition, respectively. In each of these two dictionaries, several input data are specified through different keywords. The available options depend on the solver you are using. Please, look at Chapters 6 and 7, where the complete list of options available for each kind of reactor are reported and explained.

# Installation

This section describes in details the procedure to install the OpenSMOKE++ Suite on your machine.

## 2.1 List of supported operating systems

## Microsoft Windows family

- Microsoft Windows 10 (32/64 bit)
- Microsoft Windows 8 (32/64 bit)
- Microsoft Windows 7 (32/64 bit)

## Linux family

- OpenSuse 13 (64 bit) and higher
- Fedora 21 (64 bit) and higher
- Ubuntu 12.04 (64 bit) and higher
- Xubuntu 12.04 (64 bit) and higher

#### Mac OS X

• Mac OS X 10.8 (64 bit) and higher

If your operating system does not appear in the list reported above, we suggest to install an Oracle VirtualBox (https://www.virtualbox.org/) running Ubuntu 14.04 or higher (http://www.ubuntu.com/).

## 2.2 Microsoft Windows

## Pre-requisites for the graphical post-processor:

- Irfanview: http://www.irfanview.com/
- Graphiviz: http://www.graphviz.org

## 2.2.1 Installation of solvers

In order to install the OpenSMOKE++ Suite, double-click on the msi file. If you want to replace the existing version of OpenSMOKE++ Suite with a newer version, before proceeding with the new installation, we recommend to uninstall the previous version through the Control Panel -> Add/Remove Programs utility available in Microsoft Windows.

## 2.2.1.1 Manually setting the environment variables

Once you installed the software, the environment variables should be automatically updated. In case you experience problems in running the code, you have to manually update the environment variables according to the following procedure:

- 1. From the Start button, select Computer, right-click on it and select Properties
- 2. Click the Advanced System Settings link in the left column.
- 3. In the System Properties window, click on the Environment Variables button near the bottom of that tab.
- 4. In the Environment Variables window, create a new variable with name OPENSMOKEPP\_EXE\_FOLDER in the User variables section and click the Edit button. This variable has to point to the bin folder of your OpenSMOKE++ Suite installation. Of course the path depends on your system (i.e. on the location where you installed the OpenSMOKE++ Suite). As an example, if you installed the OpenSMOKE++ Suite in C:\OpenSMOKE++ Suite folder, the following string should be assigned to the OPENSMOKEPP\_EXE\_FOLDER:

C:\OpenSMOKE++ Suite\bin;

#### 2.2.2 Installation of license file

The solvers belonging to OpenSMOKE++ Suite can be used only if a suitable license file (called license.dat) is available. The license.dat file must be present in the bin folder. At present, only academic users from recognised institutional email addresses will be provided with the license file and have free access to the software. Users from commercial organisations should contact the OpenSMOKE++ Team.

## 2.2.3 Notes about the OpenSMOKE++ Graphical Post-Processor

In order to use all the features of the graphical post-processor, the installation of Graphviz and Irfanview is strongly recommended. Without them, you cannot perform automatic generation of flux diagrams. However, all the other features of graphical post-processor work correctly even without Graphviz and Irfanview.

#### Instructions to install Graphviz

In order to create the flux analysis plots, Graphviz must be installed on your machine. You can download it from http://www.graphviz.org/. Once you installed the software, you need to update the environment variables using the following procedure (already described above):

- 1. From the Start button, select Computer, right-click on it and select Properties
- 2. Click the Advanced System Settings link in the left column.
- 3. In the System Properties window, click on the Environment Variables button near the bottom of that tab.
- 4. In the Environment Variables window, highlight the PATH variable in the User variables section and click the Edit button. Add or modify the path lines with the paths you want the computer to access. Each different directory is separated with a semicolon. In particular, modify the PATH variable by adding the path to the bin folder contained in the main Graphviz folder. Of course the path depends on your system (i.e. on the location where you installed the Graphviz library). As an example, if you installed the GraphViz library in "C:\Program Files (x86)\Graphviz2.38" folder, the following string should be appended to the PATH variable:

C:\Program Files (x86)\Graphviz2.38\bin;

#### Instructions to install Irfanview

In order to automatically visualize the flux analysis plots, the Irfanview viewer must be installed on your machine. You can download it from http://www.irfanview.com/. Once you installed the software, you need to update the environment variables using the following procedure (already described above):

- 1. From the Start button, select Computer, right-click on it and select Properties
- 2. Click the Advanced System Settings link in the left column.
- 3. In the System Properties window, click on the Environment Variables button near the bottom of that tab.
- 4. In the Environment Variables window, highlight the PATH variable in the User variables section and click the Edit button. Add or modify the path lines with the paths you want the computer to access. Each different directory is separated with a semicolon. In particular, modify the PATH variable by adding the path to the main Irfanview folder. Of course the path depends on your system (i.e. on the location where you installed IrfanView). As an example, if you installed Irfanview in "C:\Program Files (x86)\IrfanView" folder, the following string should be appended to the PATH variable:

```
C:\Program Files (x86)\IrfanView;
```

#### 2.3 Linux

## Pre-requisites for OpenSMOKE++ Suite Solvers:

• gfortran libraries: https://gcc.gnu.org/wiki/GFortran

#### Pre-requisites for the graphical post-processor:

- QT4 (or QT5) libraries: https://www.qt.io/download-open-source/
- Graphiviz: http://www.graphviz.org/

#### 2.3.1 Installation of solvers

- 1. Be sure that gfortran libraries are available on your machine. If not, you can easily find precompiled packages for the most common Linux distributions (see paragraph 2.3.5).
- 2. Unpack the opensmoke++suite-0.10.0.tar.gz file in the location you prefer using the following command:

```
tar -xzf opensmoke++suite-0.10.0.tar.gz
```

- 3. Update the environment variable settings:
  - a) if running bash or ksh (if in doubt type: echo \$SHELL): edit your \$HOME/.bashrc file by adding the following lines:

```
export PATH=$PATH:/path_to_opensmoke_suite/bin
export LD_LIBRARY_PATH=$LD_LIBRARY_PATH:/path_to_opensmoke_suite/lib
```

b) if running tcsh or csh:
edit your \$HOME/.cshrc file by adding the following lines:

```
setenv PATH $PATH\:/path_to_opensmoke_suite/bin
setenv LD_LIBRARY_PATH $LD_LIBRARY_PATH\:/path_to_opensmoke_suite/|ib
```

As an example, if you unpacked the opensmoke++suite-0.10.0.tar.gz file directly in your home folder (\$HOME), the following lines have to be added (in case of bash):

```
export PATH=$PATH:$HOME/opensmoke++suite -0.10.0/bin export LD_LIBRARY_PATH=$LD_LIBRARY_PATH:$HOME/opensmoke++suite -0.10.0/lib
```

4. Close the terminal and open a new terminal (or source the updated \$HOME/.bashrc or \$HOME/.cshrc).

#### 2.3.2 Installation of license file

The OpenSMOKE++ Suite solvers can be used only if a suitable license file (called license.dat) is available. The license.dat file must be present in the bin folder. At present, only academic users from recognised institutional email addresses will be provided with the license file and have free access to the software. Users from commercial organisations should contact the OpenSMOKE++ Team.

## 2.3.3 Notes about the OpenSMOKE++ Graphical Post-Processor

In order to use all the features of the graphical post-processor, the QT4 (or QT5) libraries are needed. Moreover, the installation of Graphviz (even if not strictly needed) is strongly recommended. Without it, you cannot perform automatic generation of flux diagrams. However, all the other features of graphical post-processor work correctly, even without Graphviz.

#### Instructions to install the QT4 libraries

Precompiled QT4 libraries are already available in most Linux distributions (e.g. Ubuntu, Xubuntu, Debian, Mandriva), which means that you do not have to install them. Thus, the instructions below refer to Linux distributions which are distributed without QT4 libraries.

1. Installation of pre-compiled libraries (recommended)

Even if not available in the basic distribution, precompiled QT4 libraries available for most Linux distributions. Please, follow the instructions specific to the distribution you are using.

2. Compilation from source code

If no pre-compiled libraries are available for your Linux distribution, you need to compile the source code. You can download it from https://www.qt.io/download-open-source/. Please, follow the instructions provided in the source code to compile and install the library. Be sure that the LD\_LIBRARY\_PATH environment variable includes the lib folder of installed QT4 library.

## Instructions to install the Graphviz library

In order to create the flux analysis plots, **Graphviz** must be installed on your machine. Two options are possible: installation of pre-compiled binaries (if available for your Linux distribution) or compilation from source code.

1. Installation of pre-compiled binaries (recommended)

If available for your Linux distribution, you can simply install the Graphviz library directly from the pre-compiled binaries.

#### **Fedora**

The easiest way to install and maintain Graphviz on Fedora is to use yum. To set up yum, download the graphviz-fedora.repo http://www.graphviz.org/graphviz-fedora.repo. Save it (as root) in /etc/yum.repos.d/ Then you can (as root) type:

```
yum list available 'graphviz*'
yum install 'graphviz*'
```

#### OpenSuse

Use the Yast utility to install GraphViz.

#### Ubuntu and Xubuntu

Type the following command in a terminal:

```
sudo apt-get install graphviz
```

## 2. Compilation from source code

If no pre-compiled binaries are aviable for your Linux distribution, you need to compile the source code. You can download it from http://www.graphviz.org/. Please, follow the instructions provided in the source code to compile and install the library. Be sure that the PATH environment variable includes the bin folder of installed Graphviz.

## 2.3.4 Check your installation

1. Check if installation of solvers was done properly go to the quick-start\01-adiabatic-batch-reactor folder and run the simulation by typing

```
./Run.sh
```

2. Check if installation of graphical post-processor was done properly: from the same folder, type

```
OpenSMOKEpp_PostProcessor.sh
```

If error messages about missing shared libraries appear, have a look at the Notes reported below.

#### 2.3.5 Notes about shared libraries

You may experience some issues in running OpenSMOKE++ Suite solvers and/or graphical post processor, especially if you use are not using Ubuntu or Xubuntu. In most cases, the typical errors are about missing shared libraries:

```
error while loading shared libraries: name_of_library.so
```

In that cases you need to install the missing library/libraries. In particular, be sure to have the QT4 and gfortran libraries properly installed on your machine.

Here below we reported a list of known issues, together with possible solutions:

## • Fedora

```
Error message: error while loading shared libraries: libgfortran.so.x Solution: su -c 'yum install gcc-gfortran'
```

#### • OpenSuse

```
Error message: error while loading shared libraries: libQtGui.so.x Solution: install libqt4 using Yast
```

## • Ubuntu and Xubuntu

```
Error message: error while loading shared libraries: libgfortran.so.x Solution: sudo apt-get install libgfortran
```

#### • Xubuntu

Error message: error while loading shared libraries: libaudio.so.x Solution: sudo apt-get install libaudio2

#### 2.4 Mac OS X

## Pre-requisites for OpenSMOKE++ Suite Solvers:

• gfortran libraries: https://gcc.gnu.org/wiki/GFortranBinaries#MacOS

## Pre-requisites for the graphical post-processor:

• Graphiviz: http://www.graphviz.org/Download\_macos.php

#### 2.4.1 Installation of solvers

1. Be sure that gfortran libraries are available on your machine. If not, you can download and installed precompiled libraries for your Mac OS X at the following web-address:

https://gcc.gnu.org/wiki/GFortranBinaries#MacOS

2. Unpack the opensmoke++suite-0.10.0-macos.tar.gz file in the location you prefer using the following command:

```
tar -xzf opensmoke++suite -0.10.0 - macos. tar.gz
```

3. Update the environment variable settings:

edit your \$HOME/.bashrc\_profile file (or your \$HOME/.profile file, depending on your settings) by adding the following line:

```
export PATH=$PATH:/path to opensmoke suite/bin
```

As an example, if you unpacked the opensmoke++suite-0.10.0-macos.tar.gz file directly in your home folder (\$HOME), the following line has to be added:

export PATH=\$PATH:\$HOME/opensmoke++suite-0.10.0-macos/bin

4. Close the terminal and open a new terminal (or source the updated \$HOME/.bashrc\_profile or your \$HOME/.profile, depending on your settings)

## 2.4.2 Installation of license file

The OpenSMOKE++ Suite solvers can be used only if a suitable license file (called license.dat) is available. The license.dat file must be present in the bin folder. At present, only academic users from recognised institutional email addresses will be provided with the license file and have free access to the software. Users from commercial organisations should contact the OpenSMOKE++ Team.

## 2.4.3 Notes about the OpenSMOKE++ Graphical Post-Processor

In order to use all the features of the graphical post-processor, the installation of Graphviz (even if not strictly needed) is strongly recommended. Without it, you cannot perform automatic generation of flux diagrams. However, all the remaining features of graphical post-processor work correctly even without Graphviz.

## Instructions to install Graphviz

Two options are possible: installation of pre-compiled binaries (recommended) or compilation from source code.

- 1. Installation of pre-compiled binaries (recommended)
  - Precompiled Graphviz is available at the following web address: http://www.graphviz.org/Download\_macos.php. You can install it using the usual installation procedure for Mac OSX.
- 2. Compilation from source code

The source code can be downloaded from http://www.graphviz.org/. Please, follow the instructions provided in the source code to compile and install the library. Be sure that the PATH environment variable includes the bin folder of installed Graphviz.

## 2.4.4 Check your installation

1. Check if installation of solvers was done properly go to the quick-start\01-adiabatic-batch-reactor folder and run the simulation by typing

```
./Run.sh
```

2. Check if installation of graphical post-processor was done properly from the same folder, type:

```
open /path_to_opensmoke_suite/bin/OpenSMOKEpp_PostProcessor.sh.app
```

As an example, if you installed OpenSMOKE++ in your home directory (\$HOME), you can type: \$HOME/opensmoke++suite-0.10.0-macos/bin/OpenSMOKEpp\_PostProcessor.sh.app

# Quick start

In this section we describe how to setup and run a typical OpenSMOKE++ simulation. As a first example, the attion will be focused on an adiabatic batch reactor, whose initial composition is a stoichiometric mixture of syngas (40% H2, 60% CO) and air (21% O2, 79% N2) at 10 atm and 600 K.

## 3.1 Selection of thermodynamic data and kinetic mechanism

In order to run simulations with OpenSMOKE++ Suite solvers, the user needs a kinetic scheme describing the homogeneous (gas-phase) (and, optionally, also the heterogeneous or surface reactions), and the thermodynamic properties for each species included in the kinetic mechanism. The current version of OpenSMOKE++ requires that the kinetic scheme, together with the thermodynamic and (optionally) transport properties, is provided according to the CHEMKIN rules [?]. Kinetic mechanisms and thermodynamic and transport data in CHEMKIN compatible format are available from several research groups. In particular, a non exaustive list (adapted from[?]) is reported in the following:

• The CRECK Modeling group at Politecnico di Milano provides detailed kinetic mechanisms describing pyrolysis, combustion, and oxidation of several fuels: hydrogen, methane, propane, PRF, diesels, jet-fuels, biofuels, etc.

http://creckmodeling.chem.polimi.it/

• Lawrence Livermore National Laboratory (LLNL) has posted combustion mechanisms, including thermodynamic data, transport data, and reaction sets for flame simulations with hydrogen and various hydrocarbon fuels.

https://www-pls.1lnl.gov/?url=science\_and\_technology-chemistry-combustion-mechanisms

- The Combustion Division of the Center for Energy Research at the University of California-San Diego has posted kinetic mechanisms for combustion applications, including nitrogen, JP10, and heptane chemistry. http://web.eng.ucsd.edu/mae/groups/combustion/mechanism.html
- The Combustion Group at Princeton University provides mechanisms for combustion of chlorinated and fluorinated compound mixtures with methane, and for high-pressure methane and propane flames.
  - http://www.princeton.edu/mae/people/faculty/dryer/homepage/kinetic\_models/
- Professor Alexander Burcat of Technion Israeli Institute of Technology has posted his database of thermodynamic properties. The data has been collected from many sources and is critically reviewed and frequently updated. The BURCAT. THR file is in CHEMKIN format, but contains comments and descriptive text about each species, so that file would require some user manipulation (commenting out text lines) in order to be used directly in OpenSMOKE++.

http://garfield.chem.elte.hu/Burcat/burcat.html

• The Gas Research Institute (GRI) funded development of the GRI-mech, which is a CHEMKIN mechanism for natural gas combustion, including thermodynamic properties and rates. You can download the most recent version of GRI-mech from the GRI-mech website.

http://combustion.berkeley.edu/gri-mech/

Please, look at the CHEMKIN user's guide [?] to find the syntax rules to correctly write and modify the files describing the kinetic mechanism and the thermodynamic and transport properties.

In this example we will use the POLIMI\_H2CO\_NOX\_1412 kinetic mechanism of CRECK Modeling group at Politecnico di Milano. This is a detailed kinetic mechanism describing the combustion of mixtures of hydrogen and carbon monoxide, consisting of 32 species involved in more than 170 reactions. It is available in the kinetic-mechanisms\POLIMI\_1412\Kinetics folder or, alternatively, it can be freely downloaded from the following page: (http://creckmodeling.chem.polimi.it/). The thermodynamic data are available in the kinetic-mechanisms\POLIMI\_1412\Thermodynamics folder. In particular, for the purposes of this first example, we need only the thermodynamic data (POLIMI\_TOT\_NOX\_1412.CKT file) and the kinetic mechanism (POLIMI\_H2CO\_NOX\_1412.CKI file). The transport data are not needed for the simulation of a batch reactor.

## 3.2 Pre-processing of kinetic mechanism

Before using it in OpenSMOKE++ Suite, the kinetic scheme has be pre-processed and re-written in a new format. This operation can also be performed on-the-fly, i.e. directly when the simulation is started (see Section 7.6). However, in this first example, we prefer to perform this pre-processing operation as an independent step. The pre-processing of a kinetic mechanism (together with thermodynamic and transport data, if needed) must be performed only once, using a particular solver of OpenSMOKE++ Suite, which is called OpenSMOKEpp\_CHEMKIN\_PreProcessor.

- 1. Create a new folder and copy there the the thermodynamic and kinetic files mentioned above (POLIMI\_-TOT\_NOX\_1412.CKT and POLIMI\_H2CO\_NOX\_1412.CKI, respectively).
- 2. Create a new input file (kinetics.dic in the following, but in principle the user is free to choose the name he prefers) in which you specify the the thermodynamic and kinetic files and the destination folder:

3. Run the kinetic pre-processor using the following command (in Microsoft Windows):

```
%OPENSMOKEPP_EXE_FOLDER%\OpenSMOKEpp_CHEMKIN_PreProcessor.exe — input kinetics.dic
```

or (in Linux and Mac OSX):

```
OpenSMOKEpp_CHEMKIN_PreProcessor.sh — input kinetics.dic
```

4. If everything works properly, you will find the result of this pre-processing operation in the folder you specified through the <code>@Output</code> option in the kinetics.dic file.

#### 3.3 Preparation of batch reactor simulation

We are now ready to write the input file (batch.dic in the following) reporting the input data for the batch reactor simulation.

1. In the same folder where the kinetic mechanism has been pre-processed, create a new text file, called batch.dic:

```
Dictionary BatchReactor
1
2
   {
             @KineticsFolder
                                       POLIMI H2CO NOX 1412;
4
             @Type
                                       NonIsothermal—ConstantVolume;
             @Initia|Status
                                       initial — mixture;
5
             @EndTime
                                       0.01 s:
6
             @Options
                                       output-options;
   Dictionary initial - mixture
10
11
             @Temperature
                                  1000.
                                           Κ ;
12
                               101325. Pa ;
             @Pressure
13
             @EquivalenceRatio
                                 1.;
14
             @FuelMoles
                                  H2 40. CO 60.;
15
             @Oxidizer Moles
                                  O2 21 N2 79;
17
   }
18
   {\sf Dictionary\ output-options}
19
20
   {
             @StepsFile
                                        2:
21
22
```

For the meaning of each option and additional/alternative options, please look at Chapters 6 and 7.

2. Run the OpenSMOKE++ Suite solver for batch reactors (OpenSMOKEpp\_BatchReactor) using the following command (in Microsoft Windows):

```
%OPENSMOKEPP_EXE_FOLDER%\OpenSMOKEpp_BatchReactor.exe — input batch.dic
```

or (in Linux and Mac OSX):

```
OpenSMOKEpp_BatchReactor.sh — input batch.dic
```

3. If everything works properly, you will find the result of this pre-processing operation in the Output folder.

## 3.4 Analysis of results (without graphical post-processor)

The results of the simulations are written in the Output folder. In this particular example three files are available:

- FinalSummary.out: this file reports the initial and final status of the reacting mixture (temperature, pressure, density, composition, etc.)
- Output.out: it is organized in columns and the first row reports the meaning of each column, together with a number which refers to the column number. Both the mole and mass fractions of species are reported: the mole fractions have the x suffix, while the mass fractions the w suffix. You can easily import this file in Microsoft Excel, Matlab, etc. or you can use Gnuplot to directly plot (also on the fly) the results.
- Output.xml: XML output file to be used by the OpenSMOKE++ graphical post-processor (see next Section)

The profiles reported in the Output.out file can be easily plotted using Gnuplot, Microsoft Excel, Matlab, etc. In particular, we recommend to use Gnuplot. As an example, if you want to plot the mole fraction profiles of H2 versus time, in Gnuplot you can type:

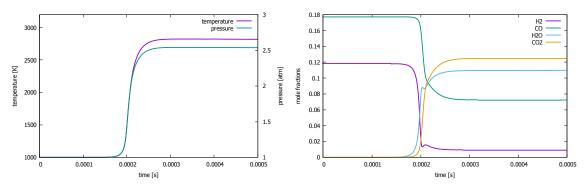


Figure 3.1: Adiabatic batch reactor: profiles of temperature and pressure (left) and main species (right). The plots have been obtained from the Output.out file, using gnuplot.

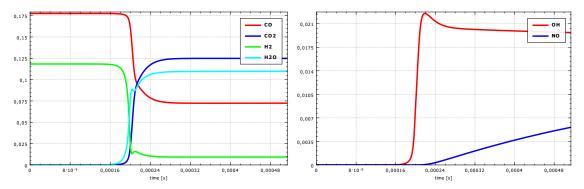


Figure 3.2: Adiabatic batch reactor: profiles of main species (left) and OH radical and NO (right). The profiles have been obtained directly using the OpenSMOKE++ Graphical PostProcessor.

```
p 'Output/Output.out' u 1:22 w | t 'H2'
```

Figure 3.1 shows additional profiles plotted with Gnuplot.

## 3.5 Analysis of results with OpenSMOKE++ Graphical PostProcessor

In addition, you can analyze the results through the OpenSMOKE++ Graphical PostProcessor.

- In order to graphically post-process the results you have to run the OpenSMOKEpp\_PostProcessor file (contained in the bin folder of OpenSMOKE++ Suite).
- 2. Select the folder containing the Output.xml file generated by the simulation by clicking on the Select Results... button. The Profiles button becomes now available. If you click on it, you have the possibility to plot the calculated profiles of species, temperature, pressure, etc. As an example, in Figure 3.2 profiles of selected species are reported.
- 3. If you want to perform more interesting post-processing analyses, you have to load also the pre-processed kinetic scheme. In order to do this, you should close the Profiles window and click on the Select Mechanism... button. Then, select the folder containing the kinetics.xml file generated by the kinetic pre-processor. The Rate of Production button becomes available. If you click on this button, a new window will be available. Here you have the possibility to plot formation rates for all the species and reaction rates for all the reactions (see Figure 3.3). You can analyze the distribution of characteristic times by looking at the eigenvalues of the Jacobian matrix, by clicking on the Analyze Characteristic Times button.
- 4. More interestingly, you can perform rate of production analysis for each species in the kinetic scheme through the Plot ROPA bars button (see Figure 3.4).

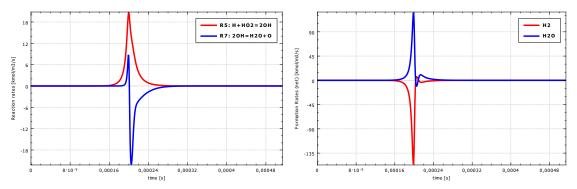


Figure 3.3: Adiabatic batch reactor: profiles of reaction rates (left) and formation rates of selected species (right). The profiles have been obtained directly using the OpenSMOKE++ Graphical PostProcessor.

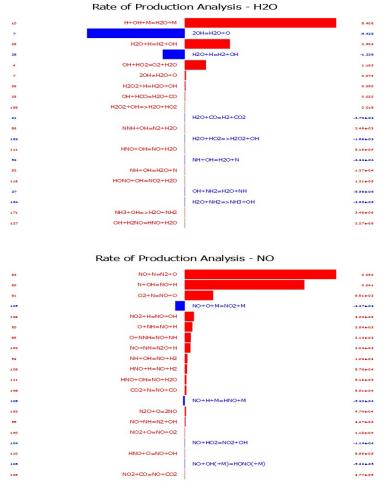


Figure 3.4: Adiabatic batch reactor: rate of production analyses for H2O and NO as calculated by suing the OpenSMOKE++ PostProcessor.

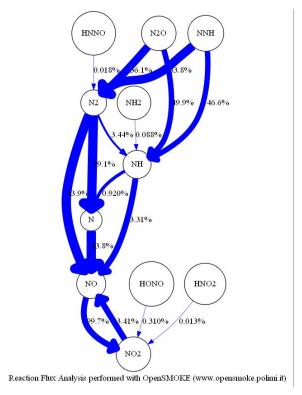


Figure 3.5: Adiabatic batch reactor: flux analysis (NO production, Element N, Depth 1, Width 4)

5. Eventually, you can also draw path diagrams through the Flux Analysis button (this feature is only available if you correctly installed Graphviz and Irfanview, as described in the previous Chapter). As an example, in the Type panel select the Local radio button and write 0.022 in the corresponding window (this is the time in seconds at which you want to perform the flux analysis). Select NO from the Species list, N element from the Element list, and Production from the Type panel. If you click on the Flux Analysis button, you should get the flux diagram reported in Figure 3.5.

## 3.6 Sensitivity analysis

The OpenSMOKE++ Suite provides several useful tools to perform sensitivity analysis, both for unsteady and steady-state problems. Sensitivity analysis is very important for kinetic studies, since it allows the quantitative understanding of how the numerical solution of the governing equations depends on the various parameters contained in the model itself. Only the first-order sensitivity coefficients with respect to the reaction rate coefficients (pre-exponential factors, activation energy or kinetic constant) can be calculated.

Since the calculation of first-order sensitivity coefficient is very time consuming, the user has to request explicitly the sensitivity analysis before running the simulation. Thus, in order to perform the sensitivity analysis, we modify the batch.dic file by adding a new dictionary:

and by enabling the sensitivity analysis calculation in the main BatchReactor dictionary, through the addition of the following command:

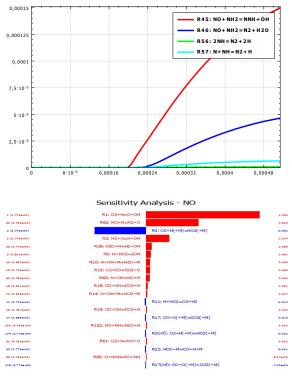


Figure 3.6: Adiabatic batch reactor: sensitivity analysis of NO.

```
 @\,S\,ensitivity\,A\,n\,a\,l\,y\,s\,is \qquad s\,ensitivity\,-options\,; \\
```

Now you can run the batch reactor simulation using the following command (in Microsoft Windows):

```
%OPENSMOKEPP_EXE_FOLDER%\OpenSMOKEpp_BatchReactor.exe — input batch.dic
```

or (in Linux amd Mac OSX):

```
OpenSMOKEpp_BatchReactor.sh — input batch.dic
```

If everything worked properly, you can now look at the results of sensitivity analysis using the OpenSMOKE++ Graphical PostProcessor. In particular, after selecting the folders containing the Output.xml file and the pre-processed kinetic mechanism, the third button, Sensitivity Analysis, will be available. You can now plot the specific sensitivity coefficient profiles for each species and reaction or a bar chart for every species. An example is reported in Figure 3.6.

# Kinetic pre-processor

In order to preprocess a kinetic scheme, the OpenSMOKE++ Suite provides the OpenSMOKEpp\_CHEMKIN\_PreProcessor utility. The user has to supply the files containing the thermodynamic data, the kinetic mechanism, and (optionally) the transport data. For the simulation of ideal reactors, usually the transport data are not needed and therefore the user could choose to preprocess only the thermodynamic and the kinetic data. This is useful, since in many cases the transport data are not available. In order to run the OpenSMOKEpp\_CHEMKIN\_PreProcessor utility, the user has to write an input file containing the instructions (i.e. the dictionary) to perform the preprocessing and/or additional useful operations (checking of the thermodynamic properties, post-processing of reaction rates, etc.). The rules to write the dictionary are reported in Section 6.1. Please look at the tutorials to have more details. The OpenSMOKEpp\_CHEMKIN\_PreProcessor utility can be run from the command line using the following instructions, where it is assumed that the file containing the dictionary is called myinput.dic and the dictionary mydictionary:

1. in Microsoft Windows

```
%OPENSMOKEPP_EXE_FOLDER%\OpenSMOKEpp_CHEMKIN_PreProcessor.exe ——input myinput.dic ——dictionary mydictionary
```

Please, consider that the instruction reported above must be written in a single line. You can use multiple lines using the ^ symbol.

2. in Linux

```
OpenSMOKEpp_CHEMKIN_PreProcessor.sh — input myinput.dic — dictionary mydictionary
```

## Notes

- 1. The --input option can be omitted. In this case the OpenSMOKEpp\_CHEMKIN\_PreProcessor assumes that the input file is called input.dic
- 2. The --dictionary option can be omitted. In this case the OpenSMOKEpp\_CHEMKIN\_PreProcessor assumes that the dictionary is called CHEMKIN\_PreProcessor
- 3. In addition to several ASCII files (depending on the options specified in the dictionary), a kinetics.xml file will be generated by the OpenSMOKEpp\_CHEMKIN\_PreProcessor. This is the only file needed by the OpenSMOKE++ Suite solvers.

## Ideal reactors

The ideal reactor simulations can be performed using the same approach used for pre-processing the kinetic mechanism, as described in Chapter 4. Thus, the user has to supply a proper dictionary containing the instructions and the options for running the simulation under investigation. As usual, the solver can be run using the following instruction from the command line (where it is assumed that the dictionary is called mydictionary, contained in myinput.dic file):

1. in Microsoft Windows

```
%OPENSMOKEPP_EXE_FOLDER%\OpenSMOKEpp_SolverName.exe — input myinput.dic — dictionary mydictionary
```

Please, consider that the instruction reported above must be written in a single line. You can use multiple lines using the ^ symbol.

2. in Linux

```
OpenSMOKEpp_SolverName.sh — input myinput.dic — dictionary mydictionary
```

## Notes

- 1. The -input option can be omitted. In this case the OpenSMOKEpp\_SolverName assumes that the input file is called input.dic The rules to write the dictionary for several ideal reactors are reported in Chapter 6. Please look at the tutorials to have more details.
- 2. The kinetic scheme can be provided in 2 different ways:
  - a) If a pre-processed version of the kinetic scheme is already available (i.e. the kinetics.xml file was already generated as described in Chapter4), the user can use directly this file, by providing the folder where it is contained (through the @KineticsFolder option)
  - b) The user can choose to pre-process the kinetic mechanism on the fly, by providing the paths to the kinetic files (usually through the @KineticsPreProcessor option)
- 3. At the end of the simulation, an Output.xml file will be written in the Output folder, together with additional files in ASCII format.

# Main dictionaries

As better explained in the previous Chapters, the input data have to be provided through proper dictionaries, depending on the type of solver the user wants to run. In the current version of <code>OpenSMOKE++ Suite</code> six different solvers are available:

- 1. CHEMKIN-PreProcessor
- 2. Batch-Reactor
- 3. Perfectly-Stirred-Reactor
- 4. Shock-Tube-Reactor
- 5. Plug-Flow-Reactor
- 6. PremixedLaminarFlame1D
- 7. CounterFlowDiffusionFlame1D
- 8. Thermodynamic-Equilibrium
- 9. Laminar-Flamelet
- 10. LookUp-Tables
- 11. Microgravity-Droplet

Each of the dictionaries reported below usually need additional options, which are based on sub-dictionaries, described in Chapter 7.

## 6.1 Dictionary: CHEMKIN-PreProcessor

This dictionary is used by the <code>OpenSMOKEpp\_CHEMKIN\_Preprocessor</code> solver with the aim to preprocess (i.e. interpret) a kinetic mechanism written in the standard <code>CHEMKIN</code> format. Only the thermodynamic file is strictly necessary, but, obviously, a kinetic mechanism must be provided if the aim is to perform simulations of reacting systems. For most of the ideal reactors no transport data are required and therefore the user could choose to pre-process only the thermodynamic and the kinetic files. According to the specified options, additional analysis can be easily and rapidly performed. Please consider that the kinetic and thermodynamic data must be always provided in two different files (i.e. the thermodynamic data cannot be added to the same file where the kinetic scheme is written).

## 6.1.1 Additional comments

#### @Thermodynamics

This option requires the name of the file (ASCII) containing the thermodynamic data (in CHEMKIN format). Both local and global paths can be accepted. Several useful files are automatically generated in the Output

Option	Type	Meaning
@Thermodynamics	PATH	Name of the file (ASCII) containing the thermodynamic data (CHEMKIN format)
@Output	PATH	Name of the folder where the pre-processed data are written
@Transport	PATH	Name of the file (ASCII) containing the transport data (CHEMKIN format)
©Kinetics	PATH	Name of the file (ASCII) containing the kinetic mechanism (CHEMKIN format)
@CheckThermodynamics	BOOL	The thermodynamic data are checked and additional files are written in output (together with a consistent reformulation of thermodynamic data)
@OutputOldStyle	BOOL	The output file are written also using the old format used by the OpenSMOKE framework (before 2013)
@TransportFittingCoefficients	BOOL	The fitting coefficients for the transport properties are written on a file. Please consider that this operation is very slow for large kinetic mechanisms (more than 1000 species) and produces huge files
@Reaction Tables	BOOL	For each reaction detailed information is reported on a file (kinetic constants, change of moles, etc.)
@Reaction Tables List Of Temperatures	res LIST	List of temperatures at which the detailed information is reported on a file for each reaction (kinetic constants, change of moles, etc.)
@ReverseFitting	BOOL	For each reversible reaction the reverse kinetic constants are estimated assuming the Arrhenius' law
@CollisionRateAnalysis	BOOL	Collision rate analysis for bimolecular reactions is tuned on, in order to recognize unfeasible kinetic parameters.
@CollisionRateAnalysisListOfTemperature&IST	peratureLIST	List of temperatures at which the collision rate analysis for bimolecular reactions is carried on. If not provided, the default list of temperatures is adopted (from 300 K to 2500 K, with increments of 100 K)
@Comments	SUBDICTIONARY [Comments]	Additional data (author name, comments, etc.) can be added to the pre-processed kinetic mechanism
@SparsityPatternAnalysis	BOOL	Additional analyses about the sparsity pattern of stoichiometric matrix and associated Jacobian matrix
@RewriteCHEMKIN	BOOL	The kinetic mechanism is rewritten in CHEMKIN format by accounting for the corrections on atomic balances carried out during the pre-processing phase (default: true)
@SpeciesBundling	BOOL	Enables the species bundling technique for the fast estimation of mass diffusion coefficients (default: false)
@ChebyshevFitting	BOOL	For each Chebysheve reaction (if any), the corresponding kinetic constant is fitted assuming the Arrhenius' law

Table 6.1: CHEMKIN-PreProcessor dictionary

folder. In particular, the Thermodynamics\_Coefficients.out file reports the correlation coefficients for the thermodynamic properties in a readable format. The Thermodynamics\_Tables.out file reports the thermodynamic properties (specific heat, enthalpy, entropy, etc.) for each species as function of temperature.

#### @Kinetics

This option requires the name of the file (ASCII) containing the kinetic mechanism (in CHEMKIN format). Both local and global paths can be accepted. The Kinetics\_Summary.out file reports the whole kinetic mechanism written in a more readable format.

## @Transport

This option requires the name of the file (ASCII) containing the transport data (in CHEMKIN format). Both local and global paths can be accepted.

## @Output

This can specify the name of the folder where the results of the simulation will be written. Both local and global paths can be accepted.

## @CheckThermodynamics

This option allows to perform a detailed check of the thermodynamic data, to find possible inconsistent or unphysical data. The Thermodynamics\_Status.out file reports a summary of the analysis of the thermodynamic data. In addition, a new file, containing new thermodynamic data, called thermo.CHEMKIN.CKT, will be provided. This new thermodynamic file is generated on the basis of the original thermodynamic data, which are made perfectly consistent at the transition temperature between low and high temperature correlations.

## @TransportFittingCoefficients

The fitting coefficients for the transport properties (viscosity, thermal conductivity, mixture-averaged mass diffusion, and mixture-averaged thermal diffusion) for each species in the kinetic file are written on a file. Please consider that this operation is very slow for large kinetic mechanisms (more than 1000 species) and produces huge files (dimensions of Gb).

#### @ReactionTables

For each reaction detailed information is reported on the Reaction\_Tables.out file (kinetic constants, change of moles, etc.). The Reaction\_Tables.out file is self-explanatory.

#### @Reaction Tables List Of Temperatures

List of temperatures at which the detailed information is reported on a file for each reaction (kinetic constants, change of moles, etc.).

## @ReverseFitting

For each reversible reaction the reverse kinetic constants are estimated assuming the Arrhenius' law. The kinetic parameters of the reverse reactions are then written on the Reaction\_FittedKinetics.out file.

## @CollisionRateAnalysis

Collision rate analysis for bimolecular reactions is tuned on, in order to recognize unfeasible kinetic parameters. Details about the analysis can be found in: Chen D., Wang K., Wang H., Violation of collision limit in recently published reaction models, Combustion and Flame 186, pp. 208-210 (2017)

## @Collision Rate Analysis List Of Temperatures

List of temperatures at which the collision rate analysis for bimolecular reactions is carried on. If not provided, the default list of temperatures is adopted (from 300 K to 2500 K, with increments of 100 K)

#### @SparsityPatternAnalysis

Additional analyses about the sparsity pattern of stoichiometric matrix and associated Jacobian matrix

#### @RewriteCHEMKIN

The kinetic mechanism is rewritten in CHEMKIN format by accounting for the corrections on atomic balances carried out during the pre-processing phase (default: true). At the end of this operation a new kinetic file (kinetics.CHEMKIN.CKI) is available in the Output folder.

#### @SpeciesBundling

Enables the species bundling technique for the fast estimation of mass diffusion coefficients (default: false). The technique is described in the following paper: **Lu and Law**, Diffusion coefficient reduction through species bundling, Combustion and Flame, 148(3), p. 117-126 (2007)

## @ChebyshevFitting

For each Chebysheve reaction (if any), the corresponding kinetic constant is fitted assuming the Arrhenius' law.

## 6.2 Dictionary: Batch Reactor

This dictionary is used for setting the simulation for a Batch Reactor. In the current version of OpenSMOKE++ Suite the user can simulate both isothermal and non-isothermal reactors. Both the constant volume and constant pressure constraints are available.

## 6.2.1 Additional comments

## @KineticsFolder

This option is used to specify the name of the folder containing the kinetic scheme in XML Version (kinetics.xml). This file has to be generated using the OpenSMOKEpp\_CHEMKIN\_Preprocessor. Instead of using this option, the user has the possibility to pre-process the kinetic scheme on the fly using the OKineticsPreProcessor option (see below).

#### @KineticsPreProcessor

The user can pre-process a kinetic scheme available in CHEMKIN format on the fly, when the reactor simulation is performed (instead of pre-processing the kinetics in a previous step). This option is very useful when the kinetic mechanism is under construction and/or tuning and the user has the need to change often the reactions and the kinetic parameters. Please consider that the pre-processing operation can be quite long for very detailed kinetic schemes (thousands of species). The @KineticsPreProcessor option requires that the user specify the name of the sub-dictionary containing all the information needed to pre-process kinetic mechanisms on the fly. Please look at Section 7.6 to have more details.

#### @Type

This option is used to specify the type of reactor to simulate. Four different combinations are possible: Isothermal-ConstantVolume, NonIsothermal-ConstantPressure, NonIsothermal-ConstantPre

Option	Type	Meaning
@KineticsFolder	PATH	Name of the folder containing the kinetic scheme (XML Version)
@KineticsPreProcessor	SUBDICTIONARY [Rapid-Kinetics]	Dictionary containing the list of kinetic files to be interpreted (see Section 7.6)
@Type	STRING	Batch reactor type: Isothermal-ConstantVolume   NonIsothermal-ConstantVolume   Isothermal-ConstantPressure   NonIsothermal-ConstantPressure
©InitialStatus	SUBDICTIONARY [Gas-Status]	Dictionary defining the initial gas composition, temperature and pressure (see Section 7.5)
@EndTime	MEASURE	Integration time for transient simulation
@StartTime	MEASURE	Start time for transient simulation (default 0)
@Volume	MEASURE	Volume of the reactor
@GlobalThermalExchangeCoefficient	MEASURE	Global thermal exchange coefficient $U$ : $Q = UA(T - T_{env})$
@Environment Temperature	${ m MEASURE}$	Environment Temperature $T_{env}$ : $Q = UA(T - T_{env})$
@ExchangeArea	MEASURE	Exchange area A: $Q = UA(T - T_{env})$
@VolumeProfile	SUBDICT [XY-Profile]	Dictionary defining the volume profile (see Section 7.7)
@ Pressure Profile	$\begin{array}{c} \text{SUBDICT} \\ \text{[XY-Profile]} \end{array}$	Dictionary defining the pressure profile (see Section 7.7)
@PressureCoefficient	${ m MEASURE}$	Coefficient for pressure increase (example: 1e5 Pa/s)
@Sensitivity Analysis	SUBDICT [Sensitivity-Analysis]	Dictionary containing additional options for sensitivity analysis (see Section 7.4)
@Options	SUBDICT [Output-Options]	Dictionary containing additional options for solving the batch reactor (see Section 7.3)
@OdeParameters	$\begin{array}{c} \text{SUBDICT} \\ [\text{ODE-Solver}] \end{array}$	Dictionary containing the numerical parameters for solving the ODE system (see Section 7.2)
@Parametric Analysis	SUBDICT [Parametric-Analysis]	Dictionary containing additional options for performing a parametric analysis (see Section 7.8)
@OnTheFlyROPA	$\begin{array}{c} \text{SUBDICT} \\ [\text{OnTheFly-ROPA}] \end{array}$	Dictionary specifying the details for carrying out on the fly ROPA (Rate of Production Analysis). See Section 7.17.
@OnTheFlyCEMA	$\begin{array}{c} \text{SUBDICT} \\ [\text{OnTheFly-CEMA}] \end{array}$	Dictionary specifying the details for carrying out on the fly CEMA (Chemical Explosive Mode Analysis). See Section 7.19.
@OnThe Fly Post Processing	SUBDICT [OnTheFly- PostProcessing]	Dictionary specifying the details for carrying out on the fly post-processing analyses. See Section 7.18.
@PolimiSoot	SUBDICT [Polimi-Soot]	Dictionary defining the rules for analyzing soot calculated using the Polimi mechanism based on the Discrete Sectional Method. See Section 7.15.
@IgnitionDelayTimes	$\begin{array}{c} {\rm SUBDICT} \\ {\rm [IgnitionDelayTimes]} \end{array}$	Dictionary defining the options for calculating the ignition delay times. See Section 7.23.

Table 6.2: Batch Reactor dictionary

#### @InitialStatus

This option is used to specify the features (temperature, pressure and composition) of the initial mixture (i.e. at time 0) in the batch reactor. The @InitialStatus option requires that the user specify the name of the corresponding sub-dictionary. Please look at Section 7.5 to have more details.

#### @EndTime

This is the residence time of the batch reactor.

#### @StartTime

Start time for transient simulation (default 0).

#### @Volume

This is the volume of the batch reactor. Please look at Section 7.7 to have more details.

## @GlobalThermalExchangeCoefficient

Global thermal exchange coefficient U:  $Q = UA(T - T_{env})$ 

## @EnvironmentTemperature

Environment Temperature  $T_{env}$ :  $Q = UA(T - T_{env})$ 

## @ExchangeArea

Exchange area A:  $Q = UA(T - T_{env})$ 

#### @VolumeProfile

Dictionary defining the volume profile.

#### @PressureProfile

Dictionary defining the pressure profile.

## @PressureCoefficien

Coefficient for pressure increase (example: 1e5 Pa/s)

#### @SensitivityAnalysis

The user has to specify the name of the sub-dictionary in which the options for performing the sensitivity analysis are reported. Please look at Section 7.4 to have more details.

#### @Options

The user has to specify the name of the sub-dictionary in which the options devoted to the output operations are reported. Please look at Section 7.3 to have more details.

## @OdeParameters

The user has to specify the name of the sub-dictionary in which the options about the ODE solver adopted for the solution of the reactor equations. Please look at Section 7.2 to have more details.

#### @ParametricAnalysis

Dictionary containing additional options for performing a parametric analysis. Please look at Section 7.8 to have more details.

## @OnTheFlyROPA

Dictionary specifying the details for carrying out on the fly ROPA (Rate of Production Analysis). See Section 7.17.

#### @OnTheFlyCEMA

Dictionary specifying the details for carrying out on the fly CEMA (Chemical Explosive Mode Analysis), described in **T.F. Lu**, **C.S. Yoo**, **J.H. Chen**, **C.K. Law**, J. Fluid Mech., 652 (2010), pp. 45–64. See Section 7.19.

#### @OnTheFlyPostProcessing

Dictionary specifying the details for carrying out on the fly post-processing analyses. See Section 7.18.

#### @PolimiSoot

Dictionary defining the rules for analyzing soot calculated using the Polimi mechanism based on the Discrete Sectional Method (described in Saggese, C., Ferrario, S., Camacho, J., Cuoci, A., Frassoldati, A., Ranzi, E., Wang, H., Faravelli, T., Kinetic modeling of particle size distribution of soot in a premixed burner-stabilized stagnation ethylene flame (2015), Combustion and Flame, 162(9), p. 3356–3369, DOI: 10.1016/j.combustflame.2015.06.002). See Section 7.15.

## @IgnitionDelayTimes

Dictionary defining the options for calculating the ignition delay times. See Section 7.23.

## 6.3 Dictionary: Perfectly Stirred Reactor

This dictionary is used for setting the simulation for a Perfectly Stirred Reactor operating in unsteady or steady-state conditions. In the current version of OpenSMOKE++ Suite the user can simulate both isothermal and adiabatic reactors, only under the assumption of constant pressure.

#### 6.3.1 Additional comments

#### @KineticsFolder

This option is used to specify the name of the folder containing the kinetic scheme in XML Version (kinetics.xml). This file has to be generated using the OpenSMOKEpp\_CHEMKIN\_Preprocessor. Instead of using this option, the user has the possibility to pre-process the kinetic scheme on the fly using the OKineticsPreProcessor option (see below).

#### @KineticsPreProcessor

The user can pre-process a kinetic scheme available in CHEMKIN format on the fly, when the reactor simulation is performed (instead of pre-processing the kinetics in a previous step). This option is very useful when the kinetic mechanism is under construction and/or tuning and the user has the need to change often the reactions and the kinetic parameters. Please consider that the pre-processing operation can be quite long for very detailed kinetic schemes (thousands of species). The <code>@KineticsPreProcessor</code> option requires that the user specify the name of the sub-dictionary containing all the information needed to pre-process kinetic mechanisms on the fly. Please look at Section 7.6 to have more details.

#### @Type

This option is used to specify the type of reactor to simulate. Two different combinations are possible: Isothermal-ConstantPressure, NonIsothermal-ConstantPressure.

Option	Type	Meaning
@KineticsFolder	PATH	Name of the folder containing the kinetic scheme (XML Version)
@KineticsPreProcessor	SUBDICT [Rapid-Kinetics]	Dictionary containing the list of kinetic files to be interpreted (see Section 7.6)
@Type	STRING	Perfectly Stirred Reactor type: Isothermal-ConstantPressure   NonIsothermal-ConstantPressure
©InletStatus	SUBDICT [Gas-Status]	Dictionary defining the inlet gas composition, temperature, and pressure (see Section 7.5)
@InitialStatus	SUBDICT [Gas-Status]	Dictionary defining the initial gas composition, temperature and pressure inside the reactor (see Section 7.5)
@ResidenceTime	MEASURE	Residence time
@EndTime	MEASURE	Integration time for the ODE solution
@Volume	MEASURE	Initial volume of reactor
@MassFlowRate	MEASURE	Inlet mass flow rate
@GlobalThermalExchangeCoefficient	MEASURE	Global thermal exchange coefficient $U: Q = UA(T - T_{env})$
@Environment Temperature	${ m MEASURE}$	Environment Temperature $T_{env}$ : $Q = UA(T - T_{env})$
@ExchangeArea	${ m MEASURE}$	Exchange area A: $Q = UA(T - T_{env})$
@SensitivityAnalysis	$\begin{array}{c} {\rm SUBDICT} \\ {\rm [Sensitivity-Analysis]} \end{array}$	Dictionary containing additional options for sensitivity analysis (see Section 7.4)
@Options	SUBDICT [Output-Options]	Dictionary containing additional options for solving the perfectly stirred reactor (see Section 7.3)
@OdeParameters	$\begin{array}{c} {\rm SUBDICT} \\ {\rm [ODE\text{-}Solver]} \end{array}$	Dictionary containing the numerical parameters for solving the ODE system (see Section 7.2)
@ Parametric Analysis	$\begin{array}{c} {\rm SUBDICT} \\ {\rm [Parametric-Analysis]} \end{array}$	Dictionary containing additional options for performing a parametric analysis (see Section 7.8)
@OnTheFlyROPA	SUBDICT [OnTheFly-ROPA]	Dictionary specifying the details for carrying out on the fly ROPA (Rate of Production Analysis). See Section 7.17.
@On The Fly Post Processing	SUBDICT [OnTheFly- PostProcessing]	Dictionary specifying the details for carrying out on the fly post-processing analyses. See Section 7.18.
@PolimiSoot	SUBDICT [Polimi-Soot]	Dictionary defining the rules for analyzing soot calculated using the Polimi mechanism based on the Discrete Sectional Method. See Section 7.15.

Table 6.3: Perfectly Stirred Reactor options

#### @InletStatus

This option is used to specify the features (temperature, pressure and composition) of the inlet mixture in the perfectly stirred reactor. The @InletStatus option requires that the user specify the name of the corresponding sub-dictionary. Please look at Section 7.5 to have more details.

#### @InitialStatus

This option is used to specify the features (temperature, pressure and composition) of the initial mixture (i.e. at time 0) in the perfectly stirred reactor. This information is used only as a first guess solution to find the steady-state solution. The @InitialStatus option requires that the user specify the name of the corresponding sub-dictionary. Please look at Section 7.5 to have more details.

#### @ResidenceTime

This is the residence time of the perfectly stirred reactor.

#### @EndTime

This is the integration time for the solution of the ODE system. Since the user is interested in steady-state conditions, this number must be extremely large. The default value is  $10^6$  s.

#### @Volume

This is the volume of the perfectly stirred reactor.

#### @MassFlowRate

This is the mass flow rate of the inlet mixture.

#### @GlobalThermalExchangeCoefficient

Global thermal exchange coefficient U:  $Q = UA(T - T_{env})$ 

#### @EnvironmentTemperature

Environment Temperature  $T_{env}$ :  $Q = UA(T - T_{env})$ 

#### @ExchangeArea

Exchange area A:  $Q = UA(T - T_{env})$ 

#### @Sensitivity Analysis

The user has to specify the name of the sub-dictionary in which the options for performing the sensitivity analysis are reported. Please look at Section 7.4 to have more details.

#### @Options

The user has to specify the name of the sub-dictionary in which the options devoted to the output operations are reported. Please look at Section 7.3 to have more details.

#### @OdeParameters

The user has to specify the name of the sub-dictionary in which the options about the ODE solver adopted for the solution of the reactor equations. Please look at Section 7.2 to have more details.

## @ParametricAnalysis

Dictionary containing additional options for performing a parametric analysis. Please look at Section 7.8 to have more details.

## @OnTheFlyROPA

Dictionary specifying the details for carrying out on the fly ROPA (Rate of Production Analysis). See Section 7.17.

#### @OnTheFlyPostProcessing

Dictionary specifying the details for carrying out on the fly post-processing analyses. See Section 7.18.

#### @PolimiSoot

Dictionary defining the rules for analyzing soot calculated using the Polimi mechanism based on the Discrete Sectional Method (described in Saggese, C., Ferrario, S., Camacho, J., Cuoci, A., Frassoldati, A., Ranzi, E., Wang, H., Faravelli, T., Kinetic modeling of particle size distribution of soot in a premixed burner-stabilized stagnation ethylene flame (2015), Combustion and Flame, 162(9), p. 3356–3369, DOI: 10.1016/j.combustflame.2015.06.002). See Section 7.15.

## 6.4 Dictionary: Shock Tube Reactor

This dictionary is used for setting the simulation for a Shock Tube Reactor. In the current version of OpenSMOKE++ Suite the user can simulate both incident and reflected shock conditions.

#### 6.4.1 Additional comments

#### @KineticsFolder

This option is used to specify the name of the folder containing the kinetic scheme in XML Version (kinetics.xml). This file has to be generated using the OpenSMOKEpp\_CHEMKIN\_Preprocessor. Instead of using this option, the user has the possibility to pre-process the kinetic scheme on the fly using the OKineticsPreProcessor option (see below).

#### @KineticsPreProcessor

The user can pre-process a kinetic scheme available in CHEMKIN format on the fly, when the reactor simulation is performed (instead of pre-processing the kinetics in a previous step). This option is very useful when the kinetic mechanism is under construction and/or tuning and the user has the need to change often the reactions and the kinetic parameters. Please consider that the pre-processing operation can be quite long for very detailed kinetic schemes (thousands of species). The <code>@KineticsPreProcessor</code> option requires that the user specify the name of the sub-dictionary containing all the information needed to pre-process kinetic mechanisms on the fly. Please look at Section 7.6 to have more details.

#### @Type

This option is used to specify the type of reactor to simulate. Two different combinations are possible: IncidentShock, ReflectedShock.

## $@Before Shock Status \ @Reflected Shock Status \\$

These options are used to specify the features (temperature, pressure and composition) of the gas mixture before or after the shock or the features of the reflected shock. These options require that the user specify the name of the corresponding sub-dictionary. Please look at Section 7.5 to have more details.

Option	Type	Meaning
@K in etics Folder	PATH	Name of the folder containing the kinetic scheme (XML Version)
@KineticsPreProcessor	$\begin{array}{c} {\rm SUBDICT} \\ {\rm [Rapid-Kinetics]} \end{array}$	Dictionary containing the list of kinetic files to be interpreted (see Section 7.6)
@Type	STRING	Shock-tube reactor type: IncidentShock, ReflectedShock
@BeforeShockStatus	SUBDICT [Gas-Status]	Dictionary defining the gas composition, temperature and pressure before the shock (see Section 7.5)
@After Shock Status	SUBDICT [Gas-Status]	Dictionary defining the gas composition, temperature and pressure after the shock (see Section 7.5)
@ReflectedShockStatus	SUBDICT [Gas-Status]	Dictionary defining the gas composition, temperature and pressure of the reflected shock (see Section 7.5)
@IncidentShockVelocity	MEASURE	Incident shock velocity
@ReflectedShockVelocity	${ m MEASURE}$	Reflected shock velocity
@EndTime	MEASURE	Time for transient simulation
@BoundaryLayerCorrection	BOOL	Boundary layer correction
@Diameter	${ m MEASURE}$	Diameter of the shock tube
@Viscosity	MEASURE	Viscosity of the carrier gas at 300 K
@Sensitivity Analysis	$\begin{array}{c} \text{SUBDICT} \\ [\text{Sensitivity-Analysis}] \end{array}$	Dictionary containing additional options for sensitivity analysis (see Section 7.4)
@Options	$\begin{array}{c} \text{SUBDICT} \\ [\text{Output-Options}] \end{array}$	Dictionary containing additional options for solving the shock tube reactor (see Section 7.3)
@Ode Parameters	$\begin{array}{c} \text{SUBDICT} \\ [\text{ODE-Solver}] \end{array}$	Dictionary containing the numerical parameters for solving the ODE system (see Section 7.2)
@OnTheFlyROPA	SUBDICT [OnTheFly-ROPA]	Dictionary specifying the details for carrying out on the fly ROPA (Rate of Production Analysis). See Section 7.17.
@On The Fly Post Processing	SUBDICT [OnTheFly- PostProcessing]	Dictionary specifying the details for carrying out on the fly post-processing analyses. See Section 7.18.
@PolimiSoot	SUBDICT [Polimi-Soot]	Dictionary defining the rules for analyzing soot calculated using the Polimi mechanism based on the Discrete Sectional Method. See Section 7.15.

Table 6.4: Shock Tube Reactor dictionary

## @IncidentShockVelocity @ReflectedShockVelocity

These options are used to specify the velocity of the incident or the reflected shocks.

## @EndTime

Integration time.

## @BoundaryLayerCorrection

Boundary layer correction.

## @Diameter

Internal diameter of the shock-tube.

## @Viscosity

Viscosity of the carrier gas at ambient temperature.

## @SensitivityAnalysis

The user has to specify the name of the sub-dictionary in which the options for performing the sensitivity analysis are reported. Please look at Section 7.4 to have more details.

## @Options

The user has to specify the name of the sub-dictionary in which the options devoted to the output operations are reported. Please look at Section 7.3 to have more details.

## @OdeParameters

The user has to specify the name of the sub-dictionary in which the options about the ODE solver adopted for the solution of the reactor equations. Please look at Section 7.2 to have more details.

## @OnTheFlyROPA

Dictionary specifying the details for carrying out on the fly ROPA (Rate of Production Analysis). See Section 7.17.

#### @OnTheFlyPostProcessing

Dictionary specifying the details for carrying out on the fly post-processing analyses. See Section 7.18.

## @PolimiSoot

Dictionary defining the rules for analyzing soot calculated using the Polimi mechanism based on the Discrete Sectional Method (described in Saggese, C., Ferrario, S., Camacho, J., Cuoci, A., Frassoldati, A., Ranzi, E., Wang, H., Faravelli, T., Kinetic modeling of particle size distribution of soot in a premixed burner-stabilized stagnation ethylene flame (2015), Combustion and Flame, 162(9), p. 3356–3369, DOI: 10.1016/j.combustflame.2015.06.002). See Section 7.15.

# 6.5 Dictionary: Plug Flow Reactor

This dictionary is used for setting the simulation for a Plug Flow reactor. In the current version of <code>OpenSMOKE++Suite</code> the user can simulate both isothermal and adiabatic reactors. Both constant pressure and constant velocity conditions are allowed.

Option	Type	Meaning
@KineticsFolder	PATH	Name of the folder containing the kinetic scheme (XML Version)
@KineticsPreProcessor	SUBDICT [Rapid-Kinetics]	Dictionary containing the list of kinetic files to be interpreted (see Section 7.6)
@Type	STRING	Plug flow reactor type: Isothermal, NonIsothermal
@ResidenceTime	MEASURE	Total residence time
@Length	MEASURE	Total length
@ConstantPressure	BOOL	Constant pressure vs Constant velocity simulation
@InletStatus	SUBDICT [Gas-Status]	Name of the dictionary defining the inlet gas composition, temperature and pressure (see Section 7.5)
@Velocity	MEASURE	Velocity of the inlet stream
@MassFlowRate	MEASURE	Mass flow rate of the inlet stream
@MoleFlowRate	MEASURE	Mole flow rate of the inlet stream
@VolumetricFlowRate	MEASURE	Volumetric flow rate of the inlet stream
@Diameter	MEASURE	Diameter of the tube
@TemperatureProfile	SUBDICT [XY-Profile]	Name of the dictionary defining the temperature profile (See Section 7.7)
@GlobalThermalExchangeCoefficient	MEASURE	Global thermal exchange coefficient $U: Q = UA(T - T_{env})$
@EnvironmentTemperature	MEASURE	Environment Temperature $T_{env}$ : $Q = UA(T - T_{env})$
@CrossSectionOverPerimeter	MEASURE	Ratio between the cross section and the perimeter (for a circular section it is equal to $D/4$ )
@Sensitivity Analysis	SUBDICT [Sensitivity-Analysis]	Dictionary containing additional options for sensitivity analysis (see Section 7.4)
@Options	SUBDICT [Output-Options]	Dictionary containing additional options for solving the plug flow reactor (see Section 7.3)
@OdeParameters	SUBDICT [ODE-Solver]	Dictionary containing the numerical parameters for solving the ODE system (see Section 7.2)
@Parametric Analysis	SUBDICT [Parametric-Analysis]	Dictionary containing additional options for performing a parametric analysis (see Section 7.8)
@OnTheFlyROPA	SUBDICT [OnTheFly-ROPA]	Dictionary specifying the details for carrying out on the fly ROPA (Rate of Production Analysis). See Section 7.17.
@On The Fly Post Processing	SUBDICT [OnTheFly- PostProcessing]	Dictionary specifying the details for carrying out on the fly post-processing analyses. See Section 7.18.
@PolimiSoot	SUBDICT [Polimi-Soot]	Dictionary defining the rules for analyzing soot calculated using the Polimi mechanism based on the Discrete Sectional Method. See Section 7.15.

Table 6.5: Plug Flow Reactor dictionary

## 6.5.1 Additional comments

#### @KineticsFolder

This option is used to specify the name of the folder containing the kinetic scheme in XML Version (kinetics.xml). This file has to be generated using the OpenSMOKEpp\_CHEMKIN\_Preprocessor. Instead of using this option, the user has the possibility to pre-process the kinetic scheme on the fly using the OKineticsPreProcessor option (see below).

## @KineticsPreProcessor

The user can pre-process a kinetic scheme available in CHEMKIN format on the fly, when the reactor simulation is performed (instead of pre-processing the kinetics in a previous step). This option is very useful when the kinetic mechanism is under construction and/or tuning and the user has the need to change often the reactions and the kinetic parameters. Please consider that the pre-processing operation can be quite long for very detailed kinetic schemes (thousands of species). The <code>@KineticsPreProcessor</code> option requires that the user specify the name of the sub-dictionary containing all the information needed to pre-process kinetic mechanisms on the fly. Please look at Section 7.6 to have more details.

## @Type

This option is used to specify the type of reactor to simulate. Two different types are possible: Isothermal or NonIsothermal.

## @ConstantPressure

When this option is true, a constant pressure simulation will be performed. If this option is false, the simulation will be performed under the assumption of constant velocity.

## @InletStatus

This option is used to specify the features (temperature, pressure and composition) of the inlet mixture in the plug flow reactor. The @InletStatus option requires that the user specify the name of the corresponding sub-dictionary. Please look at Section 7.5 to have more details.

## @ResidenceTime

This is the residence time for the plug flow reactor.

#### @Length

This is the length of the plug flow reactor.

# @Velocity

This is the velocity of the inlet mixture.

## @MassFlowRate

This is the mass flow rate of the inlet mixture.

## @MoleFlowRate

This is the mole flow rate of the inlet mixture.

#### @VolumetricFlowRate

This is the volumetric flow rate of the inlet mixture.

#### @Diameter

This is the internal diameter of the plug flow reactor.

## @TemperatureProfile

The user has the possibility to impose a temperature profile along the plug flow reactor. This temperature profile can be imposed by providing a proper sub-dictionary. Please look at Section 7.7 to have more details.

## @GlobalThermalExchangeCoefficient

Global thermal exchange coefficient U:  $Q = UA(T - T_{env})$ 

## @EnvironmentTemperature

Environment Temperature  $T_{env}$ :  $Q = UA(T - T_{env})$ 

## @CrossSectionOverPerimeter

Ratio between the cross section and the perimeter (for a circular section it is equal to D/4)

## @SensitivityAnalysis

The user has to specify the name of the sub-dictionary in which the options for performing the sensitivity analysis are reported. Please look at Section 7.4 to have more details.

#### @Options

The user has to specify the name of the sub-dictionary in which the options devoted to the output operations are reported. Please look at Section 7.3 to have more details.

# @OdeParameters

The user has to specify the name of the sub-dictionary in which the options about the ODE solver adopted for the solution of the reactor equations. Please look at Section 7.2 to have more details.

#### @ParametricAnalysis

Dictionary containing additional options for performing a parametric analysis. Please look at Section 7.8 to have more details.

#### @OnTheFlyROPA

Dictionary specifying the details for carrying out on the fly ROPA (Rate of Production Analysis). See Section 7.17.

## @OnTheFlyPostProcessing

Dictionary specifying the details for carrying out on the fly post-processing analyses. See Section 7.18.

## @PolimiSoot

Dictionary defining the rules for analyzing soot calculated using the Polimi mechanism based on the Discrete Sectional Method (described in Saggese, C., Ferrario, S., Camacho, J., Cuoci, A., Frassoldati, A., Ranzi, E., Wang, H., Faravelli, T., Kinetic modeling of particle size distribution of soot in a premixed burner-stabilized stagnation ethylene flame (2015), Combustion and Flame, 162(9), p. 3356–3369, DOI: 10.1016/j.combustflame.2015.06.002). See Section 7.15.

# 6.6 Dictionary: PremixedLaminarFlame1D

This dictionary is used for setting the simulation for simulating premixed laminar flames.

## 6.6.1 Additional comments

#### @KineticsFolder

This option is used to specify the name of the folder containing the kinetic scheme in XML Version (kinetics.xml). This file has to be generated using the OpenSMOKEpp\_CHEMKIN\_Preprocessor. Instead of using this option, the user has the possibility to pre-process the kinetic scheme on the fly using the OKineticsPreProcessor option (see below).

#### @KineticsPreProcessor

The user can pre-process a kinetic scheme available in CHEMKIN format on the fly, when the reactor simulation is performed (instead of pre-processing the kinetics in a previous step). This option is very useful when the kinetic mechanism is under construction and/or tuning and the user has the need to change often the reactions and the kinetic parameters. Please consider that the pre-processing operation can be quite long for very detailed kinetic schemes (thousands of species). The <code>@KineticsPreProcessor</code> option requires that the user specify the name of the sub-dictionary containing all the information needed to pre-process kinetic mechanisms on the fly. Please look at Section 7.6 to have more details.

## @Backup

Path to the backup file (in XML format) from which the simulation has to be restarted.

# @Type

Type of simulation: BurnerStabilized | FlameSpeed. The BurnerStabilized option usually requires a fixed temperature profile. The FlameSpeed option is adopted for calculating the adiabatic flame speed at the given inlet temperature, composition and pressure.

## @Grid

Dictionary defining the computational 1D grid (see Section 7.9)

## @InletStream

This option is used to specify the features (temperature, pressure and composition) of the inlet stream. The @InletStatus option requires that the user specify the name of the corresponding sub-dictionary. Please look at Section 7.5 to have more details.

## @OutletStream

Dictionary defining the inlet gas composition, temperature, and pressure (see Section 7.5).

#### @OutletStream

Dictionary defining the outlet stream (gas composition, temperature and pressure). This information is used only as a first guess solution. See Section 7.5

# @InletVelocity

Velocity of the inlet mixture. In case of flame speed calculations, this value is used only to start the calculations. Obviously, if data are available, it is more convenient to provide a first-guess laminar flame speed close to the real value.

Option	Type	Meaning
©KineticsFolder	PATH	Name of the folder containing the kinetic scheme (XML Version)
@KineticsPreProcessor	SUBDICT [Rapid-Kinetics]	Dictionary containing the list of kinetic files to be interpreted (see Section 7.6)
@Backup	PATH	Path to the backup file (in XML format) from which the simulation has to be restarted.
@Type	STRING	Type of simulation: BurnerStabilized   FlameSpeed
@Grid	SUBDICT [AdaptiveGrid-1D]	Dictionary defining the computational 1D grid (see Section 7.9)
@InletStream	SUBDICT [Gas-Status]	Dictionary defining the inlet gas composition, temperature, and pressure (see Section 7.5)
@OutletStream	SUBDICT [Gas-Status]	Dictionary defining the outlet stream (gas composition, temperature and pressure). This information is used only as a first guess solution. See Section 7.5
@InletVelocity	MEASURE	Inlet velocity (first guess in case of flame speed calculation)
@InletMassFlux	MEASURE	Inlet mass flux (first guess in case of flame speed calculation)
@Output	PATH	Folder where to write the results of the simulation
@SensitivityAnalysis	SUBDICT [Sensitivity-Analysis]	Dictionary containing additional options for sensitivity analysis (see Section 7.4)
@DacParameters	SUBDICT [DAE- TridiagonalBlock- Solver]	Dictionary containing the numerical parameters for solving the Triadiagonal Block DAE system (see Section 7.11)
@NlsParameters	SUBDICT [NLS-TridiagonalBlock-Solver]	Dictionary containing the numerical parameters for solving the Triadiagonal Block non-linear system (see Section 7.12)
@FalseTransientParameters	SUBDICT [FalseTransient-Solver]	Dictionary containing the numerical parameters governing the false-transient approach (see Section 7.13)

Table 6.6: PremixedLaminarFlame1D options (Part I)

Option	Type	Meaning
@UseDaeSolver	BOOL	Use DAE solver (instead of NL solver) to solve the steady-state problems (default: true)
@UseNlsSolver	BOOL	Use the NLS solver to solve the steady state problems, after the DAE solver (default: true)
@SpeciesBundling	DOUBLE	Enables the species bundling technique for the fast evaluation of mass diffusion coefficients. The double parameter is the maximum relative error which can be accepted (suggestion: 0.05)
@PolimiSoot	SUBDICT [Polimi-Soot]	Dictionary defining the rules for analyzing soot calculated using the Polimi mechanism based on the Discrete Sectional Method. See Section 7.15.
@HMOM	SUBDICT [HMOM]	Dictionary defining the rules for applying the Hybrid Method of Moments (HMOM). See Section 7.16.
@OnTheFlyPostProcessing	SUBDICT [OnTheFly-PostProcessing]	Dictionary specifying the details for carrying out on the fly post-processing analyses. See Section 7.18.
@FixedTemperatureProfile	SUBDICT [XY-Profile]	Dictionary defining the fixed temperature profile. See Section 7.7.
@FixedSpecificMassFlowRateProfile	SUBDICT [XY-Profile]	dDictionary describing the specific (i.e. per unit area) mass flow rate profile. See Section 7.7.
@FixedOutletTemperature	MEASURE	Fixed outlet temperature, to be used only if @FixedSpecificMassFlowRateProfile is true
©Soret	BOOL	Add Soret effect (default: true)
@Radiation	BOOL	Radiative heat transfer (default: false)
@Environment Temperature	MEASURE	Environment temperature for radiative heat transfer calculations (default: 298.15 K)
@DerivativeGasMassFractions	STRING	Derivative gas mass fractions: upwind   backward   forward   centered (default: backward)
@DerivativeGasTemperature	STRING	Derivative gas temperature: upwind   backward   forward   centered (default: backward)
@WallHeatExchangeCoefficient	MEASURE	Wall heat exchange coefficient (default: 0 W/m2/K)
@WallHeatNusseltNumber	DOUBLE	Wall heat Nusselt number (default: 0)
@InternalDiameter	MEASURE	Internal diameter (default: 1 cm)
@WallTemperatureProfile	SUBDICT [XY-Profile]	Name of dictionary describing the wall temperature profile

Table 6.7: PremixedLaminarFlame1D options (Part II)

#### @InletMassFlux

Mass flux of the inlet mixture. In case of flame speed calculations, this value is used only to start the calculations. Obviously, if data are available, it is more convenient to provide a first-guess laminar flame speed close to the real value.

## @Output

Folder where to write the results of the simulation

#### @SensitivityAnalysis

The user has to specify the name of the sub-dictionary in which the options for performing the sensitivity analysis are reported. Please look at Section 7.4 to have more details.

## @DaeParameters

The user has to specify the name of the sub-dictionary in which the options about the tridiagonal-block DAE solver adopted for the solution of transport equations. Please look at Section 7.11 to have more details.

#### @NlsParameters

The user has to specify the name of the sub-dictionary in which the options about the tridiagonal-block non-linear (NL) solver adopted for the solution of transport equations. Please look at Section 7.12 to have more details.

#### @FalseTransientParameters

The user has to specify the name of the sub-dictionary in which the options about the false-transient method adopted for the solution of transport equations. Please look at Section 7.13 to have more details.

#### @CheckMassFractions

Force non-negative mass fractions (default: false).

#### @UseDaeSolver

Use DAE solver (instead of NL solver) to solve the steady-state problems (default: true)

#### @UseNlsSolver

Use the NLS solver to solve the steady state problems, after the DAE solver (default: true)

## @SpeciesBundling

Enables the species bundling technique for the fast evaluation of mass diffusion coefficients. The double parameter is the maximum relative error which can be accepted (suggestion: 0.05). The technique is described in the following paper: **Lu and Law**, Diffusion coefficient reduction through species bundling, Combustion and Flame, 148(3), p. 117-126 (2007).

## @PolimiSoot

Dictionary defining the rules for analyzing soot calculated using the Polimi mechanism based on the Discrete Sectional Method (described in Saggese, C., Ferrario, S., Camacho, J., Cuoci, A., Frassoldati, A., Ranzi, E., Wang, H., Faravelli, T., Kinetic modeling of particle size distribution of soot in a premixed burner-stabilized stagnation ethylene flame (2015), Combustion and Flame, 162(9), p. 3356–3369, DOI: 10.1016/j.combustflame.2015.06.002). See Section 7.15.

## @HMOM

Dictionary defining the rules for applying the Hybrid Method of Moments (HMOM), described in **Mueller**, **M. E. and Blanquart**, **G. and Pitsch**, **H.**, *Hybrid Method of Moments for modeling soot formation and growth* (2009), Combustion and Flame, 156 (6). pp. 1143-1155. See Section 7.16.

## @OnTheFlyPostProcessing

Dictionary specifying the details for carrying out on the fly post-processing analyses. See Section 7.18.

## @FixedTemperatureProfile

Dictionary defining the fixed temperature profile. See Section 7.7.

## @FixedSpecificMassFlowRateProfile

Dictionary specifying the specific (i.e. per unit area) mass flow rate profile. See Section 7.7.

## @FixedOutletTemperature

Fixed outlet temperature, to be used only if @FixedSpecificMassFlowRateProfile is true.

#### @Soret

Add Soret effect (default: true).

#### @Radiation

Radiative heat transfer (default: false). The optically thin model is currently the only approach available.

#### @EnvironmentTemperature

Environment temperature for radiative heat transfer calculations (default: 298.15 K)

## @DerivativeGasMassFractions

Derivative of mass fractions of gaseous species: upwind | backward | forward | centered (default: backward)

# @Derivative Gas Temperature

Derivative of temperature: upwind | backward | forward | centered (default: backward)

## @WallHeatExchangeCoefficient

Wall heat exchange coefficient (default: 0 W/m2/K)

## @Wall Heat Nusselt Number

Wall heat Nusselt number (default: 0)

#### @InternalDiameter

Internal diameter (default: 1 cm)

## @WallTemperatureProfile

Name of dictionary describing the wall temperature profile

# 6.7 Dictionary: CounterFlowDiffusionFlame1D

This dictionary is used for setting the simulation for simulating counterflow diffusion flames. Please consider that this solver is still under development.

## 6.7.1 Additional comments

#### @KineticsFolder

This option is used to specify the name of the folder containing the kinetic scheme in XML Version (kinetics.xml). This file has to be generated using the OpenSMOKEpp\_CHEMKIN\_Preprocessor. Instead of using this option, the user has the possibility to pre-process the kinetic scheme on the fly using the OKineticsPreProcessor option (see below).

#### @KineticsPreProcessor

The user can pre-process a kinetic scheme available in CHEMKIN format on the fly, when the reactor simulation is performed (instead of pre-processing the kinetics in a previous step). This option is very useful when the kinetic mechanism is under construction and/or tuning and the user has the need to change often the reactions and the kinetic parameters. Please consider that the pre-processing operation can be quite long for very detailed kinetic schemes (thousands of species). The <code>@KineticsPreProcessor</code> option requires that the user specify the name of the sub-dictionary containing all the information needed to pre-process kinetic mechanisms on the fly. Please look at Section 7.6 to have more details.

## @Backup

Path to the backup file (in XML format) from which the simulation has to be restarted.

# @Type

Type of simulation: CounterFlowDiffusion | BurnerStabilizedStagnation

## @Grid

Dictionary defining the computational 1D grid (see Section 7.9)

## @PlanarSymmetry

Planar symmetry: default false (i.e. cylyndrical symmetry)

#### @FuelStream

This option is used to specify the features (temperature, pressure and composition) of the inlet stream on the fuel side. The @FuelStream option requires that the user specify the name of the corresponding sub-dictionary. Please look at Section 7.5 to have more details.

#### @OxidizerStream

This option is used to specify the features (temperature, pressure and composition) of the inlet stream on the oxidizer side. The <code>@OxidizerStream</code> option requires that the user specify the name of the corresponding sub-dictionary. Please look at Section 7.5 to have more details.

## @FuelVelocity

Inlet velocity of fuel stream.

## @OxidizerVelocity

Inlet velocity of oxidizer stream.

Option	Type	Meaning
@ Kinetics Folder	PATH	Name of the folder containing the kinetic scheme (XML Version)
@KineticsPreProcessor	SUBDICT [Rapid-Kinetics]	Dictionary containing the list of kinetic files to be interpreted (see Section 7.6)
@Backup	PATH	Path to the backup file (in XML format) from which the simulation has to be restarted.
@Type	STRING	Type of simulation: CounterFlowDiffusion   BurnerStabilizedStagnation
@Grid	SUBDICT [AdaptiveGrid-1D]	Dictionary defining the computational 1D grid (see Section 7.9)
@PlanarSymmetry	BOOL	Planar symmetry: default false (i.e. cylyndrical symmetry)
@FuelStream	SUBDICT [Gas-Status]	Dictionary defining the inlet gas composition, temperature, and pressure on the fuel side (see Section 7.5)
@OxidizerStream	SUBDICT [Gas-Status]	Dictionary defining the inlet gas composition, temperature, and pressure on the oxidizer side (see Section 7.5)
@FuelVelocity	MEASURE	Fuel stream velocity
@OxidizerVelocity	MEASURE	Oxidizer stream velocity
@RadialGradientFuelSide	MEASURE	Radial gradient on the fuel side: default $0.1/s$
@RadialGradientOxidizerSide	MEASURE	Radial gradient on the oxidizer side: default $0.1/s$
@PeakMixture	SUBDICT [Gas-Status]	Dictionary defining the peak mixture composition, temperature and pressure. Used only as a first-guess value. See Section 7.5
@Output	PATH	Folder where to write the results of the simulation
@Sensitivity Analysis	SUBDICT [Sensitivity-Analysis]	Dictionary containing additional options for sensitivity analysis (see Section 7.4)
@ Dae Parameters	SUBDICT [DAE- TridiagonalBlock- Solver]	Dictionary containing the numerical parameters for solving the Triadiagonal Block DAE system (see Section 7.11)
@NlsParameters	SUBDICT [NLS- TridiagonalBlock- Solver]	Dictionary containing the numerical parameters for solving the Triadiagonal Block non-linear system (see Section 7.12)
@FalseTransientParameters	SUBDICT [FalseTransient-Solver]	Dictionary containing the numerical parameters governing the false-transient approach (see Section 7.13)

Table 6.8: CounterFloDiffusionFlame1D options (Part I)

Ontion	Tvne	Meaning
@UseDaeSolver	BOOL	Use DAE solver (instead of NL solver) to solve the steady-state problems (default: true)
@UseNlsSolver	BOOL	Use the NLS solver to solve the steady state problems, after the DAE solver (default: true)
@SpeciesBundling	DOUBLE	Enables the species bundling technique for the fast evaluation of mass diffusion coefficients. The double parameter is the maximum relative error which can be accepted (suggestion: 0.05)
@PolimiSoot	SUBDICT [Polimi-Soot]	Dictionary defining the rules for analyzing soot calculated using the Polimi mechanism based on the Discrete Sectional Method. See Section 7.15.
©HMOM	SUBDICT [HMOM]	Dictionary defining the rules for applying the Hybrid Method of Moments (HMOM). See Section 7.16.
@OnTheFlyPostProcessing	SUBDICT [OnTheFly-PostProcessing]	Dictionary specifying the details for carrying out on the fly post-processing analyses. See Section 7.18.
@FixedTemperatureProfile	SUBDICT [XY-Profile]	Dictionary defining the fixed temperature profile. See Section 7.7.
@InitialTemperatureProfile	SUBDICT [XY-Profile]	Dictionary describing the initial (i.e. first-guess) temperature profile. See Section 7.7.
@Soret	BOOL	Add Soret effect (default: true)
@Radiation	BOOL	Radiative heat transfer (default: false)
@Environment Temperature	MEASURE	Environment temperature for radiative heat transfer calculations (default: 298.15 K)
@DerivativeGasMassFractions	STRING	Derivative gas mass fractions: upwind   backward   forward   centered (default: backward)
@DerivativeGasTemperature	STRING	Derivative gas temperature: upwind   backward   forward   centered (default: backward)
@InitialProfiles	STRING	Type of initial profiles for species and temperature: triangular   linear (default)   plateau
@PeakPosition	MEASURE	Position of peak of temperature (if not provided it will be assumed equal to the position of the stagnation plane)
$@{\rm MixingZoneWidth}\\$	MEASURE	Width of the mixing zone
@EigenValueStartingGuess	MEASURE	Starting guess value for the eigen value: default -100 kg/m $3/s2$
@DepositionWall	BOOL	Deposition wall for burner stabilized stagnation flames
@LewisNumbers	SUBDICT [Lewis]	Dictionary containing the list of Lewis numbers of species. See Section 7.22.
@GasReactionRateMultiplier	DOUBLE	Optional multiplying factor applied to all the reaction rates (default is 1)
@DynamicBoundaries	SUBDICT [Dynamic-Boundaries]	Dictionary describing the unsteady boundary conditions for unsteady simulations. See Section 7.24.

Table 6.9: CounterFlowDiffusionFlame1D options (Part II)

#### @PeakMixture

Dictionary defining the peak mixture composition, temperature and pressure. Used only as a first-guess value. See Section 7.5

#### @Output

Folder where to write the results of the simulation

## @SensitivityAnalysis

The user has to specify the name of the sub-dictionary in which the options for performing the sensitivity analysis are reported. Please look at Section 7.4 to have more details.

#### @DaeParameters

The user has to specify the name of the sub-dictionary in which the options about the tridiagonal-block DAE solver adopted for the solution of transport equations. Please look at Section 7.11 to have more details.

## @NlsParameters

The user has to specify the name of the sub-dictionary in which the options about the tridiagonal-block non-linear (NL) solver adopted for the solution of transport equations. Please look at Section 7.12 to have more details.

#### @FalseTransientParameters

The user has to specify the name of the sub-dictionary in which the options about the false-transient method adopted for the solution of transport equations. Please look at Section 7.13 to have more details.

#### @UseDaeSolver

Use DAE solver (instead of NL solver) to solve the steady-state problems (default: true)

#### @UseNlsSolver

Use the NLS solver to solve the steady state problems, after the DAE solver (default: true)

## @SpeciesBundling

Enables the species bundling technique for the fast evaluation of mass diffusion coefficients. The double parameter is the maximum relative error which can be accepted (suggestion: 0.05). The technique is described in the following paper: **Lu and Law**, Diffusion coefficient reduction through species bundling, Combustion and Flame, 148(3), p. 117-126 (2007).

## @PolimiSoot

Dictionary defining the rules for analyzing soot calculated using the Polimi mechanism based on the Discrete Sectional Method (described in Saggese, C., Ferrario, S., Camacho, J., Cuoci, A., Frassoldati, A., Ranzi, E., Wang, H., Faravelli, T., Kinetic modeling of particle size distribution of soot in a premixed burner-stabilized stagnation ethylene flame (2015), Combustion and Flame, 162(9), p. 3356–3369, DOI: 10.1016/j.combustflame.2015.06.002). See Section 7.15.

#### @HMOM

Dictionary defining the rules for applying the Hybrid Method of Moments (HMOM), described in **Mueller**, **M. E. and Blanquart**, **G. and Pitsch**, **H.**, *Hybrid Method of Moments for modeling soot formation and growth* (2009), Combustion and Flame, 156 (6). pp. 1143-1155. See Section 7.16.

## @OnTheFlyPostProcessing

Dictionary specifying the details for carrying out on the fly post-processing analyses. See Section 7.18.

# @Fixed Temperature Profile

Dictionary defining the fixed temperature profile. See Section 7.7.

## @InitialTemperatureProfile

Dictionary describing the initial (i.e. first-guess) temperature profile. See Section 7.7.

## @Soret

Add Soret effect (default: true).

#### @Radiation

Radiative heat transfer (default: false). The optically thin model is currently the only approach available.

## @EnvironmentTemperature

Environment temperature for radiative heat transfer calculations (default: 298.15 K)

#### @DerivativeGasMassFractions

Derivative of mass fractions of gaseous species: upwind | backward | forward | centered (default: backward)

## @DerivativeGasTemperature

Derivative of temperature: upwind | backward | forward | centered (default: backward)

#### @InitialProfiles

Type of initial profiles for species and temperature: triangular | linear (default) | plateau

## @PeakPosition

Position of peak of temperature (if not provided it will be assumed equal to the position of the stagnation plane)

#### @MixingZoneWidth

Width of the mixing zone

## @EigenValueStartingGuess

Starting guess value for the eigen value: default -100 kg/m3/s2

## @RadialGradientFuelSide

Radial gradient on the fuel side: default 0 1/s

#### @RadialGradientOxidizerSide

Radial gradient on the oxidizer side: default 0 1/s

## @DepositionWall

Deposition wall for burner stabilized stagnation flame

## @LewisNumbers

Dictionary containing the list of Lewis numbers of species. See Section 7.22.

## @GasReactionRateMultiplier

Optional multiplying factor applied to all the reaction rates (default is 1)

## @DynamicBoundaries

Dictionary describing the unsteady boundary conditions for unsteady simulations. See Section 7.24.

# 6.8 Dictionary: Thermodynamic Equilibrium

This dictionary is used for setting the simulation for thermodynamic equilibrium calculations. In the current version of <code>OpenSMOKE++</code> Suite the user can calculating equilibrium conditions of a homogeneous mixture of gases, under two different constraints: fixed enthalpy and pressure or fixed temperature and pressure.

## 6.8.1 Additional comments

#### @KineticsFolder

This option is used to specify the name of the folder containing the kinetic scheme in XML Version (kinetics.xml). This file has to be generated using the OpenSMOKEpp\_CHEMKIN\_Preprocessor. Instead of using this option, the user has the possibility to pre-process the kinetic scheme on the fly using the OKineticsPreProcessor option (see below).

#### @KineticsPreProcessor

The user can pre-process a kinetic scheme available in CHEMKIN format on the fly, when the reactor simulation is performed (instead of pre-processing the kinetics in a previous step). This option is very useful when the kinetic mechanism is under construction and/or tuning and the user has the need to change often the reactions and the kinetic parameters. Please consider that the pre-processing operation can be quite long for very detailed kinetic schemes (thousands of species). The <code>@KineticsPreProcessor</code> option requires that the user specify the name of the sub-dictionary containing all the information needed to pre-process kinetic mechanisms on the fly. Please look at Section 7.6 to have more details.

#### @Type

In the current version of <code>OpenSMOKE++</code> Suite the user can calculating equilibrium conditions of a homogeneous mixture of gases, under two different constraints: fixed enthalpy and pressure (<code>Fixed\_H\_P</code>) or fixed temperature and pressure (<code>Fixed\_T\_P</code>).

#### @InitialStatus

This option is used to specify the features (temperature, pressure and composition) of the initial mixture. The @InitialStatus option requires that the user specify the name of the corresponding sub-dictionary. Please look at Section 7.5 to have more details.

#### @Output

Path to the folder where the results have to be written.

# @OutputSpecies

List of species which will be written on ASCII file. ALL means that every species contained in the kinetic mechanism is written on the file.

	ML Version)	ed (see Section 7.6)	pressure or fixed sd_T_P	e and pressure (see	written	I file	en on the screen), sorted on the screen)
Meaning	Name of the folder containing the kinetic scheme (XML Version)	Dictionary containing the list of kinetic files to be interpreted (see Section 7.6)	Type of simulation to be carried out (fixed enthalpy and pressure or fixed temperature and pressure): Fixed_H_P   Fixed_T_P	Dictionary defining the initial gas composition, temperature and pressure (see Section $7.5$ )	Path to the folder where the results have to be written	List of species which will be written on ASCII file	Verbosity level: default is 0 (basically no details are written on the screen), maximum level is 5 (every detail about the calculations is reported on the screen)
Type	PATH	SUBDICTIONARY [Rapid-Kinetics]	STRING	SUBDICTIONARY [Gas-Status]	m PATH	STRINGS	MEASURE
Option	@KineticsFolder	@K inetics Pre Processor	@Type	@InitialStatus	@Output	@ Output Species	@Verbosity Level

Table 6.10: Thermodynamic Equilibrium dictionary

## @Verbosity Level

Verbosity level: default is 0 (basically no details are written on the screen), maximum level is 5 (every detail about the calculations is reported on the screen).

# 6.9 Dictionary: LaminarFlamelet

This dictionary is used for setting the simulation for calculating laminar flame speeds.

#### 6.9.1 Additional comments

#### @KineticsFolder

This option is used to specify the name of the folder containing the kinetic scheme in XML Version (kinetics.xml). This file has to be generated using the OpenSMOKEpp\_CHEMKIN\_Preprocessor. Instead of using this option, the user has the possibility to pre-process the kinetic scheme on the fly using the OKineticsPreProcessor option (see below).

#### @KineticsPreProcessor

The user can pre-process a kinetic scheme available in CHEMKIN format on the fly, when the reactor simulation is performed (instead of pre-processing the kinetics in a previous step). This option is very useful when the kinetic mechanism is under construction and/or tuning and the user has the need to change often the reactions and the kinetic parameters. Please consider that the pre-processing operation can be quite long for very detailed kinetic schemes (thousands of species). The <code>@KineticsPreProcessor</code> option requires that the user specify the name of the sub-dictionary containing all the information needed to pre-process kinetic mechanisms on the fly. Please look at Section 7.6 to have more details.

#### @Backup

Name (local or full path) of backup file (in xml format) to be used to restart the simulation.

#### @Grid

Dictionary defining the computational 1D grid (see Section 7.9)

#### @FuelStream

This option is used to specify the features (temperature, pressure and composition) of the inlet stream. The @InletStatus option requires that the user specify the name of the corresponding sub-dictionary. Please look at Section 7.5 to have more details.

#### @OxidizerStream

Dictionary defining the composition, temperature, and pressure of fuel stream (see Section 7.5).

#### @OutletStream

Dictionary defining the composition, temperature, and pressure of oxidizer stream (see Section 7.5).

#### @StoichiometricScalarDissipationRates

List of stoichiometric scalar dissipation rates to be simulated. The equilibrium flamelet (i.e. at scalar dissipation rate equal to 0) is always automatically calculated. Example: @StoichiometricScalarDissipationRates 1e-3 1e-1 10. Hz;

## @EnthalpyDefects

List of enthalpy defects to be simulated. The adiabatic flamelet (i.e. at enthalpy defect equal to 0) is always automatically calculated. Example: @EnthalpyDefects 250 500 750 1000 kJ/kg;

Option	Type	Meaning
@KineticsFolder	PATH	Name of the folder containing the kinetic scheme (XML Version)
@KineticsPreProcessor	SUBDICT [Rapid-Kinetics]	Dictionary containing the list of kinetic files to be interpreted (see Section 7.6)
@Backup	PATH	Name (local or full path) of backup file (in xml format) to be used to restart the simulation
@Grid	SUBDICT [AdaptiveGrid-1D]	Dictionary defining the computational 1D grid (see Section 7.9)
@FuelSide	SUBDICT [Gas-Status]	Dictionary defining the composition, temperature, and pressure of fuel stream (see Section 7.5)
@OxidizerSide	SUBDICT [Gas-Status]	Dictionary defining the composition, temperature, and pressure of oxidizer stream. See Section 7.5
@StoichiometricScalarDissipationRates	VECTOR_MEASURE	List of stoichiometric scalar dissipation rates to be simulated. The equilibrium flamelet (i.e. at scalar dissipation rate equal to 0) is always automatically calculated. Example: @StoichiometricScalarDissipationRates 1e-3 1e-1 10. Hz;
@Enthalpy Defects	VECTOR_MEASURE	List of enthalpy defects to be simulated. The adiabatic flamelet (i.e. at enthalpy defect equal to 0) is always automatically calculated. Example: @EnthalpyDefects 250 500 750 1000 kJ/kg;
@Sensitivity Analysis	SUBDICT [Sensitivity-Analysis]	Dictionary containing additional options for sensitivity analysis (see Section 7.4) [Not yet available]
@OdeParameters	SUBDICT [ODE- TridiagonalBlock- Solver]	Dictionary containing the numerical parameters for solving the Triadiagonal Block ODE system (see Section 7.10)
@NlsParameters	SUBDICT [NLS- TridiagonalBlock- Solver]	Dictionary containing the numerical parameters for solving the Triadiagonal Block non-linear system (see Section 7.12)
@False TransientParameters	SUBDICT [FalseTransient-Solver]	Dictionary containing the numerical parameters governing the false-transient approach (see Section 7.13)
@Use Ode Solver	BOOL	Use ODE solver (instead of NLS solver) to solve the steady-state problems (default: true)
@UseNlsSolver	BOOL	Use NLS solver (in addition to the ODE solver) to solve the steady-state problems (default: true)
@DensityCorrectionOnScalarDissipationRate	Rate BOOL	Applies a correction to the scalar dissipation rate to account for variations of densities along the flamelet (default: false)
$@{\rm MinimumTemperature}$	${ m MEASURE}$	Minimum temperature which can be accepted for non-adiabatic flamelets (default: $280~\mathrm{K})$
©Extinguishment Temperature	MEASURE	Temperature below which the flame can be considered extinguished (default: 1000 $\rm K)$

Table 6.11: Laminar Flamelet dictionary

## @Output

Folder where to write the results of the simulation

## @SensitivityAnalysis

The user has to specify the name of the sub-dictionary in which the options for performing the sensitivity analysis are reported. Please look at Section 7.4 to have more details.

#### @OdeParameters

The user has to specify the name of the sub-dictionary in which the options about the tridiagonal-block ODE solver adopted for the solution of transport equations. Please look at Section 7.10 to have more details.

#### @NlsParameters

The user has to specify the name of the sub-dictionary in which the options about the tridiagonal-block non-linear (NL) solver adopted for the solution of transport equations. Please look at Section 7.12 to have more details.

## @FalseTransientParameters

The user has to specify the name of the sub-dictionary in which the options about the false-transient method adopted for the solution of transport equations. Please look at Section 7.13 to have more details.

#### @UseOdeSolver

Use ODE solver (instead of NLS solver) to solve the steady-state problems (default: true)

#### @UseNlsSolver

Use NLS solver (in addition to the ODE solver) to solve the steady-state problems (default: true)

## @Density Correction On Scalar Dissipation Rate

Applies a correction to the scalar dissipation rate to account for variations of densities along the flamelet (default: false). The correction factor is:  $\frac{3}{8} \frac{\left(\sqrt{\frac{\rho_{ox}}{\rho_{fuel}}} + 1\right)^2}{\sqrt{\frac{\rho_{ox}}{\rho_{fuel}}} + 1}$ . Thus, the resulting scalar diffispation rate is given by:  $\chi = \frac{a_s}{\pi} exp\left(-2\left(erfc^{-1}\left(2z_{st}\right)\right)^2\right) \frac{3}{8} \frac{\left(\sqrt{\frac{\rho_{ox}}{\rho_{fuel}}} + 1\right)^2}{\sqrt{\frac{\rho_{ox}}{\rho_{fuel}}} + 1}$ 

# @MinimumTemperature

Minimum temperature which can be accepted for non-adiabatic flamelets (default: 280 K).

## @ExtinguishmentTemperature

Temperature below which the flame can be considered extinguished (default: 1000 K).

# 6.10 Dictionary: LookUpTables

This dictionary is used for setting the simulation for calculating laminar flame speeds.

Option	Type	Meaning
@KineticsFolder	PATH	Name of the folder containing the kinetic scheme (XML Version)
@KineticsPreProcessor	SUBDICT [Rapid-Kinetics]	Dictionary containing the list of kinetic files to be interpreted (see Section 7.6)
@Input	PATH	Name (local or full path) of folder containing the XML files corresponding to the different laminar flamelets to be post-processed
@OutputASCII	PATH	Name of the folder where to write the output ASCII files
@ Output Look Up Table	PATH	Name of the folder where to write the pre-processed lookup table (in XML format)
@VarianceSlices	INI	Number of slices in the mixture fraction variance space (default: 32)
@VarianceStretchingFactor	DOUBLE	Stretching factor for building the mixture fraction variance space (default: 1.17)
@MaximunAllowedNormalizedVariance	DOUBLE	Maximum allowed normalized variance (default: 0.98)
@PDFType	STRING	Type of PDF: Beta   ClippedGaussian (default: Beta)
@Overwrite	BOOL	Force overwriting of previous (if existing) output folder (default: false)

Table 6.12: LookUpTables dictionary

#### 6.10.1 Additional comments

#### @KineticsFolder

This option is used to specify the name of the folder containing the kinetic scheme in XML Version (kinetics.xml). This file has to be generated using the OpenSMOKEpp\_CHEMKIN\_Preprocessor. Instead of using this option, the user has the possibility to pre-process the kinetic scheme on the fly using the OKineticsPreProcessor option (see below).

## @KineticsPreProcessor

The user can pre-process a kinetic scheme available in CHEMKIN format on the fly, when the reactor simulation is performed (instead of pre-processing the kinetics in a previous step). This option is very useful when the kinetic mechanism is under construction and/or tuning and the user has the need to change often the reactions and the kinetic parameters. Please consider that the pre-processing operation can be quite long for very detailed kinetic schemes (thousands of species). The <code>@KineticsPreProcessor</code> option requires that the user specify the name of the sub-dictionary containing all the information needed to pre-process kinetic mechanisms on the fly. Please look at Section 7.6 to have more details.

## @Input

Name (local or full path) of folder containing the XML files corresponding to the different laminar flamelets to be post-processed

## @OutputASCII

Name of the folder where to write the output ASCII files

## @OutputLookUpTable

Name of the folder where to write the pre-processed lookup table (in XML format)

#### @VarianceSlices

Number of slices in the mixture fraction variance space (default: 32)

# @VarianceStretchingFactor

Stretching factor for building the mixture fraction variance space (default: 1.17)

## @MaximumAllowedNormalizedVariance

Maximum allowed normalized variance (default: 0.98)

#### @PDFType

Type of PDF: Beta | ClippedGaussian (default: Beta)

## @Overwrite

Force overwriting of previous (if existing) output folder (default: false)

# 6.11 Dictionary: MicrogravityDroplet/Thermogravimetric Analysis

This dictionary is used for setting the simulation for simulating evaporation and combustion of isolated fuel droplets in microgravity conditions. Please, consider that the solver is still under development.

Option         Type           @KineticsFolder         PATH           @OutputFolder         PATH           @OutputFolder         PATH           @Eber         STRING           @DropletDiameter         MEASURE           @DropletTemperature         MEASURE           @DropletTemperature         MEASURE           @FuelMassFractions         STRINGS + DOUBLES           @FuelMoleFractions         STRINGS + DOUBLES           @FuelMoles         STRINGS + DOUBLES           @FuelMoles         STRINGS + DOUBLES           @FuelMoles         STRINGS + DOUBLES           @TOPOBLES         STRING           @TOPOBLES         STRING           @TOPOBLES         STRING           @TOPOBLES         STRING           @TOPOBLES         SUBDICT           @Soret         BOOL           @SoretSmoothingTime         MEASURE           @SoretSmoothingTime         MEASURE           @SpeciesBundling         DOUBLE           @EnhancingFactorLiquidMassDiffusionCoefficierBOUBLE           @EnhancingFactorLiquidMassDiffusionCoefficierBOUBLE	Meaning Meaning	H Name of the folder containing the kinetic scheme (XML Version)	H Folder where to write the results of the simulation	NG Type of simulation: Spark (spark or hot-wire ignitions)   NoSpark (autoignitions)	[Fiber] Name of the dictionary defining the fiber (see Section 7.14)	URE Initial diameter of the droplet	URE Initial temperature of the droplet (which is assumed perfectly uniform)	INGS + Mass fractions of the liquid mixture (the sum must be equal to 1)	INGS + Mole fractions of the liquid mixture (the sum must be equal to 1)	GS + Masses of the liquid mixture components LES	GS + Moles of the liquid mixture components LES	NG Name of inert species	ICT Dictionary defining the gaseous atmosphere composition, temperature, and pressure atus] (see Section 7.5)	Number of points of the grid describing the liquid phase (i.e. the droplet)	Number of points of the grid describing the gaseous phase	URE Time to be simulated	U. Soret effect (default: false)	URE  The Soret contribution can be smoothed according to a hyperbolic tangent profile.  The user can specify the time at which the (smooth) transition of weight of Soret contribution occurs from 0 to 1. By default the smoothing time is set to 0 (i.e. no smoothing of Soret effect is applied).	SLE Enables the species bundling technique for the fast evaluation of mass diffusion coefficients. The double parameter is the maximum relative error which can be accepted (suggestion: 0.05)	UBLE Enhancing factor for thermal conductivity of droplet (default 1.)	UBLE Enhancing factor for mass diffusion coefficients of droplet (default 1.)	
					SUBDICT			STR DOU	STR			STRI					BOC			D0	iquidMassDiffusionCoefficientBOUI	

Table 6.13: Microgravity Droplet options (Part 1)  $\,$ 

Option	$\operatorname{Type}$	Meaning
@FlameRadiation	STRING	Model to be adopted for describing the radiative heat transfer: none   analytical   optically-thin   discrete-ordinates-S2nonsym   discrete-ordinates-S2sym   P1   SP3
@ExtinctionCoefficient	STRING	Model for calculating the extinction coefficients: gray (default)   WSGG-Smith   WSGG-Truelove   WSGG-Yin
@RadiationCorrectionCoefficient	DOUBLE	Correction coefficient for radiation (default 1.)
@DropletEmissivity	DOUBLE	Emissivity of the droplet surface (default 1.)
@ChamberEmissivity	DOUBLE	Emissivity of the chamber internal surface (default 1.)
@First Guess Interface Temperature	MEASURE	First guess temperature of the liquid/gas interface at time $t=0$
@FirstGuessInterfaceMassFractions	$\begin{array}{c} {\bf STRINGS} + \\ {\bf DOUBLES} \end{array}$	First guess mass fractions of the liquid/gas interface at time $t=0$
@FirstGuessInterfaceVelocity	MEASURE	First guess velocity (gas side) of the liquid/gas interface at time $t=0$
@NumberOfNLS	INT	Number of attempts to solve the NLS system describing the vapor-liquid equilibrium at interface
@SparkTemperature	MEASURE	Temperature of the spark (default 1800 K)
@SparkCoordinates	DOUBLES	Dimensionless coordinates (number of droplet radii) of spark (default: 1.01 2 5 6)
@SparkGeneratedHeatPeak	MEASURE	Thermal power per unit volume generated by the spark (default: $0 \text{ W/m3}$ )
@SparkGeneratedHeatDuration	${ m MEASURE}$	Spark duration (default: 100 ms)
@SparkGeneratedHeatTime	MEASURE	Spark time (default: 1 s)
@SparkGeneratedHeatCoordinates	DOUBLES	Dimensionless coordinates (number of droplet radii) of spark (default: 3 5)

Table 6.14: Microgravity Droplet options (Part 2)  $\,$ 

Option	Type	Meaning
@ Dae Parameters		Dictionary containing the numerical parameters for solving the stiff DAE system
@NlsParameters		Dictionary containing the numerical parameters for solving the NL system
@ContinuityEquationType	INI	Continuity equation type: 1=non-conservative, 2=conservative, 3=semi-explicit
@Density Time Derivative Smoothing Time	MEASURE	The time density derivative in the continuity equation can be smoothed according to a hyperbolic tangent profile. The user can specify the time at which the (smooth) transition of weight of this time derivative occurs from 0 to 1. By default the smoothing time is set to 0 (i.e. no smoothing is applied).
@GasGridVelocitiesInEquations	BOOL	Inclusion of gas grid velocities in transport equations (default: false)
@LiquidGridVelocitiesInEquations	BOOL	Inclusion of liquid grid velocities in transport equations (default: false)
@StepsVideo	INI	Number of steps for output on video
@StepsMap1D	INI	Number of steps for 1D map output
@StepsMap3D	INI	Number of steps for 3D map output
@SnapshotTimes	$\begin{array}{c} \text{DOUBLES} + \\ \text{MEASURE} \end{array}$	Times for snapshots (example: @SnapshotTimes 0.1 1. 2 s;)
@SnapshotSpecies	STRINGS	Species for snapshots (example: @SnapshotSpecies CO2 02;)
@VerboseContributions	STRINGS	List of species for which all the terms in the transport equations will be written on output files (example: @VerboseContributions C02 02;)
@Backup	PATH	Name of backup file (XML Version)
@BackupTime	MEASURE	Backup time (default: 1 h)
@PolimiSoot	SUBDICT [Polimi-Soot]	Name of the dictionary defining the rules for analyzing soot calculated using the Polimi mechanis (see Section 7.15)

Table 6.15: Microgravity Droplet options (Part 3)  $\,$ 

Option	Type	Meaning
@PrevaporizationCoefficient	DOUBLE	Prevaporization coefficient (default 0, max 1)
@VaporizationAccelerationCoefficient	DOUBLE	Correction coefficient for accelerating the droplet vaporization (default: 10)
@VaporizationAccelerationTime	MEASURE	Maximum time (i.e. duration) for accelerating the droplet vaporization (default: 1 ms)
@DistanceOfThermalWave	DOUBLE	Distance of thermal wave in number of radii
@TemperatureOfThermalWave	MEASURE	Temperature of thermal wave (e.g. 298 K)
@DerivativeGasTemperature	STRING	Derivative of gas temperature: upwind   forward   backward   centered (default: upwind)
@DerivativeGasVelocity	STRING	Derivative of gas velocity: upwind   forward   backward   centered (default: backward)
@DerivativeGasMassFractions	STRING	Derivative of gas mass fractions: upwind   forward   backward   centered (default: upwind)
@Derivative Gas Mole Fractions	STRING	Derivative of gas mole fractions: upwind   forward   backward   centered (default: backward)
@DerivativeLiquidTemperature	STRING	Derivative of liquid temperature: upwind   forward   backward   centered (default: upwind)
@DerivativeLiquidVelocity	STRING	Derivative of liquid velocity: upwind   forward   backward   centered (default: backward)
@DerivativeLiquidMassFractions	STRING	Derivative of liquid mass fractions: upwind   forward   backward   centered (default: upwind)
@Derivative Liquid Mole Fractions	STRING	Derivative of liquid mass fractions: upwind   forward   backward   centered (default: backward)
@DerivativeLiquidDensity	STRING	Derivative of liquid density: upwind   forward   backward   centered (default: upwind)

Table 6.16: Microgravity Droplet options (Part 4)  $\,$ 

Option	Type	Meaning
@CustomGasGrid	PATH	Enable custom (user-defined) grid (provided through a file)
@LiquidMixture	SUBDICT [LiquidMixture]	Name of dictionary defining the properties of liquid mixture
@GasMixture	SUBDICT [GasMixture]	Name of dictionary defining the properties of gas mixture
@GasPhaseReactions	BOOL	Reactions in the gaseous phase (default: true)
@Buoyancy	BOOL	Buoyancy effects (default: false)
@NeglectVaporizationHeat	BOOL	Neglect vaporization heat (default: false)
@ConvectiveVelocity	MEASURE	The effect of convective velocity on the mass and heat transfer is simulated. The user has to provide the mean value of convective velocity to be simulated (default: 0)
@CoefficientConvectiveVelocity	DOUBLE	A user-defined correction coefficient can be applied to the mass and heat transfer coefficients modified by the @CoefficientConvectiveVelocity option (default: 1)
@LiquidV is cosity On Mole Fractions	BOOL	If true (default) the liquid phase viscosity is calculated using a mixture-average rule based on mole fractions. If false, based on mass fractions.
@InternalRecirculationsEnhancingFactor	DOUBLE	Enhancing factor for internal recirculations acting on thermal conductivity and mass diffusion coefficients (default 1)

Table 6.17: Microgravity Droplet options (Part 5)  $\,$ 

Option	Type	Meaning
©KineticsFolder	PATH	Name of the folder containing the kinetic scheme (XML Version)
@OutputFolder	PATH	Folder where to write the results of the simulation
@FuelMassFractions	STRINGS + DOUBLES	Mass fractions of the liquid mixture (the sum must be equal to 1)
@FuelMoleFractions	STRINGS + DOUBLES	Mole fractions of the liquid mixture (the sum must be equal to 1)
@FuelMasses	STRINGS + DOUBLES	Masses of the liquid mixture components
©FuelMoles	STRINGS + DOUBLES	Moles of the liquid mixture components
©GasStatus	SUBDICT [Gas-Status]	Dictionary defining the gaseous atmosphere composition, temperature, and pressure (see Section 7.5)
@LiquidMixture	${ m SUBDICT} \ [{ m LiquidMixture}]$	Name of dictionary defining the properties of liquid mixture
@GasMixture	$\begin{array}{c} \text{SUBDICT} \\ [\text{GasMixture}] \end{array}$	Name of dictionary defining the properties of gas mixture
@SpeciesFolder	PATH	Folder containing the configuration files for liquid gas species
@EndTime	MEASURE	Time to be simulated
@GlobalMassExchangeCoefficient	${ m MEASURE}$	Global mass exchange coefficient (example: 1e-6 m3/s)
@TemperatureProfile	SUBDICT [XY-Profile]	Dictionary defining the temperature profile in time (see Section 7.7)
@DiffusivityCorrection	BOOL	The global exchange coefficient is corrected according to the diffusivities of evaporating species (default: true)
$@ {\bf Reference Species}$	STRING	Refence species for calculating the diffusivity correction (default: H2O)
@Liquid V is cosity On Mole Fractions	BOOL	If true (default) the liquid phase viscosity is calculated using a mixture-average rule based on mole fractions. If false, based on mass fractions.

Table 6.18: Thermogravimetric Analysis

# Chapter 7

# **Sub-Dictionaries**

This Chapter reports the sub-dictionaries which are used by the different solvers (as explained in Chapter 6):

- 1. Comments
- 2. ODE-Solver
- 3. Output-Options
- 4. Sensitivity-Analysis
- 5. Gas-Status
- 6. Rapid-Kinetics
- 7. XY-Profile
- 8. Parametric Analysis
- 9. Adaptive-Grid1D
- 10. Ode-TridiagonalBlock-Parameters
- 11. Dae-TridiagonalBlock-Parameters
- 12. Nls-TridiagonalBlock-Parameters
- 13. FalseTransient-Parameters
- 14. Fiber
- 15. PolimiSoot
- 16. HMOM
- 17. OnTheFlyROPA
- 18. OnTheFlyPostProcessing
- $19. \ \ On The Fly CEMA$
- 20. LiquidMixture
- 21. GasMixture
- 22. LewisNumbers
- 23. AutoignitionDelayTimes
- 24. DynamicBoundaries
- 25. KineticsModifier

# 7.1 Sub-Dictionary: Comments

This dictionary can be used to add comments to the output files written by some of the OpenSMOKE++ Suite solvers (see Table 7.1)

## 7.1.1 Additional comments

# @Author

Name of author/authors who developed the kinetic mechanism.

#### @Place

The place where the kinetic mechanism was developed.

#### @Comments

Any useful comment to be attached to the kinetic mechanism (i.e. details about modified kinetic parameters, warnings about missing reactions, status of the mechanism, etc.)

## 7.1.2 Example

# 7.2 Sub-Dictionary: ODE-Parameters

This dictionary is used for setting the options for the stiff ODE solvers available in OpenSMOKE++ Suite solvers (see Table 7.2).

## 7.2.1 Additional comments

## @OdeSolver

The user can choose among differen ODE solvers. The OpenSMOKE++ native ODE solver (OpenSMOKE) is quite effective especially with very stiff kinetic mechanisms. We suggest to use it when the kinetic mechanisms from CRECK Modeling Group are adopted, or more in general for kinetic mechanisms based on the lumped procedures. The CVODE solver is the first option for very large kinetic mechanisms (thousands of species). More in general, we suggest to perform some preliminary tests in order to find the faster ODE solver for the kinetic mechanism under investigation.

#### @RelativeTolerance

Relative tolerance (default 1.2e-5).

#### @AbsoluteTolerance

Absolute tolerance (default 1.2e-5). For CVODE solver we suggest to use stricter bround tolerance (i.e. at least 1e-14).

## @MaximumNumberOfSteps

Maximum number of steps (default 500000)

Meaning	Name of the author	Name of the place	Comments
Type	STRINGS	STRINGS	STRINGS
Option	@Author	@Place	@Comments

Table 7.1: Comments dictionary

Option	Type	Meaning
	STRING	ODE Solver: OpenSMOKE   CVODE   DASPK   DVODE   DLSODA   DLSODE   MEBDF   RADAU5
	DOUBLE	Relative tolerance (default 1.2e-5)
	DOUBLE	Absolute tolerance (default 1.e-10)
@MaximumNumberOfSteps	INI	Maximum number of steps (default 500000)
	DOUBLE	Maximum step (default: automatically chosen by the solver)
	DOUBLE	Minimum step (default: automatically chosen by the solver)
	DOUBLE	Initial step (default: automatically chosen by the solver)

Table 7.2: ODE-Parameters dictionary

## @MaximumStep

Maximum step (default: automatically chosen by the solver)

# @MinimumStep

Minimum step (default: automatically chosen by the solver)

## @InitialStep

Initial step (default: automatically chosen by the solver)

# 7.2.2 Example

```
Dictionary ode-parameters

OpenSMOKE;

AbsoluteTolerance 1e-14;

RelativeTolerance 1e-7;

Provided the parameters

OpenSMOKE;

OpenSMOKE;

OpenSMOKE;

OpenSMOKE;

OpenSMOKE;

OpenSMOKE;

OpenSMOKE;

OpenSMOKE;

OpenSMOKE;
```

# 7.3 Sub-Dictionary: Output-Options

This dictionary is used for setting additional options governing the output for many OpenSMOKE++ Suite solvers (see Table 7.3).

## 7.3.1 Additional comments

## @OutputFolder

Name of the folder where to write the output data (default: Output).

## @StepsVideo

Parameter governing the frequency of output on video (default: 50).

# @StepsFile

Parameter governing the frequency of output on video (default: 5).

## @OutputSpecies

List of species which will be written on ASCII file (default: all the species).

## @Verbose

If false, it means that video info and output files will not be written (default: true)

## @VerboseASCIIFile

If false, it means that output ASCII file will not be written (default: true).

# @VerboseXMLFile

If false, it means that output XML file will not be written (default: true).

Option	$\operatorname{Type}$	Meaning
@OutputFolder	PATH	Name of the folder where to write the output data
@StepsVideo	INI	Parameter governing the frequency of output on video
@StepsFile	LNI	Parameter governing the frequency of output on file
@OutputSpecies	STRINGS	List of species which will be written on ASCII file
@Verbose	BOOL	If set false means that video info and output files will not be written
@VerboseASCIIFile	BOOL	If set false means that output ASCII file will not be written
@VerboseXMLFile	BOOL	If set false means that output XML file will not be written

Table 7.3: Output-Options dictionary

## 7.3.2 Example

# 7.4 Sub-Dictionary: Sensitivity-Analysis

This dictionary is used for setting the options governing the sensitivity analysis.

#### 7.4.1 Additional comments

# @Type

Type of sensitivity analysis. In the current version of OpenSMOKE++ the sensitivity analysis can be performed with respect to the frequency factor corresponding to each reaction (arrhenius-parameters) or with respect to the whole kinetic constant (kinetic-constants);

#### @DenseFullPivoting

Full pivoting vs Partial pivoting (LU decomposition). The solution of linear systems is the most expensive operation of sensitivity analysis. In order to speed-up the calculations, a partial pivoting strategy can be applied when the LU factorization is applied.

## @DenseSolver

Linear algebra package. In the current version only the Eigen solver is available.

## @SubSteps

Number of sub-steps when performing sensitivity analysis (default: 2)

#### @Species

List of species for which the sensitivity coefficients will be written. Please consider that for large kinetic mechanism the overall output resulting from the sensitivity analysis can be huge. We suggest to write sensitity coefficients only for species in which the user is really interested.

## 7.4.2 Example

## 7.5 Sub-Dictionary: Gas-Status

This dictionary is used for setting the status of a mixture (composition, temperature and pressure).

Option	Type	Meaning
@Type	STRING	Type of sensitivity analysis: arrhenius-parameters   kinetic-constants
@DenseFullPivoting	BOOL	Full pivoting vs Partial pivoting (LU decomposition)
@DenseSolver	STRING	Linear algebra package: Eigen
@SubSteps	INI	Number of sub-steps when performing sensitivity analysis (default: 2)
@Species	STRINGS	List of species for which the sensitivity coefficients will be written

Table 7.4: Sensitivity-Analysis dictionary

Meaning	Temperature of the mixture	Pressure of the mixture	Density of the mixture	Mole fractions of the mixture (the sum must be equal to 1)	Mass fractions of the mixture (the sum must be equal to 1)	Molar composition of the mixture (the values will be automatically normalized)	Mass composition of the mixture (the values will be automatically normalized)	Equivalence ratio	Mole fractions of the fuel mixture (the sum must be equal to 1)	Mass fractions of the fuel mixture (the sum must be equal to 1)	Molar composition of the fuel mixture (the values will be automatically normalized)	Mass composition of the fuel mixture (the values will be automatically normalized)	Mole fractions of the oxidizer mixture (the sum must be equal to 1)	Mass fractions of the oxidizer mixture (the sum must be equal to 1)	Molar composition of the oxidizer mixture (the values will be automatically normalized)	Mass composition of the oxidizer mixture (the values will be automatically normalized)
$_{ m Type}$	MEASURE	MEASURE	MEASURE	STRINGS + DOUBLES	STRINGS + DOUBLES	STRINGS + DOUBLES	STRINGS + DOUBLES	DOUBLE	STRINGS + DOUBLES	STRINGS + DOUBLES	STRINGS + DOUBLES	STRINGS + DOUBLES	STRINGS + DOUBLES	STRINGS + DOUBLES	STRINGS + DOUBLES	STRINGS + DOUBLES
Option	@Temperature	@Pressure	@Density	@MoleFractions	@MassFractions	@Moles	©Masses	@EquivalenceRatio	@FuelMoleFractions	@FuelMassFractions	@FuelMoles	@FuelMasses	@OxidizerMoleFractions	@OxidizerMassFractions	@OxidizerMoles	@OxidizerMasses

Table 7.5: Gas-Status dictionary

# 7.5.1 Additional comments

# @Temperature

Temperature of the mixture (must be used together with @Pressure or @Density).

#### @Pressure

Pressure of the mixture (must be used together with @Temperature or @Density).

## @Density

Density of the mixture (must be used together with @Temperature or @Pressure).

#### @MoleFractions

Mole fractions of the mixture (the sum must be exactly equal to 1). It is enough to completely characterize the mixture composition (i.e. no additional data are needed).

### @MassFractions

Mass fractions of the mixture (the sum must be exactly equal to 1). It is enough to completely characterize the mixture composition (i.e. no additional data are needed).

#### @Moles

Molar composition of the mixture. The values will be automatically normalized, i.e. converted in mole fractions. It is enough to completely characterize the mixture composition (i.e. no additional data are needed).

### @Masses

Mass composition of the mixture. The values will be automatically normalized, i.e. converted in mass fractions. It is enough to completely characterize the mixture composition (i.e. no additional data are needed).

# @EquivalenceRatio

Equivalence ratio of the mixture. It requires the compostion of fuel mixture (defined through one of the following: @FuelMoleFractions | @FuelMassFractions | @FuelMoles | @FuelMasses) and the compostion of oxidizer mixture (defined through one of the following: @OxidizerMoleFractions | @OxidizerMassFractions | @OxidizerMoles | @OxidizerMasses).

### @FuelMoleFractions

Mole fractions of the fuel mixture (the sum must be exactly equal to 1). It can be used only in conjuction with <code>@EquivalenceRatio</code>.

#### @FuelMassFractions

Mass fractions of the fuel mixture (the sum must be exactly equal to 1). It can be used only in conjuction with @EquivalenceRatio.

# @FuelMoles

Molar composition of the fuel mixture. The values will be automatically normalized, i.e. converted in mole fractions. It can be used only in conjuction with <code>@EquivalenceRatio</code>.

## @FuelMasses

Mass composition of the fuel mixture. The values will be automatically normalized, i.e. converted in mass fractions. It can be used only in conjuction with <code>@EquivalenceRatio</code>.

## @OxidizerMoleFractions

Mole fractions of the oxidizer mixture (the sum must be exactly equal to 1). It can be used only in conjuction with @EquivalenceRatio.

#### @OxidizerMassFractions

Mass fractions of the oxidizer mixture (the sum must be exactly equal to 1). It can be used only in conjuction with @EquivalenceRatio.

### @OxidizerMoles

Molar composition of the oxidizer mixture. The values will be automatically normalized, i.e. converted in mole fractions. It can be used only in conjuction with <code>@EquivalenceRatio</code>.

### @OxidizerMasses

Mass composition of the oxidizer mixture. The values will be automatically normalized, i.e. converted in mass fractions. It can be used only in conjuction with <code>@EquivalenceRatio</code>.

# 7.5.2 Examples

```
Dictionary inlet-mixture
  {
            @Temperature
                              1000.
                                        Κ;
3
            @Pressure
                              101325
                                        Pa;
            @Moles
                              H2 2
5
                         O2 1
6
                         N2\ 3.76 ;
7
  }
```

```
Dictionary inlet-mixture
  {
2
            @Temperature
                                  1000.
                                           Κ;
3
            @Pressure
                                  101325. Pa;
4
            @ Equivalence Ratio
                                  1 :
5
            @FuelMasses
                                  H2 10.;
6
                                  O2 21
            @OxidizerMoles
                             N2 79;
8
  }
```

# 7.6 Sub-Dictionary: Rapid-Kinetics

This dictionary is used when the user wants to pre-process a kinetic scheme on the fly, i.e. just before running the simulation of a reactor.

# 7.6.1 Additional comments

### @Thermodynamics

Name of the file containing the thermodynamic data (CHEMKIN format)

# @Transport

Name of the file containing the transport data (CHEMKIN format)

Option	Type	Meaning
@Thermodynamics	PATH	Name of the file containing the thermodynamic data (CHEMKIN format)
@Transport	PATH	Name of the file containing the transport data (CHEMKIN format)
@Kinetics	$\mathrm{PATH}$	Name of the file containing the kinetic mechanism (CHEMKIN format)
@Output	PATH	Name of the folder where to write the interpreted kinetic mechanism (XML format)

Table 7.6: Rapid-Kinetics dictionary

# @Kinetics

Name of the file containing the kinetic mechanism (CHEMKIN format)

# @Output

Name of the folder where to write the interpreted kinetic mechanism (XML format) (default: kinetics)

# 7.6.2 Example

# 7.7 Sub-Dictionary: XY-Profile

This dictionary is used to define a piece-wise linear profile.

# 7.7.1 Additional comments

### @XVariable

Type of variable on the x axis: length | time.

### @YVariable

Type of variable on the y axis: temperature | pressure | volume.

# @XUnits

Units of measure of the x variable.

### @YUnits

Units of measure of the y variable.

### @Profile

XY Profile: pairs of x and y values (look at the example).

# @FilterWidth

Width of filter (same units of @XUnits)

# **7.7.2** Example

```
Dictionary volume-profile
  {
           @XVariable
           @XUnits
                         s;
           @YVariable
                         volume;
5
           @YUnits
                         cm3;
6
           @Profile
                                1.00
                          0.0
                     0.1
                            1.15
                     0.2
                            1.35
```

Option	Type	Meaning
@XVariable	STRING	Type of variable on the x axis: length   time
@YVariable	STRING	Type of variable on the y axis: temperature   pressure   volume
@XUnits	STRING	Units of measure of the x variable
@YUnits	STRING	Units of measure of the y variable
@Profile	DOUBLES + DOUBLES	XY Profile (e.g. 0 100. 1 110. 2 200.)
©FilterWidth	MEASURE	Width of filter (same units of @XUnits)

Table 7.7: XY-Profile dictionary

```
10 | 0.4 1.60 ;
11 |}
```

# 7.8 Sub-Dictionary: Parametric-Analysis

This dictionary is used to define the rules for parametric analysis.

## 7.8.1 Additional comments

### @Type

Type of parameter to be analyzed: residence-time | temperature | pressure | temperature-pressure | moles | masses

#### @ListOfValues

List of values of first (main) parameter (together with units of measure, if any). Though this option the user defines explicitly the list of parameter values to be simulated. The alternative is to specify the interval through the following key-words: @MinimumValue, @MaximumValue, and @NumberOfPoints

## @ListOfValues2

List of values of second parameter, if any (together with units of measure, if any). Though this option the user defines explicitly the list of parameter values to be simulated. The alternative is to specify the interval through the following key-words: <code>@MinimumValue2</code>, <code>@MaximumValue2</code>, and <code>@NumberOfPoints</code>

#### @MinimumValue

Minimum value of first (main) parameter. It must be used in conjuction with @MaximumValue and @NumberOfPoints to specify the interval and the number of points for parametric analysis.

#### @MinimumValue2

Minimum value of second parameter (if any). It must be used in conjuction with @MaximumValue2 and @NumberOfPoints to specify the interval and the number of points for parametric analysis.

### @MaximumValue

Maximum value of first (main) parameter. It must be used in conjuction with @MinimumValue and @NumberOfPoints to specify the interval and the number of points for parametric analysis.

# @MaximumValue2

Maximum value of second parameter (if any). It must be used in conjuction with @MinimumValue2 and @NumberOfPoints to specify the interval and the number of points for parametric analysis.

### @ListOfProfiles

List of files describing the operating conditions and containing profiles of volume, pressure or temperature. The files must be provided in CSV format. The alternative is: i) to specify the interval through the following key-words: <code>QMinimumValue2</code>, <code>QMaximumValue2</code>, and <code>QNumberOfPoints</code>; ii) to specify the <code>QListOfValues</code>.

### @NumberOfPoints

Number of points. It must be used in conjuction with @MinimumValue and @MaximumValue to specify the interval and the number of points for parametric analysis.

Option	Type	Meaning
@Type	STRING	Type of parameter to be analyzed: residence-time   temperature   pressure   temperature-pressure   moles   masses
@ListOfValues	STRINGS	List of values of first (main) parameter (together with units of measure, if any)
@ListOfValues2	STRINGS	List of values of second parameter (together with units of measure, if any)
@MinimumValue	MEASURE	Minimum value of first (main) parameter
@MinimumValue2	MEASURE	Minimum value of second parameter (if any)
@MaximumValue	MEASURE	Maximum value of first (main) parameter
@MaximumValue2	MEASURE	Maximum value of second parameter (if any)
@ListOfProfiles	STRINGS	List of files describing the operating conditions and containing profiles of volume, pressure
		or temperature
@Number Of Points	INI	Number of points
@NumberOfThreads	INI	Number of threads
@Combinations	BOOL	The list of values are combined in a combinatorial sense (default: false)

Table 7.8: Parametric-Analysis dictionary

## @NumberOfThreads

Number of threads. If a multicore architecture is available, the user can distribute the parameteric analysis no more than one core, in order to speed-up the calculation.

#### @Combinations

The list of values are combined in a combinatorial sense (default: false). Useful for creating a 2D grid of parameters.

# 7.8.2 Examples

```
Dictionary parametric—analysis
  {
2
           @Type
3
                                  temperature;
           @NumberOfPoints
                                  10;
4
       @MinimumValue
                             1000 K:
5
       @MaximumValue
                             1200 K:
6
           @NumberOfThreads
7
  }
```

# 7.9 Sub-Dictionary: Adaptive-Grid1D

This dictionary is used for setting the options for the adaptive grid for 1D problems (see Table 7.9).

## 7.9.1 Additional comments

### @Type

Type of grid: centered | database

# @Lenght

Length of computational domain

## @InitialPoints

Initial number of points (must be between 7 and 15)

### @Center

Center position (default: middle point)

# @Width

Estimated (first guess) width of flame (default: 0.2\*length)

# @FixedPoint

Coordinate of fixed point (default: center of the grid)

States	Type of grid: centered   database	Length of computational domain	Initial number of points (must be between 7 and 15)	Center position (default: middle point)	Estimated (first guess) width of flame (default: 0.2*length)	Coordinate of fixed point (default: center of the grid)	Maximum number of allowed points (default 300)	Maximum number of points that can be added per grid adaptation (default 10)	Controls the maximum gradient allowed between two points (default 0.1)	Controls the maximum curvature allowed between two points (default 0.5)	Controls the minimum amount of each species to be considered active in the adaptive process (default: 1e-7)	Points used for regrid operation (default: 20)
Lype	STRING	MEASURE	INI	MEASURE	MEASURE	$\overline{ ext{MEASURE}}$	INI	INI	DOUBLE	DOUBLE	DOUBLE	INT
Opuon	©Type	@Length	@InitialPoints	@Center	@Width	@FixedPoint	@ MaxPoints	@MaxAdaptivePoints	@GradientCoefficient	@CurvatureCoefficient	@Threshold	@ RegridPoints

Table 7.9: Adaptive-Grid1D dictionary

## @MaxPoints

Maximum number of allowed points (default 300)

# @MaxA daptive Points

Maximum number of points that can be added per grid adaptation (default 10)

## @GradientCoefficient

Controls the maximum gradient allowed between two points (default 0.1)

## @CurvatureCoefficient

Controls the maximum curvature allowed between two points (default 0.5)

### @Threshold

Controls the minimum amount of each species to be considered active in the adaptive process (default: 1e-7)

# @RegridPoints

Points used for regrid operation (default: 20)

# 7.9.2 Example

```
Dictionary grid
1
   {
2
             @Length
                                         3 cm;
3
             @InitialPoints
                                         12;
             @Type
                                         database;
             @MaxPoints
                                         1000;
6
             @ Max Adaptive Points
                                         15;
7
             @ Gradient Coefficient
                                         0.05;
8
             @CurvatureCoefficient
                                         0.25;
9
             @Threshold
                                         1e - 5;
10
             @RegridPoints
                                         20;
11
```

# 7.10 Sub-Dictionary: ODE-TridiagonalBlock-Parameters

This dictionary is used for setting the options for the stiff tridiagonal-block ODE solvers available in OpenSMOKE++ Suite (see Table 7.10).

## 7.10.1 Additional comments

### @OdeSolver

The user can choose among four different DAE solvers: OpenSMOKE++, BzzOde (from the BzzMath library), CVODE (from the Sundials Suite) or DASPK

# @Jacobian

The user to treat the Jacobian as a tridiagonal-block matrix (TridiagonalBlock), band matrix (Band) or as a sparse matrix (Sparse). The latter option is particular useful in case of limitations of available RAM.

## @SparseSolver

Sparse solver to be used in case the Sparse option was chosen in @Jacobian option.

Option	Type	Meaning
@OdeSolver	STRING	DAE Solver: OpenSMOKE++   BzzOde   CVODE   DASPK (default: OpenSMOKE++)
@Jacobian	STRING	Jacobian sparsity pattern treatment: TridiagonalBlock   Band   Sparse (default: TridiagonalBlock)
@SparseSolver	STRING	Sparse solver: EigenSparseLU   EigenBicGSTAB   EigenGMRES   Fardiso   SuperLUSerial   UMFPack (default: EigenSparseLU)
@Preconditioner	STRING	Preconditioner to be used by iterative solvers: ILUT   diagonal (default: ILUT)
@RelativeTolerance	DOUBLE	Relative tolerance (default 1.e-6)
@AbsoluteTolerance	DOUBLE	Absolute tolerance (default 1.e-10)
@MaximumNumberOfSteps	INI	Maximum number of steps (default 500000)
@MaximumStep	DOUBLE	Maximum step (default: automatically chosen by the solver)
@MinimumStep	DOUBLE	Minimum step (default: automatically chosen by the solver)
@InitialStep	DOUBLE	Initial step (default: automatically chosen by the solver)
@MaximumOrder	INI	Maximum order of the method (default 5)
@MeanResidualThreshold	DOUBLE	Stop the integration when the mean residual is below this threshold (default: 0.)
@VerbosityLevel	INI	Verbosity level: 0=no output, 3 maximum level of output
@MinimumConstraints	BOOL	Constraints on minimum values (available only for OpenSMOKE++ and BzzOde solvers, default true)
@MaximumConstraints	BOOL	Constraints on maximum values (available only for OpenSMOKE++ and BzzOde solvers, default false)
@NonNegativeVariables	BOOL	Constraints on minimum values (available only for CVODE and DASPK solvers, default false)

Table 7.10: ODE-TridiagonalBlock-Parameters dictionary

## @Preconditioner

Preconditioner to be used in case the Sparse option was chosen in @Jacobian option.

## @RelativeTolerance

Relative tolerance (default 1.e-6).

## @AbsoluteTolerance

Absolute tolerance (default 1.e-10). For IDA solver we suggest to use stricter absolute tolerance (i.e. at least 1e-12).

# @Maximum Number Of Steps

Maximum number of steps (default 500000)

## @MaximumStep

Maximum step (default: automatically chosen by the solver)

## @MinimumStep

Minimum step (default: automatically chosen by the solver)

# @InitialStep

Initial step (default: automatically chosen by the solver)

#### @MaximumOrder

Maximum order of the method (default 5)

#### @MeanResidualThreshold

Stop the integration when the mean residual is below this threshold (default: 0.)

## @VerbosityLevel

Verbosity level: 0=no output, 3 maximum level of output

# @MinimumConstraints

Constraints on minimum values (available only for OpenSMOKE++ and BzzOde solvers, default true)

## @MaximumConstraints

Constraints on maximum values (available only for OpenSMOKE++ and BzzOde solvers, default false)

# @NonNegativeVariables

Constraints on minimum values (available only for CVODE and DASPK solvers, default false)

# **7.10.2** Example

```
Dictionary dae-parameters
2
             @OdeSolver
                                          OpenSMOKE++:
3
             @Jacobian
                                             Tridiagona|Block;
4
             @RelativeTolerance
                                          1e-6;
5
             Q A b s o l u t e T o l e r a n c e
                                         1e - 10:
             @MaximumNumberOfSteps
                                          100000;
             @MaximumStep
                                          1 e 3 ;
8
             @MinimumStep
                                          1e - 9:
9
             @InitialStep
                                         1e - 9:
10
             @MaximumOrder
1.1
                                          5:
             @MeanResidualThreshold 1e-5;
12
             @VerbosityLevel
                                          0;
13
14
   }
```

# 7.11 Sub-Dictionary: DAE-TridiagonalBlock-Parameters

This dictionary is used for setting the options for the stiff tridiagonal-block DAE solvers available in OpenSMOKE++ Suite (see Table 7.11).

### 7.11.1 Additional comments

## @DaeSolver

The user can choose among four different DAE solvers: OpenSMOKE++, BzzDae (from the BzzMath library), IDA (from the Sundials Suite) or DASPK

## @Jacobian

The user to treat the Jacobian as a tridiagonal-block matrix (TridiagonalBlock) or as a sparse matrix (Sparse). The latter option is particular useful in case of limitations of available RAM.

# @SparseSolver

Sparse solver to be used in case the Sparse option was chosen in @Jacobian option.

# @Preconditioner

Preconditioner to be used in case the Sparse option was chosen in @Jacobian option.

#### @RelativeTolerance

Relative tolerance (default 1.e-6).

## @AbsoluteTolerance

Absolute tolerance (default 1.e-10). For IDA solver we suggest to use stricter absolute tolerance (i.e. at least 1e-12).

# @MaximumNumberOfSteps

Maximum number of steps (default 500000)

## @MaximumStep

Maximum step (default: automatically chosen by the solver)

Option	Type	Meaning
@DaeSolver	STRING	DAE Solver: OpenSMOKE++   BzzDae   IDA   DASPK (default: OpenSMOKE++)
@Jacobian	STRING	Jacobian sparsity pattern treatment: TridiagonalBlock   Sparse (default: TridiagonalBlock)
@SparseSolver	STRING	Sparse solver: EigenSparseLU   EigenBiCGSTAB   EigenGMRES   EigenDGMRES   Pardiso   SuperLUSerial   UMFPack (default: EigenSparseLU)
@Preconditioner	STRING	Preconditioner to be used by iterative solvers: ILUT   diagonal (default: ILUT)
@RelativeTolerance	DOUBLE	Relative tolerance (default 1.e-6)
@AbsoluteTolerance	DOUBLE	Absolute tolerance (default 1.e-10)
@MaximumNumberOfSteps	INI	Maximum number of steps (default 500000)
@MaximumStep	DOUBLE	Maximum step (default: automatically chosen by the solver)
@MinimumStep	DOUBLE	Minimum step (default: automatically chosen by the solver)
@InitialStep	DOUBLE	Initial step (default: automatically chosen by the solver)
@MaximumOrder	INI	Maximum order of the method (default 5)
@MeanResidual Threshold	DOUBLE	Stop the integration when the mean residual is below this threshold (default: 0.)
@VerbosityLevel	INT	Verbosity level: 0=no output, 3 maximum level of output

Table 7.11: DAE-TridiagonalBlock-Parameters dictionary

# @MinimumStep

Minimum step (default: automatically chosen by the solver)

## @InitialStep

Initial step (default: automatically chosen by the solver)

## @MaximumOrder

Maximum order of the method (default 5)

## @MeanResidualThreshold

Stop the integration when the mean residual is below this threshold (default: 0.)

# @VerbosityLevel

Verbosity level: 0=no output, 3 maximum level of output

## **7.11.2** Example

```
Dictionary dae-parameters
1
2
            @DaeSolver
                                        OpenSMOKE++;
            @Jacobian
                                           Tridiagona|B|ock;
            @RelativeTolerance
                                        1e-6;
5
            @ Absolute Tolerance
                                        1e - 10;
6
                                        100000;
            @MaximumNumberOfSteps
            @MaximumStep
                                        1 e 3;
8
            @MinimumStep
                                        1e-9;
9
             @InitialStep
                                        1e-9;
10
            @MaximumOrder
                                        5;
11
            @ Mean Residual Threshold
                                       1e-5;
12
             @VerbosityLevel
                                        0;
13
   }
14
```

# 7.12 Sub-Dictionary: NLS-TridiagonalBlock-Parameters

This dictionary is used for setting the options for the tridiagonal-block non-linear (NL) solvers available in OpenSMOKE++ Suite (see Table 7.12).

## 7.12.1 Additional comments

### @NlsSolver

The user can choose among three different NLS solvers: OpenSMOKE++, BzzNls (from the BzzMath library) or KINSOL (from the Sundials Suite)

#### @Jacobian

The user to treat the Jacobian as a tridiagonal-block matrix (TridiagonalBlock) or as a sparse matrix (Sparse). The latter option is particular useful in case of limitations of available RAM.

# @SparseSolver

Sparse solver to be used in case the Sparse option was chosen in @Jacobian option.

Option	Type	Meaning
@NlsSolver	STRING	NLS Solver: OpenSMOKE++   BzzNls   KINSOL (default: OpenSMOKE++)
@Jacobian	STRING	Jacobian sparsity pattern treatment: TridiagonalBlock   Sparse (default: TridiagonalBlock)
@SparseSolver	STRING	Sparse solver: EigenSparseLU   EigenBiCGSTAB   EigenGMRES   EigenDGMRES   Pardiso   SuperLUSerial   UMFPack (default: EigenSparseLU)
@Preconditioner	STRING	Preconditioner to be used by iterative solvers: ILUT   diagonal (default: ILUT)
@FunctionTolerance	DOUBLE	Function tolerance (default 6.e-6)
@StepTolerance	DOUBLE	Step tolerance (default 3.6e-11)
@RelativeError	DOUBLE	Relative error (default 1.5e-8)
@MaximumNumberOfIterations	INI	Maximum number of iterations (default 200)
@MaximumSetupCalls	INI	Maximum number of setup calls (default 10)
@MaximumSubSetupCalls	INI	Maximum number of setup sub-calls (default 5)
©Scaling	INI	Scaling strategy for evaluation of residuals (default 1)
@Strategy	INI	Numerical methodology: NewtonBasic   NewtonGlobalization (default)
@VerbosityLevel	INI	Verbosity level: 0=no output, 3 maximum level of output

Table 7.12: NLS-TridiagonalBlock-Parameters dictionary

# @Preconditioner

Preconditioner to be used in case the Sparse option was chosen in @Jacobian option.

## @FunctionTolerance

Function tolerance (default 6.e-6)

### @StepTolerance

Step tolerance (default 3.6e-11)

### @RelativeError

Relative error (default 1.5e-8)

## @Maximum Number Of Iterations

Maximum number of iterations (default 200)

# @MaximumSetupCalls

Maximum number of setup calls (default 10)

## @MinimumSubSetupCalls

Maximum number of setup sub-calls (default 5)

### @Scaling

Scaling strategy for evaluation of residuals (default 1)

# @Strategy

Numerical methodology: NewtonBasic | NewtonGlobalization (default)

# @VerbosityLevel

Verbosity level: 0=no output, 3 maximum level of output

# **7.12.2** Example

```
Dictionary nls-parameters
2
            @NIsSolver
                                               OpenSMOKE++;
3
            @Jacobian
                                                   TridiagonalBlock;
             @FunctionTolerance
5
                                               1e - 7;
             @StepTolerance
                                               3e - 11;
6
             @RelativeError
                                               1.5e-8;
7
             @ Maximum Number Of Iterations
                                               200;
8
            @ Maximum Setup Calls
                                               10;
9
             @MaximumSubSetupCalls
                                               5;
10
             @Scaling
                                               1;
11
             @VerbosityLevel
                                               0 ;
12
             @Strategy
                                               Newton Globalization;
13
   }
14
```

Option	Type	Meaning
@FalseTransientSolver	STRING	NLS Solver: OpenSMOKE++   BzzNls   KINSOL (default: OpenSMOKE++)
@Jacobian	STRING	Jacobian sparsity pattern treatment: TridiagonalBlock   Sparse (default: TridiagonalBlock)
@SparseSolver	STRING	Sparse solver: EigenSparseLU   EigenBiCGSTAB   EigenGWRES   FigenDGWRES   Pardiso   SuperLUSerial   UMFPack (default: EigenSparseLU)
@Preconditioner	$\operatorname{STRING}$	Preconditioner to be used by iterative solvers: ILUT   diagonal (default: ILUT)
@FunctionTolerance	DOUBLE	Function tolerance (default 6.e-6)
@StepTolerance	DOUBLE	Step tolerance (default 3.6e-11)
@RelativeError	DOUBLE	Relative error (default 1.5e-8)
@MaximumNumberOfIterations	INI	Maximum number of iterations (default 200)
@MaximumSetupCalls	INI	Maximum number of setup calls (default 10)
@MaximumSubSetupCalls	INI	Maximum number of setup sub-calls (default 5)
@Scaling	INI	Scaling strategy for evaluation of residuals (default 1)
@Strategy	INI	Numerical methodology: NewtonBasic   NewtonGlobalization   FixedPoint   Picard (default: NewtonGlobalization)
@VerbosityLevel	INI	Verbosity level: 0=no output, 3 maximum level of output
@InitialStep	DOUBLE	Initial step (default: 1e-6)
@IncrementFactor	DOUBLE	Increment factor (default: 10.)
@MaximumStep	DOUBLE	Maximum step (default: 0.1)
@DecrementFactor	DOUBLE	Decrement factor (default: 2.)
@MinimumStep	DOUBLE	Minimum step (default: 1e-9)
@MinimumNumberSteps	INT	Minimum number of steps (default: 100)
@StepsBeforeIncreasing	INT	Steps to be performed before increasing the step (default: 20)
@StepsReusingJacobian	$\operatorname{INT}$	Steps for which the Jacobian is kept fixed (default: 20)

Table 7.13: FalseTransient-Parameters dictionary

# 7.13 Sub-Dictionary: FalseTransient-Parameters

This dictionary is used for setting the options governing the false-transient methodology (see Table 7.13).

# 7.13.1 Additional comments

#### @FalseTransientSolver

The user can choose among three different NLS solvers: OpenSMOKE++, BzzNls (from the BzzMath library) or KINSOL (from the Sundials Suite)

### @Jacobian

The user to treat the Jacobian as a tridiagonal-block matrix (TridiagonalBlock) or as a sparse matrix (Sparse). The latter option is particular useful in case of limitations of available RAM.

# @SparseSolver

Sparse solver to be used in case the Sparse option was chosen in @Jacobian option.

### @Preconditioner

Preconditioner to be used in case the Sparse option was chosen in @Jacobian option.

### @FunctionTolerance

Function tolerance (default 6.e-6)

# @StepTolerance

Step tolerance (default 3.6e-11)

# @RelativeError

Relative error (default 1.5e-8)

# @MaximumNumberOfIterations

Maximum number of iterations (default 200)

## @MaximumSetupCalls

Maximum number of setup calls (default 10)

# @Minimum Sub Setup Calls

Maximum number of setup sub-calls (default 5)

## @Scaling

Scaling strategy for evaluation of residuals (default 1)

### @Strategy

Numerical methodology: NewtonBasic | NewtonGlobalization (default: NewtonGlobalization)

## @VerbosityLevel

Verbosity level: 0=no output, 3 maximum level of output

# @InitialStep

Initial step (default: 1e-6)

## @IncrementFactor

Increment factor (default: 10.)

### @MaximumStep

Maximum step (default: 0.1)

### @DecrementFactor

Decrement factor (default: 2.)

# @MinimumStep

Minimum step (default: 1e-9)

# @MinimumNumberSteps

Minimum number of steps (default: 100)

## @StepsBeforeIncreasing

Steps to be performed before increasing the step (default: 20)

## @StepsReusingJacobian

Steps for which the Jacobian is kept fixed (default: 20)

# **7.13.2** Example

```
Dictionary falsetransient — parameters
2
             @FalseTransientSolver
                                              KinSol;
3
             @Jacobian
                                          TridiagonalBlock;
4
             @FunctionTolerance
                                              1e-8:
5
             @StepTolerance
                                              3e-11;
6
             @RelativeError
                                              1.5e-8;
             @ Maximum Number Of Iterations
                                              200;
             @ MaximumSetupCalls
                                              10;
             @MaximumSubSetupCalls
                                              5;
10
             @Scaling
                                              1;
11
             @VerbosityLevel
                                              0 ;
12
             @Strategy
                                              Newton Globalization;
13
                                              20;
             @StepsReusingJacobian
             @StepsBeforeIncreasing
                                              25;
15
             @MinimumNumberSteps
                                              80;
16
             @Initia|Step
                                              1e-6;
17
             @IncrementFactor
                                              10.;
18
            @MaximumStep
                                              0.01;
19
             @Decrement Factor
                                              2.;
^{20}
                                              1e-9;
^{21}
            @MinimumStep
   }
```

# 7.14 Sub-Dictionary: Fiber

This dictionary can be used to describe fibers adopted for suspending isolated fuel droplets in microgravity atmospheres (see Table 7.14)

# 7.15 Sub-Dictionary: PolimiSoot

This dictionary can be used to manage/post-process the soot mechanism based on the discrete sectional method developed at Politecnico di Milano by the CRECK Modeling Group (see Table 7.15)

# 7.16 Sub-Dictionary: HMOM

This dictionary can be used to manage/post-process the soot mechanism based on the Hybrid Method of Moments (HMOM) developed by Mueller et al. (described in Mueller, M. E. and Blanquart, G. and Pitsch, H., Hybrid Method of Moments for modeling soot formation and growth (2009), Combustion and Flame, 156 (6). pp. 1143-1155).

# 7.17 Sub-Dictionary: OnTheFlyROPA

This dictionary can be used to set the option governing the Rate of Production Analysis (ROPA), when carried out on the fly in ideal reactors (see Table 7.17).

# 7.18 Sub-Dictionary: OnTheFlyPostProcessing

This dictionary can be used to set the option governing the Post Processing options, when carried out on the fly in ideal reactors (see Table 7.18).

# 7.19 Sub-Dictionary: OnTheFlyCEMA

This dictionary can be used to set the option governing the Chemical Explosive Mode Analysis (CEMA), when carried out on the fly in ideal, non-isothermal batch reactors (see Table 7.19).

# 7.20 Sub-Dictionary: LiquidMixture

This dictionary can be used to set the option governing the Chemical Explosive Mode Analysis (CEMA), when carried out on the fly in ideal, non-isothermal batch reactors (see Table 7.20).

# 7.21 Sub-Dictionary: GasMixture

This dictionary can be used to set the option governing the Chemical Explosive Mode Analysis (CEMA), when carried out on the fly in ideal, non-isothermal batch reactors (see Table 7.21).

# 7.22 Sub-Dictionary: LewisNumbers

This dictionary can be used to set the Lewis numbers of species.

# 7.23 Sub-Dictionary: AutoignitionDelayTimes

This dictionary can be used to specify the options to calculate the ignition delay times in non-isothermal batch reactors.

Meaning	Name of material: quartz   SiC	Fiber density	Fiber thermal conductivity	Fiber constant pressure specific heat	Fiber emissivity (default: 0.)	Fiber diameter	Law to be used for estimating the Nusselt's number: stagnant   non-stagnant	Arrangement of fiber(s): rod   single   cross
Type	STRINGS	MEASURE	MEASURE	MEASURE	DOUBLE	${ m MEASURE}$	STRING	STRING
Option	@Material	@Density	@ThermalConductivity	@SpecificHeat	@Emissivity	@Diameter	@NusseltLaw	@Arrangement

Table 7.14: Fiber dictionary

Option	Type	Meaning
@SootLabel	STRING	Label indicating the soot particles (default: BIN)
@FractalDimension	DOUBLE	Fractal dimension of soot particles (default: 1.8)
@SootMinimumSection	INI	Index of minimum discrete section which is considered soot (default: 5)
@SootMinimumFractalDimension	INI	Index of minimum discrete section from which to apply the fractal dimension (default: 12)
@Density	DOUBLES	Linear density: BINstart DENSITYstart BINend DENSITYend (default: 10 1500. 20 1700.)
@PhysicalDiffusion	BOOL	Physical diffusion for soot particles (default: true)
@PhysicalDiffusionReductionCoefficient DOUBLE	icient DOUBLE	Physical diffusion reduction coefficient for soot particles(default: 1)
@ThermophoreticEffect	BOOL	Thermophoretic effect for soot sections
@ThermophoreticEffectInCorrectionVelociBOOL	onVeloci <b>B</b> OOL	Thermophoretic effect for soot sections in calculation of correction velocity (default: false)
@ThermophoreticEffectInEnthalpyFluxeSTRING	rFluxe $f S$ TRING	Thermophoretic effect for soot sections in calculation of enthalpy fluxes: DoNotExclude   Exclude   ExcludeOnlyThermophoreticEffect (default: DoNotExclude)
@ThermophoreticEffectSmoothingTimeMEASURE	TimeMEASURE	Smoothing time for thermophoretic effect (default: 0. s)
@PlanckCoefficient	$\operatorname{STRING}$	Calculation of Planck Coefficient: Smooke   Kent   Sazhin (default: Smooke)
@RadiativeHeatTransfer	BOOL	Radiative heat transfer from soot

Table 7.15: PolimiSoot dictionary

Option	Type	Meaning
@HMOM	BOOL	Hybrid Method of Moments: on/off (default: true)
@NucleationModel	INI	Nucleation model: 0=off, 1=on (default: 1)
@SurfaceGrowthModel	INI	Surface growth model: 0=off, 1=on (default: 1)
@OxidationModel	INI	Oxidation model: 0=off, 1=on (default: 1)
@CondensationModel	INI	Condensation model: 0=off, 1=on (default: 1)
@CoagulationModel	INI	Coagulation model: 0=off, 1=on (default: 1)
@ContinousCoagulationModel	INI	Continous coagulation model: 0=off, 1=on (default: 1)
@ThermophoreticModel	INI	Thermophoretic model: 0=off, 1=on (default: 1)
@FractalDiameterModel	INI	Fractal diameter model: 0=off, 1=on (default: 1)
@CollisionDiameterModel	INI	Collision diameter model: 1 or 2 (default: 2)
@NumberOfCarbonPAH	INI	Number of carbon atoms in PAHs (default 16)
@PAH	STRINGS	Species to be assumed as PAH (example: @PAH C10H8 BIN1A;)
@PAHConsumption	BOOL	Consumption of PAH is accounted for (default: true)
@RadiativeHeatTransfer	BOOL	Radiative heat transfer (default: true)
@PlanckCoefficient	$\operatorname{STRING}$	Calculation of Planck Coefficient: Smooke (default)   Kent   Sazhin   none
@SchmidtNumber	DOUBLE	Schmidt number (default: 50)

Table 7.16: PolimiSoot dictionary

Option	Type	Meaning
@Species	STRINGS	List of species for which the ROPA must be carried out
@ReferenceSpecies	STRING	Species used to calculate the conversion
@Threshold	DOUBLE	Threshold for tracing the contributions of reactions involved in ROPA (default: 3%)
@Conversions	DOUBLES	List of conversions of @ReferenceSpecies at which the ROPA must be carried out
©Times	MEASURES	List of times at which the ROPA must be carried out
@NumberOfSteps	INI	Numer of integration steps at which the ROPA must be carried out (default: 25)
@MergeForwardAndBackwardReactions BOOL	ctions BOOL	The forward and backward contributions are merged (default: false)
@CompactOutput	BOOL	The output is written in a more compact format (species below a minimum threshold are
		not reported)

Table 7.17: OnTheFlyROPA dictionary

Option	Type	Meaning
@FormationRates	STRINGS	List of species for which the fromation rates have to be written on the output file
@FormationRatesUnits	STRING	Units for writing the formation rates: moles   mass The default units are in $kmol/m^3/s$ (moles). The mass units are in $kg/m^3/s$
@Reaction Rates	SLNI	List of reaction indices (starting from 1) for which the reaction rates have to be written on the output file (units: $kmol/m^3/s$ )

Table 7.18: OnTheFlyPostProcessing dictionary

Option	Type	Meaning
@Species	STRINGS	Species for which the Explosive Index (EI) is required (default: ALL)
@Reactions	SLNI	Reactions for which the Participation Index (PI) is required (default: ALL, reactions start from 1)
@Print	BOOL	Print on file Explosive Indices (EI) and Participation Indices (PI) (default: true)
@AdditionalConservativeModes	INI	Force the inclusion of additional, user-defined conservative modes (default: 0)
@LapackMode	BOOL	Uses LAPACK for eigenvaues/eigenvectors calculations instead of Eigen++ (default: true)

Table 7.19: OnThe FlyCEMA dictionary

Option	Type	Meaning
@Density	STRING	Rule for calculating the density. Available options: Peng-Robinson
@HeatCapacity	$\operatorname{STRING}$	Rule for calculating the heat capacity. Available options: Ideal
@Viscosity	STRING	Rule for calculating the dynamic viscosity. Available options: GrunbergNissanIdeal
@Conductivity	$\operatorname{STRING}$	Rule for calculating the thermal conductivity. Available options: Vredeveld
@Dinf	STRING	Correlation for infinite dilution diffusion coefficients. Available options: Siddiqi-Lucas
@Activity	$\operatorname{STRING}$	Method for calculating the activity. Available options: Ideal   Unifac
@Fugacity	STRING	Rule for calculating the fugacity. Available options: Raoult   PengRobinsonIndirect   PengRobinsonDirect
@DiffusionCorrection	DOUBLE	Correction coefficient for infinite dilution diffusion coefficients (default: 1)
@ConductivityCorrection	DOUBLE	Correction coefficient for liquid thermal conductivity (default: 1)

Table 7.20: LiquidMixture dictionary

Meaning	Rule for calculating fugacity. Available options: Raoult   PengRobinson
Type	STRING
Option	@Fugacity

Table 7.21: GasMixture dictionary

Option	Type	Meaning
@Default	DOUBLE	Default Lewis numbers for species not available in the provided list
@Species	VECTOR_STRING	TRING DOUGH BELEWIS numbers for each species (example: @Species CH4 0.90 N2 1.02;). If a species does not appear in the list the Mostern t I carrie number will be applied.
		species uces not appear in the met, the energy new is manifely will be applied.

Table 7.22: GasMixture dictionary

no it and	T.	Mossins
Opuon	туре	меапшу
@Temperature	BOOL	The ignition delay time is calculated on the basis of the slope of temperature (default: true)
@Pressure	BOOL	The ignition delay time is calculated on the basis of the slope of pressure (default: true)
@Species	LIST_STRINGS	List of species names to be used for calculating the ignition delay times (based and their maximum value and/or the maximum slope of their mole fractions)
@SpeciesThreshold	DOUBLE	Minimum mole fraction of selected species to activate the evaluation of ignition delay times (default: 1e-12)
@SpeciesSlope	BOOL	The ignition delay times are calculated also on the basis of slope of mole fractions of species (default: true)
@TargetMoleFractions	VECTOR_STRING	DOUBLIGHTION delay is the time at which the mole fraction of target species reaches a specified value (e.g. OH 1e-5 HO2 2e-5). Adopted from RESPECTH framework (http://www.respecth.hu/).
@TargetRelativeMoleFractions	VECTOR_STRING	DOUBLE intion delay is the time at which the mole fraction of target species reaches a specified value relative to the maximum value (e.g. OH 0.90 HO2 0.80). Adopted from RESPECTH framework (http://www.respecth.hu/).
@TargetConcentrations	VECTOR_STRING	DOUMLAShition delay is the time at which the concentration of target species reaches a specified value (e.g. OH 1e-5 HO2 2e-5 kmol/m3). Adopted from RESPECTH framework (http://www.respecth.hu/).
@SpeciesMaxIntercept	LIST_STRINGS	Extrapolation to the initial baseline mole fraction, from the maximum slope. Adopted from RESPECTH framework (http://www.respecth.hu/).
@SpeciesMinIntercept	LIST_STRINGS	Extrapolation to the initial baseline mole fraction, from the minimum slope. Adopted from RESPECTH framework (http://www.respecth.hu/).
@TemperatureIncrease	MEASURE	Ignition delay time defined on the temperature increase with respect to the initial value (default: 0, example: 10 K)
@PressureIncrease	MEASURE	Ignition delay time defined on the pressure increase with respect to the initial value (default: 0, example: 100 Pa)
@MinimumTime	MEASURE	Minimum time to activate the evalution of ignition delay times (default: 1e-12 s)
@Minimum TimeInterval	MEASURE	Minimum time interval for calculating the slopes of relevant quantity (default: 1e-12 s)
@RapidCompressionMachine	BOOL	If true, the analysis is carried out in a post processing phase to select the local ignition delay times (default: false)
@FilterWidth	MEASURE	Filter width for post processing derivative profile in case of @RapidCompressionMachine (default: 0.1 ms)
@Regularization Time Interval	${ m MEASURE}$	Regularization time interval in case of @RapidCompressionMachine (default: 1 ms)
@TemperatureDerivativeThreshold	1 MEASURE	Threshold for temperature derivative in case of @RapidCompressionMachine (default: 1e3 $$\rm K/s)$$
@Verbose	BOOL	If true, additional data are written in the output files (default: false)
	· ·	

Table 7.23: Ignition delay times dictionary

### 7.23.1 Additional comments

## @Temperature

The ignition delay time is calculated on the basis of the slope of temperature (default: true)

### @Pressure

The ignition delay time is calculated on the basis of the slope of pressure (default: true)

## @Species

List of species names to be used for calculating the ignition delay times (based and their maximum value and/or the maximum slope of their mole fractions)

## @SpeciesThreshold

Minimum mole fraction of selected species to activate the evaluation of ignition delay times (default: 1e-12)

### @SpeciesSlope

The ignition delay times are calculated also on the basis of slope of mole fractions of species (default: true)

## @TargetMoleFractions

The ignition delay is the time at which the mole fraction of target species reaches a specified value (e.g. OH 1e-5 HO2 2e-5). Adopted from RESPECTH framework (http://www.respecth.hu/).

# @TargetConcentrations

The ignition delay is the time at which the concentration of target species reaches a specified value (e.g. OH 1e-5 HO2 2e-5 kmol/m3). Adopted from RESPECTH framework (http://www.respecth.hu/).

# @Target Relative Mole Fractions

The ignition delay is the time at which the mole fraction of target species reaches a specified value relative to the maximum value (e.g. OH 0.90 HO2 0.80). Adopted from RESPECTH framework (http://www.respecth.hu/).

# @Species MaxIntercept

Extrapolation to the initial baseline mole fraction, from the maximum slope. Adopted from RESPECTH framework (http://www.respecth.hu/).

## @SpeciesMinIntercept

Extrapolation to the initial baseline mole fraction, from the minimum slope. Adopted from RESPECTH framework (http://www.respecth.hu/).

## @TemperatureIncrease

Ignition delay time defined on the temperature increase with respect to the initial value (default: 0, example: 10 K)

# @PressureIncrease

Ignition delay time defined on the pressure increase with respect to the initial value (default: 0, example: 100 Pa)

### @MinimumTime

Minimum time to activate the evalution of ignition delay times (default: 1e-12 s)

## @MinimumTimeInterval

Minimum time interval for calculating the slopes of relevant quantity (default: 1e-12 s)

# @RapidCompressionMachine

If true, the analysis is carried out in a post processing phase to select the local ignition delay times (default: false)

### @FilterWidth

Filter width for post processing derivative profile in case of @RapidCompressionMachine (default: 0.1 ms)

# @RegularizationTimeInterval

Regularization time interval in case of @RapidCompressionMachine (default: 1 ms)

## @TemperatureDerivativeThreshold

Threshold for temperature derivative in case of @RapidCompressionMachine (default: 1e3 K/s)

#### @Verbose

If true, additional data are written in the output files (default: false)

## **7.23.2** Example

# 7.24 Sub-Dictionary: DynamicBoundaries

This dictionary can be used to specify the options to perform the dynamic simulations of counterflow diffusion flames (i.e. the instructions to modify in time the boundary conditions, on both fuel and oxidizer sides).

### 7.24.1 Additional comments

## @Type

 $\label{thm:continuous} Type of dynamic simulation (details provided in the examples below): TEMPERATURE\_VELOCITY\_SLOPES \\ | FIXED\_STRAINRATE\_FUEL\_TEMPERATURE\_SLOPE | FIXED\_STRAINRATE\_OX\_TEMPERATURE\_SLOPE \\ | FIXED\_BALANCE\_FUEL\_VELOCITY\_SLOPE | FIXED\_BALANCE\_OX\_VELOCITY\_SLOPE | SIN\_VELOCITY \\ | FIXED\_BALANCE\_FUEL\_VELOCITY\_SLOPE | FIXED\_BALANCE\_OX\_VELOCITY\_SLOPE | SIN\_VELOCITY \\ | FIXED\_BALANCE\_OX\_VELOCITY\_SLOPE | FIXED\_BALANCE\_OX\_VELOCITY\_SLOPE | SIN\_VELOCITY \\ | FIXED\_BALANCE\_OX\_VELOCITY\_SLOPE | FIXED\_SLOPE | FIXED\_SLO$ 

## @SlopeFuelTemperature

Slope of fuel temperature (default: 0)

# @Slope Oxidizer Temperature

Slope of oxidizer temperature (default: 0)

## @SlopeFuelVelocity

Slope of fuel velocity (default: 0)

Option	Type	Meaning
@Type	STRING	Type of dynamic simulation (details provided in the examples below):  TEMPERATURE_VELOCITY_SLOPES    FIXED_STRAINRATE_FUEL_TEMPERATURE_SLOPE    FIXED_STRAINRATE_OX_TEMPERATURE_SLOPE    FIXED_BALANCE_FUEL_VELOCITY_SLOPE    FIXED_BALANCE_OX_VELOCITY_SLOPE   SIN_VELOCITY
@SlopeFuelTemperature	MEASURE	Slope of fuel temperature (default: 0)
@SlopeOxidizerTemperature	MEASURE	Slope of oxidizer temperature (default: 0)
@SlopeFuelVelocity	MEASURE	Slope of fuel velocity (default: 0)
@SlopeOxidizerVelocity	MEASURE	Slope of oxidizer velocity (default: 0)
@EndTime	MEASURE	Total time of simulation (default: 1e4 s)
@CompactOutput	BOOL	Compact output on file (only most relevant data)
@StepsOutput	INI	Frequency of output in terms of ODE steps (default: 5)
@Snapshot Times	LIST_MEASURE	List of times at which the current solution is written on output file (example: @SnapshotTimes 10 20 30 s;)
@FrequencyFuel	MEASURE	Frequency of sinusoidal signal, fuel side (default: 0)
@SemiAmplitudeFuel	DOUBLE	Semiamplitude (relative) of sinusoidal signal, fuel side (default: 0)
@DelayTimeFuel	MEASURE	Delay time of sinusoidal signal, fuel side (default: 0)
@FrequencyOxidizer	MEASURE	Frequency of sinusoidal signal, oxidizer side (default: 0)
@SemiAmplitudeOxidizer	DOUBLE	Semiamplitude (relative) of sinusoidal signal, oxidizer side (default: 0)
@DelayTimeOxidizer	MEASURE	Delay time of sinusoidal signal, oxidizer side (default: 0)

Table 7.24: Ignition delay times dictionary

# @SlopeOxidizerVelocity

Slope of oxidizer velocity (default: 0)

### @EndTime

Total time of simulation (default: 1e4 s)

## @CompactOutput

Compact output on file (only most relevant data)

## @StepsOutput

Frequency of output in terms of ODE steps (default: 5)

# @SnapshotTimes

List of times at which the current solution is written on output file (example: @SnapshotTimes 10 20 30 s;)

# @FrequencyFuel

Frequency of sinusoidal signal, fuel side (default: 0)

# @SemiAmplitudeFuel

Semiamplitude (relative) of sinusoidal signal, fuel side (default: 0)

## @DelayTimeFuel

Delay time of sinusoidal signal, fuel side (default: 0)

## @FrequencyOxidizer

Frequency of sinusoidal signal, oxidizer side (default: 0)

## @SemiAmplitudeOxidizer

Semiamplitude (relative) of sinusoidal signal, oxidizer side (default: 0)

### @DelayTimeOxidizer

Delay time of sinusoidal signal, oxidizer side (default: 0)

- 7.24.2 Example: TEMPERATURE VELOCITY SLOPES
- 7.24.3 Example: FIXED STRAINRATE FUEL TEMPERATURE SLOPE
- 7.24.4 Example: FIXED STRAINRATE OX TEMPERATURE SLOPE
- 7.24.5 Example: FIXED BALANCE FUEL VELOCITY SLOPE
- 7.24.6 Example: FIXED BALANCE OX\_VELOCITY\_SLOPE

# 7.25 Sub-Dictionary: KineticsModifier

This dictionary can be used to change the kinetic parameters (frequency factors, temperature exponents, activation temperatures and third-body efficiencies) in a kinetic mechanism without re-preprocessing it.

```
// Description: 1. the fuel temperature, the fuel velocity, the oxidizer temperature and the
//
2. the strain rate characterial
                                                                          TEMPERATURE_VELOCITY_SLOPES;
                                                                                                                                            s
                                                                                                                                          10
                                                                                                          0 cm/s2;
                                         2. the strain rate changes
3. the momentum balance changes
                                                                                                                               5 s;
                                                                                     10 K/s;
                                                                                              0 K/s;
                                                                                              @SlopeOxidizerTemperature
                                                                                                                  @SlopeOxidizerVelocity
                                                                                    @SlopeFuelTemperature
Dictionary dynamics-example
                                                                                                        @SlopeFuelVelocity
                                                                                                                               @SnapshotTimes
```

Figure 7.1: Dynamic boundary conditions for a counter-flow diffusion flame (TEMPERATURE\_VELOCITY\_SLOPES)

```
// Description: 1. the fuel temperature is increased/decreased linearly
// 2. in order to keep the strain rate constant, the fuel velocity is changed accordingly
                                                                                                                                        FIXED_STRAINRATE_FUEL_TEMPERATURE_SLOPE;

    the oxidizer velocity is kept constant
    the fuel temperature is kept constant
    the momentum balance and the stagnation plane are kept constant

                                                                                                                                                        10 K/s;
1 5 s;
                                                                                                                                                        @SlopeFuelTemperature
Dictionary dynamics-example
                                                                                                                                                                          @SnapshotTimes
                                                                                                                                                                                            @EndTime
```

Figure 7.2: Dynamic boundary conditions for a counter-flow diffusion flame (FIXED\_STRAINRATE\_FUEL\_TEMPERATURE\_SLOPE)

```
2. in order to keep the strain rate constant, the oxidizer velocity is changed accordingly
                                                                                         3. in order to keep the strain rate constant, the fuel velocity is changed too
                                                                                                                                                                    FIXED_STRAINRATE_OX_TEMPERATURE_SLOPE;
                                    Autoignition experiments from Prof. Seshadri (University of San Diego, California)
                                                                                                            4. the fuel temperature is kept constant
5. the momentum balance and the stagnation plane are kept constant
                                                      1. the oxidizer temperature is increased/decreased linearly
                                                                                                                                                                                                                              s.
                                                                                                                                                                                                                           10
                                                                                                                                                                                   10 K/s;
1 5 s;
                                                                                                                                                                                      @SlopeOxidizerTemperature
Dictionary dynamics—example {
                                                     Description:
                                                                                                                                                                                                      @SnapshotTimes
@EndTime
```

Figure 7.3: Dynamic boundary conditions for a counter-flow diffusion flame (FIXED\_STRAINRATE\_OX\_TEMPERATURE\_SLOPE)

```
Description: 1. the fuel temperature is increased/decreased linearly
2. the momentum balance is kept constant, which means thath the oxidizer velocity is changed
3. the temperatures are kept constant
4. the strain rate changes
                                                                                                                      FIXED_BALANCE_FUEL_VELOCITY_SLOPE;
                                                                                                                                      cm/s2;
5 s;
\begin{array}{ll} \text{Dictionary dynamics--example} \\ \{ \end{array}
                                                                                                                                     @SlopeFuelVelocity
@SnapshotTimes
```

Figure 7.4: Dynamic boundary conditions for a counter-flow diffusion flame (FIXED\_BALANCE\_FUEL\_VELOCITY\_SLOPE)

```
// Description: 1. the oxidizer temperature is increased/decreased linearly
// 2. the momentum balance is kept constant, which means thath the fuel velocity is changed
// 3. the temperatures are kept constant
// 4. the strain rate changes
                                                                                                         FIXED_BALANCE_OX_VELOCITY_SLOPE;
                                                                                                                                                      10 s;
                                                                                                                                       1 5 s;
                                                                                                                        @SlopeOxidizerVelocity
Dictionary dynamics-example
                                                                                                                                        @Snapshot Times
                                                                                                                                                      @EndTime
```

Figure 7.5: Dynamic boundary conditions for a counter-flow diffusion flame (FIXED\_BALANCE\_OX\_VELOCITY\_SLOPE)

Option	Type	Meaning
@A	VECTOR_STRING	List of reaction indices and frequency factors (example: @A 3 1e5 12 1e8;)
@n	VECTOR_STRING	List of reaction indices and temperature exponents (example: @n 3 1.8 12 0.7;)
@EoverR	VECTOR_STRING	List of reaction indices and activation energies (example: @ 3 20000. 9 15000.;)
@ThirdBody	VECTOR_STRING	TRING List of reaction indices, species and third-body efficiencies (example: © 3 H20 2.3 12 C02
		0.9;)

Table 7.25: KineticsModifier dictionary

### 7.25.1 Additional comments

Please consider this is a preliminary implementation to be extended and refined. In the current version no checks are applied, so the user has to be sure to provide indices of reactions really existing in the kinetic mechanism. Moreover, in the current version the user can change the third-body efficiencies only of species which explicitly appear. in the list of third-body species associated to a given reaction.

# Chapter 8

### **Tutorials**

### 8.1 Autoignition of a mixture of hydrogen and air

This tutorial presents a transient simulation of the spontaneous ignition of a stoichiometric hydrogen/air mixture at constant pressure. This tutorial uses the POLIMI\_H2CO\_1412 kinetic mechanism developed by CRECK Modeling Group at Politecnico di Milano. The POLIMI\_H2CO\_1412 mechanism is distributed with the current version of OpenSMOKE++ Suite or can be downloaded directly from the web site (http://creckmodeling.chem.polimi.it/). Here we are interested in determining the ignition time under a specified set of initial pressure and temperature conditions, assuming no heat loss to the environment (adiabatic conditions). In addition, we would like to determine which reactions contribute most to the autoignition process, using sensitivity analysis. The system is a closed or batch process, which means there is no flow of mass into or out of the reactor.

#### 8.1.1 Setup

This tutorial project is located in the examples\autoignition-h2-air directory. A single, batch reactor at constant pressure will be simulated. The input data are provided though the input.dic file (see Figure 8.1). In paticular, the end time of the simulation is set to 0.25 ms. The initial temperature is equal to 1000 K and the pressure is kept equal to 1 atm (constant pressure). The volume is not important for the results of this simulation, so the default value of 1 cm3 will be used for the initial volume. Since this is a closed homogeneous system, the results in terms of species fraction and temperature will be the same, regardless of the volume value. If surface chemistry were included, the volume-to-surface ratio would be important, but in this case it is gas only.

The starting gas mixture is given in relative moles as 2.0 H2, 1.0 O2, and 3.76 N2. Writing it this way makes it easy to see that the O2/N2 ratio matches the composition of air, and that the fuel/air ratio is stoichiometric (two H2 per one O2). The normalization will occur automatically. The sensitivity analysis is enabled and this results in sensitivity coefficients being calculated for all species and all reactions and saved in the proper XML files. As already reported in the previous sections, this option should be used with care, as the computation time and solution-file sizes increase as a higher power of the size of the reaction mechanism. Except in the case of a very small reaction mechanism, such as the one being used in the sample problem, it is better to use the @Species option to request that sensitivity coefficients be output only for a few species of highest interest.

### 8.1.2 Results

Output results are located in the Output folder. The OpenSMOKE++ PostProcessor can be conveniently used to post process the results. Alternatively, the Output.out file can be post-processed using different tools, such as Gnuplot, Matlab, etc. Plots reported in the following were obtained using the OpenSMOKE++ PostProcessor.

Figure 8.2 (left) shows the temperature profile as a function of time for this problem. At the end of this simulation, the temperature is still rising; if it is run much longer, the temperature increases another ~300 K, nearing the adiabatic flame temperature. Although not shown, the volume in this constant-pressure system shows a corresponding increase at ignition. The calculated ignition time, defined as the time at which the gas reaches a temperature of 1400 K (i.e. corresponding to an increase of 400 K), is equal to 0.186 ms. Figure 8.2 (right) shows a close-up of species mole fractions as a function of time. Note that zooming in on the x-axis

```
.../../ kinetic -mechanisms/POLIMI_1412/Kinetics/POLIMI_H2CO_1412.CKI; .../../ kinetic -mechanisms/POLIMI_1412/Thermodynamics/POLIMI_TOT_NOX_1412.CKT; kinetics;
                   POLIMI_H2CO_1412;
NonIsoThermal-ConstantPressure;
                                                            sensitivity—options;
                                                                                                                                                                                                                                                        arrhenius—parameters;
                                         initial – mixture;
                                                                                                                                                                                                      N2 3.76;
                                                  0.25 ms;
                                                                                                                                                                                                     H2 2. O2 1.
                                                                                                                                                                                                                                                                                               H2 O2 H2O;
                                                                                                                                                                                            Pa ;
                                                                                                                                                                                                                                                                Eigen;
                                                                                                                                                                                                                                                                            false;
                                                                                                                                                                                           101325.
                                                                                                                                                                                                                                    Dictionary sensitivity — options
                   @KineticsPreProcessor
                                                                                                                                                                                   1000.
                                                           @SensitivityAnalysis
                                                                                        Dictionary POLIMI_H2CO_1412
                                                                                                                                                                                                                                                                           @DenseFullPivoting
                                                                                                                                                              Dictionary initial - mixture
                                                                                                                      @Thermodynamics
Dictionary BatchReactor
                                      @InitialStatus
                                                                                                                                                                                 @Temperature
                                                                                                                                                                                                                                                                 @DenseSolver
                                                                                                           @Kinetics
                                                                                                                                                                                            @Pressure
                                                                                                                                                                                                                                                                                    @SubSteps
                                                @EndTime
                                                                                                                                                                                                                                                                                             @Species
                                                                                                                                @Output
                                                                                                                                                                                                    @Moles
                                                                                          1 2 8 4 2 9 7 8 6
```

Figure 8.1: Input file for adiabatic, constant pressure batch reactor simulation

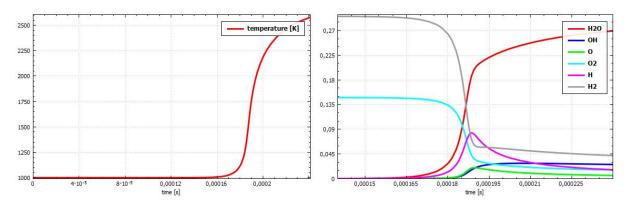


Figure 8.2: Temperature (left) and mole fraction profiles of main species (right) for the adiabatic, constant-pressure batch reactor

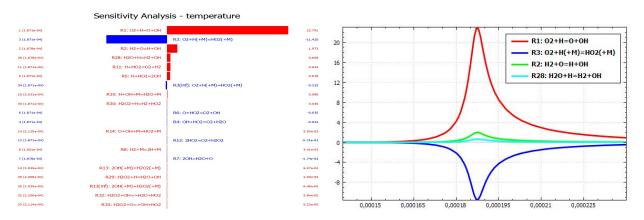


Figure 8.3: Sensitivity analysis for the adiabatic, constant-pressure batch reactor

shows the expected increase in radical species and the products at ignition, along with a decrease in hydrogen and oxygen reactants.

Figure 8.3 shows normalized sensitivity coefficients as a function of time for the four reactions that have the largest effect on the gas temperature. As one might expect, the largest sensitivity occurs near the time of ignition, when the most rapid change in temperature is taking place. The results also show that the dominant reaction for determining the temperature during ignition is the exothermic radical-recombination reaction #1: O2 + H = O + OH. The sensitivity coefficient for this reaction is positive, indicating that increasing the rate of this reaction will lead to a higher temperature (more heat production). In contrast, the sensitivity coefficient for reaction #3 is large and negative, indicating that increasing the rate of this reaction will lead to a lower temperature (less heat production).

#### 8.1.3 Note

This tutorial was adapted from the Tutorials Manual (CK-TUT-15082-0809-UG-1) distributed with the CHEMKIN-PRO Software [?].

#### 8.2 Ignition delay times for propane autoignition

This user tutorial presents an ignition-delay time calculation for the homogeneous, isobaric, adiabatic combustion of propane in air. There are various ways of defining the ignition time, experimentally as well as computationally, for combustion applications. For example, it is often defined as the time at which either the maximum or onset of certain species concentrations is reached, the time at which a specified rate of increase of temperature occurs, the time at which luminous radiant output from the system is first observed, etc. The

reported experimental data can vary greatly, depending on which definition was used in the experiments. Thus, it is often useful to select which ignition-delay time definition should be used in numerical computations. In this particular example, the ignition times are computed using two distinct definitions:

- as the time during which the maximum amount of heat is released (as indicated by the inflection point in the temperature profile)
- as the time corresponding to the maximum of a certain species (OH in this case) concentration

Discrepancies between results are presented.

#### 8.2.1 Setup

This tutorial project is located in the examples\autoignition\_propane directory. A single, batch reactor at constant pressure will be simulated. The input data are provided though the input.dic file (see Figure 8.4). The initial temperature is equal to 1200 K, while the pressure is kept constant and equal to 1 atm. The volume is not important for the results of this simulation, so the default value of 1 cm3 will be used for the initial volume. Since this is an isobaric closed homogeneous system, the results in terms of species fraction and temperature will be the same, regardless of the volume value. If surface chemistry were included, the volume-tosurface ratio would be important, but in this case only gas-phase chemistry is present. The starting gas mixture is given as 0.02 C3H8, 0.05 O2, and 0.93 Ar. These rather dilute conditions are representative of shock-tube experimental conditions. The end time is specified on through the @EndTime option. It is important to check the resulting output file after the run is complete to make sure that the @EndTime is large enough to allow for ignition to occur. If no ignition time is provided at the end of the output file, ignition has not yet occurred and the @EndTime of the simulation should be adjusted.

#### 8.2.2 Results

Output results are located in the Output folder. The OpenSMOKE++ PostProcessor can be conveniently used to post process the results. Alternatively, the Output.out file can be post-processed using different tools, such as Gnuplot, Matlab, etc. Plots reported in the following were obtained using the OpenSMOKE++ PostProcessor.

Figure 8.5 shows the temperature (left) and OH mole fraction (right) profiles as a function of time. The calculated ignition times, according to the defintiions reported above, are very similar: in particular, the temperature inflection point is located at 13.29 ms, while the peak in the OH mole fraction profile is located at 13.34 ms.

However, this result, is not necessarily true for every operating condition. Some discrepancies can be observed between the two proposed criteria. As an example, we can repeat our calculations using a higher initial temperature, equal to 2600 K. The new results are reported in Figure 8.6. In this case, as evident from the Figure, the calculated ignition times are very different: in particular, the temperature inflection point is located at  $0.8 \mu s$ , while the peak in the OH mole fraction profile is located at  $4.1 \mu s$ .

#### 8.2.3 Note

This tutorial was adapted from the Tutorials Manual (CK-TUT-15082-0809-UG-1) distributed with the CHEMKIN-PRO Software [?].

#### 8.3 Simulating a Shock-Tube experiment

Shock tube experiments are often used to obtain chemical kinetic data at high temperatures, which is especially relevant to combustion modeling. In particular, they are commonly used to study reaction paths and to measure reaction rates at elevated temperatures. We can apply the OpenSMOKE++ Shock Tube solver to validate the reaction mechanism or kinetic parameters derived from such experiments. In this tutorial, we want to reproduce one of the shock tube experiments done by Camac and Feinberg [?]. Camac and Feinberg measured the production rates of nitric oxide (NO) in shock-heated air over the temperature range of 2300 K to 6000 K. They also assembled a reaction mechanism with kinetic parameters derived from their experimental results. The reaction N2+M=N+N+M in their mechanism has a different temperature dependency when the third body is a nitrogen atom (N). To properly incorporate different temperature dependencies for different third

```
.../../kinetic-mechanisms/POLIMI_1412/Kinetics/POLIMI_C1C3HT_1412.CKI; .../../kinetic-mechanisms/POLIMI_1412/Thermodynamics/\overline{P}OLIMI_TOT_NOX_1412.CKT; kinetics;
                   POLIMI_C1C3HT_1412;
NonIsothermal—ConstantPressure;
                                                                                                                                                                                             AR 0.93;
                                       initial—mixture;
                                                                                                                                                                                             0.05
                                                                                                                                                                                             05
                                                                                                                                                                                 101325. Pa ;
C3H8 0.02
                   @KineticsPreProcessor
                                                                                                                                                                         1200.
                                                                              Dictionary POLIMI_C1C3HT_1412
                                                                                                                                                     Dictionary initial-mixture
                                                                                                            @Thermodynamics
Dictionary BatchReactor
                           @Type
@InitialStatus
                                                                                                                                                                        @Temperature
                                                                                                                                                                                 @Pressure
                                                                                                   @Kinetics
                                                @EndTime
                                                                                                                      @Output
                                                                                                                                                                                           @Moles
```

Figure 8.4: Input file for adiabatic, constant pressure batch reactor simulation fed with propane and air

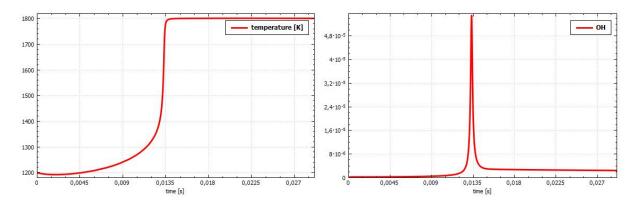


Figure 8.5: Temperature (left) and OH mole fraction (right) profiles for the adiabatic, constant-pressure batch reactor fed with propane and air (initial temperature equal to 1200 K)

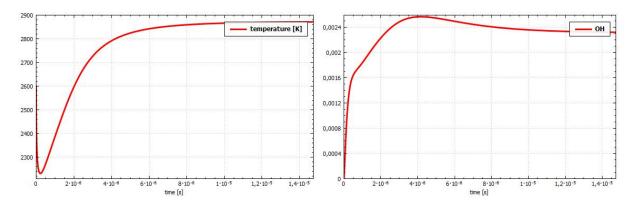


Figure 8.6: Temperature (left) and OH mole fraction (right) profiles for the adiabatic, constant-pressure batch reactor fed with propane and air (initial temperature equal to 2600 K)

bodies, we exclude N from participating as a third body in the original reaction, i.e., the effective third body efficiency for N is set to zero. And we add a new reaction N2 + N = N + N to explicitly address the different temperature dependence of nitrogen atom as the third body.

#### 8.3.1 Setup

Setting up a shock tube model requires information from the corresponding experiment. In addition to the conditions of the initial (unshocked) gas mixture, we will need to provide information on the diameter of the shock tube, the viscosity of the gas at 300 K, and the velocity of the incident shock. If we do not know the shock velocity from the experiment, we can estimate it by using the Chapmen-Jouguet detonation model. The shock tube diameter and the gas viscosity at 300 K are only required when the boundary-layer correction is used in the shock simulation.

This tutorial project is located in the projects\shock\_tube\_experiment directory. The input data are provided though the input.dic file (see Figure 8.7). In this example, we are considering an incident shock problem with boundary layer corrections. The unshocked temperature is 296K, the pressure is 6.58E-3 atm, and the shock velocity is 2.8E5 cm/sec. The initial mole fractions are 0.78118 N2, 0.20948 O2, and 0.00934 Ar. The problem will terminate at 200 microseconds. The shock tube diameter is 3.81 cm, and the viscosity of the gas at 300K is 1.777E-4 gm/cm/s; these parameters are used for the boundary layer corrections.

#### 8.3.2 Results

The NO mole fraction behind the incident shock is shown in Figure 8.8 as a function of time. The NO mole fraction profile rapidly rises to a peak value then gradually falls back to its equilibrium level. Reasons for

```
Dictionary ShockTubeReactor
   {
2
             @KineticsPreProcessor
                                          Camac—Feinberg;
3
                                          IncidentShock;
             @IncidentShockVelocity
                                          2800 m/s;
5
             @BeforeShockStatus
                                          initial — mixture;
6
             @EndTime
                                          2 ms:
7
             @Options
                                          output-options;
8
9
             @BoundaryLayerCorrection true;
10
             @Diameter
                                          3.81 cm;
1.1
             @Viscosity
                                          1.777e - 5 \text{ kg/m/s};
12
13
   }
14
   Dictionary Camac—Feinberg
15
16
   {
                               ../../kinetic-mechanisms/Camac-Feinberg/kinetics.CKI;
17
             @Thermodynamics .../.../ kinetic —mechanisms/Camac—Feinberg/thermo.CKT;
1.8
             @Output
                               kinetics;
19
   }
^{20}
21
   Dictionary initial—mixture
^{22}
23
   {
             @Temperature
                                 296. K;
24
             @Pressure
                                 6.58E-3 atm;
25
             @ Mole Fractions
                                AR 0.00934 N2 0.78118 O2 0.20948;
26
   }
^{27}
28
   Dictionary output—options
^{29}
30
             @StepsFile
                                 1:
31
   }
32
```

Figure 8.7: Input file for simulation of shock tube experiment

the greater-than-equilibrium peak NO concentration can be found in the paper by Camac and Feinberg and references therein. The predicted peak NO mole fraction is 0.046 and is in good agreement with the measured and the computed data by Camac and Feinberg.

#### 8.3.3 Note

This tutorial was adapted from the Tutorials Manual (CK-TUT-15082-0809-UG-1) distributed with the CHEMKIN-PRO Software [?].

#### 8.4 Perfectly Stirred Reactor

This tutorial presents the simulation of the steady-state combustion of a mixture of hydrogen, nitrogen, and oxygen in an adiabatic perfectly-stirred reactor. This tutorial uses the POLIMI\_H2CO\_1412 kinetic mechanism developed by CRECK Modeling Group at Politecnico di Milano. This project demonstrates the use of parameteric analysis features of OpenSMOKE++ Suite for solving multiple reactors at different operating conditions.

#### 8.4.1 Setup

This tutorial project is located in the tutorials\perfectly-stirred-reactor directory. The input data are provided though the input.dic file (see Figure 8.9). The residence time of the gas in the PSR is assumed to be 0.03 ms, the volume equal to 67.4 cm3, and the pressure is kept constant. The inlet temperature is equal to

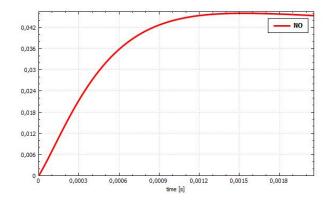


Figure 8.8: NO mole fraction profile from simulation of shock-tube experiment

298 K and the initial gas temperature in the PSR is equal to 1800 K. No heat loss is taken into account, so the system will be treated as adiabatic. No estimate of the gas composition is needed to help the solver converge on a solution. The fuel stream is composed of 60% H2 and 40% N2. The oxidizer is defined as 79% N2 and 21% O2 (air). An equivalence ratio of 1 is assumed.

A parametric analysis is performed, by studying the effects of pressure on the reactor's performances. In particular, the pressure was gradually increased from 1 atm to 10 atm.

#### 8.4.2 Results

Output results are located in the Output folder. Since a parametric analysis was performed, the Output folder contains several subfolders with names CaseO, Case1, Case2, and so on, for each reactor which was simulated (10 in this specific example). In addition, the ParametricAnalysis.out file summarizes the output results for all the reactors simulated. Figure 8.10 shows the temperature (left) and H2O mole fraction (right) of outlet mixture as a function of the reactor pressure (according to the results reported in ParametricAnalysis.out file).

```
.../.../ kinetic -mechanisms/POLIMI_1412/Kinetics/POLIMI_H2CO_1412.CKI; .../.../ kinetic -mechanisms/POLIMI_1412/Thermodynamics/POLIMI_TOT_NOX_1412.CKT;
                                                                                                                                                                                                                                                                                                   atm;
                                                                                   POLIMI_H2CO_1412;
NonIsoThermal—ConstantPressure;
                                                                                                                                                                                                                                                                                                  10.
                                                                                                                                                                                                                                                                                                  6
                                                                                                                                                                                                                                                                                                  ∞
                                                                                                                                                      parametric—analysis;
                                                                                                                                                                                                                                                                                                  7
                                                                                                                 initial - mixture;
                                                                                                                                            output-options;
                                                                                                                                                                                                                                                                                                  9
                                                                                                       inlet-mixture;
                                                                                                                                                                                                                                                                                                  .
ک
                                                                                                                                  67.4 cm3;
                                                                                                                                                                                                                                40;
                                                                                                                                                                                                                                        79;
                                                                                                                                                                                                                                                                                                  4
                                                                                                                          0.03 ms;
                                                                                                                                                                                                                                                                                        pressure;
1. 2. 3. 4
                                                                                                                                                                                                                               H2 60 N2 O2 21 N2
                                                                 Dictionary PerfectlyStirredReactor
                                                                                                                                                                                                    298. K
                                                                                                                                                                                                               1. atm
                                                                                                                                                                                                                                                                                                                                                                            false;
                                                                                                                                                                                                                                                                                                                                                         5000;
                                                                                                                                                                                                                                                                                                                                                                    true;
                                                                                                                                                                                                                                                                     Dictionary parametric-analysis
                                                                                    @KineticsPreProcessor
                                                                                                                                                    @ParametricAnalysis
Dictionary POLIMI_H2CO_1412
                                     kinetics;
                                                                                                                                                                                                                                                                                                                                                                  @VerboseASCIIFile
                                                                                                                                                                                                                      @EquivalenceRatio
                                                                                                                                                                                                                                                                                                                              Dictionary output-options
                                                                                                                                                                                 Dictionary inlet-mixture
                                                                                                               @InitialStatus
                                                                                                                         @Residence Time
                                                                                                                                                                                                                                        @Oxidizer Moles
                                                                                                                                                                                                                                                                                                @ListOfValues
                                                                                                                                                                                                                                                                                                                                                                           @VerboseVideo
                                                                                                      @InletStatus
                                                                                                                                                                                                   @Temperature
                                                                                                                                                                                                                                                                                                                                                         @StepsVideo
                                                                                                                                                                                                                               @FuelMoles
                                                                                                                                                                                                                                                                                                                                                @StepsFile
                                                                                                                                                                                                            @Pressure
                           @Thermodynamics
                                                                                                                                           @Options
                                                                                                                                  @Volume
                  @Kinetics
                                     @Output
                                                                  9
```

Figure 8.9: Input file for simulation of perfectly stirred reactors through parametric analysis

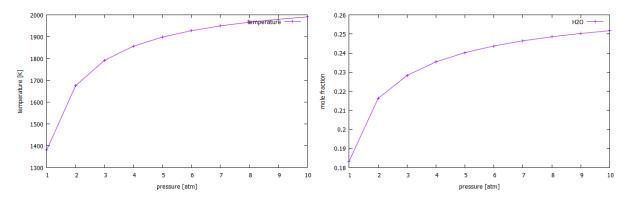


Figure 8.10: Temperature (left) and H2O mole fraction (right) of outlet mixture as a function of reactor pressure

# Chapter 9

## Extended reactions

#### 9.1 Extended Fall-off reactions

This is a first example in which only 1 bath species is specified (please consider that the numbers are completely random):

```
H2O2 (+M) = 2OH (+M)
                          2.00E12
                                           48749. ! High-pr kinf
LOWMX / 2.49 E24
                   -2.3
                             48749. /
                                                  ! Low-pr klow
                                                  ! Troe parameters
TROEMX /
          0.43
                   1.E-30
                             1.E+30 /
LOWSP / H2O
              1.86 E25
                                                  ! klow for (+H2O)
                          -2.3
                                 48749. /
TROESP / H2O
                0.51
                      1.E-30
                              1.E+30
                                                  ! Troe for (+H2O)
H2O / 1.0 /
          CO2/ 1.60/ N2/ 1.50/ O2/ 1.20/
                                                  ! Other 3rd body eff.
```

Here we explicitly specify H2O as a bath species, by providing the low-pressure kinetic parameters (LOWSP) and the Troe coefficients (TROESP). The LOWMX and LOWMX keywords are used to specified the low-pressure kinetic parameters and the Troe parameters for all the remaining species (MX stands for mixture). The overall reaction rate is calculates as the weighted sum of 2 reaction rates: one associated to the mixture parameters (MX) and one associated to the H2O species. The weights are represented by the mole fractions:

$$r = r_{mx} (1 - x_{H2O}) + r_{H2O} x_{H2O} (9.1)$$

In the following example, we specify two bath species, in addition to the mixture (please consider that the numbers are completely random):

```
H2O2 (+M) = 2OH (+M)
                          2.00E12
                                    0.9
                                          48749. ! High-pr kinf
LOWMX / 2.49 E24
                    -2.3
                             48749. /
                                                  ! Low-pr klow
TROEMX /
          0.43
                   1.E-30
                             1.E+30 /
                                                    Troe parameters
               1.86 E25
       / H2O
                          -2.3
                                 48749. /
                                                   klow for (+H2O)
TROESP / H2O
                0.51
                      1.E-30
                                                    Troe for (+H2O)
                              1.E+30
LOWSP
       / CO2
                                                    klow for (+CO2)
               1.86 E21
                          -1.3
                                 38649.
TROESP / CO2
                0.71 1.E-20
                                                    Troe for (+CO2)
                              1.E+29
                                                  ! Other 3rd body eff.
H2O/1/
        CO2/1/ N2/ 1.50/ O2/ 1.20/
```

In this case, the overall reaction rate would be:

$$r = r_{mx} \left( 1 - x_{H2O} - x_{CO2} \right) + r_{H2O} x_{H2O} + r_{CO2} x_{CO2} \tag{9.2}$$

More in general, if you specify N bath species (through the SP suffix), in addition to the mixture, which is always mandatory, through the MX suffix, the overall reaction rate would be:

$$r = r_{mx} \left( 1 - \sum_{i=1}^{N} x_i \right) + \sum_{i=1}^{N} r_i x_i$$
 (9.3)

Please remember that 3rd body efficiencies for all the bath species must be necessarily equal to 1. OpenSMOKE++ checks for this.

### 9.2 Extended PLOG Reactions

Same ideas are applied to PLOG reactions with multiple bath species. This is an example with only 1 bath species (please consider that the numbers are completely random):

```
H2O2 = 2OH
                         1.0
                                                 ! Dummy k
PLOGMX / 1.
                  1.0e14
                                50000./
                                                   k at 1 atm for [M]
PLOGMX /
          100.
                 1.0 e15
                           0.
                               51000./
                                                   k at 100 atm for [M]
PLOGSP / H2O
               1.
                      1.0e14
                                0.
                                    50000./
                                                 ! k at 1 atm for [H2O]
                                   50000./
PLOGSP / H2O
               10.
                     1.0 e14
                                                 ! k at 10 atm for [H2O]
```

The reaction rate is given by:

$$r = r_{mx} (1 - x_{H2O}) + r_{H2O} x_{H2O} (9.4)$$

Of course, it is possible to specify any number of pressures for the mixture and for each bath species. The pressure levels do not necessarily have to be the same for all the species and mixture. This is a more complex example, with 2 bath species and different pressure levels (please consider that the numbers are completely random):

```
H2O2 = 2OH
                           1.0
                                   0.
                                                      ! Dummy k
                                  53000./
PLOGMX / 1.
                   1.0e10
                              2.
                                                      ! k at 1 atm for [M]
                           -1.
                                 51000./
PLOGMX
          10
                1.0\,\,e\,1\,1
                                                      ! k at 10 atm for [M]
                       1.0e12
                                  0.1
                                                      ! k at 1 atm for [H2O]
PLOGSP
          H2O
                1.
                                        72000./
PLOGSP
                      1.0 e13
                                 0.3
                                       45000./
                                                        k at 10 atm for [H2O]
          H2O
                10.
PLOGSP
          H2O
                100.
                       1.0 e 14
                                  0.2
                                        25000./
                                                        k at 100 atm for [H2O]
                                                      ! k at 1 atm for [CO2]
PLOGSP
          CO<sub>2</sub>
                                        34000./
                1.
                       1.0 e 12
                                  0.5
PLOGSP
        / CO2
                20.
                       1.0e13
                                        47000./
                                                      ! k at 20 atm for [CO2]
```

In this case, the overall reaction rate would be:

$$r = r_{mx} \left( 1 - x_{H2O} - x_{CO2} \right) + r_{H2O} x_{H2O} + r_{CO2} x_{CO2}$$

$$(9.5)$$

More in general, if you specify N bath species (through the SP suffix), in addition to the mixture, which is always mandatory, through the MX suffix, the overall reaction rate would be:

$$r = r_{mx} \left( 1 - \sum_{i=1}^{N} x_i \right) + \sum_{i=1}^{N} r_i x_i$$
 (9.6)

# Chapter 10

# Publications using OpenSMOKE++

These are most recent publications in which OpenSMOKE++ was adopted. Please send us information about your publications using OpenSMOKE++ (alberto.cuoci@polimi.it).

- Tufano, G.L., Stein, O.T., Kronenburg, A., Gentile, G., Stagni, A., Frassoldati, A., Faravelli, T., Kempf, A.M., Vascellari, M., Hasse, C., Fully-resolved simulations of coal particle combustion using a detailed multi-step approach for heterogeneous kinetics (2019) Fuel, pp. 75-83, DOI: 10.1016/j.fuel.2018.11.139
- Saufi, A.E., Frassoldati, A., Faravelli, T., Cuoci, A., DropletSMOKE++: A comprehensive multiphase CFD framework for the evaporation of multidimensional fuel droplets (2019) International Journal of Heat and Mass Transfer, pp. 836-853, DOI: 10.1016/j.ijheatmasstransfer.2018.11.054
- Saggese, C., Singh, A.V., Xue, X., Chu, C., Kholghy, M.R., Zhang, T., Camacho, J., Giaccai, J., Miller, J.H., Thomson, M.J., Sung, C.-J., Wang, H., The distillation curve and sooting propensity of a typical jet fuel (2019) Fuel, 235, pp. 350-362, DOI: 10.1016/j.fuel.2018.07.099
- Liu, S., Chan, T.L., He, Z., Lu, Y., Jiang, X., Wei, F., Soot formation and evolution characteristics in premixed methane/ethylene-oxygen-argon burner-stabilized stagnation flames (2019) Fuel, . Article in Press, DOI: 10.1016/j.fuel.2018.12.051
- Pejpichestakul, W., Frassoldati, A., Parente, A., Faravelli, T., Kinetic modeling of soot formation in premixed burner-stabilized stagnation ethylene flames at heavily sooting condition (2018) Fuel, 234, pp. 199-206.
- Bo, A., Giacomazzi, E., Messina, G., Di Nardo, A., Analysis of a Fuel Flexible Micro Gas Turbine Combustor Through Numerical Simulations (2018) Journal of Engineering for Gas Turbines and Power, 140 (12), art. no. 121504, DOI: 10.1115/1.4040737
- Fortunato, V., Mosca, G., Lupant, D., Parente, A., Validation of a reduced NO formation mechanism on a flameless furnace fed with H2-enriched low calorific value fuels (2018) Applied Thermal Engineering, 144, pp. 877-889, DOI: 10.1016/j.applthermaleng.2018.08.091
- Shamooni, A., Cuoci, A., Faravelli, T., Sadiki, A., Prediction of combustion and heat release rates in non-premixed syngas jet flames using finite-rate scale similarity based combustion models (2018) Energies, 11 (9), DOI: 10.3390/en11092464
- Weber, I., Friese, P., Olzmann, M., H-Atom-Forming Reaction Pathways in the Pyrolysis of Furan, 2-Methylfuran, and 2,5-Dimethylfuran: A Shock-Tube and Modeling Study (2018) Journal of Physical Chemistry A, 122 (32), pp. 6500-6508, DOI: 10.1021/acs.jpca.8b05346
- Uglietti, R., Bracconi, M., Maestri, M., Coupling CFD-DEM and microkinetic modeling of surface chemistry for the simulation of catalytic fluidized systems (2018) Reaction Chemistry and Engineering, 3 (4), pp. 527-539, DOI: 10.1039/c8re00050f

- Innerkofler, M., Hunyadi-Gall, M., Pizzetti, F., Turello, M., Cuoci, A., Frassoldati, A., Pucher, E., Seshadri, K., Experimental and computational investigation of autoignition of high molecular weight alkanes in nonpremixed flows (2018) 2018 Spring Technical Meeting of the Western States Section of the Combustion Institute
- Lapenna, P.E., Indelicato, G., Lamioni, R., Creta, F., Modeling the equations of state using a flamelet approach in LRE-like conditions (2018) Acta Astronautica, DOI: 10.1016/j.actaastro.2018.07.025
- Saggese, C., Singh, A.V., Xue, X., Chu, C., Kholghy, M.R., Zhang, T., Camacho, J., Giaccai, J., Miller, J.H., Thomson, M.J., Sung, C.-J., Wang, H. The distillation curve and sooting propensity of a typical jet fuel (2019) Fuel, 235, pp. 350-362, DOI: 10.1016/j.fuel.2018.07.099
- Pejpichestakul, W., Frassoldati, A., Parente, A., Faravelli, T. Kinetic modeling of soot formation in premixed burner-stabilized stagnation ethylene flames at heavily sooting condition (2018) Fuel, 234, pp. 199-206, DOI: 10.1016/j.fuel.2018.07.022
- Bracconi, M., Ambrosetti, M., Maestri, M., Groppi, G., Tronconi, E. A fundamental investigation of gas/solid mass transfer in open-cell foams using a combined experimental and CFD approach (2018) Chemical Engineering Journal, 352, pp. 558-571, DOI: 10.1016/j.cej.2018.07.023
- Li, Z., Ferrarotti, M., Cuoci, A., Parente, A. Finite-rate chemistry modelling of non-conventional combustion regimes using a Partially-Stirred Reactor closure: Combustion model formulation and implementation details (2018) Applied Energy, 225, pp. 637-655, DOI: 10.1016/j.apenergy.2018.04.085
- Jin, H., Pieper, J., Hemken, C., Bräuer, E., Ruwe, L., Kohse-Höinghaus, K. Chemical interaction of dual-fuel mixtures in low-temperature oxidation, comparing n-pentane/dimethyl ether and n-pentane/ethanol (2018) Combustion and Flame, 193, pp. 36-53, DOI: 10.1016/j.combustflame.2018.03.003
- Bissoli, M., Frassoldati, A., Cuoci, A., Ranzi, E., Faravelli, T. A Model Investigation of Fuel and Operating Regime Impact on Homogeneous Charge Compression Ignition Engine Performance (2018) Energy and Fuels, 32 (2), pp. 2282-2298, DOI: 10.1021/acs.energyfuels.7b00893
- Rebughini, S., Bracconi, M., Dixon, A.G., Maestri, M. A hierarchical approach to chemical reactor engineering: An application to micro packed bed reactors (2018) Reaction Chemistry and Engineering, 3 (1), pp. 25-33, DOI: 10.1039/c7re00195a
- Singla, M., Rasmussen, M.L., Hashemi, H., Wu, H., Glarborg, P., Pelucchi, M., Faravelli, T., Marshall, P. Ab initio calculations and kinetic modeling of thermal conversion of methyl chloride: Implications for gasification of biomass (2018) Physical Chemistry Chemical Physics, 20 (16), pp. 10741-10752, DOI: 10.1039/c7cp07552a
- Pelucchi, M., Cavallotti, C., Faravelli, T., Klippenstein, S.J. H-Abstraction reactions by OH, HO2, O, O2 and benzyl radical addition to O2 and their implications for kinetic modelling of toluene oxidation (2018) Physical Chemistry Chemical Physics, 20 (16), pp. 10607-10627, DOI: 10.1039/c7cp07779c
- Frassoldati, A., Cuoci, A., Stagni, A., Faravelli, T., Ranzi, E. Skeletal kinetic mechanism for diesel combustion (2017) Combustion Theory and Modelling, 21 (1), pp. 79-92, DOI: 10.1080/13647830.2016.1222082
- Stagni, A., Brignoli, D., Cinquanta, M., Cuoci, A., Frassoldati, A., Ranzi, E., Faravelli, T. The influence of low-temperature chemistry on partially-premixed counterflow n-heptane/air flames (2018) Combustion and Flame, 188, pp. 440-452. DOI: 10.1016/j.combustflame.2017.10.002
- Li, Z., Cuoci, A., Sadiki, A., Parente, A. Comprehensive numerical study of the Adelaide Jet in Hot-Coflow burner by means of RANS and detailed chemistry (2017) Energy, 139, pp. 555-570. DOI: 10.1016/j.energy.2017.07.132
- Rodriguez, A., Herbinet, O., Meng, X., Fittschen, C., Wang, Z., Xing, L., Zhang, L., Battin-Leclerc, F. Hydroperoxide Measurements during Low-Temperature Gas-Phase Oxidation of n-Heptane and n-Decane (2017) Journal of Physical Chemistry A, 121 (9), pp. 1861-1876. DOI: 10.1021/acs.jpca.6b10378

- Rodriguez, A., Herbinet, O., Wang, Z., Qi, F., Fittschen, C., Westmoreland, P.R., Battin-Leclerc, F. Measuring hydroperoxide chain-branching agents during n-pentane low-temperature oxidation (2017) Proceedings of the Combustion Institute, 36 (1), pp. 333-342. DOI: 10.1016/j.proci.2016.05.044
- Pelucchi, M., Bissoli, M., Rizzo, C., Zhang, Y., Somers, K., Frassoldati, A., Curran, H., Faravelli, T. A Kinetic Modelling Study of Alcohols Operating Regimes in a HCCI Engine (2017) SAE International Journal of Engines, 10 (5), DOI: 10.4271/2017-24-0077
- Li, Z., Malik, M.R., Cuoci, A., Parente, A. edcSMOKE: A new combustion solver for stiff chemistry based on OpenFOAM® (2017) AIP Conference Proceedings, 1863, art. no. 180004
- Pelucchi, M., Ranzi, E., Frassoldati, A., Faravelli, T. Alkyl radicals rule the low temperature oxidation of long chain aldehydes (2017) Proceedings of the Combustion Institute, 36 (1), pp. 393-401. DOI: 10.1016/j.proci.2016.05.051
- Tran, L.-S., Pieper, J., Carstensen, H.-H., Zhao, H., Graf, I., Ju, Y., Qi, F., Kohse-Höinghaus, K. Experimental and kinetic modeling study of diethyl ether flames (2017) Proceedings of the Combustion Institute, 36 (1), pp. 1165-1173. DOI: 10.1016/j.proci.2016.06.087
- Weber, I., Golka, L., Olzmann, M. Thermal decomposition of propene: A shock-tube/H-ARAS and modeling study (2017) Proceedings of the Combustion Institute, 36 (1), pp. 299-306. DOI: 10.1016/j.proci.2016.06.091
- Evans, M.J., Medwell, P.R., Tian, Z.F., Ye, J., Frassoldati, A., Cuoci, A. Effects of oxidant stream composition on non-premixed laminar flames with heated and diluted coflows (2017) Combustion and Flame, 178, pp. 297-310, DOI: 10.1016/j.combustflame.2016.12.023
- Rebughini, S., Cuoci, A., Dixon, A.G., Maestri, M. Cell agglomeration algorithm for coupling microkinetic modeling and steady-state CFD simulations of catalytic reactors (2017) Computers and Chemical Engineering, 97, pp. 175-182, DOI: 10.1016/j.compchemeng.2016.11.033
- Stagni, A., Esclapez, L., Govindaraju, P., Cuoci, A., Faravelli, T., Ihme, M. The role of preferential evaporation on the ignition of multicomponent fuels in a homogeneous spray/air mixture (2017) Proceedings of the Combustion Institute, 36 (2), pp. 2483-2491. DOI: 10.1016/j.proci.2016.06.052
- Gentile, G., Debiagi, P.E.A., Cuoci, A., Frassoldati, A., Ranzi, E., Faravelli, T. A computational framework for the pyrolysis of anisotropic biomass particles (2017) Chemical Engineering Journal, 321, pp. 458-473. DOI: 10.1016/j.cej.2017.03.113
- Mairinger, G., Frassoldati, A., Gehmlich, R., Niemann, U., Stagni, A., Ranzi, E., Seshadri, K. Autoignition of condensed hydrocarbon fuels in non-premixed flows at elevated pressures (2016) Combustion Theory and Modelling, 20 (6), pp. 995-1009, DOI: 10.1080/13647830.2016.1232437
- Pelucchi, M., Cavallotti, C., Ranzi, E., Frassoldati, A., Faravelli, T. Relative Reactivity of Oxygenated Fuels: Alcohols, Aldehydes, Ketones, and Methyl Esters (2016) Energy and Fuels, 30 (10), pp. 8665-8679, DOI: 10.1021/acs.energyfuels.6b01171
- Bissoli, M., Frassoldati, A., Cuoci, A., Ranzi, E., Mehl, M., Faravelli, T. A new predictive multi-zone model for HCCI engine combustion (2016) Applied Energy, 178, pp. 826-843, DOI: 10.1016/j.apenergy.2016.06.062
- Vin, N., Herbinet, O., Battin-Leclerc, F. Diethyl ether pyrolysis study in a jet-stirred reactor (2016) Journal of Analytical and Applied Pyrolysis, 121, pp. 173-176, DOI: 10.1016/j.jaap.2016.07.018
- Xin, X., Li, Z., Zeng, X., Liu, X., Yang, Z., Xie, S. Framework based universal simulation for satellite project (2016) Chinese Control Conference, CCC, 2016 August, Article Number 7554898, pp. 9718-9723, DOI: 10.1109/ChiCC.2016.7554898
- De Paepe, W., Sayad, P., Bram, S., Klingmann, J., Contino, F. Experimental Investigation of the Effect of Steam Dilution on the Combustion of Methane for Humidified Micro Gas Turbine Applications (2016) Combustion Science and Technology, 188 (8), pp. 1199-1219, DOI: 10.1080/00102202.2016.1174116

- Jin, H., Cai, J., Wang, G., Wang, Y., Li, Y., Yang, J., Cheng, Z., Yuan, W., Qi, F. A comprehensive experimental and kinetic modeling study of tert-butanol combustion (2016) Combustion and Flame, 169, pp. 154-170, DOI: 10.1016/j.combustflame.2016.03.026
- Li, S., Yang, B., Qi, F. Accelerate global sensitivity analysis using artificial neural network algorithm: Case studies for combustion kinetic model (2016) Combustion and Flame, 168, pp. 53-64, DOI: 10.1016/j.combustflame.2016.03.028
- Bernardi, M.S., Pelucchi, M., Stagni, A., Sangalli, L.M., Cuoci, A., Frassoldati, A., Secchi, P., Faravelli, T. Curve matching, a generalized framework for models/experiments comparison: An application to n-heptane combustion kinetic mechanisms (2016) Combustion and Flame, 168, pp. 186-203, DOI: 10.1016/j.combustflame.2016.03.019
- Saggese, C., Cuoci, A., Frassoldati, A., Ferrario, S., Camacho, J., Wang, H., Faravelli, T. Probe effects in soot sampling from a burner-stabilized stagnation flame (2016) Combustion and Flame, 167, pp. 184-197, DOI: 10.1016/j.combustflame.2016.02.013
- Rebughini, S., Cuoci, A., Maestri, M. Hierarchical analysis of the gas-to-particle heat and mass transfer in micro packed bed reactors (2016) Chemical Engineering Journal, 289, pp. 471-478, DOI: 10.1016/j.cej.2015.12.089
- Nativel, D., Pelucchi, M., Frassoldati, A., Comandini, A., Cuoci, A., Ranzi, E., Chaumeix, N., Faravelli, T. Laminar flame speeds of pentanol isomers: An experimental and modeling study (2016) Combustion and Flame, 166, pp. 1-18, DOI: 10.1016/j.combustflame.2015.11.012
- Rebughini, S., Cuoci, A., Maestri, M. Handling contact points in reactive CFD simulations of heterogeneous catalytic fixed bed reactors (2016) Chemical Engineering Science, 141, pp. 240-249, DOI: 10.1016/j.ces.2015.11.013
- Rodriguez, A., Herbinet, O., Battin-Leclerc, F., Frassoldati, A., Faravelli, T., Ranzi, E. Experimental and modeling investigation of the effect of the unsaturation degree on the gas-phase oxidation of fatty acid methyl esters found in biodiesel fuels (2016) Combustion and Flame, 164, pp. 346-362, DOI: 10.1016/j.combustflame.2015.11.032
- Maffei, T., Gentile, G., Rebughini, S., Bracconi, M., Manelli, F., Lipp, S., Cuoci, A., Maestri, M. A multiregion operator-splitting CFD approach for coupling microkinetic modeling with internal porous transport in heterogeneous catalytic reactors (2016) Chemical Engineering Journal, 283, pp. 1392-1404, DOI: 10.1016/j.cej.2015.08.080
- Stagni, A., Frassoldati, A., Cuoci, A., Faravelli, T., Ranzi, E. Skeletal mechanism reduction through species-targeted sensitivity analysis (2016) Combustion and Flame, 163, pp. 382-393, DOI: 10.1016/j.combustflame.2015.10.013
- Saggese, C., Ferrario, S., Camacho, J., Cuoci, A., Frassoldati, A., Ranzi, E., Wang, H., Faravelli, T. Kinetic modeling of particle size distribution of soot in a premixed burner-stabilized stagnation ethylene flame (2015) Combustion and Flame, 162 (9), pp. 3356-3369, DOI: 10.1016/j.combustflame.2015.06.002
- Pelucchi, M., Frassoldati, A., Faravelli, T., Ruscic, B., Glarborg, P. High-temperature chemistry of HCl and Cl2 (2015) Combustion and Flame, 162 (6), pp. 2693-2704, DOI: 10.1016/j.combustflame.2015.04.002
- Salenbauch, S., Cuoci, A., Frassoldati, A., Saggese, C., Faravelli, T., Hasse, C. Modeling soot formation in premixed flames using an Extended Conditional Quadrature Method of Moments (2015) Combustion and Flame, 162 (6), pp. 2529-2543, DOI: 10.1016/j.combustflame.2015.03.002
- Frassoldati, A., D'Errico, G., Lucchini, T., Stagni, A., Cuoci, A., Faravelli, T., Onorati, A., Ranzi, E. Reduced kinetic mechanisms of diesel fuel surrogate for engine CFD simulations (2015) Combustion and Flame, 162 (10), pp. 3991-4007, DOI: 10.1016/j.combustflame.2015.07.039
- De Bruycker, R., Pyl, S.P., Reyniers, M.-F., Van Geem, K.M., Marin, G.B. Microkinetic model for the pyrolysis of methyl esters: From model compound to industrial biodiesel (2015) AIChE Journal, 61 (12), pp. 4309-4322, DOI: 10.1002/aic.14953

- Evans, M.J., Medwell, P.R., Tian, Z.F., Frassoldati, A., Cuoci, A., Stagni, A. Ignition characteristics in spatially zero-, one- and two-dimensional laminar ethylene flames (2015) 22nd AIAA Computational Fluid Dynamics Conference
- Galletti, C., Ferrarotti, M., Parente, A., Tognotti, L. Reduced NO formation models for CFD simulations of MILD combustion (2015) International Journal of Hydrogen Energy, 40 (14), pp. 4884-4897, DOI: 10.1016/j.ijhydene.2015.01.172