CT-PPS Motherboard registers library

Generated by Doxygen 1.8.10

Contents

Hier	archica	l Index			1
1.1	Class	Hierarchy			1
Clas	s Index				3
2.1	Class	List			3
Clas	s Docu	mentatior	n		5
3.1	PPSTi	mingMB::1	TDCStatus::ErrorType Struct Reference		5
	3.1.1	Detailed	Description		5
3.2	PPSTi	mingMB::1	TDCInternalCoreTest::HitData Struct Reference		6
3.3	PPSTi	mingMB::1	TDCInternalCoreTest::L1Data Struct Reference		6
3.4	PPSTi	mingMB::>	XMLHandler::PropertiesMap Class Reference		6
	3.4.1	Detailed	Description		7
3.5	PPSTi	mingMB::1	TDCBoundaryScan Class Reference		7
	3.5.1	Detailed	Description		8
3.6	PPSTi	mingMB::1	TDCControl Class Reference		8
	3.6.1	Detailed	Description		9
3.7	PPSTi	mingMB::1	TDCInternalCoreTest Class Reference		9
3.8	PPSTi	mingMB::1	TDCRegister Class Reference		11
	3.8.1	Detailed	Description		12
	3.8.2	Member	Function Documentation		12
		3.8.2.1	GetBits(uint16_t lsb, uint8_t size) const		12
		3.8.2.2	GetNumWords() const		13
		3.8.2.3	SetBits(uint16_t lsb, uint16_t word, uint8_t size)		13
3.9	PPSTi	mingMB::1	TDCSetup Class Reference		13
	3.9.1	Detailed	Description		19
	3.9.2	Member	Function Documentation		19
		3.9.2.1	GetRejectFIFOFull() const		19
		3.9.2.2	SetEnableRelative(const bool er=true)		19
		3.9.2.3			19
		3.9.2.4			20
		3.9.2.5	SetKeepToken(const bool kt=true)		20
	1.1 Class 2.1 Class 3.1 3.2 3.3 3.4 3.5 3.6 3.7 3.8	1.1 Class Class Index 2.1 Class Docu 3.1 PPSTi 3.1.1 3.2 PPSTi 3.4.1 3.5 PPSTi 3.5.1 3.6 PPSTi 3.6.1 3.7 PPSTi 3.8.1 3.8.2 3.9 PPSTi 3.9.1	Class Index 2.1 Class List Class Documentation 3.1 PPSTimingMB::	Class Index	Class Index

iv CONTENTS

Index				25
	3.12.1	Detailed [Description	23
3.12	PPSTimi	ngMB::X	MLHandler Class Reference	22
3.11	PPSTimi	ngMB::Tl	DCInternalCoreTest::TriggerData Struct Reference	22
	3.10.1	Detailed [Description	22
3.10	PPSTimi	ngMB::Tl	DCStatus Class Reference	21
	3	3.9.2.8	SetRejectFIFOFull(const bool rej=true)	20
	3	3.9.2.7	SetReadoutSpeedSelect(const ReadoutSpeed rss=RO_Fixed)	20
	3	3.9.2.6	SetMaxEventSize(int sz=-1)	20

Chapter 1

Hierarchical Index

1.1 Class Hierarchy

This inheritance list is sorted roughly, but not completely, alphabetically:

PPSTimingMB::TDCStatus::ErrorType	5
PPSTimingMB::TDCInternalCoreTest::HitData	6
PPSTimingMB::TDCInternalCoreTest::L1Data	6
PPSTimingMB::XMLHandler::PropertiesMap	6
PPSTimingMB::TDCRegister	11
PPSTimingMB::TDCBoundaryScan	7
PPSTimingMB::TDCControl	8
PPSTimingMB::TDCInternalCoreTest	9
PPSTimingMB::TDCSetup	
PPSTimingMB::TDCStatus	21
PPSTimingMB::TDCInternalCoreTest::TriggerData	22
PPSTimingMB::XMLHandler	22

2 Hierarchical Index

Chapter 2

Class Index

2.1 Class List

Here are the classes, structs, unions and interfaces with brief descriptions:

PPSTimingMB::TDCStatus::ErrorType	
Type of error encountered by the HPTDC	5
PPSTimingMB::TDCInternalCoreTest::HitData	6
PPSTimingMB::TDCInternalCoreTest::L1Data	6
PPSTimingMB::XMLHandler::PropertiesMap	
A map of properties retrieved from a parsed XML file	6
PPSTimingMB::TDCBoundaryScan	7
PPSTimingMB::TDCControl	
Control word to be sent to the HPTDC chip	8
PPSTimingMB::TDCInternalCoreTest	9
PPSTimingMB::TDCRegister	
General register object to interact with a HPTDC chip	11
PPSTimingMB::TDCSetup	
Setup word to be sent to the HPTDC chip	13
PPSTimingMB::TDCStatus	21
PPSTimingMB::TDCInternalCoreTest::TriggerData	22
PPSTimingMB::XMLHandler	
XML input/output handler	22

4 Class Index

Chapter 3

Class Documentation

3.1 PPSTimingMB::TDCStatus::ErrorType Struct Reference

Type of error encountered by the HPTDC.

```
#include <TDCStatus.h>
```

Public Member Functions

- ErrorType (uint16_t word)
- bool ParityError () const

Error related on the parity of any register/buffer.

• bool MeasurementError () const

Error related to the Vernier or Coarse measurement.

• bool GlobalError () const

Has any error occured?

Public Attributes

- bool Vernier
- bool Coarse
- · bool ChannelSelect
- · bool L1BufferParity
- bool TriggerFIFOParity
- bool TriggerMatchingState
- bool ReadoutFIFOParity
- bool ReadoutState
- bool SetupParity
- bool ControlParity
- bool JTAGInstruction

3.1.1 Detailed Description

Type of error encountered by the HPTDC.

The documentation for this struct was generated from the following file:

· include/TDCStatus.h

3.2 PPSTimingMB::TDCInternalCoreTest::HitData Struct Reference

Public Attributes

- uint32_t first_vernier
- uint32_t first_coarse1
- uint32_t first_coarse2
- · bool first_coarse1_parity
- · bool first_coarse2_parity
- bool first_edge_type
- · uint32 t second vernier
- uint32_t second_coarse1
- uint32_t second_coarse2
- bool second_coarse1_parity
- bool second_coarse2_parity
- bool second_edge_type

The documentation for this struct was generated from the following file:

• include/TDCInternalCoreTest.h

3.3 PPSTimingMB::TDCInternalCoreTest::L1Data Struct Reference

Public Attributes

- uint16_t edge_fine_time
- uint16_t edge_coarse_time
- bool edge_type
- uint16_t width
- uint16_t channel
- bool error
- · bool overflow_start
- · bool overflow_stop
- · bool separator
- · bool parity

The documentation for this struct was generated from the following file:

• include/TDCInternalCoreTest.h

3.4 PPSTimingMB::XMLHandler::PropertiesMap Class Reference

A map of properties retrieved from a parsed XML file.

#include <XMLHandler.h>

Public Member Functions

void AddProperty (const char *name, const char *value)

Feed a new key/value property to the map.

bool HasProperty (const char *name)

Check if a key is present in the map.

std::string GetProperty (const char *name)

Retrieve the (string) value associated with a key.

• unsigned int GetUIntProperty (const char *name)

Retrieve the (unsigned integer) value associated with a key.

3.4.1 Detailed Description

A map of properties retrieved from a parsed XML file.

The documentation for this class was generated from the following file:

· include/XMLHandler.h

3.5 PPSTimingMB::TDCBoundaryScan Class Reference

#include <TDCBoundaryScan.h>

Inheritance diagram for PPSTimingMB::TDCBoundaryScan:



Public Member Functions

- TDCBoundaryScan (const TDCBoundaryScan &bs)
- bool IsTokenOut () const
- · bool IsStrobeOut () const
- bool IsSerialOut () const
- bool IsTest () const
- bool IsError () const
- bool IsDataReady () const
- bool IsParallelEnabled () const
- bool HasParallelDataOut (unsigned short channel_id) const
- bool IsEncodedControl () const
- bool IsTrigger () const
- · bool HasTrigger () const
- · bool HasEventReset () const
- bool HasBunchReset () const
- · bool IsGettingData () const
- · bool IsSerialBypassIn () const
- bool IsSerialIn () const
- bool IsTokenBypassIn () const
- bool IsTokenIn () const
- bool IsReset () const

- · bool HasAuxiliaryClock () const
- bool HasClock () const
- · bool HasHit (unsigned short channel_id) const
- void SetConstantValues ()

Set all hardcoded values to this register.

void Dump () const

Printout all useful values of this status register into an output stream.

Additional Inherited Members

3.5.1 Detailed Description

Author

Laurent Forthomme laurent.forthomme@cern.ch

Date

24 Apr 2015 May 2016

The documentation for this class was generated from the following file:

· include/TDCBoundaryScan.h

3.6 PPSTimingMB::TDCControl Class Reference

Control word to be sent to the HPTDC chip.

```
#include <TDCControl.h>
```

Inheritance diagram for PPSTimingMB::TDCControl:



Public Types

- enum EnablePattern { OutputEnabled =0x5, OutputDisabled =0x4 }
- typedef enum PPSTimingMB::TDCControl::EnablePattern EnablePattern

Public Member Functions

- TDCControl (const TDCControl &c)
- TDCControl (const std::vector< uint8_t > &words)
- void **SetEnablePattern** (const EnablePattern &ep=OutputEnabled)
- EnablePattern GetEnablePattern () const
- void SetGlobalReset (const bool gr=true)
- bool GetGlobalReset () const
- void SetDLLReset (const bool dr=true)

- · bool GetDLLReset () const
- void SetPLLReset (const bool pr=true)
- bool GetPLLReset () const
- · void EnableChannel (unsigned int id)
- void EnableAllChannels ()
- · void DisableChannel (unsigned int id)
- void DisableAllChannels ()
- · bool IsChannelEnabled (unsigned int id) const
- void SetEnabledChannels (uint32_t ch)
- uint32 t GetEnabledChannels () const
- void **SetControlParity** (const bool cp=true)
- · bool GetControlParity () const
- void Dump (int verb=1, std::ostream &os=std::cout) const

Printout all useful values of this control register into an output stream.

void SetConstantValues ()

Ensure that the critical constant values are properly set in the register word.

• uint32_t **GetValue** (const TDCControlRegister &v)

Additional Inherited Members

3.6.1 Detailed Description

Control word to be sent to the HPTDC chip.

Object handling the control word provided by/to the HPTDC chip

Author

```
Laurent Forthomme laurent.forthomme@cern.ch
Lara Lloret Iglesias lara@cern.ch
```

Date

24 Apr 2015

The documentation for this class was generated from the following file:

• include/TDCControl.h

3.7 PPSTimingMB::TDCInternalCoreTest Class Reference

Inheritance diagram for PPSTimingMB::TDCInternalCoreTest:



Classes

- struct HitData
- struct L1Data
- struct TriggerData

Public Types

```
    enum CommonMatchingState {
        cmsIdle = 0x1, cmsHeader = 0x2, cmsLostHeader = 0x4, cmsError = 0x8,
        cmsTrailer = 0x10, cmsLostTrailer = 0x20, cmsSeparator = 0x40, cmsOccupancy = 0x80,
        cmsMatching = 0x100 }
    enum MatchingState {
        msInvalid = 0x0, msIdle = 0x1, msWriteOccupancy = 0x2, msActive = 0x4,
        msWaitingForSeparator = 0x8, msWaitEnd = 0x10 }
```

Public Member Functions

- TDCInternalCoreTest (const TDCInternalCoreTest &c)
- TDCInternalCoreTest (const std::vector< uint8_t > &words)
- CommonMatchingState GetCommonMatchingState () const
- TriggerData GetTriggerData () const
- MatchingState GetMatchingState (unsigned short group_id) const
- MatchingState GetMatchingStateGroup3 () const
- MatchingState GetMatchingStateGroup2 () const
- MatchingState GetMatchingStateGroup1 () const
- MatchingState GetMatchingStateGroup0 () const
- L1Data GetL1Data (unsigned short group id) const
- L1Data GetL1DataGroup3 () const
- L1Data GetL1DataGroup2 () const
- L1Data GetL1DataGroup1 () const
- L1Data GetL1DataGroup0 () const
- · bool GetL1Empty (unsigned short group id) const
- · bool GetL1EmptyGroup3 () const
- · bool GetL1EmptyGroup2 () const
- · bool GetL1EmptyGroup1 () const
- · bool GetL1EmptyGroup0 () const
- bool GetL1Ready (unsigned short group_id) const
- · bool GetL1ReadyGroup3 () const
- · bool GetL1ReadyGroup2 () const
- bool GetL1ReadyGroup1 () const
- bool GetL1ReadyGroup0 () const
- HitData GetHitData (unsigned short group_id) const
- · HitData GetHitDataGroup3 () const
- HitData GetHitDataGroup2 () const
- HitData GetHitDataGroup1 () const
- HitData GetHitDataGroup0 () const
- uint16_t GetHitChannel (unsigned short group_id) const
- uint16_t GetHitChannelGroup3 () const
- uint16_t GetHitChannelGroup2 () const
- uint16_t GetHitChannelGroup1 () const
- uint16 t GetHitChannelGroup0 () const
- · bool GetHitSelectError (unsigned short group id) const
- · bool GetHitSelectErrorGroup3 () const
- bool GetHitSelectErrorGroup2 () const
- bool GetHitSelectErrorGroup1 () const
- bool GetHitSelectErrorGroup0 () const
- bool GetHitLoad (unsigned short group_id) const
- bool GetHitLoadGroup3 () const
- bool GetHitLoadGroup2 () const
- bool GetHitLoadGroup1 () const

- bool GetHitLoadGroup0 () const
- void Dump (int verb=1, std::ostream &os=std::cout) const
- void SetConstantValues ()

Ensure that the critical constant values are properly set in the register word.

Additional Inherited Members

The documentation for this class was generated from the following file:


include/TDCInternalCoreTest.h

3.8 PPSTimingMB::TDCRegister Class Reference

General register object to interact with a HPTDC chip.

#include <TDCRegister.h>

Inheritance diagram for PPSTimingMB::TDCRegister:

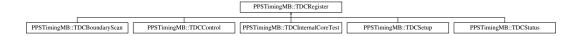

Public Types

typedef uint16 t bit

LSB index.

• typedef uint32 t word t

Unit of the TDC register word to be successfully contained on any machine.

Public Member Functions

• TDCRegister (const unsigned int size)

Initialise an empty register.

TDCRegister (const unsigned int size, const TDCRegister &r)

Initialise and fill a register.

 $\bullet \ \ \mathsf{TDCRegister} \ (\mathsf{const} \ \mathsf{unsigned} \ \mathsf{int} \ \mathsf{size}, \ \mathsf{const} \ \mathsf{std} \\ :: \mathsf{vector} < \mathsf{uint8_t} > \& \mathsf{words}, \ \mathsf{bool} \ \mathsf{reversed=false}) \\$

Initialise and fill a register.

virtual ∼TDCRegister ()

Destroy the register and its content.

• TDCRegister & operator= (const TDCRegister &r)

Assign values from another register to this one.

void SetWord (const unsigned int i, const word_t word)

Set one bit(s) subset in the register word.

· word t GetWord (const unsigned int i) const

Retrieve one subset from the register word.

word_t * GetWords () const

Retrieve the whole array of sub-words composing this register.

std::vector< uint8 t > GetBytesVector () const

Retrieve a vector of 8-bit words composing this register.

uint8_t GetNumWords () const

Number of words in the register.

• void DumpRegister (unsigned short verb=1, std::ostream &os=std::cout, const bit max_bits=-1) const Printout all useful information handled by the register.

• virtual void SetConstantValues ()=0

Ensure that the critical constant values are properly set in the register word.

• template<class T >

uint32_t **GetValue** (const T &)

Protected Member Functions

• void SetBits (uint16 t lsb, uint16 t word, uint8 t size)

Set bits in the register word.

uint16_t GetBits (uint16_t lsb, uint8_t size) const

Extract bits from the register word.

• void Clear ()

Set all bits in this register to '0'.

Protected Attributes

word_t * fWord

Pointer to this register's word.

unsigned int fNumWords

Number of words to fit the fWordSize bits of this register to this object.

• unsigned int fWordSize

Number of bits in this register.

3.8.1 Detailed Description

General register object to interact with a HPTDC chip.

Author

 $\textbf{Laurent Forthomme} \ \texttt{laurent.forthomme} \\ \texttt{@cern.ch}$

Date

24 Apr 2015

3.8.2 Member Function Documentation

3.8.2.1 uint16_t PPSTimingMB::TDCRegister::GetBits (uint16_t lsb, uint8_t size) const [protected]

Extract bits from the register word.

Extract a fixed amount of bits from the full register word

Parameters

in	Isb	Least significant bit of the word to retrieve

in	size	Size of the word to retrieve

3.8.2.2 uint8_t PPSTimingMB::TDCRegister::GetNumWords()const [inline]

Number of words in the register.

Return the number of words making up the full register word.

3.8.2.3 void PPSTimingMB::TDCRegister::SetBits (uint16_t lsb, uint16_t word, uint8_t size) [protected]

Set bits in the register word.

Set a fixed amount of bits in the full register word

Parameters

	in	Isb	Least significant bit of the word to set
ĺ	in	word	Word to set
Ī	in	size	Size of the word to set

The documentation for this class was generated from the following file:

· include/TDCRegister.h

3.9 PPSTimingMB::TDCSetup Class Reference

Setup word to be sent to the HPTDC chip.

#include <TDCSetup.h>

Inheritance diagram for PPSTimingMB::TDCSetup:



Public Types

```
    enum EdgeResolution {
    E_100ps =0, E_200ps, E_400ps, E_800ps,
    E_1p6ns, E_3p12ns, E_6p25ns, E_12p5ns }
    enum PeadTime ( DT_5ns_0 DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_10ns_DT_1
```

- enum DeadTime { DT_5ns =0, DT_10ns, DT_30ns, DT_100ns }
- enum WidthResolution {

```
W_100ps =0, W_200ps, W_400ps, W_800ps, W_1p6ns, W_3p2ns, W_6p25ns, W_12p5ns, W_25ns, W_50ns, W_100ns, W_200ns, W_400ns, W_800ns }
```

• enum EnabledError {

 $\label{lem:vernierError} \begin{tabular}{ll} \textbf{VernierError} = 0x1, & \textbf{CoarseError} = 0x2, & \textbf{ChannelSelectError} = 0x4, & \textbf{L1BufferParityError} = 0x8, \\ \textbf{TriggerFIFOParityError} & = 0x10, & \textbf{TriggerMatchingError} & = 0x20, & \textbf{ReadoutFIFOParityError} & = 0x40, \\ \textbf{ReadoutStateError} = 0x80, & \textbf{ReadoutStateError} & = 0x80, \\ \end{tabular}$

 $\textbf{SetupParityError} = 0 \times 100, \ \textbf{ControlParityError} = 0 \times 200, \ \textbf{JTAGInstructionParityError} = 0 \times 400 \ \}$

• enum DLLSpeedMode { DLL_40MHz =0x0, DLL_160MHz =0x1, DLL_320MHz =0x2, DLL_Illegal =0x3 }

```
• enum SerialClockSource { Serial_pll_clock_80 =0x0, Serial_pll_clock_160 =0x1, Serial_pll_clock_40 =0x2, Serial_aux_clock =0x3 }
```

- enum IOClockSource { IO_clock_40 =0x0, IO_pll_clock_80 =0x1, IO_pll_clock_160 =0x2, IO_aux_clock =0x3 }
- enum CoreClockSource { Core_clock_40 =0x0, Core_pll_clock_80 =0x1, Core_pll_clock_160 =0x2, Core aux clock =0x3 }
- enum **DLLClockSource** {

```
DLL_clock_40 =0x0, DLL_pll_clock_40 =0x1, DLL_pll_clock_160 =0x2, DLL_pll_clock_320 =0x3, DLL_aux_clock =0x4 }
```

- enum ReadoutSpeed { RO_Fixed =0x0, RO_pll_80Mbits_s =0x1 }
- enum SerialStrobeType { SS_NoStrobe =0x0, SS_DSStrobe =0x1, SS_LeadingTrailingStrobe =0x2, S←
 S_LeadingEdge =0x3 }
- enum ReadoutSingleCycleSpeed {

```
\label{eq:rsc_40Mbits_s = 0x0, RSC_20Mbits_s = 0x1, RSC_10Mbits_s = 0x2, RSC_5Mbits_s = 0x3, \\ RSC_2p5Mbits_s = 0x4, RSC_1p25Mbits_s = 0x5, RSC_625kbits_s = 0x6, RSC_312p5kbits_s = 0x7} \\ \}
```

Public Member Functions

- TDCSetup (const TDCSetup &c)
- TDCSetup (const std::vector< uint8_t > &v, bool reverse=false)
- void SetTest (const bool test=true)
- bool IsTest () const
- void SetEnableErrorMark (const bool em)

Mark events with error if global error signal is set.

- · bool GetEnableErrorMark () const
- void SetEnableErrorBypass (const bool eb)

Bypass TDC chip if global error signal is set.

- bool GetEnableErrorBypass () const
- void SetEnableError (const uint16_t &err)

Enable internal error types for generation of global error signals.

- uint16 t GetEnableError () const
- void SetEnableSerial (const bool es)

Enable of serial read-out (otherwise parallel read-out)

- bool GetEnableSerial () const
- void SetEnableJTAGReadout (const bool jr)

Enable of read-out via JTAG.

- bool GetEnableJTAGReadout () const
- void SetReadoutFIFOSize (int rfs)

Effective size of readout FIFO.

- int GetReadoutFIFOSize () const
- void SetRejectCountOffset (uint16_t rco)

Set the offset in reject counter (defines reject latency together with coarse count offset)

• uint16_t GetRejectCountOffset () const

Extract the offset in reject counter.

void SetSearchWindow (uint16_t sw)

Set the search window (in multiples of clock cycles: 0=25 ns, 1=50 ns, ...)

uint16_t GetSearchWindow () const

Extract the search window (in multiples of clock cycles: 0=25 ns, 1=50 ns, ...)

void SetMatchWindow (uint16_t mw)

Set the matching window (in multiples of clock cycles: 0=25 ns, 1=50 ns, ...)

· uint16 t GetMatchWindow () const

Extract the matching window (in multiples of clock cycles: 0=25 ns, 1=50 ns, ...)

void SetEdgeResolution (const EdgeResolution r)

- EdgeResolution GetEdgeResolution () const
- void SetMaxEventSize (int sz=-1)

Set the maximum number of hits per event.

• uint8_t GetMaxEventSize () const

Extract the maximum number of hits per event.

void SetRejectFIFOFull (const bool rej=true)

Reject hits when readout FIFO full.

· bool GetRejectFIFOFull () const

Are hits rejected when readout FIFO is full?

void SetEnableReadoutOccupancy (const bool ro=true)

Enable the readout of buffer occupancies for each event (for debugging purposes)

- bool GetEnableReadoutOccupancy () const
- void SetEnableReadoutSeparator (const bool ro=true)

Enable the readout of separators for each event (for debugging purposes, valid if readout of occupancies is enabled)

- bool GetEnableReadoutSeparator () const
- void SetEventCountOffset (uint16 t eco)

Set offset for the event counter.

- uint16_t GetEventCountOffset () const
- void SetTriggerCountOffset (uint16 t tco)

Set offset for the trigger time tag counter to set effective trigger latency.

· uint16_t GetTriggerCountOffset () const

Extract trigger time tag count offset.

void SetChannelOffset (int channel, uint16 t offset)

Set the time offset for one single channel.

uint16_t GetChannelOffset (int channel) const

Return the offset for one single channel.

void SetAllChannelsOffset (uint16_t offset)

Set the time offset for all channels.

void SetCoarseCountOffset (uint16_t cco)

Set offset for the coarse time counter.

uint16_t GetCoarseCountOffset () const

Extract offset for the coarse time counter.

void SetDLLAdjustment (int tap, uint8_t adj)

Set the DLL taps adjustments with a resolution of \sim 10 ps.

uint8_t GetDLLAdjustment (int tap) const

Set the adjustment of DLL taps.

· void SetAllTapsDLLAdjustment (uint8_t adj)

Extract the adjustment of DLL taps.

- void SetDLLAdjustmentWord (uint16_t word)
- uint16_t GetDLLAdjustmentWord () const
- void SetRCAdjustment (int tap, uint8_t adj)

Set the adjustment of the RC delay line.

uint8_t GetRCAdjustment (int tap)

Extract the adjustment of the RC delay line.

- void SetRCAdjustmentWord (uint16_t word)
- uint16 t GetRCAdjustmentWord () const
- void SetWidthResolution (const WidthResolution r)

Set the pulse width resolution when paired measurements are performed.

· WidthResolution GetWidthResolution () const

Extract the pulse width resolution when paired measurements are performed.

• void SetVernierOffset (const uint8_t vo)

Set the offset in vernier decoding.

• uint8_t GetVernierOffset () const

Extract the offset in vernier decoding.

void SetDeadTime (const DeadTime dt)

Channel dead time between hits.

- DeadTime GetDeadTime () const
- void SetTestInvert (const bool ti=true)

Automatic inversion of test pattern. Only used during production testing.

- bool GetTestInvert () const
- void SetTestMode (const bool tm=true)

Test mode where hit data are taken from coretest. Only used during production testing.

- bool GetTestMode () const
- void SetTrailingMode (const bool trail=true)

Enable/disable the detection of trailing edges.

bool GetTrailingMode () const

Extract the status for the detection of trailing edges.

void SetLeadingMode (const bool lead=true)

Enable the detection of leading edges.

· bool GetLeadingMode () const

Extract the status for the detection of leading edges.

void SetTriggerMatchingMode (const bool trig=true)

Set the enable status of trigger matching mode.

bool GetTriggerMatchingMode () const

Extract the enable status of trigger matching mode.

void SetEdgesPairing (const bool pair=true)

Enable the pairing of leading and trailing edges (overrides individual enable of leading/trailing edges)

- bool GetEdgesPairing () const
- void SetSetupParity (const bool sp=true)

Set the parity of setup data (should be an even parity)

bool GetSetupParity () const

Extract the parity of setup data (should be an even parity)

void SetConstantValues ()

Ensure that the critical constant values are properly set in the setup word.

· uint16_t GetTriggerLatency () const

Effective trigger latency in number of clock cycles (when no counter roll-over is used)

void SetTDCId (const uint8_t id=0x0)

Set the unique identifier of the TDC object on the board.

• uint16 t GetTDCld () const

Get the unique identifier of the TDC object on the board.

void SetEnableTTLSerial (const bool ts=true)

Enable LV TTL inputs on serial registers, and disable their drivers.

- · bool GetEnableTTLSerial () const
- void SetEnableTTLControl (const bool tc=true)

Enable LV TTL inputs on control registers.

- bool GetEnableTTLControl () const
- void SetEnableTTLReset (const bool tr=true)

Enable LV TTL input on reset, otherwise uses LVDS input levels.

- bool GetEnableTTLReset () const
- void SetEnableTTLClock (const bool tc=true)

Enable LV TTL inputs on: clk, aux_clock, otherwise uses LVDS input levels.

• bool GetEnableTTLClock () const

void SetEnableTTLHit (const bool th=true)

Enable LV TTL input on hit[31:0], otherwise uses LVDS input levels.

- · bool GetEnableTTLHit () const
- void SetRollOver (const uint16 t ro=0xFFF)

Counter roll over value, defining maximal count value from where counters will be reset to 0.

- uint16_t GetRollOver () const
- void SetPLLControl (const uint8_t charge_pump_current=0x4, const bool power_down_mode=false, const bool enable_test_outputs=false, const bool invert_connection_to_status=false)

Control of PLL.

- void SetPLLControlWord (uint16 t word)
- uint16_t GetPLLControlWord () const
- void SetDLLMode (const DLLSpeedMode dsm)

Selection of DLL speed mode.

- DLLSpeedMode GetDLLMode () const
- void SetModeRC (const bool mr=true)

Enable of RR delay lines mode (in very high resolution mode); only for channels 0-4-8-12-16-20-24-28 active.

- bool GetModeRC () const
- void SetModeRCCompression (const bool mrc=true)

Perform RC interpolation on-chip (only valid in very high resolution mode)

- bool GetModeRCCompression () const
- void SetEnableRelative (const bool er=true)
- bool GetEnableRelative () const
- void SetReadoutSingleCycleSpeed (const ReadoutSingleCycleSpeed rscs=RSC_40Mbits_s)

Serial transmission speed in single cycle mode.

- ReadoutSingleCycleSpeed GetReadoutSingleCycleSpeed () const
- void SetSerialDelay (const uint8_t sd=0x0)

Programmable delay of serial input, in time unit \sim 1 ns.

- uint8_t GetSerialDelay () const
- void SetStrobeSelect (const SerialStrobeType ss=SS_NoStrobe)
- SerialStrobeType GetStrobeSelect () const
- void SetReadoutSpeedSelect (const ReadoutSpeed rss=RO_Fixed)

Selection of serial read-out speed.

- ReadoutSpeedSelect () const
- void SetTokenDelay (const uint8_t td=0x0)

Programmable delay of token input, in time unit \sim 1 ns.

- uint8_t GetTokenDelay () const
- void SetEnableLocalTrailer (const bool elt=true)

Enable of local trailers in read-out.

- · bool GetEnableLocalTrailer () const
- void SetEnableLocalHeader (const bool elh=true)

Enable of local headers in read-out.

- bool GetEnableLocalHeader () const
- void SetEnableGlobalTrailer (const bool egt=true)

Enable of global trailers in read-out (only valid for master TDC)

- · bool GetEnableGlobalTrailer () const
- void SetEnableGlobalHeader (const bool egh=true)

Enable of global headers in read-out (only valid for master TDC)

- bool GetEnableGlobalHeader () const
- void SetKeepToken (const bool kt=true)
- bool GetKeepToken () const
- void **SetMaster** (const bool m=true)
- bool GetMaster () const

- void SetEnableBytewise (const bool seb=true)
- bool GetEnableBytewise () const
- void SetBypassInputs (const bool sbi=true)

Select serial in and token in from bypass inputs.

- bool GetBypassInputs () const
- void SetEnableOverflowDetect (const bool eod=true)

Enable overflow detection of L1 buffers (should always be enabled!)

- bool GetEnableOverflowDetect () const
- void SetEnableAutomaticReject (const bool ear=true)

Enable of automatic rejection (should always be enabled if trigger matching mode!)

- bool GetEnableAutomaticReject () const
- void SetEnableSetCountersOnBunchReset (const bool escobr=true)

Enable all counters to be set on bunch count reset.

- bool GetEnableSetCountersOnBunchReset () const
- void SetEnableMasterResetCode (const bool emrc=true)

Enable master reset code on encoded control.

- bool GetEnableMasterResetCode () const
- void SetEnableMasterResetOnEventReset (const bool emroer=true)

Enable master reset of whole TDC on event reset.

- bool GetEnableMasterResetOnEventReset () const
- void SetEnableResetChannelBufferWhenSeparator (const bool ercbws=true)

Enable reset channel buffers when separator.

- bool GetEnableResetChannelBufferWhenSeparator () const
- void SetEnableSeparatorOnEventReset (const bool esoer=true)

Enable generation of separator on event reset.

- bool GetEnableSeparatorOnEventReset () const
- void SetEnableSeparatorOnBunchReset (const bool esobr=true)

Enable generation of separator on bunch reset.

- bool GetEnableSeparatorOnBunchReset () const
- void SetEnableDirectEventReset (const bool eder=true)

Enable of direct event reset input pin (1), otherwise taken from encoded control.

- bool GetEnableDirectEventReset () const
- void SetEnableDirectBunchReset (const bool edbr=true)

Enable of direct bunch reset input pin (1), otherwise taken from encoded control.

- · bool GetEnableDirectBunchReset () const
- void SetEnableDirectTrigger (const bool edt=true)

Enable of direct trigger input pin.

- bool GetEnableDirectTrigger () const
- void SetLowPowerMode (const bool lpm=true)

Low power mode of channel buffers.

- bool GetLowPowerMode () const
- · void SetDLLControl (const uint8 t dc)

Control of DLL (DLL charge pump levels)

- · uint8_t GetDLLControl () const
- void SetSerialClockSource (const SerialClockSource scs)

Selection of source for serial clock.

- SerialClockSource GetSerialClockSource () const
- void SetIOClockSource (const IOClockSource ics)

Selection of clock source for I/O signals.

- IOClockSource GetIOClockSource () const
- void SetCoreClockSource (const CoreClockSource ccs)

Selection of clock source for internal logic.

- CoreClockSource GetCoreClockSource () const
- void SetDLLClockSource (const DLLClockSource dcs)

Selection of clock source for DLL.

- DLLClockSource GetDLLClockSource () const
- void Dump (int verb=1, std::ostream &os=std::cout) const

Printout all useful values of this setup register into an output stream.

- std::string GetXML () const
- uint32 t GetValue (const TDCSetupRegister &v)

Additional Inherited Members

3.9.1 Detailed Description

Setup word to be sent to the HPTDC chip.

Object handling the setup word provided by/to the HPTDC chip

Author

```
Laurent Forthomme laurent.forthomme@cern.ch
Lara Lloret Iglesias lara@cern.ch
```

Date

16 Apr 2015 May 2016

3.9.2 Member Function Documentation

```
3.9.2.1 bool PPSTimingMB::TDCSetup::GetRejectFIFOFull ( ) const [inline]
```

Are hits rejected when readout FIFO is full?

Extract whether or not hits are rejected once FIFO is full.

```
3.9.2.2 void PPSTimingMB::TDCSetup::SetEnableRelative ( const bool er = true ) [inline]
```

Enable read-out of relative time to trigger time tag. Only valid when using trigger matching mode.

```
3.9.2.3 void PPSTimingMB::TDCSetup::SetEnableTTLControl ( const bool tc = true ) [inline]
```

Enable LV TTL inputs on control registers.

Enable LV TTL input on:

- trigger,
- · bunch_reset,
- · event_reset,
- · encoded_control, otherwise uses LVDS input levels.

3.9.2.4 void PPSTimingMB::TDCSetup::SetEnableTTLSerial (const bool ts = true) [inline]

Enable LV TTL inputs on serial registers, and disable their drivers.

Enable LV TTL input on:

- · serial_in,
- · serial_bypass_in,
- · token_in,
- token_bypass_in, otherwise uses LVDS input levels. Disable LVDS drivers on:
- · serial_out,
- · strobe out,
- token_out.

```
3.9.2.5 void PPSTimingMB::TDCSetup::SetKeepToken ( const bool kt = true ) [inline]
```

Keep token until end of event or no more data, otherwise pass token after each word read. Must be enabled when using trigger matching.

```
3.9.2.6 void PPSTimingMB::TDCSetup::SetMaxEventSize (int sz = -1) [inline]
```

Set the maximum number of hits per event.

Set the maximum number of hits that can be recorded for each event. It is always rounded to the next power of 2 (in the range 0-128), and if lower than 0 or bigger than 128 then set to unimited.

3.9.2.7 void PPSTimingMB::TDCSetup::SetReadoutSpeedSelect (const ReadoutSpeed rss = RO_Fixed) [inline]

Selection of serial read-out speed.

Parameters

in	rss	
		 0: Selection of serial read-out speed (as defined by setup[19:17], Set
		• 1: 80 Mbits/s (PLL lock required)

3.9.2.8 void PPSTimingMB::TDCSetup::SetRejectFIFOFull (const bool rej = true) [inline]

Reject hits when readout FIFO full.

Set whether or not hits are rejected once FIFO is full.

The documentation for this class was generated from the following file:

include/TDCSetup.h

3.10 PPSTimingMB::TDCStatus Class Reference

#include <TDCStatus.h>

Inheritance diagram for PPSTimingMB::TDCStatus:



Classes

struct ErrorType

Type of error encountered by the HPTDC.

Public Types

typedef struct PPSTimingMB::TDCStatus::ErrorType ErrorType

Type of error encountered by the HPTDC.

Public Member Functions

• TDCStatus ()

Initialise a status register with all hardcoded values.

TDCStatus (const std::vector< uint8_t > &words)

Initialise a status register from a vector of 8-bit words.

void SetConstantValues ()

Set the hardcoded values to the register.

• ErrorType Error () const

Retrieve the list of errors monitored.

• bool HasToken () const

TDC have read-out token.

uint16_t FIFOOccupancy () const

Occupancy of readout FIFO.

· bool FIFOFull () const

It the readout FIFO full?

bool FIFOEmpty () const

It the readout FIFO empty?

• uint32_t L1Occupancy (unsigned short group=-1) const

Occupancy of L1 buffer in channels of a group (or all groups)

• uint16_t TriggerFIFOOccupancy () const

Occupancy of trigger FIFO.

• bool TriggerFIFOFull () const

Is the trigger FIFO full?

• bool TriggerFIFOEmpty () const

Is the trigger FIFO empty?

• bool DLLLock () const

Is the DLL in lock state?

void Dump (int verb=1, std::ostream &os=std::cout) const

Printout all useful values of this status register into an output stream.

Friends

std::ostream & operator<< (std::ostream &out, const ErrorType &err)
 Printout the error type(s) into the output stream.

Additional Inherited Members

3.10.1 Detailed Description

Author

```
Laurent Forthomme laurent.forthomme@cern.ch
Lara Lloret Iglesias lara@cern.ch
```

Date

```
27 Apr 2015
May 2016
```

The documentation for this class was generated from the following file:

· include/TDCStatus.h

3.11 PPSTimingMB::TDCInternalCoreTest::TriggerData Struct Reference

Public Attributes

- uint16_t bunch_id
- uint16_t event_id
- · bool separator
- · bool trigger_lost
- bool parity

The documentation for this struct was generated from the following file:

• include/TDCInternalCoreTest.h

3.12 PPSTimingMB::XMLHandler Class Reference

```
XML input/output handler.
```

```
#include <XMLHandler.h>
```

Classes

class PropertiesMap

A map of properties retrieved from a parsed XML file.

Public Member Functions

- std::string WriteRegister (const TDCControl &r)
- std::string WriteRegister (const TDCSetup &r)
- void ReadRegister (std::string, TDCControl *c)
- void ReadRegister (std::string, TDCSetup *s)

3.12.1 Detailed Description

XML input/output handler.

Author

Laurent Forthomme laurent.forthomme@cern.ch

Date

23 May 2016

The documentation for this class was generated from the following file:

• include/XMLHandler.h

Index

```
GetBits
    PPSTimingMB::TDCRegister, 12
GetNumWords
    PPSTimingMB::TDCRegister, 13
GetRejectFIFOFull
    PPSTimingMB::TDCSetup, 19
PPSTimingMB::TDCBoundaryScan, 7
PPSTimingMB::TDCControl, 8
PPSTimingMB::TDCInternalCoreTest, 9
PPSTimingMB::TDCInternalCoreTest::HitData, 6
PPSTimingMB::TDCInternalCoreTest::L1Data, 6
PPSTimingMB::TDCInternalCoreTest::TriggerData, 22
PPSTimingMB::TDCRegister, 11
    GetBits, 12
    GetNumWords, 13
    SetBits, 13
PPSTimingMB::TDCSetup, 13
    GetRejectFIFOFull, 19
    SetEnableRelative, 19
    SetEnableTTLControl, 19
    SetEnableTTLSerial, 19
    SetKeepToken, 20
    SetMaxEventSize, 20
    SetReadoutSpeedSelect, 20
    SetRejectFIFOFull, 20
PPSTimingMB::TDCStatus, 21
PPSTimingMB::TDCStatus::ErrorType, 5
PPSTimingMB::XMLHandler, 22
PPSTimingMB::XMLHandler::PropertiesMap, 6
SetBits
    PPSTimingMB::TDCRegister, 13
SetEnableRelative
    PPSTimingMB::TDCSetup, 19
SetEnableTTLControl
    PPSTimingMB::TDCSetup, 19
SetEnableTTLSerial
    PPSTimingMB::TDCSetup, 19
SetKeepToken
    PPSTimingMB::TDCSetup, 20
SetMaxEventSize
    PPSTimingMB::TDCSetup, 20
SetReadoutSpeedSelect
    PPSTimingMB::TDCSetup, 20
SetRejectFIFOFull
    PPSTimingMB::TDCSetup, 20
```