Lecture 4 - PN Junction and MOS Electrostatics (I)

SEMICONDUCTOR ELECTROSTATICS IN THERMAL EQUILIBRIUM

February 13, 2003

Contents:

- 1. Non-uniformly doped semiconductor in thermal equilibrium
- 2. Quasi-neutral situation
- 3. Relationships between $\phi(x)$ and equilibrium carrier concentrations (Boltzmann relations), "60 mV Rule"

Reading assignment:

Howe and Sodini, Ch. 3, $\S\S3.1-3.2$

Announcements:

Spare handouts available on the web and outside TA's office (Rm. 24-320).


Deadline for all assignments: Friday, 1 PM in 26-310.

Key questions

- Is it possible to have an electric field inside a semiconductor in thermal equilibrium?
- If there is a doping gradient in a semiconductor, what is the resulting majority carrier concentration in thermal equilibrium?

1. Non-uniformly doped semiconductor in thermal equilibrium

Consider first *uniformly doped* n-type Si in thermal equilibrium:

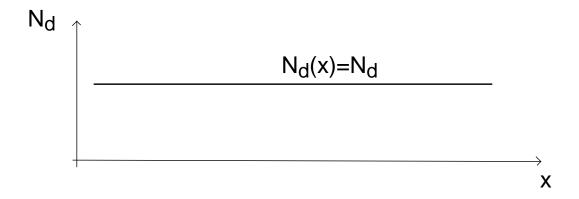


n-type \Rightarrow lots of electrons, few holes \Rightarrow focus on electrons

$$n_o = N_d$$
 independent of x

Volume charge density $[C/cm^3]$:

$$\rho = q(N_d - n_o) = 0$$


Next, consider piece of n-type Si in thermal equilibrium with non-uniform dopant distribution:

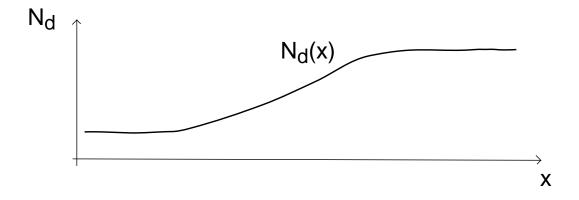

What is the resulting electron concentration in thermal equilibrium?

Option 1: Every donor gives out one electron \Rightarrow

$$n_o(x) = N_d(x)$$

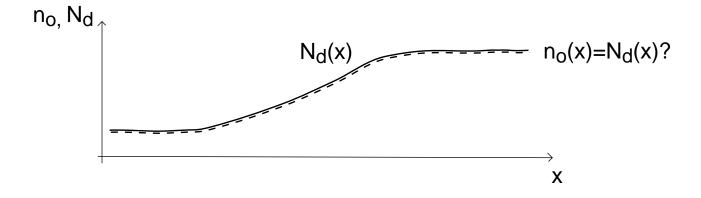


Gradient of electron concentration:

- \Rightarrow net electron diffusion
- \Rightarrow not thermal equilibrium!

Option 2: Electron concentration uniform in space:

$$n_o = n_{ave} \neq f(x)$$

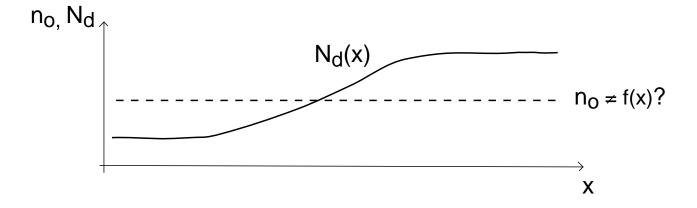

Think about space charge density:

$$\rho(x) = q[N_d(x) - n_o(x)]$$

If
$$N_d(x) \neq n_o(x) \Rightarrow \rho(x) \neq 0$$


 \Rightarrow electric field
 \Rightarrow net electron drift
 \Rightarrow not thermal equilibrium!

Option 3: Demand $J_e = 0$ in thermal equilibrium (and $J_h = 0$ too) at every $x \Rightarrow$

Diffusion precisely balances drift:

$$J_e(x) = J_e^{drift}(x) + J_e^{diff}(x) = 0$$

What is $n_o(x)$ that satisfies this condition?

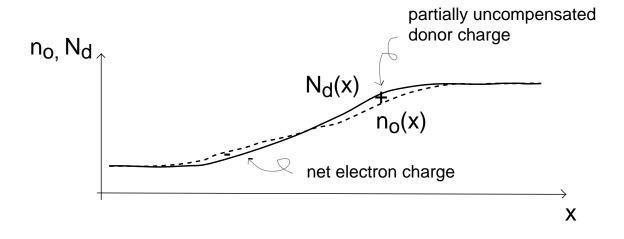


In general, then:

$$n_o(x) \neq N_d(x)$$

What are the implications of this?

• Space charge density:

$$\rho(x) = q[N_d(x) - n_o(x)]$$

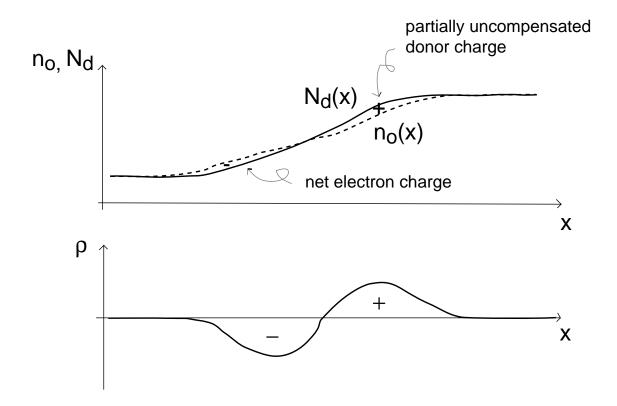


• Electric field:

Gauss' equation:

$$\frac{dE}{dx} = \frac{\rho}{\epsilon_s}$$

Integrate from x = 0 to x:

$$E(x) - E(0) = \frac{1}{\epsilon_s} \int_0^x \rho(x) dx$$

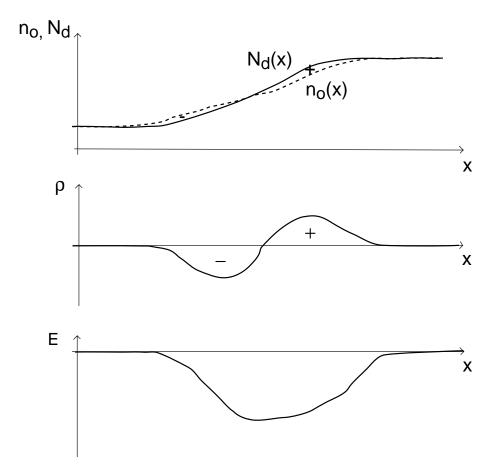


• Electrostatic potential:

$$\frac{d\phi}{dx} = -E$$

Integrate from x = 0 to x:

$$\phi(x) - \phi(0) = -\int_0^x E(x)dx$$

Need to select reference (physics is in potential difference, not in absolute value!); select $\phi(x=0) = \phi_{ref}$:

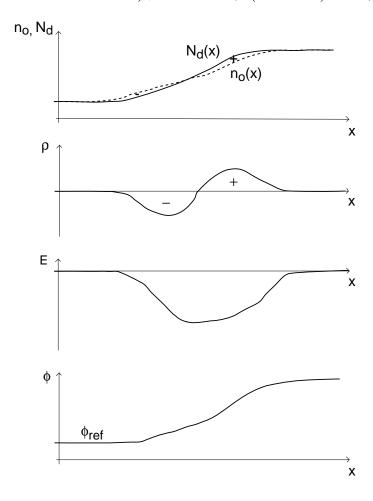

Given $N_d(x)$, want to know $n_o(x)$, $\rho(x)$, E(x), and $\phi(x)$.

Equations that describe problem:

$$J_e = q\mu_n n_o E + q D_n \frac{dn_o}{dx} = 0$$

$$\frac{dE}{dx} = \frac{q}{\epsilon_s}(N_d - n_o)$$

Express them in terms of ϕ :

$$-q\mu_n n_o \frac{d\phi}{dx} + qD_n \frac{dn_o}{dx} = 0 \tag{1}$$

$$\frac{d^2\phi}{dx^2} = \frac{q}{\epsilon_s}(n_o - N_d) \tag{2}$$

Plug [1] into [2]:

$$\frac{d^2(\ln n_o)}{dx^2} = \frac{q^2}{\epsilon_s kT}(n_o - N_d) \tag{3}$$

One equation with one unknown. Given $N_d(x)$, can solve for $n_o(x)$ and all the rest, but...

... no analytical solution for most situations!

2. Quasi-neutral situation

$$\frac{d^2(\ln n_o)}{dx^2} = \frac{q^2}{\epsilon_s kT}(n_o - N_d)$$


If $N_d(x)$ changes slowly with x:

 $\Rightarrow n_o(x)$ also changes slowly with x

$$\Rightarrow \frac{d^2(\ln n_o)}{dx^2}$$
 small

$$\implies n_o(x) \simeq N_d(x)$$

 $n_o(x)$ tracks $N_d(x)$ well \Rightarrow minimum space charge \Rightarrow semiconductor is quasi-neutral

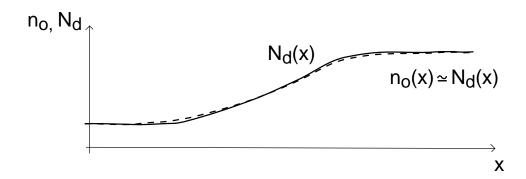

Quasi-neutrality good if:

$$\left|\frac{n_o - N_d}{n_o}\right| \ll 1$$
 or $\left|\frac{n_o - N_d}{N_d}\right| \ll 1$

3. Relationships between $\phi(x)$ and equilibrium carrier concentrations (Boltzmann relations)

From [1]:

$$\frac{\mu_n}{D_n}\frac{d\phi}{dx} = \frac{1}{n_o}\frac{dn_o}{dx}$$

Using Einstein relation:

$$\frac{q}{kT}\frac{d\phi}{dx} = \frac{d(\ln n_o)}{dx}$$

Integrate:

$$\frac{q}{kT}(\phi - \phi_{ref}) = \ln n_o - \ln n_o(ref) = \ln \frac{n_o}{n_o(ref)}$$

Then:

$$n_o = n_o(ref)e^{q(\phi - \phi_{ref})/kT}$$

Any reference is good.

In 6.012,
$$\phi_{ref} = 0$$
 at $n_o(ref) = n_i$.

Then:

$$n_o = n_i e^{q\phi/kT}$$

If do same with holes (starting with $J_h = 0$ in thermal equilibrium, or simply using $n_o p_o = n_i^2$):

$$p_o = n_i e^{-q\phi/kT}$$

Can rewrite as:

$$\phi = \frac{kT}{q} \ln \frac{n_o}{n_i}$$

and

$$\phi = -\frac{kT}{q} \ln \frac{p_o}{n_i}$$

\square "60 mV" Rule:

At room temperature for Si:

$$\phi = (25 \ mV) \ln \frac{n_o}{n_i} = (25 \ mV) \ln(10) \log \frac{n_o}{n_i}$$

Or

$$\phi \simeq (60 \ mV) \log \frac{n_o}{10^{10}}$$

For every decade of increase in n_o , ϕ increases by 60~mV at 300K.

• Example 1:

$$n_o = 10^{18} \ cm^{-3} \implies \phi = (60 \ mV) \times 8 = 480 \ mV$$

With holes:

$$\phi = -(25 \ mV) \ln \frac{p_o}{n_i} = -(25 \ mV) \ln(10) \log \frac{p_o}{n_i}$$

Or


$$\phi \simeq -(60 \ mV) \log \frac{p_o}{10^{10}}$$

• Example 2:

$$n_o = 10^{18} \ cm^{-3} \implies p_o = 10^2 \ cm^{-3}$$

$$\Rightarrow \phi = -(60~mV) \times (-8) = 480~mV$$

Relationship between ϕ and n_o and p_o :

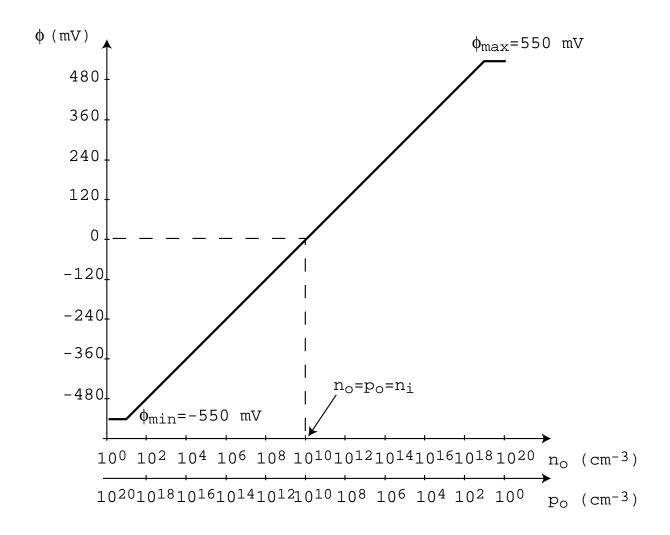

Note: ϕ cannot exceed 550 mV or be smaller than $-550 \, mV$ (beyond these points, different physics come into play).

• EXAMPLE 3: Compute potential difference in thermal equilibrium between region where $n_o = 10^{17} cm^{-3}$ and region where $p_o = 10^{15} cm^{-3}$:

$$\phi(n_o = 10^{17} \ cm^{-3}) = 60 \times 7 = 420 \ mV$$

$$\phi(p_o = 10^{15} \text{ cm}^{-3}) = -60 \times 5 = -300 \text{ mV}$$

$$\phi(n_o = 10^{17} \text{ cm}^{-3}) - \phi(p_o = 10^{15} \text{ cm}^{-3}) = 720 \text{ mV}$$

• EXAMPLE 4: Compute potential difference in thermal equilibrium between region where $n_o = 10^{20} \ cm^{-3}$ and region where $p_o = 10^{16} \ cm^{-3}$:


$$\phi(n_o = 10^{20} \ cm^{-3}) = \phi_{max} = 550 \ mV$$

$$\phi(p_o = 10^{16} \text{ cm}^{-3}) = -60 \times 6 = -360 \text{ mV}$$


$$\phi(n_o = 10^{20} \ cm^{-3}) - \phi(p_o = 10^{16} \ cm^{-3}) = 910 \ mV$$

Boltzmann relations readily seen in device behavior!

 \Box pn diode current-voltage characteristics:

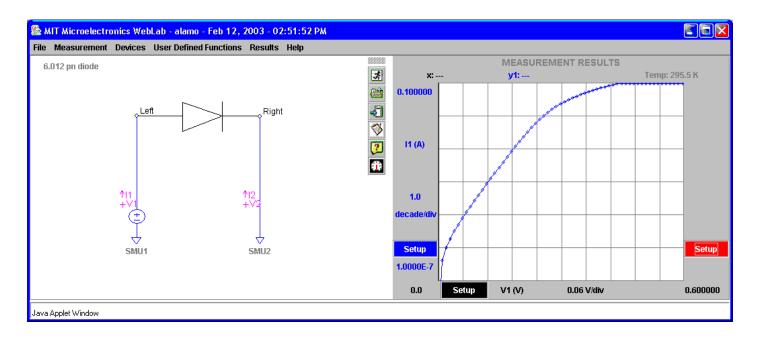

 $\hfill\Box$ Bipolar transistor transfer characteristics:

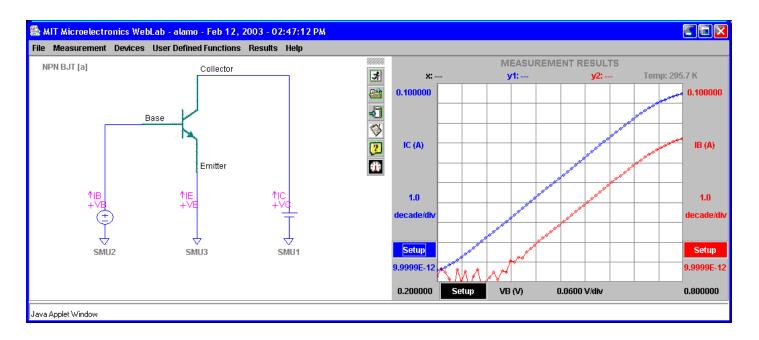

Key conclusions

- It is possible to have an electric field inside a semiconductor in thermal equilibrium
 - \Rightarrow non-uniform doping distribution.
- In a slowly varying doping profile, majority carrier concentration tracks well doping concentration.
- In thermal equilibrium, there are fundamental relationships between $\phi(x)$ and the equilibrium carrier concentrations
 - $\Rightarrow Boltzmann \ relations \ (or "60 \ mV \ Rule").$