# 3.5 GHz Waveform Generation for Testing and Development of ESC Detectors

Raied Caromi, John Mink, Michael Souryal {raied.caromi, john.mink, michael.souryal}@nist.gov

WInnComm Nov. 2017




#### Background

- Citizens Broadband Radio Service (CBRS) allows spectrum sharing in 3550 MHz 3700 MHz band between federal and commercial users, in accordance with FCC rules
- Environmental Sensing Capability (ESC) detects and reports the presence of federal incumbent radar signals in these bands
- ESC sensors will not have full knowledge of radar waveform parameters such as pulse repetition, pulse duration and center frequency of the incumbent radar
- Field-measured waveforms include channel propagation effects such as time-varying multipath fading and pulse dispersion
- Utilize field-measured radar waveforms and computer generated interference signals to generate waveforms similar to what an actual ESC sensor will observe
- Develop open source code for framework, signal processing blocks and GUI generation tool
- The waveforms and their parameters can be used by ESC applicants and developers for training and testing incumbent radar detection algorithms




#### Examples of field-measured radar waveforms

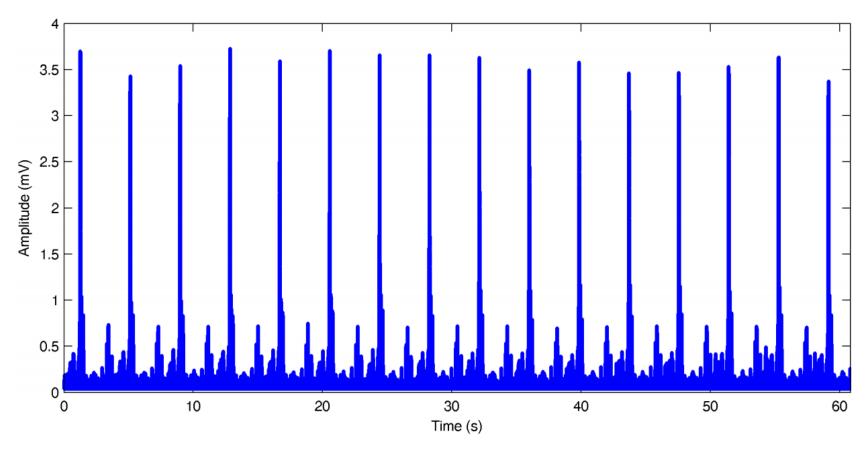

Magnitude of an IQ capture of a typical 3550 MHz SPN43 radar. The full capture epoch of just over 60 s duration is shown here.

Figure 3.1, NASCTN Report 2, NIST Technical Note 1954, 3.5 GHz Radar Waveform Capture at Point Loma, Final Test Report, https://doi.org/10.6028/NIST.TN.1954


#### Examples of field-measured radar waveforms

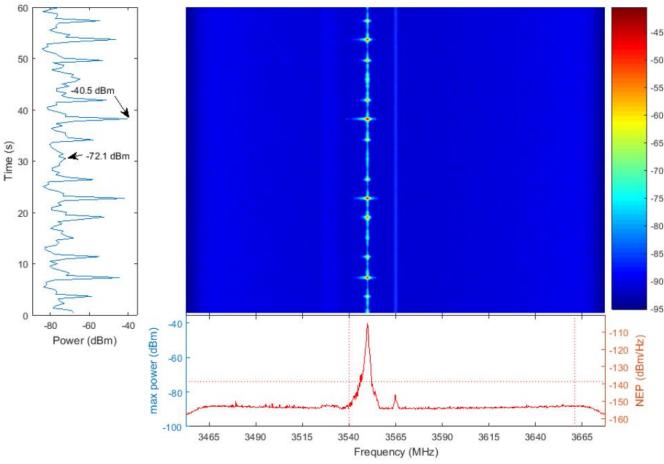

Spectrogram of a SPN-43 signal with temporal fading, captured with the omni-directional antenna showing spread of peak rotation power of 31.5 dB, while the mean peak power, pooled over all rotations in this capture, is -54.6 dBm.

Figure 3.8, NASCTN Report 2, NIST Technical Note 1954, 3.5 GHz Radar Waveform Capture at Point Loma, Final Test Report, https://doi.org/10.6028/NIST.TN.1954


#### Examples of field-measured radar waveforms

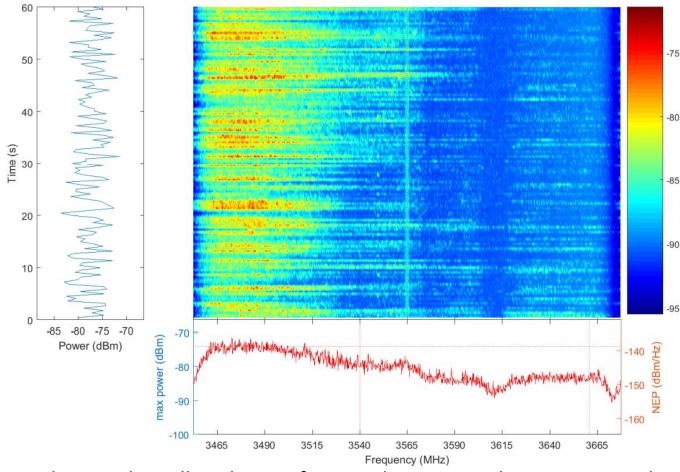

Spectrogram showing broadband noise from Radar 3. Note that SPN-43 peaks at 3550 MHz are visible earlier than 30 s, but are hidden by interference at later times.

Figure 3.18, NASCTN Report 2, NIST Technical Note 1954, 3.5 GHz Radar Waveform Capture at Point Loma, Final Test Report, https://doi.org/10.6028/NIST.TN.1954

# System overview

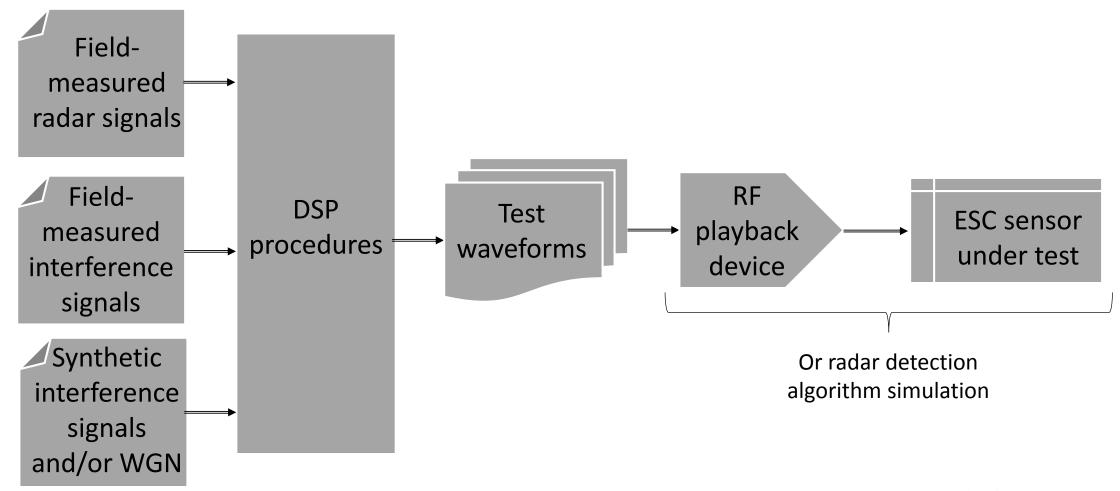




# Waveform generation framework

- Define basic objects to handle signal input/output from/to files
- Read signals in terms of segments of samples
- Perform signal processing procedures on the segment of samples
- Track signal timing, end of file action, IQ format and scaling
- Signal processing procedures are built on top of the basic framework
- GUI to visualize the resulting waveforms and to automate the process of generating the waveforms
- The GUI utilizes the framework and the waveform signal processing blocks to mix up to two radar, one adjacent band interference (ABI), and two LTE signals
- The GUI simplifies the selection of certain parameters such as signal power levels, and randomizes other parameters such as start time, and frequency
- The software automates the generation of multiple waveform files



#### Read and write complex baseband signals


- All signals are saved as integer 16-bit interleaved I/Q data file to minimize disk storage size
- Signal from file: read a segment of samples from a signal file and prepare it for baseband processing
- Signal to file: write a segment of samples to a file
- A waveform object can have one or more (signal from file)/(signal to file) objects

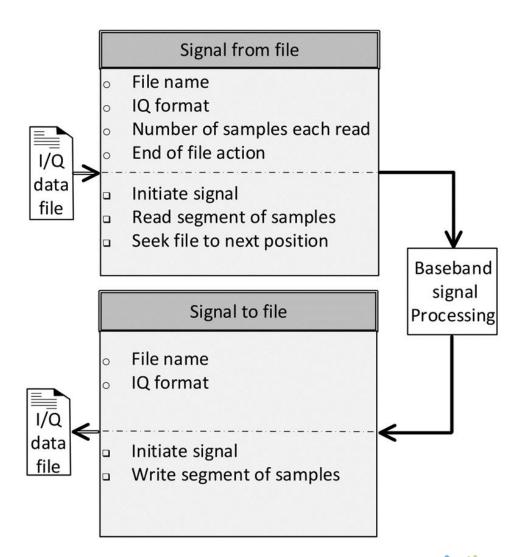



#### Multi-task execution

- Organize multi-task execution
- Manage the type of the execution, i.e., sequential or parallel.

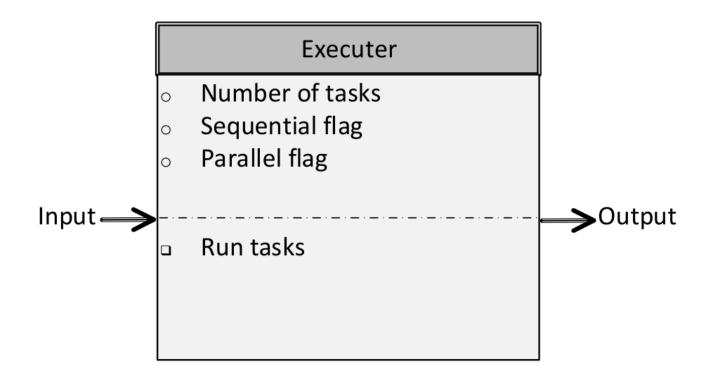



## Signal preprocessing and measurement preparations


#### Certain tasks are performed before waveform generation

- Decimation is performed on the original radar waveforms to extract clean radar signals centered at zero Hz baseband
- Instantaneous signal to interference ratio (SIR) calculation during the generation process requires estimation of radar peaks and their times at every sweep
- LTE TDD signals are simulated and up-sampled to the final waveform sampling rate beforehand
- Real captured LTE TDD signals can also be used instead of the synthetically generated LTE signals



#### Decimation process


- The field-measured radar waveforms are sampled at 225 MHz and are about 60 seconds long
- Each waveform is shifted with an offset frequency so that the radar is set at zero baseband center frequency
- An antialiasing low-pass filter is applied
- The signal is then downsampled to 25 MHz and saved to a file
- The waveform is processed in segments due to large size of the file

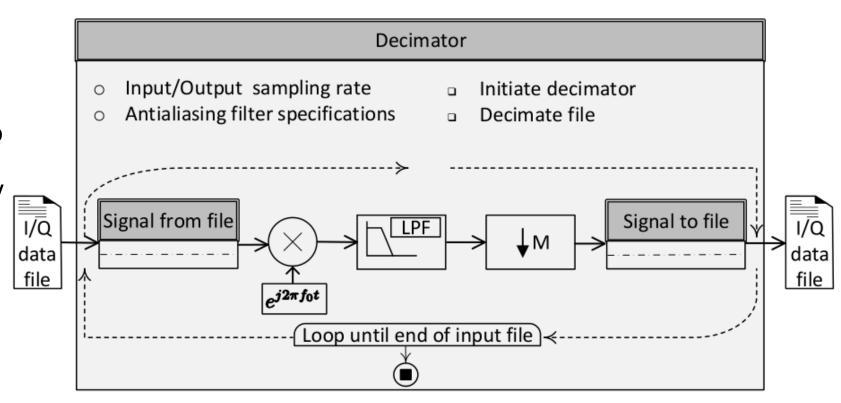



#### Decimation execution


- The decimation executor handles the task of processing multiple files
- To reduce the run time, the waveform files are processed in parallel

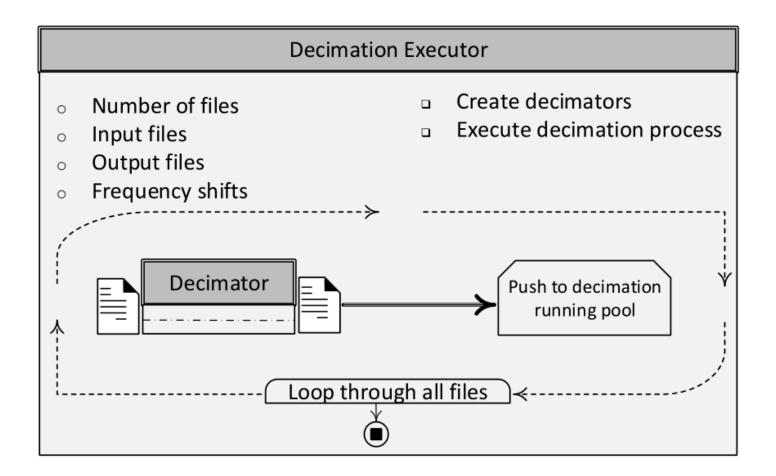



# Waveform signal processing

- Creates an object with multiple signals (signal from file) and output signal (signal to file)
- Three types of signal files (radar, ABI, LTE with channel effect)
- Number of each signal type
- Parameters of each signal
- Generate a waveform segment for preview
- Generate full waveform up to total time and save to a file and measure the instantaneous SIR

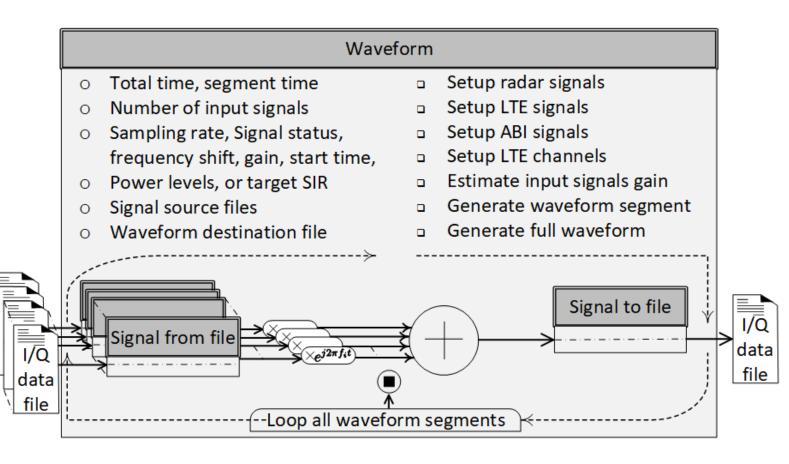



#### Waveform object example


An example of a waveform object used by the waveform generator with certain waveform parameters:

- 90-second waveform with two radars starting at 5 seconds and 11 seconds
- Gains are set according to desired power levels
- After the generation process all the object parameters, instantaneous SIR values, and signal sources are saved in JSON format for easy access

```
waveform with properties:
                Fs: 25000000
 samplesPerSegment: 2500000
         totalTime: 90
   numRadarSignals: 2
       radarStatus: [1 1]
    radarStartTime: [5 12]
       radarSignal: [1×2 radarSignalFromFile]
        radarGain: [0.000425696016324576 0.000304713328878698]
   radarFreqOffset: [0 10000000]
     numLTESignals: 2
         LTEStatus: [1 1]
     LTEStartTime: [0 0]
         LTESignal: [1×2 signalFromFile]
           LTEGain: [1.65507398254251e-06 1.57317975332633e-06]
     LTEFreqOffset: [-5000000 5000000]
        LTEChState: 0
         LTEChType: {'EPA5Hz' 'EVA5Hz'}
        LTEChannel: [1×1 threeGPPChannel]
     numABISignals: 1
         ABIStatus: 0
      ABIStartTime: 0
         ABISignal: [1×1 radarSignalFromFile]
           ABIGain: 0.0316227766016838
     ABIFregOffset: 0
        AWGNStatus: 0
           AWGNVar: 0
  writeScaleFactor: 1218500000
    waveformToFile: [1×1 signalToFile]
           success: []
gainEstimateMethod: 'Power Levels'
   PowerLevels dBm: [1×1 struct]
         targetSIR: 25
   measParameters: [1×1 struct]
          SIRdBmin: []
          SIRdBmax: []
         SIRdBmean: []
           SIRData: [1×2 struct]
         signalOut: []
         errorColl: []
```

# Waveform generation

- Handles multiple waveform generation process sequentially or in parallel
- Tracks waveform parameters
- Tracks signals sources and output files

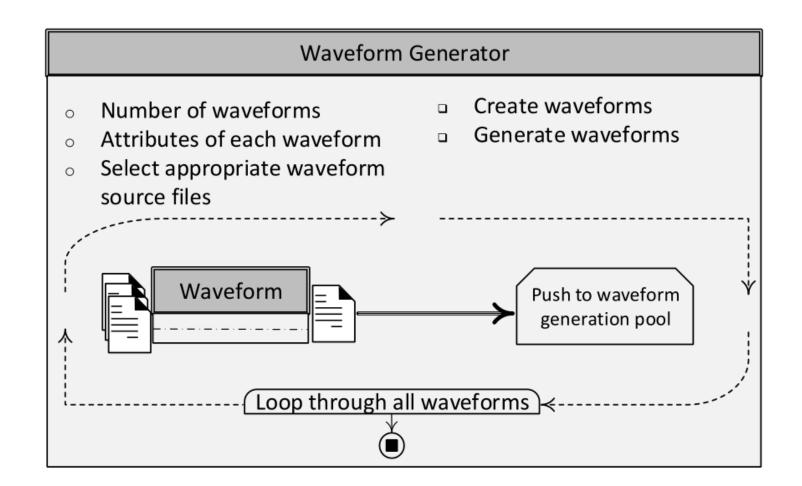



#### GUI waveform generation


The GUI provides a convenient way to access all the generation parameters

- Select signal sources
- Change frequencies, gains, turn ON/OFF signals
- Instantaneous preview of the waveform
- Set specific power levels, or desired SIR
- Generate parameters by randomization or with predefined intervals
- Generate multiple waveform files



# Signal Sources Panel


- Select signal source paths
- Add desired files to the selection boxes
- Selected files will be used for waveform preview and single file generation

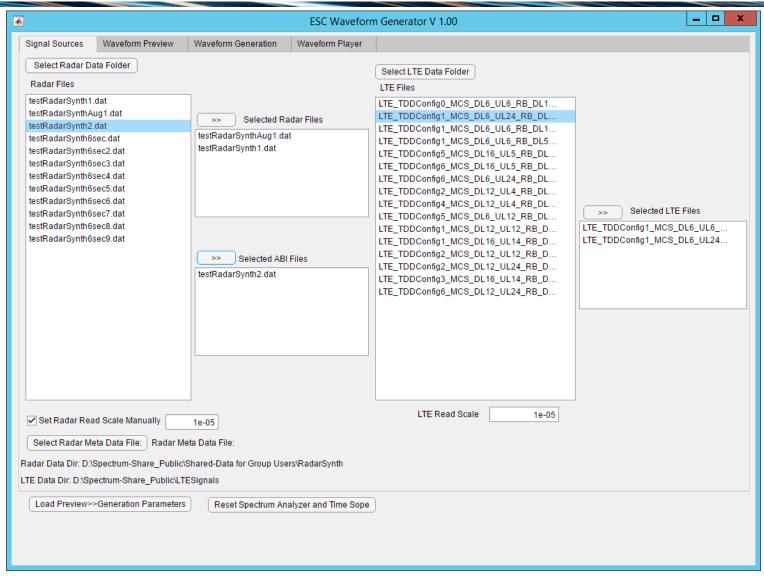



#### Waveform Preview Panel


- The GUI mixes two radar signals, one ABI signal, two LTE signals with different channel settings, and an optional AWGN signal
- Preview panel provide access to all signal parameters (Status, Gain, Frequency)
- Demonstrates the waveform before the generation process
- Estimate gains based on the desired power levels or target SIR
- Access to spectrum analyzer/ spectrogram and time scope during preview

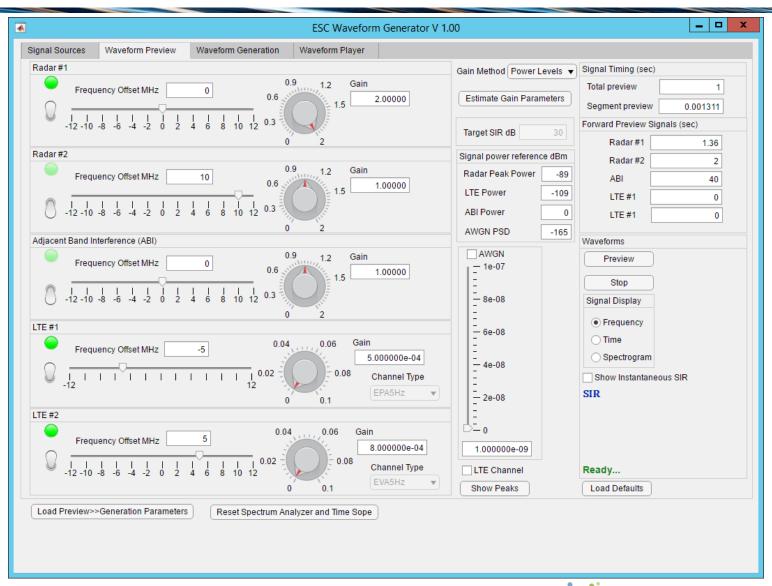




#### Waveform Generation Panel

- Load all the preview parameters in one place
- Provide capability to edit/modify parameters in one place
- Generate single or multiple files
- Turn On/Off parallel processing

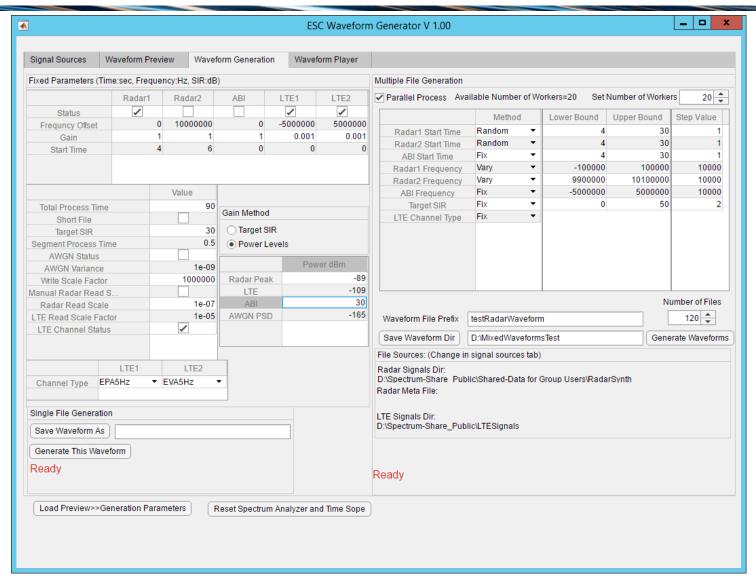




- For the purpose of this demonstration, we use a synthetically generated radar signal
- Two radar signals at -5 MHz and +5 MHz and One LTE TDD centered at 0 Hz

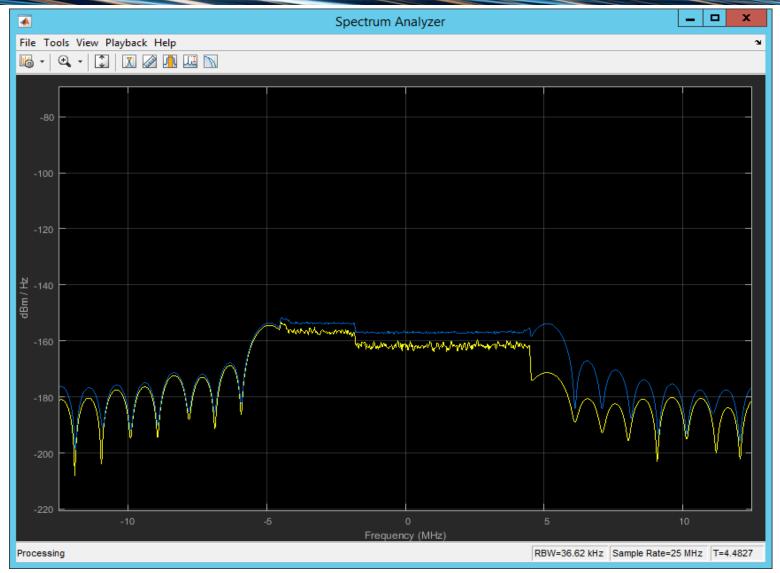




- Spectrum of two LTE TDD signals with one radar signal at the center
- Spectrum/ Spectrogram/ and time scope panels keeps previewing the waveform while the engine keeps sampling and mixing the signals until the end of the preview time

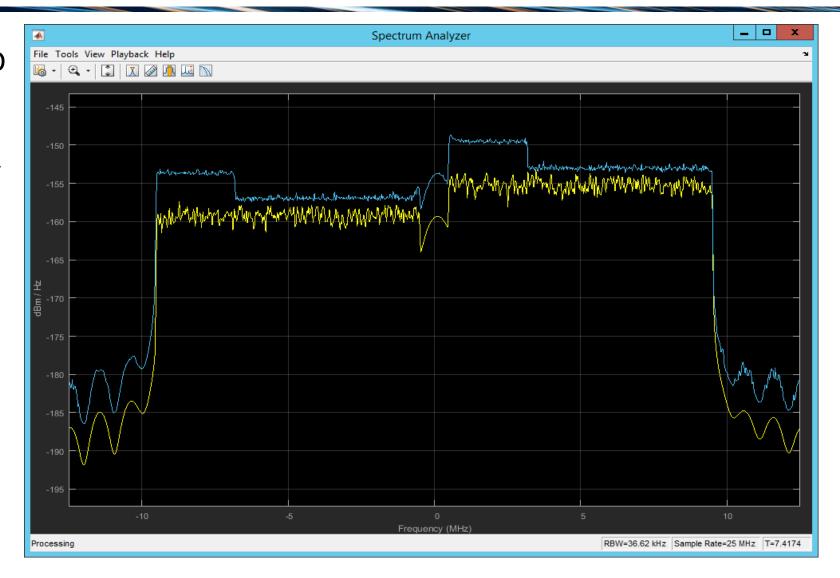




- Spectrogram of the waveform
- Radar at zero center frequency
- The LTE channel was turned ON in the middle of the preview process

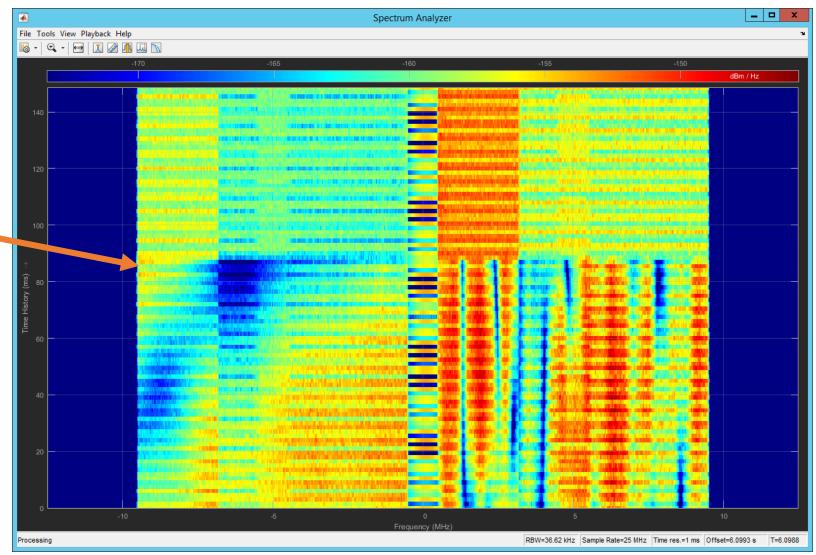



 Time scope showing the LTE TDD signals and the radar signal pulses

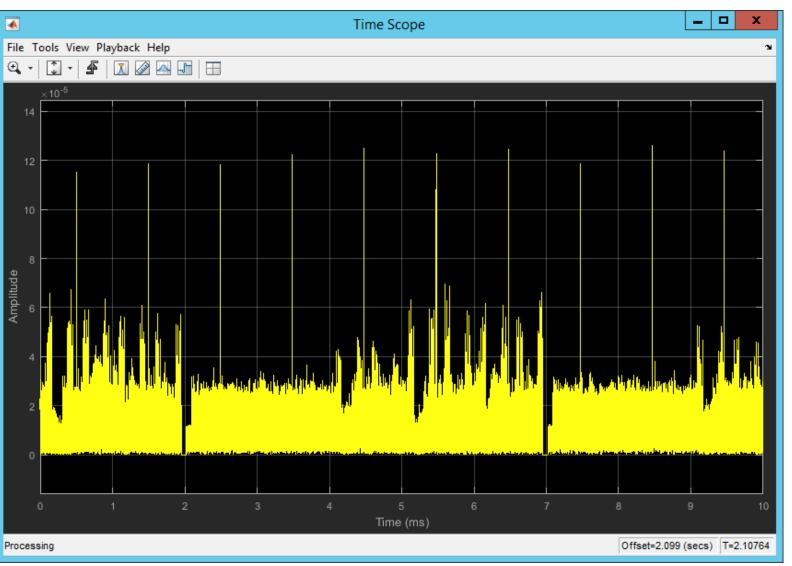



#### Concluding Remarks

- CBRS spectrum sharing requires ESC sensor deployment to detect and report the presence of federal incumbent radar
- Some characteristics of the actual incumbent radar signals are difficult to generate
- Utilize field-measured radar waveforms
- Waveform generation with certain power levels or SIR values for testing and development of incumbent radar detection algorithms
- Framework and signal processing block to handle signal mixing and generation process
- GUI to demonstrate the waveform and automate the generation process
- The GUI tool is deployable and can run without licensed software



#### **Questions?**

Source Code: <a href="https://github.com/usnistgov/ESCWaveformGenerator.git">https://github.com/usnistgov/ESCWaveformGenerator.git</a>

Contacts: Raied Caromi, <a href="mailto:raied.caromi@nist.gov">raied.caromi@nist.gov</a>

John Mink, john.mink@nist.gov

Michael Souryal, <u>michael.souryal@nist.gov</u>

