### Scope

This document describes how to test USB OTG HID mouse example.

# **Preparation**

#### Host

A personal computer, which is running Windows Xp or Windows 7.

#### **Device**


- Two boards, i.e. two tower systems with twrk22f120m, which are running otg\_hid\_mouse example.
- An Usb mouse device (i.e. a Mitsumi USB mouse device)
- The jumper setting for the Tower serial board is as following:
  - o J10: Jumper is on 1-2
  - o J11: Jumper is on 5-6
  - o J16: Jumper is on 5-6
- Jumper setting for twrk22f120m
  - o j35: Jumper 2-3 on.
- Jumper setting for twrk64f120m
  - o J18: Jumper 1-2 on.
  - o J19: Jumper 1-2 on.
  - o J29: Jumper 3-4 on, jumper 5-6 on
  - Contribute vbus to mini USB port of twrk64f120m (plug USB mini port of twrk64f120m to the PC host).
- Jumper setting for twrk70f120m
  - o J1: Jumper 1-2 on.

## **Steps**

Follow the steps to run the otg\_hid\_mouse demo.

- 1. Connect the two comports of the two boards to two comports of the PC.
- 2. Open the comports in a terminal tool, i.e. Tera Term.

- 3. Power on the two boards.
- 4. Plug one board to the pc. The pc recognizes it as an USB mouse device and the mouse moves around the screen; the device function of the USB OTG HID has been tested, disconnect the board from the pc.
- 5. Plug the USB mouse device to one board, by an USB connector type A, the board now acts as an USB host mouse and it recognizes the USB mouse device.
- 6. Moves the USB mouse device, the terminal displays the mouse is moving; the host function of the USB OTG HID has been tested, disconnect the USB mouse device from the board.
- 7. Connect two boards together with an USB-OTG cable (this cable on one side has a Mini A plug and the other side has a Mini B plug).
- 8. The board that connects to A terminal of the cable (called the A device) acts as an USB mouse host and the board that connects to B terminal of the cable (called the B device) acts as an USB mouse device; the A device displays the mouse is moving on the the terminal tool.
- On the com port of the A device displays

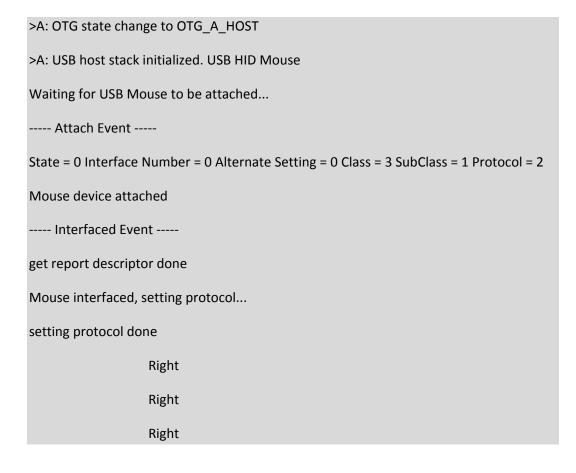

Right

Right

On the com port of the B device displays

>B: OTG state change to B peripheral.

>B: USB peripheral stack initialized.

OTG App User Input Menu

2. B bus request (HNP start)

begin to test mouse

- 9. On the comport of the B device, press "2" key, the B device requests the bus and would like to become host, the host and device functions are swapped between A and B device. A device now becomes A\_PERIPHERAL and B device becomes B\_HOST.
- On the com port of the B device displays

B bus request

>B: OTG is ready to initialize HNP.

>B: OTG has initialized the HNP to request the bus from Host

>B: OTG is in the Host state

>B: USB host stack initialized.USB HID Mouse

Waiting for USB Mouse to be attached...

----- Attach Event ----
State = 0 Interface Number = 0 Alternate Setting = 0 Class = 3 SubClass = 1 Protocol = 2

Mouse device attached

----- Interfaced Event ----
get report descriptor done

Mouse interfaced, setting protocol...

setting protocol done

Right Right

On the com port of the A device displays

```
>A: OTG_A_B_HNP_REQ

>A: OTG state change to A_SUSPEND

---- Detach Event ----

State = 7 Interface Number = 0 Alternate Setting = 0 Class = 3 SubClass = 1 Protocol = 2

>A: OTG state change to A_PERIPHERAL

>A: USB peripheral stack initialized.

OTG App User Input Menu

4. A bus request

6. A set a bus drop true (session end)
```

- 10. On the com port of the B device, press "3" key, the B device releases the Bus and becomes B\_PERIPHERAL and A device becomes A\_HOST.
- On the com port of the B device displays

```
B bus release

>B: OTG state change to B peripheral.

>B: USB peripheral stack initialized.

OTG App User Input Menu

2. B bus request (HNP start)

tr cancel

----- Detach Event -----

State = 6 Interface Number = 0 Alternate Setting = 0 Class = 3 SubClass = 1 Protocol = 2

begin to test mouse
```

```
>A: OTG_A_BIDL_ADIS_TMOUT

>A: OTG state change to A_WAIT_BCON

>A: OTG state change to OTG_A_HOST

>A: USB host stack initialized. USB HID Mouse

Waiting for USB Mouse to be attached...

----- Attach Event -----

State = 0 Interface Number = 0 Alternate Setting = 0 Class = 3 SubClass = 1 Protocol = 2

Mouse device attached

----- Interfaced Event -----
get report descriptor done

Mouse interfaced, setting protocol...

setting protocol done

Right

Right

Right
```

- 11. On the com port of the B device, press "2" key again, the host and device functions are swapped between A and B device; A device becomes A\_PERIPHERAL and B device becomes B\_HOST. In the com port of the A device, press "4" key, the A device requests the bus and would like to become host, the host and device functions are swapped between A and B device; A device becomes A\_HOST and B device becomes B\_PERIPHERAL. HNP function of the USB OTG HID has been tested.
- On the com port of the A device displays

>A: USB peripheral stack initialized.

OTG App User Input Menu

- 4. A bus request
- 6. A set a bus drop true (session end)

```
A bus request
>A: OTG_A_BIDL_ADIS_TMOUT
>A: OTG state change to A_WAIT_BCON
>A: OTG state change to OTG_A_HOST
>A: USB host stack initialized. USB HID Mouse
Waiting for USB Mouse to be attached...
---- Attach Event ----
State = 0 Interface Number = 0 Alternate Setting = 0 Class = 3 SubClass = 1 Protocol = 2
Mouse device attached
---- Interfaced Event ----
get report descriptor done
Mouse interfaced, setting protocol...
setting protocol done
                   Right
                   Right
                   Right
On the com port of the B device displays
                  Right
                  Right
>B: OTG_B_A_HNP_REQ
>B: OTG state change to B peripheral.
>B: USB peripheral stack initialized.
```

begin to test mouse

OTG App User Input Menu

```
2. B bus request (HNP start)

tr cancel
----- Detach Event -----

State = 6 Interface Number = 0 Alternate Setting = 0 Class = 3 SubClass = 1 Protocol = 2

begin to test mouse
```

- 12. On the com port of the A device, press "6" key, V bus is dropped; A device becomes A\_IDLE and B device become B\_IDLE.
- On the com port of the A device displays

```
A set a bus drop true

>A: OTG state change to OTG_A_WAIT_VFALL

tr cancel

----- Detach Event -----

State = 6 Interface Number = 0 Alternate Setting = 0 Class = 3 SubClass = 1 Protocol = 2

>A: OTG state change to A_IDLE
```

```
>B: OTG is ready to initialize HNP.

>B: OTG state change to B idle

>B: OTG is ready to initialize SRP
```

- 13. On the com port of the A device, press "7" key, V bus is controlled by A device; A device becomes A\_HOST and B device becomes B\_PERIPHERAL.
- On the com port of the A device displays

```
7
A set a bus drop false
```

```
>A: OTG state change to A_WAIT_VRISE
   >A: OTG state change to A_WAIT_BCON
   >A: OTG state change to OTG_A_HOST
   >A: USB host stack initialized. USB HID Mouse
   Waiting for USB Mouse to be attached...
    ---- Attach Event ----
   State = 0 Interface Number = 0 Alternate Setting = 0 Class = 3 SubClass = 1 Protocol = 2
   Mouse device attached
   ---- Interfaced Event ----
   get report descriptor done
   Mouse interfaced, setting protocol...
   setting protocol done
                       Left
                       Left
   On the com port of the B device displays
   >B: OTG state change to B peripheral.
   >B: USB peripheral stack initialized.
    OTG App User Input Menu
       2. B bus request (HNP start)
    begin to test mouse
14. On the com port of the A device, press "5" key, the A device release the bus; A device
   becomes A_IDLE and B device become B_IDLE.
   On the com port of the A device displays
   5
```

A bus release

>A: OTG state change to A\_SUSPEND

```
tr cancel
----- Detach Event -----
State = 6 Interface Number = 0 Alternate Setting = 0 Class = 3 SubClass = 1 Protocol = 2
>A: OTG_A_AIDL_BDIS_TMOUT
>A: OTG state change to OTG_A_WAIT_VFALL
>A: OTG state change to A_IDLE
```

```
>B: OTG is ready to initialize HNP.
```

>B: OTG state change to B idle

>B: OTG is ready to initialize SRP

- 15. On the com port of the A device, press "4" key, the A device request the bus; A device becomes A\_HOST and B device become B\_PERIPHERAL
- On the com port of the A device displays

```
A bus request

>A: OTG state change to A_WAIT_VRISE

>A: OTG state change to A_WAIT_BCON

>A: OTG state change to OTG_A_HOST

>A: USB host stack initialized.

USB HID Mouse

Waiting for USB Mouse to be attached...

----- Attach Event -----

State = 0 Interface Number = 0 Alternate Setting = 0 Class = 3 SubClass = 1 Protocol = 2

Mouse device attached
```

```
---- Interfaced Event ----
get report descriptor done
Mouse interfaced, setting protocol...
setting protocol done
setting idle done
```

>B: OTG state change to B peripheral.

>B: USB peripheral stack initialized.

OTG App User Input Menu

2. B bus request (HNP start)

begin to test mouse

- 16. On the com port of the A device, press "5" key, the A device release the bus; A device becomes A\_IDLE and B device become B\_IDLE. On the com port of the B device, press "1" key, the B device request a session; A device becomes A\_ HOST and B device become B\_ PERIPHERAL.
- On the com port of the B device displays

1

SRP request

>B: OTG has initialized SRP

>B: OTG state change to B peripheral.

>B: USB peripheral stack initialized.

OTG App User Input Menu

2. B bus request (HNP start)

begin to test mouse

- On the com port of the A device displays

>A: OTG state change to A\_WAIT\_VRISE

>A: OTG state change to A\_WAIT\_BCON

```
>A: USB host stack initialized.

USB HID Mouse

Waiting for USB Mouse to be attached...

----- Attach Event -----

State = 0 Interface Number = 0 Alternate Setting = 0 Class = 3 SubClass = 1 Protocol = 2

Mouse device attached

----- Interfaced Event -----

get report descriptor done

Mouse interfaced, setting protocol...

setting protocol done

setting idle done
```

- 17. Unplug the USB cable at B device side, wait until A device becomes A\_IDLE and B device becomes B\_IDLE.
- On the com port of the A device displays

```
----- Detach Event -----

State = 7 Interface Number = 0 Alternate Setting = 0 Class = 3 SubClass = 1 Protocol = 2

Going to idle state

>A: OTG state change to A_WAIT_BCON

>A: OTG_A_WAIT_BCON_TMOUT

>A: OTG state change to OTG_A_WAIT_VFALL

>A: OTG state change to A_IDLE
```

>B: OTG is ready to initialize HNP.

>B: OTG state change to B idle
>B: OTG is ready to initialize SRP

- 18. Plug the USB cable at B device side, on the comport of the B device, press "1" key, the B device requests a session; A device becomes A\_HOST and B device becomes B\_PERIPHERAL. SRP function of the USB OTG HID has been tested.
- On the com port of the B device displays

SRP request
>B: OTG has initialized SRP
>B: OTG state change to B peripheral.
>B: USB peripheral stack initialized.

OTG App User Input Menu

2. B Bus request (HNP start)
begin to test mouse

On the com port of the A device displays

>A: OTG state change to A\_WAIT\_VRISE

>A: OTG state change to A\_WAIT\_BCON

>A: OTG state change to OTG\_A\_HOST

>A: USB host stack initialized.USB HID Mouse

Waiting for USB Mouse to be attached...

----- Attach Event ----
State = 0 Interface Number = 0 Alternate Setting = 0 Class = 3 SubClass = 1 Protocol = 2

Mouse device attached

----- Interfaced Event ----
get report descriptor done

Mouse interfaced, setting protocol...
setting protocol done
Right

- 19. Unplug the USB cable at B device side, wait until A device becomes A\_IDLE and B device becomes B\_IDLE. Plug the USB calbe at B device side, on the comport of the A device, press "4" key, the A device requests the bus; A device becomes A\_HOST and B device becomes B\_PERIPHERAL.
- On the com port of the A device displays

```
A bus request
>A: OTG state change to A_WAIT_VRISE
>A: OTG state change to A_WAIT_BCON
>A: OTG state change to OTG_A_HOST
>A: USB host stack initialized.
USB HID Mouse
Waiting for USB Mouse to be attached...
---- Attach Event ----
State = 0 Interface Number = 0 Alternate Setting = 0 Class = 3 SubClass = 1 Protocol =
Mouse device attached
---- Interfaced Event ----
get report descriptor done
Mouse interfaced, setting protocol...
setting protocol done
setting idle done
```

On the com port of the B device displays

>B: OTG state change to B peripheral.

>B: USB peripheral stack initialized.

OTG App User Input Menu

2. B Bus request (HNP start)

begin to test mouse

#### Note:

- On the com port of the A or B device, press "P" key to print the menu. The user can choose what key to press next to control the devices.

### Known issue:

- The twrk70f120m can't perfom SRP because the Vreg-in of twrk70f120m is contributed by USB0\_VBUS on twr serial board; In A-idle state, the A device turns off vbus on USB port of twr serial board, so the B device doesn't have USB0\_VBUS to perform SRP.