

### Table of Contents

1. OVERVIEW	4
• 1.1. ABSTRACT	4
2. HOW DOES IT WORK?	5
• 2.1. Reserved Pins & GPIOs	5
• 2.1.1. Reading the Joystick x- and y- axis	5
2.1.2. Controlling the Direction and Speed	5
• 2.2. Fusion of Software with Hardware	9
• 2.3. Schematic	11
3. DATA STRUCTS	12
• 3.1. Data Payload	13
• 3.1.1. Why useattribute((packed))?	13
4. TRANSMITTER	14
• 4.1. Configuration Variables	14
• 4.2. Reading Joystick x- and y- Axis Values	14
4.3. Sending & Ecapsulating Data	14
• 4.4. Main Function	15
5. RECEIVER	16
• 5.1. Configuration Variables	14
• 5.2. Receiving & Extracting Data	16
• 5.3. Main Function	15
6. WORK-IN-PROGRESS WALK THROUGH	19
• 6.1. Finished Work	19
• 6.2. Chassis	20
• 6.3. Wiring	21
• 6.4. Motor Wires Harness	22
7. REFERENCES	23
• 7.1. GitHub	23

# **ByteRider documentation**



### **OVERVIEW**

At the heart of this project is a customizable remote-controlled car that responds to real-time control inputs, capable of handling speed adjustments, directional changes, and even extended features like lights or sensors. The foundational setup uses ESP-NOW for transmitter and receiver devices, allowing you to wirelessly guide the car's behaviour. While the design and physical appearance of the RC car can vary wildly depending on your creativity and available hardware, the control system remains elegantly efficient. To facilitate wireless communication between devices, the system employs ESP-NOW, which is a lightweight and connection-free protocol ideal for fast, low-latency data transmission between ESP32 microcontrollers. Though ESP-NOW is used under the hood, the spotlight remains on the RC car itself.

An ESP-NOW-based remote controller sends control data wirelessly using the ESP-NOW protocol to the remote-controlled car. ESP-NOW enables fast and efficient communication between ESP32 devices without the need for a Wi-Fi router, network, or pairing. The provided tutorial demonstrates a functional setup where a transmitter sends data to a receiver to define the car's speed and direction, forming the core communication loop. While the baseline implementation focuses on movement, additional features like lights, sensors, or telemetry can easily be integrated by expanding the source code. This modular design gives users the freedom to customize both the appearance and behaviour of their RC car, resulting in endless creative possibilities.

#### **ABSTRACT**

To enable real-time remote operation of the RC car, the system translates joystick x- and y- axis inputs into PWM (Pulse Width Modulation) signals that control the DC motors. These PWM values are stored in a predefined data structure, which is then transmitted wirelessly using ESP-NOW — a low-latency, connectionless communication protocol developed by Espressif. Both the transmitter and receiver modules are based on ESP32-C3 microcontrollers.

On the transmitter side, the joystick's X and Y coordinates are continuously monitored and converted into PWM parameters. These values are packed into the data structure and sent via ESP-NOW to the receiver.

The receiver module listens for incoming ESP-NOW packets, extracts the PWM control data, and applies it directly to the DC motors. This communication flow allows the RC car to respond instantly to user input, managing speed and direction without any physical connection between the devices.

### **HOW DOES IT WORK?**

The BitByteRider RC car is powered by ESP32-C3 Breadboard & Power adapter development board. The Schematic and KiCAd PCB board are available on GitHub: https://github.com/alexandrebobkov/ESP32-C3\_Breadboard-Adapter

#### Reserved Pins & GPIOs

The following table summarizes GPIOs and pins reserved for operations purposes.

The GPIO numbers correspond to those on the ESP32-C3 WROOM microcontroller. The Pin number corresponds to the pin on the Breadboard and Power adapter development board.

#### Reading the Joystick x- and y- axis

To determine the position of the Joystick, the BitRider RC car uses ADC to measure voltage on two GPIOs connected to the joystic x- and y- axis potentionometers ( **GPIO0** and **GPIO1**).

#### Controlling the Direction and Speed

To set any desired speed of BiteRider RC car, the *ESP32-C3 Breadboard Adapter DevBoard* uses PWM to control the rotation speed of DR motors. Similarly, to set the direction of the RC car, the rotation speed of corresponding DC motors is changed as required.

Due to the design and limited number of available GPIOs, the *ESP32-C3 Breadboard DevBoard* can control rotation speed and direction of DC motors in pairs only (i.e. left and right side). Consequently, this means that the four PWM channels used for controlling the direction of the RC car.

Based on this constraint, the RC car can only move front, back, and turn/rotate left and right. Any other movements are not possible (i.e. diagonal or sideways).

#### **B** What is PWM?

**PWM** stands for Pulse Width Modulation. It is a technique used to simulate analog voltage levels using discrete digital signals. It works by rapidly switching a digital GPIO pin between HIGH (on) and LOW (off) states at a fixed frequency (often, at base frequency of 5 kHz). The

duty cycle—the percentage of time the signal is HIGH in one cycle determines the effective voltage delivered to a device. A higher duty cycle increases the motor speed, and a lower duty cycle decreases the motor speed. This allows for fine-grained speed control without needing analog voltage regulators.

A pair of PWM channels are used per DC motor for defining their rotation speed and direction on each side. In particular, **GPIO6** and **GPIO5** provide PWM to the left- and right- side DC motors to rotate in a **clockwise** direction. Similarly, **GPIO4** and **GPIO7** provide PWM to the left- and right- side DC motors to rotate in a **counter-clockwise** direction. Changing PWM on each channel determines the speed and direction of the RC car.


The table below summarizes the GPIO pins used for PWM to control the direction of the DC motors in the remote-controlled car.

GPIOs	State	Description	Function
GPIO6, GPIO4	PWM	Left & Right DC Motors spin clockwise	Forward
GPIO5, GPIO7	PWM	Left & Right DC Motors spin counterclockwise	Reverse
GPIO6, GPIO7	PWM	Left DC Motors spin clockwise. Right DC Motors spin counterclockwise	Left
GPIO4, GPIO5	PWM	Left DC Motors spin counterclockwise. Right DC Motors spin clockwise	Right

The following images illustrate various PWM duty cycles registered by oscilloscope (duty cycles 0%, 48% and 91%, resp.).



DC Motor PWM duty cycle 0%

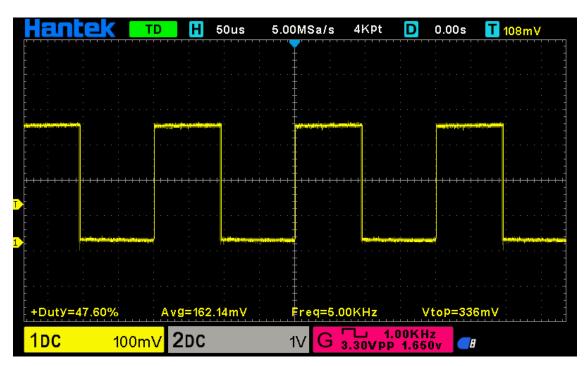

DC Motor PWM duty cycle 47.6%



DC Motor PWM duty cycle 90.8%

GPIO	Pin	Function	Notes
0	16	Joystick x-axis	ADC1_CH0
1	15	Joystick y-axis	ADC1_CH1
8	5	Joystick push button	
6	4	PWM for clockwise rotation of left-side motors	LEDC_CHANNEL_1
5	3	PWM for clockwise rotation of right-side motors	LEDC_CHANNEL_0
4	2	PWM for counter-clockwise rotation of right-side motors	LEDC_CHANNEL_2
7	6	PWM for counter-clockwise rotation of left-side motors	LEDC_CHANNEL_3

#### Fusion of Software with Hardware

The struct for storing motors PWM values.

```
struct motors_rpm {
    int motor1_rpm_pwm;
    int motor2_rpm_pwm;
    int motor3_rpm_pwm;
    int motor4_rpm_pwm;
};
```

The function for updating motors' PWM values.

```
// Function to send data to the receiver
void sendData (void) {
                                      // Declare data struct
    sensors_data_t buffer;
    buffer.crc = 0;
    buffer.x_axis = 0;
    buffer.y_axis = 0;
    buffer.nav_bttn = 0;
    buffer.motor1 rpm pwm = 0;
    buffer.motor2_rpm_pwm = 0;
    buffer.motor3 rpm pwm = 0;
    buffer.motor4 rpm pwm = 0;
    // Display brief summary of data being sent.
    ESP LOGI(TAG, "Joystick (x,y) position ( 0x%04X, 0x%04X )",
(uint8_t)buffer.x_axis, (uint8_t)buffer.y_axis);
    ESP_LOGI(TAG, "pwm 1, pwm 2 [ 0x%04X, 0x%04X ]",
(uint8_t)buffer.pwm, (uint8_t)buffer.pwm);
    ESP_LOGI(TAG, "pwm 3, pwm 4 [ 0x%04X, 0x%04X ]",
(uint8_t)buffer.pwm, (uint8_t)buffer.pwm);
    // Call ESP-NOW function to send data (MAC address of receiver,
pointer to the memory holding data & data length)
    uint8 t result = esp now send(receiver mac, &buffer,
sizeof(buffer));
    // If status is NOT OK, display error message and error code (in
hexadecimal).
    if (result != 0) {
       ESP_LOGE("ESP-NOW", "Error sending data! Error code:
0x%04X", result);
       deletePeer();
    else
```

```
ESP_LOGW("ESP-NOW", "Data was sent.");
}
```

The onDataReceived() and onDataSent() are two call-bacl functions that get evoked on each corresponding event.

The rc send data task() function runs every 0.1 second to transmit the data to the receiver.

```
// Continous, periodic task that sends data.
static void rc_send_data_task (void *arg) {
    while (true) {
        if (esp_now_is_peer_exist(receiver_mac))
            sendData();
        vTaskDelay (100 / portTICK_PERIOD_MS);
    }
}
```

### Schematic



DATA STRUCTS

### **DATA STRUCTS**

The struct serves as the data payload for sending control signals from the transmitting device to the receiver using ESP-NOW. In addition, it may contain additional data such as telemetry, battery status, etc. The sensors\_data\_t struct encapsulates all control commands and sensor states relevant to the vehicle's operation. It's intended to be sent from a transmitting device (like a remote control) to a receiver (such as a microcontroller on board of the vehicle).

```
typedef struct {
   int
               x_axis;
                                   // Joystick x-position
   int
                                   // Joystick y-position
               y_axis;
               nav_bttn;
                                   // Joystick push button
   bool
   bool
               led;
                                   // LED ON/OFF state
                                   // PWMs for 4 DC motors
               motor1_rpm_pwm;
   uint8_t
   uint8 t
               motor2 rpm pwm;
   uint8_t
               motor3_rpm_pwm;
   uint8_t
               motor4_rpm_pwm;
} attribute ((packed)) sensors data t;
```

```
struct motors_rpm {
    int motor1_rpm_pwm;
    int motor2_rpm_pwm;
    int motor3_rpm_pwm;
    int motor4_rpm_pwm;
};
```

When used with communication protocols like ESP-NOW, this struct is **encoded** into a byte stream, then **transmitted** at regular intervals or in response to user input, and finally **decoded** on the receiving end to control hardware.

#### What is struct?

In C programming, a struct (short for structure) is a user-defined data type that lets you group multiple variables of different types together under a single name. It's like a container that holds related information — perfect for organizing data that logically belongs together. Structs are especially powerful in systems programming, embedded projects, and when dealing with raw binary data — like parsing sensor input or transmitting control packets over ESP-NOW.

### Data Payload

x\_axis and y\_axis fields capture analog input from a joystick, determining direction and speed. nav\_bttn represents a joystick push-button.

led allows the transmitter to toggle an onboard LED and is used for status indication (e.g. pairing, battery warning, etc).

motor1\_rpm\_pwm to motor4\_rpm\_pwm provide individual PWM signals to four DC motors. This enables fine-grained speed control, supports differential drive configurations, and even allows for maneuvering in multi-directional platforms like omni-wheel robots.

#### Why use \_\_attribute((packed))?

ESP-NOW uses fixed-size data packets (up to 250 bytes). The \_\_attribute\_\_((packed)) removes compiler-added padding for precise byte alignment.

As *packed* attribute tells the compiler not to add any padding between fields in memory, this makes the struct:

- Compact
- · Predictable for serialization over protocols like UART or ESP-NOW
- · Ideal for low-latency transmission in embedded systems

This ensures the receiver interprets the exact byte layout you expect, minimizing bandwidth and maximizing compatibility across platforms.

14 TRANSMITTER

### **TRANSMITTER**

#### Configuration Variables

```
uint8_t receiver_mac[ESP_NOW_ETH_ALEN] = \{0xe4, 0xb0, 0x63, 0x17,
0x9e, 0x44;
typedef struct {
                                 // Joystick x-position
   int
              x_axis;
                                // Joystick y-position
// Joystick push button
   int
              y_axis;
   bool
              nav_btn;
   bool
                                 // LED ON/OFF state
               led;
   motor1_rpm_pwm;
                                 // PWMs for each DC motor
               motor2 rpm pwm;
} attribute ((packed)) sensors data t;
```

Reading Joystick x- and y- Axis Values

### Sending & Ecapsulating Data

```
void sendData (void) {
    ... ...
    buffer.x_axis = x_axis;
    buffer.y_axis = y_axis;

// Call ESP-NOW function to send data (MAC address of receiver,
pointer to the memory holding data & data length)
    uint8_t result = esp_now_send((uint8_t*)receiver_mac, (uint8_t*)&buffer, sizeof(buffer));
    ... ...
}
```

15 TRANSMITTER

#### Main Function

```
#include "freertos/FreeRTOS.h"
#include "nvs_flash.h"
#include "esp_err.h"
void app_main(void) {
   // Initialize internal temperature sensor
   chip_sensor_init();
   // Initialize NVS
   esp_err_t ret = nvs_flash_init();
   if (ret == ESP_ERR_NVS_NO_FREE_PAGES || ret ==
ESP_ERR_NVS_NEW_VERSION_FOUND) {
       ESP_ERROR_CHECK( nvs_flash_erase() );
       ret = nvs_flash_init();
   ESP_ERROR_CHECK( ret );
   wifi_init();
   joystick_adc_init();
   transmission_init();
   system_led_init();
}
```

16 RECEIVER

### **RECEIVER**

#### Configuration Variables

```
uint8_t transmitter_mac[ESP_NOW_ETH_ALEN] = \{0 \times 9C, 0 \times 9E, 0 \times 6E, 0 \times 14,
0xB5, 0x54;
typedef struct {
                                             // Joystick x-position
     int
                    x_axis;
                                           // Joystick y-position
// Joystick push button
     int
                   y_axis;
                   nav_bttn;
     bool
                                              // LED ON/OFF state
     bool
                    led;
    uint8_t motor1_rpm_pwm;
uint8_t motor2_rpm_pwm;
uint8_t motor3_rpm_pwm;
uint8_t motor4_rpm_pwm;
                                              // PWMs for 4 DC motors
} attribute ((packed)) sensors data t;
```

```
struct motors_rpm {
    int motor1_rpm_pwm;
    int motor2_rpm_pwm;
    int motor3_rpm_pwm;
    int motor4_rpm_pwm;
};
```

### Receiving & Extracting Data

```
void onDataReceived (const uint8_t *mac_addr, const uint8_t *data,
uint8_t data_len) {
    ...
    ESP_LOGI(TAG,
"Data received from: %02x:%02x:%02x:%02x:%02x:%02x, len=%d",
mac_addr[0], mac_addr[1], mac_addr[2], mac_addr[3], mac_addr[4],
mac_addr[5], data_len);
    memcpy(&buf, data, sizeof(buf));
    x_axis = buf.x_axis;
```

RECEIVER

```
y_axis = buf.y_axis;
.......
}
```

#### Main Function

```
#include <string.h>
#include "freertos/FreeRTOS.h"
#include "nvs flash.h"
#include "esp_err.h"
void app_main(void) {
    // Initialize NVS
   esp_err_t ret = nvs_flash_init();
   if (ret == ESP_ERR_NVS_NO_FREE_PAGES ||
       ret == ESP_ERR_NVS_NEW_VERSION_FOUND) {
       ESP_ERROR_CHECK( nvs_flash_erase() );
       ret = nvs_flash_init();
    }
   ESP ERROR CHECK( ret );
   wifi init();
   ESP_ERROR_CHECK(esp_now_init());
   esp_now_peer_info_t transmitterInfo = {0};
   memcpy(transmitterInfo.peer_addr, transmitter_mac,
ESP_NOW_ETH_ALEN);
   transmitterInfo.channel = 0; // Current WiFi channel
   transmitterInfo.ifidx = ESP_IF_WIFI_STA;
   transmitterInfo.encrypt = false;
   ESP_ERROR_CHECK(esp_now_add_peer(&transmitterInfo));
   ESP ERROR CHECK(esp now register recv cb((void*)onDataReceived));
   system_led_init();
```

18 RECEIVER

}

## WORK-IN-PROGRESS WALK THROUGH

### Finished Work



### Chassis



Completed chassis with only DC motor controllers installed.

# Wiring



Completed wiring.

### Motor Wires Harness



DC Motors wires secured inside harnes.

### **REFERENCES**

#### GitHub

Complete source code with README.md file: https://github.com/alexandrebobkov/ESP-Nodes/blob/main/ESP-IDF\_Robot/README.md

KiCAd Schematic and PCB design: https://github.com/alexandrebobkov/ESP32-C3\_Breadboard-Adapter

