Spinnaker C 2.6.0.160

Generated by Doxygen 1.8.13

## **Contents**

1	Gett	ing Star	ted Control of the Co	1
2	Prog	gramme	r's Guide	3
3	Ben	efits of S	Spinnaker	5
4	FlyC	Capture2	Feature Comparison with Spinnaker	7
5	Wor	king wit	h GenlCam GenTL Devices	9
	5.1	GenTL	Overview	9
	5.2	Installa	tion	9
	5.3	Trouble	shooting	10
		5.3.1	Enable FLIR GenTL Logging	10
		5.3.2	USB3 Device Image Tearing	10
6	Soft	ware Lic	censing Information	11
7	Soft	ware Ma	sintenance Policy	13
	7.1	GenTL	Overview	13
	7.2	Platform	m Support Policy	13
		7.2.1	Windows Support	13
		7.2.2	Linux Desktop Support	13
		7.2.3	Linux Embedded Support	13
		7.2.4	MacOS Support	14
	7.3	Version	ina Policy	14

ii CONTENTS

8	Mod	ule Inde	X					15
	8.1	Module	9S			 	 	15
9	Data	Structu	ıre Index					17
	9.1	Data S	tructures			 	 	17
10	File I	ndex						19
	10.1	File Lis	t			 	 	19
11	Mod	ule Doc	umentatio					21
	11.1	Spinna	ker C Defi	ions		 	 	21
		11.1.1	Detailed	escription		 	 	22
		11.1.2	Typedef I	cumentation		 	 	22
			11.1.2.1	ool8_t		 	 	22
		11.1.3	Variable I	cumentation		 	 	22
			11.1.3.1	alse		 	 	22
			11.1.3.2	rue		 	 	22
	11.2	Camera	a Enumera	ons		 	 	23
		11.2.1	Detailed	escription		 	 	55
		11.2.2	Enumera	n Type Documentation		 	 	55
			11.2.2.1	pinAcquisitionModeEnums		 	 	55
			11.2.2.2	pinAcquisitionStatusSelectorEnums		 	 	55
			11.2.2.3	pinActionUnconditionalModeEnums		 	 	56
			11.2.2.4	pinAdcBitDepthEnums		 	 	56
			11.2.2.5	pinAutoAlgorithmSelectorEnums		 	 	57
			11.2.2.6	pinAutoExposureControlPriorityEnums .		 	 	57
			11.2.2.7	pinAutoExposureLightingModeEnums .		 	 	57
			11.2.2.8	pinAutoExposureMeteringModeEnums .		 	 	58
			11.2.2.9	pinAutoExposureTargetGreyValueAutoE	nums .	 	 	58
			11.2.2.10	pinBalanceRatioSelectorEnums		 	 	58
			11.2.2.11	pinBalanceWhiteAutoEnums		 	 	59
			11.2.2.12	pinBalanceWhiteAutoProfileEnums		 	 	59

11.2.2.13 spinBinningHorizontalModeEnums	59
11.2.2.14 spinBinningSelectorEnums	60
11.2.2.15 spinBinningVerticalModeEnums	60
11.2.2.16 spinBlackLevelAutoBalanceEnums	60
11.2.2.17 spinBlackLevelAutoEnums	61
11.2.2.18 spinBlackLevelSelectorEnums	61
11.2.2.19 spinChunkBlackLevelSelectorEnums	61
11.2.2.20 spinChunkCounterSelectorEnums	62
11.2.2.21 spinChunkEncoderSelectorEnums	62
11.2.2.22 spinChunkEncoderStatusEnums	62
11.2.2.23 spinChunkExposureTimeSelectorEnums	63
11.2.2.24 spinChunkGainSelectorEnums	63
11.2.2.25 spinChunkImageComponentEnums	63
11.2.2.26 spinChunkPixelFormatEnums	64
11.2.2.27 spinChunkRegionIDEnums	64
11.2.2.28 spinChunkScan3dCoordinateReferenceSelectorEnums	65
11.2.2.29 spinChunkScan3dCoordinateSelectorEnums	65
11.2.2.30 spinChunkScan3dCoordinateSystemEnums	65
11.2.2.31 spinChunkScan3dCoordinateSystemReferenceEnums	66
11.2.2.32 spinChunkScan3dCoordinateTransformSelectorEnums	66
11.2.2.33 spinChunkScan3dDistanceUnitEnums	66
11.2.2.34 spinChunkScan3dOutputModeEnums	67
11.2.2.35 spinChunkSelectorEnums	68
11.2.2.36 spinChunkSourceIDEnums	68
11.2.2.37 spinChunkTimerSelectorEnums	68
11.2.2.38 spinChunkTransferStreamIDEnums	69
11.2.2.39 spinClConfigurationEnums	69
11.2.2.40 spinClTimeSlotsCountEnums	70
11.2.2.41 spinColorTransformationSelectorEnums	70
11.2.2.42 spinColorTransformationValueSelectorEnums	70

iv CONTENTS

11.2.2.43 spinCompressionSaturationPriorityEnums	71
11.2.2.44 spinCounterEventActivationEnums	71
11.2.2.45 spinCounterEventSourceEnums	71
11.2.2.46 spinCounterResetActivationEnums	72
11.2.2.47 spinCounterResetSourceEnums	72
11.2.2.48 spinCounterSelectorEnums	73
11.2.2.49 spinCounterStatusEnums	73
11.2.2.50 spinCounterTriggerActivationEnums	74
11.2.2.51 spinCounterTriggerSourceEnums	74
11.2.2.52 spinCxpConnectionTestModeEnums	75
11.2.2.53 spinCxpLinkConfigurationEnums	75
11.2.2.54 spinCxpLinkConfigurationPreferredEnums	76
11.2.2.55 spinCxpLinkConfigurationStatusEnums	77
11.2.2.56 spinCxpPoCxpStatusEnums	78
11.2.2.57 spinDecimationHorizontalModeEnums	78
11.2.2.58 spinDecimationSelectorEnums	78
11.2.2.59 spinDecimationVerticalModeEnums	79
11.2.2.60 spinDefectCorrectionModeEnums	79
11.2.2.61 spinDeinterlacingEnums	79
11.2.2.62 spinDeviceCharacterSetEnums	80
11.2.2.63 spinDeviceClockSelectorEnums	80
11.2.2.64 spinDeviceConnectionStatusEnums	80
11.2.2.65 spinDeviceIndicatorModeEnums	81
11.2.2.66 spinDeviceLinkHeartbeatModeEnums	81
11.2.2.67 spinDeviceLinkThroughputLimitModeEnums	81
11.2.2.68 spinDevicePowerSupplySelectorEnums	82
11.2.2.69 spinDeviceRegistersEndiannessEnums	82
11.2.2.70 spinDeviceScanTypeEnums	82
11.2.2.71 spinDeviceSerialPortBaudRateEnums	82
11.2.2.72 spinDeviceSerialPortSelectorEnums	83

11.2.2.73 spinDeviceStreamChannelEndiannessEnums	83
11.2.2.74 spinDeviceStreamChannelTypeEnums	83
11.2.2.75 spinDeviceTapGeometryEnums	84
11.2.2.76 spinDeviceTemperatureSelectorEnums	85
11.2.2.77 spinDeviceTLTypeEnums	85
11.2.2.78 spinDeviceTypeEnums	86
11.2.2.79 spinEncoderModeEnums	86
11.2.2.80 spinEncoderOutputModeEnums	86
11.2.2.81 spinEncoderResetActivationEnums	87
11.2.2.82 spinEncoderResetSourceEnums	87
11.2.2.83 spinEncoderSelectorEnums	88
11.2.2.84 spinEncoderSourceAEnums	89
11.2.2.85 spinEncoderSourceBEnums	89
11.2.2.86 spinEncoderStatusEnums	89
11.2.2.87 spinEventNotificationEnums	90
11.2.2.88 spinEventSelectorEnums	90
11.2.2.89 spinExposureActiveModeEnums	90
11.2.2.90 spinExposureAutoEnums	91
11.2.2.91 spinExposureModeEnums	91
11.2.2.92 spinExposureTimeModeEnums	91
11.2.2.93 spinExposureTimeSelectorEnums	92
11.2.2.94 spinFileOpenModeEnums	92
11.2.2.95 spinFileOperationSelectorEnums	92
11.2.2.96 spinFileOperationStatusEnums	93
11.2.2.97 spinFileSelectorEnums	93
11.2.2.98 spinGainAutoBalanceEnums	93
11.2.2.99 spinGainAutoEnums	95
11.2.2.100spinGainSelectorEnums	95
11.2.2.101spinGevCCPEnums	95
11.2.2.102spinGevCurrentPhysicalLinkConfigurationEnums	96

vi

11.2.2.103spinGevGVCPExtendedStatusCodesSelectorEnums
11.2.2.104spinGevGVSPExtendedIDModeEnums
11.2.2.105spinGevIEEE1588ClockAccuracyEnums
11.2.2.106spinGevIEEE1588ModeEnums
11.2.2.107spinGevIEEE1588StatusEnums
11.2.2.10&pinGevIPConfigurationStatusEnums
11.2.2.10%spinGevPhysicalLinkConfigurationEnums
11.2.2.110spinGevSupportedOptionSelectorEnums
11.2.2.111spinImageComponentSelectorEnums
11.2.2.11&pinImageCompressionJPEGFormatOptionEnums
11.2.2.113spinImageCompressionModeEnums
11.2.2.114spinImageCompressionRateOptionEnums
11.2.2.115spinLineFormatEnums
11.2.2.116spinLineInputFilterSelectorEnums
11.2.2.117spinLineModeEnums
11.2.2.118spinLineSelectorEnums
11.2.2.119spinLineSourceEnums
11.2.2.120spinLogicBlockLUTInputActivationEnums
11.2.2.121spinLogicBlockLUTInputSelectorEnums
11.2.2.12&pinLogicBlockLUTInputSourceEnums
11.2.2.123spinLogicBlockLUTSelectorEnums
11.2.2.124spinLogicBlockSelectorEnums
11.2.2.125spinLUTSelectorEnums
11.2.2.126spinPixelColorFilterEnums
11.2.2.127spinPixelFormatEnums
11.2.2.12&pinPixelFormatInfoSelectorEnums
11.2.2.129spinPixelSizeEnums
11.2.2.130spinRegionDestinationEnums
11.2.2.131spinRegionModeEnums
11.2.2.132spinRegionSelectorEnums

CONTENTS vii

11.2.2.133spinRgbTransformLightSourceEnums
11.2.2.134spinScan3dCoordinateReferenceSelectorEnums
11.2.2.135spinScan3dCoordinateSelectorEnums
11.2.2.136spinScan3dCoordinateSystemEnums
11.2.2.137spinScan3dCoordinateSystemReferenceEnums
11.2.2.13&pinScan3dCoordinateTransformSelectorEnums
11.2.2.139spinScan3dDistanceUnitEnums
11.2.2.140spinScan3dOutputModeEnums
11.2.2.141spinSensorDigitizationTapsEnums
11.2.2.142spinSensorShutterModeEnums
11.2.2.143spinSensorTapsEnums
11.2.2.144spinSequencerConfigurationModeEnums
11.2.2.145spinSequencerConfigurationValidEnums
11.2.2.146spinSequencerModeEnums
11.2.2.147spinSequencerSetValidEnums
11.2.2.14&pinSequencerTriggerActivationEnums
11.2.2.149spinSequencerTriggerSourceEnums
11.2.2.150spinSerialPortBaudRateEnums
11.2.2.151spinSerialPortParityEnums
11.2.2.152spinSerialPortSelectorEnums
11.2.2.153spinSerialPortSourceEnums
11.2.2.154spinSerialPortStopBitsEnums
11.2.2.155spinSoftwareSignalSelectorEnums
11.2.2.156spinSourceSelectorEnums
11.2.2.157spinTestPatternEnums
11.2.2.15&pinTestPatternGeneratorSelectorEnums
11.2.2.159spinTimerSelectorEnums
11.2.2.160spinTimerStatusEnums
11.2.2.161spinTimerTriggerActivationEnums
11.2.2.162spinTimerTriggerSourceEnums

viii CONTENTS

11.2.2.163spinTransferComponentSelectorEnums	31
11.2.2.164spinTransferControlModeEnums	31
11.2.2.165spinTransferOperationModeEnums	31
11.2.2.166spinTransferQueueModeEnums	32
11.2.2.167spinTransferSelectorEnums	32
11.2.2.16&spinTransferStatusSelectorEnums	32
11.2.2.169spinTransferTriggerActivationEnums	33
11.2.2.170spinTransferTriggerModeEnums	33
11.2.2.171spinTransferTriggerSelectorEnums	34
11.2.2.17&pinTransferTriggerSourceEnums	34
11.2.2.173spinTriggerActivationEnums	35
11.2.2.174spinTriggerModeEnums	35
11.2.2.175spinTriggerOverlapEnums	36
11.2.2.176spinTriggerSelectorEnums	36
11.2.2.177spinTriggerSourceEnums	36
11.2.2.17&spinUserOutputSelectorEnums	37
11.2.2.179spinUserSetDefaultEnums	37
11.2.2.180spinUserSetSelectorEnums	38
11.2.2.181spinWhiteClipSelectorEnums	38
11.3 Chunk Data Structures	39
11.3.1 Detailed Description	39
11.4 Spinnaker C QuickSpin API	40
11.4.1 Detailed Description	40
11.5 QuickSpin Access	41
11.5.1 Detailed Description	41
11.5.2 Function Documentation	41
11.5.2.1 quickSpinInit()	41
11.5.2.2 quickSpinInitEx()	42
11.5.2.3 quickSpinTLDeviceInit()	42
11.5.2.4 quickSpinTLInterfaceInit()	42

		11.5.2.5	quickSpinTLStreamInit()	 142
		11.5.2.6	quickSpinTLSystemInit()	 142
11.6	Spinnal	ker C API		 143
1	11.6.1	Detailed	Description	 144
1	11.6.2	Function	Documentation	 144
		11.6.2.1	spinCameraDiscoverMaxPacketSize()	 144
11.7 E	Error H	andling .		 145
1	11.7.1	Detailed	Description	 145
1	11.7.2	Function	Documentation	 145
		11.7.2.1	spinErrorGetLast()	 145
		11.7.2.2	spinErrorGetLastBuildDate()	 146
		11.7.2.3	spinErrorGetLastBuildTime()	 146
		11.7.2.4	spinErrorGetLastFileName()	 147
		11.7.2.5	spinErrorGetLastFullMessage()	 147
		11.7.2.6	spinErrorGetLastFunctionName()	 148
		11.7.2.7	spinErrorGetLastLineNumber()	 148
		11.7.2.8	spinErrorGetLastMessage()	 149
11.8 5	System	Access		 150
1	11.8.1	Detailed	Description	 151
1	11.8.2	Function	Documentation	 151
		11.8.2.1	spinSystemGetCameras()	 151
		11.8.2.2	spinSystemGetCamerasEx()	 152
		11.8.2.3	spinSystemGetInstance()	 152
		11.8.2.4	spinSystemGetInterfaces()	 154
		11.8.2.5	spinSystemGetLibraryVersion()	 154
		11.8.2.6	spinSystemGetLoggingLevel()	 155
		11.8.2.7	spinSystemGetTLNodeMap()	 155
		11.8.2.8	spinSystemIsInUse()	 156
		11.8.2.9	spinSystemRegisterDeviceArrivalEventHandler()	 156
		11.8.2.10	) spinSystemRegisterDeviceRemovalEventHandler()	 157

11.8.2.11 spinSystemRegisterInterfaceEventHandler()	157
11.8.2.12 spinSystemRegisterLogEventHandler()	158
11.8.2.13 spinSystemReleaseInstance()	158
11.8.2.14 spinSystemSendActionCommand()	158
11.8.2.15 spinSystemSetLoggingLevel()	159
11.8.2.16 spinSystemUnregisterAllLogEventHandlers()	160
11.8.2.17 spinSystemUnregisterDeviceArrivalEventHandler()	160
11.8.2.18 spinSystemUnregisterDeviceRemovalEventHandler()	161
11.8.2.19 spinSystemUnregisterInterfaceEventHandler()	161
11.8.2.20 spinSystemUnregisterLogEventHandler()	162
11.8.2.21 spinSystemUpdateCameras()	162
11.8.2.22 spinSystemUpdateCamerasEx()	162
11.9 InterfaceList Access	164
11.9.1 Detailed Description	164
11.9.2 Function Documentation	164
11.9.2.1 spinInterfaceListClear()	164
11.9.2.2 spinInterfaceListCreateEmpty()	165
11.9.2.3 spinInterfaceListDestroy()	165
11.9.2.4 spinInterfaceListGet()	166
11.9.2.5 spinInterfaceListGetSize()	166
11.10CameraList Access	168
11.10.1 Detailed Description	168
11.10.2 Function Documentation	168
11.10.2.1 spinCameraListAppend()	169
11.10.2.2 spinCameraListClear()	169
11.10.2.3 spinCameraListCreateEmpty()	169
11.10.2.4 spinCameraListDestroy()	170
11.10.2.5 spinCameraListGet()	170
11.10.2.6 spinCameraListGetBySerial()	171
11.10.2.7 spinCameraListGetSize()	171

CONTENTS xi

11.10.2.8 spinCameraListRemove()	172
11.10.2.9 spinCameraListRemoveBySerial()	172
11.11 Interface Access	174
11.11.1 Detailed Description	175
11.11.2 Function Documentation	175
11.11.2.1 spinInterfaceGetCameras()	175
11.11.2.2 spinInterfaceGetCamerasEx()	175
11.11.2.3 spinInterfaceGetTLNodeMap()	176
11.11.2.4 spinInterfaceIsInUse()	176
11.11.2.5 spinInterfaceRegisterDeviceArrivalEventHandler()	177
11.11.2.6 spinInterfaceRegisterDeviceRemovalEventHandler()	177
11.11.2.7 spinInterfaceRegisterInterfaceEventHandler()	178
11.11.2.8 spinInterfaceRelease()	178
11.11.2.9 spinInterfaceSendActionCommand()	179
11.11.2.10spinInterfaceUnregisterDeviceArrivalEventHandler()	179
11.11.2.11spinInterfaceUnregisterDeviceRemovalEventHandler()	180
11.11.2.12spinInterfaceUnregisterInterfaceEventHandler()	180
11.11.2.13spinInterfaceUpdateCameras()	181
11.12Camera Access	182
11.12.1 Detailed Description	183
11.12.2 Function Documentation	183
11.12.2.1 spinCameraBeginAcquisition()	183
11.12.2.2 spinCameraDeInit()	184
11.12.2.3 spinCameraEndAcquisition()	184
11.12.2.4 spinCameraGetAccessMode()	185
11.12.2.5 spinCameraGetGuiXml()	185
11.12.2.6 spinCameraGetNextImage()	186
11.12.2.7 spinCameraGetNextImageEx()	186
11.12.2.8 spinCameraGetNodeMap()	187
11.12.2.9 spinCameraGetTLDeviceNodeMap()	187

xii CONTENTS

11.12.2.10spinCameraGetTLStreamNodeMap()	188
11.12.2.11spinCameraGetUniqueID()	188
11.12.2.12spinCameraInit()	189
11.12.2.13spinCameralsInitialized()	189
11.12.2.14spinCameralsStreaming()	189
11.12.2.15spinCameralsValid()	190
11.12.2.16spinCameraReadPort()	190
11.12.2.17spinCameraRegisterDeviceEventHandler()	191
11.12.2.18spinCameraRegisterDeviceEventHandlerEx()	191
11.12.2.19spinCameraRegisterImageEventHandler()	192
11.12.2.20spinCameraRelease()	192
11.12.2.21spinCameraUnregisterDeviceEventHandler()	192
11.12.2.22spinCameraUnregisterImageEventHandler()	193
11.12.2.23spinCameraWritePort()	193
11.13Image Access	194
11.13.1 Detailed Description	196
11.13.2 Function Documentation	196
11.13.2.1 spinImageCalculateStatistics()	196
11.13.2.2 spinImageCheckCRC()	197
11.13.2.3 spinImageConvert()	197
11.13.2.4 spinImageConvertEx()	198
11.13.2.5 spinImageCreate()	198
11.13.2.6 spinImageCreateEmpty()	199
11.13.2.7 spinImageCreateEx()	199
11.13.2.8 spinImageCreateEx2()	200
11.13.2.9 spinImageDeepCopy()	201
11.13.2.10spinImageDestroy()	201
11.13.2.11spinImageGetBitsPerPixel()	202
11.13.2.12spinImageGetBufferSize()	202
11.13.2.13spinImageGetChunkLayoutID()	203

CONTENTS xiii

11.13.2.14spinImageGetColorProcessing()
11.13.2.15spinImageGetData()
11.13.2.16spinImageGetDefaultColorProcessing()
11.13.2.17spinImageGetFrameID()
11.13.2.18spinImageGetHeight()
11.13.2.19spinImageGetID()
11.13.2.20spinImageGetNumDecompressionThreads()
11.13.2.21spinImageGetOffsetX()
11.13.2.2&pinImageGetOffsetY()
11.13.2.23spinImageGetPaddingX()
11.13.2.24spinImageGetPaddingY()
11.13.2.25spinImageGetPayloadType()
11.13.2.26spinImageGetPixelFormat()
11.13.2.27spinImageGetPixelFormatName()
11.13.2.2&spinImageGetPrivateData()
11.13.2.29spinImageGetSize()
11.13.2.30spinImageGetStatus()
11.13.2.31spinImageGetStatusDescription()
11.13.2.3&pinImageGetStride()
11.13.2.33spinImageGetTimeStamp()
11.13.2.34spinImageGetTLPayloadType()
11.13.2.35spinImageGetTLPixelFormat()
11.13.2.36spinImageGetTLPixelFormatNamespace()
11.13.2.37spinImageGetValidPayloadSize()
11.13.2.3&spinImageGetWidth()
11.13.2.39spinImageHasCRC()
11.13.2.40spinImageIsIncomplete()
11.13.2.41spinImageRelease()
11.13.2.42spinImageReset()
11.13.2.43spinImageResetEx()

xiv CONTENTS

11.13.2.44spinImageSave()	218
11.13.2.45spinImageSaveBmp()	218
11.13.2.4&pinImageSaveFromExt()	219
11.13.2.47spinImageSaveJpeg()	219
11.13.2.4&pinImageSaveJpg2()	220
11.13.2.4%pinImageSavePgm()	220
11.13.2.50spinImageSavePng()	221
11.13.2.51spinImageSavePpm()	221
11.13.2.5&pinImageSaveTiff()	222
11.13.2.53spinImageSetDefaultColorProcessing()	222
11.13.2.54spinImageSetNumDecompressionThreads()	223
11.14Event Access	224
11.14.1 Detailed Description	224
11.14.2 Function Documentation	224
11.14.2.1 spinDeviceArrivalEventHandlerCreate()	225
11.14.2.2 spinDeviceArrivalEventHandlerDestroy()	225
11.14.2.3 spinDeviceEventHandlerCreate()	226
11.14.2.4 spinDeviceEventHandlerDestroy()	226
11.14.2.5 spinDeviceRemovalEventHandlerCreate()	227
11.14.2.6 spinDeviceRemovalEventHandlerDestroy()	227
11.14.2.7 spinImageEventHandlerCreate()	228
11.14.2.8 spinImageEventHandlerDestroy()	228
11.14.2.9 spinInterfaceEventHandlerCreate()	229
11.14.2.10spinInterfaceEventHandlerDestroy()	229
11.14.2.11spinLogEventHandlerCreate()	230
11.14.2.12spinLogEventHandlerDestroy()	230
11.15ImageStatistics Access	231
11.15.1 Detailed Description	231
11.15.2 Function Documentation	232
11.15.2.1 spinImageStatisticsCreate()	232

CONTENTS xv

11.15.2.2 spinImageStatisticsDestroy()	 232
11.15.2.3 spinImageStatisticsDisableAll()	 232
11.15.2.4 spinImageStatisticsEnableAll()	 233
11.15.2.5 spinImageStatisticsEnableGreyOnly()	 233
11.15.2.6 spinImageStatisticsEnableHslOnly()	 234
11.15.2.7 spinImageStatisticsEnableRgbOnly()	 234
11.15.2.8 spinImageStatisticsGetAll()	 235
11.15.2.9 spinImageStatisticsGetChannelStatus()	 235
11.15.2.10spinImageStatisticsGetHistogram()	 236
11.15.2.11spinImageStatisticsGetMean()	 236
11.15.2.12spinImageStatisticsGetNumPixelValues()	 237
11.15.2.13spinImageStatisticsGetPixeIValueRange()	 237
11.15.2.14spinImageStatisticsGetRange()	 238
11.15.2.15spinImageStatisticsSetChannelStatus()	 238
11.16Logging Event Data Access	 240
11.16.1 Detailed Description	 240
11.16.2 Function Documentation	 240
11.16.2.1 spinLogDataGetCategoryName()	 240
11.16.2.2 spinLogDataGetLogMessage()	 241
11.16.2.3 spinLogDataGetNDC()	 241
11.16.2.4 spinLogDataGetPriority()	 242
11.16.2.5 spinLogDataGetPriorityName()	 242
11.16.2.6 spinLogDataGetThreadName()	 243
11.16.2.7 spinLogDataGetTimestamp()	 243
11.17 Device Event Data Access	 245
11.17.1 Detailed Description	 245
11.17.2 Function Documentation	 245
11.17.2.1 spinDeviceEventGetId()	 245
11.17.2.2 spinDeviceEventGetName()	 246
11.17.2.3 spinDeviceEventGetPayloadData()	 246

xvi CONTENTS

11.17.2.4 spinDeviceEventGetPayloadDataSize()
11.18 Chunk data access
11.18.1 Detailed Description
11.18.2 Function Documentation
11.18.2.1 spinImageChunkDataGetFloatValue()
11.18.2.2 spinImageChunkDataGetIntValue()
11.19Spinnaker C Handles
11.19.1 Detailed Description
11.19.2 Typedef Documentation
11.19.2.1 spinCamera
11.19.2.2 spinCameraList
11.19.2.3 spinDeviceArrivalEventHandler
11.19.2.4 spinDeviceEventData
11.19.2.5 spinDeviceEventHandler
11.19.2.6 spinDeviceRemovalEventHandler
11.19.2.7 spinImage
11.19.2.8 spinImageEventHandler
11.19.2.9 spinImageStatistics
11.19.2.10spinInterface
11.19.2.11spinInterfaceEventHandler
11.19.2.12spinInterfaceList
11.19.2.13spinLogEventData
11.19.2.14spinLogEventHandler
11.19.2.15spinSystem
11.19.2.16spinVideo
11.20 Spinnaker C Function Signatures
11.20.1 Detailed Description
11.20.2 Typedef Documentation
11.20.2.1 spinArrivalEventFunction
11.20.2.2 spinDeviceEventFunction

CONTENTS xvii

11.20.2.3 spinImageEventFunction
11.20.2.4 spinLogEventFunction
11.20.2.5 spinRemovalEventFunction
11.21 Spinnaker C Enumerations
11.21.1 Detailed Description
11.21.2 Enumeration Type Documentation
11.21.2.1 spinColorProcessingAlgorithm
11.21.2.2 spinError
11.21.2.3 spinImageFileFormat
11.21.2.4 spinImageStatus
11.21.2.5 spinnakerLogLevel
11.21.2.6 spinPayloadTypeInfoIDs
11.21.2.7 spinPixelFormatNamespaceID
11.21.2.8 spinStatisticsChannel
11.22 Spinnaker C Structures
11.22.1 Detailed Description
11.22.2 Enumeration Type Documentation
11.22.2.1 actionCommandStatus
11.22.2.2 spinCompressionMethod
11.22.3 Function Documentation
11.22.3.1 SPINNAKERC_STRUCT_DEPRECATED() [1/2]
11.22.3.2 SPINNAKERC_STRUCT_DEPRECATED() [2/2]
11.22.4 Variable Documentation
11.22.4.1 spinAVIOption
11.22.4.2 spinMJPGOption
11.23 Spinnaker C GenlCam API
11.23.1 Detailed Description
11.23.2 Function Documentation
11.23.2.1 spinCategoryReleaseNode()
11.24Node Map Access

xviii CONTENTS

70
70
70
71
71
72
72
74
75
75
75
76
76
77
77
78
78
79
79
30
30
31
31
32
32
32
33
33
34
34

CONTENTS xix

11.26 Value Access	6
11.26.1 Detailed Description	6
11.26.2 Function Documentation	6
11.26.2.1 spinNodeFromString()	6
11.26.2.2 spinNodeFromStringEx()	17
11.26.2.3 spinNodeToString()	17
11.26.2.4 spinNodeToStringEx()	8
11.27 String Access	9
11.27.1 Detailed Description	9
11.27.2 Function Documentation	9
11.27.2.1 spinStringGetMaxLength()	9
11.27.2.2 spinStringGetValue()	0
11.27.2.3 spinStringGetValueEx()	0
11.27.2.4 spinStringSetValue()	)1
11.27.2.5 spinStringSetValueEx()	11
11.28IInteger Access	13
11.28.1 Detailed Description	13
11.28.2 Function Documentation	13
11.28.2.1 spinIntegerGetInc()	13
11.28.2.2 spinIntegerGetMax()	14
11.28.2.3 spinIntegerGetMin()	)4
11.28.2.4 spinIntegerGetRepresentation()	15
11.28.2.5 spinIntegerGetValue()	15
11.28.2.6 spinIntegerGetValueEx()	16
11.28.2.7 spinIntegerSetValue()	16
11.28.2.8 spinIntegerSetValueEx()	)7
11.29IFloat Access	18
11.29.1 Detailed Description	8
11.29.2 Function Documentation	18
11.29.2.1 spinFloatGetMax()	8

11.29.2.2 spinFloatGetMin()
11.29.2.3 spinFloatGetRepresentation()
11.29.2.4 spinFloatGetUnit()
11.29.2.5 spinFloatGetValue()
11.29.2.6 spinFloatGetValueEx()
11.29.2.7 spinFloatSetValue()
11.29.2.8 spinFloatSetValueEx()
11.30 Enumeration Access
11.30.1 Detailed Description
11.30.2 Function Documentation
11.30.2.1 spinEnumerationGetCurrentEntry()
11.30.2.2 spinEnumerationGetEntryByIndex()
11.30.2.3 spinEnumerationGetEntryByName()
11.30.2.4 spinEnumerationGetNumEntries()
11.30.2.5 spinEnumerationReleaseNode()
11.30.2.6 spinEnumerationSetEnumValue()
11.30.2.7 spinEnumerationSetIntValue()
11.31 EnumEntry Access
11.31.1 Detailed Description
11.31.2 Function Documentation
11.31.2.1 spinEnumerationEntryGetEnumValue()
11.31.2.2 spinEnumerationEntryGetIntValue()
11.31.2.3 spinEnumerationEntryGetSymbolic()
11.32 Boolean Access
11.32.1 Detailed Description
11.32.2 Function Documentation
11.32.2.1 spinBooleanGetValue()
11.32.2.2 spinBooleanSetValue()
11.33ICommand Access
11.33.1 Detailed Description

CONTENTS xxi

11.33.2 Function Documentation
11.33.2.1 spinCommandExecute()
11.33.2.2 spinCommandIsDone()
11.34lCategory Access
11.34.1 Detailed Description
11.34.2 Function Documentation
11.34.2.1 spinCategoryGetFeatureByIndex()
11.34.2.2 spinCategoryGetNumFeatures()
11.35 Register Access
11.35.1 Detailed Description
11.35.2 Function Documentation
11.35.2.1 spinRegisterGet()
11.35.2.2 spinRegisterGetAddress()
11.35.2.3 spinRegisterGetEx()
11.35.2.4 spinRegisterGetLength()
11.35.2.5 spinRegisterSet()
11.35.2.6 spinRegisterSetEx()
11.35.2.7 spinRegisterSetReference()
11.36Spinnaker C GenlCam Handles
11.36.1 Detailed Description
11.36.2 Typedef Documentation
11.36.2.1 spinNodeCallbackFunction
11.36.2.2 spinNodeCallbackHandle
11.36.2.3 spinNodeHandle
11.36.2.4 spinNodeMapHandle
11.37 Spinnaker C GenlCam Enumerations
11.37.1 Detailed Description
11.37.2 Enumeration Type Documentation
11.37.2.1 spinAccessMode
11.37.2.2 spinCachingMode

xxii CONTENTS

11.37.2.3 spinDisplayNotation		 	327
11.37.2.4 spinEndianess		 	327
11.37.2.5 spinIncMode		 	328
11.37.2.6 spinInputDirection		 	328
11.37.2.7 spinInterfaceType		 	328
11.37.2.8 spinLinkType		 	329
11.37.2.9 spinNameSpace		 	330
11.37.2.10spinNodeType		 	330
11.37.2.11spinRepresentation		 	331
11.37.2.12spinSign		 	331
11.37.2.13spinSlope		 	331
11.37.2.14spinStandardNameSpace		 	332
11.37.2.15spinVisibility		 	332
11.37.2.16spinXMLValidation		 	332
11.37.2.17spinYesNo		 	334
11.38SpinVideo Recording Access		 	335
11.38.1 Detailed Description		 	335
11.38.2 Function Documentation		 	335
11.38.2.1 SPINNAKERC_API_DEPRECATE	<b>D()</b> [1/2]	 	335
11.38.2.2 SPINNAKERC_API_DEPRECATE	<b>D()</b> [2/2]	 	336
11.38.2.3 spinVideoAppend()		 	336
11.38.2.4 spinVideoClose()		 	336
11.38.2.5 spinVideoOpenH264()		 	336
11.38.2.6 spinVideoOpenMJPGEx()		 	336
11.38.2.7 spinVideoOpenUncompressedEx()		 	336
11.38.2.8 spinVideoSetMaximumFileSize()		 	337
11.39Transport Layer Enumerations		 	338
11.39.1 Detailed Description		 	339
11.39.2 Enumeration Type Documentation		 	339
11.39.2.1 spinTLDeviceAccessStatusEnums		 	340

CONTENTS xxiii

11.39.2.2 spinTLDeviceCurrentSpeedEnums	340
11.39.2.3 spinTLDeviceEndianessMechanismEnums	340
11.39.2.4 spinTLDeviceTypeEnums	341
11.39.2.5 spinTLFilterDriverStatusEnums	341
11.39.2.6 spinTLGenICamXMLLocationEnums	341
11.39.2.7 spinTLGevCCPEnums	342
11.39.2.8 spinTLGUIXMLLocationEnums	342
11.39.2.9 spinTLInterfaceTypeEnums	342
11.39.2.10spinTLPOEStatusEnums	343
11.39.2.11spinTLStreamBufferCountModeEnums	343
11.39.2.12spinTLStreamBufferHandlingModeEnums	343
11.39.2.13spinTLStreamModeEnums	344
11.39.2.14spinTLStreamTypeEnums	344
11.39.2.15spinTLTLTypeEnums	345
11.40TLDevice Structures	346
11.40.1 Detailed Description	346
11.41TLInterface Structures	347
11.41.1 Detailed Description	347
11.42TLStream Structures	348
11.42.1 Detailed Description	348
11.43TLSystem Structures	349
11.43.1 Detailed Description	

xxiv CONTENTS

12	Data	Structu	ire Docum	nentation	351
	12.1	actionC	CommandF	Result Struct Reference	351
		12.1.1	Detailed [	Description	351
		12.1.2	Field Doc	cumentation	351
			12.1.2.1	DeviceAddress	351
			12.1.2.2	Status	351
	12.2	quickSp	oin Struct F	Reference	352
		12.2.1	Field Doc	cumentation	364
			12.2.1.1	AasRoiEnable	364
			12.2.1.2	AasRoiHeight	364
			12.2.1.3	AasRoiOffsetX	364
			12.2.1.4	AasRoiOffsetY	364
			12.2.1.5	AasRoiWidth	365
			12.2.1.6	AcquisitionAbort	365
			12.2.1.7	AcquisitionArm	365
			12.2.1.8	AcquisitionBurstFrameCount	365
			12.2.1.9	AcquisitionFrameCount	365
			12.2.1.10	AcquisitionFrameRate	365
			12.2.1.11	AcquisitionFrameRateEnable	365
			12.2.1.12	AcquisitionLineRate	365
			12.2.1.13	AcquisitionMode	366
			12.2.1.14	AcquisitionResultingFrameRate	366
			12.2.1.15	AcquisitionStart	366
			12.2.1.16	AcquisitionStatus	366
			12.2.1.17	' AcquisitionStatusSelector	366
			12.2.1.18	AcquisitionStop	366
			12.2.1.19	ActionDeviceKey	366
			12.2.1.20	ActionGroupKey	366
			12.2.1.21	ActionGroupMask	367
			12.2.1.22	ActionQueueSize	367

CONTENTS xxv

12.2.1.23 ActionSelector
12.2.1.24 ActionUnconditionalMode
12.2.1.25 AdaptiveCompressionEnable
12.2.1.26 AdcBitDepth
12.2.1.27 aPAUSEMACCtrlFramesReceived
12.2.1.28 aPAUSEMACCtrlFramesTransmitted
12.2.1.29 AutoAlgorithmSelector
12.2.1.30 AutoExposureControlLoopDamping
12.2.1.31 AutoExposureControlPriority
12.2.1.32 AutoExposureEVCompensation
12.2.1.33 AutoExposureExposureTimeLowerLimit
12.2.1.34 AutoExposureExposureTimeUpperLimit
12.2.1.35 AutoExposureGainLowerLimit
12.2.1.36 AutoExposureGainUpperLimit
12.2.1.37 AutoExposureGreyValueLowerLimit
12.2.1.38 AutoExposureGreyValueUpperLimit
12.2.1.39 AutoExposureLightingMode
12.2.1.40 AutoExposureMeteringMode
12.2.1.41 AutoExposureTargetGreyValue
12.2.1.42 AutoExposureTargetGreyValueAuto
12.2.1.43 BalanceRatio
12.2.1.44 BalanceRatioSelector
12.2.1.45 BalanceWhiteAuto
12.2.1.46 BalanceWhiteAutoDamping
12.2.1.47 BalanceWhiteAutoLowerLimit
12.2.1.48 BalanceWhiteAutoProfile
12.2.1.49 BalanceWhiteAutoUpperLimit
12.2.1.50 BinningHorizontal
12.2.1.51 BinningHorizontalMode
12.2.1.52 BinningSelector

xxvi CONTENTS

12.2.1.53 BinningVertical
12.2.1.54 BinningVerticalMode
12.2.1.55 BlackLevel
12.2.1.56 BlackLevelAuto
12.2.1.57 BlackLevelAutoBalance
12.2.1.58 BlackLevelClampingEnable
12.2.1.59 BlackLevelRaw
12.2.1.60 BlackLevelSelector
12.2.1.61 ChunkBlackLevel
12.2.1.62 ChunkBlackLevelSelector
12.2.1.63 ChunkCompressionMode
12.2.1.64 ChunkCompressionRatio
12.2.1.65 ChunkCounterSelector
12.2.1.66 ChunkCounterValue
12.2.1.67 ChunkCRC
12.2.1.68 ChunkEnable
12.2.1.69 ChunkEncoderSelector
12.2.1.70 ChunkEncoderStatus
12.2.1.71 ChunkEncoderValue
12.2.1.72 ChunkExposureEndLineStatusAll
12.2.1.73 ChunkExposureTime
12.2.1.74 ChunkExposureTimeSelector
12.2.1.75 ChunkFrameID
12.2.1.76 ChunkGain
12.2.1.77 ChunkGainSelector
12.2.1.78 ChunkHeight
12.2.1.79 ChunkImage
12.2.1.80 ChunkImageComponent
12.2.1.81 ChunkInferenceBoundingBoxResult
12.2.1.82 ChunkInferenceConfidence

CONTENTS xxvii

12.2.1.83 ChunkInferenceFrameId
12.2.1.84 ChunkInferenceResult
12.2.1.85 ChunkLinePitch
12.2.1.86 ChunkLineStatusAll
12.2.1.87 ChunkModeActive
12.2.1.88 ChunkOffsetX
12.2.1.89 ChunkOffsetY
12.2.1.90 ChunkPartSelector
12.2.1.91 ChunkPixeIDynamicRangeMax
12.2.1.92 ChunkPixelDynamicRangeMin
12.2.1.93 ChunkPixelFormat
12.2.1.94 ChunkRegionID
12.2.1.95 ChunkScan3dAxisMax
12.2.1.96 ChunkScan3dAxisMin
12.2.1.97 ChunkScan3dCoordinateOffset
12.2.1.98 ChunkScan3dCoordinateReferenceSelector
12.2.1.99 ChunkScan3dCoordinateReferenceValue
12.2.1.100ChunkScan3dCoordinateScale
12.2.1.101ChunkScan3dCoordinateSelector
12.2.1.102ChunkScan3dCoordinateSystem
12.2.1.103ChunkScan3dCoordinateSystemReference
12.2.1.104ChunkScan3dCoordinateTransformSelector
12.2.1.105ChunkScan3dDistanceUnit
12.2.1.106ChunkScan3dInvalidDataFlag
12.2.1.107ChunkScan3dInvalidDataValue
12.2.1.108ChunkScan3dOutputMode
12.2.1.109ChunkScan3dTransformValue
12.2.1.110ChunkScanLineSelector
12.2.1.111ChunkSelector
12.2.1.112ChunkSequencerSetActive

xxviii CONTENTS

12.2.1.113ChunkSerialData
12.2.1.114ChunkSerialDataLength
12.2.1.115ChunkSerialReceiveOverflow
12.2.1.116ChunkSourceID
12.2.1.117ChunkStreamChannelID
12.2.1.118ChunkTimerSelector
12.2.1.119ChunkTimerValue
12.2.1.12@hunkTimestamp
12.2.1.121ChunkTimestampLatchValue
12.2.1.122ChunkTransferBlockID
12.2.1.123ChunkTransferQueueCurrentBlockCount
12.2.1.124ChunkTransferStreamID
12.2.1.125ChunkWidth
12.2.1.126CIConfiguration
12.2.1.127CITimeSlotsCount
12.2.1.12&ColorTransformationEnable
12.2.1.129ColorTransformationSelector
12.2.1.13@olorTransformationValue
12.2.1.131ColorTransformationValueSelector
12.2.1.132CompressionRatio
12.2.1.133CompressionSaturationPriority
12.2.1.134CounterDelay
12.2.1.135CounterDuration
12.2.1.136CounterEventActivation
12.2.1.137CounterEventSource
12.2.1.13&CounterReset
12.2.1.139CounterResetActivation
12.2.1.14@ounterResetSource
12.2.1.141CounterSelector
12.2.1.142CounterStatus

CONTENTS xxix

12.2.1.143CounterTriggerActivation
12.2.1.144CounterTriggerSource
12.2.1.145CounterValue
12.2.1.146CounterValueAtReset
12.2.1.147CxpConnectionSelector
12.2.1.148CxpConnectionTestErrorCount
12.2.1.149CxpConnectionTestMode
12.2.1.150CxpConnectionTestPacketCount
12.2.1.151CxpLinkConfiguration
12.2.1.152CxpLinkConfigurationPreferred
12.2.1.153CxpLinkConfigurationStatus
12.2.1.154CxpPoCxpAuto
12.2.1.155CxpPoCxpStatus
12.2.1.156CxpPoCxpTripReset
12.2.1.157CxpPoCxpTurnOff
12.2.1.158DecimationHorizontal
12.2.1.159DecimationHorizontalMode
12.2.1.16@ecimationSelector
12.2.1.161DecimationVertical
12.2.1.162DecimationVerticalMode
12.2.1.163DefectCorrectionMode
12.2.1.164DefectCorrectStaticEnable
12.2.1.165DefectTableApply
12.2.1.16@DefectTableCoordinateX
12.2.1.167DefectTableCoordinateY
12.2.1.168DefectTableFactoryRestore
12.2.1.169DefectTableIndex
12.2.1.170DefectTablePixelCount
12.2.1.171DefectTableSave
12.2.1.172Deinterlacing

12.2.1.173DeviceCharacterSet
12.2.1.174DeviceClockFrequency
12.2.1.175DeviceClockSelector
12.2.1.176DeviceConnectionSelector
12.2.1.177 Device Connection Speed
12.2.1.178DeviceConnectionStatus
12.2.1.179DeviceEventChannelCount
12.2.1.18@DeviceFamilyName
12.2.1.181DeviceFeaturePersistenceEnd
12.2.1.182DeviceFeaturePersistenceStart
12.2.1.183DeviceFirmwareVersion
12.2.1.184DeviceGenCPVersionMajor
12.2.1.185DeviceGenCPVersionMinor
12.2.1.186DeviceID
12.2.1.187DeviceIndicatorMode
12.2.1.188DeviceLinkBandwidthReserve
12.2.1.189DeviceLinkCommandTimeout
12.2.1.19@DeviceLinkConnectionCount
12.2.1.191DeviceLinkCurrentThroughput
12.2.1.192DeviceLinkHeartbeatMode
12.2.1.193DeviceLinkHeartbeatTimeout
12.2.1.194DeviceLinkSelector
12.2.1.195DeviceLinkSpeed
12.2.1.19@eviceLinkThroughputLimit
12.2.1.197DeviceLinkThroughputLimitMode
12.2.1.198DeviceManifestEntrySelector
12.2.1.199DeviceManifestPrimaryURL
12.2.1.200DeviceManifestSchemaMajorVersion
12.2.1.201DeviceManifestSchemaMinorVersion
12.2.1.202DeviceManifestSecondaryURL

CONTENTS xxxi

12.2.1.203DeviceManifestXMLMajorVersion
12.2.1.204DeviceManifestXMLMinorVersion
12.2.1.205DeviceManifestXMLSubMinorVersion
12.2.1.206DeviceManufacturerInfo
12.2.1.207DeviceMaxThroughput
12.2.1.208DeviceModelName
12.2.1.209DevicePowerSupplySelector
12.2.1.21@DeviceRegistersCheck
12.2.1.211DeviceRegistersEndianness
12.2.1.212DeviceRegistersStreamingEnd
12.2.1.213DeviceRegistersStreamingStart
12.2.1.214DeviceRegistersValid
12.2.1.215DeviceReset
12.2.1.216DeviceScanType
12.2.1.217DeviceSerialNumber
12.2.1.218DeviceSerialPortBaudRate
12.2.1.219DeviceSerialPortSelector
12.2.1.220DeviceSFNCVersionMajor
12.2.1.221DeviceSFNCVersionMinor
12.2.1.222DeviceSFNCVersionSubMinor
12.2.1.223DeviceStreamChannelCount
12.2.1.224DeviceStreamChannelEndianness
12.2.1.225DeviceStreamChannelLink
12.2.1.226DeviceStreamChannelPacketSize
12.2.1.227DeviceStreamChannelSelector
12.2.1.228DeviceStreamChannelType
12.2.1.229DeviceTapGeometry
12.2.1.23@DeviceTemperature
12.2.1.231DeviceTemperatureSelector
12.2.1.232DeviceTLType

xxxii CONTENTS

12.2.1.233DeviceTLVersionMajor
12.2.1.234DeviceTLVersionMinor
12.2.1.235DeviceTLVersionSubMinor
12.2.1.23@DeviceType
12.2.1.237DeviceUptime
12.2.1.238DeviceUserID
12.2.1.239DeviceVendorName
12.2.1.240DeviceVersion
12.2.1.241EncoderDivider
12.2.1.242EncoderMode
12.2.1.243EncoderOutputMode
12.2.1.244EncoderReset
12.2.1.245EncoderResetActivation
12.2.1.246EncoderResetSource
12.2.1.247EncoderSelector
12.2.1.248EncoderSourceA
12.2.1.249EncoderSourceB
12.2.1.250EncoderStatus
12.2.1.251EncoderTimeout
12.2.1.25ÆncoderValue
12.2.1.253EncoderValueAtReset
12.2.1.254EnumerationCount
12.2.1.25 EventAcquisitionEnd
12.2.1.256EventAcquisitionEndFrameID
12.2.1.257EventAcquisitionEndTimestamp
12.2.1.258EventAcquisitionError
12.2.1.259EventAcquisitionErrorFrameID
12.2.1.260EventAcquisitionErrorTimestamp
12.2.1.261EventAcquisitionStart
12.2.1.26ÆventAcquisitionStartFrameID

CONTENTS xxxiii

12.2.1.263EventAcquisitionStartTimestamp
12.2.1.264EventAcquisitionTransferEnd
12.2.1.26 Event Acquisition Transfer End Frame ID
12.2.1.266EventAcquisitionTransferEndTimestamp
12.2.1.267EventAcquisitionTransferStart
12.2.1.268EventAcquisitionTransferStartFrameID
12.2.1.269EventAcquisitionTransferStartTimestamp
12.2.1.270EventAcquisitionTrigger
12.2.1.271EventAcquisitionTriggerFrameID
12.2.1.272 EventAcquisitionTriggerTimestamp
12.2.1.273EventActionLate
12.2.1.274EventActionLateFrameID
12.2.1.27 EventActionLateTimestamp
12.2.1.276EventCounter0End
12.2.1.277EventCounter0EndFrameID
12.2.1.278EventCounter0EndTimestamp
12.2.1.279EventCounter0Start
12.2.1.280EventCounter0StartFrameID
12.2.1.281EventCounter0StartTimestamp
12.2.1.28ÆventCounter1End
12.2.1.283EventCounter1EndFrameID
12.2.1.284EventCounter1EndTimestamp
12.2.1.28 Event Counter 1 Start
12.2.1.28ŒventCounter1StartFrameID
12.2.1.287EventCounter1StartTimestamp
12.2.1.28&EventEncoder0Restarted
12.2.1.289EventEncoder0RestartedFrameID
12.2.1.290EventEncoder0RestartedTimestamp
12.2.1.291EventEncoder0Stopped
12.2.1.29ÆventEncoder0StoppedFrameID

12.2.1.293EventEncoder0StoppedTimestamp
12.2.1.294EventEncoder1Restarted
12.2.1.29 Event Encoder 1 Restarted Frame ID
12.2.1.29&ventEncoder1RestartedTimestamp
12.2.1.297EventEncoder1Stopped
12.2.1.298EventEncoder1StoppedFrameID
12.2.1.299EventEncoder1StoppedTimestamp
12.2.1.300EventError
12.2.1.301EventErrorCode
12.2.1.302EventErrorFrameID
12.2.1.303EventErrorTimestamp
12.2.1.304EventExposureEnd
12.2.1.305EventExposureEndFrameID
12.2.1.306EventExposureEndTimestamp
12.2.1.307EventExposureStart
12.2.1.308EventExposureStartFrameID
12.2.1.309EventExposureStartTimestamp
12.2.1.310EventFrameBurstEnd
12.2.1.311EventFrameBurstEndFrameID
12.2.1.312EventFrameBurstEndTimestamp
12.2.1.313EventFrameBurstStart
12.2.1.314EventFrameBurstStartFrameID
12.2.1.315EventFrameBurstStartTimestamp
12.2.1.316EventFrameEnd
12.2.1.317EventFrameEndFrameID
12.2.1.318EventFrameEndTimestamp
12.2.1.319EventFrameStart
12.2.1.320EventFrameStartFrameID
12.2.1.321EventFrameStartTimestamp
12.2.1.32ÆventFrameTransferEnd

CONTENTS XXXV

12.2.1.323EventFrameTransferEndFrameID
12.2.1.324EventFrameTransferEndTimestamp
12.2.1.325EventFrameTransferStart
12.2.1.326EventFrameTransferStartFrameID
12.2.1.327EventFrameTransferStartTimestamp
12.2.1.328EventFrameTrigger
12.2.1.329EventFrameTriggerFrameID
12.2.1.330EventFrameTriggerTimestamp
12.2.1.331EventLine0AnyEdge
12.2.1.332EventLine0AnyEdgeFrameID
12.2.1.333EventLine0AnyEdgeTimestamp
12.2.1.334EventLine0FallingEdge
12.2.1.335EventLine0FallingEdgeFrameID
12.2.1.336EventLine0FallingEdgeTimestamp
12.2.1.337EventLine0RisingEdge
12.2.1.338EventLine0RisingEdgeFrameID
12.2.1.339EventLine0RisingEdgeTimestamp
12.2.1.340EventLine1AnyEdge
12.2.1.341EventLine1AnyEdgeFrameID
12.2.1.342EventLine1AnyEdgeTimestamp
12.2.1.343EventLine1FallingEdge
12.2.1.344EventLine1FallingEdgeFrameID
12.2.1.345EventLine1FallingEdgeTimestamp
12.2.1.346EventLine1RisingEdge
12.2.1.347EventLine1RisingEdgeFrameID
12.2.1.348EventLine1RisingEdgeTimestamp
12.2.1.349EventLinkSpeedChange
12.2.1.350EventLinkSpeedChangeFrameID
12.2.1.351EventLinkSpeedChangeTimestamp
12.2.1.352EventLinkTrigger0

xxxvi CONTENTS

12.2.1.353EventLinkTrigger0FrameID
12.2.1.354EventLinkTrigger0Timestamp
12.2.1.35 EventLink Trigger 1
12.2.1.356EventLinkTrigger1FrameID
12.2.1.357EventLinkTrigger1Timestamp
12.2.1.358EventNotification
12.2.1.359EventSelector
12.2.1.360EventSequencerSetChange
12.2.1.361EventSequencerSetChangeFrameID
12.2.1.36 EventSequencerSetChangeTimestamp
12.2.1.363EventSerialData
12.2.1.364EventSerialDataLength
12.2.1.365EventSerialPortReceive
12.2.1.36 EventSerialPortReceiveTimestamp
12.2.1.367EventSerialReceiveOverflow
12.2.1.368EventStream0TransferBlockEnd
12.2.1.369EventStream0TransferBlockEndFrameID
12.2.1.370EventStream0TransferBlockEndTimestamp
12.2.1.371EventStream0TransferBlockStart
12.2.1.372EventStream0TransferBlockStartFrameID
12.2.1.373EventStream0TransferBlockStartTimestamp
12.2.1.374EventStream0TransferBlockTrigger
12.2.1.375EventStream0TransferBlockTriggerFrameID
12.2.1.376EventStream0TransferBlockTriggerTimestamp
12.2.1.377EventStream0TransferBurstEnd
12.2.1.378EventStream0TransferBurstEndFrameID
12.2.1.379EventStream0TransferBurstEndTimestamp
12.2.1.380EventStream0TransferBurstStart
12.2.1.381EventStream0TransferBurstStartFrameID
12.2.1.38 EventStream 0 Transfer Burst Start Time stamp

CONTENTS xxxvii

12.2.1.383EventStream0TransferEnd
12.2.1.384EventStream0TransferEndFrameID
12.2.1.385EventStream0TransferEndTimestamp
12.2.1.386EventStream0TransferOverflow
12.2.1.387EventStream0TransferOverflowFrameID
12.2.1.388EventStream0TransferOverflowTimestamp
12.2.1.389EventStream0TransferPause
12.2.1.390EventStream0TransferPauseFrameID
12.2.1.391EventStream0TransferPauseTimestamp
12.2.1.392EventStream0TransferResume
12.2.1.393EventStream0TransferResumeFrameID
12.2.1.394EventStream0TransferResumeTimestamp
12.2.1.395EventStream0TransferStart
12.2.1.396EventStream0TransferStartFrameID
12.2.1.397EventStream0TransferStartTimestamp
12.2.1.398EventTest
12.2.1.399EventTestTimestamp
12.2.1.400EventTimer0End
12.2.1.401EventTimer0EndFrameID
12.2.1.402EventTimer0EndTimestamp
12.2.1.403EventTimer0Start
12.2.1.404EventTimer0StartFrameID
12.2.1.405EventTimer0StartTimestamp
12.2.1.406EventTimer1End
12.2.1.407EventTimer1EndFrameID
12.2.1.408EventTimer1EndTimestamp
12.2.1.409EventTimer1Start
12.2.1.410EventTimer1StartFrameID
12.2.1.411EventTimer1StartTimestamp
12.2.1.41 Exposure Active Mode

xxxviii CONTENTS

12.2.1.413ExposureAuto
12.2.1.414ExposureMode
12.2.1.415ExposureTime
12.2.1.416ExposureTimeMode
12.2.1.417ExposureTimeSelector
12.2.1.418FactoryReset
12.2.1.419FileAccessBuffer
12.2.1.420FileAccessLength
12.2.1.421FileAccessOffset
12.2.1.422FileOpenMode
12.2.1.423FileOperationExecute
12.2.1.424FileOperationResult
12.2.1.425FileOperationSelector
12.2.1.426FileOperationStatus
12.2.1.427FileSelector
12.2.1.428FileSize
12.2.1.429Gain
12.2.1.430GainAuto
12.2.1.431GainAutoBalance
12.2.1.432GainSelector
12.2.1.433Gamma
12.2.1.434GammaEnable
12.2.1.435GevActiveLinkCount
12.2.1.436GevCCP
12.2.1.437GevCurrentDefaultGateway
12.2.1.438GevCurrentIPAddress
12.2.1.439GevCurrentIPConfigurationDHCP
12.2.1.440GevCurrentIPConfigurationLLA
12.2.1.441GevCurrentIPConfigurationPersistentIP
12.2.1.442GevCurrentPhysicalLinkConfiguration

CONTENTS xxxix

12.2.1.443GevCurrentSubnetMask
12.2.1.444GevDiscoveryAckDelay
12.2.1.445GevFirstURL
12.2.1.446GevGVCPExtendedStatusCodes
12.2.1.447GevGVCPExtendedStatusCodesSelector
12.2.1.448GevGVCPHeartbeatDisable
12.2.1.449GevGVCPPendingAck
12.2.1.450GevGVCPPendingTimeout
12.2.1.451GevGVSPExtendedIDMode
12.2.1.452GevHeartbeatTimeout
12.2.1.453GevIEEE1588
12.2.1.454GevIEEE1588ClockAccuracy
12.2.1.455GevIEEE1588Mode
12.2.1.456GevIEEE1588Status
12.2.1.457GevInterfaceSelector
12.2.1.458GevIPConfigurationStatus
12.2.1.459GevMACAddress
12.2.1.460GevMCDA
12.2.1.461GevMCPHostPort
12.2.1.462GevMCRC
12.2.1.463GevMCSP
12.2.1.464GevMCTT
12.2.1.465GevNumberOfInterfaces
12.2.1.466GevPAUSEFrameReception
12.2.1.467GevPAUSEFrameTransmission
12.2.1.468GevPersistentDefaultGateway
12.2.1.469GevPersistentIPAddress
12.2.1.470GevPersistentSubnetMask
12.2.1.471GevPhysicalLinkConfiguration
12.2.1.472GevPrimaryApplicationIPAddress

xI CONTENTS

12.2.1.473GevPrimaryApplicationSocket
12.2.1.474GevPrimaryApplicationSwitchoverKey
12.2.1.475GevSCCFGAllInTransmission
12.2.1.476GevSCCFGExtendedChunkData
12.2.1.477GevSCCFGPacketResendDestination
12.2.1.478GevSCCFGUnconditionalStreaming
12.2.1.479GevSCDA
12.2.1.480GevSCPD
12.2.1.481GevSCPDirection
12.2.1.482GevSCPHostPort
12.2.1.483GevSCPInterfaceIndex
12.2.1.484GevSCPSBigEndian
12.2.1.485GevSCPSDoNotFragment
12.2.1.486GevSCPSFireTestPacket
12.2.1.487GevSCPSPacketSize
12.2.1.488GevSCSP
12.2.1.489GevSCZoneConfigurationLock
12.2.1.490GevSCZoneCount
12.2.1.491GevSCZoneDirectionAll
12.2.1.492GevSecondURL
12.2.1.493GevStreamChannelSelector
12.2.1.494GevSupportedOption
12.2.1.495GevSupportedOptionSelector
12.2.1.496GevTimestampTickFrequency
12.2.1.497GuiXmlManifestAddress
12.2.1.498Height
12.2.1.499HeightMax
12.2.1.500lmageComponentEnable
12.2.1.501lmageComponentSelector
12.2.1.502mageCompressionBitrate

CONTENTS xli

12.2.1.503ImageCompressionJPEGFormatOption
12.2.1.504mageCompressionMode
12.2.1.505mageCompressionQuality
12.2.1.506mageCompressionRateOption
12.2.1.507 spEnable
12.2.1.508LineFilterWidth
12.2.1.509LineFormat
12.2.1.510LineInputFilterSelector
12.2.1.511LineInverter
12.2.1.512LineMode
12.2.1.513LinePitch
12.2.1.514LineSelector
12.2.1.515LineSource
12.2.1.516LineStatus
12.2.1.517LineStatusAll
12.2.1.518LinkErrorCount
12.2.1.519LinkUptime
12.2.1.520LogicBlockLUTInputActivation
12.2.1.521LogicBlockLUTInputSelector
12.2.1.522LogicBlockLUTInputSource
12.2.1.523LogicBlockLUTOutputValue
12.2.1.524LogicBlockLUTOutputValueAll
12.2.1.525LogicBlockLUTRowIndex
12.2.1.526LogicBlockLUTSelector
12.2.1.527LogicBlockSelector
12.2.1.528_UTEnable
12.2.1.529_UTIndex
12.2.1.530LUTSelector
12.2.1.531LUTValue
12.2.1.532_UTValueAll

xlii CONTENTS

12.2.1.533MaxDeviceResetTime
12.2.1.534OffsetX
12.2.1.535OffsetY
12.2.1.536PacketResendRequestCount
12.2.1.537PayloadSize
12.2.1.538PixelColorFilter
12.2.1.539PixeIDynamicRangeMax
12.2.1.540PixelDynamicRangeMin
12.2.1.541PixelFormat
12.2.1.542PixelFormatInfolD
12.2.1.543PixelFormatInfoSelector
12.2.1.544PixelSize
12.2.1.545PowerSupplyCurrent
12.2.1.546PowerSupplyVoltage
12.2.1.547RegionDestination
12.2.1.548RegionMode
12.2.1.549RegionSelector
12.2.1.550ReverseX
12.2.1.551ReverseY
12.2.1.552RgbTransformLightSource
12.2.1.553Saturation
12.2.1.554SaturationEnable
12.2.1.555Scan3dAxisMax
12.2.1.556Scan3dAxisMin
12.2.1.557Scan3dCoordinateOffset
12.2.1.55&Scan3dCoordinateReferenceSelector
12.2.1.559Scan3dCoordinateReferenceValue
12.2.1.560Scan3dCoordinateScale
12.2.1.561Scan3dCoordinateSelector
12.2.1.562Scan3dCoordinateSystem

CONTENTS xliii

12.2.1.563Scan3dCoordinateSystemReference
12.2.1.564Scan3dCoordinateTransformSelector
12.2.1.565Scan3dDistanceUnit
12.2.1.566Scan3dInvalidDataFlag
12.2.1.567Scan3dInvalidDataValue
12.2.1.568Scan3dOutputMode
12.2.1.569Scan3dTransformValue
12.2.1.570SensorDescription
12.2.1.571SensorDigitizationTaps
12.2.1.572SensorHeight
12.2.1.573SensorShutterMode
12.2.1.574SensorTaps
12.2.1.575SensorWidth
12.2.1.576SequencerConfigurationMode
12.2.1.577SequencerConfigurationValid
12.2.1.578SequencerFeatureEnable
12.2.1.579SequencerMode
12.2.1.580SequencerPathSelector
12.2.1.581SequencerSetActive
12.2.1.582SequencerSetLoad
12.2.1.583SequencerSetNext
12.2.1.584SequencerSetSave
12.2.1.585SequencerSetSelector
12.2.1.586SequencerSetStart
12.2.1.587SequencerSetValid
12.2.1.588SequencerTriggerActivation
12.2.1.589SequencerTriggerSource
12.2.1.590SerialPortBaudRate
12.2.1.591SerialPortDataBits
12.2.1.592SerialPortParity

XIIV CONTENTS

12.2.1.593SerialPortSelector
12.2.1.594SerialPortSource
12.2.1.595SerialPortStopBits
12.2.1.59&erialReceiveFramingErrorCount
12.2.1.597SerialReceiveParityErrorCount
12.2.1.59&erialReceiveQueueClear
12.2.1.599SerialReceiveQueueCurrentCharacterCount
12.2.1.600SerialReceiveQueueMaxCharacterCount
12.2.1.601SerialTransmitQueueCurrentCharacterCount
12.2.1.602SerialTransmitQueueMaxCharacterCount
12.2.1.603Sharpening
12.2.1.604SharpeningAuto
12.2.1.605SharpeningEnable
12.2.1.60\&harpeningThreshold
12.2.1.607SoftwareSignalPulse
12.2.1.60&oftwareSignalSelector
12.2.1.60%ourceCount
12.2.1.610SourceSelector
12.2.1.611Test0001
12.2.1.612TestEventGenerate
12.2.1.613TestPattern
12.2.1.614TestPatternGeneratorSelector
12.2.1.615TestPendingAck
12.2.1.616TimerDelay
12.2.1.617TimerDuration
12.2.1.618TimerReset
12.2.1.619TimerSelector
12.2.1.620TimerStatus
12.2.1.621TimerTriggerActivation
12.2.1.622TimerTriggerSource

CONTENTS xlv

12.2.1.623TimerValue
12.2.1.624Timestamp
12.2.1.625TimestampLatch
12.2.1.626TimestampLatchValue
12.2.1.627TimestampReset
12.2.1.628TLParamsLocked
12.2.1.629TransferAbort
12.2.1.630TransferBlockCount
12.2.1.631TransferBurstCount
12.2.1.632TransferComponentSelector
12.2.1.633TransferControlMode
12.2.1.634TransferOperationMode
12.2.1.635TransferPause
12.2.1.636TransferQueueCurrentBlockCount
12.2.1.637TransferQueueMaxBlockCount
12.2.1.638TransferQueueMode
12.2.1.639TransferQueueOverflowCount
12.2.1.640TransferResume
12.2.1.641TransferSelector
12.2.1.642TransferStart
12.2.1.643TransferStatus
12.2.1.644TransferStatusSelector
12.2.1.645TransferStop
12.2.1.646TransferStreamChannel
12.2.1.647TransferTriggerActivation
12.2.1.648TransferTriggerMode
12.2.1.649TransferTriggerSelector
12.2.1.650TransferTriggerSource
12.2.1.651TriggerActivation
12.2.1.652TriggerDelay

XIVI CONTENTS

	12.2.1.653TriggerDivider
	12.2.1.654TriggerEventTest
	12.2.1.655TriggerMode
	12.2.1.656TriggerMultiplier
	12.2.1.657TriggerOverlap
	12.2.1.658TriggerSelector
	12.2.1.659TriggerSoftware
	12.2.1.660TriggerSource
	12.2.1.661UserOutputSelector
	12.2.1.662UserOutputValue
	12.2.1.663UserOutputValueAll
	12.2.1.664UserOutputValueAllMask
	12.2.1.665UserSetDefault
	12.2.1.666UserSetFeatureEnable
	12.2.1.667UserSetLoad
	12.2.1.668UserSetSave
	12.2.1.669UserSetSelector
	12.2.1.670V3_3Enable
	12.2.1.671WhiteClip
	12.2.1.672WhiteClipSelector
	12.2.1.673Width
	12.2.1.674WidthMax
12.3 quickS	pinTLDevice Struct Reference
12.3.1	Field Documentation
	12.3.1.1 DeviceAccessStatus
	12.3.1.2 DeviceCurrentSpeed
	12.3.1.3 DeviceDisplayName
	12.3.1.4 DeviceDriverVersion
	12.3.1.5 DeviceEndianessMechanism
	12.3.1.6 DeviceID

CONTENTS xlvii

12.3.1.7 DeviceInstanceId
12.3.1.8 DeviceIsUpdater
12.3.1.9 DeviceLinkSpeed
12.3.1.10 DeviceLocation
12.3.1.11 DeviceModelName
12.3.1.12 DeviceMulticastMonitorMode
12.3.1.13 DevicePortId
12.3.1.14 DeviceSerialNumber
12.3.1.15 DeviceType
12.3.1.16 DeviceU3VProtocol
12.3.1.17 DeviceUserID
12.3.1.18 DeviceVendorName
12.3.1.19 DeviceVersion
12.3.1.20 GenlCamXMLLocation
12.3.1.21 GenlCamXMLPath
12.3.1.22 GevCCP
12.3.1.23 GevDeviceAutoForceIP
12.3.1.24 GevDeviceDiscoverMaximumPacketSize
12.3.1.25 GevDeviceForceGateway
12.3.1.26 GevDeviceForceIP
12.3.1.27 GevDeviceForceIPAddress
12.3.1.28 GevDeviceForceSubnetMask
12.3.1.29 GevDeviceGateway
12.3.1.30 GevDeviceIPAddress
12.3.1.31 GevDeviceIsWrongSubnet
12.3.1.32 GevDeviceMACAddress
12.3.1.33 GevDeviceMaximumPacketSize
12.3.1.34 GevDeviceMaximumRetryCount
12.3.1.35 GevDeviceModelsBigEndian
12.3.1.36 GevDevicePort

xlviii CONTENTS

	12.3.1.37 GevDeviceReadAndWriteTimeout
	12.3.1.38 GevDeviceSubnetMask
	12.3.1.39 GevVersionMajor
	12.3.1.40 GevVersionMinor
	12.3.1.41 GUIXMLLocation
	12.3.1.42 GUIXMLPath
12.4 quickS	pinTLInterface Struct Reference
12.4.1	Field Documentation
	12.4.1.1 ActionCommand
	12.4.1.2 DeviceAccessStatus
	12.4.1.3 DeviceCount
	12.4.1.4 DeviceID
	12.4.1.5 DeviceModelName
	12.4.1.6 DeviceSelector
	12.4.1.7 DeviceSerialNumber
	12.4.1.8 DeviceUnlock
	12.4.1.9 DeviceUpdateList
	12.4.1.10 DeviceVendorName
	12.4.1.11 FilterDriverStatus
	12.4.1.12 GevActionDeviceKey
	12.4.1.13 GevActionGroupKey
	12.4.1.14 GevActionGroupMask
	12.4.1.15 GevActionTime
	12.4.1.16 GevDeviceAutoForceIP
	12.4.1.17 GevDeviceForceGateway
	12.4.1.18 GevDeviceForceIP
	12.4.1.19 GevDeviceForceIPAddress
	12.4.1.20 GevDeviceForceSubnetMask
	12.4.1.21 GevDeviceGateway
	12.4.1.22 GevDeviceIPAddress

CONTENTS xlix

		12.4.1.23	3 GevDeviceMACAddress	. 459
		12.4.1.24	GevDeviceSubnetMask	. 459
		12.4.1.25	GevInterfaceGateway	. 459
		12.4.1.26	GevInterfaceGatewaySelector	. 459
		12.4.1.27	GevInterfaceMACAddress	. 459
		12.4.1.28	B GevInterfaceMTU	. 459
		12.4.1.29	GevInterfaceReceiveLinkSpeed	. 460
		12.4.1.30	GevInterfaceSubnetIPAddress	. 460
		12.4.1.31	GevInterfaceSubnetMask	. 460
		12.4.1.32	2 GevInterfaceSubnetSelector	. 460
		12.4.1.33	B GevInterfaceTransmitLinkSpeed	. 460
		12.4.1.34	HostAdapterDriverVersion	. 460
		12.4.1.35	5 HostAdapterName	. 460
		12.4.1.36	6 HostAdapterVendor	. 460
		12.4.1.37	7 IncompatibleDeviceCount	. 461
		12.4.1.38	3 IncompatibleDeviceID	. 461
		12.4.1.39	IncompatibleDeviceModelName	. 461
		12.4.1.40	IncompatibleDeviceSelector	. 461
		12.4.1.41	IncompatibleDeviceVendorName	. 461
		12.4.1.42	2 IncompatibleGevDeviceIPAddress	. 461
		12.4.1.43	3 IncompatibleGevDeviceMACAddress	. 461
		12.4.1.44	IncompatibleGevDeviceSubnetMask	. 461
		12.4.1.45	5 InterfaceDisplayName	. 462
		12.4.1.46	6 InterfaceID	. 462
		12.4.1.47	7 InterfaceType	. 462
		12.4.1.48	B POEStatus	. 462
12.5	quickSp	oinTLStrea	am Struct Reference	. 462
	12.5.1	Field Doc	cumentation	. 463
		12.5.1.1	GevFailedPacketCount	. 463
		12.5.1.2	GevMaximumNumberResendRequests	. 463

I CONTENTS

12.5.1.3 GevPacketResendMode
12.5.1.4 GevPacketResendTimeout
12.5.1.5 GevResendPacketCount
12.5.1.6 GevResendRequestCount
12.5.1.7 GevTotalPacketCount
12.5.1.8 StreamAnnounceBufferMinimum
12.5.1.9 StreamAnnouncedBufferCount
12.5.1.10 StreamBlockTransferSize
12.5.1.11 StreamBufferAlignment
12.5.1.12 StreamBufferCountManual
12.5.1.13 StreamBufferCountMax
12.5.1.14 StreamBufferCountMode
12.5.1.15 StreamBufferCountResult
12.5.1.16 StreamBufferHandlingMode
12.5.1.17 StreamChunkCountMaximum
12.5.1.18 StreamCRCCheckEnable
12.5.1.19 StreamDeliveredFrameCount
12.5.1.20 StreamDroppedFrameCount
12.5.1.21 StreamFailedBufferCount
12.5.1.22 StreamID
12.5.1.23 StreamIncompleteFrameCount
12.5.1.24 StreamInputBufferCount
12.5.1.25 StreamIsGrabbing
12.5.1.26 StreamLostFrameCount
12.5.1.27 StreamMissedPacketCount
12.5.1.28 StreamMode
12.5.1.29 StreamOutputBufferCount
12.5.1.30 StreamPacketResendEnable
12.5.1.31 StreamPacketResendMaxRequests
12.5.1.32 StreamPacketResendReceivedPacketCount

CONTENTS

	12.5.1.33 StreamPacketResendRequestCount	467
	12.5.1.34 StreamPacketResendRequestedPacketCount	467
	12.5.1.35 StreamPacketResendRequestSuccessCount	467
	12.5.1.36 StreamPacketResendTimeout	467
	12.5.1.37 StreamReceivedFrameCount	468
	12.5.1.38 StreamReceivedPacketCount	468
	12.5.1.39 StreamStartedFrameCount	468
	12.5.1.40 StreamType	468
12.6 quickS	SpinTLSystem Struct Reference	468
12.6.1	Field Documentation	469
	12.6.1.1 EnumerateGen2Cameras	469
	12.6.1.2 EnumerateGEVInterfaces	469
	12.6.1.3 EnumerateUSBInterfaces	469
	12.6.1.4 GenTLSFNCVersionMajor	469
	12.6.1.5 GenTLSFNCVersionMinor	469
	12.6.1.6 GenTLSFNCVersionSubMinor	469
	12.6.1.7 GenTLVersionMajor	469
	12.6.1.8 GenTLVersionMinor	470
	12.6.1.9 GevInterfaceDefaultGateway	470
	12.6.1.10 GevInterfaceDefaultIPAddress	470
	12.6.1.11 GevInterfaceDefaultSubnetMask	470
	12.6.1.12 GevInterfaceMACAddress	470
	12.6.1.13 GevVersionMajor	470
	12.6.1.14 GevVersionMinor	470
	12.6.1.15 InterfaceDisplayName	470
	12.6.1.16 InterfaceID	471
	12.6.1.17 InterfaceSelector	471
	12.6.1.18 InterfaceUpdateList	471
	12.6.1.19 TLDisplayName	471
	12.6.1.20 TLFileName	471

lii CONTENTS

	12.6.1.21 TLID	. 471
	12.6.1.22 TLModelName	. 471
	12.6.1.23 TLPath	. 471
	12.6.1.24 TLType	. 472
	12.6.1.25 TLVendorName	. 472
	12.6.1.26 TLVersion	. 472
12.7 spinAV	OptionEx Struct Reference	. 472
12.7.1	Detailed Description	. 472
12.7.2	Field Documentation	. 472
	12.7.2.1 frameRate	. 473
	12.7.2.2 height	. 473
	12.7.2.3 reserved	. 473
	12.7.2.4 width	. 473
12.8 spinBM	POption Struct Reference	. 473
12.8.1	Detailed Description	. 473
12.8.2	Field Documentation	. 474
	12.8.2.1 indexedColor_8bit	. 474
	12.8.2.2 reserved	. 474
12.9 spinCh	nkData Struct Reference	. 474
12.9.1	Detailed Description	. 475
12.9.2	Field Documentation	. 475
	12.9.2.1 m_blackLevel	. 475
	12.9.2.2 m_compressionMode	. 475
	12.9.2.3 m_compressionRatio	. 475
	12.9.2.4 m_counterValue	. 476
	12.9.2.5 m_cRC	. 476
	12.9.2.6 m_encoderValue	. 476
	12.9.2.7 m_exposureEndLineStatusAll	. 476
	12.9.2.8 m_exposureTime	. 476
	12.9.2.9 m_frameID	. 476

CONTENTS

12.9.2.10 m_gain
12.9.2.11 m_height
12.9.2.12 m_image
12.9.2.13 m_inferenceConfidence
12.9.2.14 m_inferenceFrameId
12.9.2.15 m_inferenceResult
12.9.2.16 m_linePitch
12.9.2.17 m_lineStatusAll
12.9.2.18 m_offsetX
12.9.2.19 m_offsetY
12.9.2.20 m_partSelector
12.9.2.21 m_pixelDynamicRangeMax
12.9.2.22 m_pixelDynamicRangeMin
12.9.2.23 m_scan3dAxisMax
12.9.2.24 m_scan3dAxisMin
12.9.2.25 m_scan3dCoordinateOffset
12.9.2.26 m_scan3dCoordinateReferenceValue
12.9.2.27 m_scan3dCoordinateScale
12.9.2.28 m_scan3dInvalidDataValue
12.9.2.29 m_scan3dTransformValue
12.9.2.30 m_scanLineSelector
12.9.2.31 m_sequencerSetActive
12.9.2.32 m_serialDataLength
12.9.2.33 m_streamChannelID
12.9.2.34 m_timerValue
12.9.2.35 m_timestamp
12.9.2.36 m_timestampLatchValue
12.9.2.37 m_transferBlockID
12.9.2.38 m_transferQueueCurrentBlockCount
12.9.2.39 m_width

liv CONTENTS

12.10spinH264Option Struct Reference
12.10.1 Detailed Description
12.10.2 Field Documentation
12.10.2.1 bitrate
12.10.2.2 frameRate
12.10.2.3 height
12.10.2.4 reserved
12.10.2.5 width
12.11 spinJPEGOption Struct Reference
12.11.1 Detailed Description
12.11.2 Field Documentation
12.11.2.1 progressive
12.11.2.2 quality
12.11.2.3 reserved
12.12spinJPG2Option Struct Reference
12.12.1 Detailed Description
12.12.2 Field Documentation
12.12.2.1 quality
12.12.2.2 reserved
12.13spinLibraryVersion Struct Reference
12.13.1 Detailed Description
12.13.2 Field Documentation
12.13.2.1 build
12.13.2.2 major
12.13.2.3 minor
12.13.2.4 type
12.14spinMJPGOptionEx Struct Reference
12.14.1 Detailed Description
12.14.2 Field Documentation
12.14.2.1 frameRate

CONTENTS

12.14.2.2 height	186
12.14.2.3 quality	186
12.14.2.4 reserved	186
12.14.2.5 width	186
12.15spinPGMOption Struct Reference	186
12.15.1 Detailed Description	186
12.15.2 Field Documentation	187
12.15.2.1 binaryFile	187
12.15.2.2 reserved	187
12.16spinPNGOption Struct Reference	187
12.16.1 Detailed Description	187
12.16.2 Field Documentation	187
12.16.2.1 compressionLevel	188
12.16.2.2 interlaced	188
12.16.2.3 reserved	188
12.17spinPPMOption Struct Reference	188
12.17.1 Detailed Description	188
12.17.2 Field Documentation	188
12.17.2.1 binaryFile	189
12.17.2.2 reserved	189
12.18spinTIFFOption Struct Reference	189
12.18.1 Detailed Description	189
12.18.2 Field Documentation	189
12.18.2.1 compression	189
12.18.2.2 reserved	189

lvi CONTENTS

13	File Documentation	491
	13.1 doc/spindocs/C/GettingStarted.dox File Reference	491
	13.2 doc/spindocs/C/ProgrammerGuide.dox File Reference	491
	13.3 doc/spindocs/shared/Benefits.dox File Reference	491
	13.4 doc/spindocs/shared/FlyCapture2Comparison.dox File Reference	491
	13.5 doc/spindocs/shared/GenICamGenTL.dox File Reference	491
	13.6 doc/spindocs/shared/Licensing.dox File Reference	491
	13.7 doc/spindocs/shared/Maintenance.dox File Reference	491
	13.8 include/spinc/CameraDefsC.h File Reference	491
	13.9 include/spinc/ChunkDataDefC.h File Reference	524
	13.10include/spinc/QuickSpinC.h File Reference	525
	13.11include/spinc/QuickSpinDefsC.h File Reference	525
	13.11.1 Typedef Documentation	526
	13.11.1.1 quickSpinBooleanNode	526
	13.11.1.2 quickSpinCommandNode	526
	13.11.1.3 quickSpinEnumerationNode	526
	13.11.1.4 quickSpinFloatNode	527
	13.11.1.5 quickSpinIntegerNode	527
	13.11.1.6 quickSpinRegisterNode	527
	13.11.1.7 quickSpinStringNode	527
	13.12include/spinc/SpinnakerC.h File Reference	527
	13.12.1 Function Documentation	536
	13.12.1.1 spinCameraForceIP()	536
	13.13include/spinc/SpinnakerDefsC.h File Reference	537
	13.14include/spinc/SpinnakerGenApiC.h File Reference	542
	13.15include/spinc/SpinnakerGenApiDefsC.h File Reference	546
	13.16include/spinc/SpinnakerPlatformC.h File Reference	549
	13.16.1 Macro Definition Documentation	549
	13.16.1.1 SPINNAKERC_API	549
	13.17include/spinc/SpinVideoC.h File Reference	550
	13.18include/spinc/TransportLayerDefsC.h File Reference	551
	13.19include/spinc/TransportLayerDeviceC.h File Reference	553
	13.20include/spinc/TransportLayerInterfaceC.h File Reference	553
	13.21include/spinc/TransportLayerStreamC.h File Reference	554
	13.22include/spinc/TransportLayerSystemC.h File Reference	555
Ind	ex	557

## **Getting Started**

The Spinnaker application programming interface (API) is used to interface with FLIR's USB3 Vision and GigE Vision cameras.

- · Benefits of Spinnaker
- Software Licensing Information
- Software Maintenance Policy
- FlyCapture2 Feature Comparison with Spinnaker
- Programmer's Guide
- Working with GenICam GenTL Devices
- Myricom

2 Getting Started

# **Programmer's Guide**

# **Benefits of Spinnaker**

Please see (http://softwareservices.flir.com/Spinnaker/latest/index.html) for the latest version of this document

# FlyCapture2 Feature Comparison with Spinnaker

Please see (http://softwareservices.flir.com/Spinnaker/latest/page3.html) for the latest version of this document

## Working with GenICam GenTL Devices

#### 5.1 GenTL Overview

FLIR GenTL Producer is a software driver that implements the GenICam<sup>TM</sup> GenTL 1.5 standard (https-://www.emva.org/). It allows users to enumerate, communicate and stream from FLIR GigE Vision and USB3 Vision devices in a generic way independent from the underlying transport technology. This allows third-party software such as MATLAB (https://www.mathworks.com) and other software libraries to work with FLIR devices in a transport layer agnostic way. These applications are referred to as "GenTL Consumers," which directly use one or more GenTL Producers.

**NOTE**: Consumer applications must be aware of differences in device capabilities and be prepared to handle specific device models differently.

#### 5.2 Installation

In order to use a FLIR GenTL producer, it needs to be properly registered and installed on the system. **The FLIR Producer comes packaged with the full Spinnaker SDK installer as of 2.x or newer.** 

The GenTL Producer is provided as a platform dependent, dynamic loadable library file with the .cti ("Common Transport Interface") extension.

The Spinnaker SDK installer stores the folder paths for 32-bit and 64-bit GenTL Producers (.cti files) in environment variables named <code>GENICAM\_GENTL32\_PATH</code> and <code>GENICAM\_GENTL64\_PATH</code>, respectively. If there are multiple GenTL Producers installed on the system, path entries must be separated by ; on Windows and : on UNIX-like systems.

**NOTE**: A 32bit GenTL consumer application will require a 32-bit GenTL producer and a 64-bit application will require a 64-bit producer library.

### 5.3 Troubleshooting

#### 5.3.1 Enable FLIR GenTL Logging

FLIR GenTL Logging can be enabled if a configuration file with the name "log4cpp.gentl.property" resides in the path of where the consumer application executes from. For MATLAB, this is where the working directory is set and may default to the "Downloads" folder on Windows.

Sample log4cpp.gentl.property configuration file:

```
# FLIR GenTL Property Configuration file
log4cpp.rootCategory=ERROR, rootAppender
log4cpp.category.GenTLCategory=ERROR, GenTLCategory

log4cpp.appender.rootAppender=ConsoleAppender
log4cpp.appender.rootAppender.layout=PatternLayout
log4cpp.appender.rootAppender.layout.ConversionPattern=[%p] %d [%t] %m%n

log4cpp.appender.GenTLCategory=RollingFileAppender
log4cpp.appender.GenTLCategory.fileName=$(ALLUSERSPROFILE)\Spinnaker\Logs\GenTL.log
log4cpp.appender.GenTLCategory.append=true
log4cpp.appender.GenTLCategory.maxFileSize=1000000
log4cpp.appender.GenTLCategory.maxBackupIndex=5
log4cpp.appender.GenTLCategory.layout=PatternLayout
log4cpp.appender.GenTLCategory.layout.ConversionPattern=[%p] %d [%t] %m%n
```

#### 5.3.2 USB3 Device Image Tearing

Image tearing could occur with certain USB3 host controllers when streaming with a GenTL producer. To work around the issue, make sure the size of each buffer announced to the FLIR GenTL producer is 1024 bytes aligned. The size of each buffer should be (bufferSize + 1024 - 1) / 1024) \* 1024 where 1024 is the USB3 packet transfer size.

For more information about image tearing causes and solutions, please refer to: https://www.flir.← com/support-center/iis/machine-vision/application-note/image-tearing-causes-and-solution

# **Software Licensing Information**

Table 6.1 License table

Component	License
Spinnaker	Copyright (c) 2001-2020 FLIR Systems, Inc. All Rights Reserved.  This software is the confidential and proprietary information of FLIR Integrated Imaging Solutions, Inc. (" Confidential Information"). You shall not disclose such Confidential Information and shall use it only in accordance with the terms of the license agreement you entered into with FLIR Integrated Imaging Solutions, Inc. (FLIR).  FLIR MAKES NO REPRESENTATIONS OR WARR ANTIES ABOUT THE SUITABILITY OF THE SOFT WARE, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARENANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR NON-INFRINGEM ENT. FLIR SHALL NOT BE LIABLE FOR ANY DAM AGES SUFFERED BY LICENSEE AS A RESULT OF USING, MODIFYING OR DISTRIBUTING THIS SO
GenlCam	GenICam License
AdapterList	The Code Project Open License (CP↔ OL)
Make ListView.ScrollIntoView Scroll the Item into the Center of the ListView	WP:CC_BY-SA License
Work with Bitmaps Faster in C#	The Code Project Open License (CP↔ OL) 1.02
Freelmage	FreeImage public license
Boost	Boost Software License
Libusb	LGPLv2.1 License
Libraw1394	LGPLv2.0 License
FFMPEG	LGPv2.1 License
log4Net	Apache license 2.0
log4Cpp	LGPL License

The licenses mentioned above can also be found in the Spinnaker installed license folder.

## **Software Maintenance Policy**

#### 7.1 GenTL Overview

This document outlines the FLIR maintenance policy for Spinnaker Software Development Kit (SDK). FLIR regularly provides SDK updates that may contain support for new or updated features, enhancements, updated drivers, updated examples, bug fixes or documentation updates. Updates may also address changes with introducing and/or deprecating language runtimes, operating systems and dependencies.

We recommend users to stay up-to-date with SDK releases to keep up with the latest features, bug fixes and performance improvements. Continued use of an unsupported SDK version is not recommended and is done at the user's discretion.

Spinnaker SDK releases are published through our website and can be found here: https://www.flir.←ca/products/spinnaker-sdk/

### 7.2 Platform Support Policy

#### 7.2.1 Windows Support

FLIR will continue to maintain, fix and build the last two major versions of Spinnaker SDK against the latest available version of Windows x86/x64. The latest three versions of Visual Studio compiler toolchain are supported on Windows. Only the latest compiler toolchain on the latest available version of Windows are being actively tested.

#### 7.2.2 Linux Desktop Support

FLIR will continue to maintain, fix and build the last two major versions of Spinnaker SDK against the latest two LTS versions of Ubuntu x86/x64. Only the latest x64 LTS version of Ubuntu is being actively tested.

#### 7.2.3 Linux Embedded Support

FLIR will continue to maintain, fix and build the last two major versions of Spinnaker SDK against the latest supported LTS version of Ubuntu ARMHF/ARM64 for a specific board. Only the latest LTS Ubuntu version on an ARM64 board is being actively tested. Contact sales if you need support for a specific embedded board.

### 7.2.4 MacOS Support

FLIR will continue to maintain, fix and build the last two major versions of Spinnaker SDK against MacOS Mojave (10.14). Contact sales if you need newer MacOS support.

### 7.3 Versioning Policy

Spinnaker SDK releases use a modified semantic versioning scheme and is indicated by four sets of numbers separated by periods:

MAJOR.MINOR.0.PATCH

- MAJOR: Version change that can include incompatible API changes
- · MINOR: Version change that adds functionality in a backwards-compatible manner
- · PATCH: Version change with backwards-compatible fixes

Reference: https://www.flir.com/support-center/iis/machine-vision/knowledge-base/flir-machi

# **Chapter 8**

# **Module Index**

### 8.1 Modules

#### Here is a list of all modules:

Spinnaker C QuickSpin API
QuickSpin Access
Transport Layer Enumerations
TLDevice Structures
TLInterface Structures
TLStream Structures
TLSystem Structures
Spinnaker C API
Spinnaker C Definitions
Camera Enumerations
Chunk Data Structures
Spinnaker C Handles
Spinnaker C Function Signatures
Spinnaker C Enumerations
Spinnaker C Structures
Error Handling
System Access
InterfaceList Access
CameraList Access
Interface Access
Camera Access
SpinVideo Recording Access
Image Access
Event Access
ImageStatistics Access
Logging Event Data Access
Device Event Data Access
Chunk data access
Spinnaker C GenlCam API
Node Map Access
Node Access
IValue Access
String Access
Unteger Access 293

16 Module Index

at Access
meration Access
mEntry Access
olean Access
nmand Access
egory Access
gister Access
naker C GenlCam Handles
naker C GenlCam Enumerations

## **Chapter 9**

# **Data Structure Index**

### 9.1 Data Structures

Here are the data structures with brief descriptions:

actionCommandResult
Action Command Result
quickSpin
quickSpinTLDevice 448
quickSpinTLInterface
quickSpinTLStream
quickSpinTLSystem
spinAVIOptionEx
Options for saving uncompressed videos
spinBMPOption
Options for saving BMP images
spinChunkData
The type of information that can be obtained from image chunk data
spinH264Option
Options for saving H264 videos
spinJPEGOption
Options for saving JPEG images
spinJPG2Option
Options for saving JPEG 2000 images
spinLibraryVersion
Provides easier access to the current version of Spinnaker
spinMJPGOptionEx
Options for saving MJPG videos
spinPGMOption
Options for saving PGM images
spinPNGOption
Options for saving PNG images
spinPPMOption
Options for saving PPM images
spinTIFFOption
Options for saving TIFF images

18 Data Structure Index

# **Chapter 10**

# File Index

### 10.1 File List

Here is a list of all files with brief descriptions:

include/spinc/CameraDefsC.h	491
include/spinc/ChunkDataDefC.h	524
include/spinc/QuickSpinC.h	525
include/spinc/QuickSpinDefsC.h	525
include/spinc/SpinnakerC.h	527
include/spinc/SpinnakerDefsC.h	537
include/spinc/SpinnakerGenApiC.h	542
include/spinc/SpinnakerGenApiDefsC.h	546
include/spinc/SpinnakerPlatformC.h	549
include/spinc/SpinVideoC.h	
include/spinc/TransportLayerDefsC.h	551
include/spinc/TransportLayerDeviceC.h	553
include/spinc/TransportLayerInterfaceC.h	553
include/spinc/TransportLayerStreamC.h	554
include/spinc/TransportLayerSystemC.h	555

20 File Index


### **Chapter 11**

### **Module Documentation**

### 11.1 Spinnaker C Definitions

Definitions for Spinnaker C.

Collaboration diagram for Spinnaker C Definitions:

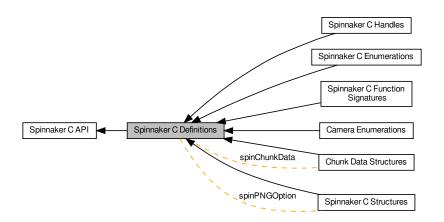

#### **Modules**

- Camera Enumerations
- · Chunk Data Structures
- Spinnaker C Handles

Spinnaker C handle definitions.

• Spinnaker C Function Signatures

Spinnaker C function signature definitions.

· Spinnaker C Enumerations

Spinnaker C enumumeration definitions.

• Spinnaker C Structures

Spinnaker C structure definitions.

#### **Data Structures**

• struct spinChunkData

The type of information that can be obtained from image chunk data.

• struct spinPNGOption

Options for saving PNG images.

#### **Typedefs**

• typedef uint8\_t bool8\_t

#### **Variables**

```
• static const bool8 t False = 0
```

```
• static const bool8_t True = 1
```

#### 11.1.1 Detailed Description

Definitions for Spinnaker C.

Definitions for Spinnaker C API.

Holds enumerations, typedefs and structures that are used across the Spinnaker C API wrapper.

#### 11.1.2 Typedef Documentation

```
11.1.2.1 bool8_t
```

```
typedef uint8_t bool8_t
```

#### 11.1.3 Variable Documentation

#### 11.1.3.1 False

```
const bool8_t False = 0 [static]
```

#### 11.1.3.2 True

```
const bool8_t True = 1 [static]
```

11.2 Camera Enumerations 23

#### 11.2 Camera Enumerations

Collaboration diagram for Camera Enumerations:

Spinnaker C Definitions Camera Enumerations

#### **Enumerations**

enum spinLUTSelectorEnums {
 LUTSelector\_LUT1,
 NUM LUTSELECTOR }

The enum definitions for camera nodes.

- enum spinExposureModeEnums {
   ExposureMode\_Timed,
   ExposureMode\_TriggerWidth,
   NUM\_EXPOSUREMODE }
- enum spinAcquisitionModeEnums {
   AcquisitionMode\_Continuous,
   AcquisitionMode\_SingleFrame,
   AcquisitionMode\_MultiFrame,
   NUM ACQUISITIONMODE }
- enum spinTriggerSourceEnums {
   TriggerSource\_Software,
   TriggerSource\_Line0,

TriggerSource\_Line1,

TriggerSource\_Line2,

TriggerSource Line3,

TriggerSource\_UserOutput0,

TriggerSource\_UserOutput1,

TriggerSource\_UserOutput2,

TriggerSource\_UserOutput3,

 $Trigger Source\_Counter 0 Start,\\$ 

TriggerSource\_Counter1Start,

TriggerSource\_Counter0End,

TriggerSource\_Counter1End,

TriggerSource\_LogicBlock0, TriggerSource\_LogicBlock1,

Tiggeroource\_Logicblock

TriggerSource\_Action0,

NUM\_TRIGGERSOURCE }

• enum spinTriggerActivationEnums {

TriggerActivation\_LevelLow,

TriggerActivation\_LevelHigh,

TriggerActivation\_FallingEdge,

TriggerActivation RisingEdge,

TriggerActivation\_AnyEdge,

NUM\_TRIGGERACTIVATION }

```
    enum spinSensorShutterModeEnums {

 SensorShutterMode Global,
 SensorShutterMode Rolling,
 SensorShutterMode_GlobalReset,
 NUM SENSORSHUTTERMODE }

    enum spinTriggerModeEnums {

 TriggerMode Off,
 TriggerMode On,
 NUM TRIGGERMODE }
enum spinTriggerOverlapEnums {
 TriggerOverlap Off,
 TriggerOverlap ReadOut,
 TriggerOverlap_PreviousFrame,
 NUM_TRIGGEROVERLAP }
 enum spinTriggerSelectorEnums {
 TriggerSelector AcquisitionStart,
 TriggerSelector FrameStart,
 TriggerSelector FrameBurstStart.
 NUM TRIGGERSELECTOR }
enum spinExposureAutoEnums {
 ExposureAuto Off,
 ExposureAuto_Once,
 ExposureAuto_Continuous,
 NUM EXPOSUREAUTO }
enum spinEventSelectorEnums {
 EventSelector Error,
 EventSelector ExposureEnd.
 EventSelector SerialPortReceive,
 NUM_EVENTSELECTOR }

    enum spinEventNotificationEnums {

 EventNotification On,
 EventNotification_Off,
 NUM_EVENTNOTIFICATION }

    enum spinLogicBlockSelectorEnums {

 LogicBlockSelector LogicBlock0,
 LogicBlockSelector LogicBlock1,
 NUM LOGICBLOCKSELECTOR }

    enum spinLogicBlockLUTInputActivationEnums {

 LogicBlockLUTInputActivation LevelLow,
 LogicBlockLUTInputActivation_LevelHigh,
 LogicBlockLUTInputActivation_FallingEdge,
 LogicBlockLUTInputActivation RisingEdge,
 LogicBlockLUTInputActivation AnvEdge.
 NUM LOGICBLOCKLUTINPUTACTIVATION }

    enum spinLogicBlockLUTInputSelectorEnums {

 LogicBlockLUTInputSelector Input0,
 LogicBlockLUTInputSelector_Input1,
 LogicBlockLUTInputSelector_Input2,
 LogicBlockLUTInputSelector Input3,
 NUM LOGICBLOCKLUTINPUTSELECTOR }
 enum spinLogicBlockLUTInputSourceEnums {
 LogicBlockLUTInputSource Zero.
 LogicBlockLUTInputSource Line0,
 LogicBlockLUTInputSource Line1,
 LogicBlockLUTInputSource Line2,
 LogicBlockLUTInputSource Line3.
 LogicBlockLUTInputSource UserOutput0,
 LogicBlockLUTInputSource_UserOutput1,
```

```
LogicBlockLUTInputSource_UserOutput2,
 LogicBlockLUTInputSource UserOutput3,
 LogicBlockLUTInputSource Counter0Start,
 LogicBlockLUTInputSource_Counter1Start,
 LogicBlockLUTInputSource_Counter0End,
 LogicBlockLUTInputSource Counter1End,
 LogicBlockLUTInputSource LogicBlock0.
 LogicBlockLUTInputSource LogicBlock1,
 LogicBlockLUTInputSource ExposureStart,
 LogicBlockLUTInputSource ExposureEnd,
 LogicBlockLUTInputSource FrameTriggerWait,
 LogicBlockLUTInputSource_AcquisitionActive,
 NUM_LOGICBLOCKLUTINPUTSOURCE }
 enum spinLogicBlockLUTSelectorEnums {
 LogicBlockLUTSelector_Value,
 LogicBlockLUTSelector Enable,
 NUM LOGICBLOCKLUTSELECTOR }

    enum spinColorTransformationSelectorEnums {

 ColorTransformationSelector RGBtoRGB.
 ColorTransformationSelector RGBtoYUV,
 NUM_COLORTRANSFORMATIONSELECTOR }

    enum spinRgbTransformLightSourceEnums {

 RgbTransformLightSource_General,
 RgbTransformLightSource_Tungsten2800K,
 RobTransformLightSource WarmFluorescent3000K.
 RgbTransformLightSource CoolFluorescent4000K,
 RgbTransformLightSource Daylight5000K,
 RgbTransformLightSource Cloudy6500K,
 RgbTransformLightSource Shade8000K,
 RgbTransformLightSource Custom,
 NUM RGBTRANSFORMLIGHTSOURCE }

    enum spinColorTransformationValueSelectorEnums {

 ColorTransformationValueSelector_Gain00,
 ColorTransformationValueSelector Gain01,
 ColorTransformationValueSelector Gain02.
 ColorTransformationValueSelector Gain10,
 ColorTransformationValueSelector Gain11,
 ColorTransformationValueSelector Gain12,
 ColorTransformationValueSelector Gain20.
 ColorTransformationValueSelector Gain21,
 ColorTransformationValueSelector Gain22,
 ColorTransformationValueSelector Offset0,
 ColorTransformationValueSelector Offset1,
 ColorTransformationValueSelector_Offset2,
 NUM_COLORTRANSFORMATIONVALUESELECTOR }

    enum spinDeviceRegistersEndiannessEnums {

 DeviceRegistersEndianness Little,
 DeviceRegistersEndianness Big,
 NUM DEVICEREGISTERSENDIANNESS }

    enum spinDeviceScanTypeEnums {

 DeviceScanType Areascan,
 NUM_DEVICESCANTYPE }

    enum spinDeviceCharacterSetEnums {

 DeviceCharacterSet UTF8.
 DeviceCharacterSet ASCII,
 NUM DEVICECHARACTERSET }
enum spinDeviceTLTypeEnums {
```

DeviceTLType\_GigEVision,

DeviceTLType\_CameraLink, DeviceTLType CameraLinkHS, DeviceTLType CoaXPress, DeviceTLType\_USB3Vision, DeviceTLType\_Custom, NUM DEVICETLTYPE } enum spinDevicePowerSupplySelectorEnums { DevicePowerSupplySelector\_External, NUM DEVICEPOWERSUPPLYSELECTOR } enum spinDeviceTemperatureSelectorEnums { DeviceTemperatureSelector\_Sensor, NUM DEVICETEMPERATURESELECTOR } enum spinDeviceIndicatorModeEnums { DeviceIndicatorMode Inactive, DeviceIndicatorMode Active, DeviceIndicatorMode ErrorStatus, NUM DEVICEINDICATORMODE } enum spinAutoExposureControlPriorityEnums { AutoExposureControlPriority\_Gain, AutoExposureControlPriority ExposureTime, NUM AUTOEXPOSURECONTROLPRIORITY } enum spinAutoExposureMeteringModeEnums { AutoExposureMeteringMode Average, AutoExposureMeteringMode Spot, AutoExposureMeteringMode Partial, AutoExposureMeteringMode CenterWeighted, AutoExposureMeteringMode HistgramPeak, NUM\_AUTOEXPOSUREMETERINGMODE } enum spinBalanceWhiteAutoProfileEnums { BalanceWhiteAutoProfile Indoor, BalanceWhiteAutoProfile Outdoor, NUM BALANCEWHITEAUTOPROFILE } enum spinAutoAlgorithmSelectorEnums { AutoAlgorithmSelector\_Awb, AutoAlgorithmSelector Ae, NUM AUTOALGORITHMSELECTOR } enum spinAutoExposureTargetGreyValueAutoEnums { AutoExposureTargetGreyValueAuto Off, AutoExposureTargetGreyValueAuto\_Continuous, NUM\_AUTOEXPOSURETARGETGREYVALUEAUTO } enum spinAutoExposureLightingModeEnums { AutoExposureLightingMode AutoDetect. AutoExposureLightingMode Backlight, AutoExposureLightingMode Frontlight, AutoExposureLightingMode Normal, NUM AUTOEXPOSURELIGHTINGMODE } enum spinGevIEEE1588StatusEnums { GevIEEE1588Status\_Initializing, GevIEEE1588Status\_Faulty, GevIEEE1588Status Disabled, GevIEEE1588Status Listening. GevIEEE1588Status PreMaster, GevIEEE1588Status Master, GevIEEE1588Status Passive, GevIEEE1588Status Uncalibrated. GevIEEE1588Status\_Slave, NUM\_GEVIEEE1588STATUS }

```
    enum spinGevIEEE1588ModeEnums {

 GevIEEE1588Mode Auto,
 GevIEEE1588Mode SlaveOnly,
 NUM_GEVIEEE1588MODE }

    enum spinGevIEEE1588ClockAccuracyEnums {

 GevIEEE1588ClockAccuracy Unknown,
 NUM GEVIEEE1588CLOCKACCURACY }
enum spinGevCCPEnums {
 GevCCP OpenAccess,
 GevCCP ExclusiveAccess,
 GevCCP ControlAccess,
 NUM_GEVCCP }

    enum spinGevSupportedOptionSelectorEnums {

 GevSupportedOptionSelector UserDefinedName.
 GevSupportedOptionSelector SerialNumber,
 GevSupportedOptionSelector HeartbeatDisable,
 GevSupportedOptionSelector LinkSpeed.
 GevSupportedOptionSelector CCPApplicationSocket,
 GevSupportedOptionSelector_ManifestTable,
 GevSupportedOptionSelector_TestData,
 GevSupportedOptionSelector DiscoveryAckDelay,
 GevSupportedOptionSelector_DiscoveryAckDelayWritable,
 GevSupportedOptionSelector_ExtendedStatusCodes,
 GevSupportedOptionSelector_Action,
 GevSupportedOptionSelector PendingAck.
 GevSupportedOptionSelector EventData,
 GevSupportedOptionSelector Event,
 GevSupportedOptionSelector PacketResend,
 GevSupportedOptionSelector WriteMem,
 GevSupportedOptionSelector_CommandsConcatenation,
 GevSupportedOptionSelector\_IPConfigurationLLA,\\
 GevSupportedOptionSelector IPConfigurationDHCP,
 GevSupportedOptionSelector IPConfigurationPersistentIP,
 GevSupportedOptionSelector_StreamChannelSourceSocket,
 GevSupportedOptionSelector MessageChannelSourceSocket,
 NUM GEVSUPPORTEDOPTIONSELECTOR }

    enum spinBlackLevelSelectorEnums {

 BlackLevelSelector All,
 BlackLevelSelector Analog.
 BlackLevelSelector Digital,
 NUM_BLACKLEVELSELECTOR }

    enum spinBalanceWhiteAutoEnums {

 BalanceWhiteAuto_Off,
 BalanceWhiteAuto Once,
 BalanceWhiteAuto Continuous.
 NUM BALANCEWHITEAUTO }
enum spinGainAutoEnums {
 GainAuto Off,
 GainAuto_Once,
 GainAuto_Continuous,
 NUM_GAINAUTO }

    enum spinBalanceRatioSelectorEnums {

 BalanceRatioSelector Red.
 BalanceRatioSelector Blue.
 NUM_BALANCERATIOSELECTOR }
• enum spinGainSelectorEnums {
 GainSelector_All,
 NUM GAINSELECTOR }
```

 enum spinDefectCorrectionModeEnums { DefectCorrectionMode Average, DefectCorrectionMode Highlight, DefectCorrectionMode\_Zero, NUM DEFECTCORRECTIONMODE } enum spinUserSetSelectorEnums { UserSetSelector\_Default, UserSetSelector\_UserSet0, UserSetSelector\_UserSet1, NUM\_USERSETSELECTOR } enum spinUserSetDefaultEnums { UserSetDefault\_Default, UserSetDefault UserSet0, UserSetDefault UserSet1, NUM USERSETDEFAULT } enum spinSerialPortBaudRateEnums { SerialPortBaudRate Baud300, SerialPortBaudRate Baud600, SerialPortBaudRate Baud1200, SerialPortBaudRate Baud2400, SerialPortBaudRate Baud4800, SerialPortBaudRate Baud9600, SerialPortBaudRate Baud14400, SerialPortBaudRate\_Baud19200, SerialPortBaudRate Baud38400, SerialPortBaudRate Baud57600, SerialPortBaudRate Baud115200, SerialPortBaudRate\_Baud230400, SerialPortBaudRate\_Baud460800, SerialPortBaudRate Baud921600, NUM SERIALPORTBAUDRATE } • enum spinSerialPortParityEnums { SerialPortParity\_None, SerialPortParity Odd, SerialPortParity\_Even, SerialPortParity\_Mark, SerialPortParity\_Space, NUM SERIALPORTPARITY } enum spinSerialPortSelectorEnums { SerialPortSelector\_SerialPort0, NUM SERIALPORTSELECTOR } enum spinSerialPortStopBitsEnums { SerialPortStopBits Bits1, SerialPortStopBits Bits1AndAHalf, SerialPortStopBits Bits2, NUM SERIALPORTSTOPBITS } enum spinSerialPortSourceEnums { SerialPortSource\_Line0, SerialPortSource Line1, SerialPortSource Line2, SerialPortSource Line3, SerialPortSource Off, NUM SERIALPORTSOURCE } enum spinSequencerModeEnums { SequencerMode Off, SequencerMode\_On, NUM\_SEQUENCERMODE }

 enum spinSequencerConfigurationValidEnums { SequencerConfigurationValid No. SequencerConfigurationValid Yes, NUM\_SEQUENCERCONFIGURATIONVALID } enum spinSequencerSetValidEnums { SequencerSetValid No. SequencerSetValid Yes, NUM SEQUENCERSETVALID } enum spinSequencerTriggerActivationEnums { SequencerTriggerActivation\_RisingEdge, SequencerTriggerActivation FallingEdge, SequencerTriggerActivation\_AnyEdge, SequencerTriggerActivation\_LevelHigh, SequencerTriggerActivation\_LevelLow, NUM SEQUENCERTRIGGERACTIVATION } enum spinSequencerConfigurationModeEnums { SequencerConfigurationMode Off, SequencerConfigurationMode On, NUM\_SEQUENCERCONFIGURATIONMODE } enum spinSequencerTriggerSourceEnums { SequencerTriggerSource\_Off, SequencerTriggerSource\_FrameStart, NUM\_SEQUENCERTRIGGERSOURCE } enum spinTransferQueueModeEnums { TransferQueueMode FirstInFirstOut, NUM TRANSFERQUEUEMODE } enum spinTransferOperationModeEnums { TransferOperationMode\_Continuous, TransferOperationMode MultiBlock, NUM\_TRANSFEROPERATIONMODE } enum spinTransferControlModeEnums { TransferControlMode Basic. TransferControlMode\_Automatic, TransferControlMode UserControlled, NUM TRANSFERCONTROLMODE } enum spinChunkGainSelectorEnums { ChunkGainSelector All, ChunkGainSelector Red, ChunkGainSelector\_Green, ChunkGainSelector\_Blue, NUM\_CHUNKGAINSELECTOR } enum spinChunkSelectorEnums { ChunkSelector Image, ChunkSelector CRC, ChunkSelector FrameID, ChunkSelector\_OffsetX, ChunkSelector\_OffsetY, ChunkSelector Width, ChunkSelector\_Height, ChunkSelector\_ExposureTime, ChunkSelector Gain, ChunkSelector BlackLevel. ChunkSelector PixelFormat, ChunkSelector Timestamp, ChunkSelector SequencerSetActive, ChunkSelector SerialData, ChunkSelector\_ExposureEndLineStatusAll, NUM CHUNKSELECTOR }

```
    enum spinChunkBlackLevelSelectorEnums {

 ChunkBlackLevelSelector All,
 NUM CHUNKBLACKLEVELSELECTOR }
enum spinChunkPixelFormatEnums {
 ChunkPixelFormat Mono8,
 ChunkPixelFormat Mono12Packed,
 ChunkPixelFormat Mono16.
 ChunkPixelFormat RGB8Packed,
 ChunkPixelFormat YUV422Packed,
 ChunkPixelFormat BayerGR8,
 ChunkPixelFormat BayerRG8,
 ChunkPixelFormat BayerGB8,
 ChunkPixelFormat BayerBG8,
 ChunkPixelFormat_YCbCr601_422_8_CbYCrY,
 NUM CHUNKPIXELFORMAT }

    enum spinFileOperationStatusEnums {

 FileOperationStatus_Success,
 FileOperationStatus_Failure,
 FileOperationStatus Overflow,
 NUM_FILEOPERATIONSTATUS }

    enum spinFileOpenModeEnums {

 FileOpenMode Read,
 FileOpenMode Write,
 FileOpenMode ReadWrite,
 NUM FILEOPENMODE }

    enum spinFileOperationSelectorEnums {

 FileOperationSelector_Open,
 FileOperationSelector Close,
 FileOperationSelector Read,
 FileOperationSelector Write,
 FileOperationSelector Delete,
 NUM FILEOPERATIONSELECTOR }

    enum spinFileSelectorEnums {

 FileSelector UserSetDefault,
 FileSelector_UserSet0,
 FileSelector UserSet1,
 FileSelector UserFile1,
 FileSelector SerialPort0,
 NUM FILESELECTOR }

    enum spinBinningSelectorEnums {

 BinningSelector All,
 BinningSelector_Sensor,
 BinningSelector_ISP,
 NUM_BINNINGSELECTOR }

    enum spinTestPatternGeneratorSelectorEnums {

 TestPatternGeneratorSelector_Sensor,
 TestPatternGeneratorSelector_PipelineStart,
 NUM_TESTPATTERNGENERATORSELECTOR }

    enum spinCompressionSaturationPriorityEnums {

 CompressionSaturationPriority DropFrame,
 CompressionSaturationPriority ReduceFrameRate,
 NUM COMPRESSIONSATURATIONPRIORITY }
enum spinTestPatternEnums {
 TestPattern Off,
 TestPattern Increment.
 TestPattern_SensorTestPattern,
 NUM_TESTPATTERN }
```

```
• enum spinPixelColorFilterEnums {
 PixelColorFilter None,
 PixelColorFilter_BayerRG,
 PixelColorFilter_BayerGB,
 PixelColorFilter_BayerGR,
 PixelColorFilter BayerBG,
 NUM PIXELCOLORFILTER }

    enum spinAdcBitDepthEnums {

 AdcBitDepth Bit8,
 AdcBitDepth_Bit10,
 AdcBitDepth_Bit12,
 AdcBitDepth Bit14,
 NUM_ADCBITDEPTH }
• enum spinDecimationHorizontalModeEnums {
 DecimationHorizontalMode Discard,
 NUM DECIMATIONHORIZONTALMODE }

    enum spinBinningVerticalModeEnums {

 BinningVerticalMode Sum,
 BinningVerticalMode_Average,
 NUM_BINNINGVERTICALMODE }
• enum spinPixelSizeEnums {
 PixelSize_Bpp1,
 PixelSize Bpp2,
 PixelSize Bpp4,
 PixelSize Bpp8,
 PixelSize Bpp10,
 PixelSize Bpp12.
 PixelSize_Bpp14,
 PixelSize_Bpp16,
 PixelSize_Bpp20,
 PixelSize Bpp24,
 PixelSize_Bpp30,
 PixelSize_Bpp32,
 PixelSize Bpp36,
 PixelSize Bpp48,
 PixelSize_Bpp64,
 PixelSize Bpp96,
 NUM PIXELSIZE }

    enum spinDecimationSelectorEnums {

 DecimationSelector_All,
 DecimationSelector Sensor,
 NUM_DECIMATIONSELECTOR }

    enum spinImageCompressionModeEnums {

 ImageCompressionMode Off,
 ImageCompressionMode_Lossless,
 NUM_IMAGECOMPRESSIONMODE }
• enum spinBinningHorizontalModeEnums {
 BinningHorizontalMode Sum,
 BinningHorizontalMode Average,
 NUM_BINNINGHORIZONTALMODE }
enum spinPixelFormatEnums {
 PixelFormat Mono8.
 PixelFormat Mono16,
 PixelFormat RGB8Packed,
 PixelFormat BayerGR8,
 PixelFormat BayerRG8,
 PixelFormat_BayerGB8,
 PixelFormat_BayerBG8,
```

PixelFormat\_BayerGR16, PixelFormat BayerRG16, PixelFormat BayerGB16, PixelFormat\_BayerBG16, PixelFormat\_Mono12Packed, PixelFormat BayerGR12Packed, PixelFormat BayerRG12Packed, PixelFormat BayerGB12Packed, PixelFormat BayerBG12Packed, PixelFormat YUV411Packed, PixelFormat\_YUV422Packed, PixelFormat\_YUV444Packed, PixelFormat\_Mono12p, PixelFormat BayerGR12p, PixelFormat\_BayerRG12p, PixelFormat\_BayerGB12p, PixelFormat BayerBG12p, PixelFormat YCbCr8, PixelFormat\_YCbCr422\_8, PixelFormat\_YCbCr411\_8, PixelFormat BGR8, PixelFormat BGRa8. PixelFormat\_Mono10Packed, PixelFormat\_BayerGR10Packed, PixelFormat BayerRG10Packed, PixelFormat\_BayerGB10Packed, PixelFormat\_BayerBG10Packed, PixelFormat\_Mono10p, PixelFormat BayerGR10p. PixelFormat BayerRG10p, PixelFormat\_BayerGB10p, PixelFormat\_BayerBG10p, PixelFormat Mono1p, PixelFormat\_Mono2p, PixelFormat\_Mono4p, PixelFormat\_Mono8s, PixelFormat Mono10, PixelFormat\_Mono12, PixelFormat Mono14, PixelFormat Mono16s, PixelFormat Mono32f, PixelFormat BayerBG10, PixelFormat BayerBG12, PixelFormat BayerGB10, PixelFormat BayerGB12, PixelFormat\_BayerGR10, PixelFormat\_BayerGR12, PixelFormat BayerRG10, PixelFormat BayerRG12, PixelFormat\_RGBa8, PixelFormat RGBa10, PixelFormat RGBa10p, PixelFormat RGBa12, PixelFormat\_RGBa12p, PixelFormat\_RGBa14, PixelFormat RGBa16, PixelFormat\_RGB8,

PixelFormat\_RGB8\_Planar,

PixelFormat\_RGB10, PixelFormat RGB10 Planar, PixelFormat RGB10p, PixelFormat\_RGB10p32, PixelFormat\_RGB12, PixelFormat RGB12 Planar, PixelFormat RGB12p, PixelFormat RGB14, PixelFormat RGB16, PixelFormat RGB16s, PixelFormat RGB32f, PixelFormat\_RGB16\_Planar, PixelFormat\_RGB565p, PixelFormat BGRa10, PixelFormat\_BGRa10p, PixelFormat\_BGRa12, PixelFormat BGRa12p, PixelFormat BGRa14, PixelFormat BGRa16, PixelFormat\_RGBa32f, PixelFormat BGR10, PixelFormat BGR10p, PixelFormat\_BGR12, PixelFormat\_BGR12p, PixelFormat BGR14, PixelFormat BGR16, PixelFormat\_BGR565p, PixelFormat\_R8, PixelFormat R10. PixelFormat R12. PixelFormat\_R16, PixelFormat\_G8, PixelFormat G10, PixelFormat G12, PixelFormat\_G16, PixelFormat\_B8, PixelFormat B10, PixelFormat\_B12, PixelFormat B16, PixelFormat Coord3D ABC8, PixelFormat Coord3D ABC8 Planar, PixelFormat\_Coord3D\_ABC10p, PixelFormat\_Coord3D\_ABC10p\_Planar, PixelFormat Coord3D ABC12p, PixelFormat Coord3D ABC12p Planar, PixelFormat\_Coord3D\_ABC16, PixelFormat\_Coord3D\_ABC16\_Planar, PixelFormat Coord3D ABC32f, PixelFormat Coord3D\_ABC32f\_Planar, PixelFormat\_Coord3D\_AC8, PixelFormat\_Coord3D\_AC8\_Planar, PixelFormat Coord3D AC10p, PixelFormat\_Coord3D\_AC10p\_Planar, PixelFormat\_Coord3D\_AC12p, PixelFormat\_Coord3D\_AC12p\_Planar, PixelFormat Coord3D AC16, PixelFormat\_Coord3D\_AC16\_Planar,

PixelFormat\_Coord3D\_AC32f,

PixelFormat Coord3D AC32f Planar, PixelFormat Coord3D A8, PixelFormat\_Coord3D\_A10p, PixelFormat\_Coord3D\_A12p, PixelFormat\_Coord3D\_A16, PixelFormat Coord3D A32f, PixelFormat Coord3D B8. PixelFormat Coord3D B10p, PixelFormat Coord3D B12p, PixelFormat Coord3D B16, PixelFormat\_Coord3D\_B32f, PixelFormat\_Coord3D\_C8, PixelFormat\_Coord3D\_C10p, PixelFormat Coord3D C12p, PixelFormat\_Coord3D\_C16, PixelFormat\_Coord3D\_C32f, PixelFormat Confidence1, PixelFormat Confidence1p, PixelFormat Confidence8, PixelFormat Confidence16, PixelFormat Confidence32f, PixelFormat BiColorBGRG8. PixelFormat\_BiColorBGRG10, PixelFormat\_BiColorBGRG10p, PixelFormat BiColorBGRG12, PixelFormat\_BiColorBGRG12p, PixelFormat\_BiColorRGBG8, PixelFormat BiColorRGBG10, PixelFormat BiColorRGBG10p. PixelFormat BiColorRGBG12. PixelFormat\_BiColorRGBG12p, PixelFormat\_SCF1WBWG8, PixelFormat SCF1WBWG10, PixelFormat\_SCF1WBWG10p, PixelFormat\_SCF1WBWG12, PixelFormat\_SCF1WBWG12p, PixelFormat SCF1WBWG14, PixelFormat\_SCF1WBWG16, PixelFormat SCF1WGWB8, PixelFormat SCF1WGWB10, PixelFormat SCF1WGWB10p, PixelFormat\_SCF1WGWB12, PixelFormat SCF1WGWB12p, PixelFormat SCF1WGWB14, PixelFormat SCF1WGWB16, PixelFormat\_SCF1WGWR8, PixelFormat\_SCF1WGWR10, PixelFormat SCF1WGWR10p, PixelFormat SCF1WGWR12, PixelFormat\_SCF1WGWR12p, PixelFormat SCF1WGWR14, PixelFormat SCF1WGWR16, PixelFormat SCF1WRWG8, PixelFormat\_SCF1WRWG10, PixelFormat\_SCF1WRWG10p, PixelFormat SCF1WRWG12, PixelFormat\_SCF1WRWG12p, PixelFormat\_SCF1WRWG14,

PixelFormat\_SCF1WRWG16, PixelFormat YCbCr8 CbYCr, PixelFormat\_YCbCr10\_CbYCr, PixelFormat\_YCbCr10p\_CbYCr, PixelFormat\_YCbCr12\_CbYCr, PixelFormat YCbCr12p CbYCr, PixelFormat YCbCr411 8 CbYYCrYY, PixelFormat YCbCr422 8 CbYCrY, PixelFormat YCbCr422 10, PixelFormat YCbCr422 10 CbYCrY, PixelFormat\_YCbCr422\_10p, PixelFormat\_YCbCr422\_10p\_CbYCrY, PixelFormat\_YCbCr422\_12, PixelFormat YCbCr422 12 CbYCrY, PixelFormat\_YCbCr422\_12p, PixelFormat\_YCbCr422\_12p\_CbYCrY, PixelFormat YCbCr601 8 CbYCr, PixelFormat YCbCr601 10 CbYCr, PixelFormat\_YCbCr601\_10p\_CbYCr, PixelFormat\_YCbCr601\_12\_CbYCr, PixelFormat YCbCr601 12p CbYCr, PixelFormat YCbCr601 411 8 CbYYCrYY, PixelFormat\_YCbCr601\_422\_8, PixelFormat\_YCbCr601\_422\_8\_CbYCrY, PixelFormat YCbCr601 422 10, PixelFormat\_YCbCr601\_422\_10\_CbYCrY, PixelFormat\_YCbCr601\_422\_10p, PixelFormat YCbCr601 422 10p CbYCrY, PixelFormat YCbCr601 422 12, PixelFormat YCbCr601 422 12 CbYCrY, PixelFormat\_YCbCr601\_422\_12p, PixelFormat\_YCbCr601\_422\_12p\_CbYCrY, PixelFormat YCbCr709 8 CbYCr, PixelFormat\_YCbCr709\_10\_CbYCr, PixelFormat\_YCbCr709\_10p\_CbYCr, PixelFormat\_YCbCr709\_12\_CbYCr, PixelFormat YCbCr709 12p CbYCr, PixelFormat\_YCbCr709\_411\_8\_CbYYCrYY, PixelFormat\_YCbCr709\_422\_8, PixelFormat YCbCr709 422 8 CbYCrY, PixelFormat YCbCr709 422 10, PixelFormat\_YCbCr709\_422\_10\_CbYCrY, PixelFormat YCbCr709 422 10p, PixelFormat YCbCr709 422 10p CbYCrY, PixelFormat YCbCr709 422 12, PixelFormat\_YCbCr709\_422\_12\_CbYCrY, PixelFormat\_YCbCr709\_422\_12p, PixelFormat YCbCr709 422 12p CbYCrY, PixelFormat YUV8 UYV, PixelFormat\_YUV411\_8\_UYYVYY, PixelFormat YUV422 8, PixelFormat YUV422 8 UYVY, PixelFormat Polarized8, PixelFormat\_Polarized10p, PixelFormat\_Polarized12p, PixelFormat Polarized16, PixelFormat\_BayerRGPolarized8, PixelFormat\_BayerRGPolarized10p,

PixelFormat\_BayerRGPolarized12p, PixelFormat BayerRGPolarized16, PixelFormat LLCMono8, PixelFormat\_LLCBayerRG8, PixelFormat\_JPEGMono8, PixelFormat JPEGColor8, PixelFormat Raw16. PixelFormat Raw8, PixelFormat R12 Jpeg, PixelFormat GR12 Jpeg, PixelFormat\_GB12\_Jpeg, PixelFormat\_B12\_Jpeg, UNKNOWN\_PIXELFORMAT, NUM PIXELFORMAT } • enum spinDecimationVerticalModeEnums { DecimationVerticalMode Discard, NUM DECIMATIONVERTICALMODE } enum spinLineModeEnums { LineMode\_Input, LineMode\_Output, NUM LINEMODE } enum spinLineSourceEnums { LineSource Off, LineSource Line0. LineSource Line1, LineSource Line2, LineSource Line3. LineSource\_UserOutput0, LineSource\_UserOutput1, LineSource\_UserOutput2, LineSource UserOutput3, LineSource Counter0Active, LineSource\_Counter1Active, LineSource LogicBlock0, LineSource LogicBlock1, LineSource\_ExposureActive, LineSource FrameTriggerWait, LineSource SerialPort0, LineSource PPSSignal, LineSource AllPixel, LineSource AnyPixel, NUM LINESOURCE } enum spinLineInputFilterSelectorEnums { LineInputFilterSelector Deglitch. LineInputFilterSelector Debounce, NUM\_LINEINPUTFILTERSELECTOR } • enum spinUserOutputSelectorEnums { UserOutputSelector\_UserOutput0, UserOutputSelector\_UserOutput1, UserOutputSelector UserOutput2, UserOutputSelector\_UserOutput3, NUM\_USEROUTPUTSELECTOR } enum spinLineFormatEnums { LineFormat NoConnect, LineFormat TriState, LineFormat TTL. LineFormat\_LVDS,

LineFormat\_RS422,

LineFormat\_OptoCoupled, LineFormat OpenDrain, NUM LINEFORMAT } enum spinLineSelectorEnums { LineSelector Line0, LineSelector Line1, LineSelector Line2, LineSelector Line3, NUM LINESELECTOR } enum spinExposureActiveModeEnums { ExposureActiveMode Line1, ExposureActiveMode\_AnyPixels, ExposureActiveMode\_AllPixels, NUM EXPOSUREACTIVEMODE } enum spinCounterTriggerActivationEnums { CounterTriggerActivation LevelLow, CounterTriggerActivation LevelHigh, CounterTriggerActivation\_FallingEdge, CounterTriggerActivation\_RisingEdge, CounterTriggerActivation AnyEdge, NUM\_COUNTERTRIGGERACTIVATION } enum spinCounterSelectorEnums { CounterSelector Counter0. CounterSelector Counter1, NUM\_COUNTERSELECTOR } • enum spinCounterStatusEnums { CounterStatus\_CounterIdle, CounterStatus CounterTriggerWait, CounterStatus CounterActive, CounterStatus\_CounterCompleted, CounterStatus\_CounterOverflow, NUM COUNTERSTATUS } enum spinCounterTriggerSourceEnums { CounterTriggerSource Off, CounterTriggerSource Line0, CounterTriggerSource\_Line1, CounterTriggerSource\_Line2, CounterTriggerSource Line3, CounterTriggerSource\_UserOutput0, CounterTriggerSource\_UserOutput1, CounterTriggerSource\_UserOutput2, CounterTriggerSource UserOutput3. CounterTriggerSource Counter0Start, CounterTriggerSource Counter1Start, CounterTriggerSource Counter0End, CounterTriggerSource Counter1End, CounterTriggerSource\_LogicBlock0, CounterTriggerSource\_LogicBlock1, CounterTriggerSource ExposureStart, CounterTriggerSource\_ExposureEnd, CounterTriggerSource\_FrameTriggerWait, NUM\_COUNTERTRIGGERSOURCE } enum spinCounterResetSourceEnums { CounterResetSource Off, CounterResetSource Line0, CounterResetSource Line1, CounterResetSource\_Line2, CounterResetSource\_Line3,

CounterResetSource\_UserOutput0, CounterResetSource UserOutput1, CounterResetSource\_UserOutput2, CounterResetSource\_UserOutput3, CounterResetSource\_Counter0Start, CounterResetSource Counter1Start, CounterResetSource Counter0End, CounterResetSource Counter1End, CounterResetSource LogicBlock0, CounterResetSource LogicBlock1, CounterResetSource\_ExposureStart, CounterResetSource\_ExposureEnd, CounterResetSource\_FrameTriggerWait, NUM COUNTERRESETSOURCE } enum spinCounterEventSourceEnums { CounterEventSource Off, CounterEventSource MHzTick, CounterEventSource Line0, CounterEventSource Line1, CounterEventSource Line2, CounterEventSource\_Line3, CounterEventSource\_UserOutput0, CounterEventSource UserOutput1, CounterEventSource\_UserOutput2, CounterEventSource\_UserOutput3, CounterEventSource Counter0Start, CounterEventSource Counter1Start. CounterEventSource Counter0End, CounterEventSource Counter1End, CounterEventSource LogicBlock0, CounterEventSource LogicBlock1, CounterEventSource\_ExposureStart, CounterEventSource\_ExposureEnd, CounterEventSource FrameTriggerWait, NUM\_COUNTEREVENTSOURCE } enum spinCounterEventActivationEnums { CounterEventActivation LevelLow. CounterEventActivation LevelHigh, CounterEventActivation FallingEdge, CounterEventActivation RisingEdge, CounterEventActivation AnyEdge, NUM\_COUNTEREVENTACTIVATION } • enum spinCounterResetActivationEnums { CounterResetActivation LevelLow, CounterResetActivation LevelHigh. CounterResetActivation FallingEdge, CounterResetActivation RisingEdge, CounterResetActivation AnyEdge, NUM COUNTERRESETACTIVATION } enum spinDeviceTypeEnums { DeviceType Transmitter, DeviceType\_Receiver, DeviceType Transceiver, DeviceType Peripheral. NUM DEVICETYPE } enum spinDeviceConnectionStatusEnums { DeviceConnectionStatus Active, DeviceConnectionStatus Inactive,

11.2 Camera Enumerations 39

#### NUM\_DEVICECONNECTIONSTATUS } enum spinDeviceLinkThroughputLimitModeEnums { DeviceLinkThroughputLimitMode On, DeviceLinkThroughputLimitMode Off, NUM DEVICELINKTHROUGHPUTLIMITMODE } • enum spinDeviceLinkHeartbeatModeEnums { DeviceLinkHeartbeatMode On, DeviceLinkHeartbeatMode Off, NUM\_DEVICELINKHEARTBEATMODE } enum spinDeviceStreamChannelTypeEnums { DeviceStreamChannelType Transmitter, DeviceStreamChannelType Receiver, NUM DEVICESTREAMCHANNELTYPE } enum spinDeviceStreamChannelEndiannessEnums { DeviceStreamChannelEndianness Big, DeviceStreamChannelEndianness\_Little, NUM\_DEVICESTREAMCHANNELENDIANNESS } enum spinDeviceClockSelectorEnums { DeviceClockSelector Sensor. DeviceClockSelector SensorDigitization, DeviceClockSelector CameraLink, NUM DEVICECLOCKSELECTOR } enum spinDeviceSerialPortSelectorEnums { DeviceSerialPortSelector CameraLink, NUM\_DEVICESERIALPORTSELECTOR } enum spinDeviceSerialPortBaudRateEnums { DeviceSerialPortBaudRate Baud9600, DeviceSerialPortBaudRate Baud19200, DeviceSerialPortBaudRate Baud38400. DeviceSerialPortBaudRate Baud57600, DeviceSerialPortBaudRate Baud115200, DeviceSerialPortBaudRate Baud230400, DeviceSerialPortBaudRate Baud460800, DeviceSerialPortBaudRate\_Baud921600, NUM DEVICESERIALPORTBAUDRATE } enum spinSensorTapsEnums { SensorTaps One, SensorTaps Two, SensorTaps\_Three, SensorTaps\_Four, SensorTaps Eight, SensorTaps Ten, NUM\_SENSORTAPS } enum spinSensorDigitizationTapsEnums { SensorDigitizationTaps One, SensorDigitizationTaps Two, SensorDigitizationTaps\_Three, SensorDigitizationTaps\_Four, SensorDigitizationTaps\_Eight, SensorDigitizationTaps Ten, NUM\_SENSORDIGITIZATIONTAPS } enum spinRegionSelectorEnums { RegionSelector Region0, RegionSelector Region1, RegionSelector\_Region2, RegionSelector\_All,

NUM REGIONSELECTOR }

RegionMode Off, RegionMode On, NUM REGIONMODE } enum spinRegionDestinationEnums { RegionDestination Stream0. RegionDestination Stream1, RegionDestination Stream2, NUM REGIONDESTINATION } enum spinImageComponentSelectorEnums { ImageComponentSelector\_Intensity, ImageComponentSelector Color, ImageComponentSelector Infrared, ImageComponentSelector Ultraviolet. ImageComponentSelector Range, ImageComponentSelector\_Disparity, ImageComponentSelector Confidence, ImageComponentSelector Scatter. NUM IMAGECOMPONENTSELECTOR } enum spinPixelFormatInfoSelectorEnums { PixelFormatInfoSelector Mono1p. PixelFormatInfoSelector Mono2p, PixelFormatInfoSelector Mono4p, PixelFormatInfoSelector Mono8, PixelFormatInfoSelector Mono8s, PixelFormatInfoSelector Mono10, PixelFormatInfoSelector\_Mono10p, PixelFormatInfoSelector\_Mono12, PixelFormatInfoSelector Mono12p, PixelFormatInfoSelector Mono14, PixelFormatInfoSelector Mono16, PixelFormatInfoSelector Mono16s, PixelFormatInfoSelector Mono32f. PixelFormatInfoSelector BayerBG8, PixelFormatInfoSelector BayerBG10, PixelFormatInfoSelector BayerBG10p, PixelFormatInfoSelector BayerBG12, PixelFormatInfoSelector BayerBG12p, PixelFormatInfoSelector BayerBG16, PixelFormatInfoSelector BayerGB8, PixelFormatInfoSelector BayerGB10. PixelFormatInfoSelector BayerGB10p, PixelFormatInfoSelector BayerGB12, PixelFormatInfoSelector BayerGB12p, PixelFormatInfoSelector BayerGB16, PixelFormatInfoSelector\_BayerGR8, PixelFormatInfoSelector\_BayerGR10, PixelFormatInfoSelector BayerGR10p, PixelFormatInfoSelector\_BayerGR12, PixelFormatInfoSelector\_BayerGR12p, PixelFormatInfoSelector BayerGR16, PixelFormatInfoSelector BaverRG8. PixelFormatInfoSelector BayerRG10, PixelFormatInfoSelector BayerRG10p, PixelFormatInfoSelector BayerRG12, PixelFormatInfoSelector BayerRG12p. PixelFormatInfoSelector\_BayerRG16, PixelFormatInfoSelector RGBa8,

enum spinRegionModeEnums {

41

PixelFormatInfoSelector RGBa10, PixelFormatInfoSelector RGBa10p, PixelFormatInfoSelector RGBa12, PixelFormatInfoSelector RGBa12p, PixelFormatInfoSelector RGBa14, PixelFormatInfoSelector RGBa16, PixelFormatInfoSelector RGB8. PixelFormatInfoSelector RGB8 Planar, PixelFormatInfoSelector RGB10, PixelFormatInfoSelector RGB10 Planar, PixelFormatInfoSelector RGB10p, PixelFormatInfoSelector\_RGB10p32, PixelFormatInfoSelector\_RGB12, PixelFormatInfoSelector RGB12 Planar, PixelFormatInfoSelector\_RGB12p, PixelFormatInfoSelector\_RGB14, PixelFormatInfoSelector RGB16, PixelFormatInfoSelector RGB16s. PixelFormatInfoSelector RGB32f, PixelFormatInfoSelector RGB16 Planar, PixelFormatInfoSelector RGB565p, PixelFormatInfoSelector BGRa8. PixelFormatInfoSelector BGRa10, PixelFormatInfoSelector BGRa10p, PixelFormatInfoSelector BGRa12, PixelFormatInfoSelector BGRa12p, PixelFormatInfoSelector\_BGRa14, PixelFormatInfoSelector BGRa16. PixelFormatInfoSelector RGBa32f. PixelFormatInfoSelector BGR8. PixelFormatInfoSelector\_BGR10, PixelFormatInfoSelector BGR10p, PixelFormatInfoSelector BGR12, PixelFormatInfoSelector BGR12p, PixelFormatInfoSelector\_BGR14, PixelFormatInfoSelector\_BGR16, PixelFormatInfoSelector BGR565p, PixelFormatInfoSelector\_R8, PixelFormatInfoSelector R10, PixelFormatInfoSelector\_R12, PixelFormatInfoSelector R16. PixelFormatInfoSelector G8. PixelFormatInfoSelector G10, PixelFormatInfoSelector G12, PixelFormatInfoSelector G16. PixelFormatInfoSelector B8, PixelFormatInfoSelector B10, PixelFormatInfoSelector B12, PixelFormatInfoSelector B16, PixelFormatInfoSelector Coord3D ABC8, PixelFormatInfoSelector Coord3D ABC8 Planar, PixelFormatInfoSelector Coord3D ABC10p, PixelFormatInfoSelector Coord3D ABC10p Planar, PixelFormatInfoSelector\_Coord3D\_ABC12p, PixelFormatInfoSelector\_Coord3D\_ABC12p\_Planar, PixelFormatInfoSelector Coord3D ABC16, PixelFormatInfoSelector\_Coord3D\_ABC16\_Planar,

PixelFormatInfoSelector\_Coord3D\_ABC32f,

PixelFormatInfoSelector\_Coord3D\_ABC32f\_Planar, PixelFormatInfoSelector Coord3D AC8, PixelFormatInfoSelector Coord3D AC8 Planar, PixelFormatInfoSelector\_Coord3D\_AC10p, PixelFormatInfoSelector\_Coord3D\_AC10p\_Planar, PixelFormatInfoSelector Coord3D AC12p, PixelFormatInfoSelector Coord3D AC12p Planar. PixelFormatInfoSelector Coord3D AC16, PixelFormatInfoSelector Coord3D AC16 Planar, PixelFormatInfoSelector Coord3D AC32f. PixelFormatInfoSelector Coord3D AC32f Planar, PixelFormatInfoSelector\_Coord3D\_A8, PixelFormatInfoSelector\_Coord3D\_A10p, PixelFormatInfoSelector Coord3D A12p, PixelFormatInfoSelector Coord3D A16, PixelFormatInfoSelector\_Coord3D\_A32f, PixelFormatInfoSelector Coord3D B8, PixelFormatInfoSelector Coord3D B10p. PixelFormatInfoSelector Coord3D B12p, PixelFormatInfoSelector Coord3D B16, PixelFormatInfoSelector Coord3D B32f, PixelFormatInfoSelector Coord3D C8. PixelFormatInfoSelector Coord3D C10p, PixelFormatInfoSelector Coord3D C12p, PixelFormatInfoSelector Coord3D C16, PixelFormatInfoSelector\_Coord3D\_C32f, PixelFormatInfoSelector\_Confidence1, PixelFormatInfoSelector Confidence1p. PixelFormatInfoSelector Confidence8, PixelFormatInfoSelector Confidence16. PixelFormatInfoSelector Confidence32f, PixelFormatInfoSelector BiColorBGRG8, PixelFormatInfoSelector BiColorBGRG10, PixelFormatInfoSelector BiColorBGRG10p, PixelFormatInfoSelector\_BiColorBGRG12, PixelFormatInfoSelector\_BiColorBGRG12p, PixelFormatInfoSelector BiColorRGBG8, PixelFormatInfoSelector\_BiColorRGBG10, PixelFormatInfoSelector BiColorRGBG10p, PixelFormatInfoSelector BiColorRGBG12, PixelFormatInfoSelector BiColorRGBG12p. PixelFormatInfoSelector SCF1WBWG8, PixelFormatInfoSelector SCF1WBWG10, PixelFormatInfoSelector SCF1WBWG10p, PixelFormatInfoSelector SCF1WBWG12, PixelFormatInfoSelector\_SCF1WBWG12p, PixelFormatInfoSelector\_SCF1WBWG14, PixelFormatInfoSelector SCF1WBWG16, PixelFormatInfoSelector SCF1WGWB8, PixelFormatInfoSelector SCF1WGWB10, PixelFormatInfoSelector SCF1WGWB10p, PixelFormatInfoSelector SCF1WGWB12, PixelFormatInfoSelector SCF1WGWB12p, PixelFormatInfoSelector\_SCF1WGWB14, PixelFormatInfoSelector\_SCF1WGWB16, PixelFormatInfoSelector SCF1WGWR8, PixelFormatInfoSelector\_SCF1WGWR10, PixelFormatInfoSelector\_SCF1WGWR10p,

PixelFormatInfoSelector\_SCF1WGWR12, PixelFormatInfoSelector SCF1WGWR12p, PixelFormatInfoSelector SCF1WGWR14, PixelFormatInfoSelector SCF1WGWR16, PixelFormatInfoSelector SCF1WRWG8, PixelFormatInfoSelector SCF1WRWG10, PixelFormatInfoSelector SCF1WRWG10p. PixelFormatInfoSelector SCF1WRWG12, PixelFormatInfoSelector SCF1WRWG12p, PixelFormatInfoSelector SCF1WRWG14, PixelFormatInfoSelector SCF1WRWG16, PixelFormatInfoSelector\_YCbCr8, PixelFormatInfoSelector\_YCbCr8\_CbYCr, PixelFormatInfoSelector YCbCr10 CbYCr, PixelFormatInfoSelector\_YCbCr10p\_CbYCr, PixelFormatInfoSelector\_YCbCr12\_CbYCr, PixelFormatInfoSelector YCbCr12p CbYCr, PixelFormatInfoSelector YCbCr411 8, PixelFormatInfoSelector\_YCbCr411\_8\_CbYYCrYY, PixelFormatInfoSelector YCbCr422 8, PixelFormatInfoSelector YCbCr422 8 CbYCrY, PixelFormatInfoSelector YCbCr422 10, PixelFormatInfoSelector\_YCbCr422\_10\_CbYCrY, PixelFormatInfoSelector\_YCbCr422\_10p, PixelFormatInfoSelector YCbCr422 10p CbYCrY, PixelFormatInfoSelector\_YCbCr422\_12, PixelFormatInfoSelector\_YCbCr422\_12\_CbYCrY, PixelFormatInfoSelector\_YCbCr422\_12p, PixelFormatInfoSelector YCbCr422 12p CbYCrY. PixelFormatInfoSelector YCbCr601 8 CbYCr, PixelFormatInfoSelector\_YCbCr601\_10\_CbYCr, PixelFormatInfoSelector\_YCbCr601\_10p\_CbYCr, PixelFormatInfoSelector YCbCr601 12 CbYCr, PixelFormatInfoSelector\_YCbCr601\_12p\_CbYCr, PixelFormatInfoSelector\_YCbCr601\_411\_8\_CbYYCrYY, PixelFormatInfoSelector\_YCbCr601\_422\_8, PixelFormatInfoSelector YCbCr601 422 8 CbYCrY, PixelFormatInfoSelector\_YCbCr601\_422\_10, PixelFormatInfoSelector\_YCbCr601\_422\_10\_CbYCrY, PixelFormatInfoSelector YCbCr601 422 10p, PixelFormatInfoSelector YCbCr601 422 10p CbYCrY, PixelFormatInfoSelector\_YCbCr601\_422\_12, PixelFormatInfoSelector YCbCr601 422 12 CbYCrY, PixelFormatInfoSelector YCbCr601 422 12p, PixelFormatInfoSelector YCbCr601 422 12p CbYCrY, PixelFormatInfoSelector\_YCbCr709\_8\_CbYCr, PixelFormatInfoSelector\_YCbCr709\_10\_CbYCr, PixelFormatInfoSelector YCbCr709 10p CbYCr, PixelFormatInfoSelector YCbCr709 12 CbYCr, PixelFormatInfoSelector\_YCbCr709\_12p\_CbYCr, PixelFormatInfoSelector YCbCr709 411 8 CbYYCrYY, PixelFormatInfoSelector YCbCr709 422 8, PixelFormatInfoSelector YCbCr709 422 8 CbYCrY, PixelFormatInfoSelector\_YCbCr709\_422\_10, PixelFormatInfoSelector\_YCbCr709\_422\_10\_CbYCrY, PixelFormatInfoSelector\_YCbCr709\_422\_10p, PixelFormatInfoSelector\_YCbCr709\_422\_10p\_CbYCrY, PixelFormatInfoSelector\_YCbCr709\_422\_12,

PixelFormatInfoSelector\_YCbCr709\_422\_12\_CbYCrY, PixelFormatInfoSelector YCbCr709 422 12p, PixelFormatInfoSelector\_YCbCr709\_422\_12p\_CbYCrY, PixelFormatInfoSelector\_YUV8\_UYV, PixelFormatInfoSelector\_YUV411\_8\_UYYVYY, PixelFormatInfoSelector YUV422 8, PixelFormatInfoSelector YUV422 8 UYVY, PixelFormatInfoSelector Polarized8, PixelFormatInfoSelector Polarized10p, PixelFormatInfoSelector Polarized12p. PixelFormatInfoSelector Polarized16, PixelFormatInfoSelector\_BayerRGPolarized8, PixelFormatInfoSelector\_BayerRGPolarized10p, PixelFormatInfoSelector BayerRGPolarized12p, PixelFormatInfoSelector BayerRGPolarized16, PixelFormatInfoSelector\_LLCMono8, PixelFormatInfoSelector LLCBayerRG8, PixelFormatInfoSelector JPEGMono8. PixelFormatInfoSelector JPEGColor8. NUM PIXELFORMATINFOSELECTOR } enum spinDeinterlacingEnums { Deinterlacing Off, Deinterlacing LineDuplication, Deinterlacing Weave, NUM DEINTERLACING } enum spinImageCompressionRateOptionEnums { ImageCompressionRateOption FixBitrate, ImageCompressionRateOption FixQuality, NUM IMAGECOMPRESSIONRATEOPTION } • enum spinImageCompressionJPEGFormatOptionEnums { ImageCompressionJPEGFormatOption Lossless, ImageCompressionJPEGFormatOption BaselineStandard, ImageCompressionJPEGFormatOption\_BaselineOptimized, ImageCompressionJPEGFormatOption Progressive, NUM IMAGECOMPRESSIONJPEGFORMATOPTION } enum spinAcquisitionStatusSelectorEnums { AcquisitionStatusSelector AcquisitionTriggerWait. AcquisitionStatusSelector\_AcquisitionActive, AcquisitionStatusSelector AcquisitionTransfer, AcquisitionStatusSelector FrameTriggerWait, AcquisitionStatusSelector FrameActive, AcquisitionStatusSelector\_ExposureActive, NUM ACQUISITIONSTATUSSELECTOR } enum spinExposureTimeModeEnums { ExposureTimeMode Common, ExposureTimeMode Individual, NUM EXPOSURETIMEMODE } enum spinExposureTimeSelectorEnums { ExposureTimeSelector Common, ExposureTimeSelector\_Red, ExposureTimeSelector Green, ExposureTimeSelector Blue. ExposureTimeSelector Cyan. ExposureTimeSelector Magenta, ExposureTimeSelector Yellow, ExposureTimeSelector Infrared. ExposureTimeSelector Ultraviolet, ExposureTimeSelector\_Stage1,

```
ExposureTimeSelector_Stage2,
 NUM EXPOSURETIMESELECTOR }

    enum spinGainAutoBalanceEnums {

 GainAutoBalance Off,
 GainAutoBalance Once,
 GainAutoBalance_Continuous,
 NUM_GAINAUTOBALANCE }
• enum spinBlackLevelAutoEnums {
 BlackLevelAuto Off,
 BlackLevelAuto Once,
 BlackLevelAuto Continuous,
 NUM_BLACKLEVELAUTO }
• enum spinBlackLevelAutoBalanceEnums {
 BlackLevelAutoBalance Off,
 BlackLevelAutoBalance Once,
 BlackLevelAutoBalance Continuous,
 NUM BLACKLEVELAUTOBALANCE }
enum spinWhiteClipSelectorEnums {
 WhiteClipSelector All,
 WhiteClipSelector_Red,
 WhiteClipSelector_Green,
 WhiteClipSelector Blue,
 WhiteClipSelector_Y,
 WhiteClipSelector U,
 WhiteClipSelector_V,
 WhiteClipSelector Tap1,
 WhiteClipSelector Tap2,
 NUM_WHITECLIPSELECTOR }

    enum spinTimerSelectorEnums {

 TimerSelector_Timer0,
 TimerSelector_Timer1,
 TimerSelector Timer2,
 NUM TIMERSELECTOR }
enum spinTimerStatusEnums {
 TimerStatus TimerIdle,
 TimerStatus_TimerTriggerWait,
 TimerStatus_TimerActive,
 TimerStatus_TimerCompleted,
 NUM_TIMERSTATUS }
 enum spinTimerTriggerSourceEnums {
 TimerTriggerSource Off.
 TimerTriggerSource AcquisitionTrigger,
 TimerTriggerSource AcquisitionStart,
 TimerTriggerSource AcquisitionEnd,
 TimerTriggerSource_FrameTrigger,
 TimerTriggerSource_FrameStart,
 TimerTriggerSource_FrameEnd,
 TimerTriggerSource FrameBurstStart,
 TimerTriggerSource_FrameBurstEnd,
 TimerTriggerSource_LineTrigger,
 TimerTriggerSource LineStart,
 TimerTriggerSource LineEnd.
 TimerTriggerSource_ExposureStart,
 TimerTriggerSource ExposureEnd,
 TimerTriggerSource Line0,
 TimerTriggerSource Line1,
 TimerTriggerSource Line2,
 TimerTriggerSource_UserOutput0,
```

TimerTriggerSource\_UserOutput1, TimerTriggerSource UserOutput2, TimerTriggerSource Counter0Start, TimerTriggerSource\_Counter1Start, TimerTriggerSource\_Counter2Start, TimerTriggerSource Counter0End, TimerTriggerSource Counter1End. TimerTriggerSource Counter2End, TimerTriggerSource Timer0Start, TimerTriggerSource Timer1Start, TimerTriggerSource\_Timer2Start, TimerTriggerSource\_Timer0End, TimerTriggerSource\_Timer1End, TimerTriggerSource Timer2End, TimerTriggerSource\_Encoder0, TimerTriggerSource\_Encoder1, TimerTriggerSource Encoder2, TimerTriggerSource SoftwareSignal0, TimerTriggerSource\_SoftwareSignal1, TimerTriggerSource\_SoftwareSignal2, TimerTriggerSource Action0, TimerTriggerSource Action1, TimerTriggerSource Action2, TimerTriggerSource\_LinkTrigger0, TimerTriggerSource LinkTrigger1, TimerTriggerSource LinkTrigger2, NUM\_TIMERTRIGGERSOURCE } enum spinTimerTriggerActivationEnums { TimerTriggerActivation RisingEdge, TimerTriggerActivation\_FallingEdge, TimerTriggerActivation AnyEdge, TimerTriggerActivation\_LevelHigh, TimerTriggerActivation\_LevelLow, NUM\_TIMERTRIGGERACTIVATION } • enum spinEncoderSelectorEnums { EncoderSelector Encoder0, EncoderSelector Encoder1, EncoderSelector Encoder2, NUM ENCODERSELECTOR } enum spinEncoderSourceAEnums { EncoderSourceA Off, EncoderSourceA Line0, EncoderSourceA\_Line1, EncoderSourceA\_Line2, NUM ENCODERSOURCEA } enum spinEncoderSourceBEnums { EncoderSourceB Off, EncoderSourceB Line0, EncoderSourceB Line1, EncoderSourceB\_Line2, NUM\_ENCODERSOURCEB } • enum spinEncoderModeEnums { EncoderMode FourPhase, EncoderMode HighResolution, NUM ENCODERMODE } enum spinEncoderOutputModeEnums { EncoderOutputMode Off, EncoderOutputMode PositionUp,

EncoderOutputMode\_PositionDown, EncoderOutputMode\_DirectionUp, EncoderOutputMode\_DirectionDown, EncoderOutputMode\_Motion, NUM\_ENCODEROUTPUTMODE }

- enum spinEncoderStatusEnums {
   EncoderStatus\_EncoderUp,
   EncoderStatus\_EncoderDown,
   EncoderStatus\_EncoderIdle,
   EncoderStatus\_EncoderStatic,
   NUM\_ENCODERSTATUS \( \)
- NUM ENCODERSTATUS } enum spinEncoderResetSourceEnums { EncoderResetSource Off, EncoderResetSource\_AcquisitionTrigger, EncoderResetSource AcquisitionStart, EncoderResetSource AcquisitionEnd, EncoderResetSource\_FrameTrigger, EncoderResetSource\_FrameStart, EncoderResetSource FrameEnd, EncoderResetSource\_ExposureStart, EncoderResetSource\_ExposureEnd, EncoderResetSource Line0, EncoderResetSource Line1, EncoderResetSource Line2. EncoderResetSource Counter0Start, EncoderResetSource Counter1Start, EncoderResetSource Counter2Start. EncoderResetSource\_Counter0End, EncoderResetSource\_Counter1End, EncoderResetSource\_Counter2End, EncoderResetSource Timer0Start, EncoderResetSource\_Timer1Start, EncoderResetSource\_Timer2Start, EncoderResetSource Timer0End, EncoderResetSource Timer1End, EncoderResetSource\_Timer2End, EncoderResetSource UserOutput0, EncoderResetSource UserOutput1, EncoderResetSource UserOutput2. EncoderResetSource\_SoftwareSignal0, EncoderResetSource SoftwareSignal1, EncoderResetSource SoftwareSignal2, EncoderResetSource\_Action0, EncoderResetSource\_Action1, EncoderResetSource Action2, EncoderResetSource LinkTrigger0. EncoderResetSource LinkTrigger1, EncoderResetSource\_LinkTrigger2, NUM\_ENCODERRESETSOURCE }
- enum spinEncoderResetActivationEnums {
   EncoderResetActivation\_RisingEdge,
   EncoderResetActivation\_FallingEdge,
   EncoderResetActivation\_AnyEdge,
   EncoderResetActivation\_LevelHigh,
   EncoderResetActivation\_LevelLow,
   NUM\_ENCODERRESETACTIVATION }
- enum spinSoftwareSignalSelectorEnums { SoftwareSignalSelector\_SoftwareSignal0,

SoftwareSignalSelector\_SoftwareSignal1, SoftwareSignalSelector SoftwareSignal2, NUM SOFTWARESIGNALSELECTOR } enum spinActionUnconditionalModeEnums { ActionUnconditionalMode Off. ActionUnconditionalMode On, NUM ACTIONUNCONDITIONALMODE } • enum spinSourceSelectorEnums { SourceSelector Source0, SourceSelector Source1, SourceSelector Source2, SourceSelector\_All, NUM\_SOURCESELECTOR } enum spinTransferSelectorEnums { TransferSelector Stream0, TransferSelector Stream1, TransferSelector Stream2, TransferSelector\_All, NUM\_TRANSFERSELECTOR } enum spinTransferTriggerSelectorEnums { TransferTriggerSelector\_TransferStart, TransferTriggerSelector TransferStop, TransferTriggerSelector TransferAbort. TransferTriggerSelector TransferPause, TransferTriggerSelector\_TransferResume, TransferTriggerSelector TransferActive, TransferTriggerSelector\_TransferBurstStart, TransferTriggerSelector\_TransferBurstStop, NUM\_TRANSFERTRIGGERSELECTOR } • enum spinTransferTriggerModeEnums { TransferTriggerMode\_Off, TransferTriggerMode On, NUM TRANSFERTRIGGERMODE } enum spinTransferTriggerSourceEnums { TransferTriggerSource Line0, TransferTriggerSource\_Line1, TransferTriggerSource\_Line2, TransferTriggerSource Counter0Start, TransferTriggerSource\_Counter1Start, TransferTriggerSource\_Counter2Start, TransferTriggerSource\_Counter0End, TransferTriggerSource Counter1End, TransferTriggerSource Counter2End, TransferTriggerSource Timer0Start, TransferTriggerSource Timer1Start, TransferTriggerSource Timer2Start, TransferTriggerSource\_Timer0End, TransferTriggerSource Timer1End, TransferTriggerSource Timer2End, TransferTriggerSource\_SoftwareSignal0, TransferTriggerSource\_SoftwareSignal1, TransferTriggerSource\_SoftwareSignal2, TransferTriggerSource Action0, TransferTriggerSource Action1, TransferTriggerSource\_Action2, NUM\_TRANSFERTRIGGERSOURCE } enum spinTransferTriggerActivationEnums {

TransferTriggerActivation\_RisingEdge,

```
TransferTriggerActivation_FallingEdge,
 TransferTriggerActivation AnyEdge,
 TransferTriggerActivation LevelHigh,
 TransferTriggerActivation_LevelLow,
 NUM TRANSFERTRIGGERACTIVATION }
 enum spinTransferStatusSelectorEnums {
 TransferStatusSelector Streaming,
 TransferStatusSelector_Paused,
 TransferStatusSelector Stopping,
 TransferStatusSelector Stopped,
 TransferStatusSelector QueueOverflow,
 NUM TRANSFERSTATUSSELECTOR }
 enum spinTransferComponentSelectorEnums {
 TransferComponentSelector Red,
 TransferComponentSelector Green,
 TransferComponentSelector_Blue,
 TransferComponentSelector_All,
 NUM TRANSFERCOMPONENTSELECTOR }

    enum spinScan3dDistanceUnitEnums {

 Scan3dDistanceUnit Millimeter,
 Scan3dDistanceUnit Inch,
 NUM SCAN3DDISTANCEUNIT }

    enum spinScan3dCoordinateSystemEnums {

 Scan3dCoordinateSystem_Cartesian,
 Scan3dCoordinateSystem_Spherical,
 Scan3dCoordinateSystem Cylindrical,
 NUM SCAN3DCOORDINATESYSTEM }

    enum spinScan3dOutputModeEnums {

 Scan3dOutputMode UncalibratedC,
 Scan3dOutputMode CalibratedABC Grid,
 Scan3dOutputMode CalibratedABC PointCloud,
 Scan3dOutputMode_CalibratedAC,
 Scan3dOutputMode CalibratedAC Linescan,
 Scan3dOutputMode CalibratedC,
 Scan3dOutputMode CalibratedC Linescan,
 Scan3dOutputMode_RectifiedC,
 Scan3dOutputMode RectifiedC Linescan,
 Scan3dOutputMode DisparityC,
 Scan3dOutputMode DisparityC_Linescan,
 NUM_SCAN3DOUTPUTMODE }
 enum spinScan3dCoordinateSystemReferenceEnums {
 Scan3dCoordinateSystemReference Anchor,
 Scan3dCoordinateSystemReference Transformed,
 NUM SCAN3DCOORDINATESYSTEMREFERENCE }
 enum spinScan3dCoordinateSelectorEnums {
 Scan3dCoordinateSelector CoordinateA,
 Scan3dCoordinateSelector_CoordinateB,
 Scan3dCoordinateSelector CoordinateC,
 NUM_SCAN3DCOORDINATESELECTOR }
 enum spinScan3dCoordinateTransformSelectorEnums {
 Scan3dCoordinateTransformSelector RotationX.
 Scan3dCoordinateTransformSelector RotationY,
 Scan3dCoordinateTransformSelector RotationZ,
 Scan3dCoordinateTransformSelector TranslationX,
 Scan3dCoordinateTransformSelector TranslationY,
 Scan3dCoordinateTransformSelector_TranslationZ,
 NUM SCAN3DCOORDINATETRANSFORMSELECTOR }
```

```
    enum spinScan3dCoordinateReferenceSelectorEnums {

 Scan3dCoordinateReferenceSelector RotationX,
 Scan3dCoordinateReferenceSelector RotationY,
 Scan3dCoordinateReferenceSelector RotationZ,
 Scan3dCoordinateReferenceSelector TranslationX,
 Scan3dCoordinateReferenceSelector TranslationY,
 Scan3dCoordinateReferenceSelector TranslationZ,
 NUM SCAN3DCOORDINATEREFERENCESELECTOR }

    enum spinChunkImageComponentEnums {

 ChunkImageComponent Intensity,
 ChunkImageComponent_Color,
 ChunkImageComponent_Infrared,
 ChunkImageComponent_Ultraviolet,
 ChunkImageComponent Range,
 ChunkImageComponent Disparity,
 ChunkImageComponent Confidence,
 ChunkImageComponent Scatter,
 NUM CHUNKIMAGECOMPONENT }
enum spinChunkCounterSelectorEnums {
 ChunkCounterSelector Counter0,
 ChunkCounterSelector Counter1,
 ChunkCounterSelector Counter2,
 NUM CHUNKCOUNTERSELECTOR }
enum spinChunkTimerSelectorEnums {
 ChunkTimerSelector Timer0,
 ChunkTimerSelector_Timer1,
 ChunkTimerSelector Timer2,
 NUM_CHUNKTIMERSELECTOR }

    enum spinChunkEncoderSelectorEnums {

 ChunkEncoderSelector_Encoder0,
 ChunkEncoderSelector Encoder1,
 ChunkEncoderSelector Encoder2,
 NUM_CHUNKENCODERSELECTOR }
• enum spinChunkEncoderStatusEnums {
 ChunkEncoderStatus EncoderUp,
 ChunkEncoderStatus EncoderDown,
 ChunkEncoderStatus EncoderIdle,
 ChunkEncoderStatus EncoderStatic,
 NUM CHUNKENCODERSTATUS }

    enum spinChunkExposureTimeSelectorEnums {

 ChunkExposureTimeSelector_Common,
 ChunkExposureTimeSelector Red,
 ChunkExposureTimeSelector Green.
 ChunkExposureTimeSelector Blue.
 ChunkExposureTimeSelector Cyan,
 ChunkExposureTimeSelector_Magenta,
 ChunkExposureTimeSelector Yellow,
 ChunkExposureTimeSelector Infrared,
 ChunkExposureTimeSelector_Ultraviolet,
 ChunkExposureTimeSelector_Stage1,
 ChunkExposureTimeSelector Stage2,
 NUM_CHUNKEXPOSURETIMESELECTOR }
 enum spinChunkSourceIDEnums {
 ChunkSourceID Source0,
 ChunkSourceID Source1.
 ChunkSourceID Source2,
 NUM_CHUNKSOURCEID }
```

```
    enum spinChunkRegionIDEnums {

 ChunkRegionID Region0,
 ChunkRegionID_Region1,
 ChunkRegionID_Region2,
 NUM CHUNKREGIONID }

    enum spinChunkTransferStreamIDEnums {

 ChunkTransferStreamID Stream0,
 ChunkTransferStreamID Stream1,
 ChunkTransferStreamID Stream2,
 ChunkTransferStreamID_Stream3,
 NUM CHUNKTRANSFERSTREAMID }

    enum spinChunkScan3dDistanceUnitEnums {

 ChunkScan3dDistanceUnit_Millimeter,
 ChunkScan3dDistanceUnit_Inch,
 NUM CHUNKSCAN3DDISTANCEUNIT }

    enum spinChunkScan3dOutputModeEnums {

 ChunkScan3dOutputMode UncalibratedC.
 ChunkScan3dOutputMode CalibratedABC Grid.
 ChunkScan3dOutputMode_CalibratedABC_PointCloud,
 ChunkScan3dOutputMode_CalibratedAC,
 ChunkScan3dOutputMode CalibratedAC Linescan,
 ChunkScan3dOutputMode_CalibratedC,
 ChunkScan3dOutputMode_CalibratedC_Linescan,
 ChunkScan3dOutputMode_RectifiedC,
 ChunkScan3dOutputMode RectifiedC Linescan.
 ChunkScan3dOutputMode DisparityC,
 ChunkScan3dOutputMode DisparityC Linescan,
 NUM CHUNKSCAN3DOUTPUTMODE }
 enum spinChunkScan3dCoordinateSystemEnums {
 ChunkScan3dCoordinateSystem_Cartesian,
 ChunkScan3dCoordinateSystem Spherical,
 ChunkScan3dCoordinateSystem_Cylindrical,
 NUM_CHUNKSCAN3DCOORDINATESYSTEM }

    enum spinChunkScan3dCoordinateSystemReferenceEnums {

 ChunkScan3dCoordinateSystemReference Anchor,
 ChunkScan3dCoordinateSystemReference Transformed,
 NUM CHUNKSCAN3DCOORDINATESYSTEMREFERENCE }

    enum spinChunkScan3dCoordinateSelectorEnums {

 ChunkScan3dCoordinateSelector CoordinateA,
 ChunkScan3dCoordinateSelector CoordinateB,
 ChunkScan3dCoordinateSelector_CoordinateC,
 NUM CHUNKSCAN3DCOORDINATESELECTOR }

    enum spinChunkScan3dCoordinateTransformSelectorEnums {

 ChunkScan3dCoordinateTransformSelector RotationX,
 ChunkScan3dCoordinateTransformSelector RotationY,
 ChunkScan3dCoordinateTransformSelector RotationZ,
 ChunkScan3dCoordinateTransformSelector TranslationX,
 ChunkScan3dCoordinateTransformSelector TranslationY,
 ChunkScan3dCoordinateTransformSelector TranslationZ,
 NUM CHUNKSCAN3DCOORDINATETRANSFORMSELECTOR }
 enum spinChunkScan3dCoordinateReferenceSelectorEnums {
 ChunkScan3dCoordinateReferenceSelector RotationX.
 ChunkScan3dCoordinateReferenceSelector RotationY,
 ChunkScan3dCoordinateReferenceSelector RotationZ,
 ChunkScan3dCoordinateReferenceSelector TranslationX,
 ChunkScan3dCoordinateReferenceSelector TranslationY,
 ChunkScan3dCoordinateReferenceSelector_TranslationZ,
 NUM CHUNKSCAN3DCOORDINATEREFERENCESELECTOR }
```

```
    enum spinDeviceTapGeometryEnums {

 DeviceTapGeometry Geometry 1X 1Y,
 DeviceTapGeometry_Geometry_1X2_1Y,
 DeviceTapGeometry_Geometry_1X2_1Y2,
 DeviceTapGeometry_Geometry_2X_1Y,
 DeviceTapGeometry Geometry 2X 1Y2Geometry 2XE 1Y,
 DeviceTapGeometry Geometry 2XE 1Y2,
 DeviceTapGeometry Geometry 2XM 1Y,
 DeviceTapGeometry Geometry 2XM 1Y2,
 DeviceTapGeometry Geometry 1X 1Y2,
 DeviceTapGeometry_Geometry_1X_2YE,
 DeviceTapGeometry_Geometry_1X3_1Y,
 DeviceTapGeometry_Geometry_3X_1Y,
 DeviceTapGeometry Geometry 1X,
 DeviceTapGeometry_Geometry_1X2,
 DeviceTapGeometry_Geometry_2X,
 DeviceTapGeometry Geometry 2XE,
 DeviceTapGeometry Geometry 2XM,
 DeviceTapGeometry Geometry 1X3,
 DeviceTapGeometry Geometry 3X,
 DeviceTapGeometry Geometry 1X4 1Y,
 DeviceTapGeometry Geometry 4X 1Y,
 DeviceTapGeometry_Geometry_2X2_1Y,
 DeviceTapGeometry Geometry 2X2E 1YGeometry 2X2M 1Y,
 DeviceTapGeometry Geometry 1X2 2YE,
 DeviceTapGeometry_Geometry_2X_2YE,
 DeviceTapGeometry_Geometry_2XE_2YE,
 DeviceTapGeometry Geometry 2XM 2YE,
 DeviceTapGeometry Geometry 1X4,
 DeviceTapGeometry Geometry 4X.
 DeviceTapGeometry_Geometry_2X2,
 DeviceTapGeometry_Geometry_2X2E,
 DeviceTapGeometry Geometry 2X2M,
 DeviceTapGeometry Geometry 1X8 1Y,
 DeviceTapGeometry_Geometry_8X_1Y,
 DeviceTapGeometry_Geometry_4X2_1Y,
 DeviceTapGeometry Geometry 2X2E 2YE,
 DeviceTapGeometry_Geometry_1X8,
 DeviceTapGeometry Geometry 8X,
 DeviceTapGeometry Geometry 4X2,
 DeviceTapGeometry Geometry 4X2E,
 DeviceTapGeometry Geometry 4X2E 1Y,
 DeviceTapGeometry Geometry 1X10 1Y,
 DeviceTapGeometry Geometry 10X 1Y,
 DeviceTapGeometry Geometry 1X10,
 DeviceTapGeometry_Geometry_10X,
 NUM DEVICETAPGEOMETRY }

    enum spinGevPhysicalLinkConfigurationEnums {

 GevPhysicalLinkConfiguration SingleLink,
 GevPhysicalLinkConfiguration MultiLink,
 GevPhysicalLinkConfiguration StaticLAG,
 GevPhysicalLinkConfiguration_DynamicLAG,
 NUM_GEVPHYSICALLINKCONFIGURATION }
 enum spinGevCurrentPhysicalLinkConfigurationEnums {
 GevCurrentPhysicalLinkConfiguration SingleLink,
 GevCurrentPhysicalLinkConfiguration MultiLink,
 GevCurrentPhysicalLinkConfiguration StaticLAG,
```

 $GevCurrent Physical Link Configuration\_Dynamic LAG,$ 

```
NUM_GEVCURRENTPHYSICALLINKCONFIGURATION }

    enum spinGevIPConfigurationStatusEnums {

 GevIPConfigurationStatus None,
 GevIPConfigurationStatus PersistentIP,
 GevIPConfigurationStatus DHCP,
 GevIPConfigurationStatus LLA,
 GevIPConfigurationStatus ForceIP,
 NUM GEVIPCONFIGURATIONSTATUS }

    enum spinGevGVCPExtendedStatusCodesSelectorEnums {

 GevGVCPExtendedStatusCodesSelector Version1 1,
 GevGVCPExtendedStatusCodesSelector Version2 0,
 NUM_GEVGVCPEXTENDEDSTATUSCODESSELECTOR }

    enum spinGevGVSPExtendedIDModeEnums {

 GevGVSPExtendedIDMode Off,
 GevGVSPExtendedIDMode On,
 NUM GEVGVSPEXTENDEDIDMODE }

    enum spinClConfigurationEnums {

 ClConfiguration Base,
 CIConfiguration_Medium,
 ClConfiguration Full,
 ClConfiguration DualBase,
 ClConfiguration EightyBit,
 NUM CLCONFIGURATION }

    enum spinClTimeSlotsCountEnums {

 CITimeSlotsCount One,
 CITimeSlotsCount Two,
 CITimeSlotsCount Three,
 NUM_CLTIMESLOTSCOUNT }

    enum spinCxpLinkConfigurationStatusEnums {

 CxpLinkConfigurationStatus None,
 CxpLinkConfigurationStatus Pending,
 CxpLinkConfigurationStatus CXP1 X1,
 CxpLinkConfigurationStatus CXP2 X1.
 CxpLinkConfigurationStatus CXP3 X1,
 CxpLinkConfigurationStatus CXP5 X1,
 CxpLinkConfigurationStatus CXP6 X1,
 CxpLinkConfigurationStatus CXP1 X2,
 CxpLinkConfigurationStatus_CXP2_X2,
 CxpLinkConfigurationStatus_CXP3_X2,
 CxpLinkConfigurationStatus CXP5 X2,
 CxpLinkConfigurationStatus CXP6 X2.
 CxpLinkConfigurationStatus CXP1 X3,
 CxpLinkConfigurationStatus CXP2 X3,
 CxpLinkConfigurationStatus CXP3 X3,
 CxpLinkConfigurationStatus CXP5 X3,
 CxpLinkConfigurationStatus_CXP6_X3,
 CxpLinkConfigurationStatus_CXP1_X4,
 CxpLinkConfigurationStatus CXP2 X4,
 CxpLinkConfigurationStatus_CXP3_X4,
 CxpLinkConfigurationStatus_CXP5_X4,
 CxpLinkConfigurationStatus CXP6 X4,
 CxpLinkConfigurationStatus CXP1 X5.
 CxpLinkConfigurationStatus CXP2 X5,
 CxpLinkConfigurationStatus CXP3 X5,
 CxpLinkConfigurationStatus CXP5 X5,
 CxpLinkConfigurationStatus CXP6 X5,
 CxpLinkConfigurationStatus CXP1 X6,
```

CxpLinkConfigurationStatus\_CXP2\_X6,

```
CxpLinkConfigurationStatus CXP3 X6,
 CxpLinkConfigurationStatus CXP5 X6,
 CxpLinkConfigurationStatus CXP6 X6,
 NUM CXPLINKCONFIGURATIONSTATUS }

    enum spinCxpLinkConfigurationPreferredEnums {

 CxpLinkConfigurationPreferred CXP1 X1,
 CxpLinkConfigurationPreferred CXP2 X1,
 CxpLinkConfigurationPreferred CXP3 X1,
 CxpLinkConfigurationPreferred CXP5 X1,
 CxpLinkConfigurationPreferred_CXP6_X1,
 CxpLinkConfigurationPreferred_CXP1_X2,
 CxpLinkConfigurationPreferred CXP2 X2,
 CxpLinkConfigurationPreferred CXP3 X2,
 CxpLinkConfigurationPreferred CXP5 X2,
 CxpLinkConfigurationPreferred CXP6 X2,
 CxpLinkConfigurationPreferred CXP1 X3,
 CxpLinkConfigurationPreferred_CXP2_X3,
 CxpLinkConfigurationPreferred CXP3 X3,
 CxpLinkConfigurationPreferred CXP5 X3,
 CxpLinkConfigurationPreferred CXP6 X3,
 CxpLinkConfigurationPreferred_CXP1_X4,
 CxpLinkConfigurationPreferred CXP2 X4,
 CxpLinkConfigurationPreferred CXP3 X4,
 CxpLinkConfigurationPreferred CXP5 X4,
 CxpLinkConfigurationPreferred CXP6 X4,
 CxpLinkConfigurationPreferred CXP1 X5,
 CxpLinkConfigurationPreferred CXP2 X5.
 CxpLinkConfigurationPreferred_CXP3_X5,
 CxpLinkConfigurationPreferred_CXP5_X5,
 CxpLinkConfigurationPreferred_CXP6_X5,
 CxpLinkConfigurationPreferred CXP1 X6,
 CxpLinkConfigurationPreferred_CXP2_X6,
 CxpLinkConfigurationPreferred_CXP3_X6,
 CxpLinkConfigurationPreferred CXP5 X6,
 CxpLinkConfigurationPreferred CXP6 X6.
 NUM CXPLINKCONFIGURATIONPREFERRED }

    enum spinCxpLinkConfigurationEnums {

 CxpLinkConfiguration_Auto,
 CxpLinkConfiguration_CXP1_X1,
 CxpLinkConfiguration CXP2 X1,
 CxpLinkConfiguration CXP3 X1.
 CxpLinkConfiguration CXP5 X1,
 CxpLinkConfiguration CXP6 X1,
 CxpLinkConfiguration CXP1 X2,
 CxpLinkConfiguration CXP2 X2,
 CxpLinkConfiguration_CXP3_X2,
 CxpLinkConfiguration_CXP5_X2,
 CxpLinkConfiguration CXP6 X2,
 CxpLinkConfiguration_CXP1_X3,
 CxpLinkConfiguration_CXP2_X3,
 CxpLinkConfiguration CXP3 X3,
 CxpLinkConfiguration CXP5 X3.
 CxpLinkConfiguration CXP6 X3,
 CxpLinkConfiguration CXP1 X4,
 CxpLinkConfiguration CXP2 X4,
 CxpLinkConfiguration CXP3 X4,
 CxpLinkConfiguration CXP5 X4,
 CxpLinkConfiguration_CXP6_X4,
```

```
CxpLinkConfiguration_CXP1_X5,
CxpLinkConfiguration_CXP2_X5,
CxpLinkConfiguration_CXP3_X5,
CxpLinkConfiguration_CXP5_X5,
CxpLinkConfiguration_CXP6_X5,
CxpLinkConfiguration_CXP1_X6,
CxpLinkConfiguration_CXP2_X6,
CxpLinkConfiguration_CXP3_X6,
CxpLinkConfiguration_CXP5_X6,
CxpLinkConfiguration_CXP5_X6,
CxpLinkConfiguration_CXP6_X6,
NUM_CXPLINKCONFIGURATION }
enum spinCxpConnectionTestModeEnums
CxpConnectionTestMode_Off
```

- enum spinCxpConnectionTestModeEnums {
   CxpConnectionTestMode\_Off,
   CxpConnectionTestMode\_Mode1,
   NUM\_CXPCONNECTIONTESTMODE }
- enum spinCxpPoCxpStatusEnums {
   CxpPoCxpStatus\_Auto,
   CxpPoCxpStatus\_Off,
   CxpPoCxpStatus\_Tripped,
   NUM\_CXPPOCXPSTATUS }

### 11.2.1 Detailed Description

## 11.2.2 Enumeration Type Documentation

#### 11.2.2.1 spinAcquisitionModeEnums

 $\verb"enum" spinAcquisitionModeEnums"$ 

< Sets the acquisition mode of the device. Continuous: acquires images continuously. Multi Frame: acquires a specified number of images before stopping acquisition. Single Frame: acquires 1 image before stopping acquisition.

#### Enumerator

AcquisitionMode_Continuous	
AcquisitionMode_SingleFrame	
AcquisitionMode_MultiFrame	
NUM_ACQUISITIONMODE	

#### 11.2.2.2 spinAcquisitionStatusSelectorEnums

 $\verb"enum" spinAcquisitionStatusSelectorEnums"$ 

< Selects the internal acquisition signal to read using AcquisitionStatus.

### Enumerator

AcquisitionStatusSelector_AcquisitionTriggerWait	Device is currently waiting for a trigger for the capture of one or many frames.
AcquisitionStatusSelector_AcquisitionActive	Device is currently doing an acquisition of one or many frames.
AcquisitionStatusSelector_AcquisitionTransfer	Device is currently transferring an acquisition of one or many frames.
AcquisitionStatusSelector_FrameTriggerWait	Device is currently waiting for a frame start trigger.
AcquisitionStatusSelector_FrameActive	Device is currently doing the capture of a frame.
AcquisitionStatusSelector_ExposureActive	Device is doing the exposure of a frame.
NUM_ACQUISITIONSTATUSSELECTOR	

## 11.2.2.3 spinActionUnconditionalModeEnums

enum spinActionUnconditionalModeEnums

< Enables the unconditional action command mode where action commands are processed even when the primary control channel is closed.

#### Enumerator

ActionUnconditionalMode_Off	Unconditional mode is disabled.
ActionUnconditionalMode_On	Unconditional mode is enabled.
NUM_ACTIONUNCONDITIONALMODE	

## 11.2.2.4 spinAdcBitDepthEnums

enum spinAdcBitDepthEnums

< Selects which ADC bit depth to use. A higher ADC bit depth results in better image quality but slower maximum frame rate.

AdcBitDepth_Bit8	
AdcBitDepth_Bit10	
AdcBitDepth_Bit12	
AdcBitDepth_Bit14	
NUM_ADCBITDEPTH	

#### 11.2.2.5 spinAutoAlgorithmSelectorEnums

enum spinAutoAlgorithmSelectorEnums

< Selects which Auto Algorithm is controlled by the RoiEnable, OffsetX, OffsetY, Width, Height features.

#### Enumerator

AutoAlgorithmSelector_Awb	Selects the Auto White Balance algorithm.
AutoAlgorithmSelector_Ae	Selects the Auto Exposure algorithm.
NUM_AUTOALGORITHMSELECTOR	

#### 11.2.2.6 spinAutoExposureControlPriorityEnums

enum spinAutoExposureControlPriorityEnums

< Selects whether to adjust gain or exposure first. When gain priority is selected, the camera fixes the gain to 0 dB, and the exposure is adjusted according to the target grey level. If the maximum exposure is reached before the target grey level is hit, the gain starts to change to meet the target. This mode is used to have the minimum noise. When exposure priority is selected, the camera sets the exposure to a small value (default is 5 ms). The gain is adjusted according to the target grey level. If maximum gain is reached before the target grey level is hit, the exposure starts to change to meet the target. This mode is used to capture fast motion.</p>

#### **Enumerator**

AutoExposureControlPriority_Gain	
AutoExposureControlPriority_ExposureTime	
NUM_AUTOEXPOSURECONTROLPRIORITY	

#### 11.2.2.7 spinAutoExposureLightingModeEnums

enum spinAutoExposureLightingModeEnums

< Selects a lighting mode: Backlight, Frontlight or Normal (default). a. Backlight compensation: used when a strong light is coming from the back of the object. b. Frontlight compensation: used when a strong light is shining in the front of the object while the background is dark. c. Normal lighting: used when the object is not under backlight or frontlight conditions. When normal lighting is selected, metering modes are available.

AutoExposureLightingMode_AutoDetect	
AutoExposureLightingMode_Backlight	
AutoExposureLightingMode_Frontlight	
AutoExposureLightingMode_Normal	
NUM_AUTOEXPOSURELIGHTINGMODE	

#### 11.2.2.8 spinAutoExposureMeteringModeEnums

enum spinAutoExposureMeteringModeEnums

< Selects a metering mode: average, spot, or partial metering. a. Average: Measures the light from the entire scene uniformly to determine the final exposure value. Every portion of the exposed area has the same contribution. b. Spot: Measures a small area (about 3%) in the center of the scene while the rest of the scene is ignored. This mode is used when the scene has a high contrast and the object of interest is relatively small. c. Partial: Measures the light from a larger area (about 11%) in the center of the scene. This mode is used when very dark or bright regions appear at the edge of the frame. Note: Metering mode is available only when Lighting Mode Selector is Normal.</p>

#### Enumerator

AutoExposureMeteringMode_Average	
AutoExposureMeteringMode_Spot	
AutoExposureMeteringMode_Partial	
AutoExposureMeteringMode_CenterWeighted	
AutoExposureMeteringMode_HistgramPeak	
NUM_AUTOEXPOSUREMETERINGMODE	

#### 11.2.2.9 spinAutoExposureTargetGreyValueAutoEnums

enum spinAutoExposureTargetGreyValueAutoEnums

< This indicates whether the target image grey level is automatically set by the camera or manually set by the user. Note that the target grey level is in the linear domain before gamma correction is applied.

#### **Enumerator**

AutoExposureTargetGreyValueAuto_Off	Target grey value is manually controlled
AutoExposureTargetGreyValueAuto_Continuous	Target grey value is constantly adapted by the device to maximize the dynamic range.
NUM_AUTOEXPOSURETARGETGREYVALUEA↔	
UTO	

#### 11.2.2.10 spinBalanceRatioSelectorEnums

enum spinBalanceRatioSelectorEnums

< Selects a balance ratio to configure once a balance ratio control has been selected.

#### Enumerator

BalanceRatioSelector_Red	Selects the red balance ratio control for adjustment. The red balance ratio is relative to the green channel.
BalanceRatioSelector_Blue	Selects the blue balance ratio control for adjustment. The blue balance ratio is relative to the green channel.
NUM_BALANCERATIOSELECTOR	

### 11.2.2.11 spinBalanceWhiteAutoEnums

enum spinBalanceWhiteAutoEnums

< White Balance compensates for color shifts caused by different lighting conditions. It can be automatically or manually controlled. For manual control, set to Off. For automatic control, set to Once or Continuous.

### Enumerator

BalanceWhiteAuto_Off	Sets operation mode to Off, which is manual control.
BalanceWhiteAuto_Once	Sets operation mode to once. Once runs for a number of iterations and then
	sets White Balance Auto to Off.
BalanceWhiteAuto_Continuous	Sets operation mode to continuous. Continuous automatically adjusts
	values if the colors are imbalanced.
NUM_BALANCEWHITEAUTO	

### 11.2.2.12 spinBalanceWhiteAutoProfileEnums

 $\verb"enum" spinBalanceWhiteAutoProfileEnums"$ 

< Selects the profile used by BalanceWhiteAuto.

### Enumerator

BalanceWhiteAutoProfile_Indoor	Indoor auto white balance Profile. Can be used to compensate for artificial lighting.
BalanceWhiteAutoProfile_Outdoor	Outdoor auto white balance profile. Designed for scenes with natural lighting.
NUM_BALANCEWHITEAUTOPROFILE	

## 11.2.2.13 spinBinningHorizontalModeEnums

 $\verb"enum" spinBinningHorizontalModeEnums"$ 

<

### Enumerator

BinningHorizontalMode_Sum	The response from the combined horizontal cells is added, resulting in increased sensitivity (a brighter image).
BinningHorizontalMode_Average	The response from the combined horizontal cells is averaged, resulting in increased signal/noise ratio. Not all sensors support average binning.
NUM_BINNINGHORIZONTALMODE	

### 11.2.2.14 spinBinningSelectorEnums

enum spinBinningSelectorEnums

< Selects which binning engine is controlled by the BinningHorizontal and BinningVertical features.

### Enumerator

BinningSelector_All	The total amount of binning to be performed on the captured sensor data.
BinningSelector_Sensor	The portion of binning to be performed on the sensor directly.
BinningSelector_ISP	The portion of binning to be performed by the image signal processing engine (ISP) outside of the sensor. Note: the ISP can be disabled.
NUM_BINNINGSELECTOR	

# 11.2.2.15 spinBinningVerticalModeEnums

 $\verb"enum" spinBinningVerticalModeEnums"$ 

<

### Enumerator

BinningVerticalMode_Sum	The response from the combined vertical cells is added, resulting in increased sensitivity (a brighter image).
BinningVerticalMode_Average	The response from the combined vertical cells is averaged, resulting in increased signal/noise ratio. Not all sensors support average binning.
NUM_BINNINGVERTICALMODE	

## 11.2.2.16 spinBlackLevelAutoBalanceEnums

enum spinBlackLevelAutoBalanceEnums

< Controls the mode for automatic black level balancing between the sensor color channels or taps. The black level coefficients of each channel are adjusted so they are matched.

#### Enumerator

BlackLevelAutoBalance_Off	Black level tap balancing is user controlled using BlackLevel.
BlackLevelAutoBalance_Once	Black level tap balancing is automatically adjusted once by the device. Once it has converged, it automatically returns to the Off state.
BlackLevelAutoBalance_Continuous	Black level tap balancing is constantly adjusted by the device.
NUM_BLACKLEVELAUTOBALANCE	

#### 11.2.2.17 spinBlackLevelAutoEnums

enum spinBlackLevelAutoEnums

< Controls the mode for automatic black level adjustment. The exact algorithm used to implement this adjustment is device-specific.

### Enumerator

BlackLevelAuto_Off	Analog black level is user controlled using BlackLevel.
BlackLevelAuto_Once	Analog black level is automatically adjusted once by the device. Once it has converged, it automatically returns to the Off state.
BlackLevelAuto_Continuous	Analog black level is constantly adjusted by the device.
NUM_BLACKLEVELAUTO	

### 11.2.2.18 spinBlackLevelSelectorEnums

 $\verb"enum spinBlackLevelSelectorEnums"$ 

< Selects which black level to control. Only All can be set by the user. Analog and Digital are read-only.

### Enumerator

	BlackLevelSelector_All	
	BlackLevelSelector_Analog	
	BlackLevelSelector_Digital	
ĺ	NUM_BLACKLEVELSELECTOR	

# 11.2.2.19 spinChunkBlackLevelSelectorEnums

 $\verb"enum" spinChunkBlackLevelSelectorEnums"$ 

< Selects which black level to retrieve

### Enumerator

ChunkBlackLevelSelector_All	
NUM_CHUNKBLACKLEVELSELECTOR	

#### 11.2.2.20 spinChunkCounterSelectorEnums

enum spinChunkCounterSelectorEnums

< Selects which counter to retrieve data from.

### Enumerator

ChunkCounterSelector_Counter0	Selects the counter 0.
ChunkCounterSelector_Counter1	Selects the counter 1.
ChunkCounterSelector_Counter2	Selects the counter 2.
NUM_CHUNKCOUNTERSELECTOR	

### 11.2.2.21 spinChunkEncoderSelectorEnums

 $\verb"enum" spinChunkEncoderSelectorEnums"$ 

< Selects which Encoder to retrieve data from.

## Enumerator

ChunkEncoderSelector_Encoder0	Selects the first Encoder.
ChunkEncoderSelector_Encoder1	Selects the first Encoder.
ChunkEncoderSelector_Encoder2	Selects the second Encoder.
NUM_CHUNKENCODERSELECTOR	

### 11.2.2.22 spinChunkEncoderStatusEnums

 $\verb"enum" spinChunkEncoderStatusEnums"$ 

< Returns the motion status of the selected encoder.

ChunkEncoderStatus_EncoderUp	The encoder counter last incremented.
ChunkEncoderStatus_EncoderDown	The encoder counter last decremented.
ChunkEncoderStatus_EncoderIdle	The encoder is not active.
ChunkEncoderStatus_EncoderStatic	No motion within the EncoderTimeout time.
NUM_CHUNKENCODERSTATUS	

#### 11.2.2.23 spinChunkExposureTimeSelectorEnums

 $\verb"enum" spinChunkExposureTimeSelectorEnums"$ 

< Selects which exposure time is read by the ChunkExposureTime feature.

#### Enumerator

ChunkExposureTimeSelector_Common	Selects the common ExposureTime.
ChunkExposureTimeSelector_Red	Selects the red common ExposureTime.
ChunkExposureTimeSelector_Green	Selects the green ExposureTime.
ChunkExposureTimeSelector_Blue	Selects the blue ExposureTime.
ChunkExposureTimeSelector_Cyan	Selects the cyan common ExposureTime
ChunkExposureTimeSelector_Magenta	Selects the magenta ExposureTime
ChunkExposureTimeSelector_Yellow	Selects the yellow ExposureTime
ChunkExposureTimeSelector_Infrared	Selects the infrared ExposureTime.
ChunkExposureTimeSelector_Ultraviolet	Selects the ultraviolet ExposureTime.
ChunkExposureTimeSelector_Stage1	Selects the first stage ExposureTime.
ChunkExposureTimeSelector_Stage2	Selects the second stage ExposureTime.
NUM_CHUNKEXPOSURETIMESELECTOR	

### 11.2.2.24 spinChunkGainSelectorEnums

 $\verb"enum spinChunkGainSelectorEnums"$ 

< Selects which gain to retrieve

## Enumerator

ChunkGainSelector_All	
ChunkGainSelector_Red	
ChunkGainSelector_Green	
ChunkGainSelector_Blue	
NUM_CHUNKGAINSELECTOR	

## 11.2.2.25 spinChunkImageComponentEnums

enum spinChunkImageComponentEnums

< Returns the component of the payload image. This can be used to identify the image component of a generic part in a multipart transfer.

## Enumerator

ChunkImageComponent_Intensity	The image data is the intensity component.
ChunkImageComponent_Color	The image data is color component.
ChunkImageComponent_Infrared	The image data is infrared component.
ChunkImageComponent_Ultraviolet	The image data is the ultraviolet component.
ChunkImageComponent_Range	The image data is the range (distance) component.
ChunkImageComponent_Disparity	The image data is the disparity component.
ChunkImageComponent_Confidence	The image data is the confidence map component.
ChunkImageComponent_Scatter	The image data is the scatter component.
NUM_CHUNKIMAGECOMPONENT	

## 11.2.2.26 spinChunkPixelFormatEnums

enum spinChunkPixelFormatEnums

< Format of the pixel provided by the camera

#### Enumerator

	_
ChunkPixelFormat_Mono8	
ChunkPixelFormat_Mono12Packed	
ChunkPixelFormat_Mono16	
ChunkPixelFormat_RGB8Packed	
ChunkPixelFormat_YUV422Packed	
ChunkPixelFormat_BayerGR8	
ChunkPixelFormat_BayerRG8	
ChunkPixelFormat_BayerGB8	
ChunkPixelFormat_BayerBG8	
ChunkPixelFormat_YCbCr601_422_8_CbYCrY	
NUM_CHUNKPIXELFORMAT	

# 11.2.2.27 spinChunkRegionIDEnums

 $\verb"enum" spinChunkRegionIDEnums"$ 

< Returns the identifier of Region that the image comes from.

ChunkRegionID_Region0	Image comes from the Region 0.
ChunkRegionID_Region1	Image comes from the Region 1.
ChunkRegionID_Region2	Image comes from the Region 2.
NUM_CHUNKREGIONID	

#### 11.2.2.28 spinChunkScan3dCoordinateReferenceSelectorEnums

 $\verb"enum" spinChunkScan3dCoordinateReferenceSelectorEnums"$ 

< Selector to read a coordinate system reference value defining the transform of a point from one system to the other.

#### Enumerator

ChunkScan3dCoordinateReferenceSelector_RotationX	Rotation around X axis.
ChunkScan3dCoordinateReferenceSelector_RotationY	Rotation around Y axis.
ChunkScan3dCoordinateReferenceSelector_RotationZ	Rotation around Z axis.
ChunkScan3dCoordinateReferenceSelector_TranslationX	X axis translation.
ChunkScan3dCoordinateReferenceSelector_TranslationY	Y axis translation.
ChunkScan3dCoordinateReferenceSelector_TranslationZ	Z axis translation.
NUM_CHUNKSCAN3DCOORDINATEREFERENCESELECTOR	

# 11.2.2.29 spinChunkScan3dCoordinateSelectorEnums

 $\verb"enum" spinChunkScan3dCoordinateSelectorEnums"$ 

< Selects which Coordinate to retrieve data from.

#### Enumerator

ChunkScan3dCoordinateSelector_CoordinateA	The first (X or Theta) coordinate
ChunkScan3dCoordinateSelector_CoordinateB	The second (Y or Phi) coordinate
ChunkScan3dCoordinateSelector_CoordinateC	The third (Z or Rho) coordinate.
NUM_CHUNKSCAN3DCOORDINATESELECTOR	

### 11.2.2.30 spinChunkScan3dCoordinateSystemEnums

enum spinChunkScan3dCoordinateSystemEnums

< Returns the Coordinate System of the image included in the payload.

ChunkScan3dCoordinateSystem_Cartesian	Default value. 3-axis orthogonal, right-hand X-Y-Z.
ChunkScan3dCoordinateSystem_Spherical	A Theta-Phi-Rho coordinate system.
ChunkScan3dCoordinateSystem_Cylindrical	A Theta-Y-Rho coordinate system.
NUM_CHUNKSCAN3DCOORDINATESYSTEM	

# ${\bf 11.2.2.31} \quad spinChunkScan3dCoordinateSystemReferenceEnums$

 $\verb"enum" spinChunkScan3dCoordinateSystemReferenceEnums"$ 

< Returns the Coordinate System Position of the image included in the payload.

## Enumerator

ChunkScan3dCoordinateSystemReference_Anchor	Default value. Original fixed reference. The coordinate system fixed relative the camera reference point marker is used.
ChunkScan3dCoordinateSystemReference_← Transformed	Transformed reference system. The transformed coordinate system is used according to the definition in the rotation and translation matrices.
NUM_CHUNKSCAN3DCOORDINATESYSTEMRE↔ FERENCE	

## 11.2.2.32 spinChunkScan3dCoordinateTransformSelectorEnums

enum spinChunkScan3dCoordinateTransformSelectorEnums

< Selector for transform values.

### Enumerator

ChunkScan3dCoordinateTransformSelector_RotationX	Rotation around X axis.
ChunkScan3dCoordinateTransformSelector_RotationY	Rotation around Y axis.
ChunkScan3dCoordinateTransformSelector_RotationZ	Rotation around Z axis.
ChunkScan3dCoordinateTransformSelector_TranslationX	Translation along X axis.
ChunkScan3dCoordinateTransformSelector_TranslationY	Translation along Y axis.
ChunkScan3dCoordinateTransformSelector_TranslationZ	Translation along Z axis.
NUM_CHUNKSCAN3DCOORDINATETRANSFORMSELECTOR	

### 11.2.2.33 spinChunkScan3dDistanceUnitEnums

 $\verb"enum spinChunkScan3dDistanceUnitEnums"$ 

< Returns the Distance Unit of the payload image.

ChunkScan3dDistanceUnit_Millimeter	Default value. Distance values are in millimeter units.
ChunkScan3dDistanceUnit_Inch	Distance values are in inch units.
NUM_CHUNKSCAN3DDISTANCEUNIT	Gen

## 11.2.2.34 spinChunkScan3dOutputModeEnums

enum spinChunkScan3dOutputModeEnums

< Returns the Calibrated Mode of the payload image.

ChunkScan3dOutputMode_UncalibratedC	Uncalibrated 2.5D Depth map. The distance data does not represent a physical unit and may be non-linear. The data is a 2.5D range map only.
ChunkScan3dOutputMode_CalibratedABC_Grid	3 Coordinates in grid organization. The full 3 coordinate data with the grid array organization from the sensor kept.
ChunkScan3dOutputMode_CalibratedABC_Point ← Cloud	3 Coordinates without organization. The full 3 coordinate data without any organization of data points. Typically only valid points transmitted giving varying image size.
ChunkScan3dOutputMode_CalibratedAC	2 Coordinates with fixed B sampling. The data is sent as a A and C coordinates (X,Z or Theta,Rho). The B (Y) axis uses the scale and offset parameters for the B axis.
ChunkScan3dOutputMode_CalibratedAC_Linescan	2 Coordinates with varying sampling. The data is sent as a A and C coordinates (X,Z or Theta,Rho). The B (Y) axis comes from the encoder chunk value.
ChunkScan3dOutputMode_CalibratedC	Calibrated 2.5D Depth map. The distance data is expressed in the chosen distance unit. The data is a 2.5D range map. No information on X-Y axes available.
ChunkScan3dOutputMode_CalibratedC_Linescan	Depth Map with varying B sampling. The distance data is expressed in the chosen distance unit. The data is a 2.5D range map. The B (Y) axis comes from the encoder chunk value.
ChunkScan3dOutputMode_RectifiedC	Rectified 2.5D Depth map. The distance data has been rectified to a uniform sampling pattern in the X and Y direction. The data is a 2.5D range map only. If a complete 3D point cloud is rectified but transmitted as explicit coordinates it should be transmitted as one of the "CalibratedABC" formats.
ChunkScan3dOutputMode_RectifiedC_Linescan	Rectified 2.5D Depth map with varying B sampling. The data is sent as rectified 1D profiles using Coord3D_C pixels. The B (Y) axis comes from the encoder chunk value.
ChunkScan3dOutputMode_DisparityC	Disparity 2.5D Depth map. The distance is inversely proportional to the pixel (disparity) value.
ChunkScan3dOutputMode_DisparityC_Linescan	Disparity 2.5D Depth map with varying B sampling. The distance is inversely proportional to the pixel (disparity) value. The B (Y) axis comes from the encoder chunk value.
NUM_CHUNKSCAN3DOUTPUTMODE	

### 11.2.2.35 spinChunkSelectorEnums

 $\verb"enum spinChunkSelectorEnums"$ 

< Selects which chunk data to enable or disable.

### Enumerator

ChunkSelector_Image	
ChunkSelector_CRC	
ChunkSelector_FrameID	
ChunkSelector_OffsetX	
ChunkSelector_OffsetY	
ChunkSelector_Width	
ChunkSelector_Height	
ChunkSelector_ExposureTime	
ChunkSelector_Gain	
ChunkSelector_BlackLevel	
ChunkSelector_PixelFormat	
ChunkSelector_Timestamp	
ChunkSelector_SequencerSetActive	
ChunkSelector_SerialData	
ChunkSelector_ExposureEndLineStatusAll	
NUM_CHUNKSELECTOR	

# 11.2.2.36 spinChunkSourceIDEnums

 $\verb"enum spinChunkSourceIDEnums"$ 

< Returns the identifier of Source that the image comes from.

## Enumerator

ChunkSourceID_Source0	Image comes from the Source 0.
ChunkSourceID_Source1	Image comes from the Source 1.
ChunkSourceID_Source2	Image comes from the Source 2.
NUM_CHUNKSOURCEID	

## 11.2.2.37 spinChunkTimerSelectorEnums

 $\verb"enum spinChunkTimerSelectorEnums"$ 

< Selects which Timer to retrieve data from.

#### Enumerator

ChunkTimerSelector_Timer0	Selects the first Timer.	
ChunkTimerSelector_Timer1	Selects the first Timer.	
ChunkTimerSelector_Timer2	Selects the second Timer.	
NUM_CHUNKTIMERSELECTOR		

## 11.2.2.38 spinChunkTransferStreamIDEnums

 $\verb"enum" spinChunkTransferStreamIDEnums"$ 

< Returns identifier of the stream that generated this block.

#### Enumerator

ChunkTransferStreamID_Stream0	Data comes from Stream0.
ChunkTransferStreamID_Stream1	Data comes from Stream1.
ChunkTransferStreamID_Stream2	Data comes from Stream2.
ChunkTransferStreamID_Stream3	Data comes from Stream3.
NUM_CHUNKTRANSFERSTREAMID	

### 11.2.2.39 spinClConfigurationEnums

 $\verb"enum" spinClConfigurationEnums"$ 

< This Camera Link specific feature describes the configuration used by the camera. It helps especially when a camera is capable of operation in a non-standard configuration, and when the features PixelSize, SensorDigitization ← Taps, and DeviceTapGeometry do not provide enough information for interpretation of the image data provided by the camera.

CIConfiguration_Base	Standard base configuration described by the Camera Link standard.
ClConfiguration_Medium	Standard medium configuration described by the Camera Link standard.
ClConfiguration_Full	Standard full configuration described by the Camera Link standard.
ClConfiguration_DualBase	The camera streams the data from multiple taps (that do not fit in the standard base configuration) through two Camera Link base ports. It is responsibility of the application or frame grabber to reconstruct the full image. Only one of the ports (fixed) serves as the "master" for serial communication and triggering.
ClConfiguration_EightyBit	Standard 80-bit configuration with 10 taps of 8 bits or 8 taps of 10 bits, as described by the Camera Link standard.
NUM_CLCONFIGURATION	

#### 11.2.2.40 spinCITimeSlotsCountEnums

 $\verb"enum spinClTimeSlotsCountEnums"$ 

< This Camera Link specific feature describes the time multiplexing of the camera link connection to transfer more than the configuration allows, in one single clock.

### Enumerator

CITimeSlotsCount_One	One
CITimeSlotsCount_Two	Two
CITimeSlotsCount_Three	Three
NUM_CLTIMESLOTSCOUNT	

## 11.2.2.41 spinColorTransformationSelectorEnums

enum spinColorTransformationSelectorEnums

< Selects which Color Transformation module is controlled by the various Color Transformation features

#### Enumerator

ColorTransformationSelector_RGBtoRGB	
ColorTransformationSelector_RGBtoYUV	
NUM_COLORTRANSFORMATIONSELECTOR	

## 11.2.2.42 spinColorTransformationValueSelectorEnums

 $\verb"enum" spinColorTransformationValueSelectorEnums"$ 

< Selects the Gain factor or Offset of the Transformation matrix to access in the selected Color Transformation module

ColorTransformationValueSelector_Gain00	
ColorTransformationValueSelector_Gain01	
ColorTransformationValueSelector_Gain02	
ColorTransformationValueSelector_Gain10	
ColorTransformationValueSelector_Gain11	
ColorTransformationValueSelector_Gain12	
ColorTransformationValueSelector_Gain20	
ColorTransformationValueSelector_Gain21	
ColorTransformationValueSelector_Gain22	
ColorTransformationValueSelector_Offset0	
ColorTransformationValueSelector_Offset1	
ColorTransformationValueSelector_Offset2	
NUM_COLORTRANSFORMATIONVALUESELECTOR	

#### 11.2.2.43 spinCompressionSaturationPriorityEnums

 $\verb"enum" spinCompressionSaturationPriorityEnums"$ 

< When FrameRate is enabled, camera drops frames if datarate is saturated. If FrameRate is disabled, camera adjusts the framerate to match the maximum achievable datarate.

#### Enumerator

CompressionSaturationPriority_DropFrame	Frames which will cause the MaxDatarateThreshold	
	to be exceeded will not be transmitted. Requires	
	FrameRateEnable to be True	
CompressionSaturationPriority_ReduceFrameRate	AcquisitionFrameRate is dynamically adjusted to the	
	highest possible value without exceeding the	
	MaxDatarateThreshold.	
NUM_COMPRESSIONSATURATIONPRIORITY		

### 11.2.2.44 spinCounterEventActivationEnums

enum spinCounterEventActivationEnums

< Selects the activation mode of the event to increment the Counter.

## Enumerator

CounterEventActivation_LevelLow	
CounterEventActivation_LevelHigh	
CounterEventActivation_FallingEdge	
CounterEventActivation_RisingEdge	
CounterEventActivation_AnyEdge	
NUM_COUNTEREVENTACTIVATION	

## 11.2.2.45 spinCounterEventSourceEnums

 $\verb"enum spinCounterEventSourceEnums"$ 

< Selects the event that will increment the counter

CounterEventSource_Off	Off
CounterEventSource_MHzTick	MHzTick
CounterEventSource_Line0	Line0

## Enumerator

CounterEventSource_Line1	Line1
CounterEventSource_Line2	Line2
CounterEventSource_Line3	Line3
CounterEventSource_UserOutput0	UserOutput0
CounterEventSource_UserOutput1	UserOutput1
CounterEventSource_UserOutput2	UserOutput2
CounterEventSource_UserOutput3	UserOutput3
CounterEventSource_Counter0Start	Counter0Start
CounterEventSource_Counter1Start	Counter1Start
CounterEventSource_Counter0End	Counter0End
CounterEventSource_Counter1End	Counter1End
CounterEventSource_LogicBlock0	LogicBlock0
CounterEventSource_LogicBlock1	LogicBlock1
CounterEventSource_ExposureStart	ExposureStart
CounterEventSource_ExposureEnd	ExposureEnd
CounterEventSource_FrameTriggerWait	FrameTriggerWait
NUM_COUNTEREVENTSOURCE	

## 11.2.2.46 spinCounterResetActivationEnums

 $\verb"enum" spinCounterResetActivationEnums"$ 

< Selects the Activation mode of the Counter Reset Source signal.

### Enumerator

CounterResetActivation_LevelLow	
CounterResetActivation_LevelHigh	
CounterResetActivation_FallingEdge	
CounterResetActivation_RisingEdge	
CounterResetActivation_AnyEdge	
NUM_COUNTERRESETACTIVATION	

## 11.2.2.47 spinCounterResetSourceEnums

enum spinCounterResetSourceEnums

< Selects the signal that will be the source to reset the counter.

CounterResetSource_Off	Off

## Enumerator

CounterResetSource_Line0	Line0
CounterResetSource_Line1	Line1
CounterResetSource_Line2	Line2
CounterResetSource_Line3	Line3
CounterResetSource_UserOutput0	UserOutput0
CounterResetSource_UserOutput1	UserOutput1
CounterResetSource_UserOutput2	UserOutput2
CounterResetSource_UserOutput3	UserOutput3
CounterResetSource_Counter0Start	Counter0Start
CounterResetSource_Counter1Start	Counter1Start
CounterResetSource_Counter0End	Counter0End
CounterResetSource_Counter1End	Counter1End
CounterResetSource_LogicBlock0	LogicBlock0
CounterResetSource_LogicBlock1	LogicBlock1
CounterResetSource_ExposureStart	ExposureStart
CounterResetSource_ExposureEnd	ExposureEnd
CounterResetSource_FrameTriggerWait	FrameTriggerWait
NUM_COUNTERRESETSOURCE	

# 11.2.2.48 spinCounterSelectorEnums

enum spinCounterSelectorEnums

< Selects which counter to configure

### Enumerator

CounterSelector_Counter0	
CounterSelector_Counter1	
NUM COUNTERSELECTOR	

## 11.2.2.49 spinCounterStatusEnums

enum spinCounterStatusEnums

< Returns the current status of the counter.

CounterStatus_CounterIdle	The counter is idle.
CounterStatus_CounterTriggerWait	The counter is waiting for a start trigger.
CounterStatus_CounterActive	The counter is counting for the specified duration.
CounterStatus_CounterCompleted	The counter reached the CounterDuration count.
CounterStatus_CounterOverflow	The counter reached its maximum possible count.
NUM_COUNTERSTATUS	

## 11.2.2.50 spinCounterTriggerActivationEnums

enum spinCounterTriggerActivationEnums

< Selects the activation mode of the trigger to start the counter.

### Enumerator

CounterTriggerActivation_LevelLow	
CounterTriggerActivation_LevelHigh	
CounterTriggerActivation_FallingEdge	
CounterTriggerActivation_RisingEdge	
CounterTriggerActivation_AnyEdge	
NUM_COUNTERTRIGGERACTIVATION	

# 11.2.2.51 spinCounterTriggerSourceEnums

 $\verb"enum" spinCounterTriggerSourceEnums"$ 

< Selects the source of the trigger to start the counter

CounterTriggerSource_Off	Off
CounterTriggerSource_Line0	Line0
CounterTriggerSource_Line1	Line1
CounterTriggerSource_Line2	Line2
CounterTriggerSource_Line3	Line3
CounterTriggerSource_UserOutput0	UserOutput0
CounterTriggerSource_UserOutput1	UserOutput1
CounterTriggerSource_UserOutput2	UserOutput2
CounterTriggerSource_UserOutput3	UserOutput3
CounterTriggerSource_Counter0Start	Counter0Start
CounterTriggerSource_Counter1Start	Counter1Start
CounterTriggerSource_Counter0End	Counter0End
CounterTriggerSource_Counter1End	Counter1End
CounterTriggerSource_LogicBlock0	LogicBlock0
CounterTriggerSource_LogicBlock1	LogicBlock1
CounterTriggerSource_ExposureStart	ExposureStart
CounterTriggerSource_ExposureEnd	ExposureEnd
CounterTriggerSource_FrameTriggerWait	FrameTriggerWait
NUM_COUNTERTRIGGERSOURCE	

#### 11.2.2.52 spinCxpConnectionTestModeEnums

 $\verb"enum" spinCxpConnectionTestModeEnums"$ 

< Enables the test mode for an individual physical connection of the Device.

#### Enumerator

CxpConnectionTestMode_Off	Off
CxpConnectionTestMode_Mode1	Mode 1
NUM_CXPCONNECTIONTESTMODE	

### 11.2.2.53 spinCxpLinkConfigurationEnums

 $\verb"enum" spinCxpLinkConfigurationEnums"$ 

< This feature allows specifying the Link configuration for the communication between the Receiver and Transmitter Device. In most cases this feature does not need to be written because automatic discovery will set configuration correctly to the value returned by CxpLinkConfigurationPreferred. Note that the currently active configuration of the Link can be read using CxpLinkConfigurationStatus.</p>

CxpLinkConfiguration_Auto	Sets Automatic discovery for the Link Configuration.
CxpLinkConfiguration_CXP1_X1	Force the Link to 1 Connection operating at CXP-1 speed (1.25 Gbps).
CxpLinkConfiguration_CXP2_X1	Force the Link to 1 Connection operating at CXP-2 speed (2.50 Gbps).
CxpLinkConfiguration_CXP3_X1	Force the Link to 1 Connection operating at CXP-3 speed (3.125 Gbps).
CxpLinkConfiguration_CXP5_X1	Force the Link to 1 Connection operating at CXP-5 speed (5.00 Gbps).
CxpLinkConfiguration_CXP6_X1	Force the Link to 1 Connection operating at CXP-6 speed (6.25 Gbps).
CxpLinkConfiguration_CXP1_X2	Force the Link to 2 Connections operating at CXP-1 speed (1.25 Gbps).
CxpLinkConfiguration_CXP2_X2	Force the Link to 2 Connections operating at CXP-2 speed (2.50 Gbps).
CxpLinkConfiguration_CXP3_X2	Force the Link to 2 Connections operating at CXP-3 speed (3.125 Gbps).
CxpLinkConfiguration_CXP5_X2	Force the Link to 2 Connections operating at CXP-5 speed (5.00 Gbps).
CxpLinkConfiguration_CXP6_X2	Force the Link to 3 Connections operating at CXP-6 speed (6.25 Gbps).
CxpLinkConfiguration_CXP1_X3	Force the Link to 3 Connections operating at CXP-1 speed (1.25 Gbps).
CxpLinkConfiguration_CXP2_X3	Force the Link to 3 Connections operating at CXP-2 speed (2.50 Gbps).
CxpLinkConfiguration_CXP3_X3	Force the Link to 3 Connections operating at CXP-3 speed (3.125 Gbps).
CxpLinkConfiguration_CXP5_X3	Force the Link to 3 Connections operating at CXP-5 speed (5.00 Gbps).
CxpLinkConfiguration_CXP6_X3	Force the Link to 3 Connections operating at CXP-6 speed (6.25 Gbps).
CxpLinkConfiguration_CXP1_X4	Force the Link to 4 Connections operating at CXP-1 speed (1.25 Gbps).
CxpLinkConfiguration_CXP2_X4	Force the Link to 4 Connections operating at CXP-2 speed (2.50 Gbps).
CxpLinkConfiguration_CXP3_X4	Force the Link to 4 Connections operating at CXP-3 speed (3.125 Gbps).
CxpLinkConfiguration_CXP5_X4	Force the Link to 4 Connections operating at CXP-5 speed (5.00 Gbps).
CxpLinkConfiguration_CXP6_X4	Force the Link to 4 Connections operating at CXP-6 speed (6.25 Gbps).

## Enumerator

CxpLinkConfiguration_CXP1_X5	Force the Link to 5 Connections operating at CXP-1 speed (1.25 Gbps).
CxpLinkConfiguration_CXP2_X5	Force the Link to 5 Connections operating at CXP-2 speed (2.50 Gbps).
CxpLinkConfiguration_CXP3_X5	Force the Link to 5 Connections operating at CXP-3 speed (3.125 Gbps).
CxpLinkConfiguration_CXP5_X5	Force the Link to 5 Connections operating at CXP-5 speed (5.00 Gbps).
CxpLinkConfiguration_CXP6_X5	Force the Link to 5 Connections operating at CXP-6 speed (6.25 Gbps).
CxpLinkConfiguration_CXP1_X6	Force the Link to 6 Connections operating at CXP-1 speed (1.25 Gbps).
CxpLinkConfiguration_CXP2_X6	Force the Link to 6 Connections operating at CXP-2 speed (2.50 Gbps).
CxpLinkConfiguration_CXP3_X6	Force the Link to 6 Connections operating at CXP-3 speed (3.125 Gbps).
CxpLinkConfiguration_CXP5_X6	Force the Link to 6 Connections operating at CXP-5 speed (5.00 Gbps).
CxpLinkConfiguration_CXP6_X6	Force the Link to 6 Connections operating at CXP-6 speed (6.25 Gbps).
NUM_CXPLINKCONFIGURATION	

# 11.2.2.54 spinCxpLinkConfigurationPreferredEnums

enum spinCxpLinkConfigurationPreferredEnums

< Provides the Link configuration that allows the Transmitter Device to operate in its default mode.

CxpLinkConfigurationPreferred_CXP1_X1	1 Connection operating at CXP-1 speed (1.25 Gbps).
CxpLinkConfigurationPreferred_CXP2_X1	1 Connection operating at CXP-2 speed (2.50 Gbps).
CxpLinkConfigurationPreferred_CXP3_X1	1 Connection operating at CXP-3 speed (3.125 Gbps).
CxpLinkConfigurationPreferred_CXP5_X1	1 Connection operating at CXP-5 speed (5.00 Gbps).
CxpLinkConfigurationPreferred_CXP6_X1	1 Connection operating at CXP-6 speed (6.25 Gbps).
CxpLinkConfigurationPreferred_CXP1_X2	2 Connections operating at CXP-1 speed (1.25 Gbps).
CxpLinkConfigurationPreferred_CXP2_X2	2 Connections operating at CXP-2 speed (2.50 Gbps).
CxpLinkConfigurationPreferred_CXP3_X2	2 Connections operating at CXP-3 speed (3.125 Gbps).
CxpLinkConfigurationPreferred_CXP5_X2	2 Connections operating at CXP-4 speed (5.00 Gbps).
CxpLinkConfigurationPreferred_CXP6_X2	3 Connections operating at CXP-5 speed (6.25 Gbps).
CxpLinkConfigurationPreferred_CXP1_X3	3 Connections operating at CXP-1 speed (1.25 Gbps).
CxpLinkConfigurationPreferred_CXP2_X3	3 Connections operating at CXP-2 speed (2.50 Gbps).
CxpLinkConfigurationPreferred_CXP3_X3	3 Connections operating at CXP-3 speed (3.125 Gbps).
CxpLinkConfigurationPreferred_CXP5_X3	3 Connections operating at CXP-5 speed (5.00 Gbps).
CxpLinkConfigurationPreferred_CXP6_X3	3 Connections operating at CXP-6 speed (6.25 Gbps).
CxpLinkConfigurationPreferred_CXP1_X4	4 Connections operating at CXP-1 speed (1.25 Gbps).
CxpLinkConfigurationPreferred_CXP2_X4	4 Connections operating at CXP-2 speed (2.50 Gbps).
CxpLinkConfigurationPreferred_CXP3_X4	4 Connections operating at CXP-3 speed (3.125 Gbps).
CxpLinkConfigurationPreferred_CXP5_X4	4 Connections operating at CXP-5 speed (5.00 Gbps).
CxpLinkConfigurationPreferred_CXP6_X4	4 Connections operating at CXP-6 speed (6.25 Gbps).
CxpLinkConfigurationPreferred_CXP1_X5	5 Connections operating at CXP-1 speed (1.25 Gbps).
CxpLinkConfigurationPreferred_CXP2_X5	5 Connections operating at CXP-2 speed (2.50 Gbps).
CxpLinkConfigurationPreferred_CXP3_X5	5 Connections operating at CXP-3 speed (3.125 Gbps).
CxpLinkConfigurationPreferred_CXP5_X5	5 Connections operating at CXP-5 speed (5.00 Gbps).

## Enumerator

CxpLinkConfigurationPreferred_CXP6_X5	5 Connections operating at CXP-6 speed (6.25 Gbps).
CxpLinkConfigurationPreferred_CXP1_X6	6 Connections operating at CXP-1 speed (1.25 Gbps).
CxpLinkConfigurationPreferred_CXP2_X6	6 Connections operating at CXP-2 speed (2.50 Gbps).
CxpLinkConfigurationPreferred_CXP3_X6	6 Connections operating at CXP-3 speed (3.125 Gbps).
CxpLinkConfigurationPreferred_CXP5_X6	6 Connections operating at CXP-5 speed (5.00 Gbps).
CxpLinkConfigurationPreferred_CXP6_X6	6 Connections operating at CXP-6 speed (6.25 Gbps).
NUM_CXPLINKCONFIGURATIONPREFERRED	

# 11.2.2.55 spinCxpLinkConfigurationStatusEnums

enum spinCxpLinkConfigurationStatusEnums

 $<\mbox{\footnote{This}}$  feature indicates the current and active Link configuration used by the Device.

CxpLinkConfigurationStatus_None	The Link configuration of the Device is unknown. Either the configuration operation has failed or there is nothing connected.
CxpLinkConfigurationStatus_Pending	The Device is in the process of configuring the Link. The Link cannot be used yet.
CxpLinkConfigurationStatus_CXP1_X1	1 Connection operating at CXP-1 speed (1.25 Gbps).
CxpLinkConfigurationStatus_CXP2_X1	1 Connection operating at CXP-2 speed (2.50 Gbps).
CxpLinkConfigurationStatus_CXP3_X1	1 Connection operating at CXP-3 speed (3.125 Gbps).
CxpLinkConfigurationStatus_CXP5_X1	1 Connection operating at CXP-5 speed (5.00 Gbps).
CxpLinkConfigurationStatus_CXP6_X1	1 Connection operating at CXP-6 speed (6.25 Gbps).
CxpLinkConfigurationStatus_CXP1_X2	2 Connections operating at CXP-1 speed (1.25 Gbps).
CxpLinkConfigurationStatus_CXP2_X2	2 Connections operating at CXP-2 speed (2.50 Gbps).
CxpLinkConfigurationStatus_CXP3_X2	2 Connections operating at CXP-3 speed (3.125 Gbps).
CxpLinkConfigurationStatus_CXP5_X2	2 Connections operating at CXP-4 speed (5.00 Gbps).
CxpLinkConfigurationStatus_CXP6_X2	3 Connections operating at CXP-5 speed (6.25 Gbps).
CxpLinkConfigurationStatus_CXP1_X3	3 Connections operating at CXP-1 speed (1.25 Gbps).
CxpLinkConfigurationStatus_CXP2_X3	3 Connections operating at CXP-2 speed (2.50 Gbps).
CxpLinkConfigurationStatus_CXP3_X3	3 Connections operating at CXP-3 speed (3.125 Gbps).
CxpLinkConfigurationStatus_CXP5_X3	3 Connections operating at CXP-5 speed (5.00 Gbps).
CxpLinkConfigurationStatus_CXP6_X3	3 Connections operating at CXP-6 speed (6.25 Gbps).
CxpLinkConfigurationStatus_CXP1_X4	4 Connections operating at CXP-1 speed (1.25 Gbps).
CxpLinkConfigurationStatus_CXP2_X4	4 Connections operating at CXP-2 speed (2.50 Gbps).
CxpLinkConfigurationStatus_CXP3_X4	4 Connections operating at CXP-3 speed (3.125 Gbps).
CxpLinkConfigurationStatus_CXP5_X4	4 Connections operating at CXP-5 speed (5.00 Gbps).
CxpLinkConfigurationStatus_CXP6_X4	4 Connections operating at CXP-6 speed (6.25 Gbps).
CxpLinkConfigurationStatus_CXP1_X5	5 Connections operating at CXP-1 speed (1.25 Gbps).
CxpLinkConfigurationStatus_CXP2_X5	5 Connections operating at CXP-2 speed (2.50 Gbps).
CxpLinkConfigurationStatus_CXP3_X5	5 Connections operating at CXP-3 speed (3.125 Gbps).
CxpLinkConfigurationStatus_CXP5_X5	5 Connections operating at CXP-5 speed (5.00 Gbps).

#### Enumerator

CxpLinkConfigurationStatus_CXP6_X5	5 Connections operating at CXP-6 speed (6.25 Gbps).
CxpLinkConfigurationStatus_CXP1_X6	6 Connections operating at CXP-1 speed (1.25 Gbps).
CxpLinkConfigurationStatus_CXP2_X6	6 Connections operating at CXP-2 speed (2.50 Gbps).
CxpLinkConfigurationStatus_CXP3_X6	6 Connections operating at CXP-3 speed (3.125 Gbps).
CxpLinkConfigurationStatus_CXP5_X6	6 Connections operating at CXP-5 speed (5.00 Gbps).
CxpLinkConfigurationStatus_CXP6_X6	6 Connections operating at CXP-6 speed (6.25 Gbps).
NUM_CXPLINKCONFIGURATIONSTATUS	

## 11.2.2.56 spinCxpPoCxpStatusEnums

enum spinCxpPoCxpStatusEnums

< Returns the Power over CoaXPress (PoCXP) status of the Device.

#### **Enumerator**

CxpPoCxpStatus_Auto	Normal automatic PoCXP operation.
CxpPoCxpStatus_Off	PoCXP is forced off.
CxpPoCxpStatus_Tripped	The Link has shut down because of an over-current trip.
NUM_CXPPOCXPSTATUS	

## 11.2.2.57 spinDecimationHorizontalModeEnums

 $\verb"enum" spinDecimationHorizontalModeEnums"$ 

< The mode used to reduce the horizontal resolution when DecimationHorizontal is used. The current implementation only supports a single decimation mode: Discard. Average should be achieved via Binning.

## Enumerator

DecimationHorizontalMode_Discard	The value of every Nth pixel is kept, others are discarded.
NUM_DECIMATIONHORIZONTALMODE	

#### 11.2.2.58 spinDecimationSelectorEnums

 $\verb"enum" spinDecimationSelectorEnums"$ 

< Selects which decimation layer is controlled by the DecimationHorizontal and DecimationVertical features.

#### Enumerator

DecimationSelector_All	The total amount of decimation to be performed on the captured image data.
D : :: 0 ! ! 0	
DecimationSelector_Sensor	The portion of decimation to be performed on the sensor directly. Currently this is the only decimation layer available and hence is identical to the "All" layer. All decimation modification should therefore be done via the "All" layer only.
NUM_DECIMATIONSELECTOR	

### 11.2.2.59 spinDecimationVerticalModeEnums

enum spinDecimationVerticalModeEnums

< The mode used to reduce the vertical resolution when DecimationVertical is used. The current implementation only supports a single decimation mode: Discard. Average should be achieved via Binning.

#### Enumerator

DecimationVerticalMode_Discard	The value of every Nth pixel is kept, others are discarded.
NUM_DECIMATIONVERTICALMODE	

## 11.2.2.60 spinDefectCorrectionModeEnums

enum spinDefectCorrectionModeEnums

< Controls the method used for replacing defective pixels.

## Enumerator

DefectCorrectionMode_Average	Pixels are replaced with the average of their neighbours. This is the normal mode of operation.
DefectCorrectionMode_Highlight	Pixels are replaced with the maximum pixel value (i.e., 255 for 8-bit images). Can be used for debugging the table.
DefectCorrectionMode_Zero	Pixels are replaced by the value zero. Can be used for testing the table.
NUM_DEFECTCORRECTIONMODE	

## 11.2.2.61 spinDeinterlacingEnums

enum spinDeinterlacingEnums

< Controls how the device performs de-interlacing.

### Enumerator

Deinterlacing_Off	The device doesn't perform de-interlacing.
Deinterlacing_LineDuplication	The device performs de-interlacing by outputting each line of each field twice.
Deinterlacing_Weave	The device performs de-interlacing by interleaving the lines of all fields.
NUM_DEINTERLACING	

## 11.2.2.62 spinDeviceCharacterSetEnums

enum spinDeviceCharacterSetEnums

< Character set used by the strings of the device's bootstrap registers.

#### Enumerator

DeviceCharacterSet_UTF8	
DeviceCharacterSet_ASCII	
NUM_DEVICECHARACTERSET	

# 11.2.2.63 spinDeviceClockSelectorEnums

enum spinDeviceClockSelectorEnums

< Selects the clock frequency to access from the device.

## Enumerator

DeviceClockSelector_Sensor	Clock frequency of the image sensor of the camera.
DeviceClockSelector_SensorDigitization	Clock frequency of the camera A/D conversion stage.
DeviceClockSelector_CameraLink	Frequency of the Camera Link clock.
NUM_DEVICECLOCKSELECTOR	

### 11.2.2.64 spinDeviceConnectionStatusEnums

enum spinDeviceConnectionStatusEnums

< Indicates the status of the specified Connection.

DeviceConnectionStatus_Active	Connection is in use.	
DeviceConnectionStatus_Inactive	Connection is not in use.	
NUM_DEVICECONNECTIONSTATUS		

#### 11.2.2.65 spinDeviceIndicatorModeEnums

enum spinDeviceIndicatorModeEnums

< Controls the LED behaviour: Inactive (off), Active (current status), or Error Status (off unless an error occurs).

#### Enumerator

DeviceIndicatorMode_Inactive	
DeviceIndicatorMode_Active	
DeviceIndicatorMode_ErrorStatus	
NUM_DEVICEINDICATORMODE	

### 11.2.2.66 spinDeviceLinkHeartbeatModeEnums

enum spinDeviceLinkHeartbeatModeEnums

< Activate or deactivate the Link's heartbeat.

### Enumerator

DeviceLinkHeartbeatMode_On	Enables the Link heartbeat.
DeviceLinkHeartbeatMode_Off	Disables the Link heartbeat.
NUM_DEVICELINKHEARTBEATMODE	

## ${\bf 11.2.2.67} \quad spinDeviceLinkThroughputLimitModeEnums$

enum spinDeviceLinkThroughputLimitModeEnums

< Controls if the DeviceLinkThroughputLimit is active. When disabled, lower level TL specific features are expected to control the throughput. When enabled, DeviceLinkThroughputLimit controls the overall throughput.

DeviceLinkThroughputLimitMode_On	Enables the DeviceLinkThroughputLimit feature.
DeviceLinkThroughputLimitMode_Off	Disables the DeviceLinkThroughputLimit feature.
NUM_DEVICELINKTHROUGHPUTLIMITMODE	

### 11.2.2.68 spinDevicePowerSupplySelectorEnums

 $\verb"enum" spinDevicePowerSupplySelectorEnums"$ 

< Selects the power supply source to control or read.

#### **Enumerator**

DevicePowerSupplySelector_External	
NUM_DEVICEPOWERSUPPLYSELECTOR	

### 11.2.2.69 spinDeviceRegistersEndiannessEnums

enum spinDeviceRegistersEndiannessEnums

< Endianness of the registers of the device.

#### Enumerator

DeviceRegistersEndianness_Little	
DeviceRegistersEndianness_Big	
NUM_DEVICEREGISTERSENDIANNESS	

# 11.2.2.70 spinDeviceScanTypeEnums

enum spinDeviceScanTypeEnums

< Scan type of the sensor of the device.

#### Enumerator

DeviceScanType_Areascan	
NUM_DEVICESCANTYPE	

### 11.2.2.71 spinDeviceSerialPortBaudRateEnums

 $\verb"enum" spinDeviceSerialPortBaudRateEnums"$ 

< This feature controls the baud rate used by the selected serial port.

#### Enumerator

DeviceSerialPortBaudRate_Baud9600	Serial port speed of 9600 baud.
DeviceSerialPortBaudRate_Baud19200	Serial port speed of 19200 baud.
DeviceSerialPortBaudRate_Baud38400	Serial port speed of 38400 baud.
DeviceSerialPortBaudRate_Baud57600	Serial port speed of 57600 baud.
DeviceSerialPortBaudRate_Baud115200	Serial port speed of 115200 baud.
DeviceSerialPortBaudRate_Baud230400	Serial port speed of 230400 baud.
DeviceSerialPortBaudRate_Baud460800	Serial port speed of 460800 baud.
DeviceSerialPortBaudRate_Baud921600	Serial port speed of 921600 baud.
NUM_DEVICESERIALPORTBAUDRATE	

## 11.2.2.72 spinDeviceSerialPortSelectorEnums

enum spinDeviceSerialPortSelectorEnums

< Selects which serial port of the device to control.

### Enumerator

DeviceSerialPortSelector_CameraLink	Serial port associated to the Camera link connection.
NUM_DEVICESERIALPORTSELECTOR	

## 11.2.2.73 spinDeviceStreamChannelEndiannessEnums

 $\verb"enum" spinDeviceStreamChannelEndiannessEnums"$ 

< Endianness of multi-byte pixel data for this stream.

### Enumerator

DeviceStreamChannelEndianness_Big	Stream channel data is big Endian.
DeviceStreamChannelEndianness_Little	Stream channel data is little Endian.
NUM_DEVICESTREAMCHANNELENDIANNESS	

## 11.2.2.74 spinDeviceStreamChannelTypeEnums

 $\verb"enum" spinDeviceStreamChannelTypeEnums"$ 

< Reports the type of the stream channel.

## Enumerator

DeviceStreamChannelType_Transmitter	Data stream transmitter channel.
DeviceStreamChannelType_Receiver	Data stream receiver channel.
NUM_DEVICESTREAMCHANNELTYPE	

# 11.2.2.75 spinDeviceTapGeometryEnums

 $\verb"enum" spinDeviceTapGeometryEnums"$ 

< This device tap geometry feature describes the geometrical properties characterizing the taps of a camera as presented at the output of the device.

DeviceTapGeometry_Geometry_1X_1Y	Geometry_1X_1Y
DeviceTapGeometry_Geometry_1X2_1Y	Geometry_1X2_1Y
DeviceTapGeometry_Geometry_1X2_1Y2	Geometry_1X2_1Y2
DeviceTapGeometry_Geometry_2X_1Y	Geometry_2X_1Y
DeviceTapGeometry_Geometry_2X_1Y2Geometry_2XE_1Y	Geometry_2X_1Y2Geometry_2XE_1Y
DeviceTapGeometry_Geometry_2XE_1Y2	Geometry_2XE_1Y2
DeviceTapGeometry_Geometry_2XM_1Y	Geometry_2XM_1Y
DeviceTapGeometry_Geometry_2XM_1Y2	Geometry_2XM_1Y2
DeviceTapGeometry_Geometry_1X_1Y2	Geometry_1X_1Y2
DeviceTapGeometry_Geometry_1X_2YE	Geometry_1X_2YE
DeviceTapGeometry_Geometry_1X3_1Y	Geometry_1X3_1Y
DeviceTapGeometry_Geometry_3X_1Y	Geometry_3X_1Y
DeviceTapGeometry_Geometry_1X	Geometry_1X
DeviceTapGeometry_Geometry_1X2	Geometry_1X2
DeviceTapGeometry_Geometry_2X	Geometry_2X
DeviceTapGeometry_Geometry_2XE	Geometry_2XE
DeviceTapGeometry_Geometry_2XM	Geometry_2XM
DeviceTapGeometry_Geometry_1X3	Geometry_1X3
DeviceTapGeometry_Geometry_3X	Geometry_3X
DeviceTapGeometry_Geometry_1X4_1Y	Geometry_1X4_1Y
DeviceTapGeometry_Geometry_4X_1Y	Geometry_4X_1Y
DeviceTapGeometry_Geometry_2X2_1Y	Geometry_2X2_1Y
DeviceTapGeometry_Geometry_2X2E_1YGeometry_2X2M_1Y	Geometry_2X2E_1YGeometry_2X2M_1Y
DeviceTapGeometry_Geometry_1X2_2YE	Geometry_1X2_2YE
DeviceTapGeometry_Geometry_2X_2YE	Geometry_2X_2YE
DeviceTapGeometry_Geometry_2XE_2YE	Geometry_2XE_2YE
DeviceTapGeometry_Geometry_2XM_2YE	Geometry_2XM_2YE
DeviceTapGeometry_Geometry_1X4	Geometry_1X4
DeviceTapGeometry_Geometry_4X	Geometry_4X
DeviceTapGeometry_Geometry_2X2	Geometry_2X2
DeviceTapGeometry_Geometry_2X2E	Geometry_2X2E
	·

## Enumerator

DeviceTapGeometry_Geometry_2X2M	Geometry_2X2M
DeviceTapGeometry_Geometry_1X8_1Y	Geometry_1X8_1Y
DeviceTapGeometry_Geometry_8X_1Y	Geometry_8X_1Y
DeviceTapGeometry_Geometry_4X2_1Y	Geometry_4X2_1Y
DeviceTapGeometry_Geometry_2X2E_2YE	Geometry_2X2E_2YE
DeviceTapGeometry_Geometry_1X8	Geometry_1X8
DeviceTapGeometry_Geometry_8X	Geometry_8X
DeviceTapGeometry_Geometry_4X2	Geometry_4X2
DeviceTapGeometry_Geometry_4X2E	Geometry_4X2E
DeviceTapGeometry_Geometry_4X2E_1Y	Geometry_4X2E_1Y
DeviceTapGeometry_Geometry_1X10_1Y	Geometry_1X10_1Y
DeviceTapGeometry_Geometry_10X_1Y	Geometry_10X_1Y
DeviceTapGeometry_Geometry_1X10	Geometry_1X10
DeviceTapGeometry_Geometry_10X	Geometry_10X
NUM_DEVICETAPGEOMETRY	

## 11.2.2.76 spinDeviceTemperatureSelectorEnums

 $\verb"enum" spinDeviceTemperatureSelectorEnums"$ 

< Selects the location within the device, where the temperature will be measured.

## Enumerator

DeviceTemperatureSelector_Sensor	
NUM_DEVICETEMPERATURESELECTOR	

# 11.2.2.77 spinDeviceTLTypeEnums

enum spinDeviceTLTypeEnums

< Transport Layer type of the device.

DeviceTLType_GigEVision	
DeviceTLType_CameraLink	
DeviceTLType_CameraLinkHS	
DeviceTLType_CoaXPress	
DeviceTLType_USB3Vision	
DeviceTLType_Custom	
NUM_DEVICETLTYPE	

## 11.2.2.78 spinDeviceTypeEnums

enum spinDeviceTypeEnums

< Returns the device type.

### Enumerator

DeviceType_Transmitter	Data stream transmitter device.
DeviceType_Receiver	Data stream receiver device.
DeviceType_Transceiver	Data stream receiver and transmitter device.
DeviceType_Peripheral	Controllable device (with no data stream handling).
NUM_DEVICETYPE	

## 11.2.2.79 spinEncoderModeEnums

enum spinEncoderModeEnums

< Selects if the count of encoder uses FourPhase mode with jitter filtering or the HighResolution mode without jitter filtering.

### Enumerator

EncoderMode_FourPhase	The counter increments or decrements 1 for every full quadrature cycle with jitter filtering.
EncoderMode_HighResolution	The counter increments or decrements every quadrature phase for high resolution counting, but without jitter filtering.
NUM_ENCODERMODE	

# 11.2.2.80 spinEncoderOutputModeEnums

 $\verb"enum" spinEncoderOutputModeEnums"$ 

< Selects the conditions for the Encoder interface to generate a valid Encoder output signal.

EncoderOutputMode_Off	No output pulse are generated.
EncoderOutputMode_PositionUp	Output pulses are generated at all new positions in the positive direction. If the encoder reverses no output pulse are generated until it has again passed the position where the reversal started.

## Enumerator

EncoderOutputMode_PositionDown	Output pulses are generated at all new positions in the negative direction. If the encoder reverses no output pulse are generated until it has again passed the position where the reversal started.
EncoderOutputMode_DirectionUp	Output pulses are generated at all position increments in the positive direction while ignoring negative direction motion.
EncoderOutputMode_DirectionDown	Output pulses are generated at all position increments in the negative direction while ignoring positive direction motion.
EncoderOutputMode_Motion	Output pulses are generated at all motion increments in both directions.
NUM_ENCODEROUTPUTMODE	

# 11.2.2.81 spinEncoderResetActivationEnums

 $\verb"enum" spinEncoderResetActivationEnums"$ 

< Selects the Activation mode of the Encoder Reset Source signal.

#### Enumerator

EncoderResetActivation_RisingEdge	Resets the Encoder on the Rising Edge of the signal.
EncoderResetActivation_FallingEdge	Resets the Encoder on the Falling Edge of the signal.
EncoderResetActivation_AnyEdge	Resets the Encoder on the Falling or rising Edge of the selected signal.
EncoderResetActivation_LevelHigh	Resets the Encoder as long as the selected signal level is High.
EncoderResetActivation_LevelLow	Resets the Encoder as long as the selected signal level is Low.
NUM_ENCODERRESETACTIVATION	

# 11.2.2.82 spinEncoderResetSourceEnums

enum spinEncoderResetSourceEnums

< Selects the signals that will be the source to reset the Encoder.

EncoderResetSource_Off	Disable the Encoder Reset trigger.
EncoderResetSource_AcquisitionTrigger	Resets with the reception of the Acquisition Trigger.
EncoderResetSource_AcquisitionStart	Resets with the reception of the Acquisition Start.
EncoderResetSource_AcquisitionEnd	Resets with the reception of the Acquisition End.
EncoderResetSource_FrameTrigger	Resets with the reception of the Frame Start Trigger.
EncoderResetSource_FrameStart	Resets with the reception of the Frame Start.
EncoderResetSource_FrameEnd	Resets with the reception of the Frame End.
EncoderResetSource_ExposureStart	Resets with the reception of the Exposure Start.

# Enumerator

EncoderResetSource_ExposureEnd Re	esets with the reception of the Exposure End.
	esets by the chosen I/O Line.
_	esets by the chosen I/O Line.
	esets by the chosen I/O Line.
EncoderResetSource_Counter0Start Re	esets with the reception of the Counter Start.
EncoderResetSource_Counter1Start Re	esets with the reception of the Counter Start.
EncoderResetSource_Counter2Start Re	esets with the reception of the Counter Start.
EncoderResetSource_Counter0End Re	esets with the reception of the Counter End.
EncoderResetSource_Counter1End Re	esets with the reception of the Counter End.
EncoderResetSource_Counter2End Re	esets with the reception of the Counter End.
EncoderResetSource_Timer0Start Re	esets with the reception of the Timer Start.
EncoderResetSource_Timer1Start Re	esets with the reception of the Timer Start.
EncoderResetSource_Timer2Start Re	esets with the reception of the Timer Start.
EncoderResetSource_Timer0End Re	esets with the reception of the Timer End.
EncoderResetSource_Timer1End Re	esets with the reception of the Timer End.
EncoderResetSource_Timer2End Re	esets with the reception of the Timer End.
EncoderResetSource_UserOutput0 Re	esets by the chosen User Output bit.
EncoderResetSource_UserOutput1 Re	esets by the chosen User Output bit.
EncoderResetSource_UserOutput2 Re	esets by the chosen User Output bit.
EncoderResetSource_SoftwareSignal0 Re	esets on the reception of the Software Signal.
EncoderResetSource_SoftwareSignal1 Re	esets on the reception of the Software Signal.
EncoderResetSource_SoftwareSignal2 Re	esets on the reception of the Software Signal.
	esets on assertions of the chosen action signal (Broadcasted gnal on the transport layer).
	esets on assertions of the chosen action signal (Broadcasted gnal on the transport layer).
	esets on assertions of the chosen action signal (Broadcasted gnal on the transport layer).
	esets on the reception of the chosen Link Trigger (received from e transport layer).
EncoderResetSource_LinkTrigger1 Re	esets on the reception of the chosen Link Trigger (received from e transport layer).
EncoderResetSource_LinkTrigger2 Re	esets on the reception of the chosen Link Trigger (received from e transport layer).

# 11.2.2.83 spinEncoderSelectorEnums

enum spinEncoderSelectorEnums

< Selects which Encoder to configure.

EncoderSelector_Encoder0	Selects Encoder 0.
EncoderSelector_Encoder1	Selects Encoder 1.
EncoderSelector_Encoder2	Selects Encoder 2.
NUM_ENCODERSELECTOR	

## 11.2.2.84 spinEncoderSourceAEnums

enum spinEncoderSourceAEnums

< Selects the signal which will be the source of the A input of the Encoder.

## Enumerator

EncoderSourceA_Off	Counter is stopped.
EncoderSourceA_Line0	Encoder Forward input is taken from the chosen I/O Line.
EncoderSourceA_Line1	Encoder Forward input is taken from the chosen I/O Line.
EncoderSourceA_Line2	Encoder Forward input is taken from the chosen I/O Line.
NUM_ENCODERSOURCEA	

## 11.2.2.85 spinEncoderSourceBEnums

enum spinEncoderSourceBEnums

< Selects the signal which will be the source of the B input of the Encoder.

### Enumerator

EncoderSourceB_Off	Counter is stopped.
EncoderSourceB_Line0	Encoder Reverse input is taken from the chosen I/O Line
EncoderSourceB_Line1	Encoder Reverse input is taken from the chosen I/O Line
EncoderSourceB_Line2	Encoder Reverse input is taken from the chosen I/O Line
NUM_ENCODERSOURCEB	

# 11.2.2.86 spinEncoderStatusEnums

 $\verb"enum spinEncoderStatusEnums"$ 

< Returns the motion status of the encoder.

EncoderStatus_EncoderUp	The encoder counter last incremented.
EncoderStatus_EncoderDown	The encoder counter last decremented.
EncoderStatus_EncoderIdle	The encoder is not active.
EncoderStatus_EncoderStatic	No motion within the EncoderTimeout time.
NUM_ENCODERSTATUS	

## 11.2.2.87 spinEventNotificationEnums

enum spinEventNotificationEnums

< Enables/Disables the selected event.

## Enumerator

EventNotification_On	
EventNotification_Off	
NUM_EVENTNOTIFICATION	

## 11.2.2.88 spinEventSelectorEnums

enum spinEventSelectorEnums

< Selects which Event to enable or disable.

#### Enumerator

EventSelector_Error	
EventSelector_ExposureEnd	
EventSelector_SerialPortReceive	
NUM_EVENTSELECTOR	

# 11.2.2.89 spinExposureActiveModeEnums

enum spinExposureActiveModeEnums

< Control sensor active exposure mode.

ExposureActiveMode_Line1	
ExposureActiveMode_AnyPixels	
ExposureActiveMode_AllPixels	
NUM_EXPOSUREACTIVEMODE	

# 11.2.2.90 spinExposureAutoEnums

 $\verb"enum spinExposureAutoEnums"$ 

< Sets the automatic exposure mode

#### Enumerator

ExposureAuto_Off	Exposure time is manually controlled using ExposureTime
ExposureAuto_Once	Exposure time is adapted once by the device. Once it has converged, it returns
	to the Off state.
ExposureAuto_Continuous	Exposure time is constantly adapted by the device to maximize the dynamic
	range.
NUM_EXPOSUREAUTO	

# 11.2.2.91 spinExposureModeEnums

enum spinExposureModeEnums

< Sets the operation mode of the Exposure.

# Enumerator

ExposureMode_Timed	Timed exposure. The exposure time is set using the ExposureTime or ExposureAuto features and the exposure starts with the FrameStart or LineStart.
ExposureMode_TriggerWidth	Uses the width of the current Frame trigger signal pulse to control the exposure time.
NUM_EXPOSUREMODE	

# 11.2.2.92 spinExposureTimeModeEnums

enum spinExposureTimeModeEnums

< Sets the configuration mode of the ExposureTime feature.

ExposureTimeMode_Common	The exposure time is common to all the color components. The common ExposureTime value to use can be set selecting it with ExposureTimeSelector[Common].
ExposureTimeMode_Individual	The exposure time is individual for each color component. Each individual ExposureTime values to use can be set by selecting them with ExposureTimeSelector.
NUM_EXPOSURETIMEMODE	

#### 11.2.2.93 spinExposureTimeSelectorEnums

enum spinExposureTimeSelectorEnums

< Selects which exposure time is controlled by the ExposureTime feature. This allows for independent control over the exposure components.

#### Enumerator

ExposureTimeSelector_Common	Selects the common ExposureTime.
ExposureTimeSelector_Red	Selects the red common ExposureTime.
ExposureTimeSelector_Green	Selects the green ExposureTime.
ExposureTimeSelector_Blue	Selects the blue ExposureTime.
ExposureTimeSelector_Cyan	Selects the cyan common ExposureTime.
ExposureTimeSelector_Magenta	Selects the magenta ExposureTime.
ExposureTimeSelector_Yellow	Selects the yellow ExposureTime.
ExposureTimeSelector_Infrared	Selects the infrared ExposureTime.
ExposureTimeSelector_Ultraviolet	Selects the ultraviolet ExposureTime.
ExposureTimeSelector_Stage1	Selects the first stage ExposureTime.
ExposureTimeSelector_Stage2	Selects the second stage ExposureTime.
NUM_EXPOSURETIMESELECTOR	

# 11.2.2.94 spinFileOpenModeEnums

enum spinFileOpenModeEnums

< The mode of the file when it is opened. The file can be opened for reading, writting or both. This must be set before opening the file.

#### Enumerator

FileOpenMode_Read	
FileOpenMode_Write	
FileOpenMode_ReadWrite	
NUM_FILEOPENMODE	

## 11.2.2.95 spinFileOperationSelectorEnums

 $\verb"enum" spinFileOperationSelectorEnums"$ 

< Sets operation to execute on the selected file when the execute command is given.

## Enumerator

FileOperationSelector_Open	
FileOperationSelector_Close	
FileOperationSelector_Read	
FileOperationSelector_Write	
FileOperationSelector_Delete	
NUM_FILEOPERATIONSELECTOR	

# 11.2.2.96 spinFileOperationStatusEnums

 $\verb"enum spinFileOperationStatusEnums"$ 

< Represents the file operation execution status.

## Enumerator

FileOperationStatus_Success	File Operation was sucessful.
FileOperationStatus_Failure	File Operation failed.
FileOperationStatus_Overflow	An overflow occurred while executing the File Operation.
NUM_FILEOPERATIONSTATUS	

# 11.2.2.97 spinFileSelectorEnums

enum spinFileSelectorEnums

< Selects which file is being operated on. This must be set before performing any file operations.

# Enumerator

FileSelector_UserSetDefault	
FileSelector_UserSet0	
FileSelector_UserSet1	
FileSelector_UserFile1	
FileSelector_SerialPort0	
NUM_FILESELECTOR	

# 11.2.2.98 spinGainAutoBalanceEnums

 $\verb"enum spinGainAutoBalanceEnums"$ 



#### Enumerator

GainAutoBalance_Off	Gain tap balancing is user controlled using Gain.
GainAutoBalance_Once	Gain tap balancing is automatically adjusted once by the device. Once it has converged, it automatically returns to the Off state.
GainAutoBalance_Continuous	Gain tap balancing is constantly adjusted by the device.
NUM_GAINAUTOBALANCE	

#### 11.2.2.99 spinGainAutoEnums

enum spinGainAutoEnums

< Sets the automatic gain mode. Set to Off for manual control. Set to Once for a single automatic adjustment then return to Off. Set to Continuous for constant adjustment. In automatic modes, the camera adjusts the gain to maximize the dynamic range.

#### Enumerator

GainAuto_Off	Gain is manually controlled
GainAuto_Once	Gain is adapted once by the device. Once it has converged, it returns to the Off state.
GainAuto_Continuous	Gain is constantly adapted by the device to maximize the dynamic range.
NUM_GAINAUTO	

#### 11.2.2.100 spinGainSelectorEnums

enum spinGainSelectorEnums

< Selects which gain to control. The All selection is a total amplification across all channels (or taps).

## Enumerator

GainSelector_All	
NUM_GAINSELECTOR	

## 11.2.2.101 spinGevCCPEnums

enum spinGevCCPEnums

< Controls the device access privilege of an application.

## Enumerator

GevCCP_OpenAccess	
GevCCP_ExclusiveAccess	
GevCCP_ControlAccess	
NUM_GEVCCP	

# 11.2.2.102 spinGevCurrentPhysicalLinkConfigurationEnums

 ${\tt enum} \ spin {\tt GevCurrentPhysicalLinkConfigurationEnums}$ 

< Indicates the current physical link configuration of the device.

#### Enumerator

GevCurrentPhysicalLinkConfiguration_SingleLink	Single Link
GevCurrentPhysicalLinkConfiguration_MultiLink	Multi Link
GevCurrentPhysicalLinkConfiguration_StaticLAG	Static LAG
GevCurrentPhysicalLinkConfiguration_DynamicLAG	Dynamic LAG
NUM_GEVCURRENTPHYSICALLINKCONFIGURATION	

# 11.2.2.103 spinGevGVCPExtendedStatusCodesSelectorEnums

enum spinGevGVCPExtendedStatusCodesSelectorEnums

< Selects the GigE Vision version to control extended status codes for.

#### Enumerator

GevGVCPExtendedStatusCodesSelector_Version1_1	Version 1 1
GevGVCPExtendedStatusCodesSelector_Version2_0	Version 2 0
NUM_GEVGVCPEXTENDEDSTATUSCODESSELECTOR	

# 11.2.2.104 spinGevGVSPExtendedIDModeEnums

 $\verb"enum spinGevGVSPExtendedIDModeEnums"$ 

< Enables the extended IDs mode.

#### Enumerator

GevGVSPExtendedIDMode_Off	Off
GevGVSPExtendedIDMode_On	On
NUM_GEVGVSPEXTENDEDIDMODE	

# 11.2.2.105 spinGevIEEE1588ClockAccuracyEnums

 $\verb"enum spinGevIEEE1588ClockAccuracyEnums"$ 

< Indicates the expected accuracy of the device clock when it is the grandmaster, or in the event it becomes the grandmaster.

## Enumerator

GevIEEE1588ClockAccuracy_Unknown	Unknown Accuracy
NUM_GEVIEEE1588CLOCKACCURACY	

## 11.2.2.106 spinGevIEEE1588ModeEnums

enum spinGevIEEE1588ModeEnums

< Provides the mode of the IEEE 1588 clock.

### Enumerator

GevIEEE1588Mode_Auto	Automatic
GevIEEE1588Mode_SlaveOnly	Slave Only
NUM_GEVIEEE1588MODE	

# 11.2.2.107 spinGevIEEE1588StatusEnums

 $\verb"enum spinGevIEEE1588StatusEnums"$ 

< Provides the status of the IEEE 1588 clock.

GevIEEE1588Status_Initializing	Initializing
GevIEEE1588Status_Faulty	Faulty
GevIEEE1588Status_Disabled	Disabled

# Enumerator

GevIEEE1588Status_Listening	Listening
GevIEEE1588Status_PreMaster	Pre Master
GevIEEE1588Status_Master	Master
GevIEEE1588Status_Passive	Passive
GevIEEE1588Status_Uncalibrated	Uncalibrated
GevIEEE1588Status_Slave	Slave
NUM_GEVIEEE1588STATUS	

# 11.2.2.108 spinGevIPConfigurationStatusEnums

 $\verb"enum" spinGevIPConfigurationStatusEnums"$ 

< Reports the current IP configuration status.

#### Enumerator

GevIPConfigurationStatus_None	None
GevIPConfigurationStatus_PersistentIP	Persistent IP
GevIPConfigurationStatus_DHCP	DHCP
GevIPConfigurationStatus_LLA	LLA
GevIPConfigurationStatus_ForceIP	Force IP
NUM_GEVIPCONFIGURATIONSTATUS	

# 11.2.2.109 spinGevPhysicalLinkConfigurationEnums

 $\verb"enum" spinGevPhysicalLinkConfigurationEnums"$ 

< Controls the principal physical link configuration to use on next restart/power-up of the device.

GevPhysicalLinkConfiguration_SingleLink	Single Link
GevPhysicalLinkConfiguration_MultiLink	Multi Link
GevPhysicalLinkConfiguration_StaticLAG	Static LAG
GevPhysicalLinkConfiguration_DynamicLAG	Dynamic LAG
NUM_GEVPHYSICALLINKCONFIGURATION	

# 11.2.2.110 spinGevSupportedOptionSelectorEnums

 $\verb"enum" spinGevSupportedOptionSelectorEnums"$ 

< Selects the GEV option to interrogate for existing support.

#### Enumerator

GevSupportedOptionSelector_UserDefinedName	
GevSupportedOptionSelector_SerialNumber	
GevSupportedOptionSelector_HeartbeatDisable	
GevSupportedOptionSelector_LinkSpeed	
GevSupportedOptionSelector_CCPApplicationSocket	
GevSupportedOptionSelector_ManifestTable	
GevSupportedOptionSelector_TestData	
GevSupportedOptionSelector_DiscoveryAckDelay	
GevSupportedOptionSelector_DiscoveryAckDelayWritable	
GevSupportedOptionSelector_ExtendedStatusCodes	
GevSupportedOptionSelector_Action	
GevSupportedOptionSelector_PendingAck	
GevSupportedOptionSelector_EventData	
GevSupportedOptionSelector_Event	
GevSupportedOptionSelector_PacketResend	
GevSupportedOptionSelector_WriteMem	
GevSupportedOptionSelector_CommandsConcatenation	
GevSupportedOptionSelector_IPConfigurationLLA	
GevSupportedOptionSelector_IPConfigurationDHCP	
GevSupportedOptionSelector_IPConfigurationPersistentIP	
GevSupportedOptionSelector_StreamChannelSourceSocket	
GevSupportedOptionSelector_MessageChannelSourceSocket	
NUM_GEVSUPPORTEDOPTIONSELECTOR	

## 11.2.2.111 spinImageComponentSelectorEnums

 $\verb"enum" spinImageComponentSelectorEnums"$ 

< Selects a component to activate data streaming from.

ImageComponentSelector_Intensity	The acquisition of intensity of the reflected light is controlled.
ImageComponentSelector_Color	The acquisition of color of the reflected light is controlled
ImageComponentSelector_Infrared	The acquisition of non-visible infrared light is controlled.
ImageComponentSelector_Ultraviolet	The acquisition of non-visible ultraviolet light is controlled.
ImageComponentSelector_Range	The acquisition of range (distance) data is controlled. The data produced may be only range (2.5D) or a point cloud 3D coordinates depending on the Scan3dControl.

## Enumerator

ImageComponentSelector_Disparity	The acquisition of stereo camera disparity data is controlled.  Disparity is a more specific range format approximately inversely proportional to distance. Disparity is typically given in pixel units.
ImageComponentSelector_Confidence	The acquisition of confidence map of the acquired image is controlled. Confidence data may be binary (0 - invalid) or an integer where 0 is invalid and increasing value is increased confidence in the data in the corresponding pixel. If floating point representation is used the confidence image is normalized to the range [0,1], for integer representation the maximum possible integer represents maximum confidence.
ImageComponentSelector_Scatter	The acquisition of data measuring how much light is scattered around the reflected light. In processing this is used as an additional intensity image, often together with the standard intensity.
NUM_IMAGECOMPONENTSELECTOR	

# 11.2.2.112 spinImageCompressionJPEGFormatOptionEnums

enum spinImageCompressionJPEGFormatOptionEnums

< When JPEG is selected as the compression format, a device might optionally offer better control over JPEG-specific options through this feature.

## Enumerator

ImageCompressionJPEGFormatOption_Lossless	Selects lossless JPEG compression based on a predictive coding model.
ImageCompressionJPEGFormatOption_Baseline← Standard	Indicates this is a baseline sequential (single-scan) DCT-based JPEG.
ImageCompressionJPEGFormatOption_Baseline ← Optimized	Provides optimized color and slightly better compression than baseline standard by using custom Huffman tables optimized after statistical analysis of the image content.
ImageCompressionJPEGFormatOption_Progressive	Indicates this is a progressive (multi-scan) DCT-based JPEG.
NUM_IMAGECOMPRESSIONJPEGFORMATOPT↔ ION	

# 11.2.2.113 spinImageCompressionModeEnums

enum spinImageCompressionModeEnums

\_

## Enumerator

ImageCompressionMode_Off	
ImageCompressionMode_Lossless	
NUM_IMAGECOMPRESSIONMODE	

# 11.2.2.114 spinImageCompressionRateOptionEnums

 $\verb"enum" spinImageCompressionRateOptionEnums"$ 

< Two rate controlling options are offered: fixed bit rate or fixed quality. The exact implementation to achieve one or the other is vendor-specific.

#### Enumerator

ImageCompressionRateOption_FixBitrate	Output stream follows a constant bit rate. Allows easy bandwidth management on the link.
ImageCompressionRateOption_FixQuality	Output stream has a constant image quality. Can be used when image processing algorithms are sensitive to image degradation caused by excessive data compression.
NUM_IMAGECOMPRESSIONRATEOPTION	

## 11.2.2.115 spinLineFormatEnums

enum spinLineFormatEnums

< Displays the current electrical format of the selected physical input or output Line.

#### Enumerator

LineFormat_NoConnect	
LineFormat_TriState	
LineFormat_TTL	
LineFormat_LVDS	
LineFormat_RS422	
LineFormat_OptoCoupled	
LineFormat_OpenDrain	
NUM_LINEFORMAT	

# 11.2.2.116 spinLineInputFilterSelectorEnums

 $\verb"enum" spinLineInputFilterSelectorEnums"$ 

< Selects the kind of input filter to configure: Deglitch or Debounce.

#### Enumerator

LineInputFilterSelector_Deglitch	
LineInputFilterSelector_Debounce	
NUM_LINEINPUTFILTERSELECTOR	

## 11.2.2.117 spinLineModeEnums

enum spinLineModeEnums

< Controls if the physical Line is used to Input or Output a signal.

#### Enumerator

LineMode_Input	
LineMode_Output	
NUM_LINEMODE	

# 11.2.2.118 spinLineSelectorEnums

enum spinLineSelectorEnums

< Selects the physical line (or pin) of the external device connector to configure

# Enumerator

LineSelector_Line0	
LineSelector_Line1	
LineSelector_Line2	
LineSelector_Line3	
NUM_LINESELECTOR	

# 11.2.2.119 spinLineSourceEnums

enum spinLineSourceEnums

< Selects which internal acquisition or I/O source signal to output on the selected line. LineMode must be Output.

# Enumerator

LineSource_Off	
LineSource_Line0	
LineSource_Line1	
LineSource_Line2	
LineSource_Line3	
LineSource_UserOutput0	
LineSource_UserOutput1	
LineSource_UserOutput2	
LineSource_UserOutput3	
LineSource_Counter0Active	
LineSource_Counter1Active	
LineSource_LogicBlock0	
LineSource_LogicBlock1	
LineSource_ExposureActive	
LineSource_FrameTriggerWait	
LineSource_SerialPort0	
LineSource_PPSSignal	
LineSource_AllPixel	
LineSource_AnyPixel	
NUM_LINESOURCE	

## 11.2.2.120 spinLogicBlockLUTInputActivationEnums

 $\verb"enum" spinLogicBlockLUTInputActivationEnums"$ 

< Selects the activation mode of the Logic Input Source signal.

## Enumerator

LogicBlockLUTInputActivation_LevelLow	
LogicBlockLUTInputActivation_LevelHigh	
LogicBlockLUTInputActivation_FallingEdge	
LogicBlockLUTInputActivation_RisingEdge	
LogicBlockLUTInputActivation_AnyEdge	
NUM LOGICBLOCKLUTINPUTACTIVATION	

# 11.2.2.121 spinLogicBlockLUTInputSelectorEnums

 $\verb"enum" spinLogicBlockLUTInputSelectorEnums"$ 

< Controls which LogicBlockLUT Input Source & Activation to access.

# Enumerator

LogicBlockLUTInputSelector_Input0	
LogicBlockLUTInputSelector_Input1	
LogicBlockLUTInputSelector_Input2	
LogicBlockLUTInputSelector_Input3	
NUM_LOGICBLOCKLUTINPUTSELECTOR	

# 11.2.2.122 spinLogicBlockLUTInputSourceEnums

enum spinLogicBlockLUTInputSourceEnums

< Selects the source for the input into the Logic LUT.

## Enumerator

LogicBlockLUTInputSource_Zero	Zero
LogicBlockLUTInputSource_Line0	Line0
LogicBlockLUTInputSource_Line1	Line1
LogicBlockLUTInputSource_Line2	Line2
LogicBlockLUTInputSource_Line3	Line3
LogicBlockLUTInputSource_UserOutput0	UserOutput0
LogicBlockLUTInputSource_UserOutput1	UserOutput1
LogicBlockLUTInputSource_UserOutput2	UserOutput2
LogicBlockLUTInputSource_UserOutput3	UserOutput3
LogicBlockLUTInputSource_Counter0Start	Counter0Start
LogicBlockLUTInputSource_Counter1Start	Counter1Start
LogicBlockLUTInputSource_Counter0End	Counter0End
LogicBlockLUTInputSource_Counter1End	Counter1End
LogicBlockLUTInputSource_LogicBlock0	LogicBlock0
LogicBlockLUTInputSource_LogicBlock1	LogicBlock1
LogicBlockLUTInputSource_ExposureStart	ExposureStart
LogicBlockLUTInputSource_ExposureEnd	ExposureEnd
LogicBlockLUTInputSource_FrameTriggerWait	FrameTriggerWait
LogicBlockLUTInputSource_AcquisitionActive	AcquisitionActive
NUM_LOGICBLOCKLUTINPUTSOURCE	

# 11.2.2.123 spinLogicBlockLUTSelectorEnums

 $\verb"enum spinLogicBlockLUTSelectorEnums"$ 

< Selects which LogicBlock LUT to configure

#### Enumerator

LogicBlockLUTSelector_Value	
LogicBlockLUTSelector_Enable	
NUM_LOGICBLOCKLUTSELECTOR	

11.2.2.124 spinLogicBlockSelectorEnums

 $\verb"enum spinLogicBlockSelectorEnums"$ 

< Selects which LogicBlock to configure

## Enumerator

LogicBlockSelector_LogicBlock0	
LogicBlockSelector_LogicBlock1	
NUM LOGICBLOCKSELECTOR	

## 11.2.2.125 spinLUTSelectorEnums

enum spinLUTSelectorEnums

The enum definitions for camera nodes.

< Selects which LUT to control.

# Enumerator

LUTSelector_LUT1	This LUT is for re-mapping pixels of all formats (mono, Bayer, red, green and blue).
NUM_LUTSELECTOR	

## 11.2.2.126 spinPixelColorFilterEnums

enum spinPixelColorFilterEnums

< Type of color filter that is applied to the image. Only applies to Bayer pixel formats. All others have no color filter.

PixelColorFilter_None	No color filter.
PixelColorFilter_BayerRG	Bayer Red Green filter.

# Enumerator

PixelColorFilter_BayerGB	Bayer Green Blue filter.
PixelColorFilter_BayerGR	Bayer Green Red filter.
PixelColorFilter_BayerBG	Bayer Blue Green filter.
NUM_PIXELCOLORFILTER	

# 11.2.2.127 spinPixelFormatEnums

enum spinPixelFormatEnums

< Format of the pixel provided by the camera.

Di IE : II :	
PixelFormat_Mono8	
PixelFormat_Mono16	
PixelFormat_RGB8Packed	
PixelFormat_BayerGR8	
PixelFormat_BayerRG8	
PixelFormat_BayerGB8	
PixelFormat_BayerBG8	
PixelFormat_BayerGR16	
PixelFormat_BayerRG16	
PixelFormat_BayerGB16	
PixelFormat_BayerBG16	
PixelFormat_Mono12Packed	
PixelFormat_BayerGR12Packed	
PixelFormat_BayerRG12Packed	
PixelFormat_BayerGB12Packed	
PixelFormat_BayerBG12Packed	
PixelFormat_YUV411Packed	
PixelFormat_YUV422Packed	
PixelFormat_YUV444Packed	
PixelFormat_Mono12p	
PixelFormat_BayerGR12p	
PixelFormat_BayerRG12p	
PixelFormat_BayerGB12p	
PixelFormat_BayerBG12p	
PixelFormat_YCbCr8	
PixelFormat_YCbCr422_8	
PixelFormat_YCbCr411_8	
PixelFormat_BGR8	
PixelFormat_BGRa8	
PixelFormat_Mono10Packed	
PixelFormat_BayerGR10Packed	
PixelFormat_BayerRG10Packed	

PixelFormat_BayerGB10Packed	
PixelFormat_BayerBG10Packed	
PixelFormat_Mono10p	
PixelFormat_BayerGR10p	
PixelFormat_BayerRG10p	
PixelFormat_BayerGB10p	
PixelFormat BayerBG10p	
	Marracharana di hita a alam
PixelFormat_Mono1p	Monochrome 1-bit packed
PixelFormat_Mono2p	Monochrome 2-bit packed
PixelFormat_Mono4p	Monochrome 4-bit packed
PixelFormat_Mono8s	Monochrome 8-bit signed
PixelFormat_Mono10	Monochrome 10-bit unpacked
PixelFormat_Mono12	Monochrome 12-bit unpacked
PixelFormat_Mono14	Monochrome 14-bit unpacked
PixelFormat_Mono16s	Monochrome 16-bit signed
PixelFormat_Mono32f	Monochrome 32-bit float
PixelFormat_BayerBG10	Bayer Blue-Green 10-bit unpacked
PixelFormat_BayerBG12	Bayer Blue-Green 12-bit unpacked
PixelFormat_BayerGB10	Bayer Green-Blue 10-bit unpacked
PixelFormat_BayerGB12	Bayer Green-Blue 12-bit unpacked
PixelFormat_BayerGR10	Bayer Green-Red 10-bit unpacked
PixelFormat_BayerGR12	Bayer Green-Red 12-bit unpacked
PixelFormat_BayerRG10	Bayer Red-Green 10-bit unpacked
	<u> </u>
PixelFormat_BayerRG12	Bayer Red-Green 12-bit unpacked
PixelFormat_RGBa8	Red-Green-Blue-alpha 8-bit
PixelFormat_RGBa10	Red-Green-Blue-alpha 10-bit unpacked
PixelFormat_RGBa10p	Red-Green-Blue-alpha 10-bit packed
PixelFormat_RGBa12	Red-Green-Blue-alpha 12-bit unpacked
PixelFormat_RGBa12p	Red-Green-Blue-alpha 12-bit packed
PixelFormat_RGBa14	Red-Green-Blue-alpha 14-bit unpacked
PixelFormat_RGBa16	Red-Green-Blue-alpha 16-bit
PixelFormat_RGB8	Red-Green-Blue 8-bit
PixelFormat_RGB8_Planar	Red-Green-Blue 8-bit planar
PixelFormat_RGB10	Red-Green-Blue 10-bit unpacked
PixelFormat_RGB10_Planar	Red-Green-Blue 10-bit unpacked planar
PixelFormat_RGB10p	Red-Green-Blue 10-bit packed
PixelFormat_RGB10p32	Red-Green-Blue 10-bit packed into 32-bit
PixelFormat_RGB12	Red-Green-Blue 12-bit unpacked
PixelFormat_RGB12_Planar	Red-Green-Blue 12-bit unpacked planar
PixelFormat_RGB12p	Red-Green-Blue 12-bit packed
PixelFormat RGB14	Red-Green-Blue 14-bit unpacked
PixelFormat RGB16	Red-Green-Blue 16-bit
PixelFormat_RGB16s	Red-Green-Blue 16-bit signed
PixelFormat_RGB32f	Red-Green-Blue 32-bit float
PixelFormat_RGB16_Planar	Red-Green-Blue 16-bit planar
	·
PixelFormat_RGB565p	Red-Green-Blue 5/6/5-bit packed
PixelFormat_BGRa10	Blue-Green-Red-alpha 10-bit unpacked

PixelFormat BGRa10p	Blue-Green-Red-alpha 10-bit packed
PixelFormat BGRa12	Blue-Green-Red-alpha 12-bit unpacked
PixelFormat_BGRa12p	Blue-Green-Red-alpha 12-bit packed
PixelFormat BGRa14	Blue-Green-Red-alpha 14-bit unpacked
PixelFormat BGRa16	Blue-Green-Red-alpha 16-bit
PixelFormat RGBa32f	Red-Green-Blue-alpha 32-bit float
PixelFormat BGR10	Blue-Green-Red 10-bit unpacked
PixelFormat_BGR10p	Blue-Green-Red 10-bit packed
PixelFormat BGR12	Blue-Green-Red 12-bit unpacked
PixelFormat_BGR12p	Blue-Green-Red 12-bit packed
PixelFormat BGR14	Blue-Green-Red 14-bit unpacked
PixelFormat BGR16	Blue-Green-Red 16-bit
PixelFormat_BGR565p	Blue-Green-Red 5/6/5-bit packed
PixelFormat R8	Red 8-bit
PixelFormat R10	Red 10-bit
PixelFormat R12	Red 12-bit
PixelFormat R16	Red 16-bit
PixelFormat G8	Green 8-bit
PixelFormat G10	Green 10-bit
PixelFormat_G12	Green 12-bit
PixelFormat_G16	Green 16-bit
PixelFormat_B8	Blue 8-bit
PixelFormat_B10	Blue 10-bit
PixelFormat_B12	Blue 12-bit
PixelFormat_B16	Blue 16-bit
PixelFormat_Coord3D_ABC8	3D coordinate A-B-C 8-bit
PixelFormat_Coord3D_ABC8_Planar	3D coordinate A-B-C 8-bit planar
PixelFormat_Coord3D_ABC10p	3D coordinate A-B-C 10-bit packed
PixelFormat_Coord3D_ABC10p_Planar	3D coordinate A-B-C 10-bit packed planar
PixelFormat_Coord3D_ABC12p	3D coordinate A-B-C 12-bit packed
PixelFormat_Coord3D_ABC12p_Planar	3D coordinate A-B-C 12-bit packed planar
PixelFormat_Coord3D_ABC16	3D coordinate A-B-C 16-bit
PixelFormat_Coord3D_ABC16_Planar	3D coordinate A-B-C 16-bit planar
PixelFormat_Coord3D_ABC32f	3D coordinate A-B-C 32-bit floating point
PixelFormat_Coord3D_ABC32f_Planar	3D coordinate A-B-C 32-bit floating point planar
PixelFormat_Coord3D_AC8	3D coordinate A-C 8-bit
PixelFormat_Coord3D_AC8_Planar	3D coordinate A-C 8-bit planar
PixelFormat_Coord3D_AC10p	3D coordinate A-C 10-bit packed
PixelFormat_Coord3D_AC10p_Planar	3D coordinate A-C 10-bit packed planar
PixelFormat_Coord3D_AC12p	3D coordinate A-C 12-bit packed
PixelFormat_Coord3D_AC12p_Planar	3D coordinate A-C 12-bit packed planar
PixelFormat_Coord3D_AC16	3D coordinate A-C 16-bit
PixelFormat_Coord3D_AC16_Planar	3D coordinate A-C 16-bit planar
PixelFormat_Coord3D_AC32f	3D coordinate A-C 32-bit floating point
PixelFormat_Coord3D_AC32f_Planar	3D coordinate A-C 32-bit floating point planar
PixelFormat_Coord3D_A8	3D coordinate A 8-bit
PixelFormat_Coord3D_A10p	3D coordinate A 10-bit packed
	ı

PixelFormat_Coord3D_A12p	3D coordinate A 12-bit packed
PixelFormat_Coord3D_A16	3D coordinate A 16-bit
PixelFormat_Coord3D_A32f	3D coordinate A 32-bit floating point
PixelFormat_Coord3D_B8	3D coordinate B 8-bit
PixelFormat_Coord3D_B10p	3D coordinate B 10-bit packed
PixelFormat_Coord3D_B12p	3D coordinate B 12-bit packed
PixelFormat_Coord3D_B16	3D coordinate B 16-bit
PixelFormat_Coord3D_B32f	3D coordinate B 32-bit floating point
PixelFormat_Coord3D_C8	3D coordinate C 8-bit
PixelFormat_Coord3D_C10p	3D coordinate C 10-bit packed
PixelFormat_Coord3D_C12p	3D coordinate C 12-bit packed
PixelFormat_Coord3D_C16	3D coordinate C 16-bit
PixelFormat_Coord3D_C32f	3D coordinate C 32-bit floating point
PixelFormat_Confidence1	Confidence 1-bit unpacked
PixelFormat_Confidence1p	Confidence 1-bit packed
PixelFormat_Confidence8	Confidence 8-bit
PixelFormat_Confidence16	Confidence 16-bit
PixelFormat_Confidence32f	Confidence 32-bit floating point
PixelFormat_BiColorBGRG8	Bi-color Blue/Green - Red/Green 8-bit
PixelFormat_BiColorBGRG10	Bi-color Blue/Green - Red/Green 10-bit unpacked
PixelFormat_BiColorBGRG10p	Bi-color Blue/Green - Red/Green 10-bit packed
PixelFormat_BiColorBGRG12	Bi-color Blue/Green - Red/Green 12-bit unpacked
PixelFormat_BiColorBGRG12p	Bi-color Blue/Green - Red/Green 12-bit packed
PixelFormat_BiColorRGBG8	Bi-color Red/Green - Blue/Green 8-bit
PixelFormat_BiColorRGBG10	Bi-color Red/Green - Blue/Green 10-bit unpacked
PixelFormat_BiColorRGBG10p	Bi-color Red/Green - Blue/Green 10-bit packed
PixelFormat_BiColorRGBG12	Bi-color Red/Green - Blue/Green 12-bit unpacked
PixelFormat_BiColorRGBG12p	Bi-color Red/Green - Blue/Green 12-bit packed
PixelFormat_SCF1WBWG8	Sparse Color Filter #1 White-Blue-White-Green 8-bit
PixelFormat_SCF1WBWG10	Sparse Color Filter #1 White-Blue-White-Green 10-bit unpacked
PixelFormat_SCF1WBWG10p	Sparse Color Filter #1 White-Blue-White-Green 10-bit packed
PixelFormat_SCF1WBWG12	Sparse Color Filter #1 White-Blue-White-Green 12-bit unpacked
PixelFormat_SCF1WBWG12p	Sparse Color Filter #1 White-Blue-White-Green 12-bit packed
PixelFormat_SCF1WBWG14	Sparse Color Filter #1 White-Blue-White-Green 14-bit unpacked
PixelFormat_SCF1WBWG16	Sparse Color Filter #1 White-Blue-White-Green 16-bit unpacked
PixelFormat_SCF1WGWB8	Sparse Color Filter #1 White-Green-White-Blue 8-bit
PixelFormat_SCF1WGWB10	Sparse Color Filter #1 White-Green-White-Blue 10-bit unpacked
PixelFormat_SCF1WGWB10p	Sparse Color Filter #1 White-Green-White-Blue 10-bit packed
PixelFormat_SCF1WGWB12	Sparse Color Filter #1 White-Green-White-Blue 12-bit unpacked
PixelFormat_SCF1WGWB12p	Sparse Color Filter #1 White-Green-White-Blue 12-bit packed
PixelFormat_SCF1WGWB14	Sparse Color Filter #1 White-Green-White-Blue 14-bit unpacked
PixelFormat_SCF1WGWB16	Sparse Color Filter #1 White-Green-White-Blue 16-bit
PixelFormat_SCF1WGWR8	Sparse Color Filter #1 White-Green-White-Red 8-bit
PixelFormat_SCF1WGWR10	Sparse Color Filter #1 White-Green-White-Red 10-bit unpacked
PixelFormat_SCF1WGWR10p	Sparse Color Filter #1 White-Green-White-Red 10-bit packed
PixelFormat_SCF1WGWR12	Sparse Color Filter #1 White-Green-White-Red 12-bit unpacked
PixelFormat_SCF1WGWR12p	Sparse Color Filter #1 White-Green-White-Red 12-bit packed

PixelFormat_SCF1WGWR14   Sparse Color Filter #1 White-Green-White-Red 14-bit unpacked		
PixelFormat_SCF1WRWG10	PixelFormat_SCF1WGWR14	Sparse Color Filter #1 White-Green-White-Red 14-bit unpacked
PixelFormat_SCF1WRWG10   Sparse Color Filter #1 White-Red-White-Green 10-bit unpacked PixelFormat_SCF1WRWG12p   Sparse Color Filter #1 White-Red-White-Green 11-bit packed PixelFormat_SCF1WRWG12p   Sparse Color Filter #1 White-Red-White-Green 12-bit packed PixelFormat_SCF1WRWG12p   Sparse Color Filter #1 White-Red-White-Green 12-bit packed PixelFormat_SCF1WRWG12p   Sparse Color Filter #1 White-Red-White-Green 12-bit packed PixelFormat_SCF1WRWG14   Sparse Color Filter #1 White-Red-White-Green 14-bit unpacked PixelFormat_YCbCr10_CbYCr   YCbCr 44:4 42-8-bit PixelFormat_YCbCr10_CbYCr   YCbCr 44:4 42-8-bit packed   YCbCr 44:4 12-bit unpacked   YCbCr 44:2 10-bit packed   YCbCr 44:2 12-bit unpacked   YCbCr 44:2 12-bit unpacked   YCbCr 44:2 12-bit unpacked   YCbCr 44:2 12-bit unpacked   YCbCr 44:4 12-bit	PixelFormat_SCF1WGWR16	Sparse Color Filter #1 White-Green-White-Red 16-bit
PixelFormat_SCF1WRWG109   Sparse Color Filter #1 White-Red-White-Green 10-bit packed   PixelFormat_SCF1WRWG129   Sparse Color Filter #1 White-Red-White-Green 12-bit unpacked   PixelFormat_SCF1WRWG140   Sparse Color Filter #1 White-Red-White-Green 12-bit unpacked   PixelFormat_SCF1WRWG160   Sparse Color Filter #1 White-Red-White-Green 14-bit unpacked   PixelFormat_YCbCr10_CbYCr   VCbCr 44:4 8-bit   White-Red-White-Green 16-bit   V7-bit   V	PixelFormat_SCF1WRWG8	Sparse Color Filter #1 White-Red-White-Green 8-bit
PixelFormat_SCF1WRWG12   Sparse Color Filter #1 White-Red-White-Green 12-bit unpacked PixelFormat_SCF1WRWG12   Sparse Color Filter #1 White-Red-White-Green 12-bit packed PixelFormat_SCF1WRWG16   Sparse Color Filter #1 White-Red-White-Green 14-bit unpacked PixelFormat_SCF1WRWG16   Sparse Color Filter #1 White-Red-White-Green 14-bit unpacked PixelFormat_SCF1WRWG16   Sparse Color Filter #1 White-Red-White-Green 14-bit unpacked PixelFormat_YCbCr10p_CbYCr   YCbCr 4:4:4 8-bit   YCbCr 4:4:4 10-bit unpacked   YCbCr 4:4:4 10-bit unpacked   YCbCr 4:4:4 10-bit unpacked   YCbCr 4:4:4 10-bit unpacked   YCbCr 4:4:4 10-bit packed   YCbCr 4:2:2 10-bit unpacked   YCbCr 4:2:2 10-bit unpacked   YCbCr 4:2:2 10-bit unpacked   YCbCr 4:2:2 10-bit packed   YCbCr 4:2:2 10-bit packed   YCbCr 4:2:2 10-bit packed   YCbCr 4:2:2 12-bit unpacked   YCbCr 4:2:2 12-bit unpacked   YCbCr 4:2:2 12-bit unpacked   YCbCr 4:2:2 12-bit unpacked   YCbCr 4:2:2 12-bit packed   YCbCr 4:4:4 10-bit packed   YCbCr	PixelFormat_SCF1WRWG10	Sparse Color Filter #1 White-Red-White-Green 10-bit unpacked
PixelFormat_SCF1WRWG12    Sparse Color Filter #1 White-Red-White-Green 12-bit packed   PixelFormat_SCF1WRWG16    Sparse Color Filter #1 White-Red-White-Green 14-bit unpacked   PixelFormat_YCbCr8_CbYCr   YCbCr 44:4 8-bit   YCbCr42-4:4 8-bit   YC	PixelFormat_SCF1WRWG10p	Sparse Color Filter #1 White-Red-White-Green 10-bit packed
PixelFormat_SCF1WRWG14   Sparse Color Filter #1 White-Red-White-Green 14-bit unpacked   PixelFormat_YCbCr8_CbYCr   YCbCr 4:4:4 8-bit   YCbCr10_CbYCr   PixelFormat_YCbCr10_CbYCr   YCbCr 4:4:4 10-bit unpacked   YCbCr10_CbYCr   PixelFormat_YCbCr12_CbYCr   YCbCr 4:4:4 10-bit unpacked   YCbCr12_CbYCr   PixelFormat_YCbCr12_CbYCr   YCbCr 4:4:4 10-bit unpacked   YCbCr42_CbYCr   PixelFormat_YCbCr12_CbYCr   YCbCr 4:4:4 10-bit unpacked   YCbCr42_CbYCr   YCbCr 4:4:4 10-bit unpacked   YCbCr42_CbYCr   YCbCr 4:4:4 10-bit packed   YCbCr42_CbYCr   YCbCr 4:4:4 10-bit packed   YCbCr42_CbYCr   YCbCr 4:4:4 10-bit packed   YCbCr42_CbYCr   YCbCr 4:4:4 10-bit unpacked   YCbCr42_CbYCr   YCbCr 4:2:2 8-bit   YCbCr42_CbYCr   YCbCr 4:2:2 8-bit   YCbCr42_CbYCr   YCbCr 4:2:2 8-bit   YCbCr42_CbYCr   YCbCr 4:2:2 10-bit unpacked   YCbCr42_CbYCr   YCbCr 4:2:2 10-bit packed   YCbCr42_CbYCr   YCbCr 4:2:2 10-bit packed   YCbCr42_CbYCr   YCbCr 4:2:2 10-bit packed   YCbCr42_CbYCr   YCbCr 4:2:2 12-bit unpacked   YCbCr42_CbYCr   YCbCr 4:2:2 12-bit unpacked   YCbCr42_CbYCr   YCbCr 4:2:2 12-bit unpacked   YCbCr42_CbYCr   YCbCr 4:2:2 12-bit packed   YCbCr 4:2:4 10-bit packed   YCbCr 4:4:4 10-bit packed   YCbCr 4:2:2 8-bit	PixelFormat_SCF1WRWG12	Sparse Color Filter #1 White-Red-White-Green 12-bit unpacked
PixelFormat_YCbCr8_CbYCr   YCbCr 44:4 8-bit   YcbCr9_A:4:4 8-bit   YcbCr9_A:4:4 8-bit   YcbCr9_A:4:4 8-bit   YcbCr9_A:4:4 8-bit   YcbCr9_A:4:4 10-bit unpacked   YcbCr9_A:4:4 12-bit unp	PixelFormat_SCF1WRWG12p	Sparse Color Filter #1 White-Red-White-Green 12-bit packed
PixelFormat_YCbCr10_cbYCr	PixelFormat_SCF1WRWG14	Sparse Color Filter #1 White-Red-White-Green 14-bit unpacked
PixelFormat_YCbCr10_CbYCr   YCbCr 4:4:4 10-bit unpacked   PixelFormat_YCbCr10p_CbYCr   YCbCr 4:4:4 10-bit packed   YCbCr 4:PixelFormat_YCbCr12_CbYCr   YCbCr 4:4:4 12-bit unpacked   YCbCr 4:4:4 12-bit unpacked   PixelFormat_YCbCr411_8_CbYCrYY   YCbCr 4:4:4 12-bit packed   PixelFormat_YCbCr421_8_CbYCrYY   YCbCr 4:4:4 12-bit packed   PixelFormat_YCbCr421_8_CbYCrYY   YCbCr 4:2:2 10-bit unpacked   PixelFormat_YCbCr422_10_CbYCrY   YCbCr 4:2:2 10-bit unpacked   PixelFormat_YCbCr422_10_CbYCrY   YCbCr 4:2:2 10-bit packed   PixelFormat_YCbCr422_10_PCbYCrY   YCbCr 4:2:2 10-bit packed   PixelFormat_YCbCr422_10_PCbYCrY   YCbCr 4:2:2 12-bit unpacked   PixelFormat_YCbCr422_12_PCbYCrY   YCbCr 4:2:2 12-bit unpacked   PixelFormat_YCbCr422_12_PCbYCrY   YCbCr 4:2:2 12-bit packed   YcbCr 4:4:4 8-bit BT.601   YcbCr 4:4:4 8-bit BT.601   YcbCr 4:4:4 8-bit BT.601   YcbCr 4:4:4 8-bit BT.601   YcbCr 4:4:4 10-bit packed BT.601   PixelFormat_YCbCr601_10_CbYCr   YcbCr 4:4:4 10-bit packed BT.601   YcbCr 4:4:4 12-bit packed BT.601   YcbCr 4:2:2 8-bit BT.601   YcbCr 4:2:2	PixelFormat_SCF1WRWG16	Sparse Color Filter #1 White-Red-White-Green 16-bit
PixelFormat_YCbCr10p_CbYCr   YCbCr 4:4:4 12-bit unpacked   PixelFormat_YCbCr12_CbYCr   YCbCr 4:4:4 12-bit unpacked   YCbCr 4:4:4 12-bit packed   YCbCr 4:4:4 12-bit packed   YCbCr 4:2:2 8-bit   PixelFormat_YCbCr422_10   YCbCr 4:2:2 10-bit unpacked   YCbCr 4:2:2 10-bit unpacked   PixelFormat_YCbCr422_10_CbYCrY   YCbCr 4:2:2 10-bit packed   YcbCr 4:2:2 12-bit unpacked   YcbCr 4:2:2 12-bit unpacked   YcbCr 4:2:2 12-bit unpacked   YcbCr 4:2:2 12-bit packed   YcbCr 4:4:4 10-bit unpacked   YcbCr 4:4:4 10-bit packed   YcbCr 4:4:4 10-bit packed   YcbCr 4:4:4 12-bit packed   YcbCr 4:	PixelFormat_YCbCr8_CbYCr	YCbCr 4:4:4 8-bit
PixelFormat_YCbCr12_CbYCr   YCbCr 4:4:4 12-bit unpacked   PixelFormat_YCbCr412_B_CbYCrY   YCbCr 4:4:4 12-bit packed   YcbCr422_B_CbYCrY   YCbCr 4:2:2 8-bit   YcbCr 4:2:2 10-bit unpacked   PixelFormat_YCbCr422_10_CbYCrY   YcbCr 4:2:2 10-bit unpacked   YcbCr 4:2:2 10-bit unpacked   PixelFormat_YCbCr422_10_CbYCrY   YcbCr 4:2:2 10-bit packed   YcbCr 4:2:2 12-bit unpacked   YcbCr 4:2:2 12-bit unpacked   YcbCr 4:2:2 12-bit packed   YcbCr 4:4:4 8-bit BT:601   YcbCr 4:4:4 8-bit BT:601   YcbCr 4:4:4 12-bit unpacked BT:601   YcbCr 4:2:2 8-bit BT:601   YcbCr 4:2:2 10-bit unpacked BT:601   YcbCr 4:2:2 10-bit packed BT:601   YcbCr 4:2:2 12-bit packed BT:601   YcbCr 4:4:4 10-b	PixelFormat_YCbCr10_CbYCr	YCbCr 4:4:4 10-bit unpacked
PixelFormat_YCbCr12p_CbYCr	PixelFormat_YCbCr10p_CbYCr	YCbCr 4:4:4 10-bit packed
PixelFormat_YCbCr411_8_CbYYCrYY PixelFormat_YCbCr422_8_CbYCrY PixelFormat_YCbCr422_10_CbYCrY PixelFormat_YCbCr422_10_CbYCrY PixelFormat_YCbCr422_10_CbYCrY PixelFormat_YCbCr422_10_CbYCrY PixelFormat_YCbCr422_10p_CbYCrY PixelFormat_YCbCr422_10p_CbYCrY PixelFormat_YCbCr422_10p_CbYCrY PixelFormat_YCbCr422_10p_CbYCrY PixelFormat_YCbCr422_12_PCbYCrY PixelFormat_YCbCr422_12_PCbYCrY PixelFormat_YCbCr422_12_PCbYCrY PixelFormat_YCbCr422_12_PCbYCrY PixelFormat_YCbCr422_12_PCbYCrY PixelFormat_YCbCr601_8_CbYCr PixelFormat_YCbCr601_10p_CbYCr PixelFormat_YCbCr601_10p_CbYCr PixelFormat_YCbCr601_10p_CbYCr PixelFormat_YCbCr601_12_CbYCr PixelFormat_YCbCr601_12_CbYCr PixelFormat_YCbCr601_12_CbYCr PixelFormat_YCbCr601_12_CbYCr PixelFormat_YCbCr601_12_CbYCr PixelFormat_YCbCr601_12_CbYCr PixelFormat_YCbCr601_12_CbYCr PixelFormat_YCbCr601_12_DCbYCr PixelFormat_YCbCr601_12_CbYCr PixelFormat_YCbCr601_12_CbYCrY PixelFormat_YCbCr	PixelFormat_YCbCr12_CbYCr	YCbCr 4:4:4 12-bit unpacked
PixelFormat_YCbCr422_8_CbYCrY	PixelFormat_YCbCr12p_CbYCr	YCbCr 4:4:4 12-bit packed
PixelFormat_YCbCr422_10	PixelFormat_YCbCr411_8_CbYYCrYY	YCbCr 4:1:1 8-bit
PixelFormat_YCbCr422_10_CbYCrY		
PixelFormat_YCbCr422_10p	PixelFormat_YCbCr422_10	YCbCr 4:2:2 10-bit unpacked
PixelFormat_YCbCr422_10p_CbYCrY	PixelFormat_YCbCr422_10_CbYCrY	YCbCr 4:2:2 10-bit unpacked
PixelFormat_YCbCr422_12 PixelFormat_YCbCr422_12p PixelFormat_YCbCr422_12p PixelFormat_YCbCr422_12p PixelFormat_YCbCr422_12p PixelFormat_YCbCr422_12p PixelFormat_YCbCr422_12p PixelFormat_YCbCr422_12p PixelFormat_YCbCr601_8_CbYCr PixelFormat_YCbCr601_8_CbYCr PixelFormat_YCbCr601_10_cbYCr PixelFormat_YCbCr601_10_cbYCr PixelFormat_YCbCr601_10p_CbYCr PixelFormat_YCbCr601_10p_CbYCr PixelFormat_YCbCr601_12p_CbYCr PixelFormat_YCbCr601_12p	PixelFormat_YCbCr422_10p	·
PixelFormat_YCbCr422_12_CbYCrY   YCbCr 4:2:2 12-bit unpacked	PixelFormat_YCbCr422_10p_CbYCrY	YCbCr 4:2:2 10-bit packed
PixelFormat_YCbCr422_12p	PixelFormat_YCbCr422_12	YCbCr 4:2:2 12-bit unpacked
PixelFormat_YCbCr422_12p_CbYCrY YCbCr 4:2:2 12-bit packed  PixelFormat_YCbCr601_8_CbYCr YCbCr 4:4:4 8-bit BT.601  PixelFormat_YCbCr601_10_CbYCr YCbCr 4:4:4 10-bit unpacked BT.601  PixelFormat_YCbCr601_10p_CbYCr YCbCr 4:4:4 10-bit packed BT.601  PixelFormat_YCbCr601_12p_CbYCr YCbCr 4:4:4 12-bit unpacked BT.601  PixelFormat_YCbCr601_12p_CbYCr YCbCr 4:4:4 12-bit packed BT.601  PixelFormat_YCbCr601_12p_CbYCr YCbCr 4:4:4 12-bit packed BT.601  PixelFormat_YCbCr601_411_8_CbYYCrYY YCbCr 4:4:4 12-bit packed BT.601  PixelFormat_YCbCr601_422_8 YCbCr 4:2:2 8-bit BT.601  PixelFormat_YCbCr601_422_8_CbYCrY YCbCr 4:2:2 8-bit BT.601  PixelFormat_YCbCr601_422_10_CbYCrY YCbCr 4:2:2 10-bit unpacked BT.601  PixelFormat_YCbCr601_422_10p_YCbCr 4:2:2 10-bit unpacked BT.601  PixelFormat_YCbCr601_422_10p_YCbCr 4:2:2 10-bit packed BT.601  PixelFormat_YCbCr601_422_10p_CbYCrY YCbCr 4:2:2 10-bit packed BT.601  PixelFormat_YCbCr601_422_10p_CbYCrY YCbCr 4:2:2 10-bit packed BT.601  PixelFormat_YCbCr601_422_12p_CbYCrY YCbCr 4:2:2 12-bit unpacked BT.601  PixelFormat_YCbCr601_422_12 YCbCr 4:2:2 12-bit unpacked BT.601  PixelFormat_YCbCr601_422_12 YCbCr 4:2:2 12-bit unpacked BT.601  PixelFormat_YCbCr601_422_12p_CbYCrY YCbCr 4:2:2 12-bit packed BT.601  PixelFormat_YCbCr601_422_12p_CbYCrY YCbCr 4:2:2 12-bit packed BT.601  PixelFormat_YCbCr601_422_12p_CbYCrY YCbCr 4:2:2 12-bit packed BT.601  PixelFormat_YCbCr709_8_CbYCr YCbCr 4:4:4 8-bit BT.709  PixelFormat_YCbCr709_10p_CbYCr YCbCr 4:4:4 10-bit unpacked BT.709  PixelFormat_YCbCr709_12p_CbYCr YCbCr 4:4:4 10-bit packed BT.709  PixelFormat_YCbCr709_12CbYCr YCbCr 4:4:4 12-bit unpacked BT.709  PixelFormat_YCbCr709_12CbYCr YCbCr 4:4:4 12-bit unpacked BT.709  PixelFormat_YCbCr709_12CbYCr YCbCr 4:4:4 12-bit packed BT.709  PixelFormat_YCbCr709_411_8_CbYYCrYY YCbCr 4:1:1 8-bit BT.709	PixelFormat_YCbCr422_12_CbYCrY	YCbCr 4:2:2 12-bit unpacked
PixelFormat_YCbCr601_8_CbYCr YCbCr 4:4:4 8-bit BT.601  PixelFormat_YCbCr601_10_CbYCr YCbCr 4:4:4 10-bit unpacked BT.601  PixelFormat_YCbCr601_10_CbYCr YCbCr 4:4:4 10-bit packed BT.601  PixelFormat_YCbCr601_12_CbYCr YCbCr 4:4:4 12-bit unpacked BT.601  PixelFormat_YCbCr601_12_CbYCr YCbCr 4:4:4 12-bit packed BT.601  PixelFormat_YCbCr601_12_CbYCr YCbCr 4:4:4 12-bit packed BT.601  PixelFormat_YCbCr601_411_8_CbYYCrYY YCbCr 4:4:4 12-bit packed BT.601  PixelFormat_YCbCr601_422_8 YCbCr 4:2:2 8-bit BT.601  PixelFormat_YCbCr601_422_8_CbYCrY YCbCr 4:2:2 8-bit BT.601  PixelFormat_YCbCr601_422_10_CbYCrY YCbCr 4:2:2 10-bit unpacked BT.601  PixelFormat_YCbCr601_422_10_YCbCr 4:2:2 10-bit unpacked BT.601  PixelFormat_YCbCr601_422_10_YCbCr 4:2:2 10-bit packed BT.601  PixelFormat_YCbCr601_422_10_YCbCr 4:2:2 10-bit packed BT.601  PixelFormat_YCbCr601_422_10_YCbCr 4:2:2 10-bit packed BT.601  PixelFormat_YCbCr601_422_12_YCbCr 4:2:2 12-bit unpacked BT.601  PixelFormat_YCbCr601_422_12_YCbCr 4:2:2 12-bit unpacked BT.601  PixelFormat_YCbCr601_422_12_YCbCr 4:2:2 12-bit unpacked BT.601  PixelFormat_YCbCr601_422_12_YCbCr 4:2:2 12-bit packed BT.601  PixelFormat_YCbCr601_422_12_PCbYCrY YCbCr 4:2:2 12-bit packed BT.601  PixelFormat_YCbCr601_422_12_PCbYCrY YCbCr 4:2:2 12-bit packed BT.601  PixelFormat_YCbCr601_422_12_PCbYCrY YCbCr 4:4:4 8-bit BT.709  PixelFormat_YCbCr709_10_CbYCr YCbCr 4:4:4 10-bit unpacked BT.709  PixelFormat_YCbCr709_12_CbYCr YCbCr 4:4:4 10-bit packed BT.709  PixelFormat_YCbCr709_12_CbYCr YCbCr 4:4:4 12-bit unpacked BT.709  PixelFormat_YCbCr709_12_CbYCr YCbCr 4:4:4 12-bit packed BT.709  PixelFormat_YCbCr709_12_CbYCr YCbCr 4:4:4 12-bit packed BT.709  PixelFormat_YCbCr709_12_CbYCr YCbCr 4:4:4 12-bit packed BT.709  PixelFormat_YCbCr709_411_8_CbYYCrYY YCbCr 4:1:1 8-bit BT.709	PixelFormat_YCbCr422_12p	YCbCr 4:2:2 12-bit packed
PixelFormat_YCbCr601_10_CbYCr         YCbCr 4:4:4 10-bit unpacked BT.601           PixelFormat_YCbCr601_10p_CbYCr         YCbCr 4:4:4 10-bit packed BT.601           PixelFormat_YCbCr601_12p_CbYCr         YCbCr 4:4:4 12-bit unpacked BT.601           PixelFormat_YCbCr601_12p_CbYCr         YCbCr 4:4:4 12-bit packed BT.601           PixelFormat_YCbCr601_411_8_CbYYCrYY         YCbCr 4:4:1 8-bit BT.601           PixelFormat_YCbCr601_422_8         YCbCr 4:2:2 8-bit BT.601           PixelFormat_YCbCr601_422_8_CbYCrY         YCbCr 4:2:2 8-bit BT.601           PixelFormat_YCbCr601_422_10_CbYCrY         YCbCr 4:2:2 10-bit unpacked BT.601           PixelFormat_YCbCr601_422_10_CbYCrY         YCbCr 4:2:2 10-bit packed BT.601           PixelFormat_YCbCr601_422_10_CbYCrY         YCbCr 4:2:2 10-bit packed BT.601           PixelFormat_YCbCr601_422_10p_CbYCrY         YCbCr 4:2:2 10-bit packed BT.601           PixelFormat_YCbCr601_422_10p_CbYCrY         YCbCr 4:2:2 12-bit unpacked BT.601           PixelFormat_YCbCr601_422_12_CbYCrY         YCbCr 4:2:2 12-bit packed BT.601           PixelFormat_YCbCr601_422_12_CbYCrY         YCbCr 4:2:2 12-bit packed BT.601           PixelFormat_YCbCr601_422_12_CbYCrY         YCbCr 4:2:2 12-bit packed BT.601           PixelFormat_YCbCr709_8_CbYCr         YCbCr 4:4:4 8-bit BT.709           PixelFormat_YCbCr709_10p_CbYCr         YCbCr 4:4:4 10-bit unpacked BT.709           PixelFormat_YCbCr709_	PixelFormat_YCbCr422_12p_CbYCrY	YCbCr 4:2:2 12-bit packed
PixelFormat_YCbCr601_10p_CbYCr PixelFormat_YCbCr601_12_CbYCr PixelFormat_YCbCr601_12p_CbYCr PixelFormat_YCbCr601_12p_CbYCr PixelFormat_YCbCr601_12p_CbYCr PixelFormat_YCbCr601_411_8_CbYYCrYY PixelFormat_YCbCr601_411_8_CbYYCrYY PixelFormat_YCbCr601_422_8 PixelFormat_YCbCr601_422_8 PixelFormat_YCbCr601_422_8_CbYCrY PixelFormat_YCbCr601_422_10 PixelFormat_YCbCr601_422_10 PixelFormat_YCbCr601_422_10 PixelFormat_YCbCr601_422_10 PixelFormat_YCbCr601_422_10p PixelFormat_YCbCr601_422_10p PixelFormat_YCbCr601_422_10p PixelFormat_YCbCr601_422_10p PixelFormat_YCbCr601_422_10p PixelFormat_YCbCr601_422_12p PixelFormat_YCbCr709_8_CbYCr PixelFormat_YCbCr709_10p PixelFormat_YCbCr709_10p PixelFormat_YCbCr709_12p PixelFormat_YCbCr709_12p PixelFormat_YCbCr709_411_8_CbYYCrYY PCbCr 4:1:18-bit BT.709 PixelFormat_YCbCr709_411_8_CbYYCrYY PCbCr 4:1:18-bit BT.709	PixelFormat_YCbCr601_8_CbYCr	YCbCr 4:4:4 8-bit BT.601
PixelFormat_YCbCr601_12_CbYCr	PixelFormat_YCbCr601_10_CbYCr	YCbCr 4:4:4 10-bit unpacked BT.601
PixelFormat_YCbCr601_12p_CbYCr         YCbCr 4:4:4 12-bit packed BT.601           PixelFormat_YCbCr601_411_8_CbYYCrYY         YCbCr 4:1:1 8-bit BT.601           PixelFormat_YCbCr601_422_8         YCbCr 4:2:2 8-bit BT.601           PixelFormat_YCbCr601_422_10         YCbCr 4:2:2 8-bit BT.601           PixelFormat_YCbCr601_422_10         YCbCr 4:2:2 10-bit unpacked BT.601           PixelFormat_YCbCr601_422_10_CbYCrY         YCbCr 4:2:2 10-bit unpacked BT.601           PixelFormat_YCbCr601_422_10p         YCbCr 4:2:2 10-bit packed BT.601           PixelFormat_YCbCr601_422_10p_CbYCrY         YCbCr 4:2:2 10-bit packed BT.601           PixelFormat_YCbCr601_422_10p_CbYCrY         YCbCr 4:2:2 12-bit unpacked BT.601           PixelFormat_YCbCr601_422_12         YCbCr 4:2:2 12-bit unpacked BT.601           PixelFormat_YCbCr601_422_12_CbYCrY         YCbCr 4:2:2 12-bit packed BT.601           PixelFormat_YCbCr601_422_12p_CbYCrY         YCbCr 4:2:2 12-bit packed BT.601           PixelFormat_YCbCr601_422_12p_CbYCrY         YCbCr 4:2:2 12-bit packed BT.601           PixelFormat_YCbCr709_8_CbYCr         YCbCr 4:4:4 8-bit BT.709           PixelFormat_YCbCr709_10_CbYCr         YCbCr 4:4:4 10-bit unpacked BT.709           PixelFormat_YCbCr709_12_CbYCr         YCbCr 4:4:4 12-bit unpacked BT.709           PixelFormat_YCbCr709_12_CbYCr         YCbCr 4:4:4 12-bit unpacked BT.709           PixelFormat_YCbCr709_411_8_CbYYCrYY <td>PixelFormat_YCbCr601_10p_CbYCr</td> <td>YCbCr 4:4:4 10-bit packed BT.601</td>	PixelFormat_YCbCr601_10p_CbYCr	YCbCr 4:4:4 10-bit packed BT.601
PixelFormat_YCbCr601_411_8_CbYYCrYY         YCbCr 4:1:1 8-bit BT.601           PixelFormat_YCbCr601_422_8         YCbCr 4:2:2 8-bit BT.601           PixelFormat_YCbCr601_422_8_CbYCrY         YCbCr 4:2:2 8-bit BT.601           PixelFormat_YCbCr601_422_10         YCbCr 4:2:2 10-bit unpacked BT.601           PixelFormat_YCbCr601_422_10_CbYCrY         YCbCr 4:2:2 10-bit unpacked BT.601           PixelFormat_YCbCr601_422_10p_CbYCrY         YCbCr 4:2:2 10-bit packed BT.601           PixelFormat_YCbCr601_422_10p_CbYCrY         YCbCr 4:2:2 10-bit packed BT.601           PixelFormat_YCbCr601_422_12         YCbCr 4:2:2 12-bit unpacked BT.601           PixelFormat_YCbCr601_422_12         YCbCr 4:2:2 12-bit unpacked BT.601           PixelFormat_YCbCr601_422_12p_YCbYCrY         YCbCr 4:2:2 12-bit packed BT.601           PixelFormat_YCbCr601_422_12p_YCbYCrY         YCbCr 4:2:2 12-bit packed BT.601           PixelFormat_YCbCr601_422_12p_CbYCrY         YCbCr 4:2:2 12-bit packed BT.601           PixelFormat_YCbCr709_8_CbYCr         YCbCr 4:4:4 8-bit BT.709           PixelFormat_YCbCr709_10_CbYCr         YCbCr 4:4:4 10-bit unpacked BT.709           PixelFormat_YCbCr709_12_CbYCr         YCbCr 4:4:4 12-bit unpacked BT.709           PixelFormat_YCbCr709_12_CbYCr         YCbCr 4:4:4 12-bit packed BT.709           PixelFormat_YCbCr709_411_8_CbYYCrYY         YCbCr 4:4:1:1 8-bit BT.709	PixelFormat_YCbCr601_12_CbYCr	YCbCr 4:4:4 12-bit unpacked BT.601
PixelFormat_YCbCr601_422_8 PixelFormat_YCbCr601_422_8_CbYCrY PixelFormat_YCbCr601_422_10 PixelFormat_YCbCr601_422_10 PixelFormat_YCbCr601_422_10 PixelFormat_YCbCr601_422_10 PixelFormat_YCbCr601_422_10 PixelFormat_YCbCr601_422_10 PixelFormat_YCbCr601_422_10 PixelFormat_YCbCr601_422_10 PixelFormat_YCbCr601_422_10 PixelFormat_YCbCr601_422_12 PixelFormat_YCbCr709_10_CbYCr PixelFormat_YCbCr709_10_CbYCr PixelFormat_YCbCr709_10 PixelFormat_YCbCr709_12_CbYCr YCbCr 4:4:4 10-bit unpacked BT.709 PixelFormat_YCbCr709_12_CbYCr YCbCr 4:4:4 12-bit unpacked BT.709 PixelFormat_YCbCr709_12_CbYCr YCbCr 4:4:4 12-bit packed BT.709 PixelFormat_YCbCr709_12_CbYCr YCbCr 4:4:4 12-bit packed BT.709 PixelFormat_YCbCr709_12_CbYCr YCbCr 4:4:4 12-bit packed BT.709 PixelFormat_YCbCr709_411_8_CbYYCrYY YCbCr 4:1:1 8-bit BT.709	PixelFormat_YCbCr601_12p_CbYCr	YCbCr 4:4:4 12-bit packed BT.601
PixelFormat_YCbCr601_422_8_CbYCrY         YCbCr 4:2:2 8-bit BT.601           PixelFormat_YCbCr601_422_10         YCbCr 4:2:2 10-bit unpacked BT.601           PixelFormat_YCbCr601_422_10_CbYCrY         YCbCr 4:2:2 10-bit unpacked BT.601           PixelFormat_YCbCr601_422_10p         YCbCr 4:2:2 10-bit packed BT.601           PixelFormat_YCbCr601_422_10p_CbYCrY         YCbCr 4:2:2 10-bit packed BT.601           PixelFormat_YCbCr601_422_12         YCbCr 4:2:2 12-bit unpacked BT.601           PixelFormat_YCbCr601_422_12_CbYCrY         YCbCr 4:2:2 12-bit packed BT.601           PixelFormat_YCbCr601_422_12p         YCbCr 4:2:2 12-bit packed BT.601           PixelFormat_YCbCr601_422_12p         YCbCr 4:2:2 12-bit packed BT.601           PixelFormat_YCbCr709_8_CbYCr         YCbCr 4:2:2 12-bit packed BT.601           PixelFormat_YCbCr709_8_CbYCr         YCbCr 4:4:4 8-bit BT.709           PixelFormat_YCbCr709_10_CbYCr         YCbCr 4:4:4 10-bit unpacked BT.709           PixelFormat_YCbCr709_12_CbYCr         YCbCr 4:4:4 12-bit unpacked BT.709           PixelFormat_YCbCr709_12_CbYCr         YCbCr 4:4:4 12-bit packed BT.709           PixelFormat_YCbCr709_12p_CbYCr         YCbCr 4:4:4 12-bit packed BT.709           PixelFormat_YCbCr709_411_8_CbYYCrYY         YCbCr 4:1:1 8-bit BT.709	PixelFormat_YCbCr601_411_8_CbYYCrYY	YCbCr 4:1:1 8-bit BT.601
PixelFormat_YCbCr601_422_10 YCbCr 4:2:2 10-bit unpacked BT.601  PixelFormat_YCbCr601_422_10p YCbCr 4:2:2 10-bit unpacked BT.601  PixelFormat_YCbCr601_422_10p YCbCr 4:2:2 10-bit packed BT.601  PixelFormat_YCbCr601_422_10p CbYCrY YCbCr 4:2:2 10-bit packed BT.601  PixelFormat_YCbCr601_422_12 YCbCr 4:2:2 12-bit unpacked BT.601  PixelFormat_YCbCr601_422_12 YCbCr 4:2:2 12-bit unpacked BT.601  PixelFormat_YCbCr601_422_12p YCbCr 4:2:2 12-bit packed BT.601  PixelFormat_YCbCr601_422_12p YCbCr 4:2:2 12-bit packed BT.601  PixelFormat_YCbCr601_422_12p CbYCrY YCbCr 4:2:2 12-bit packed BT.601  PixelFormat_YCbCr709_8_CbYCr YCbCr 4:4:4 8-bit BT.709  PixelFormat_YCbCr709_10_CbYCr YCbCr 4:4:4 10-bit unpacked BT.709  PixelFormat_YCbCr709_12_CbYCr YCbCr 4:4:4 10-bit packed BT.709  PixelFormat_YCbCr709_12_CbYCr YCbCr 4:4:4 12-bit unpacked BT.709  PixelFormat_YCbCr709_12_CbYCr YCbCr 4:4:4 12-bit packed BT.709  PixelFormat_YCbCr709_411_8_CbYYCrYY YCbCr 4:1:1 8-bit BT.709		
PixelFormat_YCbCr601_422_10_CbYCrY YCbCr 4:2:2 10-bit unpacked BT.601  PixelFormat_YCbCr601_422_10p YCbCr 4:2:2 10-bit packed BT.601  PixelFormat_YCbCr601_422_10p_CbYCrY YCbCr 4:2:2 10-bit packed BT.601  PixelFormat_YCbCr601_422_12 YCbCr 4:2:2 12-bit unpacked BT.601  PixelFormat_YCbCr601_422_12_CbYCrY YCbCr 4:2:2 12-bit unpacked BT.601  PixelFormat_YCbCr601_422_12p YCbCr 4:2:2 12-bit packed BT.601  PixelFormat_YCbCr601_422_12p YCbCr 4:2:2 12-bit packed BT.601  PixelFormat_YCbCr601_422_12p YCbCr 4:2:2 12-bit packed BT.601  PixelFormat_YCbCr709_8_CbYCr YCbCr 4:4:4 8-bit BT.709  PixelFormat_YCbCr709_10_CbYCr YCbCr 4:4:4 10-bit unpacked BT.709  PixelFormat_YCbCr709_12_CbYCr YCbCr 4:4:4 12-bit unpacked BT.709  PixelFormat_YCbCr709_12_CbYCr YCbCr 4:4:4 12-bit unpacked BT.709  PixelFormat_YCbCr709_12p_CbYCr YCbCr 4:4:4 12-bit packed BT.709  PixelFormat_YCbCr709_411_8_CbYYCrYY YCbCr 4:1:1 8-bit BT.709		
PixelFormat_YCbCr601_422_10p YCbCr 4:2:2 10-bit packed BT.601  PixelFormat_YCbCr601_422_12 YCbCr 4:2:2 10-bit packed BT.601  PixelFormat_YCbCr601_422_12 YCbCr 4:2:2 12-bit unpacked BT.601  PixelFormat_YCbCr601_422_12 YCbCr 4:2:2 12-bit unpacked BT.601  PixelFormat_YCbCr601_422_12p YCbCr 4:2:2 12-bit packed BT.601  PixelFormat_YCbCr601_422_12p YCbCr 4:2:2 12-bit packed BT.601  PixelFormat_YCbCr601_422_12p CbYCrY YCbCr 4:2:2 12-bit packed BT.601  PixelFormat_YCbCr709_8_CbYCr YCbCr 4:4:4 8-bit BT.709  PixelFormat_YCbCr709_10_CbYCr YCbCr 4:4:4 10-bit unpacked BT.709  PixelFormat_YCbCr709_12_CbYCr YCbCr 4:4:4 10-bit packed BT.709  PixelFormat_YCbCr709_12_CbYCr YCbCr 4:4:4 12-bit unpacked BT.709  PixelFormat_YCbCr709_12p_CbYCr YCbCr 4:4:4 12-bit packed BT.709  PixelFormat_YCbCr709_12p_CbYCr YCbCr 4:4:4 12-bit packed BT.709  PixelFormat_YCbCr709_411_8_CbYYCrYY YCbCr 4:1:1 8-bit BT.709		T T T T T T T T T T T T T T T T T T T
PixelFormat_YCbCr601_422_10p_CbYCrY YCbCr 4:2:2 10-bit packed BT.601  PixelFormat_YCbCr601_422_12 YCbCr 4:2:2 12-bit unpacked BT.601  PixelFormat_YCbCr601_422_12_CbYCrY YCbCr 4:2:2 12-bit unpacked BT.601  PixelFormat_YCbCr601_422_12p YCbCr 4:2:2 12-bit packed BT.601  PixelFormat_YCbCr601_422_12p YCbCr 4:2:2 12-bit packed BT.601  PixelFormat_YCbCr601_422_12p_CbYCrY YCbCr 4:2:2 12-bit packed BT.601  PixelFormat_YCbCr709_8_CbYCr YCbCr 4:4:4 8-bit BT.709  PixelFormat_YCbCr709_10_CbYCr YCbCr 4:4:4 10-bit unpacked BT.709  PixelFormat_YCbCr709_12_CbYCr YCbCr 4:4:4 10-bit packed BT.709  PixelFormat_YCbCr709_12_CbYCr YCbCr 4:4:4 12-bit unpacked BT.709  PixelFormat_YCbCr709_12p_CbYCr YCbCr 4:4:4 12-bit packed BT.709  PixelFormat_YCbCr709_411_8_CbYYCrYY YCbCr 4:1:1 8-bit BT.709		-
PixelFormat_YCbCr601_422_12 YCbCr 4:2:2 12-bit unpacked BT.601  PixelFormat_YCbCr601_422_12_CbYCrY YCbCr 4:2:2 12-bit unpacked BT.601  PixelFormat_YCbCr601_422_12p YCbCr 4:2:2 12-bit packed BT.601  PixelFormat_YCbCr601_422_12p YCbCr 4:2:2 12-bit packed BT.601  PixelFormat_YCbCr601_422_12p_CbYCrY YCbCr 4:2:2 12-bit packed BT.601  PixelFormat_YCbCr709_8_CbYCr YCbCr 4:4:4 8-bit BT.709  PixelFormat_YCbCr709_10_CbYCr YCbCr 4:4:4 10-bit unpacked BT.709  PixelFormat_YCbCr709_12_CbYCr YCbCr 4:4:4 10-bit packed BT.709  PixelFormat_YCbCr709_12_CbYCr YCbCr 4:4:4 12-bit unpacked BT.709  PixelFormat_YCbCr709_12p_CbYCr YCbCr 4:4:4 12-bit packed BT.709  PixelFormat_YCbCr709_411_8_CbYYCrYY YCbCr 4:1:1 8-bit BT.709		·
PixelFormat_YCbCr601_422_12_CbYCrY YCbCr 4:2:2 12-bit unpacked BT.601  PixelFormat_YCbCr601_422_12p YCbCr 4:2:2 12-bit packed BT.601  PixelFormat_YCbCr601_422_12p_CbYCrY YCbCr 4:2:2 12-bit packed BT.601  PixelFormat_YCbCr709_8_CbYCr YCbCr 4:4:4 8-bit BT.709  PixelFormat_YCbCr709_10_CbYCr YCbCr 4:4:4 10-bit unpacked BT.709  PixelFormat_YCbCr709_12_CbYCr YCbCr 4:4:4 10-bit packed BT.709  PixelFormat_YCbCr709_12_CbYCr YCbCr 4:4:4 12-bit unpacked BT.709  PixelFormat_YCbCr709_12p_CbYCr YCbCr 4:4:4 12-bit packed BT.709  PixelFormat_YCbCr709_411_8_CbYYCrYY YCbCr 4:1:1 8-bit BT.709		·
PixelFormat_YCbCr601_422_12p YCbCr 4:2:2 12-bit packed BT.601  PixelFormat_YCbCr601_422_12p_CbYCrY YCbCr 4:2:2 12-bit packed BT.601  PixelFormat_YCbCr709_8_CbYCr YCbCr 4:4:4 8-bit BT.709  PixelFormat_YCbCr709_10_CbYCr YCbCr 4:4:4 10-bit unpacked BT.709  PixelFormat_YCbCr709_12_CbYCr YCbCr 4:4:4 10-bit packed BT.709  PixelFormat_YCbCr709_12_CbYCr YCbCr 4:4:4 12-bit unpacked BT.709  PixelFormat_YCbCr709_12p_CbYCr YCbCr 4:4:4 12-bit packed BT.709  PixelFormat_YCbCr709_411_8_CbYYCrYY YCbCr 4:1:1 8-bit BT.709		•
PixelFormat_YCbCr601_422_12p_CbYCrY YCbCr 4:2:2 12-bit packed BT.601  PixelFormat_YCbCr709_8_CbYCr YCbCr 4:4:4 8-bit BT.709  PixelFormat_YCbCr709_10_CbYCr YCbCr 4:4:4 10-bit unpacked BT.709  PixelFormat_YCbCr709_10p_CbYCr YCbCr 4:4:4 10-bit packed BT.709  PixelFormat_YCbCr709_12_CbYCr YCbCr 4:4:4 12-bit unpacked BT.709  PixelFormat_YCbCr709_12p_CbYCr YCbCr 4:4:4 12-bit packed BT.709  PixelFormat_YCbCr709_411_8_CbYYCrYY YCbCr 4:1:1 8-bit BT.709		· · · · · · · · · · · · · · · · · · ·
PixelFormat_YCbCr709_8_CbYCr YCbCr 4:4:4 8-bit BT.709  PixelFormat_YCbCr709_10_CbYCr YCbCr 4:4:4 10-bit unpacked BT.709  PixelFormat_YCbCr709_10p_CbYCr YCbCr 4:4:4 10-bit packed BT.709  PixelFormat_YCbCr709_12_CbYCr YCbCr 4:4:4 12-bit unpacked BT.709  PixelFormat_YCbCr709_12p_CbYCr YCbCr 4:4:4 12-bit packed BT.709  PixelFormat_YCbCr709_411_8_CbYYCrYY YCbCr 4:1:1 8-bit BT.709		·
PixelFormat_YCbCr709_10_CbYCr YCbCr 4:4:4 10-bit unpacked BT.709  PixelFormat_YCbCr709_10p_CbYCr YCbCr 4:4:4 10-bit packed BT.709  PixelFormat_YCbCr709_12_CbYCr YCbCr 4:4:4 12-bit unpacked BT.709  PixelFormat_YCbCr709_12p_CbYCr YCbCr 4:4:4 12-bit packed BT.709  PixelFormat_YCbCr709_411_8_CbYYCrYY YCbCr 4:1:1 8-bit BT.709		·
PixelFormat_YCbCr709_10p_CbYCr YCbCr 4:4:4 10-bit packed BT.709  PixelFormat_YCbCr709_12_CbYCr YCbCr 4:4:4 12-bit unpacked BT.709  PixelFormat_YCbCr709_12p_CbYCr YCbCr 4:4:4 12-bit packed BT.709  PixelFormat_YCbCr709_411_8_CbYYCrYY YCbCr 4:1:1 8-bit BT.709		
PixelFormat_YCbCr709_12_CbYCr YCbCr 4:4:4 12-bit unpacked BT.709 PixelFormat_YCbCr709_12p_CbYCr YCbCr 4:4:4 12-bit packed BT.709 PixelFormat_YCbCr709_411_8_CbYYCrYY YCbCr 4:1:1 8-bit BT.709		
PixelFormat_YCbCr709_12p_CbYCr YCbCr 4:4:4 12-bit packed BT.709  PixelFormat_YCbCr709_411_8_CbYYCrYY YCbCr 4:1:1 8-bit BT.709		·
PixelFormat_YCbCr709_411_8_CbYYCrYY YCbCr 4:1:1 8-bit BT.709		-
		·
PixelFormat_YCbCr709_422_8   YCbCr 4:2:2 8-bit BT.709		
	PixelFormat_YCbCr709_422_8	YCbCr 4:2:2 8-bit BT.709

# Enumerator

PixelFormat_YCbCr709_422_8_CbYCrY	YCbCr 4:2:2 8-bit BT.709
PixelFormat_YCbCr709_422_10	YCbCr 4:2:2 10-bit unpacked BT.709
PixelFormat_YCbCr709_422_10_CbYCrY	YCbCr 4:2:2 10-bit unpacked BT.709
PixelFormat_YCbCr709_422_10p	YCbCr 4:2:2 10-bit packed BT.709
PixelFormat_YCbCr709_422_10p_CbYCrY	YCbCr 4:2:2 10-bit packed BT.709
PixelFormat_YCbCr709_422_12	YCbCr 4:2:2 12-bit unpacked BT.709
PixelFormat_YCbCr709_422_12_CbYCrY	YCbCr 4:2:2 12-bit unpacked BT.709
PixelFormat_YCbCr709_422_12p	YCbCr 4:2:2 12-bit packed BT.709
PixelFormat_YCbCr709_422_12p_CbYCrY	YCbCr 4:2:2 12-bit packed BT.709
PixelFormat_YUV8_UYV	YUV 4:4:4 8-bit
PixelFormat_YUV411_8_UYYVYY	YUV 4:1:1 8-bit
PixelFormat_YUV422_8	YUV 4:2:2 8-bit
PixelFormat_YUV422_8_UYVY	YUV 4:2:2 8-bit
PixelFormat_Polarized8	Monochrome Polarized 8-bit
PixelFormat_Polarized10p	Monochrome Polarized 10-bit packed
PixelFormat_Polarized12p	Monochrome Polarized 12-bit packed
PixelFormat_Polarized16	Monochrome Polarized 16-bit
PixelFormat_BayerRGPolarized8	Polarized Bayer Red Green filter 8-bit
PixelFormat_BayerRGPolarized10p	Polarized Bayer Red Green filter 10-bit packed
PixelFormat_BayerRGPolarized12p	Polarized Bayer Red Green filter 12-bit packed
PixelFormat_BayerRGPolarized16	Polarized Bayer Red Green filter 16-bit
PixelFormat_LLCMono8	Lossless Compression Monochrome 8-bit
PixelFormat_LLCBayerRG8	Lossless Compression Bayer Red Green filter 8-bit
PixelFormat_JPEGMono8	JPEG Monochrome 8-bit
PixelFormat_JPEGColor8	JPEG Color 8-bit
PixelFormat_Raw16	Raw 16 bit.
PixelFormat_Raw8	Raw bit.
PixelFormat_R12_Jpeg	Red 12-bit JPEG.
PixelFormat_GR12_Jpeg	Green Red 12-bit JPEG.
PixelFormat_GB12_Jpeg	Green Blue 12-bit JPEG.
PixelFormat_B12_Jpeg	Blue 12-bit packed JPEG.
UNKNOWN_PIXELFORMAT	
NUM_PIXELFORMAT	
<u> </u>	

# 11.2.2.128 spinPixelFormatInfoSelectorEnums

 $\verb"enum" spinPixelFormatInfoSelectorEnums"$ 

< Select the pixel format for which the information will be returned.

PixelFormatInfoSelector_Mono1p	Monochrome 1-bit packed
PixelFormatInfoSelector_Mono2p	Monochrome 2-bit packed
PixelFormatInfoSelector_Mono4p	Monochrome 4-bit packed

PixelFormatInfoSelector_Mono8	Monochrome 8-bit
PixelFormatInfoSelector_Mono8s	Monochrome 8-bit signed
PixelFormatInfoSelector_Mono10	Monochrome 10-bit unpacked
PixelFormatInfoSelector_Mono10p	Monochrome 10-bit packed
PixelFormatInfoSelector_Mono12	Monochrome 12-bit unpacked
PixelFormatInfoSelector_Mono12p	Monochrome 12-bit packed
PixelFormatInfoSelector_Mono14	Monochrome 14-bit unpacked
PixelFormatInfoSelector_Mono16	Monochrome 16-bit
PixelFormatInfoSelector_Mono16s	Monochrome 16-bit signed
PixelFormatInfoSelector_Mono32f	Monochrome 32-bit float
PixelFormatInfoSelector_BayerBG8	Bayer Blue-Green 8-bit
PixelFormatInfoSelector_BayerBG10	Bayer Blue-Green 10-bit unpacked
PixelFormatInfoSelector_BayerBG10p	Bayer Blue-Green 10-bit packed
PixelFormatInfoSelector_BayerBG12	Bayer Blue-Green 12-bit unpacked
PixelFormatInfoSelector_BayerBG12p	Bayer Blue-Green 12-bit packed
PixelFormatInfoSelector_BayerBG16	Bayer Blue-Green 16-bit
PixelFormatInfoSelector_BayerGB8	Bayer Green-Blue 8-bit
PixelFormatInfoSelector_BayerGB10	Bayer Green-Blue 10-bit unpacked
PixelFormatInfoSelector_BayerGB10p	Bayer Green-Blue 10-bit packed
PixelFormatInfoSelector_BayerGB12	Bayer Green-Blue 12-bit unpacked
PixelFormatInfoSelector_BayerGB12p	Bayer Green-Blue 12-bit packed
PixelFormatInfoSelector_BayerGB16	Bayer Green-Blue 16-bit
PixelFormatInfoSelector_BayerGR8	Bayer Green-Red 8-bit
PixelFormatInfoSelector_BayerGR10	Bayer Green-Red 10-bit unpacked
PixelFormatInfoSelector_BayerGR10p	Bayer Green-Red 10-bit packed
PixelFormatInfoSelector_BayerGR12	Bayer Green-Red 12-bit unpacked
PixelFormatInfoSelector_BayerGR12p	Bayer Green-Red 12-bit packed
PixelFormatInfoSelector_BayerGR16	Bayer Green-Red 16-bit
PixelFormatInfoSelector_BayerRG8	Bayer Red-Green 8-bit
PixelFormatInfoSelector_BayerRG10	Bayer Red-Green 10-bit unpacked
PixelFormatInfoSelector_BayerRG10p	Bayer Red-Green 10-bit packed
PixelFormatInfoSelector_BayerRG12	Bayer Red-Green 12-bit unpacked
PixelFormatInfoSelector_BayerRG12p	Bayer Red-Green 12-bit packed
PixelFormatInfoSelector_BayerRG16	Bayer Red-Green 16-bit
PixelFormatInfoSelector_RGBa8	Red-Green-Blue-alpha 8-bit
PixelFormatInfoSelector_RGBa10	Red-Green-Blue-alpha 10-bit unpacked
PixelFormatInfoSelector_RGBa10p	Red-Green-Blue-alpha 10-bit packed
PixelFormatInfoSelector_RGBa12	Red-Green-Blue-alpha 12-bit unpacked
PixelFormatInfoSelector_RGBa12p	Red-Green-Blue-alpha 12-bit packed
PixelFormatInfoSelector_RGBa14	Red-Green-Blue-alpha 14-bit unpacked
PixelFormatInfoSelector_RGBa16	Red-Green-Blue-alpha 16-bit
PixelFormatInfoSelector_RGB8	Red-Green-Blue 8-bit
PixelFormatInfoSelector_RGB8_Planar	Red-Green-Blue 8-bit planar
PixelFormatInfoSelector_RGB10	Red-Green-Blue 10-bit unpacked
PixelFormatInfoSelector_RGB10_Planar	Red-Green-Blue 10-bit unpacked planar
PixelFormatInfoSelector_RGB10p	Red-Green-Blue 10-bit packed
PixelFormatInfoSelector_RGB10p32	Red-Green-Blue 10-bit packed into 32-bit

PixelFormatInfoSelector_RGB12	Red-Green-Blue 12-bit unpacked
PixelFormatInfoSelector_RGB12_Planar	Red-Green-Blue 12-bit unpacked planar
PixelFormatInfoSelector_RGB12p	Red-Green-Blue 12-bit packed
PixelFormatInfoSelector_RGB14	Red-Green-Blue 14-bit unpacked
PixelFormatInfoSelector_RGB16	Red-Green-Blue 16-bit
PixelFormatInfoSelector_RGB16s	Red-Green-Blue 16-bit signed
PixelFormatInfoSelector_RGB32f	Red-Green-Blue 32-bit float
PixelFormatInfoSelector_RGB16_Planar	Red-Green-Blue 16-bit planar
PixelFormatInfoSelector_RGB565p	Red-Green-Blue 5/6/5-bit packed
PixelFormatInfoSelector_BGRa8	Blue-Green-Red-alpha 8-bit
PixelFormatInfoSelector_BGRa10	Blue-Green-Red-alpha 10-bit unpacked
PixelFormatInfoSelector_BGRa10p	Blue-Green-Red-alpha 10-bit packed
PixelFormatInfoSelector_BGRa12	Blue-Green-Red-alpha 12-bit unpacked
PixelFormatInfoSelector_BGRa12p	Blue-Green-Red-alpha 12-bit packed
PixelFormatInfoSelector_BGRa14	Blue-Green-Red-alpha 14-bit unpacked
PixelFormatInfoSelector_BGRa16	Blue-Green-Red-alpha 16-bit
PixelFormatInfoSelector_RGBa32f	Red-Green-Blue-alpha 32-bit float
PixelFormatInfoSelector_BGR8	Blue-Green-Red 8-bit
PixelFormatInfoSelector_BGR10	Blue-Green-Red 10-bit unpacked
PixelFormatInfoSelector_BGR10p	Blue-Green-Red 10-bit packed
PixelFormatInfoSelector_BGR12	Blue-Green-Red 12-bit unpacked
PixelFormatInfoSelector_BGR12p	Blue-Green-Red 12-bit packed
PixelFormatInfoSelector_BGR14	Blue-Green-Red 14-bit unpacked
PixelFormatInfoSelector_BGR16	Blue-Green-Red 16-bit
PixelFormatInfoSelector_BGR565p	Blue-Green-Red 5/6/5-bit packed
PixelFormatInfoSelector_R8	Red 8-bit
PixelFormatInfoSelector_R10	Red 10-bit
PixelFormatInfoSelector_R12	Red 12-bit
PixelFormatInfoSelector_R16	Red 16-bit
PixelFormatInfoSelector_G8	Green 8-bit
PixelFormatInfoSelector_G10	Green 10-bit
PixelFormatInfoSelector_G12	Green 12-bit
PixelFormatInfoSelector_G16	Green 16-bit
PixelFormatInfoSelector_B8	Blue 8-bit
PixelFormatInfoSelector_B10 PixelFormatInfoSelector_B12	Blue 10-bit
PixelFormatInfoSelector_B12	Blue 12-bit Blue 16-bit
PixelFormatInfoSelector Coord3D ABC8	3D coordinate A-B-C 8-bit
PixelFormatInfoSelector_Coord3D_ABC8_Planar	3D coordinate A-B-C 8-bit planar
PixelFormatInfoSelector_Coord3D_ABC10p	3D coordinate A-B-C 10-bit packed
PixelFormatInfoSelector_Coord3D_ABC10p_Planar	3D coordinate A-B-C 10-bit packed planar
PixelFormatInfoSelector_Coord3D_ABC12p	3D coordinate A-B-C 12-bit packed
PixelFormatInfoSelector Coord3D ABC12p Planar	3D coordinate A-B-C 12-bit packed planar
PixelFormatInfoSelector Coord3D ABC16	3D coordinate A-B-C 16-bit
PixelFormatInfoSelector_Coord3D_ABC16_Planar	3D coordinate A-B-C 16-bit planar
PixelFormatInfoSelector Coord3D ABC32f	3D coordinate A-B-C 32-bit floating point
PixelFormatInfoSelector_Coord3D_ABC32f_Planar	3D coordinate A-B-C 32-bit floating point planar
xo. omatimesolostol_cooldob_Nbooki_i landi	32 330 amato 71 2 3 62 bit noating point plana

PixelFormatInfoSelector Coord3D AC8	3D coordinate A-C 8-bit
PixelFormatInfoSelector_Coord3D_AC8_Planar	3D coordinate A-C 8-bit planar
PixelFormatInfoSelector_Coord3D_AC10p	3D coordinate A-C 10-bit packed
PixelFormatInfoSelector_Coord3D_AC10p_Planar	3D coordinate A-C 10-bit packed planar
PixelFormatInfoSelector Coord3D AC12p	3D coordinate A-C 12-bit packed
PixelFormatInfoSelector_Coord3D_AC12p_Planar	3D coordinate A-C 12-bit packed planar
PixelFormatInfoSelector Coord3D AC16	3D coordinate A-C 16-bit
PixelFormatInfoSelector_Coord3D_AC16_Planar	3D coordinate A-C 16-bit planar
PixelFormatInfoSelector_Coord3D_AC32f	3D coordinate A-C 32-bit floating point
PixelFormatInfoSelector_Coord3D_AC32f_Planar	3D coordinate A-C 32-bit floating point planar
PixelFormatInfoSelector_Coord3D_A8	3D coordinate A 8-bit
PixelFormatInfoSelector_Coord3D_A10p	3D coordinate A 10-bit packed
PixelFormatInfoSelector_Coord3D_A12p	3D coordinate A 12-bit packed
PixelFormatInfoSelector_Coord3D_A16	3D coordinate A 16-bit
PixelFormatInfoSelector_Coord3D_A32f	3D coordinate A 32-bit floating point
PixelFormatInfoSelector_Coord3D_B8	3D coordinate B 8-bit
PixelFormatInfoSelector_Coord3D_B10p	3D coordinate B 10-bit packed
PixelFormatInfoSelector_Coord3D_B12p	3D coordinate B 12-bit packed
PixelFormatInfoSelector_Coord3D_B16	3D coordinate B 16-bit
PixelFormatInfoSelector_Coord3D_B32f	3D coordinate B 32-bit floating point
PixelFormatInfoSelector_Coord3D_C8	3D coordinate C 8-bit
PixelFormatInfoSelector_Coord3D_C10p	3D coordinate C 10-bit packed
PixelFormatInfoSelector_Coord3D_C12p	3D coordinate C 12-bit packed
PixelFormatInfoSelector_Coord3D_C16	3D coordinate C 16-bit
PixelFormatInfoSelector_Coord3D_C32f	3D coordinate C 32-bit floating point
PixelFormatInfoSelector_Confidence1	Confidence 1-bit unpacked
PixelFormatInfoSelector_Confidence1p	Confidence 1-bit packed
PixelFormatInfoSelector_Confidence8	Confidence 8-bit
PixelFormatInfoSelector_Confidence16	Confidence 16-bit
PixelFormatInfoSelector_Confidence32f	Confidence 32-bit floating point
PixelFormatInfoSelector_BiColorBGRG8 PixelFormatInfoSelector_BiColorBGRG10	Bi-color Blue/Green - Red/Green 8-bit Bi-color Blue/Green - Red/Green 10-bit unpacked
PixelFormatInfoSelector_BiColorBGRG10p	Bi-color Blue/Green - Red/Green 10-bit packed
PixelFormatInfoSelector_BiColorBGRG12	Bi-color Blue/Green - Red/Green 12-bit unpacked
PixelFormatInfoSelector BiColorBGRG12p	Bi-color Blue/Green - Red/Green 12-bit packed
PixelFormatInfoSelector BiColorRGBG8	Bi-color Bide/Green - Blue/Green 8-bit
PixelFormatInfoSelector BiColorRGBG10	Bi-color Red/Green - Blue/Green 10-bit unpacked
PixelFormatInfoSelector BiColorRGBG10p	Bi-color Red/Green - Blue/Green 10-bit packed
PixelFormatInfoSelector_BiColorRGBG12	Bi-color Red/Green - Blue/Green 12-bit unpacked
PixelFormatInfoSelector_BiColorRGBG12p	Bi-color Red/Green - Blue/Green 12-bit packed
PixelFormatInfoSelector_SCF1WBWG8	Sparse Color Filter #1 White-Blue-White-Green 8-bit
PixelFormatInfoSelector_SCF1WBWG10	Sparse Color Filter #1 White-Blue-White-Green 10-bit unpacked
PixelFormatInfoSelector_SCF1WBWG10p	Sparse Color Filter #1 White-Blue-White-Green 10-bit packed
PixelFormatInfoSelector_SCF1WBWG12	Sparse Color Filter #1 White-Blue-White-Green 12-bit unpacked

1
Sparse Color Filter #1 White-Blue-White-Green 12-bit packed
Sparse Color Filter #1 White-Blue-White-Green 14-bit unpacked
Sparse Color Filter #1 White-Blue-White-Green 16-bit unpacked
Sparse Color Filter #1 White-Green-White-Blue 8-bit
Sparse Color Filter #1 White-Green-White-Blue 10-bit unpacked
Sparse Color Filter #1 White-Green-White-Blue 10-bit packed
Sparse Color Filter #1 White-Green-White-Blue 12-bit unpacked
Sparse Color Filter #1 White-Green-White-Blue 12-bit packed
Sparse Color Filter #1 White-Green-White-Blue 14-bit unpacked
Sparse Color Filter #1 White-Green-White-Blue 16-bit
Sparse Color Filter #1 White-Green-White-Red 8-bit
Sparse Color Filter #1 White-Green-White-Red 10-bit unpacked
Sparse Color Filter #1 White-Green-White-Red 10-bit packed
Sparse Color Filter #1 White-Green-White-Red 12-bit unpacked
Sparse Color Filter #1 White-Green-White-Red 12-bit packed
Sparse Color Filter #1 White-Green-White-Red 14-bit unpacked
Sparse Color Filter #1 White-Green-White-Red 16-bit
Sparse Color Filter #1 White-Red-White-Green 8-bit
Sparse Color Filter #1 White-Red-White-Green 10-bit unpacked
Sparse Color Filter #1 White-Red-White-Green 10-bit packed
Sparse Color Filter #1 White-Red-White-Green 12-bit unpacked
Sparse Color Filter #1 White-Red-White-Green 12-bit packed
Sparse Color Filter #1 White-Red-White-Green 14-bit unpacked
Sparse Color Filter #1 White-Red-White-Green 16-bit
YCbCr 4:4:4 8-bit
YCbCr 4:4:4 8-bit
YCbCr 4:4:4 10-bit unpacked
YCbCr 4:4:4 10-bit packed
YCbCr 4:4:4 12-bit unpacked
YCbCr 4:4:4 12-bit packed
YCbCr 4:1:1 8-bit
YCbCr 4:1:1 8-bit

PixelFormatInfoSelector_YCbCr422_8	YCbCr 4:2:2 8-bit
PixelFormatInfoSelector_YCbCr422_8_CbYCrY	YCbCr 4:2:2 8-bit
PixelFormatInfoSelector_YCbCr422_10	YCbCr 4:2:2 10-bit unpacked
PixelFormatInfoSelector_YCbCr422_10_CbYCrY	YCbCr 4:2:2 10-bit unpacked
PixelFormatInfoSelector_YCbCr422_10p	YCbCr 4:2:2 10-bit packed
PixelFormatInfoSelector_YCbCr422_10p_CbYCrY	YCbCr 4:2:2 10-bit packed
PixelFormatInfoSelector_YCbCr422_12	YCbCr 4:2:2 12-bit unpacked
PixelFormatInfoSelector_YCbCr422_12_CbYCrY	YCbCr 4:2:2 12-bit unpacked
PixelFormatInfoSelector_YCbCr422_12p	YCbCr 4:2:2 12-bit packed
PixelFormatInfoSelector_YCbCr422_12p_CbYCrY	YCbCr 4:2:2 12-bit packed
PixelFormatInfoSelector_YCbCr601_8_CbYCr	YCbCr 4:4:4 8-bit BT.601
PixelFormatInfoSelector_YCbCr601_10_CbYCr	YCbCr 4:4:4 10-bit unpacked BT.601
PixelFormatInfoSelector_YCbCr601_10p_CbYCr	YCbCr 4:4:4 10-bit packed BT.601
PixelFormatInfoSelector_YCbCr601_12_CbYCr	YCbCr 4:4:4 12-bit unpacked BT.601
PixelFormatInfoSelector_YCbCr601_12p_CbYCr	YCbCr 4:4:4 12-bit packed BT.601
PixelFormatInfoSelector_YCbCr601_411_8_CbYY← CrYY	YCbCr 4:1:1 8-bit BT.601
PixelFormatInfoSelector_YCbCr601_422_8	YCbCr 4:2:2 8-bit BT.601
PixelFormatInfoSelector_YCbCr601_422_8_CbYCrY	YCbCr 4:2:2 8-bit BT.601
PixelFormatInfoSelector_YCbCr601_422_10	YCbCr 4:2:2 10-bit unpacked BT.601
PixelFormatInfoSelector_YCbCr601_422_10_CbY← CrY	YCbCr 4:2:2 10-bit unpacked BT.601
PixelFormatInfoSelector_YCbCr601_422_10p	YCbCr 4:2:2 10-bit packed BT.601
PixelFormatInfoSelector_YCbCr601_422_10p_Cb↔ YCrY	YCbCr 4:2:2 10-bit packed BT.601
PixelFormatInfoSelector_YCbCr601_422_12	YCbCr 4:2:2 12-bit unpacked BT.601
PixelFormatInfoSelector_YCbCr601_422_12_CbY← CrY	YCbCr 4:2:2 12-bit unpacked BT.601
PixelFormatInfoSelector_YCbCr601_422_12p	YCbCr 4:2:2 12-bit packed BT.601
PixelFormatInfoSelector_YCbCr601_422_12p_Cb↔ YCrY	YCbCr 4:2:2 12-bit packed BT.601
PixelFormatInfoSelector_YCbCr709_8_CbYCr	YCbCr 4:4:4 8-bit BT.709
PixelFormatInfoSelector_YCbCr709_10_CbYCr	YCbCr 4:4:4 10-bit unpacked BT.709
PixelFormatInfoSelector_YCbCr709_10p_CbYCr	YCbCr 4:4:4 10-bit packed BT.709
PixelFormatInfoSelector_YCbCr709_12_CbYCr	YCbCr 4:4:4 12-bit unpacked BT.709
PixelFormatInfoSelector_YCbCr709_12p_CbYCr	YCbCr 4:4:4 12-bit packed BT.709
PixelFormatInfoSelector_YCbCr709_411_8_CbYY← CrYY	YCbCr 4:1:1 8-bit BT.709
PixelFormatInfoSelector_YCbCr709_422_8	YCbCr 4:2:2 8-bit BT.709
PixelFormatInfoSelector_YCbCr709_422_8_CbYCrY	YCbCr 4:2:2 8-bit BT.709
PixelFormatInfoSelector_YCbCr709_422_10	YCbCr 4:2:2 10-bit unpacked BT.709
PixelFormatInfoSelector_YCbCr709_422_10_CbY← CrY	YCbCr 4:2:2 10-bit unpacked BT.709
PixelFormatInfoSelector_YCbCr709_422_10p	YCbCr 4:2:2 10-bit packed BT.709
PixelFormatInfoSelector_YCbCr709_422_10p_Cb↔ YCrY	YCbCr 4:2:2 10-bit packed BT.709
PixelFormatInfoSelector_YCbCr709_422_12	YCbCr 4:2:2 12-bit unpacked BT.709
PixelFormatInfoSelector_YCbCr709_422_12_CbY← CrY	YCbCr 4:2:2 12-bit unpacked BT.709

# Enumerator

PixelFormatInfoSelector_YCbCr709_422_12p	YCbCr 4:2:2 12-bit packed BT.709
PixelFormatInfoSelector_YCbCr709_422_12p_Cb←	YCbCr 4:2:2 12-bit packed BT.709
YCrY	
PixelFormatInfoSelector_YUV8_UYV	YUV 4:4:4 8-bit
PixelFormatInfoSelector_YUV411_8_UYYVYY	YUV 4:1:1 8-bit
PixelFormatInfoSelector_YUV422_8	YUV 4:2:2 8-bit
PixelFormatInfoSelector_YUV422_8_UYVY	YUV 4:2:2 8-bit
PixelFormatInfoSelector_Polarized8	Monochrome Polarized 8-bit
PixelFormatInfoSelector_Polarized10p	Monochrome Polarized 10-bit packed
PixelFormatInfoSelector_Polarized12p	Monochrome Polarized 12-bit packed
PixelFormatInfoSelector_Polarized16	Monochrome Polarized 16-bit
PixelFormatInfoSelector_BayerRGPolarized8	Polarized Bayer Red Green filter 8-bit
PixelFormatInfoSelector_BayerRGPolarized10p	Polarized Bayer Red Green filter 10-bit packed
PixelFormatInfoSelector_BayerRGPolarized12p	Polarized Bayer Red Green filter 12-bit packed
PixelFormatInfoSelector_BayerRGPolarized16	Polarized Bayer Red Green filter 16-bit
PixelFormatInfoSelector_LLCMono8	Lossless Compression Monochrome 8-bit
PixelFormatInfoSelector_LLCBayerRG8	Lossless Compression Bayer Red Green filter 8-bit
PixelFormatInfoSelector_JPEGMono8	JPEG Monochrome 8-bit
PixelFormatInfoSelector_JPEGColor8	JPEG Color 8-bit
NUM_PIXELFORMATINFOSELECTOR	

# 11.2.2.129 spinPixelSizeEnums

enum spinPixelSizeEnums

< Total size in bits of a pixel of the image.

## Enumerator

PixelSize_Bpp1	1 bit per pixel.
PixelSize_Bpp2	2 bits per pixel.
PixelSize_Bpp4	4 bits per pixel.
PixelSize_Bpp8	8 bits per pixel.
PixelSize_Bpp10	10 bits per pixel.
PixelSize_Bpp12	12 bits per pixel.
PixelSize_Bpp14	14 bits per pixel.
PixelSize_Bpp16	16 bits per pixel.
PixelSize_Bpp20	20 bits per pixel.
PixelSize_Bpp24	24 bits per pixel.
PixelSize_Bpp30	30 bits per pixel.
PixelSize_Bpp32	32 bits per pixel.
PixelSize_Bpp36	36 bits per pixel.
PixelSize_Bpp48	48 bits per pixel.
PixelSize_Bpp64	64 bits per pixel.
PixelSize_Bpp96	96 bits per pixel.
NUM_PIXELSIZE	

Generated by Doxygen

#### 11.2.2.130 spinRegionDestinationEnums

enum spinRegionDestinationEnums

< Control the destination of the selected region.

#### Enumerator

RegionDestination_Stream0	The destination of the region is the data stream 0.
RegionDestination_Stream1	The destination of the region is the data stream 1.
RegionDestination_Stream2	The destination of the region is the data stream 2.
NUM_REGIONDESTINATION	

# 11.2.2.131 spinRegionModeEnums

enum spinRegionModeEnums

< Controls if the selected Region of interest is active and streaming.

## Enumerator

RegionMode_Off	Disable the usage of the Region.
RegionMode_On	Enable the usage of the Region.
NUM_REGIONMODE	

# 11.2.2.132 spinRegionSelectorEnums

 $\verb"enum" spinRegionSelectorEnums"$ 

< Selects the Region of interest to control. The RegionSelector feature allows devices that are able to extract multiple regions out of an image, to configure the features of those individual regions independently.

RegionSelector_Region0	Selected feature will control the region 0.
RegionSelector_Region1	Selected feature will control the region 1.
RegionSelector_Region2	Selected feature will control the region 2.
RegionSelector_All	Selected features will control all the regions at the same time.
NUM_REGIONSELECTOR	

## 11.2.2.133 spinRgbTransformLightSourceEnums

 ${\tt enum} \ spinRgbTransformLightSourceEnums$ 

< Used to select from a set of RGBtoRGB transform matricies calibrated for different light sources. Selecting a value also sets the white balance ratios (BalanceRatioRed and BalanceRatioBlue), but those can be overwritten through manual or auto white balance.

#### Enumerator

RgbTransformLightSource_General	Uses a matrix calibrated for a wide range of light sources.
RgbTransformLightSource_Tungsten2800K	Uses a matrix optimized for tungsten/incandescent light with color temperature 2800K.
RgbTransformLightSource_WarmFluorescent3000K	Uses a matrix optimized for a typical warm fluoresecent light with color temperature 3000K.
RgbTransformLightSource_CoolFluorescent4000K	Uses a matrix optimized for a typical cool fluoresecent light with color temperature 4000K.
RgbTransformLightSource_Daylight5000K	Uses a matrix optimized for noon Daylight with color temperature 5000K.
RgbTransformLightSource_Cloudy6500K	Uses a matrix optimized for a cloudy sky with color temperature 6500K.
RgbTransformLightSource_Shade8000K	Uses a matrix optimized for shade with color temperature 8000K.
RgbTransformLightSource_Custom	Uses a custom matrix set by the user through the ColorTransformationValueSelector and ColorTransformationValue controls.
NUM_RGBTRANSFORMLIGHTSOURCE	

## 11.2.2.134 spinScan3dCoordinateReferenceSelectorEnums

 $\verb"enum" spinScan3dCoordinateReferenceSelectorEnums"$ 

< Sets the index to read a coordinate system reference value defining the transform of a point from the current (Anchor or Transformed) system to the reference system.

Scan3dCoordinateReferenceSelector_RotationX	Rotation around X axis.
Scan3dCoordinateReferenceSelector_RotationY	Rotation around Y axis.
Scan3dCoordinateReferenceSelector_RotationZ	Rotation around Z axis.
Scan3dCoordinateReferenceSelector_TranslationX	X axis translation.
Scan3dCoordinateReferenceSelector_TranslationY Y axis translation.	
Scan3dCoordinateReferenceSelector_TranslationZ	Z axis translation.
NUM_SCAN3DCOORDINATEREFERENCESELECTOR	

## 11.2.2.135 spinScan3dCoordinateSelectorEnums

 $\verb"enum spinScan3dCoordinateSelectorEnums"$ 

< Selects the individual coordinates in the vectors for 3D information/transformation.

#### Enumerator

Scan3dCoordinateSelector_CoordinateA	The first (X or Theta) coordinate
Scan3dCoordinateSelector_CoordinateB	The second (Y or Phi) coordinate
Scan3dCoordinateSelector_CoordinateC	The third (Z or Rho) coordinate.
NUM_SCAN3DCOORDINATESELECTOR	

# 11.2.2.136 spinScan3dCoordinateSystemEnums

enum spinScan3dCoordinateSystemEnums

< Specifies the Coordinate system to use for the device.

#### Enumerator

Scan3dCoordinateSystem_Cartesian	Default value. 3-axis orthogonal, right-hand X-Y-Z.
Scan3dCoordinateSystem_Spherical	A Theta-Phi-Rho coordinate system.
Scan3dCoordinateSystem_Cylindrical	A Theta-Y-Rho coordinate system.
NUM_SCAN3DCOORDINATESYSTEM	

## 11.2.2.137 spinScan3dCoordinateSystemReferenceEnums

enum spinScan3dCoordinateSystemReferenceEnums

< Defines coordinate system reference location.

Scan3dCoordinateSystemReference_Anchor	Default value. Original fixed reference. The coordinate system fixed relative the camera reference point marker is used.
Scan3dCoordinateSystemReference_Transformed	Transformed reference system. The transformed coordinate system is used according to the definition in the rotation and translation matrices.
NUM_SCAN3DCOORDINATESYSTEMREFERENCE	

## 11.2.2.138 spinScan3dCoordinateTransformSelectorEnums

 $\verb"enum" spinScan3dCoordinateTransformSelectorEnums"$ 

< Sets the index to read/write a coordinate transform value.

#### Enumerator

Scan3dCoordinateTransformSelector_RotationX	Rotation around X axis.
Scan3dCoordinateTransformSelector_RotationY	Rotation around Y axis.
Scan3dCoordinateTransformSelector_RotationZ	Rotation around Z axis.
Scan3dCoordinateTransformSelector_TranslationX	Translation along X axis.
Scan3dCoordinateTransformSelector_TranslationY	Translation along Y axis.
Scan3dCoordinateTransformSelector_TranslationZ	Translation along Z axis.
NUM_SCAN3DCOORDINATETRANSFORMSELECTOR	

# 11.2.2.139 spinScan3dDistanceUnitEnums

enum spinScan3dDistanceUnitEnums

< Specifies the unit used when delivering calibrated distance data.

## Enumerator

Scan3dDistanceUnit_Millimeter	Distance values are in millimeter units (default).
Scan3dDistanceUnit_Inch	Distance values are in inch units.
NUM COMMODULATION	
NUM_SCAN3DDISTANCEUNIT	

# 11.2.2.140 spinScan3dOutputModeEnums

enum spinScan3dOutputModeEnums

< Controls the Calibration and data organization of the device, naming the coordinates transmitted.

Scan3dOutputMode_UncalibratedC	Uncalibrated 2.5D Depth map. The distance data does not represent a physical unit and may be non-linear. The data is a 2.5D range map only.
Scan3dOutputMode_CalibratedABC_Grid	3 Coordinates in grid organization. The full 3 coordinate data with the grid array organization from the sensor kept.
Scan3dOutputMode_CalibratedABC_PointCloud	3 Coordinates without organization. The full 3 coordinate data without any organization of data points. Typically only valid points transmitted giving varying image size.

# Enumerator

Scan3dOutputMode_CalibratedAC	2 Coordinates with fixed B sampling. The data is sent as a A and C coordinates (X,Z or Theta,Rho). The B (Y) axis uses the scale and offset parameters for the B axis.	
Scan3dOutputMode_CalibratedAC_Linescan	2 Coordinates with varying sampling. The data is sent as a A and C coordinates (X,Z or Theta,Rho). The B (Y) axis comes from the encoder chunk value.	
Scan3dOutputMode_CalibratedC	Calibrated 2.5D Depth map. The distance data is expressed in the chosen distance unit. The data is a 2.5D range map. No information on X-Y axes available.	
Scan3dOutputMode_CalibratedC_Linescan	Depth Map with varying B sampling. The distance data is expressed in the chosen distance unit. The data is a 2.5D range map. The B (Y) axis comes from the encoder chunk value.	
Scan3dOutputMode_RectifiedC	Rectified 2.5D Depth map. The distance data has been rectified to a uniform sampling pattern in the X and Y direction. The data is a 2.5D range map only. If a complete 3D point cloud is rectified but transmitted as explicit coordinates it should be transmitted as one of the "CalibratedABC" formats.	
Scan3dOutputMode_RectifiedC_Linescan	Rectified 2.5D Depth map with varying B sampling. The data is sent as rectified 1D profiles using Coord3D_C pixels. The B (Y) axis comes from the encoder chunk value.	
Scan3dOutputMode_DisparityC	Disparity 2.5D Depth map. The distance is inversely proportional to the pixel (disparity) value.	
Scan3dOutputMode_DisparityC_Linescan	Disparity 2.5D Depth map with varying B sampling. The distance is inversely proportional to the pixel (disparity) value. The B (Y) axis comes from the encoder chunk value.	
NUM_SCAN3DOUTPUTMODE		

# 11.2.2.141 spinSensorDigitizationTapsEnums

enum spinSensorDigitizationTapsEnums

< Number of digitized samples outputted simultaneously by the camera A/D conversion stage.

SensorDigitizationTaps_One	1 tap.
SensorDigitizationTaps_Two	2 taps.
SensorDigitizationTaps_Three	3 taps.
SensorDigitizationTaps_Four	4 taps.
SensorDigitizationTaps_Eight	8 taps.
SensorDigitizationTaps_Ten	10 taps.
NUM_SENSORDIGITIZATIONTAPS	

### 11.2.2.142 spinSensorShutterModeEnums

 $\verb"enum" spinSensorShutterModeEnums"$ 

< Sets the shutter mode of the device.

### Enumerator

SensorShutterMode_Global	The shutter opens and closes at the same time for all pixels. All the pixels are exposed for the same length of time at the same time.
SensorShutterMode_Rolling	The shutter opens and closes sequentially for groups (typically lines) of pixels. All the pixels are exposed for the same length of time but not at the same time.
SensorShutterMode_GlobalReset	The shutter opens at the same time for all pixels but ends in a sequential manner. The pixels are exposed for different lengths of time.
NUM_SENSORSHUTTERMODE	

### 11.2.2.143 spinSensorTapsEnums

enum spinSensorTapsEnums

< Number of taps of the camera sensor.

#### Enumerator

SensorTaps_One	1 tap.
SensorTaps_Two	2 taps.
SensorTaps_Three	3 taps.
SensorTaps_Four	4 taps.
SensorTaps_Eight	8 taps.
SensorTaps_Ten	10 taps.
NUM_SENSORTAPS	

# 11.2.2.144 spinSequencerConfigurationModeEnums

 $\verb"enum" spinSequencerConfigurationModeEnums"$ 

< Controls whether or not a sequencer is in configuration mode.

SequencerConfigurationMode_Off	
SequencerConfigurationMode_On	
NUM SEQUENCERCONFIGURATIONMODE	

### 11.2.2.145 spinSequencerConfigurationValidEnums

 $\verb"enum" spinSequencerConfigurationValidEnums"$ 

< Display whether the current sequencer configuration is valid to run.

#### Enumerator

SequencerConfigurationValid_No	
SequencerConfigurationValid_Yes	
NUM_SEQUENCERCONFIGURATIONVALID	

## 11.2.2.146 spinSequencerModeEnums

enum spinSequencerModeEnums

< Controls whether or not a sequencer is active.

#### Enumerator

SequencerMode_Off	
SequencerMode_On	
NUM_SEQUENCERMODE	

## 11.2.2.147 spinSequencerSetValidEnums

enum spinSequencerSetValidEnums

< Displays whether the currently selected sequencer set's register contents are valid to use.

#### Enumerator

SequencerSetValid_No	
SequencerSetValid_Yes	
NUM_SEQUENCERSETVALID	

### 11.2.2.148 spinSequencerTriggerActivationEnums

 $\verb"enum" spinSequencerTriggerActivationEnums"$ 

< Specifies the activation mode of the sequencer trigger.

#### Enumerator

SequencerTriggerActivation_RisingEdge	
SequencerTriggerActivation_FallingEdge	
SequencerTriggerActivation_AnyEdge	
SequencerTriggerActivation_LevelHigh	
SequencerTriggerActivation_LevelLow	
NUM_SEQUENCERTRIGGERACTIVATION	

## 11.2.2.149 spinSequencerTriggerSourceEnums

enum spinSequencerTriggerSourceEnums

< Specifies the internal signal or physical input line to use as the sequencer trigger source.

#### Enumerator

SequencerTriggerSource_Off	
SequencerTriggerSource_FrameStart	
NUM_SEQUENCERTRIGGERSOURCE	

### 11.2.2.150 spinSerialPortBaudRateEnums

 $\verb"enum spinSerialPortBaudRateEnums"$ 

< This feature controls the baud rate used by the selected serial port.

#### Enumerator

SerialPortBaudRate_Baud300	
SerialPortBaudRate_Baud600	
SerialPortBaudRate_Baud1200	
SerialPortBaudRate_Baud2400	
SerialPortBaudRate_Baud4800	
SerialPortBaudRate_Baud9600	
SerialPortBaudRate_Baud14400	
SerialPortBaudRate_Baud19200	
SerialPortBaudRate_Baud38400	
SerialPortBaudRate_Baud57600	
SerialPortBaudRate_Baud115200	
SerialPortBaudRate_Baud230400	
SerialPortBaudRate_Baud460800	
SerialPortBaudRate_Baud921600	
NUM_SERIALPORTBAUDRATE	

Generated by Doxygen

## 11.2.2.151 spinSerialPortParityEnums

enum spinSerialPortParityEnums

< This feature controls the parity used by the selected serial port.

### Enumerator

SerialPortParity_None	
SerialPortParity_Odd	
SerialPortParity_Even	
SerialPortParity_Mark	
SerialPortParity_Space	
NUM_SERIALPORTPARITY	

# 11.2.2.152 spinSerialPortSelectorEnums

 $\verb"enum spinSerialPortSelectorEnums"$ 

< Selects which serial port of the device to control.

#### Enumerator

SerialPortSelector_SerialPort0	
NUM_SERIALPORTSELECTOR	

## 11.2.2.153 spinSerialPortSourceEnums

 $\verb"enum spinSerialPortSourceEnums"$ 

< Specifies the physical input Line on which to receive serial data.

SerialPortSource_Line0	
SerialPortSource_Line1	
SerialPortSource_Line2	
SerialPortSource_Line3	
SerialPortSource_Off	
NUM_SERIALPORTSOURCE	

## 11.2.2.154 spinSerialPortStopBitsEnums

enum spinSerialPortStopBitsEnums

< This feature controls the number of stop bits used by the selected serial port.

### Enumerator

SerialPortStopBits_Bits1	
SerialPortStopBits_Bits1AndAHalf	
SerialPortStopBits_Bits2	
NUM_SERIALPORTSTOPBITS	

# 11.2.2.155 spinSoftwareSignalSelectorEnums

enum spinSoftwareSignalSelectorEnums

< Selects which Software Signal features to control.

### Enumerator

SoftwareSignalSelector_SoftwareSignal0	Selects the software generated signal to control.
SoftwareSignalSelector_SoftwareSignal1	Selects the software generated signal to control.
SoftwareSignalSelector_SoftwareSignal2	Selects the software generated signal to control.
NUM_SOFTWARESIGNALSELECTOR	

## 11.2.2.156 spinSourceSelectorEnums

enum spinSourceSelectorEnums

< Selects the source to control.

SourceSelector_Source0	Selects the data source 0.
SourceSelector_Source1	Selects the data source 1.
SourceSelector_Source2	Selects the data source 2.
SourceSelector_All	Selects all the data sources.
NUM_SOURCESELECTOR	

### 11.2.2.157 spinTestPatternEnums

 $\verb"enum spinTestPatternEnums"$ 

< Selects the type of test pattern that is generated by the device as image source.

#### Enumerator

TestPattern_Off	Test pattern is disabled.
TestPattern_Increment	Pixel value increments by 1 for each pixel.
TestPattern_SensorTestPattern	A test pattern generated by the image sensor. The pattern varies for different sensor models.
NUM_TESTPATTERN	

### 11.2.2.158 spinTestPatternGeneratorSelectorEnums

enum spinTestPatternGeneratorSelectorEnums

< Selects which test pattern generator is controlled by the TestPattern feature.

#### Enumerator

TestPatternGeneratorSelector_Sensor	TestPattern feature controls the sensor's test pattern generator.
TestPatternGeneratorSelector_PipelineStart	TestPattern feature controls the test pattern inserted at the start of the image pipeline.
NUM_TESTPATTERNGENERATORSELECTOR	

# 11.2.2.159 spinTimerSelectorEnums

enum spinTimerSelectorEnums

< Selects which Timer to configure.

TimerSelector_Timer0	Selects the Timer 0.
TimerSelector_Timer1	Selects the Timer 1.
TimerSelector_Timer2	Selects the Timer 2.
NUM_TIMERSELECTOR	

### 11.2.2.160 spinTimerStatusEnums

 $\verb"enum spinTimerStatusEnums"$ 

< Returns the current status of the Timer.

### Enumerator

TimerStatus_TimerIdle	The Timer is idle.
TimerStatus_TimerTriggerWait	The Timer is waiting for a start trigger.
TimerStatus_TimerActive	The Timer is counting for the specified duration.
TimerStatus_TimerCompleted	The Timer reached the TimerDuration count.
NUM_TIMERSTATUS	

## 11.2.2.161 spinTimerTriggerActivationEnums

 $\verb"enum" spinTimerTriggerActivationEnums"$ 

< Selects the activation mode of the trigger to start the Timer.

#### Enumerator

TimerTriggerActivation_RisingEdge	Starts counting on the Rising Edge of the selected trigger signal.
TimerTriggerActivation_FallingEdge	Starts counting on the Falling Edge of the selected trigger signal.
TimerTriggerActivation_AnyEdge	Starts counting on the Falling or Rising Edge of the selected trigger signal.
TimerTriggerActivation_LevelHigh	Counts as long as the selected trigger signal level is High.
TimerTriggerActivation_LevelLow	Counts as long as the selected trigger signal level is Low.
NUM_TIMERTRIGGERACTIVATION	

### 11.2.2.162 spinTimerTriggerSourceEnums

 $\verb"enum" spinTimerTriggerSourceEnums"$ 

< Selects the source of the trigger to start the Timer.

TimerTriggerSource_Off	Disables the Timer trigger.
TimerTriggerSource_AcquisitionTrigger	Starts with the reception of the Acquisition Trigger.
TimerTriggerSource_AcquisitionStart	Starts with the reception of the Acquisition Start.
TimerTriggerSource_AcquisitionEnd	Starts with the reception of the Acquisition End.
TimerTriggerSource_FrameTrigger	Starts with the reception of the Frame Start Trigger.
TimerTriggerSource_FrameStart	Starts with the reception of the Frame Start.

TimerTriggerSource_FrameEnd	Starts with the reception of the Frame End.
TimerTriggerSource_FrameBurstStart	Starts with the reception of the Frame Burst Start.
TimerTriggerSource_FrameBurstEnd	Starts with the reception of the Frame Burst End.
TimerTriggerSource_LineTrigger	Starts with the reception of the Line Start Trigger.
TimerTriggerSource_LineStart	Starts with the reception of the Line Start.
TimerTriggerSource_LineEnd	Starts with the reception of the Line End.
TimerTriggerSource_ExposureStart	Starts with the reception of the Exposure Start.
TimerTriggerSource_ExposureEnd	Starts with the reception of the Exposure End.
TimerTriggerSource_Line0	Starts when the specidfied TimerTriggerActivation condition is met on the chosen I/O Line.
TimerTriggerSource_Line1	Starts when the specidfied TimerTriggerActivation condition is met on the chosen I/O Line.
TimerTriggerSource_Line2	Starts when the specidfied TimerTriggerActivation condition is met on the chosen I/O Line.
TimerTriggerSource_UserOutput0	Specifies which User Output bit signal to use as internal source for the trigger.
TimerTriggerSource_UserOutput1	Specifies which User Output bit signal to use as internal source for the trigger.
TimerTriggerSource_UserOutput2	Specifies which User Output bit signal to use as internal source for the trigger.
TimerTriggerSource_Counter0Start	Starts with the reception of the Counter Start.
TimerTriggerSource_Counter1Start	Starts with the reception of the Counter Start.
TimerTriggerSource_Counter2Start	Starts with the reception of the Counter Start.
TimerTriggerSource_Counter0End	Starts with the reception of the Counter End.
TimerTriggerSource_Counter1End	Starts with the reception of the Counter End.
TimerTriggerSource_Counter2End	Starts with the reception of the Counter End.
TimerTriggerSource_Timer0Start	Starts with the reception of the Timer Start.
TimerTriggerSource_Timer1Start	Starts with the reception of the Timer Start.
TimerTriggerSource_Timer2Start	Starts with the reception of the Timer Start.
TimerTriggerSource_Timer0End	Starts with the reception of the Timer End. Note that a timer can retrigger itself to achieve a free running Timer.
TimerTriggerSource_Timer1End	Starts with the reception of the Timer End. Note that a timer can retrigger itself to achieve a free running Timer.
TimerTriggerSource_Timer2End	Starts with the reception of the Timer End. Note that a timer can retrigger itself to achieve a free running Timer.
TimerTriggerSource_Encoder0	Starts with the reception of the Encoder output signal.
TimerTriggerSource_Encoder1	Starts with the reception of the Encoder output signal.
TimerTriggerSource_Encoder2	Starts with the reception of the Encoder output signal.
TimerTriggerSource_SoftwareSignal0	Starts on the reception of the Software Signal.
TimerTriggerSource_SoftwareSignal1	Starts on the reception of the Software Signal.
	Starts on the reception of the Software Signal.
TimerTriggerSource_SoftwareSignal2	Starts on the reception of the Software Signal.
TimerTriggerSource_SoftwareSignal2 TimerTriggerSource_Action0	Starts with the assertion of the chosen action signal.
	, ,
TimerTriggerSource_Action0	Starts with the assertion of the chosen action signal.
TimerTriggerSource_Action0 TimerTriggerSource_Action1	Starts with the assertion of the chosen action signal.  Starts with the assertion of the chosen action signal.
TimerTriggerSource_Action0 TimerTriggerSource_Action1 TimerTriggerSource_Action2	Starts with the assertion of the chosen action signal.  Starts with the assertion of the chosen action signal.  Starts with the assertion of the chosen action signal.
TimerTriggerSource_Action0 TimerTriggerSource_Action1 TimerTriggerSource_Action2 TimerTriggerSource_LinkTrigger0	Starts with the assertion of the chosen action signal.  Starts with the assertion of the chosen action signal.  Starts with the assertion of the chosen action signal.  Starts with the reception of the chosen Link Trigger.

#### 11.2.2.163 spinTransferComponentSelectorEnums

 $\verb"enum" spinTransferComponentSelectorEnums"$ 

< Selects the color component for the control of the TransferStreamChannel feature.

#### Enumerator

TransferComponentSelector_Red	The TransferStreamChannel feature controls the index of the stream channel for the streaming of the red plane of the planar pixel formats.
TransferComponentSelector_Green	The TransferStreamChannel feature controls the index of the stream channel for the streaming of the green plane of the planar pixel formats.
TransferComponentSelector_Blue	The TransferStreamChannel feature controls the index of the stream channel for the streaming of blue plane of the planar pixel formats.
TransferComponentSelector_All	The TransferStreamChannel feature controls the index of the stream channel for the streaming of all the planes of the planar pixel formats simultaneously or non planar pixel formats.
NUM_TRANSFERCOMPONENTSELECTOR	

### 11.2.2.164 spinTransferControlModeEnums

 $\verb"enum" spinTransferControlModeEnums"$ 

< Selects the control method for the transfers. Basic and Automatic start transmitting data as soon as there is enough data to fill a link layer packet. User Controlled allows you to directly control the transfer of blocks.

## Enumerator

TransferControlMode_Basic	Basic
TransferControlMode_Automatic	Automatic
TransferControlMode_UserControlled	User Controlled
NUM_TRANSFERCONTROLMODE	

### 11.2.2.165 spinTransferOperationModeEnums

enum spinTransferOperationModeEnums

< Selects the operation mode of the transfer. Continuous is similar to Basic/Automatic but you can start/stop the transfer while acquisition runs independently. Multi Block transmits a specified number of blocks and then stops.

### Enumerator

TransferOperationMode_Continuous	Continuous
TransferOperationMode_MultiBlock	Multi Block
NUM_TRANSFEROPERATIONMODE	

## 11.2.2.166 spinTransferQueueModeEnums

enum spinTransferQueueModeEnums

< Specifies the operation mode of the transfer queue.

### Enumerator

ſ	TransferQueueMode_FirstInFirstOut	Blocks first In are transferred Out first.
ſ	NUM_TRANSFERQUEUEMODE	

## 11.2.2.167 spinTransferSelectorEnums

 $\verb"enum" spinTransferSelectorEnums"$ 

< Selects which stream transfers are currently controlled by the selected Transfer features.

## Enumerator

TransferSelector_Stream0	The transfer features control the data stream 0.
TransferSelector_Stream1	The transfer features control the data stream 1.
TransferSelector_Stream2	The transfer features control the data stream 2.
TransferSelector_All	The transfer features control all the data streams simulateneously.
NUM_TRANSFERSELECTOR	

## 11.2.2.168 spinTransferStatusSelectorEnums

enum spinTransferStatusSelectorEnums

< Selects which status of the transfer module to read.

TransferStatusSelector_Streaming	Data blocks are transmitted when enough data is available.
TransferStatusSelector_Paused	Data blocks transmission is suspended immediately.

## Enumerator

TransferStatusSelector_Stopping	Data blocks transmission is stopping. The current block transmission will be completed and the transfer state will stop.
TransferStatusSelector_Stopped	Data blocks transmission is stopped.
TransferStatusSelector_QueueOverflow	Data blocks queue is in overflow state.
NUM_TRANSFERSTATUSSELECTOR	

## 11.2.2.169 spinTransferTriggerActivationEnums

enum spinTransferTriggerActivationEnums

< Specifies the activation mode of the transfer control trigger.

#### Enumerator

TransferTriggerActivation_RisingEdge	Specifies that the trigger is considered valid on the rising edge of the source signal.
TransferTriggerActivation_FallingEdge	Specifies that the trigger is considered valid on the falling edge of the source signal.
TransferTriggerActivation_AnyEdge	Specifies that the trigger is considered valid on the falling or rising edge of the source signal.
TransferTriggerActivation_LevelHigh	Specifies that the trigger is considered valid as long as the level of the source signal is high. This can apply to TransferActive and TransferPause trigger.
TransferTriggerActivation_LevelLow	Specifies that the trigger is considered valid as long as the level of the source signal is low. This can apply to TransferActive and TransferPause trigger.
NUM_TRANSFERTRIGGERACTIVATION	

# 11.2.2.170 spinTransferTriggerModeEnums

 $\verb"enum" spinTransferTriggerModeEnums"$ 

< Controls if the selected trigger is active.

TransferTriggerMode_Off	Disables the selected trigger.
TransferTriggerMode_On	Enable the selected trigger.
NUM_TRANSFERTRIGGERMODE	

# 11.2.2.171 spinTransferTriggerSelectorEnums

 $\verb"enum" spinTransferTriggerSelectorEnums"$ 

< Selects the type of transfer trigger to configure.

#### Enumerator

TransferTriggerSelector_TransferStart	Selects a trigger to start the transfers.
TransferTriggerSelector_TransferStop	Selects a trigger to stop the transfers.
TransferTriggerSelector_TransferAbort	Selects a trigger to abort the transfers.
TransferTriggerSelector_TransferPause	Selects a trigger to pause the transfers.
TransferTriggerSelector_TransferResume	Selects a trigger to Resume the transfers.
TransferTriggerSelector_TransferActive	Selects a trigger to Activate the transfers. This trigger type is used when TriggerActivation is set LevelHigh or levelLow.
TransferTriggerSelector_TransferBurstStart	Selects a trigger to start the transfer of a burst of frames specified by TransferBurstCount.
TransferTriggerSelector_TransferBurstStop	Selects a trigger to end the transfer of a burst of frames.
NUM_TRANSFERTRIGGERSELECTOR	

## 11.2.2.172 spinTransferTriggerSourceEnums

enum spinTransferTriggerSourceEnums

< Specifies the signal to use as the trigger source for transfers.

TransferTriggerSource_Line0	Specifies which physical line (or pin) and associated I/O control block to use as external source for the transfer control trigger signal.
TransferTriggerSource_Line1	Specifies which physical line (or pin) and associated I/O control block to use as external source for the transfer control trigger signal.
TransferTriggerSource_Line2	Specifies which physical line (or pin) and associated I/O control block to use as external source for the transfer control trigger signal.
TransferTriggerSource_Counter0Start	Specifies which of the Counter signal to use as internal source for the transfer control trigger signal.
TransferTriggerSource_Counter1Start	Specifies which of the Counter signal to use as internal source for the transfer control trigger signal.
TransferTriggerSource_Counter2Start	Specifies which of the Counter signal to use as internal source for the transfer control trigger signal.
TransferTriggerSource_Counter0End	Specifies which of the Counter signal to use as internal source for the transfer control trigger signal.
TransferTriggerSource_Counter1End	Specifies which of the Counter signal to use as internal source for the transfer control trigger signal.
TransferTriggerSource_Counter2End	Specifies which of the Counter signal to use as internal source for the transfer control trigger signal.
TransferTriggerSource_Timer0Start	Specifies which Timer signal to use as internal source for the transfer control trigger signal.

## Enumerator

TransferTriggerSource_Timer1Start	Specifies which Timer signal to use as internal source for the transfer control trigger signal.
TransferTriggerSource_Timer2Start	Specifies which Timer signal to use as internal source for the transfer control trigger signal.
TransferTriggerSource_Timer0End	Specifies which Timer signal to use as internal source for the transfer control trigger signal.
TransferTriggerSource_Timer1End	Specifies which Timer signal to use as internal source for the transfer control trigger signal.
TransferTriggerSource_Timer2End	Specifies which Timer signal to use as internal source for the transfer control trigger signal.
TransferTriggerSource_SoftwareSignal0	Specifies which Software Signal to use as internal source for the transfer control trigger signal.
TransferTriggerSource_SoftwareSignal1	Specifies which Software Signal to use as internal source for the transfer control trigger signal.
TransferTriggerSource_SoftwareSignal2	Specifies which Software Signal to use as internal source for the transfer control trigger signal.
TransferTriggerSource_Action0	Specifies which Action command to use as internal source for the transfer control trigger signal.
TransferTriggerSource_Action1	Specifies which Action command to use as internal source for the transfer control trigger signal.
TransferTriggerSource_Action2	Specifies which Action command to use as internal source for the transfer control trigger signal.
NUM_TRANSFERTRIGGERSOURCE	

## 11.2.2.173 spinTriggerActivationEnums

 $\verb"enum" spinTriggerActivationEnums"$ 

< Specifies the activation mode of the trigger.

# Enumerator

TriggerActivation_LevelLow	
TriggerActivation_LevelHigh	
TriggerActivation_FallingEdge	
TriggerActivation_RisingEdge	
TriggerActivation_AnyEdge	
NUM_TRIGGERACTIVATION	

# 11.2.2.174 spinTriggerModeEnums

enum spinTriggerModeEnums

< Controls whether or not trigger is active.

### Enumerator

TriggerMode_Off	
TriggerMode_On	
NUM_TRIGGERMODE	

# 11.2.2.175 spinTriggerOverlapEnums

enum spinTriggerOverlapEnums

< Specifies the overlap mode of the trigger.

### Enumerator

TriggerOverlap_Off	
TriggerOverlap_ReadOut	
TriggerOverlap_PreviousFrame	
NUM_TRIGGEROVERLAP	

### 11.2.2.176 spinTriggerSelectorEnums

enum spinTriggerSelectorEnums

< Selects the type of trigger to configure.

### Enumerator

TriggerSelector_AcquisitionStart	
TriggerSelector_FrameStart	
TriggerSelector_FrameBurstStart	
NUM_TRIGGERSELECTOR	

## 11.2.2.177 spinTriggerSourceEnums

enum spinTriggerSourceEnums

< Specifies the internal signal or physical input line to use as the trigger source.

### Enumerator

TriggerSource\_Software

## Enumerator

TriggerSource_Line0	
TriggerSource_Line1	
TriggerSource_Line2	
TriggerSource_Line3	
TriggerSource_UserOutput0	
TriggerSource_UserOutput1	
TriggerSource_UserOutput2	
TriggerSource_UserOutput3	
TriggerSource_Counter0Start	
TriggerSource_Counter1Start	
TriggerSource_Counter0End	
TriggerSource_Counter1End	
TriggerSource_LogicBlock0	
TriggerSource_LogicBlock1	
TriggerSource_Action0	
NUM_TRIGGERSOURCE	

## 11.2.2.178 spinUserOutputSelectorEnums

enum spinUserOutputSelectorEnums

< Selects which bit of the User Output register is set by UserOutputValue.

## Enumerator

UserOutputSelector_UserOutput0	
UserOutputSelector_UserOutput1	
UserOutputSelector_UserOutput2	
UserOutputSelector_UserOutput3	
NUM_USEROUTPUTSELECTOR	

## 11.2.2.179 spinUserSetDefaultEnums

 $\verb"enum spinUserSetDefaultEnums"$ 

< Selects the feature User Set to load and make active by default when the device is restarted.

UserSetDefault_Default	Factory default set.
UserSetDefault_UserSet0	User configurable set 0.
UserSetDefault_UserSet1	User configurable set 1.
NUM USERSETDEFAULT	
NUM USERSETDEFAULT Generated by Doxygen	

## 11.2.2.180 spinUserSetSelectorEnums

enum spinUserSetSelectorEnums

< Selects the feature User Set to load, save or configure.

### Enumerator

UserSetSelector_Default	Factory default set.
UserSetSelector_UserSet0	User configurable set 0.
UserSetSelector_UserSet1	User configurable set 1.
NUM_USERSETSELECTOR	

# 11.2.2.181 spinWhiteClipSelectorEnums

enum spinWhiteClipSelectorEnums


< Selects which White Clip to control.

WhiteClipSelector_All	White Clip will be applied to all channels or taps.
WhiteClipSelector_Red	White Clip will be applied to the red channel.
WhiteClipSelector_Green	White Clip will be applied to the green channel.
WhiteClipSelector_Blue	White Clip will be applied to the blue channel.
WhiteClipSelector_Y	White Clip will be applied to Y channel.
WhiteClipSelector_U	White Clip will be applied to U channel.
WhiteClipSelector_V	White Clip will be applied to V channel.
WhiteClipSelector_Tap1	White Clip will be applied to Tap 1.
WhiteClipSelector_Tap2	White Clip will be applied to Tap 2.
NUM_WHITECLIPSELECTOR	

11.3 Chunk Data Structures 139

# 11.3 Chunk Data Structures

Collaboration diagram for Chunk Data Structures:

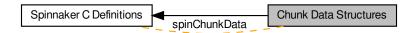

# **Data Structures**


• struct spinChunkData

The type of information that can be obtained from image chunk data.

# 11.3.1 Detailed Description

# 11.4 Spinnaker C QuickSpin API

Collaboration diagram for Spinnaker C QuickSpin API:

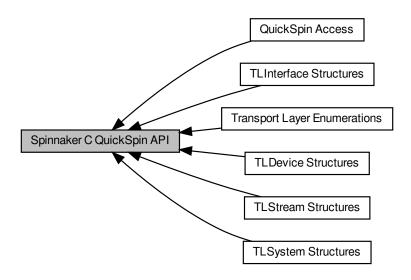

## Modules

• QuickSpin Access

The functions in this section initialize the various QuickSpin structs for the C API.

- Transport Layer Enumerations
- TLDevice Structures
- TLInterface Structures
- TLStream Structures
- TLSystem Structures


# 11.4.1 Detailed Description

11.5 QuickSpin Access 141

# 11.5 QuickSpin Access

The functions in this section initialize the various QuickSpin structs for the C API.

Collaboration diagram for QuickSpin Access:

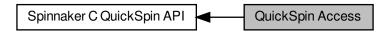

### **Functions**

- SPINNAKERC\_API quickSpinInit (spinCamera hCamera, quickSpin \*pQuickSpin)
- SPINNAKERC\_API quickSpinInitEx (spinCamera hCamera, quickSpin \*pQuickSpin, quickSpinTLDevice \*pQuickSpinTLDevice, quickSpinTLStream \*pQuickSpinTLStream)
- SPINNAKERC\_API quickSpinTLDeviceInit (spinCamera hCamera, quickSpinTLDevice \*pQuickSpinTL→ Device)
- SPINNAKERC\_API quickSpinTLStreamInit (spinCamera hCamera, quickSpinTLStream \*pQuickSpinTL ← Stream)
- SPINNAKERC\_API quickSpinTLInterfaceInit (spinInterface hInterface, quickSpinTLInterface \*pQuickSpin← TLInterface)

## 11.5.1 Detailed Description

The functions in this section initialize the various QuickSpin structs for the C API.

#### 11.5.2 Function Documentation

#### 11.5.2.1 quickSpinInit()

### 11.5.2.2 quickSpinInitEx()


```
SPINNAKERC_API quickSpinInitEx (
             spinCamera hCamera,
             quickSpin * pQuickSpin,
             quickSpinTLDevice * pQuickSpinTLDevice,
             quickSpinTLStream * pQuickSpinTLStream )
11.5.2.3 quickSpinTLDeviceInit()
SPINNAKERC_API quickSpinTLDeviceInit (
             spinCamera hCamera,
             quickSpinTLDevice * pQuickSpinTLDevice )
11.5.2.4 quickSpinTLInterfaceInit()
SPINNAKERC_API quickSpinTLInterfaceInit (
             spinInterface hInterface,
             quickSpinTLInterface * pQuickSpinTLInterface )
11.5.2.5 quickSpinTLStreamInit()
SPINNAKERC_API quickSpinTLStreamInit (
             spinCamera hCamera,
             quickSpinTLStream * pQuickSpinTLStream )
11.5.2.6 quickSpinTLSystemInit()
SPINNAKERC_API quickSpinTLSystemInit (
             spinSystem hSystem,
             quickSpinTLSystem * pQuickSpinTLSystem )
```

11.6 Spinnaker C API 143

# 11.6 Spinnaker C API

SpinnakerPlatform C Include.

Collaboration diagram for Spinnaker C API:

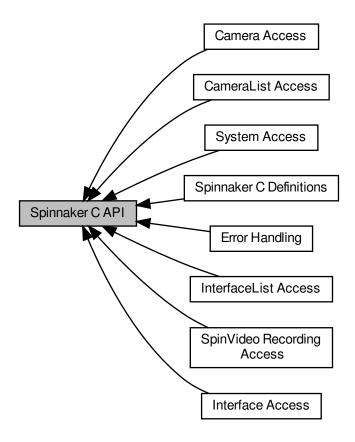

### Modules

· Spinnaker C Definitions

Definitions for Spinnaker C.

· Error Handling

The functions in this section provide access to additional information related to error returns.

System Access

The functions in this section provide access to information, objects, and functionality of the system object.

• InterfaceList Access

The functions in this section provide access to information, objects, and functionality of interface lists.

CameraList Access

The functions in this section provide access to information, objects, and functionality of camera lists.

Interface Access

The functions in this section provide access to information, objects, and functionality of interfaces.

· Camera Access

The functions in this section provide access to information, objects, and functionality of cameras.

SpinVideo Recording Access

The functions in this section provide access to video recording capabilities, which include opening, building, and closing video files.

#### **Functions**

SPINNAKERC\_API spinCameraDiscoverMaxPacketSize (spinCamera hCamera, unsigned int \*pMax← PacketSize)

Returns the largest packet size that can be safely used on the interface that device is connected to.

### 11.6.1 Detailed Description

SpinnakerPlatform C Include.

Spinnaker C Definition Includes Spinnaker GenICam C Wrapper Includes Spinnaker QuickSpin C Includes

Spinnaker C Definition Includes

#### 11.6.2 Function Documentation

### 11.6.2.1 spinCameraDiscoverMaxPacketSize()

Returns the largest packet size that can be safely used on the interface that device is connected to.

#### See also

spinError

#### **Parameters**

hCamera	The camera to check
pMaxPacketSize	The maximum packet size returned

### Returns

11.7 Error Handling 145

# 11.7 Error Handling

The functions in this section provide access to additional information related to error returns.

Collaboration diagram for Error Handling:



#### **Functions**

SPINNAKERC API spinErrorGetLast (spinError \*pError)

Retrieves the error code of the last error.

• SPINNAKERC\_API spinErrorGetLastMessage (char \*pBuf, size\_t \*pBufLen)

Retrieves the error message of the last error.

SPINNAKERC\_API spinErrorGetLastBuildDate (char \*pBuf, size\_t \*pBufLen)

Retrieves the build date of the last error.

SPINNAKERC\_API spinErrorGetLastBuildTime (char \*pBuf, size\_t \*pBufLen)

Retrieves the build time of the last error.

SPINNAKERC\_API spinErrorGetLastFileName (char \*pBuf, size\_t \*pBufLen)

Retrieves the filename of the last error.

SPINNAKERC API spinErrorGetLastFullMessage (char \*pBuf, size t \*pBufLen)

Retrieves the full error message of the last error.

SPINNAKERC\_API spinErrorGetLastFunctionName (char \*pBuf, size\_t \*pBufLen)

Retrieves the function name of the last error.

SPINNAKERC\_API spinErrorGetLastLineNumber (int64\_t \*pLineNum)

Retrieves the line number of the last error.

#### 11.7.1 Detailed Description

The functions in this section provide access to additional information related to error returns.

#### 11.7.2 Function Documentation

### 11.7.2.1 spinErrorGetLast()

Retrieves the error code of the last error.

See also

### **Parameters**

pError The error enum pointer in which the error message is returne	d
---	---

### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

### 11.7.2.2 spinErrorGetLastBuildDate()

Retrieves the build date of the last error.

See also

spinError

### **Parameters**

pBuf	The c-string character buffer in which the build date is returned
pBufLen	The unsigned integer pointer in which the length of the c-string is returned; the input value is the
	maximum length

### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

## 11.7.2.3 spinErrorGetLastBuildTime()

Retrieves the build time of the last error.

See also

11.7 Error Handling

#### **Parameters**

pBuf	The c-string character buffer in which the build time is returned
pBufL	en The unsigned integer pointer in which the length of the c-string is returned; the input value is the
	maximum length

### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

## 11.7.2.4 spinErrorGetLastFileName()

Retrieves the filename of the last error.

See also

spinError

## **Parameters**

pBuf	The c-string character buffer in which the file name is returned
pBufLen	The unsigned integer pointer in which the length of the c-string is returned; the input value is the maximum length

## Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

## 11.7.2.5 spinErrorGetLastFullMessage()

Retrieves the full error message of the last error.

See also

### **Parameters**

<i>pBuf</i> T	The c-string character buffer in which the full error message is returned	
'	The unsigned integer pointer in which the length of the c-string is returned; the input value is the maximum length	

### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

## 11.7.2.6 spinErrorGetLastFunctionName()

Retrieves the function name of the last error.

#### See also

spinError

## **Parameters**

pBuf	The c-string character buffer in which the function name is returned	
'	The unsigned integer pointer in which the length of the c-string is returned; the input value is the maximum length	

### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

## 11.7.2.7 spinErrorGetLastLineNumber()

Retrieves the line number of the last error.

## See also

11.7 Error Handling 149

### **Parameters**

pBuf	The c-string character buffer in which the line number is returned	
pBufLen	The unsigned integer pointer in which the length of the c-string is returned; the input value is the	
	maximum length	

### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

## 11.7.2.8 spinErrorGetLastMessage()

Retrieves the error message of the last error.

### See also

spinError

## **Parameters**

pBuf	The c-string character buffer in which the error message is returned	
pBufLen	The unsigned integer pointer in which the length of the c-string is returned; the input value is the	
	maximum length	

### Returns

# 11.8 System Access

The functions in this section provide access to information, objects, and functionality of the system object.

Collaboration diagram for System Access:



#### **Functions**

SPINNAKERC\_API spinSystemGetInstance (spinSystem \*phSystem)

Retrieves an instance of the system object; the system is a singleton, so there will only ever be one instance; system instance must be destroyed by calling spinSystemReleaseInstance.

SPINNAKERC API spinSystemReleaseInstance (spinSystem hSystem)

Releases the system; make sure handle is cleaned up properly by setting it to NULL after system is released; the handle can only be used again after calling spinSystemGetInstance.

- SPINNAKERC\_API spinSystemGetInterfaces (spinSystem hSystem, spinInterfaceList hInterfaceList)
  - Retrieves a list of detected (and enumerable) interfaces on the system; interface lists must be created and destroyed.
- SPINNAKERC\_API spinSystemGetCameras (spinSystem hSystem, spinCameraList hCameraList)
  - Retrieves a list of detected (and enumerable) cameras on the system; camera lists must be created and destroyed.
- SPINNAKERC\_API spinSystemGetCamerasEx (spinSystem hSystem, bool8\_t bUpdateInterfaces, bool8\_t bUpdateCameras, spinCameraList hCameraList)

Retrieves a list of detected (and enumerable) cameras on the system; manually set whether to update the current interface and camera lists; camera lists must be created and destroyed.

- SPINNAKERC\_API spinSystemSetLoggingLevel (spinSystem hSystem, spinnakerLogLevel logLevel)
   Sets the logging level for all logging events on the system.
- SPINNAKERC\_API spinSystemGetLoggingLevel (spinSystem hSystem, spinnakerLogLevel \*pLogLevel)

  Retrieves the logging level for all logging events on the system.
- SPINNAKERC\_API spinSystemRegisterLogEventHandler (spinSystem hSystem, spinLogEventHandler h
   LogEventHandler)

Registers a logging event handler to the system (event handlers registered in this way must be unregistered)

SPINNAKERC\_API spinSystemUnregisterLogEventHandler (spinSystem hSystem, spinLogEventHandler hLogEventHandler)

Unregisters a selected logging event handler from the system.

SPINNAKERC\_API spinSystemUnregisterAllLogEventHandlers (spinSystem hSystem)

Unregisters all logging event handlers from the system.

• SPINNAKERC\_API spinSystemIsInUse (spinSystem hSystem, bool8\_t \*pbIsInUse)

Checks whether a system is currently in use.

Registers a device arrival event handler to every interface on the system (event handlers registered this way must be unregistered)

SPINNAKERC\_API spinSystemRegisterDeviceRemovalEventHandler (spinSystem hSystem, spinDevice RemovalEventHandler hDeviceRemovalEventHandler)

11.8 System Access 151

Registers a device removal event handler to the system to every interface on the system (event handlers registered this way must be unregistered)

SPINNAKERC\_API spinSystemUnregisterDeviceArrivalEventHandler (spinSystem hSystem, spinDeviceArrivalEventHandler hDeviceArrivalEventHandler)

Unregisters a device arrival event handler from the system.

 SPINNAKERC\_API spinSystemUnregisterDeviceRemovalEventHandler (spinSystem hSystem, spinDevice← RemovalEventHandler hDeviceRemovalEventHandler)

Unregisters a device removal event handler from the system.

Registers an interface event handler (device arrival and device removal) to every interface on the system (interface events registered this way must be unregistered) If new interfaces are detected by the system after spinSystem RegisterInterfaceEventHandler() is called, those interfaces will be automatically registered with this event.

SPINNAKERC\_API spinSystemUnregisterInterfaceEventHandler (spinSystem hSystem, spinInterface
 EventHandler hInterfaceEventHandler)

Unregisters an interface event handler from the system.

SPINNAKERC\_API spinSystemUpdateCameras (spinSystem hSystem, bool8\_t \*pbChanged)

Updates the list of cameras on the system, informing whether there has been any changes.

 SPINNAKERC\_API spinSystemUpdateCamerasEx (spinSystem hSystem, bool8\_t bUpdateInterfaces, bool8\_t \*pbChanged)

Updates the list of cameras on the system, informing whether there has been any changes; manually set whether to update the current interface lists.

- SPINNAKERC\_API spinSystemSendActionCommand (spinSystem hSystem, size\_t iDeviceKey, size\_t i
   GroupKey, size\_t iGroupMask, size\_t iActionTime, size\_t \*piResultSize, actionCommandResult results[])

   Broadcast an Action Command to all devices on system.
- SPINNAKERC\_API spinSystemGetLibraryVersion (spinSystem hSystem, spinLibraryVersion \*hLibrary ∨ version)

Get current library version of Spinnaker.

• SPINNAKERC\_API spinSystemGetTLNodeMap (spinSystem hSystem, spinNodeMapHandle \*phNodeMap)

Retrieves the transport layer nodemap from the system.

### 11.8.1 Detailed Description

The functions in this section provide access to information, objects, and functionality of the system object.

This includes the system object, interface and camera lists, and interface and logging events.

#### 11.8.2 Function Documentation

#### 11.8.2.1 spinSystemGetCameras()

Retrieves a list of detected (and enumerable) cameras on the system; camera lists must be created and destroyed.

#### See also

```
spinCameraListCreateEmpty()
spinCameraListDestroy()
spinError
```

#### **Parameters**

hSystem	The system, from which the camera list is retrieved
hCameraList	The camera list to house the cameras from the system

#### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

#### 11.8.2.2 spinSystemGetCamerasEx()

Retrieves a list of detected (and enumerable) cameras on the system; manually set whether to update the current interface and camera lists; camera lists must be created and destroyed.

#### See also

```
spinCameraListCreateEmpty()
spinCameraListDestroy()
spinError
```

### **Parameters**

hSystem	The system, from which the camera list is retrieved
bUpdateInterfaces	The boolean of whether to update the interface list
bUpdateCameras	The boolean of whether to update the camera list
hCameraList	The camera list to house the cameras from the system

#### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

## 11.8.2.3 spinSystemGetInstance()

Retrieves an instance of the system object; the system is a singleton, so there will only ever be one instance; system instance must be destroyed by calling spinSystemReleaseInstance.

11.8 System Access 153

See also

spinSystemReleaseInstance spinError

#### **Parameters**

phSystem	The system handle pointer in which the system instance is returned
----------	--

### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

### 11.8.2.4 spinSystemGetInterfaces()

Retrieves a list of detected (and enumerable) interfaces on the system; interface lists must be created and destroyed.

#### See also

```
spinInterfaceListCreateEmpty()
spinInterfaceListDestroy()
spinError
```

#### **Parameters**

hSystem	The system, from which the interface list is retrieved
hInterfaceList	The interface list to house the interfaces from the system

#### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

### 11.8.2.5 spinSystemGetLibraryVersion()

```
\begin{tabular}{ll} SPINNAKERC\_API & spinSystemGetLibraryVersion ( \\ & spinSystem & hSystem, \\ & spinLibraryVersion * hLibraryVersion ) \end{tabular}
```

Get current library version of Spinnaker.

### Returns

A struct containing the current version of Spinnaker(major, minor, type, build).

11.8 System Access 155

### 11.8.2.6 spinSystemGetLoggingLevel()

```
 \begin{array}{c} {\tt SPINNAKERC\_API} \ \ {\tt spinSystemGetLoggingLevel} \ \ ( \\ \\ {\tt spinSystem} \ \ hSystem, \\ \\ {\tt spinnakerLogLevel} \ * \ pLogLevel \ ) \end{array}
```

Retrieves the logging level for all logging events on the system.

See also

spinError

#### **Parameters**

hSystem	em The system, from which the logging level is retrieved	
logLevel	The logging level enum pointer in which the current logging level is returned	

### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

## 11.8.2.7 spinSystemGetTLNodeMap()

Retrieves the transport layer nodemap from the system.

See also

spinError

## **Parameters**

hSystem	The system handle.	
phNodeMap	The nodemap handle pointer in which the transport layer system nodemap is returned.	

# Returns

### 11.8.2.8 spinSystemIsInUse()

Checks whether a system is currently in use.

See also

spinError

#### **Parameters**

hSystem	The system to check
pblsInUse	The boolean pointer to return whether the system is currently in use

### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

### 11.8.2.9 spinSystemRegisterDeviceArrivalEventHandler()

Registers a device arrival event handler to every interface on the system (event handlers registered this way must be unregistered)

See also

spinError

#### **Parameters**

hSystem	The system, on which the device arrival event handler is registered
hDeviceArrivalEventHandler	The device arrival event handler to register on the system

# Returns

11.8 System Access 157

#### 11.8.2.10 spinSystemRegisterDeviceRemovalEventHandler()

```
\begin{tabular}{ll} SPINNAKERC\_API & spinSystemRegisterDeviceRemovalEventHandler & \\ & spinSystem & hSystem, \\ & spinDeviceRemovalEventHandler & hDeviceRemovalEventHandler & property &
```

Registers a device removal event handler to the system to every interface on the system (event handlers registered this way must be unregistered)

#### See also

spinError

#### **Parameters**

hSystem	The system, on which the device removal event handler is registered
hDeviceRemovalEventHandler	The device removal event handler to register on the system

#### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

### 11.8.2.11 spinSystemRegisterInterfaceEventHandler()

```
SPINNAKERC_API spinSystemRegisterInterfaceEventHandler ( spinSystem\ hSystem, spinInterfaceEventHandler\ hInterfaceEventHandler\ )
```

Registers an interface event handler (device arrival and device removal) to every interface on the system (interface events registered this way must be unregistered) If new interfaces are detected by the system after spinSystem RegisterInterfaceEventHandler() is called, those interfaces will be automatically registered with this event.

#### See also

```
spinError
spinInterfaceEventHandler
```

#### **Parameters**

hSystem	The system, on which the interface event handler is registered
hInterfaceEventHandler	The interface event handler (device arrival and device removal) to register on the system

## Returns

### 11.8.2.12 spinSystemRegisterLogEventHandler()

```
\begin{tabular}{ll} SPINNAKERC\_API & spinSystemRegisterLogEventHandler & \\ & spinSystem & hSystem, \\ & spinLogEventHandler & hLogEventHandler & prince & p
```

Registers a logging event handler to the system (event handlers registered in this way must be unregistered)

#### See also

spinError

#### **Parameters**

hSystem	The system, on which the logging event handler is registered
hLogEventHandler	The logging event handler to register on the system

#### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

### 11.8.2.13 spinSystemReleaseInstance()

```
 \begin{array}{c} {\tt SPINNAKERC\_API} \  \  {\tt spinSystemReleaseInstance} \  \  ( \\ {\tt spinSystem} \  \   \  hSystem \ } ) \end{array}
```

Releases the system; make sure handle is cleaned up properly by setting it to NULL after system is released; the handle can only be used again after calling spinSystemGetInstance.

#### See also

```
spinSystemGetInstance
spinError
```

#### **Parameters**

hSystem	The system handle
---------	-------------------

### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

#### 11.8.2.14 spinSystemSendActionCommand()

```
SPINNAKERC_API spinSystemSendActionCommand ( spinSystem \ hSystem,
```

11.8 System Access 159

```
size_t iDeviceKey,
size_t iGroupKey,
size_t iGroupMask,
size_t iActionTime,
size_t * piResultSize,
actionCommandResult results[] )
```

Broadcast an Action Command to all devices on system.

## See also

spinError

# **Parameters**

hSystem	The system on which to send the action command to all devices.
iDeviceKey	The Action Command's device key
iGroupKey	The Action Command's group key
iGroupMask	The Action Command's group mask
iActionTime	(Optional) Time when to assert a future action. Zero means immediate action.
piResultSize	(Optional) The number of results in the results array. The value passed should be equal to the expected number of devices that acknowledge the command. Returns the number of received results.
results	(Optional) An Array with *piResultSize elements to hold the action command result status. The buffer is filled starting from index 0. If received results are less than expected number of devices that acknowledge the command, remaining results are not changed. If received results are more than expected number of devices that acknowledge the command, extra results are ignored and not appended to array. This parameter is ignored if piResultSize is 0. Thus this parameter can be NULL if pResultSize is 0 or NULL.

# Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.8.2.15 spinSystemSetLoggingLevel()

Sets the logging level for all logging events on the system.

# See also

spinError

# Parameters

hSystem	The system, on which the logging level is set	
logLevel	The logging level to set	

## Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.8.2.16 spinSystemUnregisterAllLogEventHandlers()

```
{\tt SPINNAKERC\_API \ spinSystemUnregisterAllLogEventHandlers \ (} \\ {\tt spinSystem \ } hSystem \ )
```

Unregisters all logging event handlers from the system.

## See also

spinError

## **Parameters**

hSystem	The system, from which all logging event handlers are unregistered
---------	--

#### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.8.2.17 spinSystemUnregisterDeviceArrivalEventHandler()

```
\label{eq:spinNakerC_API} SpinSystemUnregisterDeviceArrivalEventHandler \ ( \\ spinSystem \ hSystem, \\ spinDeviceArrivalEventHandler \ hDeviceArrivalEventHandler \ )
```

Unregisters a device arrival event handler from the system.

# See also

```
spinError
spinDeviceArrivalEventHandler
```

## **Parameters**

hSystem	The system, from which the device arrival event handler is unregistered
hDeviceArrivalEventHandler	The device arrival event handler to unregister from the system

# Returns

11.8 System Access 161

# 11.8.2.18 spinSystemUnregisterDeviceRemovalEventHandler()

```
\label{eq:spinNakerC_API} SpinSystemUnregisterDeviceRemovalEventHandler \ ( \\ spinSystem \ hSystem, \\ spinDeviceRemovalEventHandler \ hDeviceRemovalEventHandler \ )
```

Unregisters a device removal event handler from the system.

## See also

```
spinError
spinDeviceRemovalEventHandler
```

#### **Parameters**

hSystem	The system, from which the device removal event handler is unregistered
hDeviceRemovalEventHandler	The device removal event handler to unregister from the system

#### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.8.2.19 spinSystemUnregisterInterfaceEventHandler()

```
{\tt SPINNAKERC\_API\ spinSystemUnregisterInterfaceEventHandler\ (} {\tt spinSystem\ } hSystem, {\tt spinInterfaceEventHandler\ } hInterfaceEventHandler\ )
```

Unregisters an interface event handler from the system.

# See also

```
spinError
spinInterfaceEventHandler
```

## **Parameters**

hSystem	The system, from which the interface event handler is unregistered
hInterfaceEventHandler	The interface event handler (device arrival and device removal) to unregister from
	the system

## Returns

# 11.8.2.20 spinSystemUnregisterLogEventHandler()

```
\begin{tabular}{ll} SPINNAKERC\_API & spinSystemUnregisterLogEventHandler & ( & spinSystem & hSystem, \\ & spinLogEventHandler & hLogEventHandler & ( & pinLogEventHandler & ( & pinLogEventHandler
```

Unregisters a selected logging event handler from the system.

See also

spinError

#### **Parameters**

hSystem	The system, from which the logging event handler is unregistered
hLogEventHandler	The logging event handler to unregister from the system

## Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.8.2.21 spinSystemUpdateCameras()

Updates the list of cameras on the system, informing whether there has been any changes.

#### See also

spinError

# **Parameters**

hSystem	The system, on which the list of attached cameras is updated
pbChanged	The boolean pointer to return whether cameras have arrived on or been removed from the system

# Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.8.2.22 spinSystemUpdateCamerasEx()

11.8 System Access 163

```
bool8_t bUpdateInterfaces,
bool8_t * pbChanged )
```

Updates the list of cameras on the system, informing whether there has been any changes; manually set whether to update the current interface lists.

# See also

spinError

# **Parameters**


hSystem	The system, on which the list of attached cameras is updated
bUpdateInterfaces	The boolean of whether to update the interface list
pbChanged	The boolean pointer to return whether cameras have arrived or been removed from the system

# Returns

# 11.9 InterfaceList Access

The functions in this section provide access to information, objects, and functionality of interface lists.

Collaboration diagram for InterfaceList Access:

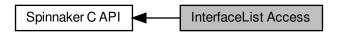

#### **Functions**

• SPINNAKERC\_API spinInterfaceListCreateEmpty (spinInterfaceList \*phInterfaceList)

Creates an empty interface list (interface lists created this way must be destroyed)

SPINNAKERC\_API spinInterfaceListDestroy (spinInterfaceList hInterfaceList)

Destroys an interface list.

• SPINNAKERC\_API spinInterfaceListGetSize (spinInterfaceList hInterfaceList, size\_t \*pSize)

Retrieves the number of interfaces in an interface list.

SPINNAKERC\_API spinInterfaceListGet (spinInterfaceList hInterfaceList, size\_t index, spinInterface \*ph
 — Interface)

Retrieves an interface from an interface list using an index (interfaces retrieved this way must be released)

• SPINNAKERC\_API spinInterfaceListClear (spinInterfaceList hInterfaceList)

Clears an interface list.

# 11.9.1 Detailed Description

The functions in this section provide access to information, objects, and functionality of interface lists.

This includes updating, size and interface retrieval, and clearance.

#### 11.9.2 Function Documentation

#### 11.9.2.1 spinInterfaceListClear()

```
\begin{tabular}{ll} SPINNAKERC\_API & spinInterfaceListClear & \\ & spinInterfaceList & hInterfaceList & \end{tabular} \label{table}
```

Clears an interface list.

See also

11.9 InterfaceList Access 165

## **Parameters**

hInterfaceList   The interface list to clear
--

# Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.9.2.2 spinInterfaceListCreateEmpty()

Creates an empty interface list (interface lists created this way must be destroyed)

See also

spinError

## **Parameters**

phInterfaceList	The interface list handle pointer in which the empty interface list is returned

# Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.9.2.3 spinInterfaceListDestroy()

Destroys an interface list.

See also

spinError

# **Parameters**

hInterfaceList	The interface list to destroy
----------------	-------------------------------

## Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.9.2.4 spinInterfaceListGet()

Retrieves an interface from an interface list using an index (interfaces retrieved this way must be released)

#### See also

spinError

#### **Parameters**

hInterfaceList	The interface list of the interface to be retrieved
index	The index of the interface
phInterface	The interface handle pointer in which the interface is returned

## Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.9.2.5 spinInterfaceListGetSize()

Retrieves the number of interfaces in an interface list.

## See also

spinError

## **Parameters**

hInterfaceList	The interface list where the interfaces to be counted are
pSize	The unsigned integer pointer in which the number of interfaces is returned

11.9 InterfaceList Access 167

# Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

See also

# 11.10 CameraList Access

The functions in this section provide access to information, objects, and functionality of camera lists.

Collaboration diagram for CameraList Access:



# **Functions**

SPINNAKERC API spinCameraListCreateEmpty (spinCameraList \*phCameraList)

Creates an empty camera list (camera lists created this way must be destroyed)

SPINNAKERC\_API spinCameraListDestroy (spinCameraList hCameraList)

Destroys a camera list.

SPINNAKERC API spinCameraListGetSize (spinCameraList hCameraList, size t \*pSize)

Retrieves the number of cameras on a camera list.

Retrieves a camera from a camera list using an index.

• SPINNAKERC API spinCameraListClear (spinCameraList hCameraList)

Clears a camera list.

SPINNAKERC API spinCameraListRemove (spinCameraList hCameraList, size t index)

Removes a camera from a camera list using its index.

SPINNAKERC\_API spinCameraListAppend (spinCameraList hCameraListBase, spinCameraList hCamera
 ListToAppend)

Appends all the cameras from one camera list to another.

 SPINNAKERC\_API spinCameraListGetBySerial (spinCameraList hCameraList, const char \*pSerial, spin← Camera \*phCamera)

Retrieves a camera from a camera list using its serial number.

• SPINNAKERC\_API spinCameraListRemoveBySerial (spinCameraList hCameraList, const char \*pSerial)

Removes a camera from a camera list using its serial number.

# 11.10.1 Detailed Description

The functions in this section provide access to information, objects, and functionality of camera lists.

This includes updating, size and camera retrieval, and clearance.

# 11.10.2 Function Documentation

11.10 CameraList Access 169

## 11.10.2.1 spinCameraListAppend()

Appends all the cameras from one camera list to another.

See also

spinError

#### **Parameters**

hCameraListBase	The camera list to receive the other
hCameraListToAppend	The camera list to add to the other

## Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.10.2.2 spinCameraListClear()

Clears a camera list.

See also

spinError

#### **Parameters**

$ extit{hCameraList} \mid  extit{The camera list}$	t to clear
--	------------

## Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.10.2.3 spinCameraListCreateEmpty()

Creates an empty camera list (camera lists created this way must be destroyed)

See also

spinError

## **Parameters**

```
phCameraList The camera list handle pointer in which the empty camera list is returned
```

#### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.10.2.4 spinCameraListDestroy()

Destroys a camera list.

See also

spinError

#### **Parameters**

hCameraList The	camera list to destroy
-----------------	------------------------

## Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

## 11.10.2.5 spinCameraListGet()

Retrieves a camera from a camera list using an index.

This function will return a SPINNAKER\_ERR\_INVALID\_PARAMETER error if the input index is out of range.

See also

11.10 CameraList Access 171

#### **Parameters**

hCameraList	The camera list of the camera to retrieve
index	The index of the camera
phCamera	The camera handle pointer in which the camera is returned

## Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.10.2.6 spinCameraListGetBySerial()

Retrieves a camera from a camera list using its serial number.

This function will return a NULL spinCamera pointer if no matching camera serial is found.

#### See also

spinError

## **Parameters**

hCameraList	The camera list of the camera to retrieve
serial	The serial number of the camera to retrieve
phCamera	The camera handle pointer in which the camera is returned

# Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.10.2.7 spinCameraListGetSize()

Retrieves the number of cameras on a camera list.

## See also

## **Parameters**

hCameraList	The camera list where the cameras to be counted are
pSize	The unsigned integer pointer in which the number of cameras is returned

# Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.10.2.8 spinCameraListRemove()

Removes a camera from a camera list using its index.

## See also

spinError

## **Parameters**

hCameraList	The camera list of the camera to remove
index	The index of the camera to remove

# Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.10.2.9 spinCameraListRemoveBySerial()

Removes a camera from a camera list using its serial number.

## See also

11.10 CameraList Access 173

# **Parameters**

hCameraList	The camera of the camera to remove
pSerial	The serial number of the camera to remove

# Returns

## 11.11 Interface Access

The functions in this section provide access to information, objects, and functionality of interfaces.

Collaboration diagram for Interface Access:



# **Functions**

- SPINNAKERC\_API spinInterfaceUpdateCameras (spinInterface hInterface, bool8\_t \*pbChanged)
   Checks whether any cameras have been connected or disconnected on an interface.
- SPINNAKERC\_API spinInterfaceGetCameras (spinInterface hInterface, spinCameraList hCameraList)

Retrieves a camera list from an interface; camera lists must be created and destroy.

 SPINNAKERC\_API spinInterfaceGetCamerasEx (spinInterface hInterface, bool8\_t bUpdateCameras, spin← CameraList hCameraList)

Retrieves a camera list from an interface; manually set whether to update the cameras; camera lists must be created and destroyed.

SPINNAKERC\_API spinInterfaceGetTLNodeMap (spinInterface hInterface, spinNodeMapHandle \*phNode ← Map)

Retrieves the transport layer nodemap from an interface.

Registers a device arrival event handler on an interface (event handlers registered in this way must be unregistered)

SPINNAKERC\_API spinInterfaceRegisterDeviceRemovalEventHandler (spinInterface hInterface, spin
 — DeviceRemovalEventHandler hDeviceRemovalEventHandler)

Registers a device removal event handler on an interface (event handlers registered in this way must be unregistered)

SPINNAKERC\_API spinInterfaceUnregisterDeviceArrivalEventHandler (spinInterface hInterface, spin
 — DeviceArrivalEventHandler hDeviceArrivalEventHandler)

Unregisters a device arrival event handler from an interface.

SPINNAKERC\_API spinInterfaceUnregisterDeviceRemovalEventHandler (spinInterface hInterface, spin
 — DeviceRemovalEventHandler hDeviceRemovalEventHandler)

Unregisters a device removal event handler from an interface.

SPINNAKERC\_API spinInterfaceRegisterInterfaceEventHandler (spinInterface hInterface, spinInterfaceEventHandler)

Registers an interface event handler (both device arrival and device removal) on an interface.

SPINNAKERC\_API spinInterfaceUnregisterInterfaceEventHandler (spinInterface hInterface, spinInterface EventHandler)

Unregisters an interface event handler from an interface.

SPINNAKERC API spinInterfaceRelease (spinInterface hInterface)

Releases an interface.

• SPINNAKERC\_API spinInterfaceIsInUse (spinInterface hInterface, bool8\_t \*pbIsInUse)

Checks whether an interface is in use.

SPINNAKERC\_API spinInterfaceSendActionCommand (spinInterface hInterface, size\_t iDeviceKey, size\_
 t iGroupKey, size\_t iGroupMask, size\_t iActionTime, size\_t \*piResultSize, actionCommandResult results[])

Broadcast an Action Command to all devices on interface.

11.11 Interface Access 175

# 11.11.1 Detailed Description

The functions in this section provide access to information, objects, and functionality of interfaces.

This includes camera list and nodemap retrieval, event handler registration, and interface release.

# 11.11.2 Function Documentation

## 11.11.2.1 spinInterfaceGetCameras()

```
{\tt SPINNAKERC\_API} \ \ {\tt spinInterfaceGetCameras} \ \ ( {\tt spinInterface} \ \ hInterface, {\tt spinCameraList} \ \ hCameraList \ \ hCameraList \ \ )
```

Retrieves a camera list from an interface; camera lists must be created and destroy.

#### See also

```
spinCameraListCreateEmpty()
spinCameraListDestroy()
spinError
```

#### **Parameters**

hInterface	The interface of the camera list to retrieve
hCameraList	The camera list to house the cameras from the interface

# Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

## 11.11.2.2 spinInterfaceGetCamerasEx()

Retrieves a camera list from an interface; manually set whether to update the cameras; camera lists must be created and destroyed.

## See also

```
spinCameraListCreateEmpty()
spinCameraListDestroy()
spinError
```

## **Parameters**

hInterface	The interface of the camera list to retrieve
bUpdateCameras	The boolean of whether or not to update the cameras
hCameraList	The camera list to house the cameras from the interface

# Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.11.2.3 spinInterfaceGetTLNodeMap()

Retrieves the transport layer nodemap from an interface.

# See also

spinError

# **Parameters**

hInterface	The interface of the nodemap to retrieve	
phNodeMap	The nodemap handle pointer in which the transport layer interface nodemap is returned	

# Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.11.2.4 spinInterfaceIsInUse()

Checks whether an interface is in use.

#### See also

11.11 Interface Access 177

#### **Parameters**

hInterface	The interface to check
pblsInUse	The boolean pointer to return whether or not the interface is in use

#### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

## 11.11.2.5 spinInterfaceRegisterDeviceArrivalEventHandler()

```
\begin{tabular}{ll} SPINNAKERC\_API & spinInterfaceRegisterDeviceArrivalEventHandler & \\ & spinInterface & hInterface, \\ & spinDeviceArrivalEventHandler & hDeviceArrivalEventHandler & property & pr
```

Registers a device arrival event handler on an interface (event handlers registered in this way must be unregistered)

#### See also

spinError

#### **Parameters**

hInterface	The interface on which to register the device arrival event handler
hDeviceArrivalEventHandler	The device arrival event handler to register

#### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.11.2.6 spinInterfaceRegisterDeviceRemovalEventHandler()

```
\begin{tabular}{ll} SPINNAKERC\_API & spinInterfaceRegisterDeviceRemovalEventHandler & ( & spinInterface & hInterface, & spinDeviceRemovalEventHandler & hDeviceRemovalEventHandler & ( & spinDeviceRemovalEventHandler & hDeviceRemovalEventHandler &
```

Registers a device removal event handler on an interface (event handlers registered in this way must be unregistered)

See also

#### **Parameters**

hInterface	the Interface on which to register the device removal event handler
hDeviceRemovalEventHandler	The device removal event handler to register

#### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

## 11.11.2.7 spinInterfaceRegisterInterfaceEventHandler()

```
\begin{tabular}{ll} SPINNAKERC\_API & spinInterfaceRegisterInterfaceEventHandler & \\ & spinInterface & hInterface, \\ & spinInterfaceEventHandler & hInterfaceEventHandler & \\ \end{tabular}
```

Registers an interface event handler (both device arrival and device removal) on an interface.

## See also

spinError

## **Parameters**

hInterface	The interface on which to register the interface event handler
hInterfaceEventHandler	The interface event handler to register

# Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.11.2.8 spinInterfaceRelease()

Releases an interface.

See also

spinError

# **Parameters**

hInterface The interface to release
-------------------------------------

11.11 Interface Access 179

#### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.11.2.9 spinInterfaceSendActionCommand()

Broadcast an Action Command to all devices on interface.

#### See also

spinError

## **Parameters**

iDeviceKey	The Action Command's device key
iGroupKey	The Action Command's group key
iGroupMask	The Action Command's group mask
iActionTime	(Optional) Time when to assert a future action. Zero means immediate action.
piResultSize	(Optional) The number of results in the results array. The value passed should be equal to the expected number of devices that acknowledge the command. Returns the number of received results.
results	(Optional) An Array with *piResultSize elements to hold the action command result status. The buffer is filled starting from index 0. If received results are less than expected number of devices that acknowledge the command, remaining results are not changed. If received results are more than expected number of devices that acknowledge the command, extra results are ignored and not appended to array. This parameter is ignored if piResultSize is 0. Thus this parameter can be NULL if pResultSize is 0 or NULL.

## Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.11.2.10 spinInterfaceUnregisterDeviceArrivalEventHandler()

```
\begin{tabular}{ll} SPINNAKERC\_API & spinInterfaceUnregisterDeviceArrivalEventHandler & spinInterface & hInterface, \\ & spinDeviceArrivalEventHandler & hDeviceArrivalEventHandler & property & property & handler & hDeviceArrivalEventHandler & property & handler & hDeviceArrivalEventHandler & property & handler & hDeviceArrivalEventHandler & hDeviceArrivalEventH
```

Unregisters a device arrival event handler from an interface.

## See also

spinError

# **Parameters**

hInterface	The interface from which to unregister the device arrival event handler
hDeviceArrivalEventHandler	The device arrival event handler to unregister

#### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.11.2.11 spinInterfaceUnregisterDeviceRemovalEventHandler()

```
{\tt SPINNAKERC\_API} \ \ spinInterfaceUnregisterDeviceRemovalEventHandler \ ( spinInterface \ \ hInterface, spinDeviceRemovalEventHandler \ \ hDeviceRemovalEventHandler \ )
```

Unregisters a device removal event handler from an interface.

## See also

spinError

#### **Parameters**

hInterface	The interface from which to unregister the device removal event handler
hDeviceRemovalEventHandler	The device removal event handler to unregister

## Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.11.2.12 spinInterfaceUnregisterInterfaceEventHandler()

```
\begin{tabular}{ll} SPINNAKERC\_API & spinInterfaceUnregisterInterfaceEventHandler & \\ & spinInterface & hInterface, \\ & spinInterfaceEventHandler & hInterfaceEventHandler & \\ \end{tabular}
```

Unregisters an interface event handler from an interface.

# See also

11.11 Interface Access 181

# **Parameters**

hInterface	The interface from which to unregister the interface event handler
hInterfaceEventHandler	The interface event handler to unregister

## Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.11.2.13 spinInterfaceUpdateCameras()

Checks whether any cameras have been connected or disconnected on an interface.

## See also

spinError

# **Parameters**


hInterface	The interface of the list of attached cameras to update
pbChanged	The boolean pointer to return whether or not the cameras have changed

# Returns

## 11.12 Camera Access

The functions in this section provide access to information, objects, and functionality of cameras.

Collaboration diagram for Camera Access:

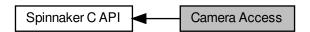

#### **Functions**

SPINNAKERC API spinCameraInit (spinCamera hCamera)

Initializes a camera, allowing for much more interaction.

SPINNAKERC\_API spinCameraDeInit (spinCamera hCamera)

Deinitializes a camera, greatly reducing functionality.

- SPINNAKERC\_API spinCameraGetNodeMap (spinCamera hCamera, spinNodeMapHandle \*phNodeMap)

  Retrieves the GenlCam nodemap from a camera.
- SPINNAKERC\_API spinCameraGetTLDeviceNodeMap (spinCamera hCamera, spinNodeMapHandle \*ph↔ NodeMap)

Retrieves the transport layer device nodemap from a camera.

SPINNAKERC\_API spinCameraGetTLStreamNodeMap (spinCamera hCamera, spinNodeMapHandle \*ph← NodeMap)

Retrieves the transport layer stream nodemap from a camera.

- SPINNAKERC\_API spinCameraGetAccessMode (spinCamera hCamera, spinAccessMode \*pAccessMode)

  Retrieves the access mode of a camera (as an enum, spinAccessMode)
- SPINNAKERC\_API spinCameraReadPort (spinCamera hCamera, uint64\_t iAddress, void \*pBuffer, size\_t iSize)
- SPINNAKERC\_API spinCameraWritePort (spinCamera hCamera, uint64\_t iAddress, void \*pBuffer, size\_t iSize)
- SPINNAKERC\_API spinCameraBeginAcquisition (spinCamera hCamera)

Has a camera start acquiring images.

SPINNAKERC\_API spinCameraEndAcquisition (spinCamera hCamera)

Has a camera stop acquiring images.

SPINNAKERC\_API spinCameraGetNextImage (spinCamera hCamera, spinImage \*phImage)

Retrieves an image from a camera.

 SPINNAKERC\_API spinCameraGetNextImageEx (spinCamera hCamera, uint64\_t grabTimeout, spinImage \*phImage)

Retrieves an image from a camera; manually set the timeout in milliseconds.

• SPINNAKERC\_API spinCameraGetUniqueID (spinCamera hCamera, char \*pBuf, size\_t \*pBufLen)

Retrieves a unique identifier for a camera.

SPINNAKERC\_API spinCameralsStreaming (spinCamera hCamera, bool8\_t \*pblsStreaming)

Checks whether a camera is currently acquiring images.

SPINNAKERC\_API spinCameraGetGuiXml (spinCamera hCamera, char \*pBuf, size\_t \*pBufLen)

Retrieves the GUI XML from a camera.

11.12 Camera Access 183

Registers a universal device event handler (every device event type) to a camera.

Registers a specific device event handler (only one device event type) to a camera.

Unregisters a device event handler from a camera.

Registers an image event handler to a camera.

Unregisters an image event handler from a camera.

• SPINNAKERC\_API spinCameraRelease (spinCamera hCamera)

Releases a camera.

• SPINNAKERC\_API spinCameralsValid (spinCamera hCamera, bool8\_t \*pbValid)

Checks whether a camera is still valid for use.

SPINNAKERC\_API spinCameralsInitialized (spinCamera hCamera, bool8\_t \*pbInit)

Checks whether a camera is currently initialized.

# 11.12.1 Detailed Description

The functions in this section provide access to information, objects, and functionality of cameras.

This includes nodemap retrieval, acquisition and init commands, event handler registration, and camera property retrieval.

# 11.12.2 Function Documentation

#### 11.12.2.1 spinCameraBeginAcquisition()

Has a camera start acquiring images.

See also

spinError

#### **Parameters**

hCamara	The camera to begin acquiring images
ncamera	I The camera to begin acquiring images

## Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.12.2.2 spinCameraDeInit()

```
 \begin{array}{c} {\tt SPINNAKERC\_API} \  \  {\tt spinCameraDeInit} \  \  ( \\ {\tt spinCamera} \  \  {\tt hCamera} \  \  ) \end{array}
```

Deinitializes a camera, greatly reducing functionality.

See also

spinError

## **Parameters**

hCamera	The camera to deinitialize
---------	----------------------------

# Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.12.2.3 spinCameraEndAcquisition()

Has a camera stop acquiring images.

See also

spinError

# **Parameters**

hCamera	The camera to stop acquiring images
mouniora	The earners to stop adquiring images

# Returns

11.12 Camera Access 185

## 11.12.2.4 spinCameraGetAccessMode()

Retrieves the access mode of a camera (as an enum, spinAccessMode)

## See also

```
spinError
spinAccessMode
```

## **Parameters**

hCamera	The camera of the access mode to retrieve
pAccessMode	The access mode enum pointer in which the access mode is returned

## Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.12.2.5 spinCameraGetGuiXml()

Retrieves the GUI XML from a camera.

## See also

spinError

## **Parameters**

hCamera	The camera of the GUI XML to retrieve
pBuf	The c-string character buffer in which the GUI XML is returned
pBufLen	The unsigned integer pointer in which the length of the c-string is returned; the input value is the maximum length

# Returns

# 11.12.2.6 spinCameraGetNextImage()

Retrieves an image from a camera.

See also

spinError

#### **Parameters**

hCamera	The camera of the image to retrieve
phlmage	The image handle pointer in which the image is returned

## Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.12.2.7 spinCameraGetNextImageEx()

Retrieves an image from a camera; manually set the timeout in milliseconds.

See also

spinError

# **Parameters**

hCamera	The camera of the image to retrieve
grabTimeout	The timeout value for returned an image
phlmage	The image handle pointer in which the image is returned

## Returns

11.12 Camera Access 187

## 11.12.2.8 spinCameraGetNodeMap()

Retrieves the GenlCam nodemap from a camera.

See also

spinError

#### **Parameters**

hCamera	The camera from which the nodemap is retrieved
phNodeMap	The nodemap handle pointer in which the nodemap is returned

# Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.12.2.9 spinCameraGetTLDeviceNodeMap()

Retrieves the transport layer device nodemap from a camera.

See also

spinError

## **Parameters**

hCamera	The camera from which the transport layer device nodemap is retrieved
phNodeMap	The nodemap handle pointer in which the nodemap is returned

# Returns

# 11.12.2.10 spinCameraGetTLStreamNodeMap()

Retrieves the transport layer stream nodemap from a camera.

See also

spinError

## **Parameters**

hCamera	The camera from which the transport layer streaming nodemap is retrieved
phNodeMap	The nodemap handle pointer in which the nodemap is returned

## Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.12.2.11 spinCameraGetUniqueID()

Retrieves a unique identifier for a camera.

See also

spinError

# **Parameters**

hCamera	The camera of the unique identifier
pBuf	The c-string character buffer in which the unique identifier is returned
pBufLen	The unsigned integer pointer in which the length of the c-string is returned; the input value is the maximum length

# Returns

11.12 Camera Access 189

## 11.12.2.12 spinCameralnit()

Initializes a camera, allowing for much more interaction.

See also

spinError

#### **Parameters**

# Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

## 11.12.2.13 spinCameralsInitialized()

Checks whether a camera is currently initialized.

See also

spinError

## **Parameters**

hCamera	The camera to check
pblnit	The boolean pointer to return whether or not the camera is initialized

## Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.12.2.14 spinCameralsStreaming()

Checks whether a camera is currently acquiring images.

## See also

spinError

# **Parameters**

hCamera	The camera to check
pblsStreaming	The boolean pointer to return whether or not the camera is currently streaming

## Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.12.2.15 spinCameralsValid()

Checks whether a camera is still valid for use.

# See also

spinError

# **Parameters**

hCamera	The camera to check
pbValid	The boolean pointer to return whether or not the camera is valid

# Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.12.2.16 spinCameraReadPort()

11.12 Camera Access 191

# 11.12.2.17 spinCameraRegisterDeviceEventHandler()

```
\begin{tabular}{ll} SPINNAKERC\_API & spinCameraRegisterDeviceEventHandler & \\ & spinCamera & hCamera, \\ & spinDeviceEventHandler & hDeviceEventHandler & \\ \end{tabular}
```

Registers a universal device event handler (every device event type) to a camera.

See also

spinError

#### **Parameters**

hCamera	The camera on which to register the universal device event handler
hDeviceEventHandler	The device event handler to register

## Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.12.2.18 spinCameraRegisterDeviceEventHandlerEx()

Registers a specific device event handler (only one device event type) to a camera.

See also

spinError

## **Parameters**

hCamera	The camera on which to register the specific device event handler
hDeviceEventHandler	The device event handler to register
pName	The name of the device event handler to register

# Returns

# 11.12.2.19 spinCameraRegisterImageEventHandler()

```
\begin{tabular}{ll} SPINNAKERC\_API & spinCameraRegisterImageEventHandler & \\ & spinCamera & hCamera, \\ & spinImageEventHandler & hImageEventHandler & pinImageEventHandler & pinImage
```

Registers an image event handler to a camera.

See also

spinError

#### **Parameters**

hCamera		The camera on which to register the image event handler
hlmageEventHandler		The image event handler to register

## Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.12.2.20 spinCameraRelease()

Releases a camera.

See also

spinError

## **Parameters**

## Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.12.2.21 spinCameraUnregisterDeviceEventHandler()

```
{\tt SPINNAKERC\_API \ spinCameraUnregisterDeviceEventHandler \ (} \\ {\tt spinCamera} \ hCamera, \\ {\tt spinDeviceEventHandler} \ hDeviceEventHandler \ )}
```

Unregisters a device event handler from a camera.

11.12 Camera Access 193

## See also

spinError

# **Parameters**

hCamera	The camera from which to unregister the device event handler
hDeviceEventHandler	The device event handler to unregister

## Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.12.2.22 spinCameraUnregisterImageEventHandler()

```
\begin{tabular}{ll} SPINNAKERC\_API & spinCameraUnregisterImageEventHandler & \\ & spinCamera & hCamera, \\ & spinImageEventHandler & hImageEventHandler & \end{tabular} \label{table}
```

Unregisters an image event handler from a camera.

## See also

spinError

## **Parameters**

hCamera	The camera from which to unregister the image event handler
hlmageEventHandler	The image event handler to unregister

## Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.12.2.23 spinCameraWritePort()

# 11.13 Image Access

The functions in this section provide access to information and functionality of images.

## **Functions**

SPINNAKERC\_API spinImageCreateEmpty (spinImage \*phImage)

Creates an empty image; images created this way must be destroyed.

SPINNAKERC API spinImageCreate (spinImage hSrcImage, spinImage \*phDestImage)

Creates an image from another; images created this way must be destroyed.

SPINNAKERC\_API spinImageCreateEx (spinImage \*phImage, size\_t width, size\_t height, size\_t offsetX, size t offsetY, spinPixelFormatEnums pixelFormat, void \*pData)

Creates an image with some set properties; images created this way must be destroyed.

SPINNAKERC\_API spinImageCreateEx2 (spinImage \*phImage, size\_t width, size\_t height, size\_t offsetX, size\_t offsetY, spinPixelFormatEnums pixelFormat, void \*pData, spinPayloadTypeInfoIDs dataPayloadType, size t dataSize)

Creates an image with some set properties; images created this way must be destroyed.

• SPINNAKERC\_API spinImageDestroy (spinImage hImage)

Destroys an image.

SPINNAKERC API spinImageSetDefaultColorProcessing (spinColorProcessingAlgorithm algorithm)

Sets the default color processing algorithm of all images (if not otherwise set)

SPINNAKERC\_API spinImageGetDefaultColorProcessing (spinColorProcessingAlgorithm \*pAlgorithm)

Retrieves the default color processing algorithm.

SPINNAKERC\_API spinImageGetColorProcessing (spinImage hImage, spinColorProcessingAlgorithm \*p
 — Algorithm)

Retrieves the color processing algorithm of a specific image.

SPINNAKERC API spinImageSetNumDecompressionThreads (unsigned int numThreads)

Sets the default number of threads used for image decompression during spinImageConvert().

SPINNAKERC\_API spinImageGetNumDecompressionThreads (unsigned int \*pNumThreads)

Gets the number of threads used for image decompression during Convert().

Converts the pixel format of one image into a new image.

• SPINNAKERC\_API spinImageConvertEx (spinImage hSrcImage, spinPixelFormatEnums pixelFormat, spinColorProcessingAlgorithm algorithm, spinImage hDestImage)

Converts the pixel format and color processing algorithm of one image into a new image.

SPINNAKERC\_API spinImageReset (spinImage hImage, size\_t width, size\_t height, size\_t offsetX, size\_t offsetY, spinPixelFormatEnums pixelFormat)

Resets an image with some set properties.

SPINNAKERC\_API spinImageResetEx (spinImage hImage, size\_t width, size\_t height, size\_t offsetX, size
 \_t offsetY, spinPixelFormatEnums pixelFormat, void \*pData)

Resets an image with some set properties and image data.

SPINNAKERC\_API spinImageGetID (spinImage hImage, uint64\_t \*pId)

Retrieves the ID of an image.

SPINNAKERC API spinImageGetData (spinImage hImage, void \*\*ppData)

Retrieves the image data of an image.

SPINNAKERC\_API spinImageGetPrivateData (spinImage hImage, void \*\*ppData)

Retrieves the private data of an image.

SPINNAKERC API spinImageGetBufferSize (spinImage hImage, size t \*pSize)

Retrieves the buffer size of an image.

• SPINNAKERC\_API spinImageDeepCopy (spinImage hSrcImage, spinImage hDestImage)

Creates a deep copy of an image (the destination image must be created as an empty image prior to the deep copy)

SPINNAKERC\_API spinImageGetWidth (spinImage hImage, size\_t \*pWidth)

Retrieves the width of an image.

SPINNAKERC API spinImageGetHeight (spinImage hImage, size t \*pHeight)

Retrieves the height of an image.

SPINNAKERC API spinImageGetOffsetX (spinImage hImage, size t \*pOffsetX)

Retrieves the offset of an image along its X axis.

SPINNAKERC API spinImageGetOffsetY (spinImage hImage, size t \*pOffsetY)

Retrieves the offset of an image along its Y axis.

SPINNAKERC\_API spinImageGetPaddingX (spinImage hImage, size\_t \*pPaddingX)

Retrieves the padding of an image along its X axis.

SPINNAKERC API spinImageGetPaddingY (spinImage hImage, size t\*pPaddingY)

Retrieves the padding of an image along its Y axis.

SPINNAKERC\_API spinImageGetFrameID (spinImage hImage, uint64\_t \*pFrameID)

Retrieves the frame ID of an image.

SPINNAKERC API spinImageGetTimeStamp (spinImage hImage, uint64 t\*pTimeStamp)

Retrieves the timestamp of an image.

• SPINNAKERC\_API spinImageGetPayloadType (spinImage hImage, size\_t \*pPayloadType)

Retrieves the payload type of an image (as an enum, spinPayloadTypeInfolds)

SPINNAKERC\_API spinImageGetTLPayloadType (spinImage hImage, spinPayloadTypeInfoIDs \*pPayload →
Type)

Retrieves the transport layer payload type of an image (as an enum, spinPayloadTypeInfolds)

• SPINNAKERC\_API spinImageGetPixelFormat (spinImage hImage, spinPixelFormatEnums \*pPixelFormat)

Retrieves the pixel format of an image (as an enum, spinPixelFormatEnums)

SPINNAKERC API spinImageGetTLPixelFormat (spinImage hImage, uint64 t \*pPixelFormat)

Retrieves the transport layer pixel format of an image (as an unsigned integer)

SPINNAKERC\_API spinImageGetTLPixelFormatNamespace (spinImage hImage, spinPixelFormat← NamespaceID \*pPixelFormatNamespace)

Retrieves the transport layer pixel format namespace of an image (as an enum, spinPixelFormatNamespaceID)

SPINNAKERC\_API spinImageGetPixelFormatName (spinImage hImage, char \*pBuf, size\_t \*pBufLen)

Retrieves the pixel format of an image (as a symbolic)

SPINNAKERC API spinImageIsIncomplete (spinImage hImage, bool8 t \*pbIsIncomplete)

Checks whether an image is incomplete.

SPINNAKERC\_API spinImageGetValidPayloadSize (spinImage hImage, size\_t \*pSize)

Retrieves the valid payload size of an image.

SPINNAKERC\_API spinImageSave (spinImage hImage, const char \*pFilename, spinImageFileFormat format)

Saves an image using a specified file format (using an enum, spinImageFileFormat)

SPINNAKERC\_API spinImageSaveFromExt (spinImage hImage, const char \*pFilename)

Saves an image using a specified file format (using the extension of the filename)

SPINNAKERC\_API spinImageSavePng (spinImage hImage, const char \*pFilename, const spinPNGOption \*pOption)

Saves an image as a PNG image.

SPINNAKERC\_API spinImageSavePpm (spinImage hImage, const char \*pFilename, const spinPPMOption \*pOption)

Saves an image as a PPM image.

SPINNAKERC\_API spinImageSavePgm (spinImage hImage, const char \*pFilename, const spinPGMOption \*pOption)

Saves an image as an PGM image.

SPINNAKERC\_API spinImageSaveTiff (spinImage hImage, const char \*pFilename, const spinTIFFOption \*pOption)

Saves an image as a TIFF image.

SPINNAKERC\_API spinImageSaveJpeg (spinImage hImage, const char \*pFilename, const spinJPEGOption \*pOption)

Saves an image as a JPEG image.

SPINNAKERC\_API spinImageSaveJpg2 (spinImage hImage, const char \*pFilename, const spinJPG2Option \*pOption)

Saves an image as a JPEG 2000 image.

SPINNAKERC\_API spinImageSaveBmp (spinImage hImage, const char \*pFilename, const spinBMPOption \*pOption)

Saves an image as a BMP image.

SPINNAKERC API spinImageGetChunkLayoutID (spinImage hImage, uint64 t \*pId)

Retrieves the chunk layout ID of an image.

- SPINNAKERC\_API spinImageCalculateStatistics (spinImage hImage, const spinImageStatistics hStatistics)

  Calculates the image statistics of an image.
- SPINNAKERC API spinImageGetStatus (spinImage hImage, spinImageStatus \*pStatus)

Retrieves the image status of an image.

- SPINNAKERC\_API spinImageGetStatusDescription (spinImageStatus status, char \*pBuf, size\_t \*pBufLen)

  Retrieves the description of image status.
- SPINNAKERC API spinImageRelease (spinImage hImage)

Releases an image.

• SPINNAKERC\_API spinImageHasCRC (spinImage hImage, bool8\_t \*pbHasCRC)

Checks whether an image has CRC.

SPINNAKERC API spinImageCheckCRC (spinImage hImage, bool8 t \*pbCheckCRC)

Checks whether the CRC of an image is correct.

• SPINNAKERC\_API spinImageGetBitsPerPixel (spinImage hImage, size\_t \*pBitsPerPixel)

Retrieves the number of bits per pixel of an image.

SPINNAKERC API spinImageGetSize (spinImage hImage, size t \*pImageSize)

Retrieves the size of an image.

• SPINNAKERC\_API spinImageGetStride (spinImage hImage, size\_t \*pStride)

Retrieves the stride of an image.

#### 11.13.1 Detailed Description

The functions in this section provide access to information and functionality of images.

This includes creation, destruction, and saving as well as a wealth of information including things like width, height, stride, and timestamp.

#### 11.13.2 Function Documentation

## 11.13.2.1 spinImageCalculateStatistics()

```
\begin{tabular}{ll} SPINNAKERC\_API & spinImageCalculateStatistics ( & spinImage & $hImage$, \\ & const & spinImageStatistics & $hStatistics$ ) \end{tabular}
```

Calculates the image statistics of an image.

See also

#### **Parameters**

hlmage	The image to be saved
hStatistics	The image statistics context in which the calculated statistics are returned

#### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

## 11.13.2.2 spinImageCheckCRC()

Checks whether the CRC of an image is correct.

#### See also

spinError

#### **Parameters**

hlmage	The image to be saved
pbCheckCRC	The boolean pointer to return whether the image CRC passes

# Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.13.2.3 spinImageConvert()

Converts the pixel format of one image into a new image.

# See also

#### **Parameters**

hSrcImage	The image to be converted
pixelFormat	The pixel format to be converted to
hDestImage	The image handle pointer in which the converted image is returned

#### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

## 11.13.2.4 spinImageConvertEx()

Converts the pixel format and color processing algorithm of one image into a new image.

#### See also

spinError

#### **Parameters**

hSrcImage	The image to be converted
pixelFormat	The pixel format to be converted to
algorithm	The color processing algorithm to use for conversion
hDestImage	The image handle pointer in which the converted image is returned

# Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

## 11.13.2.5 spinImageCreate()

Creates an image from another; images created this way must be destroyed.

# See also

#### **Parameters**

hSrcImage	The image to be copied
phDestImage	The image handle pointer of the image to be created

#### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

## 11.13.2.6 spinImageCreateEmpty()

Creates an empty image; images created this way must be destroyed.

See also

spinError

#### **Parameters**

phlmage	The image handle pointer in which the empty image is returned

### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.13.2.7 spinImageCreateEx()

Creates an image with some set properties; images created this way must be destroyed.

## See also

#### **Parameters**

phlmage	The image handle pointer in which the image is returned
width	The width to set
height	The height to set
offsetX	The offset along the X axis to set
offsetY	The offset along the Y axis to set
pixelFormat	The pixel format to set
pData	The image data to set; can be set to null

## Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.13.2.8 spinImageCreateEx2()

Creates an image with some set properties; images created this way must be destroyed.

## See also

```
spinError
spinImageGetTLPayloadType
```

phlmage	The image handle pointer in which the image is returned
width	The width to set
height	The height to set
offsetX	The offset along the X axis to set
offsetY	The offset along the Y axis to set
pixelFormat	The pixel format to set
pData	The image data to set; can be set to null
dataPayloadType	The payload type of the data. This value can be retrieved from an existing image by using the spinImageGetTLPayloadType() function call.
dataSize	The size of the provided data in bytes

#### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

## 11.13.2.9 spinImageDeepCopy()

Creates a deep copy of an image (the destination image must be created as an empty image prior to the deep copy)

# See also

spinError

#### **Parameters**

hSrcImage	The image to be copied
hDestImage	The image handle in which the image is copied

#### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

## 11.13.2.10 spinImageDestroy()

Destroys an image.

See also

spinError

## **Parameters**

hlmage	The image to destroy
--------	----------------------

# Returns

## 11.13.2.11 spinImageGetBitsPerPixel()

Retrieves the number of bits per pixel of an image.

See also

spinError

#### **Parameters**

hlmage	The image to be saved
pBitsPerPixel	The unsigned integer pointer in which the number of bits per pixel is returned

#### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

## 11.13.2.12 spinImageGetBufferSize()

Retrieves the buffer size of an image.

See also

spinError

# **Parameters**

hlmage	The image of image data buffer to retrieve
pSize	The unsigned integer pointer in which the size of the image data if returned

#### Returns

## 11.13.2.13 spinImageGetChunkLayoutID()

Retrieves the chunk layout ID of an image.

See also

spinError

#### **Parameters**

hlmage	The image to be saved
pld	The unsigned integer pointer in which the chunk layout ID is returned

#### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

## 11.13.2.14 spinImageGetColorProcessing()

Retrieves the color processing algorithm of a specific image.

See also

spinError

# **Parameters**

hlmage	The image of the color processing algorithm to retrieve
pAlgorithm	The color processing algorithm pointer in which the color processing algorithm is returned

# Returns

## 11.13.2.15 spinImageGetData()

Retrieves the image data of an image.

See also

spinError

#### **Parameters**

hlmage	The image of the image data to retrieve
ppData	The pointer to the void pointer in which the image data is retrieved

#### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

## 11.13.2.16 spinImageGetDefaultColorProcessing()

Retrieves the default color processing algorithm.

See also

spinError

#### **Parameters**

## Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

## 11.13.2.17 spinImageGetFrameID()

Retrieves the frame ID of an image.

#### See also

spinError

## **Parameters**

hlmage	The image of the frame ID to retrieve
pFrameID	The unsigned integer pointer in which the frame ID is returned

#### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.13.2.18 spinImageGetHeight()

Retrieves the height of an image.

# See also

spinError

#### **Parameters**

hlmage	The image of the height to retrieve
pHeight	The unsigned integer pointer in which the height is returned

#### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.13.2.19 spinImageGetID()

Retrieves the ID of an image.

# See also

#### **Parameters**

hlmage	The image of the ID to retrieve
pld	The unsigned integer pointer in which the ID is returned

#### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

#### 11.13.2.20 spinImageGetNumDecompressionThreads()

```
\begin{tabular}{ll} SPINNAKERC\_API & spinImageGetNumDecompressionThreads & ( & unsigned int * pNumThreads & ) \end{tabular}
```

Gets the number of threads used for image decompression during Convert().

#### **Parameters**

pNumThreads	The pointer indicating the number of parallel image decompression threads set to run
p. 10 1 0 010.0	The point of the control of point and the point and the point and the control of

### See also

spinImageSetNumDecompressionThreads()

# Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

## 11.13.2.21 spinImageGetOffsetX()

Retrieves the offset of an image along its X axis.

#### See also

spinError

	hlmage	The image of the offset along the X axis to retrieve
pOffsetX	pOffsetX	The unsigned integer pointer in which the offset along the X axis is returned

#### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.13.2.22 spinImageGetOffsetY()

Retrieves the offset of an image along its Y axis.

# See also

spinError

#### **Parameters**

hlmage	The image of the offset along the Y axis to retrieve
pOffsetY	The unsigned integer pointer in which the offset along the Y axis is returned

#### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

#### 11.13.2.23 spinImageGetPaddingX()

Retrieves the padding of an image along its X axis.

#### See also

spinError

hlmage	The image of the padding along the X axis to retrieve
pPaddingX	The unsigned integer pointer in which the padding along the X axis is returned

#### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.13.2.24 spinImageGetPaddingY()

Retrieves the padding of an image along its Y axis.

# See also

spinError

#### **Parameters**

hlmage	The image of the padding along the Y axis to retrieve
pPaddingY	The unsigned integer pointer in which the padding along the Y axis is returned

## Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.13.2.25 spinImageGetPayloadType()

Retrieves the payload type of an image (as an enum, spinPayloadTypeInfolds)

#### See also

```
spinError
spinPayloadTypeInfolds
```

hlmage	The image of the payload type to retrieve
pPayloadType	The payload type enum pointer in which the payload type is returned

#### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.13.2.26 spinImageGetPixelFormat()

Retrieves the pixel format of an image (as an enum, spinPixelFormatEnums)

# See also

```
spinError
spinPixelFormatEnums
```

#### **Parameters**

hlmage	The image of the pixel format to retrieve	]
pPixelFormat	The pixel format enum pointer in which the pixel format is returned	]

### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.13.2.27 spinImageGetPixelFormatName()

Retrieves the pixel format of an image (as a symbolic)

# See also

spinError

hlmage	The image of the pixel format to retrieve
pBuf	The c-string character buffer in which the pixel format symbolic is returned
pBufLen	The unsigned integer pointer in which the length of the c-string is returned; the input value is the maximum length

#### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.13.2.28 spinImageGetPrivateData()

Retrieves the private data of an image.

## See also

spinError

#### **Parameters**

hlmage	The image of the private image data to retrieve
ppData	The pointer to the void pointer in which the private image data is retrieved

# Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.13.2.29 spinImageGetSize()

Retrieves the size of an image.

#### See also

spinError

hlmage	The image to be saved
plmageSize	The unsigned integer pointer in which the size of the image is returned

#### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.13.2.30 spinImageGetStatus()

```
SPINNAKERC_API spinImageGetStatus ( spinImage\ hImage, spinImageStatus\ *\ pStatus\ )
```

Retrieves the image status of an image.

See also

spinError

#### **Parameters**

hlmage	The image to be saved
pStatus	The status enum pointer in which the image status is returned

#### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

## 11.13.2.31 spinImageGetStatusDescription()

Retrieves the description of image status.

See also

spinError

status	The status enum
pBuf	The c-string character buffer in which the explanation of image status enum is returned
pBufLen	The unsigned integer pointer in which the length of the c-string is returned; the input value is the maximum length; if pBuf is NULL, minimum length of string buffer is returned

#### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.13.2.32 spinImageGetStride()

Retrieves the stride of an image.

## See also

spinError

#### **Parameters**

hlma	ige	The image to be saved
pStri	de	The unsigned integer pointer in which the stride is returned

# Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.13.2.33 spinImageGetTimeStamp()

Retrieves the timestamp of an image.

#### See also

spinError

hlmage	The image of the timestamp to retrieve
pTimeStamp	The unsigned integer pointer om which the timestamp is returned

#### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.13.2.34 spinImageGetTLPayloadType()

```
\label{eq:spinnakerc_api} $$\operatorname{spinImage} \ hImage,$$ \operatorname{spinPayloadTypeInfoIDs} * pPayloadType \ )
```

Retrieves the transport layer payload type of an image (as an enum, spinPayloadTypeInfolds)

# See also

```
spinError
spinPayloadTypeInfolds
```

#### **Parameters**

hlmage	The image of the TL payload type to retrieve
pPayloadType	The payload type enum pointer in which the TL payload type is returned

### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.13.2.35 spinImageGetTLPixelFormat()

Retrieves the transport layer pixel format of an image (as an unsigned integer)

### See also

spinError

hlmage	The image of the TL pixel format to retrieve
pPixelFormat	The unsigned integer pointer in which the TL pixel format is returned

#### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.13.2.36 spinImageGetTLPixelFormatNamespace()

```
\label{eq:spinnakerc_api} $$\operatorname{spinImageGetTLPixelFormatNamespace} \ ($$\operatorname{spinImage} \ hImage, $$ \operatorname{spinPixelFormatNamespaceID} * pPixelFormatNamespace \ )
```

Retrieves the transport layer pixel format namespace of an image (as an enum, spinPixelFormatNamespaceID)

## See also

```
spinError
spinPixelFormatNamespaceID
```

#### **Parameters**

hlmage	The image of the TL pixel format namespace to retrieve
pPixelFormatNamespace	The pixel format namespace pointer in which the pixel format namespace is returned

### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.13.2.37 spinImageGetValidPayloadSize()

Retrieves the valid payload size of an image.

### See also

spinError

hlmage	The image of the payload size to retrieve
pSize	The unsigned integer pointer in which the size of the valid payload is returned

#### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.13.2.38 spinImageGetWidth()

Retrieves the width of an image.

See also

spinError

#### **Parameters**

hlmage	The image of the width to retrieve
pWidth	The unsigned integer pointer in which the width is returned

# Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

## 11.13.2.39 spinImageHasCRC()

Checks whether an image has CRC.

See also

spinError

hlmage	The image to be saved
pbHasCRC	The boolean pointer to return whether the image has CRC available

#### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.13.2.40 spinImageIsIncomplete()

Checks whether an image is incomplete.

See also

spinError

#### **Parameters**

hlmage	The image to check
pblsIncomplete	The boolean pointer to return whether or not the image is incomplete

## Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.13.2.41 spinImageRelease()

```
 \begin{array}{c} {\tt SPINNAKERC\_API} \  \, {\tt spinImageRelease} \  \, (\\ {\tt spinImage} \  \, h{\tt Image} \  \, ) \end{array}
```

Releases an image.

See also

spinError

## **Parameters**

hlmage The image to be saved
------------------------------

# Returns

#### 11.13.2.42 spinImageReset()

Resets an image with some set properties.

#### See also

 ${\bf spinError}$ 

## **Parameters**

hlmage	The image to be reset
width	The width to be reset to
height	The height to be reset to
offsetX	The offset to be reset to along the X axis
offsetY	The offset to be reset to along the Y axis
pixelFormat	The pixel format to be reset to

### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.13.2.43 spinImageResetEx()

```
SPINNAKERC_API spinImageResetEx (
    spinImage hImage,
    size_t width,
    size_t height,
    size_t offsetX,
    size_t offsetY,
    spinPixelFormatEnums pixelFormat,
    void * pData )
```

Resets an image with some set properties and image data.

#### See also

spinError

hlmage	The image to reset

#### **Parameters**

width	The width to be reset to
height	The height to be reset to
offsetX	The offset to be reset to along the X axis
offsetY	The offset to be reset to along the Y axis
pixelFormat	The pixel format to be reset to
pData	The image data to reset to

#### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.13.2.44 spinImageSave()

Saves an image using a specified file format (using an enum, spinImageFileFormat)

### See also

```
spinError
spinImageFileFormat
```

### **Parameters**

hlmage	The image to be saved
pFilename	The filename to use to save the image (with or without the appropriate file extension) format The file format to use to save the image

#### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.13.2.45 spinImageSaveBmp()

Saves an image as a BMP image.

#### See also

spinError

## **Parameters**

hlmage	The image to be saved
pFilename	The filename to use to save the image (with or without the appropriate file extension)
pOption	The image options related to saving as BMP; includes whether to save as indexed 8-bit

#### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.13.2.46 spinImageSaveFromExt()

```
 \begin{array}{c} {\tt SPINNAKERC\_API} \  \, {\tt spinImageSaveFromExt} \  \, (\\ {\tt spinImage} \  \, hImage, \\ {\tt const} \  \, {\tt char} \  \, * \, pFilename \  \, ) \end{array}
```

Saves an image using a specified file format (using the extension of the filename)

## See also

spinError

# Parameters

hlmage	The image to be saved	
pFilename	The filename to use to save the image (with or without the appropriate file extension)	

# Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

#### 11.13.2.47 spinImageSaveJpeg()

Saves an image as a JPEG image.

# See also

#### **Parameters**

hlmage The image to be saved	
pFilename	The filename to use to save the image (with or without the appropriate file extension)
pOption	The image options related to saving as JPEG; includes quality and whether to save as progressive

### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

## 11.13.2.48 spinImageSaveJpg2()

Saves an image as a JPEG 2000 image.

See also

spinError

### **Parameters**

hlmage The image to be saved		
pFilename	The filename to use to save the image (with or without the appropriate file extension)	
pOption	The image options related to saving as JPEG 2000; includes quality	

# Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.13.2.49 spinImageSavePgm()

Saves an image as an PGM image.

See also

#### **Parameters**

hlmage	hImage The image to be saved	
pFilename	The filename to use to save the image (with or without the appropriate file extension	
pOption	The image options related to saving as PGM; includes whether to save as binary	

#### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.13.2.50 spinImageSavePng()

Saves an image as a PNG image.

See also

spinError

### **Parameters**

hlmage	The image to be saved	
pFilename	The filename to use to save the image (with or without the appropriate file extension)	
pOption	The image options related to saving as PNG; includes compression level and whether to save as	
	interlaced	

# Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

## 11.13.2.51 spinImageSavePpm()

Saves an image as a PPM image.

See also

#### **Parameters**

hlmage	The image to be saved	
pFilename	The filename to use to save the image (with or without the appropriate file extension	
pOption The image options related to saving as PPM; includes whether to save as bina		

#### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.13.2.52 spinImageSaveTiff()

Saves an image as a TIFF image.

See also

spinError

### **Parameters**

hlmage The image to be saved		
pFilename	The filename to use to save the image (with or without the appropriate file extension	
pOption The image options related to saving as TIFF; includes compression method		

## Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.13.2.53 spinImageSetDefaultColorProcessing()

```
\begin{tabular}{ll} SPINNAKERC\_API & spinImageSetDefaultColorProcessing & ( & spinColorProcessingAlgorithm & algorithm & ( & spinColorProcessingAlgorithm) & ( & spinColorPr
```

Sets the default color processing algorithm of all images (if not otherwise set)

See also

#### **Parameters**

algorithm	The color processing algorithm used by default
-----------	--

## Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

## 11.13.2.54 spinImageSetNumDecompressionThreads()

```
\begin{tabular}{ll} SPINNAKERC\_API & spinImageSetNumDecompressionThreads & ( & unsigned & int & numThreads & ) \end{tabular}
```

Sets the default number of threads used for image decompression during spinImageConvert().

The number of threads used is defaulted to be equal to one less than the number of concurrent threads supported by the system.

#### **Parameters**

numThreads	Number of parallel image decompression threads set to run
------------	---

#### See also

spinImageConvert()

## Returns

#### 11.14 Event Access

The functions in this section allow for the creation and destruction of events.

#### **Functions**

SPINNAKERC\_API spinDeviceEventHandlerCreate (spinDeviceEventHandler \*phDeviceEventHandler, spinDeviceEventFunction pFunction, void \*pUserData)

Creates a device event handler.

SPINNAKERC\_API spinDeviceEventHandlerDestroy (spinDeviceEventHandler hDeviceEventHandler)

Destroys a device event handler.

Creates an image event handler.

SPINNAKERC API spinImageEventHandlerDestroy (spinImageEventHandler hImageEventHandler)

Destroys an image event handler.

SPINNAKERC\_API spinDeviceArrivalEventHandlerCreate (spinDeviceArrivalEventHandler \*phDevice←
 ArrivalEventHandler, spinArrivalEventFunction pFunction, void \*pUserData)

Creates a device arrival event handler.

SPINNAKERC\_API spinDeviceArrivalEventHandlerDestroy (spinDeviceArrivalEventHandler hDevice ← ArrivalEventHandler)

Destroys a device arrival event handler.

SPINNAKERC\_API spinDeviceRemovalEventHandlerCreate (spinDeviceRemovalEventHandler \*ph←
DeviceRemovalEventHandler, spinRemovalEventFunction pFunction, void \*pUserData)

Creates a device removal event handler.

Destroys a device removal event handler.

• SPINNAKERC\_API spinInterfaceEventHandlerCreate (spinInterfaceEventHandler \*phInterfaceEvent← Handler, spinArrivalEventFunction pArrivalFunction, spinRemovalEventFunction pRemovalFunction, void \*pUserData)

Creates an interface event handler (both device arrival and device removal)

SPINNAKERC\_API spinInterfaceEventHandlerDestroy (spinInterfaceEventHandler hInterfaceEventHandler)
 Destroys an interface event handler (both device arrival and device removal)

• SPINNAKERC\_API spinLogEventHandlerCreate (spinLogEventHandler \*phLogEventHandler, spinLog← EventFunction pFunction, void \*pUserData)

Creates a log event handler.

SPINNAKERC\_API spinLogEventHandlerDestroy (spinLogEventHandler hLogEventHandler)

Destroys a log event handler.

### 11.14.1 Detailed Description

The functions in this section allow for the creation and destruction of events.

#### 11.14.2 Function Documentation

11.14 Event Access 225

#### 11.14.2.1 spinDeviceArrivalEventHandlerCreate()

Creates a device arrival event handler.

See also

spinError

#### **Parameters**

phDeviceArrivalEventHandler	The device arrival event handler pointer in which the device arrival event
	context is created
pFunction	The function to be called at device event occurrences; signature to match:
	void( <em>spinArrivalEventFunction)(void pUserData)</em>
pUserData	Properties that can be passed into the event function

#### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

## 11.14.2.2 spinDeviceArrivalEventHandlerDestroy()

```
SPINNAKERC_API spinDeviceArrivalEventHandlerDestroy (
spinDeviceArrivalEventHandler hDeviceArrivalEventHandler)
```

Destroys a device arrival event handler.

See also

spinError

## **Parameters**

hDeviceArrivalEventHandler	The device arrival event handler to destroy
----------------------------	---

#### Returns

## 11.14.2.3 spinDeviceEventHandlerCreate()

Creates a device event handler.

See also

spinError

#### **Parameters**

phDeviceEventHandler	The device event handler pointer in which the device event context is created
pFunction	The function to be called at device event occurrences; signature to match: void( <em>spinDeviceEventFunction)(const spinDeviceEventData hEventData, const char pEventName, void* pUserData)</em>
pUserData	Properties that can be passed into the event function

#### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.14.2.4 spinDeviceEventHandlerDestroy()

Destroys a device event handler.

See also

spinError

# **Parameters**

hDeviceEventHandler	The device event handler to destroy
IIDeviceLveriti iaridiei	The device event nationer to destroy

## Returns

11.14 Event Access 227

#### 11.14.2.5 spinDeviceRemovalEventHandlerCreate()

Creates a device removal event handler.

See also

spinError

#### **Parameters**

phDeviceRemovalEventHandler	The device removal event handler pointer in which the device removal event context is created
pFunction	The function to be called at device event occurrences; signature to match: void( <em>spinRemovalEventFunction)(uint64_t deviceSerialNumber, void pUserData)</em>
pUserData	Properties that can be passed into the event function

#### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.14.2.6 spinDeviceRemovalEventHandlerDestroy()

```
{\tt SPINNAKERC\_API} \ spinDeviceRemovalEventHandlerDestroy \ ( \\ spinDeviceRemovalEventHandler \ \textit{hDeviceRemovalEventHandler} \ )
```

Destroys a device removal event handler.

See also

spinError

# Parameters

hDeviceRemovalEventHandler	The device removal event handler to destroy

# Returns

## 11.14.2.7 spinImageEventHandlerCreate()

Creates an image event handler.

See also

spinError

#### **Parameters**

phlmageEventHandler	The image event handler pointer in which the image event context is created
pFunction	The function to be called at image event occurrences; signature to match: void( <em>spinImageEventFunction)(const spinImage hImage, void pUserData)</em>
pUserData	Properties that can be passed into the event function

## Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.14.2.8 spinImageEventHandlerDestroy()

```
\begin{tabular}{ll} SPINNAKERC\_API & spinImageEventHandlerDestroy ( \\ & spinImageEventHandler & hImageEventHandler ) \end{tabular}
```

Destroys an image event handler.

See also

spinError

# **Parameters**

hImageEventHandler The image event handler to dest
--

#### Returns

11.14 Event Access 229

#### 11.14.2.9 spinInterfaceEventHandlerCreate()

Creates an interface event handler (both device arrival and device removal)

See also

spinError

#### **Parameters**

phInterfaceEventHandler	The interface event handler pointer in which the interface event context is created
pArrivalFunction	The function to be called at arrival event occurrences; signature to match: void( <em>spinArrivalEventFunction)(void pUserData)</em>
hRemovalFunction	The function to be called at removal event occurrences; signature to match: void( <em>spinRemovalEventFunction)(uint64_t deviceSerialNumber, void pUserData)</em>
pUserData	Properties that can be passed into the event function

#### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

## 11.14.2.10 spinInterfaceEventHandlerDestroy()

```
\begin{tabular}{ll} SPINNAKERC\_API & spinInterfaceEventHandlerDestroy & \\ & spinInterfaceEventHandler & hInterfaceEventHandler & blacker & black
```

Destroys an interface event handler (both device arrival and device removal)

See also

spinError

### **Parameters**

hInterfaceEventHandler	The interface event handler to destroy
------------------------	--

### Returns

## 11.14.2.11 spinLogEventHandlerCreate()

Creates a log event handler.

See also

spinError

#### **Parameters**

phLogEventHandler	The log event handler pointer in which the log event context is created
pFunction	The function to be called at device event occurrences; signature to match: void( <em>spinLogEventFunction)(const spinLogEventData hEventData, void pUserData)</em>
pUserData	Properties that can be passed into the event function

# Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

## 11.14.2.12 spinLogEventHandlerDestroy()

```
\begin{tabular}{ll} SPINNAKERC\_API & spinLogEventHandlerDestroy & \\ & spinLogEventHandler & hLogEventHandler & particular & particula
```

Destroys a log event handler.

See also

spinError

#### **Parameters**

hLogEventHandler	The log event handler to destroy
------------------	----------------------------------

# Returns

## 11.15 ImageStatistics Access

The functions in this section provide access to information and functionality related to image statistics.

#### **Functions**

SPINNAKERC\_API spinImageStatisticsCreate (spinImageStatistics \*phStatistics)

Creates an image statistics context.

SPINNAKERC\_API spinImageStatisticsDestroy (spinImageStatistics hStatistics)

Destroys an image statistics context.

SPINNAKERC API spinImageStatisticsEnableAll (spinImageStatistics hStatistics)

Enables all channels of an image statistics context.

SPINNAKERC\_API spinImageStatisticsDisableAll (spinImageStatistics hStatistics)

Disables all channels of an image statistics context.

SPINNAKERC\_API spinImageStatisticsEnableGreyOnly (spinImageStatistics hStatistics)

Disables all channels of an image statistics context except grey-scale.

• SPINNAKERC\_API spinImageStatisticsEnableRgbOnly (spinImageStatistics hStatistics)

Disables all channels of an image statistics context except red, blue, and green.

SPINNAKERC API spinImageStatisticsEnableHslOnly (spinImageStatistics hStatistics)

Disables all channels of an image statistics context except hue, saturation, and lightness.

SPINNAKERC\_API spinImageStatisticsGetChannelStatus (spinImageStatistics hStatistics, spinStatistics
 — Channel channel, bool8\_t \*pbEnabled)

Checks whether an image statistics context is enabled.

SPINNAKERC\_API spinImageStatisticsSetChannelStatus (spinImageStatistics hStatistics, spinStatistics ← Channel channel, bool8\_t bEnable)

Sets the status of an image statistics channel.

SPINNAKERC\_API spinImageStatisticsGetRange (spinImageStatistics hStatistics, spinStatisticsChannel channel, unsigned int \*pMin, unsigned int \*pMax)

Retrieves the range of an image statistics channel.

SPINNAKERC\_API spinImageStatisticsGetPixelValueRange (spinImageStatistics hStatistics, spin
 StatisticsChannel channel, unsigned int \*pMin, unsigned int \*pMax)

Retrieves the pixel value range of an image statistics channel.

SPINNAKERC\_API spinImageStatisticsGetNumPixelValues (spinImageStatistics hStatistics, spinStatistics ← Channel channel, unsigned int \*pNumValues)

Retrieves the number of pixel values of an image statistics channel.

SPINNAKERC\_API spinImageStatisticsGetMean (spinImageStatistics hStatistics, spinStatisticsChannel channel, float \*pMean)

Retrieves the mean of pixel values of an image statistics channel.

 SPINNAKERC\_API spinImageStatisticsGetHistogram (spinImageStatistics hStatistics, spinStatisticsChannel channel, int \*\*ppHistogram)

Retrieves a histogram of an image statistics channel.

SPINNAKERC\_API spinImageStatisticsGetAll (spinImageStatistics hStatistics, spinStatisticsChannel channel, unsigned int \*pRangeMin, unsigned int \*pRangeMax, unsigned int \*pPixelValueMin, unsigned int \*pPixelValueMax, unsigned int \*pNumPixelValues, float \*pPixelValueMean, int \*pHistogram)

Retrieves all available information of an image statistics channel.

## 11.15.1 Detailed Description

The functions in this section provide access to information and functionality related to image statistics.

This includes context creation and destruction, the enabling and disabling of channels, and value retrieval.

## 11.15.2 Function Documentation

## 11.15.2.1 spinImageStatisticsCreate()

Creates an image statistics context.

**Parameters** 

phStatistics	The statistics handle pointer in which the image statistics context is returned
prioration	The state of the land points in this in age state to settle the retaining

### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

## 11.15.2.2 spinImageStatisticsDestroy()

```
\begin{tabular}{ll} SPINNAKERC\_API & spinImageStatisticsDestroy ( \\ & spinImageStatistics & hStatistics \end{tabular} )
```

Destroys an image statistics context.

See also

spinError

### **Parameters**

hStatistics The i	mage statistics context to destroy
-------------------	------------------------------------

## Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

## 11.15.2.3 spinImageStatisticsDisableAll()

```
\begin{tabular}{ll} SPINNAKERC\_API & spinImageStatisticsDisableAll & \\ & spinImageStatistics & hStatistics & ) \end{tabular}
```

Disables all channels of an image statistics context.

See also

spinError

### **Parameters**

hStatistics	The image statistics context to disable all channels
-------------	--

### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

## 11.15.2.4 spinImageStatisticsEnableAll()

Enables all channels of an image statistics context.

See also

spinError

#### **Parameters**

hStatistics	The image statistics context to enable all channels
-------------	---

### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

## 11.15.2.5 spinImageStatisticsEnableGreyOnly()

```
\begin{tabular}{ll} SPINNAKERC\_API & spinImageStatisticsEnableGreyOnly & \\ & spinImageStatistics & hStatistics & ) \end{tabular}
```

Disables all channels of an image statistics context except grey-scale.

See also

#### **Parameters**

hStatistics	The image statistics context to enable only grey
-------------	--

## Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

## 11.15.2.6 spinImageStatisticsEnableHslOnly()

Disables all channels of an image statistics context except hue, saturation, and lightness.

See also

spinError

#### **Parameters**

hStatistics	The image statistics context to enable only HSL
-------------	---

## Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

## 11.15.2.7 spinImageStatisticsEnableRgbOnly()

```
\begin{tabular}{ll} SPINNAKERC\_API & spinImageStatisticsEnableRgbOnly & \\ & spinImageStatistics & hStatistics & ) \end{tabular}
```

Disables all channels of an image statistics context except red, blue, and green.

See also

spinError

## **Parameters**

hStatistics	The image statistics context to enable only RGB

#### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

## 11.15.2.8 spinImageStatisticsGetAll()

Retrieves all available information of an image statistics channel.

#### See also

spinError

#### **Parameters**

hStatistics	The image statistics context of the channel
channel	The channel of the information to retrieve
pRangeMin	The unsigned integer pointer in which the minimum value of the range is returned
pRangeMax	The unsigned integer pointer in which the maximum value of the range is returned
pPixelValueMin	The unsigned integer pointer in which the minimum pixel value of the range is returned
pPixelValueMax	The unsigned integer pointer in which the maximum pixel value of the range is returned
pNumPixelValues	The unsigned integer pointer in which the number of pixel values is returned
pPixelValueMean	The float pointer in which the mean pixel value is returned
ppiHistogram	The pointer to the pointer in which the histogram data is returned

## Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

## 11.15.2.9 spinImageStatisticsGetChannelStatus()

Checks whether an image statistics context is enabled.

### See also

spinError

### **Parameters**

hStatistics	The image statistics context of the channel
channel	The channel to check
pbEnabled	The boolean pointer to return whether or not the channel is enabled

### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

## 11.15.2.10 spinImageStatisticsGetHistogram()

Retrieves a histogram of an image statistics channel.

## See also

spinError

### **Parameters**

hStatistics	The image statistics context of the channel
channel	The channel of the histogram to be returned
pHistogram	The pointer to the integer pointer in which the histogram data is returned

#### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

## 11.15.2.11 spinImageStatisticsGetMean()

Retrieves the mean of pixel values of an image statistics channel.

## See also

spinError

### **Parameters**

hStatistics	The image statistics context of the channel
channel	The channel of the mean pixel value to be retrieved
pMean	The float pointer in which the mean pixel value is returned

### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

## 11.15.2.12 spinImageStatisticsGetNumPixelValues()

Retrieves the number of pixel values of an image statistics channel.

## See also

spinError

#### **Parameters**

hStatistics	The image statistics context of the channel
channel	The channel where the pixel values to be counted are
iNumValues	The unsigned integer pointer in which the number of pixel values is returned

#### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

## 11.15.2.13 spinImageStatisticsGetPixelValueRange()

Retrieves the pixel value range of an image statistics channel.

### See also

spinError

## **Parameters**

hStatistics	The image statistics context of the channel	
channel	The channel of the pixel value range to retrieve	
pMin	The unsigned integer pointer in which the minimum value of the pixel value range is returned	
рМах	The unsigned integer pointer in which the maximum value of the pixel value range is returned	

### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

## 11.15.2.14 spinImageStatisticsGetRange()

Retrieves the range of an image statistics channel.

# See also

spinError

### **Parameters**

hStatistics	The image statistics context of the channel	
channel	The channel of the range to retrieve	
pMin	The unsigned integer pointer in which the minimum value of the range is returned	
рМах	The unsigned integer pointer in which the maximum value of the range is returned	

### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

## 11.15.2.15 spinImageStatisticsSetChannelStatus()

Sets the status of an image statistics channel.

## See also

spinError

## **Parameters**

hStatistics	The image statistics context of the channel
channel	The channel to enable/disable
bEnable	The boolean value to set; true enables, false disables

# Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

## 11.16 Logging Event Data Access

The functions in this section allow for the retrieval of logging event data.

## **Functions**

SPINNAKERC\_API spinLogDataGetCategoryName (spinLogEventData hLogEventData, char \*pBuf, size\_t \*pBufLen)

Retrieves the category name of a log event.

- SPINNAKERC\_API spinLogDataGetPriority (spinLogEventData hLogEventData, int64\_t \*pValue)

  Retrieves the priority of a log event.
- SPINNAKERC\_API spinLogDataGetPriorityName (spinLogEventData hLogEventData, char \*pBuf, size\_

   t \*pBufLen)

Retrieves the priority name of a log event.

 SPINNAKERC\_API spinLogDataGetTimestamp (spinLogEventData hLogEventData, char \*pBuf, size\_t \*p↔ BufLen)

Retrieves the timestamp of a log event.

- SPINNAKERC\_API spinLogDataGetNDC (spinLogEventData hLogEventData, char \*pBuf, size\_t \*pBufLen)

  Retrieves the NDC of a log event.
- SPINNAKERC\_API spinLogDataGetThreadName (spinLogEventData hLogEventData, char \*pBuf, size\_
   t \*pBufLen)

Retrieves the thread name of a log event.

SPINNAKERC\_API spinLogDataGetLogMessage (spinLogEventData hLogEventData, char \*pBuf, size\_

 t \*pBufLen)

Retrieves the log message of a log event.

### 11.16.1 Detailed Description

The functions in this section allow for the retrieval of logging event data.

### 11.16.2 Function Documentation

## 11.16.2.1 spinLogDataGetCategoryName()

Retrieves the category name of a log event.

See also

### **Parameters**

hLogEventData	The log event data received from the log event
pBuf	The c-string character buffer in which the category name of the log event is returned
pBufLen	The unsigned integer pointer in which the length of the c-string is returned; the input value is the maximum length

## Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

### 11.16.2.2 spinLogDataGetLogMessage()

Retrieves the log message of a log event.

### See also

spinError

### **Parameters**

hLogEventData	The log event data received from the log event
pBuf	The c-string character buffer in which the log message of the log event is returned
pBufLen	The unsigned integer pointer in which the length of the c-string is returned; the input value is the maximum length

## Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.16.2.3 spinLogDataGetNDC()

Retrieves the NDC of a log event.

## See also

### **Parameters**

hLogEventData	The log event data received from the log event
pBuf	The c-string character buffer in which the NDC of the log event is returned
pBufLen	The unsigned integer pointer in which the length of the c-string is returned; the input value is the maximum length

### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

## 11.16.2.4 spinLogDataGetPriority()

Retrieves the priority of a log event.

### See also

spinError

## **Parameters**

hLogEventData	The log event data received from the log event
pValue	The integer pointer in which the priority value is returned

### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.16.2.5 spinLogDataGetPriorityName()

Retrieves the priority name of a log event.

## See also

#### **Parameters**

hLogEventData	The log event data received from the log event
pBuf	The c-string character buffer in which the priority name of the log event is returned
pBufLen	The unsigned integer pointer in which the length of the c-string is returned; the input value is the maximum length

## Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

## 11.16.2.6 spinLogDataGetThreadName()

Retrieves the thread name of a log event.

### See also

spinError

### **Parameters**

hLogEventData	The log event data received from the log event
pBuf	The c-string character buffer in which the thread name of the log event is returned
pBufLen	The unsigned integer pointer in which the length of the c-string is returned; the input value is the maximum length

## Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.16.2.7 spinLogDataGetTimestamp()

Retrieves the timestamp of a log event.

## See also

## **Parameters**

hLogEventData	The log event data received from the log event
pBuf	The c-string character buffer in which the timestamp of the log event is returned
pBufLen	The unsigned integer pointer in which the length of the c-string is returned; the input value is the maximum length

## Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

### 11.17 Device Event Data Access

The functions in this section allow for the retrieval of device event data.

#### **Functions**

- SPINNAKERC\_API spinDeviceEventGetId (spinDeviceEventData hDeviceEventData, uint64\_t \*pEventId)

  Retrieves the event ID of a device event.
- SPINNAKERC\_API spinDeviceEventGetPayloadData (spinDeviceEventData hDeviceEventData, const uint8\_t \*pBuf, size\_t \*pBufSize)

Retrieves the payload data of a device event.

SPINNAKERC\_API spinDeviceEventGetPayloadDataSize (spinDeviceEventData hDeviceEventData, size\_t \*pBufSize)

Retrieves the payload data size of a device event.

SPINNAKERC\_API spinDeviceEventGetName (spinDeviceEventData hDeviceEventData, char \*pBuf, size
 \_t \*pBufLen)

Retrieves the event name of a device event.

## 11.17.1 Detailed Description

The functions in this section allow for the retrieval of device event data.

### 11.17.2 Function Documentation

## 11.17.2.1 spinDeviceEventGetId()

Retrieves the event ID of a device event.

See also

spinError

#### **Parameters**

hDeviceEventData	The log event data received from the log event
pEventId	The unsigned integer pointer in which the event ID is returned

## Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

## 11.17.2.2 spinDeviceEventGetName()

Retrieves the event name of a device event.

See also

spinError

### **Parameters**

hDeviceEventData	The log event data received from the log event
pBuf	The c-string character buffer in which the name of the device event is returned
pBufLen	The unsigned integer pointer in which the length of the c-string is returned; the input value is the maximum length

### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

## 11.17.2.3 spinDeviceEventGetPayloadData()

Retrieves the payload data of a device event.

See also

spinError

## **Parameters**

hDeviceEventData	The log event data received from the log event
pBuf	The unsigned integer pointer in which the event payload is returned
pBufSize	The unsigned integer pointer in which the size of the payload is returned

### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

## 11.17.2.4 spinDeviceEventGetPayloadDataSize()

Retrieves the payload data size of a device event.

## See also

 ${\bf spinError}$ 

### **Parameters**

hDeviceEventData	The log event data received from the log event
pBufSize	The unsigned integer pointer in which the size of the payload is returned

## Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

## 11.18 Chunk data access

The functions in this section provide access to chunk data stored on images.

## **Functions**

- SPINNAKERC\_API spinImageChunkDataGetFloatValue (spinImage hImage, const char \*pName, double \*pValue)

## 11.18.1 Detailed Description

The functions in this section provide access to chunk data stored on images.

## 11.18.2 Function Documentation

## 11.18.2.1 spinImageChunkDataGetFloatValue()

```
 \begin{array}{c} {\tt SPINNAKERC\_API} \  \, {\tt spinImageChunkDataGetFloatValue} \  \, ( \\ \\ {\tt spinImage} \  \, hImage, \\ \\ {\tt const} \  \, {\tt char} \  \, * pName, \\ \\ {\tt double} \  \, * pValue \  \, ) \end{array}
```

## 11.18.2.2 spinImageChunkDataGetIntValue()

# 11.19 Spinnaker C Handles

Spinnaker C handle definitions.

Collaboration diagram for Spinnaker C Handles:

Spinnaker C Definitions Spinnaker C Handles

## **Typedefs**

- typedef void \* spinSystem
  - Handle for system functionality.
- typedef void \* spinInterfaceList

Handle for interface list functionality.

- typedef void \* spinInterface
  - Handle for interface functionality.
- typedef void \* spinCameraList
  - Handle for interface functionality.
- typedef void \* spinCamera
  - Handle for camera functionality.
- typedef void \* spinImage
  - Handle for image functionality.
- typedef void \* spinImageStatistics
  - Handle for image statistics functionality.
- typedef void \* spinDeviceEventHandler
- Handle for device event handler functionality.
- $\bullet \ \ typedef \ void * spinImageEventHandler \\$ 
  - Handle for image event handler functionality.
- typedef void \* spinDeviceArrivalEventHandler
  - Handle for arrival event handler functionality.
- $\bullet \ \ type def \ void * spin Device Removal Event Handler \\$ 
  - Handle for removal event handler functionality.
- typedef void \* spinInterfaceEventHandler
  - Handle for interface event handler functionality.
- typedef void \* spinLogEventHandler
  - Handle for logging event handler functionality.
- typedef void \* spinLogEventData
  - Handle for logging event data functionality.
- typedef void \* spinDeviceEventData
  - Handle for device event data functionality.
- typedef void \* spinVideo
  - Handle for video recording functionality.

## 11.19.1 Detailed Description

Spinnaker C handle definitions.

## 11.19.2 Typedef Documentation

#### 11.19.2.1 spinCamera

```
typedef void* spinCamera
```

Handle for camera functionality.

Created by calling spinCameraListGet(), which requires a call to spinCameraRelease() to release.

#### 11.19.2.2 spinCameraList

```
typedef void* spinCameraList
```

Handle for interface functionality.

Created by calling spinSystemGetCameras() or spinInterfaceGetCameras(), which require a call to spinCamera ListClear() to clear, or spinCameraListCreateEmpty(), which requires a call to spinCameraListDestroy() to destroy.

### 11.19.2.3 spinDeviceArrivalEventHandler

```
typedef void* spinDeviceArrivalEventHandler
```

Handle for arrival event handler functionality.

Created by calling spinArrivalEventCreate(), which requires a call to spinDeviceArrivalEventHandlerDestroy() to destroy.

## 11.19.2.4 spinDeviceEventData

```
typedef void* spinDeviceEventData
```

Handle for device event data functionality.

Received in device event function. No need to release, clear, or destroy.

#### 11.19.2.5 spinDeviceEventHandler

```
typedef void* spinDeviceEventHandler
```

Handle for device event handler functionality.

Created by calling spinDeviceEventHandlerCreate(), which requires a call to spinDeviceEventHandlerDestroy() to destroy.

### 11.19.2.6 spinDeviceRemovalEventHandler

```
typedef void* spinDeviceRemovalEventHandler
```

Handle for removal event handler functionality.

Created by calling spinDeviceRemovalEventHandlerCreate(), which requires a call to spinDeviceRemovalEvent ← HandlerDestroy() to destroy.

#### 11.19.2.7 spinImage

```
typedef void* spinImage
```

Handle for image functionality.

Created by calling spinCameraGetNextImage() or spinCameraGetNextImageEx(), which require a call to spinctimageRelease() to remove from buffer, or spinImageCreateEmpty(), spinImageCreateEx(), or spinImageCreate(), which require a call to spinImageDestroy() to destroy.

### 11.19.2.8 spinImageEventHandler

```
typedef void* spinImageEventHandler
```

Handle for image event handler functionality.

Created by calling spinImageEventHandlerCreate(), which requires a call to spinImageEventHandlerDestroy() to destroy.

### 11.19.2.9 spinImageStatistics

```
typedef void* spinImageStatistics
```

Handle for image statistics functionality.

Created by calling spinImageStatisticsCreate(), which requires a call to spinImageStatisticsDestroy() to destroy.

## 11.19.2.10 spinInterface

```
typedef void* spinInterface
```

Handle for interface functionality.

Created by calling spinInterfaceListGet(), which requires a call to spinInterfaceRelease() to release.

### 11.19.2.11 spinInterfaceEventHandler

```
typedef void* spinInterfaceEventHandler
```

Handle for interface event handler functionality.

Created by calling spinInterfaceEventHandlerCreate(), which requires a call to spinInterfaceEventHandlerDestroy() to destroy.

## 11.19.2.12 spinInterfaceList

```
typedef void* spinInterfaceList
```

Handle for interface list functionality.

Created by calling spinSystemGetInterfaces(), which requires a call to spinInterfaceListClear() to clear, or spin← InterfaceListCreateEmpty(), which requires a call to spinInterfaceListDestroy() to destroy.

#### 11.19.2.13 spinLogEventData

```
typedef void* spinLogEventData
```

Handle for logging event data functionality.

Received in log event function. No need to release, clear, or destroy.

## 11.19.2.14 spinLogEventHandler

```
typedef void* spinLogEventHandler
```

Handle for logging event handler functionality.

Created by calling spinLogEventHandlerCreate(), which requires a call to spinLogEventHandlerDestroy() to destroy.

### 11.19.2.15 spinSystem

```
typedef void* spinSystem
```

Handle for system functionality.

Created by calling spinSystemGetInstance(), which requires a call to spinSystemReleaseInstance() to release.

#### 11.19.2.16 spinVideo

```
typedef void* spinVideo
```


Handle for video recording functionality.

Created by calling spinVideoOpenUncompressed(), spinVideoOpenMJPG(), and spinVideoOpenH264(), which require a call to spinVideoClose() to destroy.

## 11.20 Spinnaker C Function Signatures

Spinnaker C function signature definitions.

Collaboration diagram for Spinnaker C Function Signatures:

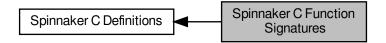

## **Typedefs**

- typedef void(\* spinDeviceEventFunction) (const spinDeviceEventData hEventData, const char \*pEvent
   — Name, void \*pUserData)
  - Function signatures are used to create and trigger callbacks and events.
- typedef void(\* spinImageEventFunction) (const spinImage hImage, void \*pUserData)
- typedef void(\* spinArrivalEventFunction) (uint64\_t deviceSerialNumber, void \*pUserData)
- typedef void(\* spinRemovalEventFunction) (uint64\_t deviceSerialNumber, void \*pUserData)
- typedef void(\* spinLogEventFunction) (const spinLogEventData hEventData, void \*pUserData)

## 11.20.1 Detailed Description

Spinnaker C function signature definitions.

## 11.20.2 Typedef Documentation

#### 11.20.2.1 spinArrivalEventFunction

typedef void(\* spinArrivalEventFunction) (uint64\_t deviceSerialNumber, void \*pUserData)

## 11.20.2.2 spinDeviceEventFunction

typedef void(\* spinDeviceEventFunction) (const spinDeviceEventData hEventData, const char \*p $\leftrightarrow$  EventName, void \*pUserData)

Function signatures are used to create and trigger callbacks and events.

## 11.20.2.3 spinImageEventFunction

typedef void(\* spinImageEventFunction) (const spinImage hImage, void \*pUserData)

## 11.20.2.4 spinLogEventFunction

typedef void(\* spinLogEventFunction) (const spinLogEventData hEventData, void \*pUserData)


## 11.20.2.5 spinRemovalEventFunction

typedef void(\* spinRemovalEventFunction) (uint64\_t deviceSerialNumber, void \*pUserData)

## 11.21 Spinnaker C Enumerations

Spinnaker C enumumeration definitions.

Collaboration diagram for Spinnaker C Enumerations:

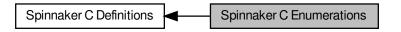

### **Enumerations**

```
enum spinError {
 SPINNAKER_ERR_SUCCESS = 0,
 SPINNAKER ERR ERROR = -1001,
 SPINNAKER ERR NOT INITIALIZED = -1002,
 SPINNAKER ERR NOT IMPLEMENTED = -1003,
 SPINNAKER_ERR_RESOURCE_IN_USE = -1004,
 SPINNAKER_ERR_ACCESS_DENIED = -1005,
 SPINNAKER_ERR_INVALID_HANDLE = -1006,
 SPINNAKER_ERR_INVALID_ID = -1007,
 SPINNAKER_ERR_NO_DATA = -1008,
 SPINNAKER ERR INVALID PARAMETER = -1009,
 SPINNAKER ERR IO = -1010,
 SPINNAKER ERR TIMEOUT = -1011,
 SPINNAKER_ERR_ABORT = -1012,
 SPINNAKER_ERR_INVALID_BUFFER = -1013,
 SPINNAKER ERR NOT AVAILABLE = -1014,
 SPINNAKER ERR INVALID ADDRESS = -1015,
 SPINNAKER_ERR_BUFFER_TOO_SMALL = -1016,
 SPINNAKER_ERR_INVALID_INDEX = -1017,
 SPINNAKER ERR PARSING CHUNK DATA = -1018,
 SPINNAKER ERR INVALID VALUE = -1019,
 SPINNAKER ERR RESOURCE EXHAUSTED = -1020,
 SPINNAKER ERR OUT OF MEMORY = -1021,
 SPINNAKER ERR BUSY = -1022,
 GENICAM_ERR_INVALID_ARGUMENT = -2001,
 GENICAM_ERR_OUT_OF_RANGE = -2002,
 GENICAM_ERR_PROPERTY = -2003,
 GENICAM ERR RUN TIME = -2004,
 GENICAM_ERR_LOGICAL = -2005,
 GENICAM_ERR_ACCESS = -2006,
 GENICAM ERR TIMEOUT = -2007,
 GENICAM ERR DYNAMIC CAST = -2008,
 GENICAM_ERR_GENERIC = -2009,
 GENICAM ERR BAD ALLOCATION = -2010,
 SPINNAKER ERR IM CONVERT = -3001,
 SPINNAKER ERR IM COPY = -3002,
 SPINNAKER_ERR_IM_MALLOC = -3003,
 SPINNAKER_ERR_IM_NOT_SUPPORTED = -3004,
```

```
SPINNAKER_ERR_IM_HISTOGRAM_RANGE = -3005,
 SPINNAKER ERR IM HISTOGRAM MEAN = -3006,
 SPINNAKER_ERR_IM_MIN_MAX = -3007,
 SPINNAKER_ERR_IM_COLOR_CONVERSION = -3008,
 SPINNAKER_ERR_CUSTOM_ID = -10000 }
    The error codes used in Spinnaker C.
· enum spinColorProcessingAlgorithm {
 DEFAULT,
 NO COLOR PROCESSING,
 NEAREST_NEIGHBOR,
 NEAREST_NEIGHBOR_AVG,
 BILINEAR,
 EDGE_SENSING,
 HQ LINEAR,
 IPP,
 DIRECTIONAL FILTER.
 RIGOROUS.
 WEIGHTED DIRECTIONAL FILTER }
    Color processing algorithms.
enum spinStatisticsChannel {
 GREY,
 RED.
 GREEN.
 BLUE,
 HUE,
 SATURATION,
 LIGHTNESS,
 NUM_STATISTICS_CHANNELS }
    Channels that allow statistics to be calculated.

    enum spinImageFileFormat {

 FROM FILE EXT = -1,
 PGM.
 PPM,
 BMP,
 JPEG,
 JPEG2000,
 TIFF,
 PNG,
 RAW.
 IMAGE FILE FORMAT FORCE 32BITS = 0x7FFFFFFF }
    File formats to be used for saving images to disk.

    enum spinPixelFormatNamespaceID {

 SPINNAKER_PIXELFORMAT_NAMESPACE_UNKNOWN = 0,
 SPINNAKER PIXELFORMAT NAMESPACE GEV = 1,
 SPINNAKER PIXELFORMAT NAMESPACE IIDC = 2,
 SPINNAKER PIXELFORMAT NAMESPACE PFNC 16BIT = 3,
 SPINNAKER PIXELFORMAT NAMESPACE PFNC 32BIT = 4,
 SPINNAKER PIXELFORMAT NAMESPACE CUSTOM ID = 1000 }
    This enum represents the namespace in which the TL specific pixel format resides.

    enum spinImageStatus {

 IMAGE UNKNOWN ERROR = -1,
 IMAGE NO ERROR = 0,
 IMAGE CRC CHECK FAILED = 1,
 IMAGE DATA OVERFLOW = 2,
 IMAGE MISSING PACKETS.
 IMAGE_LEADER_BUFFER_SIZE_INCONSISTENT,
 IMAGE_TRAILER_BUFFER_SIZE_INCONSISTENT,
```

```
IMAGE_PACKETID_INCONSISTENT,
 IMAGE MISSING LEADER = 7,
 IMAGE_MISSING_TRAILER = 8,
 IMAGE_DATA_INCOMPLETE = 9,
 IMAGE_INFO_INCONSISTENT = 10,
 IMAGE CHUNK DATA INVALID = 11,
 IMAGE NO SYSTEM RESOURCES = 12 }
    Status of images returned from spinImageGetStatus() call.

    enum spinnakerLogLevel {

 LOG LEVEL OFF = -1,
 LOG LEVEL FATAL = 0,
 LOG_LEVEL_ALERT = 100,
 LOG_LEVEL_CRIT = 200,
 LOG_LEVEL_ERROR = 300,
 LOG LEVEL WARN = 400,
 LOG_LEVEL_NOTICE = 500,
 LOG_LEVEL_INFO = 600,
 LOG LEVEL DEBUG = 700,
 LOG_LEVEL_NOTSET = 800 }
    log levels

    enum spinPayloadTypeInfoIDs {

 PAYLOAD_TYPE_UNKNOWN = 0,
 PAYLOAD TYPE IMAGE = 1,
 PAYLOAD TYPE RAW DATA = 2,
 PAYLOAD_TYPE_FILE = 3,
 PAYLOAD TYPE CHUNK DATA = 4,
 PAYLOAD_TYPE_JPEG = 5,
 PAYLOAD_TYPE_JPEG2000 = 6,
 PAYLOAD_TYPE_H264 = 7,
 PAYLOAD TYPE CHUNK ONLY = 8,
 PAYLOAD_TYPE_DEVICE_SPECIFIC = 9,
 PAYLOAD_TYPE_MULTI_PART = 10,
 PAYLOAD_TYPE_CUSTOM_ID = 1000,
 PAYLOAD TYPE EXTENDED CHUNK = 1001,
 PAYLOAD_TYPE_LOSSLESS_COMPRESSED = 1002,
 PAYLOAD_TYPE_LOSSY_COMPRESSED = 1003,
 PAYLOAD_TYPE_JPEG_LOSSLESS_COMPRESSED = 1004,
 PAYLOAD TYPE CHUNK DATA LOSSLESS COMPRESSED = 1005,
 PAYLOAD_TYPE_CHUNK_DATA_LOSSY_COMPRESSED = 1006 }
```

## 11.21.1 Detailed Description

Spinnaker C enumumeration definitions.

## 11.21.2 Enumeration Type Documentation

### 11.21.2.1 spinColorProcessingAlgorithm

enum spinColorProcessingAlgorithm

Color processing algorithms.

Please refer to our knowledge base at article at https://www.flir.com/support-center/iis/machine-vision/kn for complete details for each algorithm.

## Enumerator

DEFAULT	Default method.
NO_COLOR_PROCESSING	No color processing.
NEAREST_NEIGHBOR	Fastest but lowest quality. Equivalent to FLYCAPTURE_NEAREST_NEIGHBOR_FAST in FlyCapture.
NEAREST_NEIGHBOR_AVG	Nearest Neighbor with averaged green pixels. Higher quality but slower compared to nearest neighbor without averaging.
BILINEAR	Weighted average of surrounding 4 pixels in a 2x2 neighborhood.
EDGE_SENSING	Weights surrounding pixels based on localized edge orientation.
HQ_LINEAR	Well-balanced speed and quality.
IPP	Multi-threaded with similar results to edge sensing.
DIRECTIONAL_FILTER	Best quality but much faster than rigorous.
RIGOROUS	Slowest but produces good results.
WEIGHTED_DIRECTIONAL_FILTER	Weighted pixel average from different directions.

## 11.21.2.2 spinError

enum spinError

The error codes used in Spinnaker C.

These codes are returned from every function in Spinnaker C. The error codes in the range of -2000 to -2999 are reserved for GenlCam related errors. The error codes in the range of -3000 to -3999 are reserved for image processing related errors.

SPINNAKER_ERR_SUCCESS	An error code of 0 means that the function has run without
	error.
SPINNAKER_ERR_ERROR	The error codes in the range of -1000 to -1999 are
	reserved for Spinnaker exceptions.
SPINNAKER_ERR_NOT_INITIALIZED	
SPINNAKER_ERR_NOT_IMPLEMENTED	
SPINNAKER_ERR_RESOURCE_IN_USE	
SPINNAKER_ERR_ACCESS_DENIED	
SPINNAKER_ERR_INVALID_HANDLE	
SPINNAKER_ERR_INVALID_ID	
SPINNAKER_ERR_NO_DATA	
SPINNAKER_ERR_INVALID_PARAMETER	
SPINNAKER_ERR_IO	
SPINNAKER_ERR_TIMEOUT	
SPINNAKER_ERR_ABORT	
SPINNAKER_ERR_INVALID_BUFFER	
SPINNAKER_ERR_NOT_AVAILABLE	
SPINNAKER_ERR_INVALID_ADDRESS	
SPINNAKER_ERR_BUFFER_TOO_SMALL	
SPINNAKER_ERR_INVALID_INDEX	
SPINNAKER_ERR_PARSING_CHUNK_DATA	

## Enumerator

COMMISSION FOR MUSIC CONTRACTOR	
SPINNAKER_ERR_INVALID_VALUE	
SPINNAKER_ERR_RESOURCE_EXHAUSTED	
SPINNAKER_ERR_OUT_OF_MEMORY	
SPINNAKER_ERR_BUSY	
GENICAM_ERR_INVALID_ARGUMENT	The error codes in the range of -2000 to -2999 are
	reserved for Gen API related errors.
GENICAM_ERR_OUT_OF_RANGE	
GENICAM_ERR_PROPERTY	
GENICAM_ERR_RUN_TIME	
GENICAM_ERR_LOGICAL	
GENICAM_ERR_ACCESS	
GENICAM_ERR_TIMEOUT	
GENICAM_ERR_DYNAMIC_CAST	
GENICAM_ERR_GENERIC	
GENICAM_ERR_BAD_ALLOCATION	
SPINNAKER_ERR_IM_CONVERT	The error codes in the range of -3000 to -3999 are
	reserved for image processing related errors.
SPINNAKER_ERR_IM_COPY	
SPINNAKER_ERR_IM_MALLOC	
SPINNAKER_ERR_IM_NOT_SUPPORTED	
SPINNAKER_ERR_IM_HISTOGRAM_RANGE	
SPINNAKER_ERR_IM_HISTOGRAM_MEAN	
SPINNAKER_ERR_IM_MIN_MAX	
SPINNAKER_ERR_IM_COLOR_CONVERSION	
SPINNAKER_ERR_CUSTOM_ID	Error codes less than -10000 are reserved for user-defined
	custom errors.

## 11.21.2.3 spinImageFileFormat

enum spinImageFileFormat

File formats to be used for saving images to disk.

FROM_FILE_EXT	Determine file format from file extension.
PGM	Portable gray map.
PPM	Portable pixmap.
ВМР	Bitmap.
JPEG	JPEG.
JPEG2000	JPEG 2000.
TIFF	Tagged image file format.
PNG	Portable network graphics.
RAW	Raw data.
IMAGE_FILE_FORMAT_FORCE_32BITS	

## 11.21.2.4 spinImageStatus

enum spinImageStatus

Status of images returned from spinImageGetStatus() call.

## Enumerator

IMAGE_UNKNOWN_ERROR	Image has an unknown error.	
IMAGE_NO_ERROR	Image is returned from GetNextImage() call without	
	any errors.	
IMAGE_CRC_CHECK_FAILED	Image failed CRC check.	
IMAGE_DATA_OVERFLOW	Received more data than the size of the image.	
IMAGE_MISSING_PACKETS	Image has missing packets. Potential fixes include	
	enabling jumbo packets and adjusting packet	
	size/delay. For more information see	
	https://www.flir.↔	
	com/support-center/iis/machine-vision	/application
IMAGE_LEADER_BUFFER_SIZE_INCONSISTENT	Image leader is incomplete. Could be caused by	
	missing packet(s). See link above.	
IMAGE_TRAILER_BUFFER_SIZE_INCONSISTENT	Image trailer is incomplete. Could be caused by	
	missing packet(s). See link above.	
IMAGE_PACKETID_INCONSISTENT	Image has an inconsistent packet id. Could be	
	caused by missing packet(s). See link above.	
IMAGE_MISSING_LEADER	Image leader is missing. Could be caused by missing	
	packet(s). See link above.	
IMAGE_MISSING_TRAILER	Image trailer is missing. Could be caused by missing	
	packet(s). See link above.	
IMAGE_DATA_INCOMPLETE	Image data is incomplete. Could be caused by	
	missing packet(s). See link above.	
IMAGE_INFO_INCONSISTENT	Image info is corrupted. Could be caused by missing	
	packet(s). See link above.	
IMAGE_CHUNK_DATA_INVALID	Image chunk data is invalid.	
IMAGE_NO_SYSTEM_RESOURCES	Image cannot be processed due to lack of system	
	resources.	

11.21.2.5 spinnakerLogLevel

 $\verb"enum spinnakerLogLevel"$ 

log levels

LOG_LEVEL_OFF	
LOG_LEVEL_FATAL	

## Enumerator

LOG_LEVEL_ALERT	
LOG_LEVEL_CRIT	
LOG_LEVEL_ERROR	
LOG_LEVEL_WARN	
LOG_LEVEL_NOTICE	
LOG_LEVEL_INFO	
LOG_LEVEL_DEBUG	
LOG_LEVEL_NOTSET	

## 11.21.2.6 spinPayloadTypeInfoIDs

enum spinPayloadTypeInfoIDs

### Enumerator

PAYLOAD_TYPE_UNKNOWN	
PAYLOAD_TYPE_IMAGE	
PAYLOAD_TYPE_RAW_DATA	
PAYLOAD_TYPE_FILE	
PAYLOAD_TYPE_CHUNK_DATA	
PAYLOAD_TYPE_JPEG	
PAYLOAD_TYPE_JPEG2000	
PAYLOAD_TYPE_H264	
PAYLOAD_TYPE_CHUNK_ONLY	
PAYLOAD_TYPE_DEVICE_SPECIFIC	
PAYLOAD_TYPE_MULTI_PART	
PAYLOAD_TYPE_CUSTOM_ID	
PAYLOAD_TYPE_EXTENDED_CHUNK	
PAYLOAD_TYPE_LOSSLESS_COMPRESSED	
PAYLOAD_TYPE_LOSSY_COMPRESSED	
PAYLOAD_TYPE_JPEG_LOSSLESS_COMPRESSED	
PAYLOAD_TYPE_CHUNK_DATA_LOSSLESS_COMPRESSED	
PAYLOAD_TYPE_CHUNK_DATA_LOSSY_COMPRESSED	

## 11.21.2.7 spinPixelFormatNamespaceID

 $\verb"enum spinPixelFormatNamespaceID"$ 

This enum represents the namespace in which the TL specific pixel format resides.

This enum is returned from a captured image when calling spinImageGetTLPixelFormatNamespace(). It can be used to interpret the raw pixel format returned from spinImageGetTLPixelFormat().

## See also

spinImageGetTLPixelFormat()
spinImageGetTLPixelFormatNamespace()

## Enumerator

SPINNAKER_PIXELFORMAT_NAMESPACE_UNKNOWN	
SPINNAKER_PIXELFORMAT_NAMESPACE_GEV	
SPINNAKER_PIXELFORMAT_NAMESPACE_IIDC	
SPINNAKER_PIXELFORMAT_NAMESPACE_PFNC_16BIT	
SPINNAKER_PIXELFORMAT_NAMESPACE_PFNC_32BIT	
SPINNAKER_PIXELFORMAT_NAMESPACE_CUSTOM_ID	

## 11.21.2.8 spinStatisticsChannel

enum spinStatisticsChannel

Channels that allow statistics to be calculated.

GREY	
RED	
GREEN	
BLUE	
HUE	
SATURATION	
LIGHTNESS	
NUM_STATISTICS_CHANNELS	

## 11.22 Spinnaker C Structures

Spinnaker C structure definitions.

Collaboration diagram for Spinnaker C Structures:



### **Data Structures**

· struct spinPNGOption

Options for saving PNG images.

• struct spinPPMOption

Options for saving PPM images.

• struct spinPGMOption

Options for saving PGM images.

struct spinTIFFOption

Options for saving TIFF images.

• struct spinJPEGOption

Options for saving JPEG images.

struct spinJPG2Option

Options for saving JPEG 2000 images.

• struct spinBMPOption

Options for saving BMP images.

• struct spinMJPGOptionEx

Options for saving MJPG videos.

• struct spinH264Option

Options for saving H264 videos.

• struct spinAVIOptionEx

Options for saving uncompressed videos.

struct spinLibraryVersion

Provides easier access to the current version of Spinnaker.

· struct actionCommandResult

Action Command Result.

## **Enumerations**

```
    enum spinCompressionMethod {
        NONE = 1,
        PACKBITS,
        DEFLATE,
        ADOBE_DEFLATE,
        CCITTFAX3,
        CCITTFAX4,
        LZW,
        JPG }
```

Compression method used in saving TIFF images in the spinTIFFOption struct.

enum actionCommandStatus {
 ACTION\_COMMAND\_STATUS\_OK = 0,
 ACTION\_COMMAND\_STATUS\_NO\_REF\_TIME = 0x8013,
 ACTION\_COMMAND\_STATUS\_OVERFLOW = 0x8015,

 ${\sf ACTION\_COMMAND\_STATUS\_ACTION\_LATE} = 0x8016,$ 

ACTION\_COMMAND\_STATUS\_ERROR = 0x8FFF }

Possible Status Codes Returned from Action Command.

## **Functions**

typedef SPINNAKERC\_STRUCT\_DEPRECATED ("spinMJPGOption is deprecated, use spinMJPGOptionEx instead.") \_spinMJPGOption

DEPRECATED.

• typedef SPINNAKERC\_STRUCT\_DEPRECATED ("spinAVIOption is deprecated, use spinAVIOptionEx instead.") \_spinAVIOption

DEPRECATED.

### **Variables**

- spinMJPGOption
- spinAVIOption

## 11.22.1 Detailed Description

Spinnaker C structure definitions.

# 11.22.2 Enumeration Type Documentation

#### 11.22.2.1 actionCommandStatus

enum actionCommandStatus

Possible Status Codes Returned from Action Command.

ACTION_COMMAND_STATUS_OK	The device acknowledged the command.
ACTION_COMMAND_STATUS_NO_REF_TIME	
ACTION_COMMAND_STATUS_OVERFLOW	
ACTION_COMMAND_STATUS_ACTION_LATE	
ACTION_COMMAND_STATUS_ERROR	

### 11.22.2.2 spinCompressionMethod

 $\verb"enum spinCompressionMethod"$ 

Compression method used in saving TIFF images in the spinTIFFOption struct.

#### **Enumerator**

NONE	
PACKBITS	
DEFLATE	
ADOBE_DEFLATE	
CCITTFAX3	
CCITTFAX4	
LZW	
JPG	

### 11.22.3 Function Documentation

## 11.22.3.1 SPINNAKERC\_STRUCT\_DEPRECATED() [1/2]

```
typedef SPINNAKERC_STRUCT_DEPRECATED (
    "spinMJPGOption is deprecated,
    use spinMJPGOptionEx instead." )
```

### DEPRECATED.

Use spinMJPGOptionEx instead. Options for saving MJPG videos. Used in saving MJPG videos with a call to spinAVIRecorderOpenMJPG(). Frame rate of the stream

Image quality (1-100)

#### 11.22.3.2 SPINNAKERC\_STRUCT\_DEPRECATED() [2/2]

```
typedef SPINNAKERC_STRUCT_DEPRECATED (
          "spinAVIOption is deprecated,
          use spinAVIOptionEx instead." )
```

### DEPRECATED.

Use spinAVIOptionEx instead. Options for saving uncompressed videos. Used in saving AVI videos with a call to spinAVIRecorderOpenUncompressed(). Frame rate of the stream

Reserved for future use

## 11.22.4 Variable Documentation

# 11.22.4.1 spinAVIOption


spinAVIOption

## 11.22.4.2 spinMJPGOption

spinMJPGOption

# 11.23 Spinnaker C GenlCam API

Collaboration diagram for Spinnaker C GenlCam API:

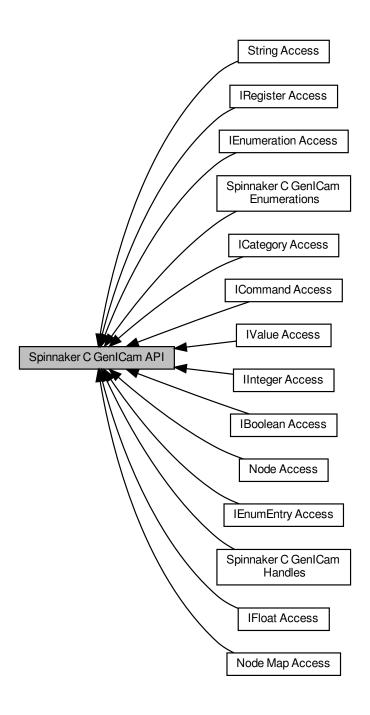

# Modules

Node Map Access

The functions in this section provide access to information, objects, and functionality related to nodemaps.

Node Access

The functions in this section provide access to information and objects retrieved from nodes.

IValue Access

The functions in this section provide access to nodes as value nodes.

String Access

The functions in this section provide access to string nodes using character pointers and arrays.

IInteger Access

The functions in this section provide access to integer nodes using the int64\_t data type.

IFloat Access

The functions in this section provide access to float nodes using double as the data type.

IEnumeration Access

The functions in this section provide access to enum nodes.

IEnumEntry Access

The functions in this section provide access to entry nodes This includes retrieving the integer value or the symbolic of an entry.

IBoolean Access

The functions in this section provide access to boolean nodes using the bool8\_t data type, values represented with 'True' and 'False'.

ICommand Access

The functions in this section all provide access to information and objects retrieved from nodes.

ICategory Access

The functions in this section all provide access to information and objects retrieved from nodes.

IRegister Access

The functions in this section provide access to register nodes.

Spinnaker C GenlCam Handles

Handle definitions for Spinnaker C GenICam API.

· Spinnaker C GenlCam Enumerations

Enumeration definitions for Spinnaker C GenICam API.

## **Functions**

 SPINNAKERC\_API spinCategoryReleaseNode (spinNodeHandle hCategoryNode, spinNodeHandle h← Feature)

Releases the feature node from the category node.

## 11.23.1 Detailed Description

### 11.23.2 Function Documentation

#### 11.23.2.1 spinCategoryReleaseNode()

Releases the feature node from the category node.

Make sure node handle is cleaned up properly by setting it to NULL after the node is released If this function is not explicitly called, the handle will be released upon the release of the camera handle.

See also

```
spinCameraRelease
spinError
```

# **Parameters**


hCategoryNode	The category node handle from which the feature node is retrieved	
hFeature The feature node handle to be released		

# Returns

# 11.24 Node Map Access

The functions in this section provide access to information, objects, and functionality related to nodemaps.

Collaboration diagram for Node Map Access:

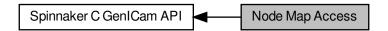

### **Functions**

 SPINNAKERC\_API spinNodeMapGetNode (spinNodeMapHandle hNodeMap, const char \*pName, spin← NodeHandle \*phNode)

Retrieves a node from the nodemap by name.

- SPINNAKERC\_API spinNodeMapGetNumNodes (spinNodeMapHandle hNodeMap, size\_t \*pValue) Gets the number of nodes in the map.
- SPINNAKERC\_API spinNodeMapGetNodeByIndex (spinNodeMapHandle hNodeMap, size\_t index, spin
   — NodeHandle \*phNode)

Retrieves a node from the nodemap by index.

- SPINNAKERC\_API spinNodeMapReleaseNode (spinNodeMapHandle hNodeMap, spinNodeHandle hNode) Releases the entry node handle.
- SPINNAKERC\_API spinNodeMapPoll (spinNodeMapHandle hNodeMap, int64\_t timestamp) Fires nodes which have a polling time.

# 11.24.1 Detailed Description

The functions in this section provide access to information, objects, and functionality related to nodemaps.

This includes nodes, node counts, and polling.

### 11.24.2 Function Documentation

## 11.24.2.1 spinNodeMapGetNode()

Retrieves a node from the nodemap by name.

See also

#### **Parameters**

hNodeMap	The node map where the node is	
pName	The name of the node	
phNode The node handle pointer in which the node is returned		

#### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

## 11.24.2.2 spinNodeMapGetNodeByIndex()

Retrieves a node from the nodemap by index.

## See also

spinError

## **Parameters**

hNodeMap	The node map where the node is	
index	The index of the node	
phNode The node handle pointer in which the node is return		

### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

### 11.24.2.3 spinNodeMapGetNumNodes()

Gets the number of nodes in the map.

## See also

#### **Parameters**

hNodeMap	The node map where the nodes to be counted are	
pValue	The unsigned integer pointer in which the number of nodes is returned	

### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

## 11.24.2.4 spinNodeMapPoll()

Fires nodes which have a polling time.

### See also

spinError

### **Parameters**

hNodeMap	The nodemap to poll
timestamp	The timestamp

## Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

## 11.24.2.5 spinNodeMapReleaseNode()

Releases the entry node handle.

Make sure node handle is cleaned up properly by setting it to NULL after the node is released. If this function is not explicitly called, the handle will be released upon the release of the camera handle.

## See also

spinCameraRelease spinError

# **Parameters**

hNodeMap	The node map from which the node handle is retrieved	
hNode	The node handle to be released	

# Returns

### 11.25 Node Access

The functions in this section provide access to information and objects retrieved from nodes.

Collaboration diagram for Node Access:



#### **Functions**

• SPINNAKERC\_API spinNodeIsImplemented (spinNodeHandle hNode, bool8\_t \*pbResult)

Checks whether a node is implemented.

• SPINNAKERC\_API spinNodeIsReadable (spinNodeHandle hNode, bool8\_t \*pbResult)

Checks whether a node is readable.

SPINNAKERC\_API spinNodeIsWritable (spinNodeHandle hNode, bool8\_t \*pbResult)

Checks whether a node is writable.

SPINNAKERC\_API spinNodelsAvailable (spinNodeHandle hNode, bool8\_t \*pbResult)

Checks whether a node is available.

 SPINNAKERC\_API spinNodelsEqual (spinNodeHandle hNodeFirst, spinNodeHandle hNodeSecond, bool8\_t \*pbResult)

Checks whether two nodes are equal.

• SPINNAKERC\_API spinNodeGetAccessMode (spinNodeHandle hNode, spinAccessMode \*pAccessMode)

SPINNAKERC\_API spinNodeGetName (spinNodeHandle hNode, char \*pBuf, size\_t \*pBufLen)

Retrieves the name of a node (no whitespace)

SPINNAKERC API spinNodeGetNameSpace (spinNodeHandle hNode, spinNameSpace \*pNamespace)

Retrieve the namespace of a node (as an enum, spinNameSpace)

Retrieves the access mode of a node (as an enum, spinAccessMode)

• SPINNAKERC\_API spinNodeGetVisibility (spinNodeHandle hNode, spinVisibility \*pVisibility)

Retrieves the recommended visibility of a node (as an enum, spinVisibility)

SPINNAKERC API spinNodeInvalidateNode (spinNodeHandle hNode)

Invalidates a node in case its values may have changed, rendering it no longer valid.

SPINNAKERC\_API spinNodeGetCachingMode (spinNodeHandle hNode, spinCachingMode \*pCaching← Mode)

Retrieves the caching mode of a node (as an enum, spinCachingMode)

• SPINNAKERC\_API spinNodeGetToolTip (spinNodeHandle hNode, char \*pBuf, size\_t \*pBufLen)

Retrieves a short description of a node.

SPINNAKERC\_API spinNodeGetDescription (spinNodeHandle hNode, char \*pBuf, size\_t \*pBufLen)
 Retrieves a longer description of a node.

• SPINNAKERC API spinNodeGetDisplayName (spinNodeHandle hNode, char \*pBuf, size t \*pBufLen)

Retrieves the display name of a node (whitespace possible)

SPINNAKERC API spinNodeGetType (spinNodeHandle hNode, spinNodeType \*pType)

Retrieves the type of a node (as an enum, spinNodeType)

• SPINNAKERC\_API spinNodeGetPollingTime (spinNodeHandle hNode, int64\_t \*pPollingTime)

11.25 Node Access 275

Retrieve the polling time of a node.

• SPINNAKERC\_API spinNodeRegisterCallback (spinNodeHandle hNode, spinNodeCallbackFunction pCb← Function, spinNodeCallbackHandle \*phCb)

Registers a callback to a node.

- SPINNAKERC\_API spinNodeDeregisterCallback (spinNodeHandle hNode, spinNodeCallbackHandle hCb)

  Unregisters a callback from a node.
- SPINNAKERC\_API spinNodeGetImposedAccessMode (spinNodeHandle hNode, spinAccessMode imposedAccessMode)

Retrieves the imposed access mode of a node.

• SPINNAKERC\_API spinNodeGetImposedVisibility (spinNodeHandle hNode, spinVisibility imposedVisibility)

Retrieves the imposed visibility of a node.

## 11.25.1 Detailed Description

The functions in this section provide access to information and objects retrieved from nodes.

This includes node properties and callback registration.

### 11.25.2 Function Documentation

## 11.25.2.1 spinNodeDeregisterCallback()

```
SPINNAKERC_API spinNodeDeregisterCallback ( spinNodeHandle\ hNode, spinNodeCallbackHandle\ hCb\ )
```

Unregisters a callback from a node.

See also

spinError

#### **Parameters**

hNode	The node from which to unregister the callback
hCb	The callback handle to unregister

### Returns

## 11.25.2.2 spinNodeGetAccessMode()

Retrieves the access mode of a node (as an enum, spinAccessMode)

### See also

```
spinError
spinAccessMode
```

### **Parameters**

hNode	The node of the access mode to retrieve	
pAccessMode	The access mode enum pointer in which the access mode is returne	

#### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.25.2.3 spinNodeGetCachingMode()

Retrieves the caching mode of a node (as an enum, spinCachingMode)

### See also

```
spinError
spinCachingMode
```

### **Parameters**

hNode	The node of the caching mode to retrieve	
pCachingMode	The caching mode enum pointer in which the caching mode is returned	

## Returns

11.25 Node Access 277

### 11.25.2.4 spinNodeGetDescription()

Retrieves a longer description of a node.

See also

spinError

#### **Parameters**

hNode	The node of the description to retrieve
pBuf	The c-string character buffer in which the longer descrition of the node is returned
pBufLen	The unsigned integer pointer in which the length of the c-string is returned; the input value is the maximum length

## Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.25.2.5 spinNodeGetDisplayName()

Retrieves the display name of a node (whitespace possible)

See also

spinError

### **Parameters**

hNode	The node of the display name to retrieve
pBuf	The c-string character buffer in which the display name of the node is returned
pBufLen	The unsigned integer pointer in which the length of the c-string is returned; the input value is the maximum length

## Returns

## 11.25.2.6 spinNodeGetImposedAccessMode()

Retrieves the imposed access mode of a node.

See also

spinError

### **Parameters**

hNode	The node of the imposed access mode to retrieve	
imposedAccessMode   The access mode enum pointer in which the imposed access mode is returned to the imposed access mode in the i		

### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

## 11.25.2.7 spinNodeGetImposedVisibility()

Retrieves the imposed visibility of a node.

See also

spinError

## **Parameters**

hNode	The node of the visibility to impose
imposedVisibility	The visibility enum pointer in which the imposed visibility is returned

## Returns

11.25 Node Access 279

### 11.25.2.8 spinNodeGetName()

Retrieves the name of a node (no whitespace)

## See also

spinError

#### **Parameters**

hNode	The node of the name to retrieve
pBuf	The c-string character buffer in which the name of the node is returned
pBufLen	The unsigned integer pointer in which the length of the c-string is returned; the input value is the maximum length

#### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

## 11.25.2.9 spinNodeGetNameSpace()

Retrieve the namespace of a node (as an enum, spinNameSpace)

## See also

```
spinError
spinNameSpace
```

## **Parameters**

hNode	The node of the namespace to retrieve
pNamespace	The namespace enum pointer in which the namespace is returned

## Returns

## 11.25.2.10 spinNodeGetPollingTime()

Retrieve the polling time of a node.

See also

spinError

#### **Parameters**

hNode	The node of the polling time to retrieve
pPollingTime	The integer pointer in which the polling time is returned

# Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.25.2.11 spinNodeGetToolTip()

Retrieves a short description of a node.

See also

spinError

## **Parameters**

hNode	The node of the tooltip to retrieve
pBuf	The c-string character buffer in which the short description of the node is returned
pBufLen	The unsigned integer pointer in which the length of the c-string is returned; the input value is the maximum length

## Returns

11.25 Node Access 281

### 11.25.2.12 spinNodeGetType()

Retrieves the type of a node (as an enum, spinNodeType)

### See also

```
spinError
spinNodeType
```

### **Parameters**

hNode	The node of the node type to retrieve
рТуре	The node type enum pointer in which the type of node is returned

#### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

## 11.25.2.13 spinNodeGetVisibility()

```
SPINNAKERC_API spinNodeGetVisibility ( spinNodeHandle\ hNode, spinVisibility\ *\ pVisibility\ )
```

Retrieves the recommended visibility of a node (as an enum, spinVisibility)

## See also

```
spinError
spinVisibility
```

# Parameters

hNode	The node of the visibility to retrieve
pVisibility	The visibility enum pointer in which the visibility is returned

## Returns

## 11.25.2.14 spinNodeInvalidateNode()

```
\begin{tabular}{ll} SPINNAKERC\_API & spinNodeInvalidateNode ( \\ & spinNodeHandle & hNode ) \end{tabular}
```

Invalidates a node in case its values may have changed, rendering it no longer valid.

See also

spinError

### **Parameters**

ged

## Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

## 11.25.2.15 spinNodelsAvailable()

Checks whether a node is available.

See also

spinError

### **Parameters**

hNode	The node to check
pbResult	The boolean pointer to return whether or not the node is available

## Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

## 11.25.2.16 spinNodelsEqual()

11.25 Node Access 283

```
spinNodeHandle hNodeSecond,
bool8_t * pbResult )
```

Checks whether two nodes are equal.

See also

spinError

### **Parameters**

hNodeFirst	The first node to check
hNodeSecond	The second node to check
pbResult	The boolean pointer to return whether or not the two nodes are equal

### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.25.2.17 spinNodelsImplemented()

Checks whether a node is implemented.

See also

spinError

## **Parameters**

hNode	The node to check	]
pbResult	The boolean pointer to return whether or not the node is implemented	

# Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

## 11.25.2.18 spinNodelsReadable()

Checks whether a node is readable.

### See also

spinError

## **Parameters**

hNode	The node to check
pbResult	The boolean pointer to return whether or not the node is readable

### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

## 11.25.2.19 spinNodelsWritable()

Checks whether a node is writable.

See also

spinError

## **Parameters**

hNode	The node to check
pbResult	The boolean pointer to return whether or not the node is writable

### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.25.2.20 spinNodeRegisterCallback()

Registers a callback to a node.

See also

11.25 Node Access 285

# **Parameters**

hNode	The node on which to register the callback
pCbFunction	The function pointer of the function that will execute when the callback is triggered; must match signature "void spinNodeCallbackFunction(spinNodeHandle hNode)"
phCb	The callback handle pointer in which the callback is returned; used to unregister callbacks

# Returns

### 11.26 IValue Access

The functions in this section provide access to nodes as value nodes.

Collaboration diagram for IValue Access:



#### **Functions**

- SPINNAKERC\_API spinNodeToString (spinNodeHandle hNode, char \*pBuf, size\_t \*pBufLen)

  Retrieves the value of any node type as a c-string.
- SPINNAKERC\_API spinNodeToStringEx (spinNodeHandle hNode, bool8\_t bVerify, char \*pBuf, size\_t \*p
   —
   BufLen)

Retrieves the value of any node type as a c-string; manually set whether to verify the node.

- SPINNAKERC\_API spinNodeFromString (spinNodeHandle hNode, const char \*pBuf)
  - Sets the value of any node type from a c-string; it is important to ensure that the value of the c-string is appropriate to the node type.
- SPINNAKERC\_API spinNodeFromStringEx (spinNodeHandle hNode, bool8\_t bVerify, const char \*pBuf)

Sets the value of any node type from a c-string; manually set whether to verify the node; ensure the value of the c-string is appropriate to the node type.

## 11.26.1 Detailed Description

The functions in this section provide access to nodes as value nodes.

As value nodes are not an actual node type, the functions are named as regular nodes. Functions include reading from and writing to any node with a string.

## 11.26.2 Function Documentation

### 11.26.2.1 spinNodeFromString()

Sets the value of any node type from a c-string; it is important to ensure that the value of the c-string is appropriate to the node type.

See also

11.26 IValue Access 287

### **Parameters**

hNode	The node having its value changed
pBuf	The c-string of the value to set

#### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

### 11.26.2.2 spinNodeFromStringEx()

Sets the value of any node type from a c-string; manually set whether to verify the node; ensure the value of the c-string is appropriate to the node type.

#### See also

spinError

## **Parameters**

hNode	The node having its value changed
bVerify	The boolean of whether to verify the node
pBuf	The c-string of the value to set

### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

## 11.26.2.3 spinNodeToString()

Retrieves the value of any node type as a c-string.

## See also

## **Parameters**

hNode	The node of the value to read	
pBuf	The c-string character buffer in which the value of the node is returned	
pBufLen	The unsigned integer pointer in which the length of the c-string is returned; the input value is the maximum length	

### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.26.2.4 spinNodeToStringEx()

Retrieves the value of any node type as a c-string; manually set whether to verify the node.

#### See also

spinError

### **Parameters**

hNode	The node of the value to read
bVerify	The boolean of whether to verify the node
pBuf	The c-string character buffer in which the value of the node is returned
pBufLen	The unsigned integer pointer in which the length of the c-string is returned; the input value is the maximum length

## Returns

11.27 String Access 289

# 11.27 String Access

The functions in this section provide access to string nodes using character pointers and arrays.

Collaboration diagram for String Access:



## **Functions**

- SPINNAKERC\_API spinStringSetValue (spinNodeHandle hNode, const char \*pBuf)
   Sets the value of a string node.
- SPINNAKERC\_API spinStringSetValueEx (spinNodeHandle hNode, bool8\_t bVerify, const char \*pBuf)

  Sets the value of a string node; manually set whether to verify the node.
- SPINNAKERC\_API spinStringGetValue (spinNodeHandle hNode, char \*pBuf, size\_t \*pBufLen)

  Retrieves the value of a string node as a c-string.
- SPINNAKERC\_API spinStringGetValueEx (spinNodeHandle hNode, bool8\_t bVerify, char \*pBuf, size\_t \*p
   —
   BufLen)

Retrieves the value of a string node as a cstring; manually set whether to verify the node.

SPINNAKERC\_API spinStringGetMaxLength (spinNodeHandle hNode, int64\_t \*pValue)

Retrieves the maximum length of the c-string to be returned.

## 11.27.1 Detailed Description

The functions in this section provide access to string nodes using character pointers and arrays.

This includes getters and setters of values and value lengths.

# 11.27.2 Function Documentation

#### 11.27.2.1 spinStringGetMaxLength()

Retrieves the maximum length of the c-string to be returned.

See also

#### **Parameters**

hNode	The string node of the length to retrieve
pValue	The integer pointer in which the maximum length of the c-string is returned

#### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.27.2.2 spinStringGetValue()

Retrieves the value of a string node as a c-string.

# See also

spinError

### **Parameters**

hNode	The string node of the value to read
pBuf	The c-string character buffer in which the value of the node is returned
pBufLen	The unsigned integer pointer in which the length of the c-string is returned; the input value is the maximum length

### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.27.2.3 spinStringGetValueEx()

Retrieves the value of a string node as a cstring; manually set whether to verify the node.

## See also

11.27 String Access 291

#### **Parameters**

hNode	The string node of the value to read
bVerify	The boolean of whether to verify the node
pBuf	The c-string character buffer in which the value of the node is returned
pBufLen	The unsigned integer pointer in which the length of the c-string is returned; the input value is the maximum length

### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

## 11.27.2.4 spinStringSetValue()

Sets the value of a string node.

## See also

spinError

### **Parameters**

hNode	The string node having its value changed
pBuf	The c-string of the value to set

# Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.27.2.5 spinStringSetValueEx()

Sets the value of a string node; manually set whether to verify the node.

## See also

# **Parameters**

hNode	The string node having its value changed
bVerify	The boolean of whether to verify the node
pBuf	The c-string of the value to set

# Returns

11.28 IInteger Access 293

# 11.28 IInteger Access

The functions in this section provide access to integer nodes using the int64 t data type.

Collaboration diagram for IInteger Access:



#### **Functions**

- SPINNAKERC\_API spinIntegerSetValue (spinNodeHandle hNode, int64\_t value) Sets the value of an integer node.
- SPINNAKERC\_API spinIntegerSetValueEx (spinNodeHandle hNode, bool8\_t bVerify, int64\_t value)

  Sets the value of an integer node; manually set whether to verify the node.
- SPINNAKERC\_API spinIntegerGetValue (spinNodeHandle hNode, int64\_t \*pValue)

  Retrieves the value of an integer node.
- SPINNAKERC\_API spinIntegerGetValueEx (spinNodeHandle hNode, bool8\_t bVerify, int64\_t \*pValue)

  Retrieves the value of an integer node; manually set whether to verify the node.
- SPINNAKERC\_API spinIntegerGetMin (spinNodeHandle hNode, int64\_t \*pValue)

Retrieves the minimum value of an integer node; all potential values must be greater than or equal to the minimum.

- SPINNAKERC\_API spinIntegerGetMax (spinNodeHandle hNode, int64\_t \*pValue)
  - Retrieves the maximum value of an integer node; all potential values must be lesser than or equal to the maximum.
- SPINNAKERC\_API spinIntegerGetInc (spinNodeHandle hNode, int64\_t \*pValue)

Retrieves the increment of an integer node; all possible values must be divisible by the increment.

• SPINNAKERC\_API spinIntegerGetRepresentation (spinNodeHandle hNode, spinRepresentation \*pValue)

Retrieves the numerical representation of the value of a node; i.e.

### 11.28.1 Detailed Description

The functions in this section provide access to integer nodes using the int64 t data type.

This includes value getters and setters, min, max, and increment functions, and node representation.

### 11.28.2 Function Documentation

### 11.28.2.1 spinIntegerGetInc()

Retrieves the increment of an integer node; all possible values must be divisible by the increment.

See also

### **Parameters**

hNode	The integer node of the increment to retrieve
pValue	The integer pointer in which the increment is returned

#### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

### 11.28.2.2 spinIntegerGetMax()

```
SPINNAKERC_API spinIntegerGetMax ( spinNodeHandle\ hNode, int64\_t\ *\ pValue\ )
```

Retrieves the maximum value of an integer node; all potential values must be lesser than or equal to the maximum.

### See also

spinError

### **Parameters**

hNode	The integer node of the maximum value to retrieve
pValue	The integer pointer in which the maximum value is returned

## Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.28.2.3 spinIntegerGetMin()

Retrieves the minimum value of an integer node; all potential values must be greater than or equal to the minimum.

### See also

11.28 IInteger Access 295

#### **Parameters**

hNode	The integer node of the minimum value to retrieve
pValue	The integer pointer in which the minimum value is returned

#### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

### 11.28.2.4 spinIntegerGetRepresentation()

```
\begin{tabular}{ll} SPINNAKERC\_API & spinIntegerGetRepresentation & \\ & spinNodeHandle & hNode, \\ & spinRepresentation * pValue & ) \\ \end{tabular}
```

Retrieves the numerical representation of the value of a node; i.e.

linear, logarithmic, hexidecimal, MAC address, etc.

### See also

spinError

## **Parameters**

hNode	The integer node of the numerical representation to retrieve
pValue	The representation enum pointer in which the type of numerical representation is returned

## Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

## 11.28.2.5 spinIntegerGetValue()

Retrieves the value of an integer node.

### See also

### **Parameters**

hNode	The integer node of the value to read
pValue	The integer pointer in which the value is returned

#### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

### 11.28.2.6 spinIntegerGetValueEx()

Retrieves the value of an integer node; manually set whether to verify the node.

# See also

spinError

## **Parameters**

hNode	The integer node of the value to read
bVerify	The boolean of whether to verify the node
pValue	The integer pointer in which the value is returned

## Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

## 11.28.2.7 spinIntegerSetValue()

Sets the value of an integer node.

## See also

11.28 IInteger Access 297

## **Parameters**

hNode	The integer node having its value changed
value	The integer value to set

### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.28.2.8 spinIntegerSetValueEx()

Sets the value of an integer node; manually set whether to verify the node.

## See also

spinError

## **Parameters**

hNode	The integer node having its value changed
bVerify	The boolean of whether to verify the node
value	The integer value to set

# Returns

### 11.29 IFloat Access

The functions in this section provide access to float nodes using double as the data type.

Collaboration diagram for IFloat Access:



### **Functions**

- SPINNAKERC\_API spinFloatSetValue (spinNodeHandle hNode, double value)
   Sets the value of a float node.
- SPINNAKERC\_API spinFloatSetValueEx (spinNodeHandle hNode, bool8\_t bVerify, double value) Sets the value of a float node; manually set whether to verify the node.
- SPINNAKERC\_API spinFloatGetValue (spinNodeHandle hNode, double \*pValue) Retrieves the value of a float node.
- SPINNAKERC\_API spinFloatGetValueEx (spinNodeHandle hNode, bool8\_t bVerify, double \*pValue)

  Retrieves the value of a float node; manually set whether to verify the node.
- SPINNAKERC\_API spinFloatGetMin (spinNodeHandle hNode, double \*pValue)

Retrieves the minimum value of a float node; all potential values must be greater than or equal to the minimum.

- SPINNAKERC\_API spinFloatGetMax (spinNodeHandle hNode, double \*pValue)
  - Retrieves the maximum value of a float node; all potential values must be lesser than or equal to the maximum.
- SPINNAKERC\_API spinFloatGetRepresentation (spinNodeHandle hNode, spinRepresentation \*pValue)
   Retrieves the numerical representation of the value of a node; i.e.
- SPINNAKERC\_API spinFloatGetUnit (spinNodeHandle hNode, char \*pBuf, size\_t \*pBufLen)

  Retrieves the units of the float node value.

# 11.29.1 Detailed Description

The functions in this section provide access to float nodes using double as the data type.

This includes value getters and setters, min and max functions, and node representation.

## 11.29.2 Function Documentation

### 11.29.2.1 spinFloatGetMax()

Retrieves the maximum value of a float node; all potential values must be lesser than or equal to the maximum.

See also

11.29 IFloat Access 299

#### **Parameters**

hNode	The float node of the maximum value to retrieve
pValue	The double pointer in which the maximum value is returned

### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

### 11.29.2.2 spinFloatGetMin()

Retrieves the minimum value of a float node; all potential values must be greater than or equal to the minimum.

### See also

spinError

#### **Parameters**

hNode	The float node of the minimum value to retrieve
pValue	The double pointer in which the minimum value is returned

## Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

## 11.29.2.3 spinFloatGetRepresentation()

```
\begin{tabular}{ll} SPINNAKERC\_API & spinFloatGetRepresentation ( \\ & spinNodeHandle & hNode, \\ & spinRepresentation * pValue ) \end{tabular}
```

Retrieves the numerical representation of the value of a node; i.e.

linear, logarithmic, hexidecimal, MAC address, etc.

### See also

## **Parameters**

hNode	The float node of the numerical representation to retrieve
pValue	The representation enum pointer in which the type of numerical representation is returned

### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

### 11.29.2.4 spinFloatGetUnit()

Retrieves the units of the float node value.

### See also

 ${\bf spinError}$ 

## **Parameters**

hNode	The float node of the units to retrieve
pBuf	The c-string character buffer in which the value units are returned
pBufLen	The unsigned integer pointer in which the length of the c-string is returned; the input value is the maximum length

### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.29.2.5 spinFloatGetValue()

Retrieves the value of a float node.

## See also

11.29 IFloat Access 301

### **Parameters**

hNode	The float node of the value to read
pValue	The double pointer in which the value is returned

### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

## 11.29.2.6 spinFloatGetValueEx()

Retrieves the value of a float node; manually set whether to verify the node.

#### See also

spinError

## **Parameters**

hNode	The float node of the value to read
pValue	The double pointer in which the value is returned

## Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.29.2.7 spinFloatSetValue()

Sets the value of a float node.

#### See also

## **Parameters**

hNode	The float node having its value changed
value	The float value to set

## Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

## 11.29.2.8 spinFloatSetValueEx()

Sets the value of a float node; manually set whether to verify the node.

### See also

spinError

## Parameters

hNode	The float node having its value changed
bVerify	The boolean of whether to verify the node
value	The float value to set


## Returns

11.30 IEnumeration Access 303

#### 11.30 IEnumeration Access

The functions in this section provide access to enum nodes.

Collaboration diagram for IEnumeration Access:

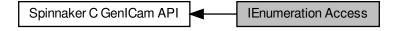

#### **Functions**

- SPINNAKERC\_API spinEnumerationGetNumEntries (spinNodeHandle hEnumNode, size\_t \*pValue)

  \*\*Retrieves the number of entries of an enum node.\*\*
- SPINNAKERC\_API spinEnumerationGetEntryByIndex (spinNodeHandle hEnumNode, size\_t index, spin
   — NodeHandle \*phEntry)

Retrieves an entry node from an enum node using an index.

SPINNAKERC\_API spinEnumerationGetEntryByName (spinNodeHandle hEnumNode, const char \*pName, spinNodeHandle \*phEntry)

Retrieves an entry node from an enum node using the entry's symbolic.

SPINNAKERC\_API spinEnumerationGetCurrentEntry (spinNodeHandle hEnumNode, spinNodeHandle \*phEntry)

Retrieves the currently selected entry node from an enum node.

- SPINNAKERC\_API spinEnumerationReleaseNode (spinNodeHandle hEnumNode, spinNodeHandle hEntry)
   Releases the entry node from the enum node handle.
- SPINNAKERC API spinEnumerationSetIntValue (spinNodeHandle hEnumNode, int64 t value)

Sets a new entry using its integer value retrieved from a call to spinEnumerationEntryGetIntValue(); note that enumeration entry int and enum values are different - int values defined on camera, enum values found in SpinnakerDefsC.h.

• SPINNAKERC API spinEnumerationSetEnumValue (spinNodeHandle hEnumNode, size t value)

Sets a new entry using its enum; note that enumeration entry int and enum values are different - int values defined on camera, enum values found in SpinnakerDefsC.h.

#### 11.30.1 Detailed Description

The functions in this section provide access to enum nodes.

This includes retrieving the number of entries, an entry by index or name, retrieving the current entry node, or setting the node using an integer.

#### 11.30.2 Function Documentation

### 11.30.2.1 spinEnumerationGetCurrentEntry()

Retrieves the currently selected entry node from an enum node.

#### See also

spinError

#### **Parameters**

hEnumNode	The enum node from which the current entry node is retrieved
phEntry	The node handle pointer in which the current entry node is returned

### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

### 11.30.2.2 spinEnumerationGetEntryByIndex()

Retrieves an entry node from an enum node using an index.

#### See also

spinError

#### **Parameters**

hEnumNode	The enum node from which the entry node is retrieved
index	The index of the entry node
phEntry	The node handle pointer in which the entry node is returned

# Returns

11.30 IEnumeration Access 305

### 11.30.2.3 spinEnumerationGetEntryByName()

Retrieves an entry node from an enum node using the entry's symbolic.

### See also

spinError

#### **Parameters**

hEnumNode	The enum node from which the entry node is retrieved
pName	The name of the entry node
phEntry	The node handle pointer in which the entry node is returned

#### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.30.2.4 spinEnumerationGetNumEntries()

Retrieves the number of entries of an enum node.

#### See also

spinError

#### **Parameters**

hEnumNode	The enum node where the entries to be counted are
pValue	The unsigned integer pointer in which the number of entries is returned

### Returns

#### 11.30.2.5 spinEnumerationReleaseNode()

Releases the entry node from the enum node handle.

Make sure node handle is cleaned up properly by setting it to NULL after the node is released If this function is not explicitly called, the handle will be released upon the release of the camera handle.

#### See also

```
spinCameraRelease
spinError
```

#### **Parameters**

hEnumNode	The enum node from which the current entry node is retrieved
hEntry	The entry node handle to be released

#### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

### 11.30.2.6 spinEnumerationSetEnumValue()

Sets a new entry using its enum; note that enumeration entry int and enum values are different - int values defined on camera, enum values found in SpinnakerDefsC.h.

#### See also

```
spinEnumerationEntryGetEnumValue() spinError
```

# **Parameters**

hEnumNode	The enum node have its entry changed
value	The enum value of the entry node to set; this corresponds to its integer value created in the library

#### Returns

11.30 IEnumeration Access 307

### 11.30.2.7 spinEnumerationSetIntValue()

Sets a new entry using its integer value retrieved from a call to spinEnumerationEntryGetIntValue(); note that enumeration entry int and enum values are different - int values defined on camera, enum values found in Spinnaker DefsC.h.

### See also

```
spinEnumerationEntryGetIntValue() spinError
```

#### **Parameters**

hEnumNode	The enum node having its entry changed
value	The integer value of the entry node to set; this corresponds to the integer value internal to the
	camera

### Returns

# 11.31 IEnumEntry Access

The functions in this section provide access to entry nodes This includes retrieving the integer value or the symbolic of an entry.

Collaboration diagram for IEnumEntry Access:



#### **Functions**

- SPINNAKERC\_API spinEnumerationEntryGetIntValue (spinNodeHandle hNode, int64\_t \*pValue)

  Retrieves the integer value of an entry node; note that enumeration entry int and enum values are different int values defined on camera, enum values found in SpinnakerDefsC.h.
- SPINNAKERC\_API spinEnumerationEntryGetEnumValue (spinNodeHandle hNode, size\_t \*pValue)

  Retrieves the enum value (as an integer) of an entry node; note that enumeraiton entry int and enum values are different int values defined on camera, enum values found in SpinnakerDefsC.h.
- SPINNAKERC\_API spinEnumerationEntryGetSymbolic (spinNodeHandle hNode, char \*pBuf, size\_t \*pBuf
   Len)

Retrieves the symbolic of an entry node as a c-string.

# 11.31.1 Detailed Description

The functions in this section provide access to entry nodes This includes retrieving the integer value or the symbolic of an entry.

### 11.31.2 Function Documentation

### 11.31.2.1 spinEnumerationEntryGetEnumValue()

Retrieves the enum value (as an integer) of an entry node; note that enumeraiton entry int and enum values are different - int values defined on camera, enum values found in SpinnakerDefsC.h.

#### See also

```
spinEnumerationSetEnumValue()
spinError
```

#### **Parameters**

hNode	The entry node of the enum value to retrieve
pValue	The unsigned integer pointer in which the enum value of the entry is returned

#### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

### 11.31.2.2 spinEnumerationEntryGetIntValue()

Retrieves the integer value of an entry node; note that enumeration entry int and enum values are different - int values defined on camera, enum values found in SpinnakerDefsC.h.

### See also

```
spinEnumerationSetIntValue() spinError
```

# Parameters

hNode	The entry node of the integer value to retrieve
pValue	The integer pointer in which the integer value of the entry is returned

#### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

#### 11.31.2.3 spinEnumerationEntryGetSymbolic()

Retrieves the symbolic of an entry node as a c-string.

#### See also

spinError

# **Parameters**

hNode	The entry node of the symbolic to retrieve
pBuf	The c-string character buffer in which the symbolic of the entry node is returned
pBufLen	The unsigned integer pointer in which the length of the c-string is returned; the input value is the maximum length


# Returns

11.32 IBoolean Access 311

### 11.32 IBoolean Access

The functions in this section provide access to boolean nodes using the bool8\_t data type, values represented with 'True' and 'False'.

Collaboration diagram for IBoolean Access:

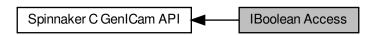

#### **Functions**

- SPINNAKERC\_API spinBooleanSetValue (spinNodeHandle hNode, bool8\_t value)
  - Sets the value of a boolean node; boolean values are represented by 'True' (which equals '0') and 'False' (which equals '1')
- SPINNAKERC\_API spinBooleanGetValue (spinNodeHandle hNode, bool8\_t \*pbValue)

Retrieves the value of a boolean node; boolean values are represented by 'True' (which equals '0') and 'False' (which equals '1')

### 11.32.1 Detailed Description

The functions in this section provide access to boolean nodes using the bool8\_t data type, values represented with 'True' and 'False'.

This includes value getters and setters.

### 11.32.2 Function Documentation

# 11.32.2.1 spinBooleanGetValue()

Retrieves the value of a boolean node; boolean values are represented by 'True' (which equals '0') and 'False' (which equals '1')

See also

spinError

### **Parameters**

hNode	The boolean node of the value to read
pValue	The boolean pointer in which the value is returned

# Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.32.2.2 spinBooleanSetValue()

Sets the value of a boolean node; boolean values are represented by 'True' (which equals '0') and 'False' (which equals '1')

#### See also

spinError

### **Parameters**

hNode	The boolean node having its value changed
value	The boolean value to set


### Returns

11.33 ICommand Access 313

# 11.33 | ICommand Access

The functions in this section all provide access to information and objects retrieved from nodes.

Collaboration diagram for ICommand Access:

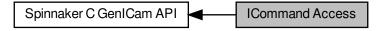

### **Functions**

- SPINNAKERC\_API spinCommandExecute (spinNodeHandle hNode)
  - Executes the action associated to a command node.
- $\bullet \ \ SPINNAKERC\_API \ spinCommandIsDone \ (spinNodeHandle \ hNode, bool8\_t \ *pbValue)$

Retrieves whether or not the action of a command node has completed.

# 11.33.1 Detailed Description

The functions in this section all provide access to information and objects retrieved from nodes.

This includes node properties and callbacks.

# 11.33.2 Function Documentation

# 11.33.2.1 spinCommandExecute()

Executes the action associated to a command node.

See also

spinError

### **Parameters**

hNode	The command node to execute
-------	-----------------------------

#### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.33.2.2 spinCommandIsDone()

```
SPINNAKERC_API spinCommandIsDone ( spinNodeHandle\ hNode, bool8\_t\ *\ pbValue\ )
```

Retrieves whether or not the action of a command node has completed.

### See also

 ${\bf spinError}$ 

#### **Parameters**

hNode	The command node to check
pValue	The boolean pointer to return whether or not the command has completed


#### Returns

11.34 ICategory Access 315

# 11.34 ICategory Access

The functions in this section all provide access to information and objects retrieved from nodes.

Collaboration diagram for ICategory Access:

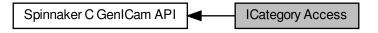

#### **Functions**

- SPINNAKERC\_API spinCategoryGetNumFeatures (spinNodeHandle hCategoryNode, size\_t \*pValue)

  Retrieves the number of a features (or child nodes) or a category node.
- SPINNAKERC\_API spinCategoryGetFeatureByIndex (spinNodeHandle hCategoryNode, size\_t index, spin
   — NodeHandle \*phFeature)

Retrieves a node from a category node using an index.

# 11.34.1 Detailed Description

The functions in this section all provide access to information and objects retrieved from nodes.

This includes node properties and callbacks.

#### 11.34.2 Function Documentation

### 11.34.2.1 spinCategoryGetFeatureByIndex()

Retrieves a node from a category node using an index.

See also

spinError

### **Parameters**

hCategoryNode	The category node of the node to retrieve
index	The index of the feature node
phFeature	The node handle pointer in which the feature node is returned

#### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

### 11.34.2.2 spinCategoryGetNumFeatures()

Retrieves the number of a features (or child nodes) or a category node.

#### See also

spinError

### **Parameters**

hCategoryNode	The category node where the features to be counted are
pValue	The unsigned integer pointer in which the number of features is returned


# Returns

11.35 IRegister Access 317

# 11.35 IRegister Access

The functions in this section provide access to register nodes.

Collaboration diagram for IRegister Access:

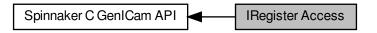

#### **Functions**

SPINNAKERC\_API spinRegisterGet (spinNodeHandle hNode, uint8\_t \*pBuf, int64\_t length)

Retrieves the value of a register node.

• SPINNAKERC\_API spinRegisterGetEx (spinNodeHandle hNode, bool8\_t bVerify, bool8\_t bIgnoreCache, uint8\_t \*pBuf, int64\_t length)

Retrieves the value of a register node; manually set whether to verify the node and whether to ignore the cache.

• SPINNAKERC\_API spinRegisterGetAddress (spinNodeHandle hNode, int64\_t \*pAddress)

Retrieves the address of a register node.

• SPINNAKERC\_API spinRegisterGetLength (spinNodeHandle hNode, int64\_t \*pLength)

Retrieves the length (in bytes) of the value of a register node.

SPINNAKERC\_API spinRegisterSet (spinNodeHandle hNode, const uint8\_t \*pBuf, int64\_t length)

Sets the value of a register node.

• SPINNAKERC\_API spinRegisterSetEx (spinNodeHandle hNode, bool8\_t bVerify, const uint8\_t \*pBuf, int64← \_t length)

Sets the value of a register node; manually set whether to verify the node.

SPINNAKERC API spinRegisterSetReference (spinNodeHandle hNode, spinNodeHandle hRef)

Uses a second node as a reference for a register node.

# 11.35.1 Detailed Description

The functions in this section provide access to register nodes.

This includes access to the node, its address and length, and reference.

#### 11.35.2 Function Documentation

### 11.35.2.1 spinRegisterGet()

Retrieves the value of a register node.

### See also

spinError

#### **Parameters**

hNode	The register node of the value to retrieve
pBuf	The unsigned integer buffer in which the value is returned
length	The integer pointer in which the length of the register array is returned; the input value is the maximum length

# Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.35.2.2 spinRegisterGetAddress()

Retrieves the address of a register node.

# See also

spinError

#### **Parameters**

hNode	The register node of the address to retrieve
pAddress	The integer pointer in which the address is returned

### Returns

11.35 IRegister Access 319

#### 11.35.2.3 spinRegisterGetEx()

Retrieves the value of a register node; manually set whether to verify the node and whether to ignore the cache.

#### See also

 ${\bf spinError}$ 

#### **Parameters**

hNode	The register node of the value to retrieve
bVerify	The boolean of whether to verify the node
IgnoreCache	The boolean of whether to ignore the cache
pBuf	The unsigned integer buffer in which the value is returned
length	The integer pointer in which the length of the register array is returned; the input value is the maximum length

#### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.35.2.4 spinRegisterGetLength()

```
SPINNAKERC_API spinRegisterGetLength ( spinNodeHandle\ hNode, int64\_t\ *\ pLength\ )
```

Retrieves the length (in bytes) of the value of a register node.

#### See also

spinError

# **Parameters**

hNode	The register node of the length to retrieve
plength	The integer in which the number of bytes is returned

#### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.35.2.5 spinRegisterSet()

Sets the value of a register node.

#### See also

spinError

#### **Parameters**

hNode	The register node of the value to set
pBuf	The unsigned integer buffer of the value to set
length	The number of bytes of the value to set

### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.35.2.6 spinRegisterSetEx()

Sets the value of a register node; manually set whether to verify the node.

# See also

spinError

#### **Parameters**

hNode	The register node of the value to set
bVerify	The boolean of whether to verify the node
pBuf	The unsigned integer buffer of the value to set
length	The number of bytes of the value to set

11.35 IRegister Access 321

#### Returns

spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 11.35.2.7 spinRegisterSetReference()

Uses a second node as a reference for a register node.

### See also

 ${\bf spinError}$ 

#### **Parameters**


hNode	The register node that houses the reference
hRef	The reference node

#### Returns

# 11.36 Spinnaker C GenlCam Handles

Handle definitions for Spinnaker C GenlCam API.

Collaboration diagram for Spinnaker C GenlCam Handles:

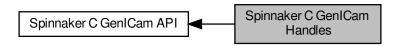

# **Typedefs**

- typedef void \* spinNodeMapHandle
   Handle for nodemap functionality.
- typedef void \* spinNodeHandle

Handle for node functionality.

• typedef void \* spinNodeCallbackHandle

Handle for callback functionality.

• typedef void(\* spinNodeCallbackFunction) (spinNodeHandle hNode)

Function signatures are used to create and trigger callbacks and events.

### 11.36.1 Detailed Description

Handle definitions for Spinnaker C GenlCam API.

### 11.36.2 Typedef Documentation

#### 11.36.2.1 spinNodeCallbackFunction

typedef void(\* spinNodeCallbackFunction) (spinNodeHandle hNode)

Function signatures are used to create and trigger callbacks and events.

# 11.36.2.2 spinNodeCallbackHandle

typedef void\* spinNodeCallbackHandle

Handle for callback functionality.

Created by calling spinNodeRegisterCallback(), which requires a call to spinNodeUnregisterCallback() destroy.

#### 11.36.2.3 spinNodeHandle

typedef void\* spinNodeHandle

Handle for node functionality.

Created by calling spinNodeMapGetNode(). No need to release, clear, or destroy.

# 11.36.2.4 spinNodeMapHandle

typedef void\* spinNodeMapHandle


Handle for nodemap functionality.

Created by calling spinCameraGetNodemap(), spinCameraGetTLDeviceNodeMap(), spinCameraGetTLStream ← NodeMap() or spinInterfaceGetTLNodeMap(). No need to release, clear, or destroy.

# 11.37 Spinnaker C GenlCam Enumerations

Enumeration definitions for Spinnaker C GenlCam API.

Collaboration diagram for Spinnaker C GenlCam Enumerations:

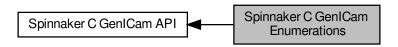

#### **Enumerations**

```
enum spinNodeType {
 ValueNode,
 BaseNode,
 IntegerNode,
 BooleanNode,
 FloatNode,
 CommandNode,
 StringNode,
 RegisterNode,
 EnumerationNode,
 EnumEntryNode,
 CategoryNode,
 PortNode,
 UnknownNode = -1 }
• enum spinSign {
 Signed,
 Unsigned,
  _UndefinedSign }
• enum spinAccessMode {
 NI,
 NA,
 WO.
 RO,
 RW.
 _UndefinedAccesMode,
 _CycleDetectAccesMode }
enum spinVisibility {
 Beginner = 0,
 Expert = 1,
 Guru = 2,
 Invisible = 3,
 _UndefinedVisibility = 99 }
• enum spinCachingMode {
 NoCache,
 WriteThrough,
 WriteAround,
 _UndefinedCachingMode }
```

```
• enum spinRepresentation {
  Linear,
 Logarithmic,
  Boolean,
  PureNumber,
  HexNumber,
  IPV4Address,
 MACAddress,
  _UndefinedRepresentation }
     recommended representation of a node value
• enum spinEndianess {
  BigEndian,
 LittleEndian,
  UndefinedEndian }
     Endianess of a value in a register.
enum spinNameSpace {
  Custom,
  Standard,
  _UndefinedNameSpace }
     Defines if a node name is standard or custom.
• enum spinStandardNameSpace {
 None,
  GEV,
  IIDC,
 CL,
 USB,
  UndefinedStandardNameSpace }
     Defines from which standard namespace a node name comes from.
enum spinYesNo {
  Yes = 1,
 No = 0,
  _UndefinedYesNo = 2 }
     Defines the chices of a Yes/No alternaitve.
• enum spinSlope {
  Increasing,
  Decreasing,
  Varying,
  Automatic,
  _UndefinedESlope }
     typedef for fomula type

    enum spinXMLValidation {

  xvLoad = 0x00000001L,
  xvCycles = 0x00000002L,
  xvSFNC = 0x00000004L,
  xvDefault = 0x00000000L,
 xvAII = 0xffffffffL
  _UndefinedEXMLValidation = 0x8000000L }
     typedef describing the different validity checks which can be performed on an XML file
• enum spinDisplayNotation {
 fnAutomatic,
 fnFixed,
 fnScientific.
  _UndefinedEDisplayNotation }
     typedef for float notation
enum spinInterfaceType {
  intflValue,
```

```
intflBase,
 intflInteger,
 intflBoolean,
 intflCommand,
 intflFloat,
 intflString,
 intflRegister,
 intflCategory,
 intflEnumeration,
 intflEnumEntry,
 intflPort }
     typedef for interface type
enum spinLinkType {
 ctAllDependingNodes,
 ctAllTerminalNodes,
 ctInvalidators,
 ctReadingChildren,
 ctWritingChildren,
 ctDependingChildren }
     typedef for link type

    enum spinIncMode {

 noIncrement.
 fixedIncrement,
 listIncrement }
     typedef for increment mode
• enum spinInputDirection {
 idFrom,
 idTo,
 idNone }
     typedef for link type
```

# 11.37.1 Detailed Description

Enumeration definitions for Spinnaker C GenlCam API.

# 11.37.2 Enumeration Type Documentation

# 11.37.2.1 spinAccessMode

enum spinAccessMode

NI	
NA	
WO	
RO	
RW	
_UndefinedAccesMode	
_CycleDetectAccesMode	

# 11.37.2.2 spinCachingMode

enum spinCachingMode

### Enumerator

NoCache	
WriteThrough	
WriteAround	
_UndefinedCachingMode	

# 11.37.2.3 spinDisplayNotation

enum spinDisplayNotation

typedef for float notation

### Enumerator

fnAutomatic	
fnFixed	
	the notation if either scientific or fixed depending on what is shorter
fnScientific	
	the notation is fixed, e.g. 123.4
_UndefinedEDisplayNotation	
	the notation is scientific, e.g. 1.234e2
	Object is not yet initialized

# 11.37.2.4 spinEndianess

enum spinEndianess

Endianess of a value in a register.

BigEndian	Register is big endian.
LittleEndian	Register is little endian.
_UndefinedEndian	Object is not yet initialized.

### 11.37.2.5 spinIncMode

enum spinIncMode

# typedef for increment mode

# Enumerator

noIncrement	
fixedIncrement	
listIncrement	

# 11.37.2.6 spinInputDirection

enum spinInputDirection

# typedef for link type

# Enumerator

idFrom	
idTo	
	Indicates a swiss knife that it is used as worker for a converter computing FROM
idNone	
	Indicates a swiss knife that it is used as worker for a converter computing TO
	SwissKnife is not used within a converter

# 11.37.2.7 spinInterfaceType

enum spinInterfaceType

# typedef for interface type

intflValue	
intflBase	
	IValue interface

# Enumerator

intflInteger	
intimitegei	IBase interface
intflBoolean	
	IInteger interface
intflCommand	
	IBoolean interface
intflFloat	
	ICommand interface
intflString	
	IFloat interface
intflRegister	
	IString interface
intflCategory	
	IRegister interface
intflEnumeration	
	ICategory interface
intflEnumEntry	
	IEnumeration interface
intflPort	
	IEnumEntry interface
	IPort interface

# 11.37.2.8 spinLinkType

enum spinLinkType

typedef for link type

ctAllDependingNodes	
ctAllTerminalNodes	
	All nodes which will be invalidated if this node becomes invalid
ctInvalidators	
	All terminal nodes which may be written to by this node

# Enumerator

ctReadingChildren	
	List of references to nodes which may invalidate this node
ctWritingChildren	
	All child nodes which influence this node's AccessMode
ctDependingChildren	
	All child nodes which may be written to
	All child nodes which will cause this node to be invalidated

# 11.37.2.9 spinNameSpace

enum spinNameSpace

Defines if a node name is standard or custom.

# Enumerator

Custom	name resides in custom namespace
Standard	name resides in one of the standard namespaces
_UndefinedNameSpace	Object is not yet initialized.

# 11.37.2.10 spinNodeType

enum spinNodeType

ValueNode	
BaseNode	
IntegerNode	
BooleanNode	
FloatNode	
CommandNode	
StringNode	
RegisterNode	
EnumerationNode	
EnumEntryNode	
CategoryNode	
PortNode	
UnknownNode	

# 11.37.2.11 spinRepresentation

enum spinRepresentation

# recommended representation of a node value

# Enumerator

Linear	Slider with linear behavior.
Logarithmic	Slider with logarithmic behaviour.
Boolean	Check box.
PureNumber	Decimal number in an edit control.
HexNumber	Hex number in an edit control.
IPV4Address	IP-Address.
MACAddress	MAC-Address.
_UndefinedRepresentation	

# 11.37.2.12 spinSign

enum spinSign

### Enumerator

Signed	
Unsigned	
_UndefinedSign	

# 11.37.2.13 spinSlope

enum spinSlope

# typedef for fomula type

Increasing	
Decreasing	
	strictly monotonous increasing
Varying	
	strictly monotonous decreasing

# Enumerator

Automatic	
	slope changes, e.g. at run-time
_UndefinedESlope	
	slope is determined automatically by probing the function
	Object is not yet initialized

# 11.37.2.14 spinStandardNameSpace

enum spinStandardNameSpace

Defines from which standard namespace a node name comes from.

### Enumerator

None	name resides in custom namespace
GEV	name resides in GigE Vision namespace
IIDC	name resides in 1394 IIDC namespace
CL	name resides in camera link namespace
USB	name resides in USB namespace
_UndefinedStandardNameSpace	Object is not yet initialized.

# 11.37.2.15 spinVisibility

 $\verb"enum spinVisibility"$ 

### Enumerator

Beginner	
Expert	
Guru	
Invisible	
_UndefinedVisibility	

# 11.37.2.16 spinXMLValidation

 $\verb"enum spinXMLValidation"$ 

typedef describing the different validity checks which can be performed on an XML file

The enum values for a bitfield of lenght uint32\_t

# Enumerator

xvLoad	
xvCycles	
	Creates a dummy node map
xvSFNC	
	checks for write and dependency cycles (implies xvLoad)
xvDefault	
	checks for conformance with the standard feature naming convention (SFNC)
xvAll	
	checks performed if nothing else is said
_UndefinedEXMLValidation	
	all possible checks
	Object is not yet initialized

# 11.37.2.17 spinYesNo

enum spinYesNo


Defines the chices of a Yes/No alternaitve.

Yes	yes
No	no
_UndefinedYesNo	Object is not yet initialized.

# 11.38 SpinVideo Recording Access

The functions in this section provide access to video recording capabilities, which include opening, building, and closing video files.

Collaboration diagram for SpinVideo Recording Access:

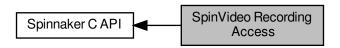

#### **Functions**

- SPINNAKERC\_API\_DEPRECATED ("spinVideoOpenUncompressed is deprecated, use spinVideoOpen
   UncompressedEx instead.", spinVideoOpenUncompressed(spinVideo \*phSpinVideo, const char \*pName,
   spinAVIOption option))
- SPINNAKERC\_API spinVideoOpenUncompressedEx (spinVideo \*phSpinVideo, const char \*pName, spin← AVIOptionEx option)
- SPINNAKERC\_API\_DEPRECATED ("spinVideoOpenMJPG is deprecated, use spinVideoOpenMJPGEx instead.", spinVideoOpenMJPG(spinVideo \*phSpinVideo, const char \*pName, spinMJPGOption option))
- SPINNAKERC\_API spinVideoOpenMJPGEx (spinVideo \*phSpinVideo, const char \*pName, spinMJPG
   OptionEx option)
- SPINNAKERC\_API spinVideoOpenH264 (spinVideo \*phSpinVideo, const char \*pName, spinH264Option option)
- SPINNAKERC\_API spinVideoAppend (spinVideo hSpinVideo, spinImage hImage)
- SPINNAKERC\_API spinVideoSetMaximumFileSize (spinVideo hSpinVideo, unsigned int size) Set the maximum file size (in megabytes) of a AVI/MP4 file.
- SPINNAKERC\_API spinVideoClose (spinVideo hSpinVideo)

# 11.38.1 Detailed Description

The functions in this section provide access to video recording capabilities, which include opening, building, and closing video files.

#### 11.38.2 Function Documentation

# 11.38.2.1 SPINNAKERC\_API\_DEPRECATED() [1/2]

```
11.38.2.2 SPINNAKERC_API_DEPRECATED() [2/2]
SPINNAKERC_API_DEPRECATED (
             "spinVideoOpenMJPG is deprecated,
             use spinVideoOpenMJPGEx instead." ,
             spinVideoOpenMJPG(spinVideo *phSpinVideo, const char *pName, spinMJPGOption option)
11.38.2.3 spinVideoAppend()
SPINNAKERC_API spinVideoAppend (
             spinVideo hSpinVideo,
             spinImage hImage )
11.38.2.4 spinVideoClose()
SPINNAKERC_API spinVideoClose (
             spinVideo hSpinVideo )
11.38.2.5 spinVideoOpenH264()
SPINNAKERC_API spinVideoOpenH264 (
             spinVideo * phSpinVideo,
             const char * pName,
             spinH264Option option )
11.38.2.6 spinVideoOpenMJPGEx()
SPINNAKERC_API spinVideoOpenMJPGEx (
             spinVideo * phSpinVideo,
             const char * pName,
             spinMJPGOptionEx option )
11.38.2.7 spinVideoOpenUncompressedEx()
SPINNAKERC_API spinVideoOpenUncompressedEx (
             spinVideo * phSpinVideo,
             const char * pName,
             spinAVIOptionEx option )
```

### 11.38.2.8 spinVideoSetMaximumFileSize()

Set the maximum file size (in megabytes) of a AVI/MP4 file.

A new AVI/MP4 file is created automatically when file size limit is reached. Setting a maximum size of 0 indicates no limit on file size.

#### **Parameters**

hSpinVideo	The spin video recorder to append the image to
size The maximum video file size in MB.	

### Returns

# 11.39 Transport Layer Enumerations

Collaboration diagram for Transport Layer Enumerations:



#### **Enumerations**

```
    enum spinTLStreamTypeEnums {
        StreamType_GigEVision,
        StreamType_CameraLink,
        StreamType_CameraLinkHS,
        StreamType_CoaXPress,
        StreamType_USB3Vision,
        StreamType_Custom,
        NUMSTREAMTYPE }
```

The enumeration definitions for transport layer nodes.

```
    enum spinTLStreamModeEnums {
        StreamMode_Socket,
        StreamMode_LWF,
        StreamMode_MVA,
        NUMSTREAMMODE }
```

- enum spinTLStreamBufferCountModeEnums {
   StreamBufferCountMode\_Manual,
   StreamBufferCountMode\_Auto,
   NUMSTREAMBUFFERCOUNTMODE }
- enum spinTLStreamBufferHandlingModeEnums {
   StreamBufferHandlingMode\_OldestFirst,
   StreamBufferHandlingMode\_OldestFirstOverwrite,
   StreamBufferHandlingMode\_NewestOnly,
   StreamBufferHandlingMode\_NewestFirst,
   NUMSTREAMBUFFERHANDLINGMODE }
- enum spinTLDeviceTypeEnums {
   DeviceType\_GigEVision,
   DeviceType\_CameraLink,
   DeviceType\_CameraLinkHS,
   DeviceType\_CoaXPress,
   DeviceType\_USB3Vision,

DeviceType\_Custom,
NUMDEVICETYPE }

• enum spinTLDeviceAccessStatusEnums {

DeviceAccessStatus\_Unknown,
DeviceAccessStatus\_ReadWrite,
DeviceAccessStatus\_ReadOnly,
DeviceAccessStatus\_NoAccess,
DeviceAccessStatus\_Busy,
DeviceAccessStatus\_OpenReadWrite,
DeviceAccessStatus\_OpenReadOnly,
NUMDEVICEACCESSSTATUS }

```
enum spinTLGevCCPEnums {
 GevCCP_EnumEntry_GevCCP_OpenAccess,
 GevCCP_EnumEntry_GevCCP_ExclusiveAccess,
 GevCCP_EnumEntry_GevCCP_ControlAccess,
 NUMGEVCCP }

    enum spinTLGUIXMLLocationEnums {

 GUIXMLLocation_Device,
 GUIXMLLocation Host,
 NUMGUIXMLLOCATION }

    enum spinTLGenICamXMLLocationEnums {

 GenICamXMLLocation_Device,
 GenICamXMLLocation_Host,
 NUMGENICAMXMLLOCATION }
• enum spinTLDeviceEndianessMechanismEnums {
 DeviceEndianessMechanism_Legacy,
 DeviceEndianessMechanism Standard,
 NUMDEVICEENDIANESSMECHANISM }

    enum spinTLDeviceCurrentSpeedEnums {

 DeviceCurrentSpeed UnknownSpeed,
 DeviceCurrentSpeed LowSpeed,
 DeviceCurrentSpeed_FullSpeed,
 DeviceCurrentSpeed_HighSpeed,
 DeviceCurrentSpeed SuperSpeed,
 NUMDEVICECURRENTSPEED }
• enum spinTLInterfaceTypeEnums {
 InterfaceType GigEVision,
 InterfaceType CameraLink.
 InterfaceType CameraLinkHS,
 InterfaceType CoaXPress,
 InterfaceType USB3Vision,
 InterfaceType Custom,
 NUMINTERFACETYPE }

    enum spinTLPOEStatusEnums {

 POEStatus NotSupported,
 POEStatus_PowerOff,
 POEStatus PowerOn,
 NUMPOESTATUS }

    enum spinTLFilterDriverStatusEnums {

 FilterDriverStatus_NotSupported,
 FilterDriverStatus_Disabled,
 FilterDriverStatus Enabled,
 NUMFILTERDRIVERSTATUS }
enum spinTLTLTypeEnums {
 TLType_GigEVision,
 TLType_CameraLink,
 TLType_CameraLinkHS,
 TLType CoaXPress,
 TLType USB3Vision,
 TLType Mixed,
 TLType_Custom,
 NUMTLTYPE }
```

#### 11.39.1 Detailed Description

#### 11.39.2 Enumeration Type Documentation

#### 11.39.2.1 spinTLDeviceAccessStatusEnums

 $\verb"enum spinTLDeviceAccessStatusEnums"$ 

< Gets the access status the transport layer Producer has on the device.

#### Enumerator

DeviceAccessStatus_Unknown	Not known to producer.
DeviceAccessStatus_ReadWrite	Full access
DeviceAccessStatus_ReadOnly	Read-only access
DeviceAccessStatus_NoAccess	Not available to connect
DeviceAccessStatus_Busy	The device is already opened by another entity
DeviceAccessStatus_OpenReadWrite	Open in Read/Write mode by this GenTL host
DeviceAccessStatus_OpenReadOnly	Open in Read access mode by this GenTL host
NUMDEVICEACCESSSTATUS	

## 11.39.2.2 spinTLDeviceCurrentSpeedEnums

 $\verb"enum" spinTLDeviceCurrentSpeedEnums"$ 

 $<\mbox{The USB}$  Speed that the device is currently operating at.

#### Enumerator

DeviceCurrentSpeed_UnknownSpeed	Unknown-Speed.
DeviceCurrentSpeed_LowSpeed	Low-Speed.
DeviceCurrentSpeed_FullSpeed	Full-Speed.
DeviceCurrentSpeed_HighSpeed	High-Speed.
DeviceCurrentSpeed_SuperSpeed	Super-Speed.
NUMDEVICECURRENTSPEED	

# 11.39.2.3 spinTLDeviceEndianessMechanismEnums

 $\verb"enum" spinTLDeviceEndianessMechanismEnums"$ 

< Identifies the endianness handling mode.

DeviceEndianessMechanism_Legacy	Handling the device endianness according to GenICam Schema
	1.0
DeviceEndianessMechanism_Standard	Handling the device endianness according to GenlCam Schema
	1.1 and later
NUMDEVICEENDIANESSMECHANISM	

## 11.39.2.4 spinTLDeviceTypeEnums

enum spinTLDeviceTypeEnums

< Transport layer type of the device.

#### Enumerator

DeviceType_GigEVision	GigE Vision
DeviceType_CameraLink	Camera Link
DeviceType_CameraLinkHS	Camera Link High Speed
DeviceType_CoaXPress	CoaXPress
DeviceType_USB3Vision	USB3 Vision
DeviceType_Custom	Custom transport layer
NUMDEVICETYPE	

#### 11.39.2.5 spinTLFilterDriverStatusEnums

enum spinTLFilterDriverStatusEnums

< Reports whether FLIR Light Weight Filter Driver is enabled, disabled, or not installed.

#### Enumerator

FilterDriverStatus_NotSupported	Not Installed
FilterDriverStatus_Disabled	FLIR Light Weight Filter Driver is disabled across all interfaces
FilterDriverStatus_Enabled	FLIR Light Weight Filter Driver is enabled
NUMFILTERDRIVERSTATUS	

## 11.39.2.6 spinTLGenICamXMLLocationEnums

enum spinTLGenICamXMLLocationEnums

< Sets the location to load GenlCam XML.

GenICamXMLLocation_Device	Load GenICam XML from device
GenICamXMLLocation_Host	Load GenICam XML from host
NUMGENICAMXMLLOCATION	

#### 11.39.2.7 spinTLGevCCPEnums

enum spinTLGevCCPEnums

< Controls the device access privilege of an application.

#### Enumerator

GevCCP_EnumEntry_GevCCP_OpenAccess	Open access privilege.
GevCCP_EnumEntry_GevCCP_ExclusiveAccess	Exclusive access privilege.
GevCCP_EnumEntry_GevCCP_ControlAccess	Control access privilege.
NUMGEVCCP	

## 11.39.2.8 spinTLGUIXMLLocationEnums

enum spinTLGUIXMLLocationEnums

< Sets the location to load GUI XML.

#### Enumerator

GUIXMLLocation_Device	Load XML from device
GUIXMLLocation_Host	Load XML from host
NUMGUIXMLLOCATION	

# 11.39.2.9 spinTLInterfaceTypeEnums

 $\verb"enum spinTLInterfaceTypeEnums"$ 

< Transport layer type of the interface.

InterfaceType_GigEVision	GigE Vision
InterfaceType_CameraLink	Camera Link
InterfaceType_CameraLinkHS	Camera Link High Speed
InterfaceType_CoaXPress	CoaXPress
InterfaceType_USB3Vision	USB3 Vision
InterfaceType_Custom	Custom transport layer
NUMINTERFACETYPE	

#### 11.39.2.10 spinTLPOEStatusEnums

enum spinTLPOEStatusEnums

< Reports and controls the interface's power over Ethernet status.

#### Enumerator

POEStatus_NotSupported	Not Supported
POEStatus_PowerOff	Power is Off
POEStatus_PowerOn	Power is On
NUMPOESTATUS	

## 11.39.2.11 spinTLStreamBufferCountModeEnums

enum spinTLStreamBufferCountModeEnums

< Controls access to setting the number of buffers used for the stream.

#### Enumerator

StreamBufferCountMode_Manual	The number of buffers used for the stream is set by the user.
StreamBufferCountMode_Auto	DEPRECATED. The number of buffers used for the stream is
	automatically calculated based on the device frame rate.
NUMSTREAMBUFFERCOUNTMODE	

#### 11.39.2.12 spinTLStreamBufferHandlingModeEnums

 $\verb"enum" spinTLStreamBufferHandlingModeEnums"$ 

< Available buffer handling modes of this data stream:

StreamBufferHandlingMode_OldestFirst	The application always gets the buffer from the head of the output buffer queue (thus, the oldest available one). If the output buffer queue is empty, the application waits for a newly acquired buffer until the timeout expires.
StreamBufferHandlingMode_OldestFirstOverwrite	The application always gets the buffer from the head of the output buffer queue (thus, the oldest available one). If the output buffer queue is empty, the application waits for a newly acquired buffer until the timeout expires. If a new buffer arrives it will overwrite
Generated by Doxygen	the existing buffer from the head of the queue (behaves like a circular buffer).

## Enumerator

StreamBufferHandlingMode_NewestOnly	The application always gets the latest completed buffer (the newest one). If the Output Buffer Queue is empty, the application waits for a newly acquired buffer until the timeout expires. This buffer handling mode is typically used in a live display GUI where it is important that there is no lag between camera and display.
StreamBufferHandlingMode_NewestFirst	The application always gets the buffer from the tail of the output buffer queue (thus, the newest available one). If the output buffer queue is empty, the application waits for a newly acquired buffer until the timeout expires.
NUMSTREAMBUFFERHANDLINGMODE	

# 11.39.2.13 spinTLStreamModeEnums

enum spinTLStreamModeEnums

< Stream mode of the device.

## Enumerator

StreamMode_Socket	Socket
StreamMode_LWF	Light Weight Filter Driver
StreamMode_MVA Machine Vision Accelerator Drive	
NUMSTREAMMODE	

## 11.39.2.14 spinTLStreamTypeEnums

enum spinTLStreamTypeEnums

The enumeration definitions for transport layer nodes.

< Stream type of the device.

StreamType_GigEVision	GigE Vision
StreamType_CameraLink	Camera Link
StreamType_CameraLinkHS	Camera Link High Speed
StreamType_CoaXPress	CoaXPress
StreamType_USB3Vision	USB3 Vision
StreamType_Custom	Custom transport layer
NUMSTREAMTYPE	

# 11.39.2.15 spinTLTLTypeEnums


enum spinTLTLTypeEnums

 $<\mbox{Transport layer type}$  of the GenTL Producer implementation.

TLType_GigEVision	GigE Vision
TLType_CameraLink	Camera Link
TLType_CameraLinkHS	Camera Link High Speed
TLType_CoaXPress	CoaXPress
TLType_USB3Vision	USB3 Vision
TLType_Mixed	Different Interface modules of the GenTL Producer are of different types
TLType_Custom	Custom transport layer
NUMTLTYPE	

# 11.40 TLDevice Structures

Collaboration diagram for TLDevice Structures:

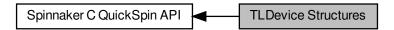

# **Data Structures**

• struct quickSpinTLDevice

# 11.40.1 Detailed Description

11.41 TLInterface Structures 347

# 11.41 TLInterface Structures

Collaboration diagram for TLInterface Structures:



## **Data Structures**

• struct quickSpinTLInterface

# 11.41.1 Detailed Description

# 11.42 TLStream Structures

Collaboration diagram for TLStream Structures:




## **Data Structures**

• struct quickSpinTLStream

# 11.42.1 Detailed Description

# 11.43 TLSystem Structures

Collaboration diagram for TLSystem Structures:

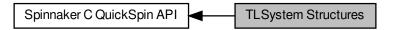

# **Data Structures**

• struct quickSpinTLSystem

# 11.43.1 Detailed Description

# **Chapter 12**

# **Data Structure Documentation**

# 12.1 actionCommandResult Struct Reference

Action Command Result.

#### **Data Fields**

- unsigned int DeviceAddress
- · actionCommandStatus Status

# 12.1.1 Detailed Description

Action Command Result.

## 12.1.2 Field Documentation

# 12.1.2.1 DeviceAddress

unsigned int DeviceAddress

#### 12.1.2.2 Status

actionCommandStatus Status

The documentation for this struct was generated from the following file:

• include/spinc/SpinnakerDefsC.h

# 12.2 quickSpin Struct Reference

#### **Data Fields**

- quickSpinIntegerNode LUTIndex
- quickSpinBooleanNode LUTEnable
- quickSpinIntegerNode LUTValue
- guickSpinEnumerationNode LUTSelector
- quickSpinFloatNode ExposureTime
- quickSpinCommandNode AcquisitionStop
- · quickSpinFloatNode AcquisitionResultingFrameRate
- quickSpinFloatNode AcquisitionLineRate
- quickSpinCommandNode AcquisitionStart
- · quickSpinCommandNode TriggerSoftware
- guickSpinEnumerationNode ExposureMode
- quickSpinEnumerationNode AcquisitionMode
- quickSpinIntegerNode AcquisitionFrameCount
- · quickSpinEnumerationNode TriggerSource
- · quickSpinEnumerationNode TriggerActivation
- quickSpinEnumerationNode SensorShutterMode
- · quickSpinFloatNode TriggerDelay
- guickSpinEnumerationNode TriggerMode
- quickSpinFloatNode AcquisitionFrameRate
- · quickSpinEnumerationNode TriggerOverlap
- quickSpinEnumerationNode TriggerSelector
- quickSpinBooleanNode AcquisitionFrameRateEnable
- quickSpinEnumerationNode ExposureAuto
- · quickSpinIntegerNode AcquisitionBurstFrameCount
- quickSpinIntegerNode EventTest
- quickSpinIntegerNode EventTestTimestamp
- quickSpinIntegerNode EventExposureEndFrameID
- quickSpinIntegerNode EventExposureEnd
- quickSpinIntegerNode EventExposureEndTimestamp
- quickSpinIntegerNode EventError
- quickSpinIntegerNode EventErrorTimestamp
- quickSpinIntegerNode EventErrorCode
- quickSpinIntegerNode EventErrorFrameID
- quickSpinEnumerationNode EventSelector
- · quickSpinBooleanNode EventSerialReceiveOverflow
- quickSpinIntegerNode EventSerialPortReceive
- quickSpinIntegerNode EventSerialPortReceiveTimestamp
- quickSpinStringNode EventSerialData
- quickSpinIntegerNode EventSerialDataLength
- quickSpinEnumerationNode EventNotification
- quickSpinIntegerNode LogicBlockLUTRowIndex
- guickSpinEnumerationNode LogicBlockSelector
- quickSpinEnumerationNode LogicBlockLUTInputActivation
- quickSpinEnumerationNode LogicBlockLUTInputSelector
- quickSpinEnumerationNode LogicBlockLUTInputSource
- quickSpinBooleanNode LogicBlockLUTOutputValue
- quickSpinIntegerNode LogicBlockLUTOutputValueAll
- quickSpinEnumerationNode LogicBlockLUTSelector
- guickSpinFloatNode ColorTransformationValue
- quickSpinBooleanNode ColorTransformationEnable

- quickSpinEnumerationNode ColorTransformationSelector
- · quickSpinEnumerationNode RgbTransformLightSource
- · quickSpinFloatNode Saturation
- guickSpinBooleanNode SaturationEnable
- quickSpinEnumerationNode ColorTransformationValueSelector
- · quickSpinIntegerNode TimestampLatchValue
- · quickSpinCommandNode TimestampReset
- · quickSpinStringNode DeviceUserID
- quickSpinFloatNode DeviceTemperature
- quickSpinIntegerNode MaxDeviceResetTime
- · quickSpinIntegerNode DeviceTLVersionMinor
- quickSpinStringNode DeviceSerialNumber
- quickSpinStringNode DeviceVendorName
- quickSpinEnumerationNode DeviceRegistersEndianness
- quickSpinStringNode DeviceManufacturerInfo
- · quickSpinIntegerNode DeviceLinkSpeed
- quickSpinIntegerNode LinkUptime
- quickSpinIntegerNode DeviceEventChannelCount
- quickSpinCommandNode TimestampLatch
- quickSpinEnumerationNode DeviceScanType
- · quickSpinCommandNode DeviceReset
- quickSpinEnumerationNode DeviceCharacterSet
- quickSpinIntegerNode DeviceLinkThroughputLimit
- quickSpinStringNode DeviceFirmwareVersion
- quickSpinIntegerNode DeviceStreamChannelCount
- quickSpinEnumerationNode DeviceTLType
- · quickSpinStringNode DeviceVersion
- quickSpinEnumerationNode DevicePowerSupplySelector
- quickSpinStringNode SensorDescription
- quickSpinStringNode DeviceModelName
- quickSpinIntegerNode DeviceTLVersionMajor
- quickSpinEnumerationNode DeviceTemperatureSelector
- quickSpinIntegerNode EnumerationCount
- quickSpinFloatNode PowerSupplyCurrent
- quickSpinStringNode DeviceID
- quickSpinIntegerNode DeviceUptime
- quickSpinIntegerNode DeviceLinkCurrentThroughput
- quickSpinIntegerNode DeviceMaxThroughput
- quickSpinCommandNode FactoryReset
- quickSpinFloatNode PowerSupplyVoltage
- quickSpinEnumerationNode DeviceIndicatorMode
- · quickSpinFloatNode DeviceLinkBandwidthReserve
- quickSpinIntegerNode AasRoiOffsetY
- quickSpinIntegerNode AasRoiOffsetX
- quickSpinEnumerationNode AutoExposureControlPriority
- quickSpinFloatNode BalanceWhiteAutoLowerLimit
- guickSpinFloatNode BalanceWhiteAutoDamping
- · quickSpinIntegerNode AasRoiHeight
- quickSpinFloatNode AutoExposureGreyValueUpperLimit
- quickSpinFloatNode AutoExposureTargetGreyValue
- quickSpinFloatNode AutoExposureGainLowerLimit
- quickSpinFloatNode AutoExposureGreyValueLowerLimit
- quickSpinEnumerationNode AutoExposureMeteringMode
- quickSpinFloatNode AutoExposureExposureTimeUpperLimit
- quickSpinFloatNode AutoExposureGainUpperLimit

- quickSpinFloatNode AutoExposureControlLoopDamping
- quickSpinFloatNode AutoExposureEVCompensation
- quickSpinFloatNode AutoExposureExposureTimeLowerLimit
- quickSpinEnumerationNode BalanceWhiteAutoProfile
- quickSpinEnumerationNode AutoAlgorithmSelector
- quickSpinEnumerationNode AutoExposureTargetGreyValueAuto
- quickSpinBooleanNode AasRoiEnable
- quickSpinEnumerationNode AutoExposureLightingMode
- · quickSpinIntegerNode AasRoiWidth
- guickSpinFloatNode BalanceWhiteAutoUpperLimit
- quickSpinIntegerNode LinkErrorCount
- quickSpinBooleanNode GevCurrentIPConfigurationDHCP
- quickSpinIntegerNode GevInterfaceSelector
- quickSpinIntegerNode GevSCPD
- quickSpinIntegerNode GevTimestampTickFrequency
- quickSpinIntegerNode GevSCPSPacketSize
- quickSpinIntegerNode GevCurrentDefaultGateway
- quickSpinBooleanNode GevSCCFGUnconditionalStreaming
- quickSpinIntegerNode GevMCTT
- quickSpinBooleanNode GevSCPSDoNotFragment
- quickSpinIntegerNode GevCurrentSubnetMask
- quickSpinIntegerNode GevStreamChannelSelector
- quickSpinIntegerNode GevCurrentIPAddress
- · quickSpinIntegerNode GevMCSP
- quickSpinIntegerNode GevGVCPPendingTimeout
- quickSpinEnumerationNode GevIEEE1588Status
- · quickSpinStringNode GevFirstURL
- quickSpinIntegerNode GevMACAddress
- quickSpinIntegerNode GevPersistentSubnetMask
- quickSpinIntegerNode GevMCPHostPort
- · quickSpinIntegerNode GevSCPHostPort
- quickSpinBooleanNode GevGVCPPendingAck
- quickSpinIntegerNode GevSCPInterfaceIndex
- · quickSpinBooleanNode GevSupportedOption
- quickSpinEnumerationNode GevIEEE1588Mode
- · quickSpinBooleanNode GevCurrentIPConfigurationLLA
- · quickSpinIntegerNode GevSCSP
- quickSpinBooleanNode GevIEEE1588
- quickSpinBooleanNode GevSCCFGExtendedChunkData
- quickSpinIntegerNode GevPersistentIPAddress
- quickSpinBooleanNode GevCurrentIPConfigurationPersistentIP
- quickSpinEnumerationNode GevIEEE1588ClockAccuracy
- · quickSpinIntegerNode GevHeartbeatTimeout
- quickSpinIntegerNode GevPersistentDefaultGateway
- quickSpinEnumerationNode GevCCP
- quickSpinIntegerNode GevMCDA
- quickSpinIntegerNode GevSCDA
- quickSpinIntegerNode GevSCPDirection
- guickSpinBooleanNode GevSCPSFireTestPacket
- · quickSpinStringNode GevSecondURL
- quickSpinEnumerationNode GevSupportedOptionSelector
- quickSpinBooleanNode GevGVCPHeartbeatDisable
- quickSpinIntegerNode GevMCRC
- guickSpinBooleanNode GevSCPSBigEndian
- quickSpinIntegerNode GevNumberOfInterfaces

- quickSpinIntegerNode TLParamsLocked
- · quickSpinIntegerNode PayloadSize
- quickSpinIntegerNode PacketResendRequestCount
- quickSpinBooleanNode SharpeningEnable
- quickSpinEnumerationNode BlackLevelSelector
- quickSpinBooleanNode GammaEnable
- quickSpinBooleanNode SharpeningAuto
- quickSpinBooleanNode BlackLevelClampingEnable
- · quickSpinFloatNode BalanceRatio
- guickSpinEnumerationNode BalanceWhiteAuto
- quickSpinFloatNode SharpeningThreshold
- · quickSpinEnumerationNode GainAuto
- quickSpinFloatNode Sharpening
- quickSpinFloatNode Gain
- quickSpinEnumerationNode BalanceRatioSelector
- guickSpinEnumerationNode GainSelector
- quickSpinFloatNode BlackLevel
- quickSpinIntegerNode BlackLevelRaw
- quickSpinFloatNode Gamma
- · quickSpinIntegerNode DefectTableIndex
- quickSpinCommandNode DefectTableFactoryRestore
- quickSpinIntegerNode DefectTableCoordinateY
- quickSpinCommandNode DefectTableSave
- quickSpinEnumerationNode DefectCorrectionMode
- quickSpinIntegerNode DefectTableCoordinateX
- quickSpinIntegerNode DefectTablePixelCount
- quickSpinBooleanNode DefectCorrectStaticEnable
- quickSpinCommandNode DefectTableApply
- quickSpinBooleanNode UserSetFeatureEnable
- quickSpinCommandNode UserSetSave
- quickSpinEnumerationNode UserSetSelector
- quickSpinCommandNode UserSetLoad
- quickSpinEnumerationNode UserSetDefault
- · quickSpinEnumerationNode SerialPortBaudRate
- quickSpinIntegerNode SerialPortDataBits
- quickSpinEnumerationNode SerialPortParity
- · quickSpinIntegerNode SerialTransmitQueueMaxCharacterCount
- quickSpinIntegerNode SerialReceiveQueueCurrentCharacterCount
- · quickSpinEnumerationNode SerialPortSelector
- quickSpinEnumerationNode SerialPortStopBits
- quickSpinCommandNode SerialReceiveQueueClear
- · quickSpinIntegerNode SerialReceiveFramingErrorCount
- quickSpinIntegerNode SerialTransmitQueueCurrentCharacterCount
- quickSpinIntegerNode SerialReceiveParityErrorCount
- quickSpinEnumerationNode SerialPortSource
- quickSpinIntegerNode SerialReceiveQueueMaxCharacterCount
- quickSpinIntegerNode SequencerSetStart
- · quickSpinEnumerationNode SequencerMode
- quickSpinEnumerationNode SequencerConfigurationValid
- quickSpinEnumerationNode SequencerSetValid
- · quickSpinIntegerNode SequencerSetSelector
- · quickSpinEnumerationNode SequencerTriggerActivation
- quickSpinEnumerationNode SequencerConfigurationMode
- quickSpinCommandNode SequencerSetSave
- quickSpinEnumerationNode SequencerTriggerSource

- quickSpinIntegerNode SequencerSetActive
- quickSpinIntegerNode SequencerSetNext
- · quickSpinCommandNode SequencerSetLoad
- quickSpinIntegerNode SequencerPathSelector
- quickSpinBooleanNode SequencerFeatureEnable
- · quickSpinIntegerNode TransferBlockCount
- guickSpinCommandNode TransferStart
- · quickSpinIntegerNode TransferQueueMaxBlockCount
- quickSpinIntegerNode TransferQueueCurrentBlockCount
- quickSpinEnumerationNode TransferQueueMode
- · quickSpinEnumerationNode TransferOperationMode
- quickSpinCommandNode TransferStop
- · quickSpinIntegerNode TransferQueueOverflowCount
- quickSpinEnumerationNode TransferControlMode
- · quickSpinFloatNode ChunkBlackLevel
- · quickSpinIntegerNode ChunkFrameID
- · quickSpinStringNode ChunkSerialData
- quickSpinFloatNode ChunkExposureTime
- quickSpinIntegerNode ChunkCompressionMode
- quickSpinFloatNode ChunkCompressionRatio
- · quickSpinBooleanNode ChunkSerialReceiveOverflow
- quickSpinIntegerNode ChunkTimestamp
- quickSpinBooleanNode ChunkModeActive
- quickSpinIntegerNode ChunkExposureEndLineStatusAll
- quickSpinEnumerationNode ChunkGainSelector
- quickSpinEnumerationNode ChunkSelector
- quickSpinEnumerationNode ChunkBlackLevelSelector
- quickSpinIntegerNode ChunkWidth
- quickSpinIntegerNode ChunkImage
- · quickSpinIntegerNode ChunkHeight
- quickSpinEnumerationNode ChunkPixelFormat
- quickSpinFloatNode ChunkGain
- · quickSpinIntegerNode ChunkSequencerSetActive
- · quickSpinIntegerNode ChunkCRC
- · quickSpinIntegerNode ChunkOffsetX
- quickSpinIntegerNode ChunkOffsetY
- quickSpinBooleanNode ChunkEnable
- · quickSpinIntegerNode ChunkSerialDataLength
- · quickSpinIntegerNode FileAccessOffset
- · quickSpinIntegerNode FileAccessLength
- quickSpinEnumerationNode FileOperationStatus
- quickSpinCommandNode FileOperationExecute
- quickSpinEnumerationNode FileOpenMode
- · quickSpinIntegerNode FileOperationResult
- quickSpinEnumerationNode FileOperationSelector
- quickSpinEnumerationNode FileSelector
- quickSpinIntegerNode FileSize
- quickSpinEnumerationNode BinningSelector
- quickSpinIntegerNode PixeIDynamicRangeMin
- quickSpinIntegerNode PixeIDynamicRangeMax
- · quickSpinIntegerNode OffsetY
- · quickSpinIntegerNode BinningHorizontal
- quickSpinIntegerNode Width
- quickSpinEnumerationNode TestPatternGeneratorSelector
- quickSpinFloatNode CompressionRatio

- quickSpinEnumerationNode CompressionSaturationPriority
- quickSpinBooleanNode ReverseX
- · quickSpinBooleanNode ReverseY
- quickSpinEnumerationNode TestPattern
- quickSpinEnumerationNode PixelColorFilter
- quickSpinIntegerNode WidthMax
- quickSpinEnumerationNode AdcBitDepth
- quickSpinIntegerNode BinningVertical
- quickSpinEnumerationNode DecimationHorizontalMode
- quickSpinEnumerationNode BinningVerticalMode
- quickSpinIntegerNode OffsetX
- quickSpinIntegerNode HeightMax
- · quickSpinIntegerNode DecimationHorizontal
- quickSpinEnumerationNode PixelSize
- · quickSpinIntegerNode SensorHeight
- guickSpinEnumerationNode DecimationSelector
- quickSpinBooleanNode IspEnable
- quickSpinBooleanNode AdaptiveCompressionEnable
- quickSpinEnumerationNode ImageCompressionMode
- quickSpinIntegerNode DecimationVertical
- quickSpinIntegerNode Height
- quickSpinEnumerationNode BinningHorizontalMode
- quickSpinEnumerationNode PixelFormat
- · quickSpinIntegerNode SensorWidth
- quickSpinEnumerationNode DecimationVerticalMode
- quickSpinCommandNode TestEventGenerate
- quickSpinCommandNode TriggerEventTest
- quickSpinIntegerNode GuiXmlManifestAddress
- quickSpinIntegerNode Test0001
- quickSpinBooleanNode V3\_3Enable
- quickSpinEnumerationNode LineMode
- quickSpinEnumerationNode LineSource
- · quickSpinEnumerationNode LineInputFilterSelector
- quickSpinBooleanNode UserOutputValue
- quickSpinIntegerNode UserOutputValueAll
- quickSpinEnumerationNode UserOutputSelector
- quickSpinBooleanNode LineStatus
- quickSpinEnumerationNode LineFormat
- · quickSpinIntegerNode LineStatusAll
- · quickSpinEnumerationNode LineSelector
- quickSpinEnumerationNode ExposureActiveMode
- quickSpinBooleanNode LineInverter
- · quickSpinFloatNode LineFilterWidth
- quickSpinEnumerationNode CounterTriggerActivation
- quickSpinIntegerNode CounterValue
- guickSpinEnumerationNode CounterSelector
- quickSpinIntegerNode CounterValueAtReset
- · quickSpinEnumerationNode CounterStatus
- quickSpinEnumerationNode CounterTriggerSource
- · quickSpinIntegerNode CounterDelay
- quickSpinEnumerationNode CounterResetSource
- · quickSpinEnumerationNode CounterEventSource
- quickSpinEnumerationNode CounterEventActivation
- quickSpinIntegerNode CounterDuration
- · quickSpinEnumerationNode CounterResetActivation

- quickSpinEnumerationNode DeviceType
- · quickSpinStringNode DeviceFamilyName
- quickSpinIntegerNode DeviceSFNCVersionMajor
- quickSpinIntegerNode DeviceSFNCVersionMinor
- quickSpinIntegerNode DeviceSFNCVersionSubMinor
- quickSpinIntegerNode DeviceManifestEntrySelector
- quickSpinIntegerNode DeviceManifestXMLMajorVersion
- quickSpinIntegerNode DeviceManifestXMLMinorVersion
- quickSpinIntegerNode DeviceManifestXMLSubMinorVersion
- quickSpinIntegerNode DeviceManifestSchemaMajorVersion
- quickSpinIntegerNode DeviceManifestSchemaMinorVersion
- · quickSpinStringNode DeviceManifestPrimaryURL
- quickSpinStringNode DeviceManifestSecondaryURL
- quickSpinIntegerNode DeviceTLVersionSubMinor
- · quickSpinIntegerNode DeviceGenCPVersionMajor
- guickSpinIntegerNode DeviceGenCPVersionMinor
- quickSpinIntegerNode DeviceConnectionSelector
- guickSpinIntegerNode DeviceConnectionSpeed
- quickSpinEnumerationNode DeviceConnectionStatus
- quickSpinIntegerNode DeviceLinkSelector
- quickSpinEnumerationNode DeviceLinkThroughputLimitMode
- quickSpinIntegerNode DeviceLinkConnectionCount
- quickSpinEnumerationNode DeviceLinkHeartbeatMode
- quickSpinFloatNode DeviceLinkHeartbeatTimeout
- quickSpinFloatNode DeviceLinkCommandTimeout
- · quickSpinIntegerNode DeviceStreamChannelSelector
- quickSpinEnumerationNode DeviceStreamChannelType
- quickSpinIntegerNode DeviceStreamChannelLink
- quickSpinEnumerationNode DeviceStreamChannelEndianness
- quickSpinIntegerNode DeviceStreamChannelPacketSize
- · quickSpinCommandNode DeviceFeaturePersistenceStart
- quickSpinCommandNode DeviceFeaturePersistenceEnd
- · quickSpinCommandNode DeviceRegistersStreamingStart
- $\bullet \ quick Spin Command Node \ Device Registers Streaming End$
- quickSpinCommandNode DeviceRegistersCheck
- · quickSpinBooleanNode DeviceRegistersValid
- quickSpinEnumerationNode DeviceClockSelector
- quickSpinFloatNode DeviceClockFrequency
- · quickSpinEnumerationNode DeviceSerialPortSelector
- quickSpinEnumerationNode DeviceSerialPortBaudRate
- quickSpinIntegerNode Timestamp
- quickSpinEnumerationNode SensorTaps
- quickSpinEnumerationNode SensorDigitizationTaps
- quickSpinEnumerationNode RegionSelector
- guickSpinEnumerationNode RegionMode
- guickSpinEnumerationNode RegionDestination
- quickSpinEnumerationNode ImageComponentSelector
- quickSpinBooleanNode ImageComponentEnable
- quickSpinIntegerNode LinePitch
- quickSpinEnumerationNode PixelFormatInfoSelector
- quickSpinIntegerNode PixelFormatInfoID
- guickSpinEnumerationNode Deinterlacing
- quickSpinEnumerationNode ImageCompressionRateOption
- guickSpinIntegerNode ImageCompressionQuality
- · quickSpinFloatNode ImageCompressionBitrate

- quickSpinEnumerationNode ImageCompressionJPEGFormatOption
- · quickSpinCommandNode AcquisitionAbort
- · quickSpinCommandNode AcquisitionArm
- quickSpinEnumerationNode AcquisitionStatusSelector
- quickSpinBooleanNode AcquisitionStatus
- · quickSpinIntegerNode TriggerDivider
- quickSpinIntegerNode TriggerMultiplier
- quickSpinEnumerationNode ExposureTimeMode
- quickSpinEnumerationNode ExposureTimeSelector
- guickSpinEnumerationNode GainAutoBalance
- guickSpinEnumerationNode BlackLevelAuto
- quickSpinEnumerationNode BlackLevelAutoBalance
- quickSpinEnumerationNode WhiteClipSelector
- quickSpinFloatNode WhiteClip
- quickSpinRegisterNode LUTValueAll
- guickSpinIntegerNode UserOutputValueAllMask
- quickSpinCommandNode CounterReset
- guickSpinEnumerationNode TimerSelector
- quickSpinFloatNode TimerDuration
- quickSpinFloatNode TimerDelay
- quickSpinCommandNode TimerReset
- quickSpinFloatNode TimerValue
- quickSpinEnumerationNode TimerStatus
- quickSpinEnumerationNode TimerTriggerSource
- quickSpinEnumerationNode TimerTriggerActivation
- quickSpinEnumerationNode EncoderSelector
- quickSpinEnumerationNode EncoderSourceA
- quickSpinEnumerationNode EncoderSourceB
- quickSpinEnumerationNode EncoderMode
- · quickSpinIntegerNode EncoderDivider
- quickSpinEnumerationNode EncoderOutputMode
- quickSpinEnumerationNode EncoderStatus
- quickSpinFloatNode EncoderTimeout
- quickSpinEnumerationNode EncoderResetSource
- quickSpinEnumerationNode EncoderResetActivation
- quickSpinCommandNode EncoderReset
- quickSpinIntegerNode EncoderValue
- quickSpinIntegerNode EncoderValueAtReset
- · quickSpinEnumerationNode SoftwareSignalSelector
- · quickSpinCommandNode SoftwareSignalPulse
- quickSpinEnumerationNode ActionUnconditionalMode
- quickSpinIntegerNode ActionDeviceKey
- · quickSpinIntegerNode ActionQueueSize
- · quickSpinIntegerNode ActionSelector
- quickSpinIntegerNode ActionGroupMask
- quickSpinIntegerNode ActionGroupKey
- quickSpinIntegerNode EventAcquisitionTrigger
- quickSpinIntegerNode EventAcquisitionTriggerTimestamp
- quickSpinIntegerNode EventAcquisitionTriggerFrameID
- · quickSpinIntegerNode EventAcquisitionStart
- quickSpinIntegerNode EventAcquisitionStartTimestamp
- · quickSpinIntegerNode EventAcquisitionStartFrameID
- quickSpinIntegerNode EventAcquisitionEnd
- quickSpinIntegerNode EventAcquisitionEndTimestamp
- · quickSpinIntegerNode EventAcquisitionEndFrameID

- quickSpinIntegerNode EventAcquisitionTransferStart
- quickSpinIntegerNode EventAcquisitionTransferStartTimestamp
- quickSpinIntegerNode EventAcquisitionTransferStartFrameID
- quickSpinIntegerNode EventAcquisitionTransferEnd
- quickSpinIntegerNode EventAcquisitionTransferEndTimestamp
- quickSpinIntegerNode EventAcquisitionTransferEndFrameID
- quickSpinIntegerNode EventAcquisitionError
- quickSpinIntegerNode EventAcquisitionErrorTimestamp
- quickSpinIntegerNode EventAcquisitionErrorFrameID
- · quickSpinIntegerNode EventFrameTrigger
- quickSpinIntegerNode EventFrameTriggerTimestamp
- quickSpinIntegerNode EventFrameTriggerFrameID
- · quickSpinIntegerNode EventFrameStart
- quickSpinIntegerNode EventFrameStartTimestamp
- quickSpinIntegerNode EventFrameStartFrameID
- · quickSpinIntegerNode EventFrameEnd
- quickSpinIntegerNode EventFrameEndTimestamp
- guickSpinIntegerNode EventFrameEndFrameID
- quickSpinIntegerNode EventFrameBurstStart
- quickSpinIntegerNode EventFrameBurstStartTimestamp
- quickSpinIntegerNode EventFrameBurstStartFrameID
- quickSpinIntegerNode EventFrameBurstEnd
- quickSpinIntegerNode EventFrameBurstEndTimestamp
- quickSpinIntegerNode EventFrameBurstEndFrameID
- guickSpinIntegerNode EventFrameTransferStart
- quickSpinIntegerNode EventFrameTransferStartTimestamp
- quickSpinIntegerNode EventFrameTransferStartFrameID
- quickSpinIntegerNode EventFrameTransferEnd
- quickSpinIntegerNode EventFrameTransferEndTimestamp
- quickSpinIntegerNode EventFrameTransferEndFrameID
- quickSpinIntegerNode EventExposureStart
- quickSpinIntegerNode EventExposureStartTimestamp
- quickSpinIntegerNode EventExposureStartFrameID
- quickSpinIntegerNode EventStream0TransferStart
- quickSpinIntegerNode EventStream0TransferStartTimestamp
- quickSpinIntegerNode EventStream0TransferStartFrameID
- quickSpinIntegerNode EventStream0TransferEnd
- quickSpinIntegerNode EventStream0TransferEndTimestamp
- quickSpinIntegerNode EventStream0TransferEndFrameID
- quickSpinIntegerNode EventStream0TransferPause
- quickSpinIntegerNode EventStream0TransferPauseTimestamp
- quickSpinIntegerNode EventStream0TransferPauseFrameID
- quickSpinIntegerNode EventStream0TransferResume
- quickSpinIntegerNode EventStream0TransferResumeTimestamp
- quickSpinIntegerNode EventStream0TransferResumeFrameID
- quickSpinIntegerNode EventStream0TransferBlockStart
- quickSpinIntegerNode EventStream0TransferBlockStartTimestamp
- quickSpinIntegerNode EventStream0TransferBlockStartFrameID
- quickSpinIntegerNode EventStream0TransferBlockEnd
- quickSpinIntegerNode EventStream0TransferBlockEndTimestamp
- quickSpinIntegerNode EventStream0TransferBlockEndFrameID
- quickSpinIntegerNode EventStream0TransferBlockTrigger
- quickSpinIntegerNode EventStream0TransferBlockTriggerTimestamp
- quickSpinIntegerNode EventStream0TransferBlockTriggerFrameID
- quickSpinIntegerNode EventStream0TransferBurstStart

- quickSpinIntegerNode EventStream0TransferBurstStartTimestamp
- quickSpinIntegerNode EventStream0TransferBurstStartFrameID
- quickSpinIntegerNode EventStream0TransferBurstEnd
- quickSpinIntegerNode EventStream0TransferBurstEndTimestamp
- quickSpinIntegerNode EventStream0TransferBurstEndFrameID
- quickSpinIntegerNode EventStream0TransferOverflow
- quickSpinIntegerNode EventStream0TransferOverflowTimestamp
- quickSpinIntegerNode EventStream0TransferOverflowFrameID
- quickSpinIntegerNode EventSequencerSetChange
- quickSpinIntegerNode EventSequencerSetChangeTimestamp
- · quickSpinIntegerNode EventSequencerSetChangeFrameID
- quickSpinIntegerNode EventCounter0Start
- quickSpinIntegerNode EventCounter0StartTimestamp
- quickSpinIntegerNode EventCounter0StartFrameID
- quickSpinIntegerNode EventCounter1Start
- quickSpinIntegerNode EventCounter1StartTimestamp
- quickSpinIntegerNode EventCounter1StartFrameID
- quickSpinIntegerNode EventCounter0End
- quickSpinIntegerNode EventCounter0EndTimestamp
- guickSpinIntegerNode EventCounter0EndFrameID
- · quickSpinIntegerNode EventCounter1End
- quickSpinIntegerNode EventCounter1EndTimestamp
- quickSpinIntegerNode EventCounter1EndFrameID
- quickSpinIntegerNode EventTimer0Start
- quickSpinIntegerNode EventTimer0StartTimestamp
- quickSpinIntegerNode EventTimer0StartFrameID
- quickSpinIntegerNode EventTimer1Start
- quickSpinIntegerNode EventTimer1StartTimestamp
- quickSpinIntegerNode EventTimer1StartFrameID
- quickSpinIntegerNode EventTimer0End
- quickSpinIntegerNode EventTimer0EndTimestamp
- quickSpinIntegerNode EventTimer0EndFrameID
- quickSpinIntegerNode EventTimer1End
- quickSpinIntegerNode EventTimer1EndTimestamp
- quickSpinIntegerNode EventTimer1EndFrameID
- quickSpinIntegerNode EventEncoder0Stopped
- quickSpinIntegerNode EventEncoder0StoppedTimestamp
- quickSpinIntegerNode EventEncoder0StoppedFrameID
- quickSpinIntegerNode EventEncoder1Stopped
- quickSpinIntegerNode EventEncoder1StoppedTimestamp
- quickSpinIntegerNode EventEncoder1StoppedFrameID
- quickSpinIntegerNode EventEncoder0Restarted
- quickSpinIntegerNode EventEncoder0RestartedTimestamp
- quickSpinIntegerNode EventEncoder0RestartedFrameID
- quickSpinIntegerNode EventEncoder1Restarted
- quickSpinIntegerNode EventEncoder1RestartedTimestamp
- quickSpinIntegerNode EventEncoder1RestartedFrameID
- quickSpinIntegerNode EventLine0RisingEdge
- quickSpinIntegerNode EventLine0RisingEdgeTimestamp
- quickSpinIntegerNode EventLine0RisingEdgeFrameID
- quickSpinIntegerNode EventLine1RisingEdge
- quickSpinIntegerNode EventLine1RisingEdgeTimestamp
- quickSpinIntegerNode EventLine1RisingEdgeFrameID
- quickSpinIntegerNode EventLine0FallingEdge
- quickSpinIntegerNode EventLine0FallingEdgeTimestamp

- quickSpinIntegerNode EventLine0FallingEdgeFrameID
- quickSpinIntegerNode EventLine1FallingEdge
- quickSpinIntegerNode EventLine1FallingEdgeTimestamp
- quickSpinIntegerNode EventLine1FallingEdgeFrameID
- quickSpinIntegerNode EventLine0AnyEdge
- quickSpinIntegerNode EventLine0AnyEdgeTimestamp
- quickSpinIntegerNode EventLine0AnyEdgeFrameID
- quickSpinIntegerNode EventLine1AnyEdge
- quickSpinIntegerNode EventLine1AnyEdgeTimestamp
- · quickSpinIntegerNode EventLine1AnyEdgeFrameID
- quickSpinIntegerNode EventLinkTrigger0
- quickSpinIntegerNode EventLinkTrigger0Timestamp
- quickSpinIntegerNode EventLinkTrigger0FrameID
- quickSpinIntegerNode EventLinkTrigger1
- quickSpinIntegerNode EventLinkTrigger1Timestamp
- guickSpinIntegerNode EventLinkTrigger1FrameID
- · quickSpinIntegerNode EventActionLate
- quickSpinIntegerNode EventActionLateTimestamp
- quickSpinIntegerNode EventActionLateFrameID
- quickSpinIntegerNode EventLinkSpeedChange
- quickSpinIntegerNode EventLinkSpeedChangeTimestamp
- quickSpinIntegerNode EventLinkSpeedChangeFrameID
- quickSpinRegisterNode FileAccessBuffer
- · quickSpinIntegerNode SourceCount
- quickSpinEnumerationNode SourceSelector
- quickSpinEnumerationNode TransferSelector
- quickSpinIntegerNode TransferBurstCount
- quickSpinCommandNode TransferAbort
- quickSpinCommandNode TransferPause
- quickSpinCommandNode TransferResume
- quickSpinEnumerationNode TransferTriggerSelector
- quickSpinEnumerationNode TransferTriggerMode
- quickSpinEnumerationNode TransferTriggerSource
- quickSpinEnumerationNode TransferTriggerActivation
- · quickSpinEnumerationNode TransferStatusSelector
- quickSpinBooleanNode TransferStatus
- quickSpinEnumerationNode TransferComponentSelector
- · quickSpinIntegerNode TransferStreamChannel
- · quickSpinEnumerationNode Scan3dDistanceUnit
- quickSpinEnumerationNode Scan3dCoordinateSystem
- quickSpinEnumerationNode Scan3dOutputMode
- quickSpinEnumerationNode Scan3dCoordinateSystemReference
- quickSpinEnumerationNode Scan3dCoordinateSelector
- quickSpinFloatNode Scan3dCoordinateScale
- quickSpinFloatNode Scan3dCoordinateOffset
- quickSpinBooleanNode Scan3dInvalidDataFlag
- guickSpinFloatNode Scan3dInvalidDataValue
- · quickSpinFloatNode Scan3dAxisMin
- quickSpinFloatNode Scan3dAxisMax
- quickSpinEnumerationNode Scan3dCoordinateTransformSelector
- quickSpinFloatNode Scan3dTransformValue
- · quickSpinEnumerationNode Scan3dCoordinateReferenceSelector
- quickSpinFloatNode Scan3dCoordinateReferenceValue
- quickSpinIntegerNode ChunkPartSelector
- quickSpinEnumerationNode ChunkImageComponent

- quickSpinIntegerNode ChunkPixelDynamicRangeMin
- quickSpinIntegerNode ChunkPixelDynamicRangeMax
- quickSpinIntegerNode ChunkTimestampLatchValue
- quickSpinIntegerNode ChunkLineStatusAll
- quickSpinEnumerationNode ChunkCounterSelector
- · quickSpinIntegerNode ChunkCounterValue
- quickSpinEnumerationNode ChunkTimerSelector
- quickSpinFloatNode ChunkTimerValue
- · quickSpinEnumerationNode ChunkEncoderSelector
- quickSpinIntegerNode ChunkScanLineSelector
- · quickSpinIntegerNode ChunkEncoderValue
- quickSpinEnumerationNode ChunkEncoderStatus
- quickSpinEnumerationNode ChunkExposureTimeSelector
- quickSpinIntegerNode ChunkLinePitch
- quickSpinEnumerationNode ChunkSourceID
- quickSpinEnumerationNode ChunkRegionID
- quickSpinIntegerNode ChunkTransferBlockID
- quickSpinEnumerationNode ChunkTransferStreamID
- quickSpinIntegerNode ChunkTransferQueueCurrentBlockCount
- · quickSpinIntegerNode ChunkStreamChannelID
- quickSpinEnumerationNode ChunkScan3dDistanceUnit
- quickSpinEnumerationNode ChunkScan3dOutputMode
- quickSpinEnumerationNode ChunkScan3dCoordinateSystem
- quickSpinEnumerationNode ChunkScan3dCoordinateSystemReference
- quickSpinEnumerationNode ChunkScan3dCoordinateSelector
- quickSpinFloatNode ChunkScan3dCoordinateScale
- quickSpinFloatNode ChunkScan3dCoordinateOffset
- quickSpinBooleanNode ChunkScan3dInvalidDataFlag
- quickSpinFloatNode ChunkScan3dInvalidDataValue
- · quickSpinFloatNode ChunkScan3dAxisMin
- quickSpinFloatNode ChunkScan3dAxisMax
- quickSpinEnumerationNode ChunkScan3dCoordinateTransformSelector
- quickSpinFloatNode ChunkScan3dTransformValue
- · quickSpinEnumerationNode ChunkScan3dCoordinateReferenceSelector
- quickSpinFloatNode ChunkScan3dCoordinateReferenceValue
- quickSpinIntegerNode TestPendingAck
- quickSpinEnumerationNode DeviceTapGeometry
- · quickSpinEnumerationNode GevPhysicalLinkConfiguration
- quickSpinEnumerationNode GevCurrentPhysicalLinkConfiguration
- · quickSpinIntegerNode GevActiveLinkCount
- quickSpinBooleanNode GevPAUSEFrameReception
- quickSpinBooleanNode GevPAUSEFrameTransmission
- quickSpinEnumerationNode GevIPConfigurationStatus
- quickSpinIntegerNode GevDiscoveryAckDelay
- quickSpinEnumerationNode GevGVCPExtendedStatusCodesSelector
- quickSpinBooleanNode GevGVCPExtendedStatusCodes
- quickSpinIntegerNode GevPrimaryApplicationSwitchoverKey
- quickSpinEnumerationNode GevGVSPExtendedIDMode
- · quickSpinIntegerNode GevPrimaryApplicationSocket
- · quickSpinIntegerNode GevPrimaryApplicationIPAddress
- quickSpinBooleanNode GevSCCFGPacketResendDestination
- · quickSpinBooleanNode GevSCCFGAllInTransmission
- quickSpinIntegerNode GevSCZoneCount
- quickSpinIntegerNode GevSCZoneDirectionAll
- quickSpinBooleanNode GevSCZoneConfigurationLock

- quickSpinIntegerNode aPAUSEMACCtrlFramesTransmitted
- quickSpinIntegerNode aPAUSEMACCtrlFramesReceived
- quickSpinEnumerationNode ClConfiguration
- quickSpinEnumerationNode ClTimeSlotsCount
- quickSpinEnumerationNode CxpLinkConfigurationStatus
- · quickSpinEnumerationNode CxpLinkConfigurationPreferred
- quickSpinEnumerationNode CxpLinkConfiguration
- quickSpinIntegerNode CxpConnectionSelector
- quickSpinEnumerationNode CxpConnectionTestMode
- quickSpinIntegerNode CxpConnectionTestErrorCount
- quickSpinIntegerNode CxpConnectionTestPacketCount
- quickSpinCommandNode CxpPoCxpAuto
- quickSpinCommandNode CxpPoCxpTurnOff
- quickSpinCommandNode CxpPoCxpTripReset
- quickSpinEnumerationNode CxpPoCxpStatus
- quickSpinIntegerNode ChunkInferenceFrameId
- quickSpinIntegerNode ChunkInferenceResult
- quickSpinFloatNode ChunkInferenceConfidence
- quickSpinRegisterNode ChunkInferenceBoundingBoxResult

#### 12.2.1 Field Documentation

## 12.2.1.1 AasRoiEnable

quickSpinBooleanNode AasRoiEnable

#### 12.2.1.2 AasRoiHeight

quickSpinIntegerNode AasRoiHeight

#### 12.2.1.3 AasRoiOffsetX

quickSpinIntegerNode AasRoiOffsetX

#### 12.2.1.4 AasRoiOffsetY

quickSpinIntegerNode AasRoiOffsetY

#### 12.2.1.5 AasRoiWidth

quickSpinIntegerNode AasRoiWidth

#### 12.2.1.6 AcquisitionAbort

 ${\tt quickSpinCommandNode}\ {\tt AcquisitionAbort}$ 

#### 12.2.1.7 AcquisitionArm

 ${\tt quickSpinCommandNode}\ {\tt AcquisitionArm}$ 

#### 12.2.1.8 AcquisitionBurstFrameCount

quickSpinIntegerNode AcquisitionBurstFrameCount

## 12.2.1.9 AcquisitionFrameCount

quickSpinIntegerNode AcquisitionFrameCount

#### 12.2.1.10 AcquisitionFrameRate

quickSpinFloatNode AcquisitionFrameRate

# 12.2.1.11 AcquisitionFrameRateEnable

 $\verb"quickSpinBooleanNode" AcquisitionFrameRateEnable"$ 

## 12.2.1.12 AcquisitionLineRate

 ${\tt quickSpinFloatNode}\ {\tt AcquisitionLineRate}$ 

#### 12.2.1.13 AcquisitionMode

quickSpinEnumerationNode AcquisitionMode

# 12.2.1.14 AcquisitionResultingFrameRate

 ${\tt quickSpinFloatNode}\ {\tt AcquisitionResultingFrameRate}$ 

## 12.2.1.15 AcquisitionStart

quickSpinCommandNode AcquisitionStart

#### 12.2.1.16 AcquisitionStatus

quickSpinBooleanNode AcquisitionStatus

## 12.2.1.17 AcquisitionStatusSelector

quickSpinEnumerationNode AcquisitionStatusSelector

#### 12.2.1.18 AcquisitionStop

quickSpinCommandNode AcquisitionStop

# 12.2.1.19 ActionDeviceKey

quickSpinIntegerNode ActionDeviceKey

## 12.2.1.20 ActionGroupKey

quickSpinIntegerNode ActionGroupKey

#### 12.2.1.21 ActionGroupMask

 ${\tt quickSpinIntegerNode}\ {\tt ActionGroupMask}$ 

#### 12.2.1.22 ActionQueueSize

quickSpinIntegerNode ActionQueueSize

#### 12.2.1.23 ActionSelector

quickSpinIntegerNode ActionSelector

#### 12.2.1.24 ActionUnconditionalMode

quickSpinEnumerationNode ActionUnconditionalMode

## 12.2.1.25 AdaptiveCompressionEnable

quickSpinBooleanNode AdaptiveCompressionEnable

#### 12.2.1.26 AdcBitDepth

quickSpinEnumerationNode AdcBitDepth

#### 12.2.1.27 aPAUSEMACCtrlFramesReceived

 ${\tt quickSpinIntegerNode}\ a {\tt PAUSEMACCtrlFramesReceived}$ 

#### 12.2.1.28 aPAUSEMACCtrlFramesTransmitted

 ${\tt quickSpinIntegerNode}\ {\tt aPAUSEMACCtrlFramesTransmitted}$ 

#### 12.2.1.29 AutoAlgorithmSelector

 ${\tt quickSpinEnumerationNode}\ {\tt AutoAlgorithmSelector}$ 

#### 12.2.1.30 AutoExposureControlLoopDamping

quickSpinFloatNode AutoExposureControlLoopDamping

## 12.2.1.31 AutoExposureControlPriority

 ${\tt quickSpinEnumerationNode}\ {\tt AutoExposureControlPriority}$ 

#### 12.2.1.32 AutoExposureEVCompensation

quickSpinFloatNode AutoExposureEVCompensation

#### 12.2.1.33 AutoExposureExposureTimeLowerLimit

 ${\tt quickSpinFloatNode}\ {\tt AutoExposureExposureTimeLowerLimit}$ 

#### 12.2.1.34 AutoExposureExposureTimeUpperLimit

quickSpinFloatNode AutoExposureExposureTimeUpperLimit

# 12.2.1.35 AutoExposureGainLowerLimit

 $\verb"quickSpinFloatNode" A \verb"utoExposureGainLowerLimit"$ 

#### 12.2.1.36 AutoExposureGainUpperLimit

quickSpinFloatNode AutoExposureGainUpperLimit

#### 12.2.1.37 AutoExposureGreyValueLowerLimit

quickSpinFloatNode AutoExposureGreyValueLowerLimit

#### 12.2.1.38 AutoExposureGreyValueUpperLimit

 ${\tt quickSpinFloatNode}\ {\tt AutoExposureGreyValueUpperLimit}$ 

#### 12.2.1.39 AutoExposureLightingMode

 ${\tt quickSpinEnumerationNode}\ {\tt AutoExposureLightingMode}$ 

#### 12.2.1.40 AutoExposureMeteringMode

quickSpinEnumerationNode AutoExposureMeteringMode

## 12.2.1.41 AutoExposureTargetGreyValue

 ${\tt quickSpinFloatNode}\ {\tt AutoExposureTargetGreyValue}$ 

#### 12.2.1.42 AutoExposureTargetGreyValueAuto

quickSpinEnumerationNode AutoExposureTargetGreyValueAuto

#### 12.2.1.43 BalanceRatio

quickSpinFloatNode BalanceRatio

#### 12.2.1.44 BalanceRatioSelector

 $\verb"quickSpinEnumerationNode" Balance Ratio Selector"$ 

#### 12.2.1.45 BalanceWhiteAuto

quickSpinEnumerationNode BalanceWhiteAuto

#### 12.2.1.46 BalanceWhiteAutoDamping

quickSpinFloatNode BalanceWhiteAutoDamping

#### 12.2.1.47 BalanceWhiteAutoLowerLimit

quickSpinFloatNode BalanceWhiteAutoLowerLimit

#### 12.2.1.48 BalanceWhiteAutoProfile

quickSpinEnumerationNode BalanceWhiteAutoProfile

## 12.2.1.49 BalanceWhiteAutoUpperLimit

 ${\tt quickSpinFloatNode}\ {\tt BalanceWhiteAutoUpperLimit}$ 

#### 12.2.1.50 BinningHorizontal

quickSpinIntegerNode BinningHorizontal

# 12.2.1.51 BinningHorizontalMode

 ${\tt quickSpinEnumerationNode\ BinningHorizontalMode}$ 

#### 12.2.1.52 BinningSelector

 ${\tt quickSpinEnumerationNode\ BinningSelector}$ 

#### 12.2.1.53 BinningVertical

quickSpinIntegerNode BinningVertical

## 12.2.1.54 BinningVerticalMode

 ${\tt quickSpinEnumerationNode\ BinningVerticalMode}$ 

#### 12.2.1.55 BlackLevel

quickSpinFloatNode BlackLevel

#### 12.2.1.56 BlackLevelAuto

quickSpinEnumerationNode BlackLevelAuto

#### 12.2.1.57 BlackLevelAutoBalance

quickSpinEnumerationNode BlackLevelAutoBalance

#### 12.2.1.58 BlackLevelClampingEnable

quickSpinBooleanNode BlackLevelClampingEnable

#### 12.2.1.59 BlackLevelRaw

quickSpinIntegerNode BlackLevelRaw

#### 12.2.1.60 BlackLevelSelector

quickSpinEnumerationNode BlackLevelSelector

#### 12.2.1.61 ChunkBlackLevel

quickSpinFloatNode ChunkBlackLevel

#### 12.2.1.62 ChunkBlackLevelSelector

 ${\tt quickSpinEnumerationNode}\ {\tt ChunkBlackLevelSelector}$ 

## 12.2.1.63 ChunkCompressionMode

quickSpinIntegerNode ChunkCompressionMode

#### 12.2.1.64 ChunkCompressionRatio

quickSpinFloatNode ChunkCompressionRatio

#### 12.2.1.65 ChunkCounterSelector

quickSpinEnumerationNode ChunkCounterSelector

#### 12.2.1.66 ChunkCounterValue

quickSpinIntegerNode ChunkCounterValue

## 12.2.1.67 ChunkCRC

quickSpinIntegerNode ChunkCRC

#### 12.2.1.68 ChunkEnable

quickSpinBooleanNode ChunkEnable

#### 12.2.1.69 ChunkEncoderSelector

 ${\tt quickSpinEnumerationNode\ ChunkEncoderSelector}$ 

#### 12.2.1.70 ChunkEncoderStatus

quickSpinEnumerationNode ChunkEncoderStatus

#### 12.2.1.71 ChunkEncoderValue

quickSpinIntegerNode ChunkEncoderValue

#### 12.2.1.72 ChunkExposureEndLineStatusAll

quickSpinIntegerNode ChunkExposureEndLineStatusAll

## 12.2.1.73 ChunkExposureTime

quickSpinFloatNode ChunkExposureTime

#### 12.2.1.74 ChunkExposureTimeSelector

quickSpinEnumerationNode ChunkExposureTimeSelector

#### 12.2.1.75 ChunkFrameID

 ${\tt quickSpinIntegerNode\ ChunkFrameID}$ 

#### 12.2.1.76 ChunkGain

quickSpinFloatNode ChunkGain

## 12.2.1.77 ChunkGainSelector

 ${\tt quickSpinEnumerationNode\ ChunkGainSelector}$ 

#### 12.2.1.78 ChunkHeight

quickSpinIntegerNode ChunkHeight

## 12.2.1.79 ChunkImage

quickSpinIntegerNode ChunkImage

#### 12.2.1.80 ChunklmageComponent

quickSpinEnumerationNode ChunkImageComponent

## 12.2.1.81 ChunkInferenceBoundingBoxResult

 ${\tt quickSpinRegisterNode}\ {\tt ChunkInferenceBoundingBoxResult}$ 

## 12.2.1.82 ChunkInferenceConfidence

quickSpinFloatNode ChunkInferenceConfidence

#### 12.2.1.83 ChunkInferenceFrameId

quickSpinIntegerNode ChunkInferenceFrameId

#### 12.2.1.84 ChunkInferenceResult

quickSpinIntegerNode ChunkInferenceResult

# 12.2.1.85 ChunkLinePitch

quickSpinIntegerNode ChunkLinePitch

### 12.2.1.86 ChunkLineStatusAll

quickSpinIntegerNode ChunkLineStatusAll

# 12.2.1.87 ChunkModeActive

quickSpinBooleanNode ChunkModeActive

#### 12.2.1.88 ChunkOffsetX

quickSpinIntegerNode ChunkOffsetX

### 12.2.1.89 ChunkOffsetY

quickSpinIntegerNode ChunkOffsetY

### 12.2.1.90 ChunkPartSelector

quickSpinIntegerNode ChunkPartSelector

# 12.2.1.91 ChunkPixelDynamicRangeMax

quickSpinIntegerNode ChunkPixelDynamicRangeMax

# 12.2.1.92 ChunkPixeIDynamicRangeMin

 ${\tt quickSpinIntegerNode}\ {\tt ChunkPixelDynamicRangeMin}$ 

# 12.2.1.93 ChunkPixelFormat

 ${\tt quickSpinEnumerationNode\ ChunkPixelFormat}$ 

# 12.2.1.94 ChunkRegionID

 ${\tt quickSpinEnumerationNode\ ChunkRegionID}$ 

# 12.2.1.95 ChunkScan3dAxisMax

quickSpinFloatNode ChunkScan3dAxisMax

### 12.2.1.96 ChunkScan3dAxisMin

quickSpinFloatNode ChunkScan3dAxisMin

### 12.2.1.97 ChunkScan3dCoordinateOffset

quickSpinFloatNode ChunkScan3dCoordinateOffset

### 12.2.1.98 ChunkScan3dCoordinateReferenceSelector

 $\verb"quickSpinEnumerationNode" ChunkScan3dCoordinateReferenceSelector"$ 

## 12.2.1.99 ChunkScan3dCoordinateReferenceValue

quickSpinFloatNode ChunkScan3dCoordinateReferenceValue

# 12.2.1.100 ChunkScan3dCoordinateScale

 $\verb"quickSpinFloatNode" ChunkScan3dCoordinateScale"$ 

### 12.2.1.101 ChunkScan3dCoordinateSelector

 ${\tt quickSpinEnumerationNode}\ {\tt ChunkScan3dCoordinateSelector}$ 

# 12.2.1.102 ChunkScan3dCoordinateSystem

 ${\tt quickSpinEnumerationNode}~{\tt ChunkScan3dCoordinateSystem}$ 

# 12.2.1.103 ChunkScan3dCoordinateSystemReference

 $\verb"quickSpinEnumerationNode" ChunkScan3dCoordinateSystemReference"$ 

### 12.2.1.104 ChunkScan3dCoordinateTransformSelector

quickSpinEnumerationNode ChunkScan3dCoordinateTransformSelector

### 12.2.1.105 ChunkScan3dDistanceUnit

quickSpinEnumerationNode ChunkScan3dDistanceUnit

### 12.2.1.106 ChunkScan3dInvalidDataFlag

quickSpinBooleanNode ChunkScan3dInvalidDataFlag

## 12.2.1.107 ChunkScan3dInvalidDataValue

quickSpinFloatNode ChunkScan3dInvalidDataValue

# 12.2.1.108 ChunkScan3dOutputMode

 ${\tt quickSpinEnumerationNode}\ {\tt ChunkScan3dOutputMode}$ 

# 12.2.1.109 ChunkScan3dTransformValue

 ${\tt quickSpinFloatNode\ ChunkScan3dTransformValue}$ 

### 12.2.1.110 ChunkScanLineSelector

quickSpinIntegerNode ChunkScanLineSelector

# 12.2.1.111 ChunkSelector

quickSpinEnumerationNode ChunkSelector

# 12.2.1.112 ChunkSequencerSetActive

quickSpinIntegerNode ChunkSequencerSetActive

### 12.2.1.113 ChunkSerialData

quickSpinStringNode ChunkSerialData

### 12.2.1.114 ChunkSerialDataLength

quickSpinIntegerNode ChunkSerialDataLength

## 12.2.1.115 ChunkSerialReceiveOverflow

quickSpinBooleanNode ChunkSerialReceiveOverflow

# 12.2.1.116 ChunkSourceID

quickSpinEnumerationNode ChunkSourceID

# 12.2.1.117 ChunkStreamChannelID

 ${\tt quickSpinIntegerNode\ ChunkStreamChannelID}$ 

### 12.2.1.118 ChunkTimerSelector

quickSpinEnumerationNode ChunkTimerSelector

# 12.2.1.119 ChunkTimerValue

quickSpinFloatNode ChunkTimerValue

# 12.2.1.120 ChunkTimestamp

quickSpinIntegerNode ChunkTimestamp

# 12.2.1.121 ChunkTimestampLatchValue

 ${\tt quickSpinIntegerNode}\ {\tt ChunkTimestampLatchValue}$ 

### 12.2.1.122 ChunkTransferBlockID

quickSpinIntegerNode ChunkTransferBlockID

# 12.2.1.123 ChunkTransferQueueCurrentBlockCount

 ${\tt quickSpinIntegerNode\ ChunkTransferQueueCurrentBlockCount}$ 

# 12.2.1.124 ChunkTransferStreamID

 $\verb"quickSpinEnumerationNode" ChunkTransferStreamID"$ 

# 12.2.1.125 ChunkWidth

quickSpinIntegerNode ChunkWidth

# 12.2.1.126 ClConfiguration

 ${\tt quickSpinEnumerationNode\ ClConfiguration}$ 

# 12.2.1.127 CITimeSlotsCount

quickSpinEnumerationNode ClTimeSlotsCount

#### 12.2.1.128 ColorTransformationEnable

quickSpinBooleanNode ColorTransformationEnable

### 12.2.1.129 ColorTransformationSelector

quickSpinEnumerationNode ColorTransformationSelector

### 12.2.1.130 ColorTransformationValue

quickSpinFloatNode ColorTransformationValue

## 12.2.1.131 ColorTransformationValueSelector

 $\verb"quickSpinEnumerationNode" ColorTransformationValueSelector"$ 

# 12.2.1.132 CompressionRatio

quickSpinFloatNode CompressionRatio

### 12.2.1.133 CompressionSaturationPriority

quickSpinEnumerationNode CompressionSaturationPriority

# 12.2.1.134 CounterDelay

quickSpinIntegerNode CounterDelay

# 12.2.1.135 CounterDuration

 ${\tt quickSpinIntegerNode}\ {\tt CounterDuration}$ 

#### 12.2.1.136 CounterEventActivation

quickSpinEnumerationNode CounterEventActivation

# 12.2.1.137 CounterEventSource

quickSpinEnumerationNode CounterEventSource

### 12.2.1.138 CounterReset

quickSpinCommandNode CounterReset

## 12.2.1.139 CounterResetActivation

 ${\tt quickSpinEnumerationNode}\ {\tt CounterResetActivation}$ 

# 12.2.1.140 CounterResetSource

quickSpinEnumerationNode CounterResetSource

# 12.2.1.141 CounterSelector

quickSpinEnumerationNode CounterSelector

### 12.2.1.142 CounterStatus

quickSpinEnumerationNode CounterStatus

# 12.2.1.143 CounterTriggerActivation

quickSpinEnumerationNode CounterTriggerActivation

### 12.2.1.144 CounterTriggerSource

quickSpinEnumerationNode CounterTriggerSource

### 12.2.1.145 CounterValue

quickSpinIntegerNode CounterValue

### 12.2.1.146 CounterValueAtReset

quickSpinIntegerNode CounterValueAtReset

# 12.2.1.147 CxpConnectionSelector

quickSpinIntegerNode CxpConnectionSelector

# 12.2.1.148 CxpConnectionTestErrorCount

 ${\tt quickSpinIntegerNode}\ {\tt CxpConnectionTestErrorCount}$ 

### 12.2.1.149 CxpConnectionTestMode

 ${\tt quickSpinEnumerationNode}~{\tt CxpConnectionTestMode}$ 

# 12.2.1.150 CxpConnectionTestPacketCount

 ${\tt quickSpinIntegerNode}\ {\tt CxpConnectionTestPacketCount}$ 

# 12.2.1.151 CxpLinkConfiguration

 ${\tt quickSpinEnumerationNode}~{\tt CxpLinkConfiguration}$ 

### 12.2.1.152 CxpLinkConfigurationPreferred

quickSpinEnumerationNode CxpLinkConfigurationPreferred

# 12.2.1.153 CxpLinkConfigurationStatus

 ${\tt quickSpinEnumerationNode}~{\tt CxpLinkConfigurationStatus}$ 

### 12.2.1.154 CxpPoCxpAuto

quickSpinCommandNode CxpPoCxpAuto

# 12.2.1.155 CxpPoCxpStatus

quickSpinEnumerationNode CxpPoCxpStatus

# 12.2.1.156 CxpPoCxpTripReset

 ${\tt quickSpinCommandNode}~{\tt CxpPoCxpTripReset}$ 

# 12.2.1.157 CxpPoCxpTurnOff

 ${\tt quickSpinCommandNode}~{\tt CxpPoCxpTurnOff}$ 

### 12.2.1.158 DecimationHorizontal

quickSpinIntegerNode DecimationHorizontal

### 12.2.1.159 DecimationHorizontalMode

quickSpinEnumerationNode DecimationHorizontalMode

#### 12.2.1.160 DecimationSelector

quickSpinEnumerationNode DecimationSelector

# 12.2.1.161 DecimationVertical

quickSpinIntegerNode DecimationVertical

# 12.2.1.162 DecimationVerticalMode

 ${\tt quickSpinEnumerationNode}\ {\tt DecimationVerticalMode}$ 

## 12.2.1.163 DefectCorrectionMode

 ${\tt quickSpinEnumerationNode}\ {\tt DefectCorrectionMode}$ 

# 12.2.1.164 DefectCorrectStaticEnable

 ${\tt quickSpinBooleanNode}\ {\tt DefectCorrectStaticEnable}$ 

# 12.2.1.165 DefectTableApply

quickSpinCommandNode DefectTableApply

### 12.2.1.166 DefectTableCoordinateX

quickSpinIntegerNode DefectTableCoordinateX

# 12.2.1.167 DefectTableCoordinateY

quickSpinIntegerNode DefectTableCoordinateY

### 12.2.1.168 DefectTableFactoryRestore

quickSpinCommandNode DefectTableFactoryRestore

### 12.2.1.169 DefectTableIndex

quickSpinIntegerNode DefectTableIndex

# 12.2.1.170 DefectTablePixelCount

quickSpinIntegerNode DefectTablePixelCount

## 12.2.1.171 DefectTableSave

 ${\tt quickSpinCommandNode}\ {\tt DefectTableSave}$ 

# 12.2.1.172 Deinterlacing

 ${\tt quickSpinEnumerationNode\ Deinterlacing}$ 

# 12.2.1.173 DeviceCharacterSet

quickSpinEnumerationNode DeviceCharacterSet

# 12.2.1.174 DeviceClockFrequency

quickSpinFloatNode DeviceClockFrequency

# 12.2.1.175 DeviceClockSelector

quickSpinEnumerationNode DeviceClockSelector

### 12.2.1.176 DeviceConnectionSelector

quickSpinIntegerNode DeviceConnectionSelector

# 12.2.1.177 DeviceConnectionSpeed

 ${\tt quickSpinIntegerNode}\ {\tt DeviceConnectionSpeed}$ 

### 12.2.1.178 DeviceConnectionStatus

quickSpinEnumerationNode DeviceConnectionStatus

## 12.2.1.179 DeviceEventChannelCount

 ${\tt quickSpinIntegerNode}\ {\tt DeviceEventChannelCount}$ 

# 12.2.1.180 DeviceFamilyName

 ${\tt quickSpinStringNode\ DeviceFamilyName}$ 

# 12.2.1.181 DeviceFeaturePersistenceEnd

 ${\tt quickSpinCommandNode}\ {\tt DeviceFeaturePersistenceEnd}$ 

### 12.2.1.182 DeviceFeaturePersistenceStart

quickSpinCommandNode DeviceFeaturePersistenceStart

# 12.2.1.183 DeviceFirmwareVersion

quickSpinStringNode DeviceFirmwareVersion

### 12.2.1.184 DeviceGenCPVersionMajor

quickSpinIntegerNode DeviceGenCPVersionMajor

# 12.2.1.185 DeviceGenCPVersionMinor

quickSpinIntegerNode DeviceGenCPVersionMinor

# 12.2.1.186 DeviceID

quickSpinStringNode DeviceID

## 12.2.1.187 DeviceIndicatorMode

 $\verb"quickSpinEnumerationNode" DeviceIndicatorMode"$ 

# 12.2.1.188 DeviceLinkBandwidthReserve

 $\verb"quickSpinFloatNode" DeviceLinkBandwidthReserve"$ 

# 12.2.1.189 DeviceLinkCommandTimeout

 ${\tt quickSpinFloatNode}\ {\tt DeviceLinkCommandTimeout}$ 

### 12.2.1.190 DeviceLinkConnectionCount

quickSpinIntegerNode DeviceLinkConnectionCount

# 12.2.1.191 DeviceLinkCurrentThroughput

 ${\tt quickSpinIntegerNode}\ {\tt DeviceLinkCurrentThroughput}$ 

### 12.2.1.192 DeviceLinkHeartbeatMode

quickSpinEnumerationNode DeviceLinkHeartbeatMode

### 12.2.1.193 DeviceLinkHeartbeatTimeout

quickSpinFloatNode DeviceLinkHeartbeatTimeout

### 12.2.1.194 DeviceLinkSelector

quickSpinIntegerNode DeviceLinkSelector

# 12.2.1.195 DeviceLinkSpeed

quickSpinIntegerNode DeviceLinkSpeed

# 12.2.1.196 DeviceLinkThroughputLimit

 ${\tt quickSpinIntegerNode}\ {\tt DeviceLinkThroughputLimit}$ 

### 12.2.1.197 DeviceLinkThroughputLimitMode

 ${\tt quickSpinEnumerationNode}\ {\tt DeviceLinkThroughputLimitMode}$ 

# 12.2.1.198 DeviceManifestEntrySelector

 ${\tt quickSpinIntegerNode}\ {\tt DeviceManifestEntrySelector}$ 

# 12.2.1.199 DeviceManifestPrimaryURL

 ${\tt quickSpinStringNode\ DeviceManifestPrimaryURL}$ 

### 12.2.1.200 DeviceManifestSchemaMajorVersion

quickSpinIntegerNode DeviceManifestSchemaMajorVersion

### 12.2.1.201 DeviceManifestSchemaMinorVersion

quickSpinIntegerNode DeviceManifestSchemaMinorVersion

### 12.2.1.202 DeviceManifestSecondaryURL

quickSpinStringNode DeviceManifestSecondaryURL

# 12.2.1.203 DeviceManifestXMLMajorVersion

 ${\tt quickSpinIntegerNode}\ {\tt DeviceManifestXMLMajorVersion}$ 

# 12.2.1.204 DeviceManifestXMLMinorVersion

 ${\tt quickSpinIntegerNode}\ {\tt DeviceManifestXMLMinorVersion}$ 

# 12.2.1.205 DeviceManifestXMLSubMinorVersion

 ${\tt quickSpinIntegerNode}\ {\tt DeviceManifestXMLSubMinorVersion}$ 

### 12.2.1.206 DeviceManufacturerInfo

quickSpinStringNode DeviceManufacturerInfo

# 12.2.1.207 DeviceMaxThroughput

quickSpinIntegerNode DeviceMaxThroughput

#### 12.2.1.208 DeviceModelName

quickSpinStringNode DeviceModelName

# 12.2.1.209 DevicePowerSupplySelector

 ${\tt quickSpinEnumerationNode\ DevicePowerSupplySelector}$ 

### 12.2.1.210 DeviceRegistersCheck

quickSpinCommandNode DeviceRegistersCheck

# 12.2.1.211 DeviceRegistersEndianness

 $\verb"quickSpinEnumerationNode" DeviceRegistersEndianness"$ 

# 12.2.1.212 DeviceRegistersStreamingEnd

 ${\tt quickSpinCommandNode}\ {\tt DeviceRegistersStreamingEnd}$ 

# 12.2.1.213 DeviceRegistersStreamingStart

 ${\tt quickSpinCommandNode}\ {\tt DeviceRegistersStreamingStart}$ 

# 12.2.1.214 DeviceRegistersValid

 ${\tt quickSpinBooleanNode\ DeviceRegistersValid}$ 

# 12.2.1.215 DeviceReset

quickSpinCommandNode DeviceReset

### 12.2.1.216 DeviceScanType

quickSpinEnumerationNode DeviceScanType

# 12.2.1.217 DeviceSerialNumber

quickSpinStringNode DeviceSerialNumber

### 12.2.1.218 DeviceSerialPortBaudRate

quickSpinEnumerationNode DeviceSerialPortBaudRate

## 12.2.1.219 DeviceSerialPortSelector

 ${\tt quickSpinEnumerationNode\ DeviceSerialPortSelector}$ 

# 12.2.1.220 DeviceSFNCVersionMajor

 ${\tt quickSpinIntegerNode}\ {\tt DeviceSFNCVersionMajor}$ 

### 12.2.1.221 DeviceSFNCVersionMinor

quickSpinIntegerNode DeviceSFNCVersionMinor

### 12.2.1.222 DeviceSFNCVersionSubMinor

quickSpinIntegerNode DeviceSFNCVersionSubMinor

### 12.2.1.223 DeviceStreamChannelCount

quickSpinIntegerNode DeviceStreamChannelCount

### 12.2.1.224 DeviceStreamChannelEndianness

quickSpinEnumerationNode DeviceStreamChannelEndianness

### 12.2.1.225 DeviceStreamChannelLink

quickSpinIntegerNode DeviceStreamChannelLink

### 12.2.1.226 DeviceStreamChannelPacketSize

quickSpinIntegerNode DeviceStreamChannelPacketSize

## 12.2.1.227 DeviceStreamChannelSelector

quickSpinIntegerNode DeviceStreamChannelSelector

# 12.2.1.228 DeviceStreamChannelType

 $\verb"quickSpinEnumerationNode" DeviceStreamChannelType"$ 

### 12.2.1.229 DeviceTapGeometry

quickSpinEnumerationNode DeviceTapGeometry

# 12.2.1.230 DeviceTemperature

 ${\tt quickSpinFloatNode\ DeviceTemperature}$ 

# 12.2.1.231 DeviceTemperatureSelector

 ${\tt quickSpinEnumerationNode\ DeviceTemperatureSelector}$ 

### 12.2.1.232 DeviceTLType

quickSpinEnumerationNode DeviceTLType

# 12.2.1.233 DeviceTLVersionMajor

quickSpinIntegerNode DeviceTLVersionMajor

### 12.2.1.234 DeviceTLVersionMinor

quickSpinIntegerNode DeviceTLVersionMinor

## 12.2.1.235 DeviceTLVersionSubMinor

 ${\tt quickSpinIntegerNode}\ {\tt DeviceTLVersionSubMinor}$ 

# 12.2.1.236 DeviceType

 $\verb"quickSpinEnumerationNode DeviceType"$ 

# 12.2.1.237 DeviceUptime

quickSpinIntegerNode DeviceUptime

### 12.2.1.238 DeviceUserID

quickSpinStringNode DeviceUserID

# 12.2.1.239 DeviceVendorName

quickSpinStringNode DeviceVendorName

### 12.2.1.240 DeviceVersion

quickSpinStringNode DeviceVersion

# 12.2.1.241 EncoderDivider

quickSpinIntegerNode EncoderDivider

# 12.2.1.242 EncoderMode

quickSpinEnumerationNode EncoderMode

# 12.2.1.243 EncoderOutputMode

quickSpinEnumerationNode EncoderOutputMode

# 12.2.1.244 EncoderReset

quickSpinCommandNode EncoderReset

# 12.2.1.245 EncoderResetActivation

 ${\tt quickSpinEnumerationNode\ EncoderResetActivation}$ 

### 12.2.1.246 EncoderResetSource

quickSpinEnumerationNode EncoderResetSource

# 12.2.1.247 EncoderSelector

quickSpinEnumerationNode EncoderSelector

### 12.2.1.248 EncoderSourceA

quickSpinEnumerationNode EncoderSourceA

### 12.2.1.249 EncoderSourceB

quickSpinEnumerationNode EncoderSourceB

### 12.2.1.250 EncoderStatus

quickSpinEnumerationNode EncoderStatus

# 12.2.1.251 EncoderTimeout

quickSpinFloatNode EncoderTimeout

# 12.2.1.252 EncoderValue

quickSpinIntegerNode EncoderValue

### 12.2.1.253 EncoderValueAtReset

quickSpinIntegerNode EncoderValueAtReset

### 12.2.1.254 EnumerationCount

quickSpinIntegerNode EnumerationCount

# 12.2.1.255 EventAcquisitionEnd

 ${\tt quickSpinIntegerNode}\ {\tt EventAcquisitionEnd}$ 

### 12.2.1.256 EventAcquisitionEndFrameID

quickSpinIntegerNode EventAcquisitionEndFrameID

# 12.2.1.257 EventAcquisitionEndTimestamp

 ${\tt quickSpinIntegerNode}\ {\tt EventAcquisitionEndTimestamp}$ 

### 12.2.1.258 EventAcquisitionError

quickSpinIntegerNode EventAcquisitionError

# 12.2.1.259 EventAcquisitionErrorFrameID

quickSpinIntegerNode EventAcquisitionErrorFrameID

# 12.2.1.260 EventAcquisitionErrorTimestamp

 ${\tt quickSpinIntegerNode}\ {\tt EventAcquisitionErrorTimestamp}$ 

### 12.2.1.261 EventAcquisitionStart

 ${\tt quickSpinIntegerNode}\ {\tt EventAcquisitionStart}$ 

# 12.2.1.262 EventAcquisitionStartFrameID

 ${\tt quickSpinIntegerNode}\ {\tt EventAcquisitionStartFrameID}$ 

# 12.2.1.263 EventAcquisitionStartTimestamp

 ${\tt quickSpinIntegerNode}\ {\tt EventAcquisitionStartTimestamp}$ 

### 12.2.1.264 EventAcquisitionTransferEnd

quickSpinIntegerNode EventAcquisitionTransferEnd

# 12.2.1.265 EventAcquisitionTransferEndFrameID

quickSpinIntegerNode EventAcquisitionTransferEndFrameID

### 12.2.1.266 EventAcquisitionTransferEndTimestamp

 $\verb"quickSpinIntegerNode" EventAcquisitionTransferEndTimestamp"$ 

# 12.2.1.267 EventAcquisitionTransferStart

 $\verb"quickSpinIntegerNode" EventAcquisitionTransferStart"$ 

# 12.2.1.268 EventAcquisitionTransferStartFrameID

 ${\tt quickSpinIntegerNode}\ {\tt EventAcquisitionTransferStartFrameID}$ 

# 12.2.1.269 EventAcquisitionTransferStartTimestamp

 ${\tt quickSpinIntegerNode}\ {\tt EventAcquisitionTransferStartTimestamp}$ 

# 12.2.1.270 EventAcquisitionTrigger

quickSpinIntegerNode EventAcquisitionTrigger

# 12.2.1.271 EventAcquisitionTriggerFrameID

 $\verb"quickSpinIntegerNode" EventAcquisitionTriggerFrameID"$ 

### 12.2.1.272 EventAcquisitionTriggerTimestamp

quickSpinIntegerNode EventAcquisitionTriggerTimestamp

### 12.2.1.273 EventActionLate

quickSpinIntegerNode EventActionLate

### 12.2.1.274 EventActionLateFrameID

quickSpinIntegerNode EventActionLateFrameID

# 12.2.1.275 EventActionLateTimestamp

 ${\tt quickSpinIntegerNode}\ {\tt EventActionLateTimestamp}$ 

# 12.2.1.276 EventCounter0End

quickSpinIntegerNode EventCounter0End

# 12.2.1.277 EventCounter0EndFrameID

 ${\tt quickSpinIntegerNode}\ {\tt EventCounter0EndFrameID}$ 

# 12.2.1.278 EventCounter0EndTimestamp

 ${\tt quickSpinIntegerNode}\ {\tt EventCounter0EndTimestamp}$ 

# 12.2.1.279 EventCounter0Start

quickSpinIntegerNode EventCounterOStart

### 12.2.1.280 EventCounter0StartFrameID

quickSpinIntegerNode EventCounterOStartFrameID

# 12.2.1.281 EventCounter0StartTimestamp

quickSpinIntegerNode EventCounterOStartTimestamp

### 12.2.1.282 EventCounter1End

quickSpinIntegerNode EventCounter1End

## 12.2.1.283 EventCounter1EndFrameID

 ${\tt quickSpinIntegerNode}\ {\tt EventCounter1EndFrameID}$ 

# 12.2.1.284 EventCounter1EndTimestamp

 ${\tt quickSpinIntegerNode}\ {\tt EventCounter1EndTimestamp}$ 

### 12.2.1.285 EventCounter1Start

 ${\tt quickSpinIntegerNode\ EventCounter1Start}$ 

### 12.2.1.286 EventCounter1StartFrameID

quickSpinIntegerNode EventCounter1StartFrameID

# 12.2.1.287 EventCounter1StartTimestamp

quickSpinIntegerNode EventCounter1StartTimestamp

### 12.2.1.288 EventEncoder0Restarted

quickSpinIntegerNode EventEncoder0Restarted

#### 12.2.1.289 EventEncoder0RestartedFrameID

 ${\tt quickSpinIntegerNode}\ {\tt EventEncoder0RestartedFrameID}$ 

### 12.2.1.290 EventEncoder0RestartedTimestamp

quickSpinIntegerNode EventEncoderORestartedTimestamp

# 12.2.1.291 EventEncoder0Stopped

quickSpinIntegerNode EventEncoder0Stopped

# 12.2.1.292 EventEncoder0StoppedFrameID

 $\verb"quickSpinIntegerNode" EventEncoderOStoppedFrameID"$ 

### 12.2.1.293 EventEncoder0StoppedTimestamp

 ${\tt quickSpinIntegerNode}\ {\tt EventEncoder0StoppedTimestamp}$ 

### 12.2.1.294 EventEncoder1Restarted

quickSpinIntegerNode EventEncoder1Restarted

### 12.2.1.295 EventEncoder1RestartedFrameID

quickSpinIntegerNode EventEncoder1RestartedFrameID

### 12.2.1.296 EventEncoder1RestartedTimestamp

quickSpinIntegerNode EventEncoder1RestartedTimestamp

# 12.2.1.297 EventEncoder1Stopped

quickSpinIntegerNode EventEncoder1Stopped

### 12.2.1.298 EventEncoder1StoppedFrameID

quickSpinIntegerNode EventEncoder1StoppedFrameID

# 12.2.1.299 EventEncoder1StoppedTimestamp

 ${\tt quickSpinIntegerNode}\ {\tt EventEncoder1StoppedTimestamp}$ 

# 12.2.1.300 EventError

quickSpinIntegerNode EventError

# 12.2.1.301 EventErrorCode

quickSpinIntegerNode EventErrorCode

### 12.2.1.302 EventErrorFrameID

quickSpinIntegerNode EventErrorFrameID

# 12.2.1.303 EventErrorTimestamp

quickSpinIntegerNode EventErrorTimestamp

# 12.2.1.304 EventExposureEnd

quickSpinIntegerNode EventExposureEnd

# 12.2.1.305 EventExposureEndFrameID

quickSpinIntegerNode EventExposureEndFrameID

# 12.2.1.306 EventExposureEndTimestamp

quickSpinIntegerNode EventExposureEndTimestamp

# 12.2.1.307 EventExposureStart

quickSpinIntegerNode EventExposureStart

# 12.2.1.308 EventExposureStartFrameID

quickSpinIntegerNode EventExposureStartFrameID

### 12.2.1.309 EventExposureStartTimestamp

 ${\tt quickSpinIntegerNode}\ {\tt EventExposureStartTimestamp}$ 

### 12.2.1.310 EventFrameBurstEnd

quickSpinIntegerNode EventFrameBurstEnd

### 12.2.1.311 EventFrameBurstEndFrameID

quickSpinIntegerNode EventFrameBurstEndFrameID

### 12.2.1.312 EventFrameBurstEndTimestamp

quickSpinIntegerNode EventFrameBurstEndTimestamp

### 12.2.1.313 EventFrameBurstStart

quickSpinIntegerNode EventFrameBurstStart

### 12.2.1.314 EventFrameBurstStartFrameID

quickSpinIntegerNode EventFrameBurstStartFrameID

# 12.2.1.315 EventFrameBurstStartTimestamp

 ${\tt quickSpinIntegerNode}\ {\tt EventFrameBurstStartTimestamp}$ 

# 12.2.1.316 EventFrameEnd

 ${\tt quickSpinIntegerNode}\ {\tt EventFrameEnd}$ 

# 12.2.1.317 EventFrameEndFrameID

 ${\tt quickSpinIntegerNode}\ {\tt EventFrameEndFrameID}$ 

# 12.2.1.318 EventFrameEndTimestamp

 ${\tt quickSpinIntegerNode}\ {\tt EventFrameEndTimestamp}$ 

### 12.2.1.319 EventFrameStart

quickSpinIntegerNode EventFrameStart

### 12.2.1.320 EventFrameStartFrameID

quickSpinIntegerNode EventFrameStartFrameID

# 12.2.1.321 EventFrameStartTimestamp

quickSpinIntegerNode EventFrameStartTimestamp

# 12.2.1.322 EventFrameTransferEnd

quickSpinIntegerNode EventFrameTransferEnd

## 12.2.1.323 EventFrameTransferEndFrameID

 $\verb"quickSpinIntegerNode" EventFrameTransferEndFrameID"$ 

# 12.2.1.324 EventFrameTransferEndTimestamp

 $\verb"quickSpinIntegerNode" EventFrameTransferEndTimestamp"$ 

### 12.2.1.325 EventFrameTransferStart

 ${\tt quickSpinIntegerNode}\ {\tt EventFrameTransferStart}$ 

### 12.2.1.326 EventFrameTransferStartFrameID

quickSpinIntegerNode EventFrameTransferStartFrameID

# 12.2.1.327 EventFrameTransferStartTimestamp

quickSpinIntegerNode EventFrameTransferStartTimestamp

### 12.2.1.328 EventFrameTrigger

quickSpinIntegerNode EventFrameTrigger

# 12.2.1.329 EventFrameTriggerFrameID

quickSpinIntegerNode EventFrameTriggerFrameID

# 12.2.1.330 EventFrameTriggerTimestamp

quickSpinIntegerNode EventFrameTriggerTimestamp

# 12.2.1.331 EventLine0AnyEdge

quickSpinIntegerNode EventLineOAnyEdge

# 12.2.1.332 EventLine0AnyEdgeFrameID

quickSpinIntegerNode EventLineOAnyEdgeFrameID

# 12.2.1.333 EventLine0AnyEdgeTimestamp

quickSpinIntegerNode EventLineOAnyEdgeTimestamp

# 12.2.1.334 EventLine0FallingEdge

quickSpinIntegerNode EventLineOFallingEdge

# 12.2.1.335 EventLine0FallingEdgeFrameID

quickSpinIntegerNode EventLineOFallingEdgeFrameID

### 12.2.1.336 EventLine0FallingEdgeTimestamp

quickSpinIntegerNode EventLineOFallingEdgeTimestamp

# 12.2.1.337 EventLine0RisingEdge

quickSpinIntegerNode EventLineORisingEdge

### 12.2.1.338 EventLine0RisingEdgeFrameID

quickSpinIntegerNode EventLineORisingEdgeFrameID

# 12.2.1.339 EventLine0RisingEdgeTimestamp

 ${\tt quickSpinIntegerNode}\ {\tt EventLineORisingEdgeTimestamp}$ 

# 12.2.1.340 EventLine1AnyEdge

 ${\tt quickSpinIntegerNode}\ {\tt EventLine1AnyEdge}$ 

# 12.2.1.341 EventLine1AnyEdgeFrameID

quickSpinIntegerNode EventLine1AnyEdgeFrameID

# 12.2.1.342 EventLine1AnyEdgeTimestamp

 ${\tt quickSpinIntegerNode}\ {\tt EventLine1AnyEdgeTimestamp}$ 

# 12.2.1.343 EventLine1FallingEdge

quickSpinIntegerNode EventLine1FallingEdge

### 12.2.1.344 EventLine1FallingEdgeFrameID

quickSpinIntegerNode EventLine1FallingEdgeFrameID

# 12.2.1.345 EventLine1FallingEdgeTimestamp

quickSpinIntegerNode EventLine1FallingEdgeTimestamp

### 12.2.1.346 EventLine1RisingEdge

quickSpinIntegerNode EventLine1RisingEdge

# 12.2.1.347 EventLine1RisingEdgeFrameID

 $\verb"quickSpinIntegerNode" EventLine1RisingEdgeFrameID"$ 

# 12.2.1.348 EventLine1RisingEdgeTimestamp

 ${\tt quickSpinIntegerNode}\ {\tt EventLine1RisingEdgeTimestamp}$ 

# 12.2.1.349 EventLinkSpeedChange

 ${\tt quickSpinIntegerNode}\ {\tt EventLinkSpeedChange}$ 

# 12.2.1.350 EventLinkSpeedChangeFrameID

 ${\tt quickSpinIntegerNode}\ {\tt EventLinkSpeedChangeFrameID}$ 

# 12.2.1.351 EventLinkSpeedChangeTimestamp

 ${\tt quickSpinIntegerNode}\ {\tt EventLinkSpeedChangeTimestamp}$ 

### 12.2.1.352 EventLinkTrigger0

quickSpinIntegerNode EventLinkTrigger0

# 12.2.1.353 EventLinkTrigger0FrameID

quickSpinIntegerNode EventLinkTrigger0FrameID

### 12.2.1.354 EventLinkTrigger0Timestamp

quickSpinIntegerNode EventLinkTrigger0Timestamp

# 12.2.1.355 EventLinkTrigger1

quickSpinIntegerNode EventLinkTrigger1

# 12.2.1.356 EventLinkTrigger1FrameID

quickSpinIntegerNode EventLinkTrigger1FrameID

# 12.2.1.357 EventLinkTrigger1Timestamp

quickSpinIntegerNode EventLinkTrigger1Timestamp

### 12.2.1.358 EventNotification

quickSpinEnumerationNode EventNotification

### 12.2.1.359 EventSelector

quickSpinEnumerationNode EventSelector

### 12.2.1.360 EventSequencerSetChange

quickSpinIntegerNode EventSequencerSetChange

# 12.2.1.361 EventSequencerSetChangeFrameID

 ${\tt quickSpinIntegerNode}\ {\tt EventSequencerSetChangeFrameID}$ 

# 12.2.1.362 EventSequencerSetChangeTimestamp

quickSpinIntegerNode EventSequencerSetChangeTimestamp

## 12.2.1.363 EventSerialData

quickSpinStringNode EventSerialData

# 12.2.1.364 EventSerialDataLength

 ${\tt quickSpinIntegerNode}\ {\tt EventSerialDataLength}$ 

### 12.2.1.365 EventSerialPortReceive

quickSpinIntegerNode EventSerialPortReceive

# 12.2.1.366 EventSerialPortReceiveTimestamp

quickSpinIntegerNode EventSerialPortReceiveTimestamp

### 12.2.1.367 EventSerialReceiveOverflow

quickSpinBooleanNode EventSerialReceiveOverflow

### 12.2.1.368 EventStream0TransferBlockEnd

quickSpinIntegerNode EventStreamOTransferBlockEnd

### 12.2.1.369 EventStream0TransferBlockEndFrameID

 $\verb"quickSpinIntegerNode" EventStreamOTransferBlockEndFrameID"$ 

### 12.2.1.370 EventStream0TransferBlockEndTimestamp

 ${\tt quickSpinIntegerNode}\ {\tt EventStream0TransferBlockEndTimestamp}$ 

## 12.2.1.371 EventStream0TransferBlockStart

quickSpinIntegerNode EventStreamOTransferBlockStart

### 12.2.1.372 EventStream0TransferBlockStartFrameID

quickSpinIntegerNode EventStreamOTransferBlockStartFrameID

#### 12.2.1.373 EventStream0TransferBlockStartTimestamp

 $\verb"quickSpinIntegerNode" EventStreamOTransferBlockStartTimestamp"$ 

#### 12.2.1.374 EventStream0TransferBlockTrigger

quickSpinIntegerNode EventStreamOTransferBlockTrigger

# 12.2.1.375 EventStream0TransferBlockTriggerFrameID

quickSpinIntegerNode EventStreamOTransferBlockTriggerFrameID

#### 12.2.1.376 EventStream0TransferBlockTriggerTimestamp

quickSpinIntegerNode EventStreamOTransferBlockTriggerTimestamp

#### 12.2.1.377 EventStream0TransferBurstEnd

quickSpinIntegerNode EventStreamOTransferBurstEnd

#### 12.2.1.378 EventStream0TransferBurstEndFrameID

quickSpinIntegerNode EventStreamOTransferBurstEndFrameID

# 12.2.1.379 EventStream0TransferBurstEndTimestamp

quickSpinIntegerNode EventStreamOTransferBurstEndTimestamp

#### 12.2.1.380 EventStream0TransferBurstStart

 ${\tt quickSpinIntegerNode}\ {\tt EventStream0TransferBurstStart}$ 

#### 12.2.1.381 EventStream0TransferBurstStartFrameID

 $\verb"quickSpinIntegerNode" EventStreamOTransferBurstStartFrameID"$ 

#### 12.2.1.382 EventStream0TransferBurstStartTimestamp

 ${\tt quickSpinIntegerNode}\ {\tt EventStream0TransferBurstStartTimestamp}$ 

#### 12.2.1.383 EventStream0TransferEnd

quickSpinIntegerNode EventStreamOTransferEnd

#### 12.2.1.384 EventStream0TransferEndFrameID

quickSpinIntegerNode EventStreamOTransferEndFrameID

#### 12.2.1.385 EventStream0TransferEndTimestamp

 ${\tt quickSpinIntegerNode}\ {\tt EventStream0TransferEndTimestamp}$ 

#### 12.2.1.386 EventStream0TransferOverflow

quickSpinIntegerNode EventStreamOTransferOverflow

#### 12.2.1.387 EventStream0TransferOverflowFrameID

quickSpinIntegerNode EventStreamOTransferOverflowFrameID

#### 12.2.1.388 EventStream0TransferOverflowTimestamp

quickSpinIntegerNode EventStreamOTransferOverflowTimestamp

#### 12.2.1.389 EventStream0TransferPause

 ${\tt quickSpinIntegerNode}\ {\tt EventStream0TransferPause}$ 

#### 12.2.1.390 EventStream0TransferPauseFrameID

quickSpinIntegerNode EventStreamOTransferPauseFrameID

#### 12.2.1.391 EventStream0TransferPauseTimestamp

quickSpinIntegerNode EventStreamOTransferPauseTimestamp

#### 12.2.1.392 EventStream0TransferResume

quickSpinIntegerNode EventStreamOTransferResume

#### 12.2.1.393 EventStream0TransferResumeFrameID

 ${\tt quickSpinIntegerNode}\ {\tt EventStreamOTransferResumeFrameID}$ 

#### 12.2.1.394 EventStream0TransferResumeTimestamp

quickSpinIntegerNode EventStreamOTransferResumeTimestamp

#### 12.2.1.395 EventStream0TransferStart

quickSpinIntegerNode EventStreamOTransferStart

#### 12.2.1.396 EventStream0TransferStartFrameID

 $\verb"quickSpinIntegerNode" EventStreamOTransferStartFrameID"$ 

#### 12.2.1.397 EventStream0TransferStartTimestamp

quickSpinIntegerNode EventStreamOTransferStartTimestamp

#### 12.2.1.398 EventTest

quickSpinIntegerNode EventTest

# 12.2.1.399 EventTestTimestamp

quickSpinIntegerNode EventTestTimestamp

#### 12.2.1.400 EventTimer0End

quickSpinIntegerNode EventTimer0End

#### 12.2.1.401 EventTimer0EndFrameID

quickSpinIntegerNode EventTimerOEndFrameID

#### 12.2.1.402 EventTimer0EndTimestamp

quickSpinIntegerNode EventTimer0EndTimestamp

#### 12.2.1.403 EventTimer0Start

 ${\tt quickSpinIntegerNode}\ {\tt EventTimer0Start}$ 

# 12.2.1.404 EventTimer0StartFrameID

 ${\tt quickSpinIntegerNode}\ {\tt EventTimer0StartFrameID}$ 

#### 12.2.1.405 EventTimer0StartTimestamp

 ${\tt quickSpinIntegerNode}\ {\tt EventTimer0StartTimestamp}$ 

#### 12.2.1.406 EventTimer1End

quickSpinIntegerNode EventTimer1End

#### 12.2.1.407 EventTimer1EndFrameID

quickSpinIntegerNode EventTimer1EndFrameID

#### 12.2.1.408 EventTimer1EndTimestamp

quickSpinIntegerNode EventTimer1EndTimestamp

# 12.2.1.409 EventTimer1Start

quickSpinIntegerNode EventTimer1Start

#### 12.2.1.410 EventTimer1StartFrameID

quickSpinIntegerNode EventTimer1StartFrameID

# 12.2.1.411 EventTimer1StartTimestamp

 ${\tt quickSpinIntegerNode}\ {\tt EventTimer1StartTimestamp}$ 

#### 12.2.1.412 ExposureActiveMode

 $\verb"quickSpinEnumerationNode ExposureActiveMode"$ 

#### 12.2.1.413 ExposureAuto

 ${\tt quickSpinEnumerationNode\ ExposureAuto}$ 

#### 12.2.1.414 ExposureMode

 ${\tt quickSpinEnumerationNode\ ExposureMode}$ 

# 12.2.1.415 ExposureTime

quickSpinFloatNode ExposureTime

#### 12.2.1.416 ExposureTimeMode

quickSpinEnumerationNode ExposureTimeMode

# 12.2.1.417 ExposureTimeSelector

quickSpinEnumerationNode ExposureTimeSelector

#### 12.2.1.418 FactoryReset

quickSpinCommandNode FactoryReset

#### 12.2.1.419 FileAccessBuffer

quickSpinRegisterNode FileAccessBuffer

# 12.2.1.420 FileAccessLength

 ${\tt quickSpinIntegerNode\ FileAccessLength}$ 

#### 12.2.1.421 FileAccessOffset

 ${\tt quickSpinIntegerNode\ FileAccessOffset}$ 

#### 12.2.1.422 FileOpenMode

 ${\tt quickSpinEnumerationNode\ FileOpenMode}$ 

# 12.2.1.423 FileOperationExecute

quickSpinCommandNode FileOperationExecute

#### 12.2.1.424 FileOperationResult

quickSpinIntegerNode FileOperationResult

# 12.2.1.425 FileOperationSelector

quickSpinEnumerationNode FileOperationSelector

#### 12.2.1.426 FileOperationStatus

quickSpinEnumerationNode FileOperationStatus

#### 12.2.1.427 FileSelector

 ${\tt quickSpinEnumerationNode\ FileSelector}$ 

#### 12.2.1.428 FileSize

quickSpinIntegerNode FileSize

12.2.1.436 GevCCP

quickSpinEnumerationNode GevCCP

# 12.2.1.429 Gain quickSpinFloatNode Gain 12.2.1.430 GainAuto ${\tt quickSpinEnumerationNode\ GainAuto}$ 12.2.1.431 GainAutoBalance quickSpinEnumerationNode GainAutoBalance 12.2.1.432 GainSelector quickSpinEnumerationNode GainSelector 12.2.1.433 Gamma quickSpinFloatNode Gamma 12.2.1.434 GammaEnable quickSpinBooleanNode GammaEnable 12.2.1.435 GevActiveLinkCount quickSpinIntegerNode GevActiveLinkCount

#### Generated by Doxygen

#### 12.2.1.437 GevCurrentDefaultGateway

quickSpinIntegerNode GevCurrentDefaultGateway

#### 12.2.1.438 GevCurrentIPAddress

quickSpinIntegerNode GevCurrentIPAddress

# 12.2.1.439 GevCurrentlPConfigurationDHCP

quickSpinBooleanNode GevCurrentIPConfigurationDHCP

#### 12.2.1.440 GevCurrentIPConfigurationLLA

quickSpinBooleanNode GevCurrentIPConfigurationLLA

#### 12.2.1.441 GevCurrentIPConfigurationPersistentIP

 ${\tt quickSpinBooleanNode}~{\tt GevCurrentIPConfigurationPersistentIP}$ 

#### 12.2.1.442 GevCurrentPhysicalLinkConfiguration

 $\verb"quickSpinEnumerationNode" GevCurrentPhysicalLinkConfiguration"$ 

#### 12.2.1.443 GevCurrentSubnetMask

quickSpinIntegerNode GevCurrentSubnetMask

#### 12.2.1.444 GevDiscoveryAckDelay

 ${\tt quickSpinIntegerNode}\ {\tt GevDiscoveryAckDelay}$ 

# 12.2.1.445 GevFirstURL

quickSpinStringNode GevFirstURL

#### 12.2.1.446 GevGVCPExtendedStatusCodes

quickSpinBooleanNode GevGVCPExtendedStatusCodes

#### 12.2.1.447 GevGVCPExtendedStatusCodesSelector

quickSpinEnumerationNode GevGVCPExtendedStatusCodesSelector

#### 12.2.1.448 GevGVCPHeartbeatDisable

quickSpinBooleanNode GevGVCPHeartbeatDisable

# 12.2.1.449 GevGVCPPendingAck

quickSpinBooleanNode GevGVCPPendingAck

#### 12.2.1.450 GevGVCPPendingTimeout

quickSpinIntegerNode GevGVCPPendingTimeout

#### 12.2.1.451 GevGVSPExtendedIDMode

quickSpinEnumerationNode GevGVSPExtendedIDMode

#### 12.2.1.452 GevHeartbeatTimeout

quickSpinIntegerNode GevHeartbeatTimeout

#### 12.2.1.453 GevIEEE1588

quickSpinBooleanNode GevIEEE1588

# 12.2.1.454 GevIEEE1588ClockAccuracy

quickSpinEnumerationNode GevIEEE1588ClockAccuracy

#### 12.2.1.455 GevIEEE1588Mode

quickSpinEnumerationNode GevIEEE1588Mode

#### 12.2.1.456 GevIEEE1588Status

quickSpinEnumerationNode GevIEEE1588Status

#### 12.2.1.457 GevInterfaceSelector

quickSpinIntegerNode GevInterfaceSelector

#### 12.2.1.458 GevIPConfigurationStatus

quickSpinEnumerationNode GevIPConfigurationStatus

#### 12.2.1.459 GevMACAddress

quickSpinIntegerNode GevMACAddress

#### 12.2.1.460 GevMCDA

quickSpinIntegerNode GevMCDA

# 12.2.1.461 GevMCPHostPort

quickSpinIntegerNode GevMCPHostPort

#### 12.2.1.462 GevMCRC

quickSpinIntegerNode GevMCRC

#### 12.2.1.463 GevMCSP

quickSpinIntegerNode GevMCSP

#### 12.2.1.464 GevMCTT

quickSpinIntegerNode GevMCTT

#### 12.2.1.465 GevNumberOfInterfaces

quickSpinIntegerNode GevNumberOfInterfaces

#### 12.2.1.466 GevPAUSEFrameReception

quickSpinBooleanNode GevPAUSEFrameReception

#### 12.2.1.467 GevPAUSEFrameTransmission

 ${\tt quickSpinBooleanNode}~{\tt GevPAUSEFrameTransmission}$ 

# 12.2.1.468 GevPersistentDefaultGateway

 $\verb"quickSpinIntegerNode" GevPersistentDefaultGateway"$ 

#### 12.2.1.469 GevPersistentIPAddress

quickSpinIntegerNode GevPersistentIPAddress

#### 12.2.1.470 GevPersistentSubnetMask

quickSpinIntegerNode GevPersistentSubnetMask

#### 12.2.1.471 GevPhysicalLinkConfiguration

 ${\tt quickSpinEnumerationNode\ GevPhysicalLinkConfiguration}$ 

#### 12.2.1.472 GevPrimaryApplicationIPAddress

quickSpinIntegerNode GevPrimaryApplicationIPAddress

# 12.2.1.473 GevPrimaryApplicationSocket

quickSpinIntegerNode GevPrimaryApplicationSocket

#### 12.2.1.474 GevPrimaryApplicationSwitchoverKey

quickSpinIntegerNode GevPrimaryApplicationSwitchoverKey

#### 12.2.1.475 GevSCCFGAllInTransmission

quickSpinBooleanNode GevSCCFGAllInTransmission

#### 12.2.1.476 GevSCCFGExtendedChunkData

quickSpinBooleanNode GevSCCFGExtendedChunkData

#### 12.2.1.477 GevSCCFGPacketResendDestination

 ${\tt quickSpinBooleanNode}~{\tt GevSCCFGPacketResendDestination}$ 

# 12.2.1.478 GevSCCFGUnconditionalStreaming

 ${\tt quickSpinBooleanNode}~{\tt GevSCCFGUnconditionalStreaming}$ 

#### 12.2.1.479 GevSCDA

quickSpinIntegerNode GevSCDA

#### 12.2.1.480 GevSCPD

quickSpinIntegerNode GevSCPD

#### 12.2.1.481 GevSCPDirection

quickSpinIntegerNode GevSCPDirection

#### 12.2.1.482 GevSCPHostPort

quickSpinIntegerNode GevSCPHostPort

#### 12.2.1.483 GevSCPInterfaceIndex

quickSpinIntegerNode GevSCPInterfaceIndex

#### 12.2.1.484 GevSCPSBigEndian

 $\verb"quickSpinBooleanNode" GevSCPSBigEndian"$ 

#### 12.2.1.485 GevSCPSDoNotFragment

 ${\tt quickSpinBooleanNode}~{\tt GevSCPSDoNotFragment}$ 

#### 12.2.1.486 GevSCPSFireTestPacket

quickSpinBooleanNode GevSCPSFireTestPacket

#### 12.2.1.487 GevSCPSPacketSize

quickSpinIntegerNode GevSCPSPacketSize

#### 12.2.1.488 GevSCSP

quickSpinIntegerNode GevSCSP

# 12.2.1.489 GevSCZoneConfigurationLock

quickSpinBooleanNode GevSCZoneConfigurationLock

#### 12.2.1.490 GevSCZoneCount

quickSpinIntegerNode GevSCZoneCount

#### 12.2.1.491 GevSCZoneDirectionAll

 ${\tt quickSpinIntegerNode}\ {\tt GevSCZoneDirectionAll}$ 

#### 12.2.1.492 GevSecondURL

 ${\tt quickSpinStringNode\ GevSecondURL}$ 

#### 12.2.1.493 GevStreamChannelSelector

quickSpinIntegerNode GevStreamChannelSelector

#### 12.2.1.494 GevSupportedOption

 ${\tt quickSpinBooleanNode~GevSupportedOption}$ 

# 12.2.1.495 GevSupportedOptionSelector

 ${\tt quickSpinEnumerationNode~GevSupportedOptionSelector}$ 

#### 12.2.1.496 GevTimestampTickFrequency

quickSpinIntegerNode GevTimestampTickFrequency

#### 12.2.1.497 GuiXmlManifestAddress

quickSpinIntegerNode GuiXmlManifestAddress

#### 12.2.1.498 Height

quickSpinIntegerNode Height

# 12.2.1.499 HeightMax

quickSpinIntegerNode HeightMax

# 12.2.1.500 ImageComponentEnable

 ${\tt quickSpinBooleanNode\ ImageComponentEnable}$ 

#### 12.2.1.501 ImageComponentSelector

 ${\tt quickSpinEnumerationNode\ ImageComponentSelector}$ 

#### 12.2.1.502 ImageCompressionBitrate

 ${\tt quickSpinFloatNode}\ {\tt ImageCompressionBitrate}$ 

# 12.2.1.503 ImageCompressionJPEGFormatOption

 $\verb"quickSpinEnumerationNode" ImageCompressionJPEGFormatOption"$ 

#### 12.2.1.504 ImageCompressionMode

quickSpinEnumerationNode ImageCompressionMode

# 12.2.1.505 ImageCompressionQuality

quickSpinIntegerNode ImageCompressionQuality

#### 12.2.1.506 ImageCompressionRateOption

quickSpinEnumerationNode ImageCompressionRateOption

# 12.2.1.507 IspEnable

quickSpinBooleanNode IspEnable

#### 12.2.1.508 LineFilterWidth

 ${\tt quickSpinFloatNode\ LineFilterWidth}$ 

# 12.2.1.509 LineFormat

 ${\tt quickSpinEnumerationNode\ LineFormat}$ 

#### 12.2.1.510 LineInputFilterSelector

 ${\tt quickSpinEnumerationNode\ LineInputFilterSelector}$ 

#### 12.2.1.511 LineInverter

quickSpinBooleanNode LineInverter

#### 12.2.1.512 LineMode

quickSpinEnumerationNode LineMode

#### 12.2.1.513 LinePitch

quickSpinIntegerNode LinePitch

# 12.2.1.514 LineSelector

quickSpinEnumerationNode LineSelector

#### 12.2.1.515 LineSource

quickSpinEnumerationNode LineSource

#### 12.2.1.516 LineStatus

quickSpinBooleanNode LineStatus

#### 12.2.1.517 LineStatusAll

quickSpinIntegerNode LineStatusAll

#### 12.2.1.518 LinkErrorCount

quickSpinIntegerNode LinkErrorCount

# 12.2.1.519 LinkUptime

quickSpinIntegerNode LinkUptime

#### 12.2.1.520 LogicBlockLUTInputActivation

quickSpinEnumerationNode LogicBlockLUTInputActivation

# 12.2.1.521 LogicBlockLUTInputSelector

 ${\tt quickSpinEnumerationNode\ LogicBlockLUTInputSelector}$ 

#### 12.2.1.522 LogicBlockLUTInputSource

quickSpinEnumerationNode LogicBlockLUTInputSource

# 12.2.1.523 LogicBlockLUTOutputValue

 ${\tt quickSpinBooleanNode\ LogicBlockLUTOutputValue}$ 

# 12.2.1.524 LogicBlockLUTOutputValueAll

 ${\tt quickSpinIntegerNode}\ {\tt LogicBlockLUTOutputValueAll}$ 

#### 12.2.1.525 LogicBlockLUTRowIndex

quickSpinIntegerNode LogicBlockLUTRowIndex

# 12.2.1.526 LogicBlockLUTSelector

 ${\tt quickSpinEnumerationNode\ LogicBlockLUTSelector}$ 

# 12.2.1.527 LogicBlockSelector

quickSpinEnumerationNode LogicBlockSelector

#### 12.2.1.528 LUTEnable

quickSpinBooleanNode LUTEnable

#### 12.2.1.529 LUTIndex

quickSpinIntegerNode LUTIndex

# 12.2.1.530 LUTSelector

quickSpinEnumerationNode LUTSelector

# 12.2.1.531 LUTValue

quickSpinIntegerNode LUTValue

#### 12.2.1.532 LUTValueAll

quickSpinRegisterNode LUTValueAll

#### 12.2.1.533 MaxDeviceResetTime

quickSpinIntegerNode MaxDeviceResetTime

#### 12.2.1.534 OffsetX

quickSpinIntegerNode OffsetX

#### 12.2.1.535 OffsetY

quickSpinIntegerNode OffsetY

#### 12.2.1.536 PacketResendRequestCount

quickSpinIntegerNode PacketResendRequestCount

# 12.2.1.537 PayloadSize

quickSpinIntegerNode PayloadSize

# 12.2.1.538 PixelColorFilter

quickSpinEnumerationNode PixelColorFilter

# 12.2.1.539 PixelDynamicRangeMax

quickSpinIntegerNode PixelDynamicRangeMax

# 12.2.1.540 PixelDynamicRangeMin

quickSpinIntegerNode PixelDynamicRangeMin

#### 12.2.1.541 PixelFormat

quickSpinEnumerationNode PixelFormat

#### 12.2.1.542 PixelFormatInfolD

quickSpinIntegerNode PixelFormatInfoID

#### 12.2.1.543 PixelFormatInfoSelector

quickSpinEnumerationNode PixelFormatInfoSelector

#### 12.2.1.544 PixelSize

quickSpinEnumerationNode PixelSize

# 12.2.1.545 PowerSupplyCurrent

quickSpinFloatNode PowerSupplyCurrent

#### 12.2.1.546 PowerSupplyVoltage

quickSpinFloatNode PowerSupplyVoltage

# 12.2.1.547 RegionDestination

 ${\tt quickSpinEnumerationNode}\ {\tt RegionDestination}$ 

# 12.2.1.548 RegionMode

quickSpinEnumerationNode RegionMode

#### 12.2.1.549 RegionSelector

quickSpinEnumerationNode RegionSelector

#### 12.2.1.550 ReverseX

quickSpinBooleanNode ReverseX

#### 12.2.1.551 ReverseY

quickSpinBooleanNode ReverseY

#### 12.2.1.552 RgbTransformLightSource

quickSpinEnumerationNode RgbTransformLightSource

#### 12.2.1.553 Saturation

quickSpinFloatNode Saturation

#### 12.2.1.554 SaturationEnable

quickSpinBooleanNode SaturationEnable

# 12.2.1.555 Scan3dAxisMax

quickSpinFloatNode Scan3dAxisMax

#### 12.2.1.556 Scan3dAxisMin

 ${\tt quickSpinFloatNode\ Scan3dAxisMin}$ 

#### 12.2.1.557 Scan3dCoordinateOffset

 ${\tt quickSpinFloatNode}\ {\tt Scan3dCoordinateOffset}$ 

#### 12.2.1.558 Scan3dCoordinateReferenceSelector

quickSpinEnumerationNode Scan3dCoordinateReferenceSelector

#### 12.2.1.559 Scan3dCoordinateReferenceValue

quickSpinFloatNode Scan3dCoordinateReferenceValue

#### 12.2.1.560 Scan3dCoordinateScale

quickSpinFloatNode Scan3dCoordinateScale

#### 12.2.1.561 Scan3dCoordinateSelector

quickSpinEnumerationNode Scan3dCoordinateSelector

#### 12.2.1.562 Scan3dCoordinateSystem

quickSpinEnumerationNode Scan3dCoordinateSystem

# 12.2.1.563 Scan3dCoordinateSystemReference

 $\verb"quickSpinEnumerationNode" Scan3dCoordinateSystemReference"$ 

#### 12.2.1.564 Scan3dCoordinateTransformSelector

quickSpinEnumerationNode Scan3dCoordinateTransformSelector

#### 12.2.1.565 Scan3dDistanceUnit

 ${\tt quickSpinEnumerationNode~Scan3dDistanceUnit}$ 

#### 12.2.1.566 Scan3dInvalidDataFlag

 ${\tt quickSpinBooleanNode~Scan3dInvalidDataFlag}$ 

#### 12.2.1.567 Scan3dInvalidDataValue

quickSpinFloatNode Scan3dInvalidDataValue

#### 12.2.1.568 Scan3dOutputMode

quickSpinEnumerationNode Scan3dOutputMode

#### 12.2.1.569 Scan3dTransformValue

quickSpinFloatNode Scan3dTransformValue

#### 12.2.1.570 SensorDescription

quickSpinStringNode SensorDescription

# 12.2.1.571 SensorDigitizationTaps

 $\verb"quickSpinEnumerationNode" SensorDigitizationTaps"$ 

# 12.2.1.572 SensorHeight

quickSpinIntegerNode SensorHeight

#### 12.2.1.573 SensorShutterMode

 $\verb"quickSpinEnumerationNode" SensorShutterMode"$ 

#### 12.2.1.574 SensorTaps

quickSpinEnumerationNode SensorTaps

#### 12.2.1.575 SensorWidth

quickSpinIntegerNode SensorWidth

#### 12.2.1.576 SequencerConfigurationMode

quickSpinEnumerationNode SequencerConfigurationMode

# 12.2.1.577 SequencerConfigurationValid

quickSpinEnumerationNode SequencerConfigurationValid

#### 12.2.1.578 SequencerFeatureEnable

quickSpinBooleanNode SequencerFeatureEnable

# 12.2.1.579 SequencerMode

quickSpinEnumerationNode SequencerMode

#### 12.2.1.580 SequencerPathSelector

quickSpinIntegerNode SequencerPathSelector

#### 12.2.1.581 SequencerSetActive

quickSpinIntegerNode SequencerSetActive

#### 12.2.1.582 SequencerSetLoad

 ${\tt quickSpinCommandNode}\ {\tt SequencerSetLoad}$ 

#### 12.2.1.583 SequencerSetNext

quickSpinIntegerNode SequencerSetNext

#### 12.2.1.584 SequencerSetSave

quickSpinCommandNode SequencerSetSave

# 12.2.1.585 SequencerSetSelector

quickSpinIntegerNode SequencerSetSelector

#### 12.2.1.586 SequencerSetStart

quickSpinIntegerNode SequencerSetStart

# 12.2.1.587 SequencerSetValid

 $\verb"quickSpinEnumerationNode" SequencerSetValid"$ 

# 12.2.1.588 SequencerTriggerActivation

 $\verb"quickSpinEnumerationNode" SequencerTriggerActivation"$ 

# 12.2.1.589 SequencerTriggerSource

quickSpinEnumerationNode SequencerTriggerSource

#### 12.2.1.590 SerialPortBaudRate

quickSpinEnumerationNode SerialPortBaudRate

#### 12.2.1.591 SerialPortDataBits

quickSpinIntegerNode SerialPortDataBits

#### 12.2.1.592 SerialPortParity

quickSpinEnumerationNode SerialPortParity

#### 12.2.1.593 SerialPortSelector

quickSpinEnumerationNode SerialPortSelector

#### 12.2.1.594 SerialPortSource

quickSpinEnumerationNode SerialPortSource

# 12.2.1.595 SerialPortStopBits

 ${\tt quickSpinEnumerationNode\ SerialPortStopBits}$ 

# 12.2.1.596 SerialReceiveFramingErrorCount

quickSpinIntegerNode SerialReceiveFramingErrorCount

#### 12.2.1.597 SerialReceiveParityErrorCount

 ${\tt quickSpinIntegerNode}\ {\tt SerialReceiveParityErrorCount}$ 

#### 12.2.1.598 SerialReceiveQueueClear

 ${\tt quickSpinCommandNode}\ {\tt SerialReceiveQueueClear}$ 

#### 12.2.1.599 SerialReceiveQueueCurrentCharacterCount

 ${\tt quickSpinIntegerNode} \ \ {\tt SerialReceiveQueueCurrentCharacterCount}$ 

#### 12.2.1.600 SerialReceiveQueueMaxCharacterCount

quickSpinIntegerNode SerialReceiveQueueMaxCharacterCount

#### 12.2.1.601 SerialTransmitQueueCurrentCharacterCount

 ${\tt quickSpinIntegerNode}\ {\tt SerialTransmitQueueCurrentCharacterCount}$ 

#### 12.2.1.602 SerialTransmitQueueMaxCharacterCount

 $\verb"quickSpinIntegerNode" SerialTransmitQueueMaxCharacterCount"$ 

# 12.2.1.603 Sharpening

quickSpinFloatNode Sharpening

# 12.2.1.604 SharpeningAuto

 ${\tt quickSpinBooleanNode\ SharpeningAuto}$ 

#### 12.2.1.605 SharpeningEnable

quickSpinBooleanNode SharpeningEnable

#### 12.2.1.606 SharpeningThreshold

 ${\tt quickSpinFloatNode}\ {\tt SharpeningThreshold}$ 

# 12.2.1.607 SoftwareSignalPulse

 ${\tt quickSpinCommandNode\ SoftwareSignalPulse}$ 

#### 12.2.1.608 SoftwareSignalSelector

quickSpinEnumerationNode SoftwareSignalSelector

#### 12.2.1.609 SourceCount

quickSpinIntegerNode SourceCount

#### 12.2.1.610 SourceSelector

quickSpinEnumerationNode SourceSelector

# 12.2.1.611 Test0001

quickSpinIntegerNode Test0001

# 12.2.1.612 TestEventGenerate

 ${\tt quickSpinCommandNode}\ {\tt TestEventGenerate}$ 

#### 12.2.1.613 TestPattern

 ${\tt quickSpinEnumerationNode\ TestPattern}$ 

#### 12.2.1.614 TestPatternGeneratorSelector

quickSpinEnumerationNode TestPatternGeneratorSelector

# 12.2.1.615 TestPendingAck

quickSpinIntegerNode TestPendingAck

#### 12.2.1.616 TimerDelay

quickSpinFloatNode TimerDelay

# 12.2.1.617 TimerDuration

quickSpinFloatNode TimerDuration

# 12.2.1.618 TimerReset

quickSpinCommandNode TimerReset

#### 12.2.1.619 TimerSelector

quickSpinEnumerationNode TimerSelector

#### 12.2.1.620 TimerStatus

 ${\tt quickSpinEnumerationNode\ TimerStatus}$ 

#### 12.2.1.621 TimerTriggerActivation

quickSpinEnumerationNode TimerTriggerActivation

# 12.2.1.622 TimerTriggerSource

 ${\tt quickSpinEnumerationNode\ TimerTriggerSource}$ 

#### 12.2.1.623 TimerValue

quickSpinFloatNode TimerValue

#### 12.2.1.624 Timestamp

quickSpinIntegerNode Timestamp

# 12.2.1.625 TimestampLatch

quickSpinCommandNode TimestampLatch

#### 12.2.1.626 TimestampLatchValue

quickSpinIntegerNode TimestampLatchValue

# 12.2.1.627 TimestampReset

quickSpinCommandNode TimestampReset

#### 12.2.1.628 TLParamsLocked

 ${\tt quickSpinIntegerNode\ TLParamsLocked}$ 

# 12.2.1.629 TransferAbort

quickSpinCommandNode TransferAbort

#### 12.2.1.630 TransferBlockCount

quickSpinIntegerNode TransferBlockCount

#### 12.2.1.631 TransferBurstCount

quickSpinIntegerNode TransferBurstCount

#### 12.2.1.632 TransferComponentSelector

quickSpinEnumerationNode TransferComponentSelector

#### 12.2.1.633 TransferControlMode

quickSpinEnumerationNode TransferControlMode

#### 12.2.1.634 TransferOperationMode

quickSpinEnumerationNode TransferOperationMode

#### 12.2.1.635 TransferPause

quickSpinCommandNode TransferPause

#### 12.2.1.636 TransferQueueCurrentBlockCount

 ${\tt quickSpinIntegerNode}\ {\tt TransferQueueCurrentBlockCount}$ 

# 12.2.1.637 TransferQueueMaxBlockCount

 ${\tt quickSpinIntegerNode\ TransferQueueMaxBlockCount}$ 

#### 12.2.1.638 TransferQueueMode

quickSpinEnumerationNode TransferQueueMode

#### 12.2.1.639 TransferQueueOverflowCount

quickSpinIntegerNode TransferQueueOverflowCount

#### 12.2.1.640 TransferResume

quickSpinCommandNode TransferResume

#### 12.2.1.641 TransferSelector

quickSpinEnumerationNode TransferSelector

# 12.2.1.642 TransferStart

quickSpinCommandNode TransferStart

#### 12.2.1.643 TransferStatus

quickSpinBooleanNode TransferStatus

#### 12.2.1.644 TransferStatusSelector

quickSpinEnumerationNode TransferStatusSelector

#### 12.2.1.645 TransferStop

quickSpinCommandNode TransferStop

#### 12.2.1.646 TransferStreamChannel

 ${\tt quickSpinIntegerNode\ TransferStreamChannel}$ 

# 12.2.1.647 TransferTriggerActivation

 ${\tt quickSpinEnumerationNode\ TransferTriggerActivation}$ 

#### 12.2.1.648 TransferTriggerMode

quickSpinEnumerationNode TransferTriggerMode

# 12.2.1.649 TransferTriggerSelector

quickSpinEnumerationNode TransferTriggerSelector

#### 12.2.1.650 TransferTriggerSource

quickSpinEnumerationNode TransferTriggerSource

# 12.2.1.651 TriggerActivation

 ${\tt quickSpinEnumerationNode\ TriggerActivation}$ 

# 12.2.1.652 TriggerDelay

quickSpinFloatNode TriggerDelay

#### 12.2.1.653 TriggerDivider

quickSpinIntegerNode TriggerDivider

# 12.2.1.654 TriggerEventTest

 ${\tt quickSpinCommandNode\ TriggerEventTest}$ 

# 12.2.1.655 TriggerMode

quickSpinEnumerationNode TriggerMode

#### 12.2.1.656 TriggerMultiplier

quickSpinIntegerNode TriggerMultiplier

# 12.2.1.657 TriggerOverlap

quickSpinEnumerationNode TriggerOverlap

#### 12.2.1.658 TriggerSelector

quickSpinEnumerationNode TriggerSelector

# 12.2.1.659 TriggerSoftware

quickSpinCommandNode TriggerSoftware

# 12.2.1.660 TriggerSource

 ${\tt quickSpinEnumerationNode\ TriggerSource}$ 

#### 12.2.1.661 UserOutputSelector

quickSpinEnumerationNode UserOutputSelector

#### 12.2.1.662 UserOutputValue

quickSpinBooleanNode UserOutputValue

# 12.2.1.663 UserOutputValueAll

quickSpinIntegerNode UserOutputValueAll

#### 12.2.1.664 UserOutputValueAllMask

quickSpinIntegerNode UserOutputValueAllMask

#### 12.2.1.665 UserSetDefault

quickSpinEnumerationNode UserSetDefault

#### 12.2.1.666 UserSetFeatureEnable

quickSpinBooleanNode UserSetFeatureEnable

# 12.2.1.667 UserSetLoad

quickSpinCommandNode UserSetLoad

#### 12.2.1.668 UserSetSave

 ${\tt quickSpinCommandNode}\ {\tt UserSetSave}$ 

# 12.2.1.669 UserSetSelector quickSpinEnumerationNode UserSetSelector 12.2.1.670 V3\_3Enable quickSpinBooleanNode V3\_3Enable 12.2.1.671 WhiteClip quickSpinFloatNode WhiteClip 12.2.1.672 WhiteClipSelector quickSpinEnumerationNode WhiteClipSelector 12.2.1.673 Width quickSpinIntegerNode Width 12.2.1.674 WidthMax quickSpinIntegerNode WidthMax

The documentation for this struct was generated from the following file:

• include/spinc/QuickSpinDefsC.h

# 12.3 quickSpinTLDevice Struct Reference

#### **Data Fields**

- · quickSpinStringNode DeviceID
- · quickSpinStringNode DeviceSerialNumber
- quickSpinStringNode DeviceVendorName
- · quickSpinStringNode DeviceModelName
- quickSpinEnumerationNode DeviceType
- quickSpinStringNode DeviceDisplayName
- quickSpinEnumerationNode DeviceAccessStatus
- quickSpinStringNode DeviceVersion
- quickSpinStringNode DeviceUserID
- quickSpinStringNode DeviceDriverVersion
- quickSpinBooleanNode DeviceIsUpdater
- · quickSpinEnumerationNode GevCCP
- quickSpinEnumerationNode GUIXMLLocation
- quickSpinStringNode GUIXMLPath
- quickSpinEnumerationNode GenICamXMLLocation
- · quickSpinStringNode GenICamXMLPath
- quickSpinIntegerNode GevDeviceIPAddress
- quickSpinIntegerNode GevDeviceSubnetMask
- quickSpinIntegerNode GevDeviceMACAddress
- quickSpinIntegerNode GevDeviceGateway
- quickSpinIntegerNode DeviceLinkSpeed
- quickSpinIntegerNode GevVersionMajor
- · quickSpinIntegerNode GevVersionMinor
- quickSpinBooleanNode GevDeviceModeIsBigEndian
- quickSpinIntegerNode GevDeviceReadAndWriteTimeout
- · quickSpinIntegerNode GevDeviceMaximumRetryCount
- quickSpinIntegerNode GevDevicePort
- quickSpinCommandNode GevDeviceDiscoverMaximumPacketSize
- quickSpinIntegerNode GevDeviceMaximumPacketSize
- · quickSpinBooleanNode GevDeviceIsWrongSubnet
- quickSpinCommandNode GevDeviceAutoForceIP
- quickSpinCommandNode GevDeviceForceIP
- quickSpinIntegerNode GevDeviceForceIPAddress
- quickSpinIntegerNode GevDeviceForceSubnetMask
- · quickSpinIntegerNode GevDeviceForceGateway
- quickSpinBooleanNode DeviceMulticastMonitorMode
- quickSpinEnumerationNode DeviceEndianessMechanism
- quickSpinStringNode DeviceInstanceId
- quickSpinStringNode DeviceLocation
- quickSpinEnumerationNode DeviceCurrentSpeed
- guickSpinBooleanNode DeviceU3VProtocol
- quickSpinStringNode DevicePortId

#### 12.3.1 Field Documentation

#### 12.3.1.1 DeviceAccessStatus

 ${\tt quickSpinEnumerationNode\ DeviceAccessStatus}$ 

# 12.3.1.2 DeviceCurrentSpeed

 ${\tt quickSpinEnumerationNode\ DeviceCurrentSpeed}$ 

# 12.3.1.3 DeviceDisplayName

quickSpinStringNode DeviceDisplayName

#### 12.3.1.4 DeviceDriverVersion

quickSpinStringNode DeviceDriverVersion

#### 12.3.1.5 DeviceEndianessMechanism

 $\verb"quickSpinEnumerationNode" DeviceEndianessMechanism"$ 

## 12.3.1.6 DeviceID

quickSpinStringNode DeviceID

#### 12.3.1.7 DeviceInstanceId

quickSpinStringNode DeviceInstanceId

#### 12.3.1.8 DeviceIsUpdater

quickSpinBooleanNode DeviceIsUpdater

#### 12.3.1.9 DeviceLinkSpeed

quickSpinIntegerNode DeviceLinkSpeed

#### 12.3.1.10 DeviceLocation

quickSpinStringNode DeviceLocation

#### 12.3.1.11 DeviceModelName

 ${\tt quickSpinStringNode\ DeviceModelName}$ 

#### 12.3.1.12 DeviceMulticastMonitorMode

quickSpinBooleanNode DeviceMulticastMonitorMode

#### 12.3.1.13 DevicePortId

quickSpinStringNode DevicePortId

# 12.3.1.14 DeviceSerialNumber

quickSpinStringNode DeviceSerialNumber

# 12.3.1.15 **DeviceType**

quickSpinEnumerationNode DeviceType

#### 12.3.1.16 DeviceU3VProtocol

quickSpinBooleanNode DeviceU3VProtocol

# 12.3.1.17 DeviceUserID

quickSpinStringNode DeviceUserID

#### 12.3.1.18 DeviceVendorName

quickSpinStringNode DeviceVendorName

#### 12.3.1.19 DeviceVersion

quickSpinStringNode DeviceVersion

#### 12.3.1.20 GenlCamXMLLocation

quickSpinEnumerationNode GenICamXMLLocation

# 12.3.1.21 GenlCamXMLPath

quickSpinStringNode GenICamXMLPath

# 12.3.1.22 GevCCP

quickSpinEnumerationNode GevCCP

#### 12.3.1.23 GevDeviceAutoForcelP

 ${\tt quickSpinCommandNode}\ {\tt GevDeviceAutoForceIP}$ 

#### 12.3.1.24 GevDeviceDiscoverMaximumPacketSize

quickSpinCommandNode GevDeviceDiscoverMaximumPacketSize

#### 12.3.1.25 GevDeviceForceGateway

quickSpinIntegerNode GevDeviceForceGateway

#### 12.3.1.26 GevDeviceForcelP

quickSpinCommandNode GevDeviceForceIP

#### 12.3.1.27 GevDeviceForcelPAddress

quickSpinIntegerNode GevDeviceForceIPAddress

#### 12.3.1.28 GevDeviceForceSubnetMask

quickSpinIntegerNode GevDeviceForceSubnetMask

#### 12.3.1.29 GevDeviceGateway

quickSpinIntegerNode GevDeviceGateway

#### 12.3.1.30 GevDevicelPAddress

quickSpinIntegerNode GevDeviceIPAddress

# 12.3.1.31 GevDeviceIsWrongSubnet

quickSpinBooleanNode GevDeviceIsWrongSubnet

#### 12.3.1.32 GevDeviceMACAddress

 ${\tt quickSpinIntegerNode}~{\tt GevDeviceMACAddress}$ 

# 12.3.1.33 GevDeviceMaximumPacketSize

 ${\tt quickSpinIntegerNode}\ {\tt GevDeviceMaximumPacketSize}$ 

#### 12.3.1.34 GevDeviceMaximumRetryCount

 $\verb"quickSpinIntegerNode" GevDeviceMaximumRetryCount"$ 

# 12.3.1.35 GevDeviceModelsBigEndian

 ${\tt quickSpinBooleanNode}~{\tt GevDeviceModeIsBigEndian}$ 

#### 12.3.1.36 GevDevicePort

quickSpinIntegerNode GevDevicePort

#### 12.3.1.37 GevDeviceReadAndWriteTimeout

 $\verb"quickSpinIntegerNode" GevDeviceReadAndWriteTimeout"$ 

#### 12.3.1.38 GevDeviceSubnetMask

quickSpinIntegerNode GevDeviceSubnetMask

# 12.3.1.39 GevVersionMajor

quickSpinIntegerNode GevVersionMajor

#### 12.3.1.40 GevVersionMinor

quickSpinIntegerNode GevVersionMinor

#### 12.3.1.41 GUIXMLLocation

quickSpinEnumerationNode GUIXMLLocation

#### 12.3.1.42 GUIXMLPath

quickSpinStringNode GUIXMLPath

The documentation for this struct was generated from the following file:

include/spinc/TransportLayerDeviceC.h

# 12.4 quickSpinTLInterface Struct Reference

#### **Data Fields**

- · quickSpinStringNode InterfaceID
- quickSpinStringNode InterfaceDisplayName
- quickSpinEnumerationNode InterfaceType
- · quickSpinIntegerNode GevInterfaceGatewaySelector
- · quickSpinIntegerNode GevInterfaceGateway
- quickSpinIntegerNode GevInterfaceMACAddress
- quickSpinIntegerNode GevInterfaceSubnetSelector
- quickSpinIntegerNode GevInterfaceSubnetIPAddress
- quickSpinIntegerNode GevInterfaceSubnetMask
- quickSpinIntegerNode GevInterfaceTransmitLinkSpeed
- · quickSpinIntegerNode GevInterfaceReceiveLinkSpeed
- quickSpinIntegerNode GevInterfaceMTU
- quickSpinEnumerationNode POEStatus
- quickSpinEnumerationNode FilterDriverStatus
- quickSpinIntegerNode GevActionDeviceKey
- · quickSpinIntegerNode GevActionGroupKey
- quickSpinIntegerNode GevActionGroupMask
- quickSpinIntegerNode GevActionTime
- guickSpinCommandNode ActionCommand
- quickSpinStringNode DeviceUnlock
- quickSpinCommandNode DeviceUpdateList
- · quickSpinIntegerNode DeviceCount
- quickSpinIntegerNode DeviceSelector
- quickSpinStringNode DeviceID
- quickSpinStringNode DeviceVendorName
- quickSpinStringNode DeviceModelName
- quickSpinStringNode DeviceSerialNumber
- quickSpinEnumerationNode DeviceAccessStatus
- quickSpinIntegerNode GevDeviceIPAddress
- quickSpinIntegerNode GevDeviceSubnetMask
- quickSpinIntegerNode GevDeviceGateway
- quickSpinIntegerNode GevDeviceMACAddress

- quickSpinIntegerNode IncompatibleDeviceCount
- quickSpinIntegerNode IncompatibleDeviceSelector
- quickSpinStringNode IncompatibleDeviceID
- quickSpinStringNode IncompatibleDeviceVendorName
- quickSpinStringNode IncompatibleDeviceModelName
- quickSpinIntegerNode IncompatibleGevDeviceIPAddress
- quickSpinIntegerNode IncompatibleGevDeviceSubnetMask
- quickSpinIntegerNode IncompatibleGevDeviceMACAddress
- quickSpinCommandNode GevDeviceForceIP
- quickSpinIntegerNode GevDeviceForceIPAddress
- quickSpinIntegerNode GevDeviceForceSubnetMask
- · quickSpinIntegerNode GevDeviceForceGateway
- quickSpinCommandNode GevDeviceAutoForceIP
- quickSpinStringNode HostAdapterName
- quickSpinStringNode HostAdapterVendor
- quickSpinStringNode HostAdapterDriverVersion

#### 12.4.1 Field Documentation

#### 12.4.1.1 ActionCommand

quickSpinCommandNode ActionCommand

#### 12.4.1.2 DeviceAccessStatus

quickSpinEnumerationNode DeviceAccessStatus

#### 12.4.1.3 DeviceCount

quickSpinIntegerNode DeviceCount

#### 12.4.1.4 DeviceID

quickSpinStringNode DeviceID

#### 12.4.1.5 DeviceModelName

quickSpinStringNode DeviceModelName

#### 12.4.1.6 DeviceSelector

quickSpinIntegerNode DeviceSelector

#### 12.4.1.7 DeviceSerialNumber

quickSpinStringNode DeviceSerialNumber

#### 12.4.1.8 DeviceUnlock

quickSpinStringNode DeviceUnlock

# 12.4.1.9 DeviceUpdateList

quickSpinCommandNode DeviceUpdateList

# 12.4.1.10 DeviceVendorName

quickSpinStringNode DeviceVendorName

#### 12.4.1.11 FilterDriverStatus

 ${\tt quickSpinEnumerationNode\ FilterDriverStatus}$ 

# 12.4.1.12 GevActionDeviceKey

quickSpinIntegerNode GevActionDeviceKey

#### 12.4.1.13 GevActionGroupKey

quickSpinIntegerNode GevActionGroupKey

#### 12.4.1.14 GevActionGroupMask

 $\verb"quickSpinIntegerNode" GevActionGroupMask"$ 

#### 12.4.1.15 GevActionTime

quickSpinIntegerNode GevActionTime

#### 12.4.1.16 GevDeviceAutoForcelP

quickSpinCommandNode GevDeviceAutoForceIP

# 12.4.1.17 GevDeviceForceGateway

quickSpinIntegerNode GevDeviceForceGateway

#### 12.4.1.18 GevDeviceForcelP

quickSpinCommandNode GevDeviceForceIP

#### 12.4.1.19 GevDeviceForcelPAddress

quickSpinIntegerNode GevDeviceForceIPAddress

#### 12.4.1.20 GevDeviceForceSubnetMask

quickSpinIntegerNode GevDeviceForceSubnetMask

#### 12.4.1.21 GevDeviceGateway

quickSpinIntegerNode GevDeviceGateway

#### 12.4.1.22 GevDeviceIPAddress

quickSpinIntegerNode GevDeviceIPAddress

#### 12.4.1.23 GevDeviceMACAddress

quickSpinIntegerNode GevDeviceMACAddress

#### 12.4.1.24 GevDeviceSubnetMask

quickSpinIntegerNode GevDeviceSubnetMask

# 12.4.1.25 GevInterfaceGateway

quickSpinIntegerNode GevInterfaceGateway

#### 12.4.1.26 GevInterfaceGatewaySelector

quickSpinIntegerNode GevInterfaceGatewaySelector

#### 12.4.1.27 GevInterfaceMACAddress

 ${\tt quickSpinIntegerNode}~{\tt GevInterfaceMACAddress}$ 

#### 12.4.1.28 GevInterfaceMTU

 ${\tt quickSpinIntegerNode}\ {\tt GevInterfaceMTU}$ 

#### 12.4.1.29 GevInterfaceReceiveLinkSpeed

quickSpinIntegerNode GevInterfaceReceiveLinkSpeed

#### 12.4.1.30 GevInterfaceSubnetIPAddress

quickSpinIntegerNode GevInterfaceSubnetIPAddress

#### 12.4.1.31 GevInterfaceSubnetMask

quickSpinIntegerNode GevInterfaceSubnetMask

#### 12.4.1.32 GevInterfaceSubnetSelector

quickSpinIntegerNode GevInterfaceSubnetSelector

# 12.4.1.33 GevInterfaceTransmitLinkSpeed

quickSpinIntegerNode GevInterfaceTransmitLinkSpeed

#### 12.4.1.34 HostAdapterDriverVersion

quickSpinStringNode HostAdapterDriverVersion

# 12.4.1.35 HostAdapterName

quickSpinStringNode HostAdapterName

#### 12.4.1.36 HostAdapterVendor

 ${\tt quickSpinStringNode\ HostAdapterVendor}$ 

#### 12.4.1.37 IncompatibleDeviceCount

 ${\tt quickSpinIntegerNode}\ {\tt IncompatibleDeviceCount}$ 

#### 12.4.1.38 IncompatibleDeviceID

 ${\tt quickSpinStringNode}\ {\tt IncompatibleDeviceID}$ 

#### 12.4.1.39 IncompatibleDeviceModelName

 ${\tt quickSpinStringNode}\ {\tt IncompatibleDeviceModelName}$ 

### 12.4.1.40 IncompatibleDeviceSelector

quickSpinIntegerNode IncompatibleDeviceSelector

#### 12.4.1.41 IncompatibleDeviceVendorName

quickSpinStringNode IncompatibleDeviceVendorName

#### 12.4.1.42 IncompatibleGevDevicelPAddress

quickSpinIntegerNode IncompatibleGevDeviceIPAddress

# 12.4.1.43 IncompatibleGevDeviceMACAddress

 $\verb"quickSpinIntegerNode" Incompatible GevDevice MACAddress"$ 

#### 12.4.1.44 IncompatibleGevDeviceSubnetMask

 ${\tt quickSpinIntegerNode}\ {\tt IncompatibleGevDeviceSubnetMask}$ 

#### 12.4.1.45 InterfaceDisplayName

quickSpinStringNode InterfaceDisplayName

#### 12.4.1.46 InterfaceID

quickSpinStringNode InterfaceID

#### 12.4.1.47 InterfaceType

quickSpinEnumerationNode InterfaceType

#### 12.4.1.48 POEStatus

quickSpinEnumerationNode POEStatus

The documentation for this struct was generated from the following file:

• include/spinc/TransportLayerInterfaceC.h

# 12.5 quickSpinTLStream Struct Reference

## **Data Fields**

- quickSpinStringNode StreamID
- quickSpinEnumerationNode StreamType
- quickSpinEnumerationNode StreamMode
- quickSpinIntegerNode StreamBufferCountManual
- quickSpinIntegerNode StreamBufferCountResult
- quickSpinIntegerNode StreamBufferCountMax
- quickSpinEnumerationNode StreamBufferCountMode
- quickSpinEnumerationNode StreamBufferHandlingMode
- quickSpinIntegerNode StreamAnnounceBufferMinimum
- $\hbox{-} \ \, quick Spin Integer Node \ \, Stream Announced Buffer Count}$
- quickSpinIntegerNode StreamStartedFrameCount
- quickSpinIntegerNode StreamDeliveredFrameCount
- quickSpinIntegerNode StreamReceivedFrameCount
- quickSpinIntegerNode StreamIncompleteFrameCount
- quickSpinIntegerNode StreamLostFrameCount
- quickSpinIntegerNode StreamDroppedFrameCount
- quickSpinIntegerNode StreamInputBufferCount
- quickSpinIntegerNode StreamOutputBufferCount

- · quickSpinBooleanNode StreamIsGrabbing
- quickSpinIntegerNode StreamChunkCountMaximum
- · quickSpinIntegerNode StreamBufferAlignment
- quickSpinBooleanNode StreamCRCCheckEnable
- quickSpinIntegerNode StreamReceivedPacketCount
- quickSpinIntegerNode StreamMissedPacketCount
- quickSpinBooleanNode StreamPacketResendEnable
- quickSpinIntegerNode StreamPacketResendTimeout
- quickSpinIntegerNode StreamPacketResendMaxRequests
- quickSpinIntegerNode StreamPacketResendRequestCount
- quickSpinIntegerNode StreamPacketResendRequestSuccessCount
- quickSpinIntegerNode StreamPacketResendRequestedPacketCount
- quickSpinIntegerNode StreamPacketResendReceivedPacketCount
- quickSpinBooleanNode GevPacketResendMode
- quickSpinIntegerNode GevMaximumNumberResendRequests
- quickSpinIntegerNode GevPacketResendTimeout
- quickSpinIntegerNode GevTotalPacketCount
- quickSpinIntegerNode GevFailedPacketCount
- quickSpinIntegerNode GevResendPacketCount
- · quickSpinIntegerNode StreamFailedBufferCount
- quickSpinIntegerNode GevResendRequestCount
- · quickSpinIntegerNode StreamBlockTransferSize

#### 12.5.1 Field Documentation

#### 12.5.1.1 GevFailedPacketCount

quickSpinIntegerNode GevFailedPacketCount

# 12.5.1.2 GevMaximumNumberResendRequests

 $\verb"quickSpinIntegerNode" GevMaximumNumberResendRequests"$ 

#### 12.5.1.3 GevPacketResendMode

quickSpinBooleanNode GevPacketResendMode

#### 12.5.1.4 GevPacketResendTimeout

 ${\tt quickSpinIntegerNode}~{\tt GevPacketResendTimeout}$ 

#### 12.5.1.5 GevResendPacketCount

 ${\tt quickSpinIntegerNode}\ {\tt GevResendPacketCount}$ 

#### 12.5.1.6 GevResendRequestCount

 ${\tt quickSpinIntegerNode}~{\tt GevResendRequestCount}$ 

#### 12.5.1.7 GevTotalPacketCount

quickSpinIntegerNode GevTotalPacketCount

#### 12.5.1.8 StreamAnnounceBufferMinimum

quickSpinIntegerNode StreamAnnounceBufferMinimum

#### 12.5.1.9 StreamAnnouncedBufferCount

 ${\tt quickSpinIntegerNode}\ {\tt StreamAnnouncedBufferCount}$ 

#### 12.5.1.10 StreamBlockTransferSize

quickSpinIntegerNode StreamBlockTransferSize

# 12.5.1.11 StreamBufferAlignment

 ${\tt quickSpinIntegerNode}\ {\tt StreamBufferAlignment}$ 

#### 12.5.1.12 StreamBufferCountManual

quickSpinIntegerNode StreamBufferCountManual

#### 12.5.1.13 StreamBufferCountMax

 ${\tt quickSpinIntegerNode}\ {\tt StreamBufferCountMax}$ 

#### 12.5.1.14 StreamBufferCountMode

quickSpinEnumerationNode StreamBufferCountMode

#### 12.5.1.15 StreamBufferCountResult

quickSpinIntegerNode StreamBufferCountResult

#### 12.5.1.16 StreamBufferHandlingMode

quickSpinEnumerationNode StreamBufferHandlingMode

#### 12.5.1.17 StreamChunkCountMaximum

 ${\tt quickSpinIntegerNode}\ {\tt StreamChunkCountMaximum}$ 

#### 12.5.1.18 StreamCRCCheckEnable

quickSpinBooleanNode StreamCRCCheckEnable

#### 12.5.1.19 StreamDeliveredFrameCount

 ${\tt quickSpinIntegerNode}\ {\tt StreamDeliveredFrameCount}$ 

#### 12.5.1.20 StreamDroppedFrameCount

 ${\tt quickSpinIntegerNode}\ {\tt StreamDroppedFrameCount}$ 

#### 12.5.1.21 StreamFailedBufferCount

quickSpinIntegerNode StreamFailedBufferCount

#### 12.5.1.22 StreamID

 ${\tt quickSpinStringNode\ StreamID}$ 

# 12.5.1.23 StreamIncompleteFrameCount

 ${\tt quickSpinIntegerNode}\ {\tt StreamIncompleteFrameCount}$ 

#### 12.5.1.24 StreamInputBufferCount

quickSpinIntegerNode StreamInputBufferCount

# 12.5.1.25 StreamIsGrabbing

quickSpinBooleanNode StreamIsGrabbing

#### 12.5.1.26 StreamLostFrameCount

quickSpinIntegerNode StreamLostFrameCount

#### 12.5.1.27 StreamMissedPacketCount

quickSpinIntegerNode StreamMissedPacketCount

#### 12.5.1.28 StreamMode

quickSpinEnumerationNode StreamMode

#### 12.5.1.29 StreamOutputBufferCount

 ${\tt quickSpinIntegerNode}\ {\tt StreamOutputBufferCount}$ 

#### 12.5.1.30 StreamPacketResendEnable

 $\verb"quickSpinBooleanNode" StreamPacketResendEnable"$ 

#### 12.5.1.31 StreamPacketResendMaxRequests

quickSpinIntegerNode StreamPacketResendMaxRequests

#### 12.5.1.32 StreamPacketResendReceivedPacketCount

quickSpinIntegerNode StreamPacketResendReceivedPacketCount

#### 12.5.1.33 StreamPacketResendRequestCount

 ${\tt quickSpinIntegerNode}\ {\tt StreamPacketResendRequestCount}$ 

#### 12.5.1.34 StreamPacketResendRequestedPacketCount

 $\verb"quickSpinIntegerNode" StreamPacketResendRequestedPacketCount"$ 

# 12.5.1.35 StreamPacketResendRequestSuccessCount

quickSpinIntegerNode StreamPacketResendRequestSuccessCount

#### 12.5.1.36 StreamPacketResendTimeout

quickSpinIntegerNode StreamPacketResendTimeout

#### 12.5.1.37 StreamReceivedFrameCount

quickSpinIntegerNode StreamReceivedFrameCount

#### 12.5.1.38 StreamReceivedPacketCount

quickSpinIntegerNode StreamReceivedPacketCount

#### 12.5.1.39 StreamStartedFrameCount

quickSpinIntegerNode StreamStartedFrameCount

#### 12.5.1.40 StreamType

quickSpinEnumerationNode StreamType

The documentation for this struct was generated from the following file:

• include/spinc/TransportLayerStreamC.h

# 12.6 quickSpinTLSystem Struct Reference

#### **Data Fields**

- quickSpinStringNode TLID
- quickSpinStringNode TLVendorName
- quickSpinStringNode TLModelName
- · quickSpinStringNode TLVersion
- quickSpinStringNode TLFileName
- · quickSpinStringNode TLDisplayName
- quickSpinStringNode TLPath
- quickSpinEnumerationNode TLType
- quickSpinIntegerNode GenTLVersionMajor
- quickSpinIntegerNode GenTLVersionMinor
- quickSpinIntegerNode GenTLSFNCVersionMajor
- quickSpinIntegerNode GenTLSFNCVersionMinor
- quickSpinIntegerNode GenTLSFNCVersionSubMinor
- quickSpinIntegerNode GevVersionMajor
- quickSpinIntegerNode GevVersionMinor
- quickSpinCommandNode InterfaceUpdateList
- · quickSpinIntegerNode InterfaceSelector
- quickSpinStringNode InterfaceID
- quickSpinStringNode InterfaceDisplayName
- quickSpinIntegerNode GevInterfaceMACAddress
- quickSpinIntegerNode GevInterfaceDefaultIPAddress
- quickSpinIntegerNode GevInterfaceDefaultSubnetMask
- quickSpinIntegerNode GevInterfaceDefaultGateway
- guickSpinBooleanNode EnumerateGEVInterfaces
- quickSpinBooleanNode EnumerateUSBInterfaces
- quickSpinBooleanNode EnumerateGen2Cameras

# 12.6.1 Field Documentation

# 12.6.1.1 EnumerateGen2Cameras

quickSpinBooleanNode EnumerateGen2Cameras

#### 12.6.1.2 EnumerateGEVInterfaces

 ${\tt quickSpinBooleanNode}\ {\tt EnumerateGEVInterfaces}$ 

#### 12.6.1.3 EnumerateUSBInterfaces

quickSpinBooleanNode EnumerateUSBInterfaces

# 12.6.1.4 GenTLSFNCVersionMajor

quickSpinIntegerNode GenTLSFNCVersionMajor

#### 12.6.1.5 GenTLSFNCVersionMinor

quickSpinIntegerNode GenTLSFNCVersionMinor

#### 12.6.1.6 GenTLSFNCVersionSubMinor

 ${\tt quickSpinIntegerNode} \ \ {\tt GenTLSFNCVersionSubMinor}$ 

#### 12.6.1.7 GenTLVersionMajor

quickSpinIntegerNode GenTLVersionMajor

# 12.6.1.8 GenTLVersionMinor

 ${\tt quickSpinIntegerNode}\ {\tt GenTLVersionMinor}$ 

#### 12.6.1.9 GevInterfaceDefaultGateway

 ${\tt quickSpinIntegerNode}\ {\tt GevInterfaceDefaultGateway}$ 

#### 12.6.1.10 GevInterfaceDefaultIPAddress

quickSpinIntegerNode GevInterfaceDefaultIPAddress

#### 12.6.1.11 GevInterfaceDefaultSubnetMask

quickSpinIntegerNode GevInterfaceDefaultSubnetMask

#### 12.6.1.12 GevInterfaceMACAddress

quickSpinIntegerNode GevInterfaceMACAddress

#### 12.6.1.13 GevVersionMajor

quickSpinIntegerNode GevVersionMajor

#### 12.6.1.14 GevVersionMinor

 ${\tt quickSpinIntegerNode}\ {\tt GevVersionMinor}$ 

#### 12.6.1.15 InterfaceDisplayName

 ${\tt quickSpinStringNode}\ {\tt InterfaceDisplayName}$ 

# 12.6.1.16 InterfaceID

 ${\tt quickSpinStringNode\ InterfaceID}$ 

#### 12.6.1.17 InterfaceSelector

 ${\tt quickSpinIntegerNode}\ {\tt InterfaceSelector}$ 

# 12.6.1.18 InterfaceUpdateList

quickSpinCommandNode InterfaceUpdateList

# 12.6.1.19 TLDisplayName

quickSpinStringNode TLDisplayName

# 12.6.1.20 TLFileName

quickSpinStringNode TLFileName

# 12.6.1.21 TLID

quickSpinStringNode TLID

# 12.6.1.22 TLModelName

quickSpinStringNode TLModelName

#### 12.6.1.23 TLPath

 ${\tt quickSpinStringNode\ TLPath}$ 

#### 12.6.1.24 TLType

quickSpinEnumerationNode TLType

#### 12.6.1.25 TLVendorName

quickSpinStringNode TLVendorName

#### 12.6.1.26 TLVersion

quickSpinStringNode TLVersion

The documentation for this struct was generated from the following file:

• include/spinc/TransportLayerSystemC.h

# 12.7 spinAVIOptionEx Struct Reference

Options for saving uncompressed videos.

#### **Data Fields**

float frameRate

Frame rate of the stream.

· unsigned int width

Width of source image.

• unsigned int height

Height of source image.

• unsigned int reserved [192]

# 12.7.1 Detailed Description

Options for saving uncompressed videos.

Used in saving AVI videos with a call to spinAVIRecorderOpenUncompressedEx().

#### 12.7.2 Field Documentation

#### 12.7.2.1 frameRate

float frameRate

Frame rate of the stream.

#### 12.7.2.2 height

unsigned int height

Height of source image.

#### 12.7.2.3 reserved

unsigned int reserved[192]

#### 12.7.2.4 width

unsigned int width

Width of source image.

The documentation for this struct was generated from the following file:

• include/spinc/SpinnakerDefsC.h

# 12.8 spinBMPOption Struct Reference

Options for saving BMP images.

#### **Data Fields**

- bool8\_t indexedColor\_8bit
- unsigned int reserved [16]

Reserved for future use.

# 12.8.1 Detailed Description

Options for saving BMP images.

Used in saving PPM images with a call to spinImageSaveBmp().

#### 12.8.2 Field Documentation

#### 12.8.2.1 indexedColor\_8bit

bool8\_t indexedColor\_8bit

#### 12.8.2.2 reserved

unsigned int reserved[16]

#### Reserved for future use.

The documentation for this struct was generated from the following file:

• include/spinc/SpinnakerDefsC.h

# 12.9 spinChunkData Struct Reference

The type of information that can be obtained from image chunk data.

# **Data Fields**

- double m blackLevel
- int64 t m frameID
- double m\_exposureTime
- int64\_t m\_compressionMode
- double m\_compressionRatio
- int64\_t m\_timestamp
- int64\_t m\_exposureEndLineStatusAll
- int64\_t m\_width
- int64\_t m\_image
- int64\_t m\_height
- double m\_gain
- int64\_t m\_sequencerSetActive
- int64\_t m\_cRC
- int64 t m offsetX
- int64\_t m\_offsetY
- int64\_t m\_serialDataLength
- int64\_t m\_partSelector
- int64\_t m\_pixelDynamicRangeMin
- int64\_t m\_pixelDynamicRangeMax
- int64\_t m\_timestampLatchValue
- int64\_t m\_lineStatusAll
- int64\_t m\_counterValue

- double m\_timerValue
- int64\_t m\_scanLineSelector
- int64\_t m\_encoderValue
- int64\_t m\_linePitch
- int64 t m transferBlockID
- int64\_t m\_transferQueueCurrentBlockCount
- int64\_t m\_streamChannelID
- double m\_scan3dCoordinateScale
- double m\_scan3dCoordinateOffset
- double m\_scan3dInvalidDataValue
- double m\_scan3dAxisMin
- double m\_scan3dAxisMax
- double m\_scan3dTransformValue
- double m\_scan3dCoordinateReferenceValue
- int64\_t m\_inferenceFrameId
- int64 t m inferenceResult
- double m\_inferenceConfidence

# 12.9.1 Detailed Description

The type of information that can be obtained from image chunk data.

#### 12.9.2 Field Documentation

#### 12.9.2.1 m\_blackLevel

double m\_blackLevel

#### 12.9.2.2 m\_compressionMode

int64\_t m\_compressionMode

#### 12.9.2.3 m\_compressionRatio

double m\_compressionRatio

# 12.9.2.4 m\_counterValue

int64\_t m\_counterValue

#### 12.9.2.5 m\_cRC

int64\_t m\_cRC

# 12.9.2.6 m\_encoderValue

int64\_t m\_encoderValue

#### 12.9.2.7 m\_exposureEndLineStatusAll

int64\_t m\_exposureEndLineStatusAll

# 12.9.2.8 m\_exposureTime

double m\_exposureTime

# 12.9.2.9 m\_frameID

int64\_t m\_frameID

# 12.9.2.10 m\_gain

double m\_gain

# 12.9.2.11 m\_height

int64\_t m\_height

# 12.9.2.12 m\_image int64\_t m\_image 12.9.2.13 m\_inferenceConfidence double m\_inferenceConfidence 12.9.2.14 m\_inferenceFrameId int64\_t m\_inferenceFrameId 12.9.2.15 m\_inferenceResult int64\_t m\_inferenceResult 12.9.2.16 m\_linePitch int64\_t m\_linePitch 12.9.2.17 m\_lineStatusAll int64\_t m\_lineStatusAll

# 12.9.2.19 m\_offsetY

12.9.2.18 m\_offsetX

int64\_t m\_offsetX

int64\_t m\_offsetY

#### 12.9.2.20 m\_partSelector

int64\_t m\_partSelector

# 12.9.2.21 m\_pixelDynamicRangeMax

int64\_t m\_pixelDynamicRangeMax

# 12.9.2.22 m\_pixelDynamicRangeMin

int64\_t m\_pixelDynamicRangeMin

#### 12.9.2.23 m\_scan3dAxisMax

double m\_scan3dAxisMax

#### 12.9.2.24 m\_scan3dAxisMin

double m\_scan3dAxisMin

#### 12.9.2.25 m\_scan3dCoordinateOffset

double m\_scan3dCoordinateOffset

# 12.9.2.26 m\_scan3dCoordinateReferenceValue

double m\_scan3dCoordinateReferenceValue

# 12.9.2.27 m\_scan3dCoordinateScale

 $\verb|double m_scan3dCoordinateScale| \\$ 

#### 12.9.2.28 m\_scan3dInvalidDataValue

double m\_scan3dInvalidDataValue

#### 12.9.2.29 m\_scan3dTransformValue

double m\_scan3dTransformValue

# 12.9.2.30 m\_scanLineSelector

int64\_t m\_scanLineSelector

#### 12.9.2.31 m\_sequencerSetActive

int64\_t m\_sequencerSetActive

# 12.9.2.32 m\_serialDataLength

int64\_t m\_serialDataLength

#### 12.9.2.33 m\_streamChannelID

int64\_t m\_streamChannelID

# 12.9.2.34 m\_timerValue

double m\_timerValue

# 12.9.2.35 m\_timestamp

int64\_t m\_timestamp

#### 12.9.2.36 m\_timestampLatchValue

int64\_t m\_timestampLatchValue

#### 12.9.2.37 m\_transferBlockID

int64\_t m\_transferBlockID

#### 12.9.2.38 m\_transferQueueCurrentBlockCount

int64\_t m\_transferQueueCurrentBlockCount

#### 12.9.2.39 m\_width

int64\_t m\_width

The documentation for this struct was generated from the following file:

• include/spinc/ChunkDataDefC.h

# 12.10 spinH264Option Struct Reference

Options for saving H264 videos.

# **Data Fields**

float frameRate

Frame rate of the stream.

· unsigned int width

Width of source image.

· unsigned int height

Height of source image.

· unsigned int bitrate

Bitrate to encode at.

• unsigned int reserved [256]

Reserved for future use.

# 12.10.1 Detailed Description

Options for saving H264 videos.

Used in saving H264 videos with a call to spinAVIRecorderOpenH264().

#### 12.10.2 Field Documentation

#### 12.10.2.1 bitrate

unsigned int bitrate

Bitrate to encode at.

#### 12.10.2.2 frameRate

float frameRate

Frame rate of the stream.

# 12.10.2.3 height

unsigned int height

Height of source image.

# 12.10.2.4 reserved

unsigned int reserved[256]

Reserved for future use.

# 12.10.2.5 width

unsigned int width

Width of source image.

The documentation for this struct was generated from the following file:

• include/spinc/SpinnakerDefsC.h

# 12.11 spinJPEGOption Struct Reference

Options for saving JPEG images.

#### **Data Fields**

• bool8\_t progressive

Whether to save as a progressive JPEG file.

· unsigned int quality

JPEG image quality in range (0-100).

• unsigned int reserved [16]

Reserved for future use.

# 12.11.1 Detailed Description

Options for saving JPEG images.

Used in saving PPM images with a call to spinImageSaveJpeg().

#### 12.11.2 Field Documentation

# 12.11.2.1 progressive

bool8\_t progressive

Whether to save as a progressive JPEG file.

#### 12.11.2.2 quality

unsigned int quality

JPEG image quality in range (0-100).

- 100 Superb quality.
- 75 Good quality.
- 50 Normal quality.
- 10 Poor quality.

#### 12.11.2.3 reserved

```
unsigned int reserved[16]
```

Reserved for future use.

The documentation for this struct was generated from the following file:

• include/spinc/SpinnakerDefsC.h

# 12.12 spinJPG2Option Struct Reference

Options for saving JPEG 2000 images.

#### **Data Fields**

· unsigned int quality

JPEG saving quality in range (1-512).

• unsigned int reserved [16]

Reserved for future use.

# 12.12.1 Detailed Description

Options for saving JPEG 2000 images.

Used in saving PPM images with a call to spinImageSaveJpg2().

#### 12.12.2 Field Documentation

#### 12.12.2.1 quality

```
unsigned int quality
```

JPEG saving quality in range (1-512).

#### 12.12.2.2 reserved

```
unsigned int reserved[16]
```

Reserved for future use.

The documentation for this struct was generated from the following file:

• include/spinc/SpinnakerDefsC.h

# 12.13 spinLibraryVersion Struct Reference

Provides easier access to the current version of Spinnaker.

# **Data Fields**

· unsigned int major

Major version of the library.

· unsigned int minor

Minor version of the library.

· unsigned int type

Version type of the library.

· unsigned int build

Build number of the library.

# 12.13.1 Detailed Description

Provides easier access to the current version of Spinnaker.

# 12.13.2 Field Documentation

## 12.13.2.1 build

unsigned int build

Build number of the library.

12.13.2.2 major

unsigned int major

Major version of the library.

12.13.2.3 minor

unsigned int minor

Minor version of the library.

#### 12.13.2.4 type

unsigned int type

Version type of the library.

The documentation for this struct was generated from the following file:

• include/spinc/SpinnakerDefsC.h

# 12.14 spinMJPGOptionEx Struct Reference

Options for saving MJPG videos.

## **Data Fields**

· float frameRate

Frame rate of the stream.

· unsigned int quality

Image quality (1-100)

· unsigned int width

Width of source image.

· unsigned int height

Height of source image.

• unsigned int reserved [192]

# 12.14.1 Detailed Description

Options for saving MJPG videos.

Used in saving MJPG videos with a call to spinAVIRecorderOpenMJPGEx().

#### 12.14.2 Field Documentation

# 12.14.2.1 frameRate

float frameRate

Frame rate of the stream.

## 12.14.2.2 height

unsigned int height

Height of source image.

#### 12.14.2.3 quality

unsigned int quality

Image quality (1-100)

#### 12.14.2.4 reserved

unsigned int reserved[192]

#### 12.14.2.5 width

unsigned int width

Width of source image.

The documentation for this struct was generated from the following file:

• include/spinc/SpinnakerDefsC.h

# 12.15 spinPGMOption Struct Reference

Options for saving PGM images.

## **Data Fields**

• bool8\_t binaryFile

Whether to save the PPM as a binary file.

• unsigned int reserved [16]

Reserved for future use.

# 12.15.1 Detailed Description

Options for saving PGM images.

## 12.15.2 Field Documentation

#### 12.15.2.1 binaryFile

bool8\_t binaryFile

Whether to save the PPM as a binary file.

#### 12.15.2.2 reserved

unsigned int reserved[16]

Reserved for future use.

The documentation for this struct was generated from the following file:

• include/spinc/SpinnakerDefsC.h

# 12.16 spinPNGOption Struct Reference

Options for saving PNG images.

# **Data Fields**

· bool8\_t interlaced

Whether to save the PNG as interlaced.

· unsigned int compressionLevel

Compression level (0-9).

• unsigned int reserved [16]

Reserved for future use.

# 12.16.1 Detailed Description

Options for saving PNG images.

Used in saving PNG images with a call to spinImageSavePng().

# 12.16.2 Field Documentation

#### 12.16.2.1 compressionLevel

unsigned int compressionLevel

Compression level (0-9).

0 is no compression, 9 is best compression.

#### 12.16.2.2 interlaced

bool8\_t interlaced

Whether to save the PNG as interlaced.

#### 12.16.2.3 reserved

unsigned int reserved[16]

Reserved for future use.

The documentation for this struct was generated from the following file:

• include/spinc/SpinnakerDefsC.h

# 12.17 spinPPMOption Struct Reference

Options for saving PPM images.

## **Data Fields**

• bool8\_t binaryFile

Whether to save the PPM as a binary file.

• unsigned int reserved [16]

Reserved for future use.

# 12.17.1 Detailed Description

Options for saving PPM images.

Used in saving PPM images with a call to spinImageSavePpm().

# 12.17.2 Field Documentation

#### 12.17.2.1 binaryFile

```
bool8_t binaryFile
```

Whether to save the PPM as a binary file.

#### 12.17.2.2 reserved

```
unsigned int reserved[16]
```

Reserved for future use.

The documentation for this struct was generated from the following file:

• include/spinc/SpinnakerDefsC.h

# 12.18 spinTIFFOption Struct Reference

Options for saving TIFF images.

## **Data Fields**

• spinCompressionMethod compression

Compression method to use for encoding TIFF images.

• unsigned int reserved [16]

Reserved for future use.

# 12.18.1 Detailed Description

Options for saving TIFF images.

Used in saving PPM images with a call to spinImageSaveTiff().

#### 12.18.2 Field Documentation

#### 12.18.2.1 compression

```
spinCompressionMethod compression
```

Compression method to use for encoding TIFF images.

#### 12.18.2.2 reserved

unsigned int reserved[16]

Reserved for future use.

The documentation for this struct was generated from the following file:


include/spinc/SpinnakerDefsC.h

# **Chapter 13**

# **File Documentation**

- 13.1 doc/spindocs/C/GettingStarted.dox File Reference
- 13.2 doc/spindocs/C/ProgrammerGuide.dox File Reference
- 13.3 doc/spindocs/shared/Benefits.dox File Reference
- 13.4 doc/spindocs/shared/FlyCapture2Comparison.dox File Reference
- 13.5 doc/spindocs/shared/GenlCamGenTL.dox File Reference
- 13.6 doc/spindocs/shared/Licensing.dox File Reference
- 13.7 doc/spindocs/shared/Maintenance.dox File Reference
- 13.8 include/spinc/CameraDefsC.h File Reference

This graph shows which files directly or indirectly include this file:

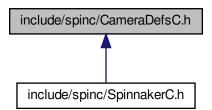

## **Enumerations**

```
enum spinLUTSelectorEnums {
 LUTSelector LUT1,
 NUM LUTSELECTOR }
     The enum definitions for camera nodes.
• enum spinExposureModeEnums {
 ExposureMode Timed,
 ExposureMode TriggerWidth,
 NUM EXPOSUREMODE }

    enum spinAcquisitionModeEnums {

 AcquisitionMode_Continuous,
 AcquisitionMode SingleFrame,
 AcquisitionMode MultiFrame,
 NUM ACQUISITIONMODE }
 enum spinTriggerSourceEnums {
 TriggerSource Software,
 TriggerSource Line0,
 TriggerSource Line1,
 TriggerSource Line2.
 TriggerSource_Line3,
 TriggerSource UserOutput0,
 TriggerSource_UserOutput1,
 TriggerSource_UserOutput2,
 TriggerSource_UserOutput3,
 TriggerSource_Counter0Start,
 TriggerSource Counter1Start,
 TriggerSource Counter0End,
 TriggerSource_Counter1End,
 TriggerSource_LogicBlock0,
 TriggerSource LogicBlock1,
 TriggerSource Action0,
 NUM_TRIGGERSOURCE }
 enum spinTriggerActivationEnums {
 TriggerActivation LevelLow,
 TriggerActivation LevelHigh,
 TriggerActivation FallingEdge.
 TriggerActivation RisingEdge,
 TriggerActivation AnyEdge,
 NUM TRIGGERACTIVATION }
 enum spinSensorShutterModeEnums {
 SensorShutterMode Global,
 SensorShutterMode Rolling,
 SensorShutterMode GlobalReset,
 NUM SENSORSHUTTERMODE }
enum spinTriggerModeEnums {
 TriggerMode Off,
 TriggerMode On,
 NUM_TRIGGERMODE }

    enum spinTriggerOverlapEnums {

 TriggerOverlap_Off,
 TriggerOverlap ReadOut,
 TriggerOverlap PreviousFrame,
 NUM_TRIGGEROVERLAP }

    enum spinTriggerSelectorEnums {

 TriggerSelector_AcquisitionStart,
```

TriggerSelector\_FrameStart,

```
TriggerSelector_FrameBurstStart,
 NUM TRIGGERSELECTOR }
enum spinExposureAutoEnums {
 ExposureAuto_Off,
 ExposureAuto Once,
 ExposureAuto Continuous,
 NUM EXPOSUREAUTO }
enum spinEventSelectorEnums {
 EventSelector Error,
 EventSelector ExposureEnd,
 EventSelector SerialPortReceive,
 NUM_EVENTSELECTOR }

    enum spinEventNotificationEnums {

 EventNotification On.
 EventNotification Off,
 NUM EVENTNOTIFICATION }
• enum spinLogicBlockSelectorEnums {
 LogicBlockSelector_LogicBlock0,
 LogicBlockSelector LogicBlock1,
 NUM LOGICBLOCKSELECTOR }

    enum spinLogicBlockLUTInputActivationEnums {

 LogicBlockLUTInputActivation LevelLow,
 LogicBlockLUTInputActivation LevelHigh,
 LogicBlockLUTInputActivation FallingEdge,
 LogicBlockLUTInputActivation RisingEdge,
 LogicBlockLUTInputActivation AnyEdge.
 NUM LOGICBLOCKLUTINPUTACTIVATION }

    enum spinLogicBlockLUTInputSelectorEnums {

 LogicBlockLUTInputSelector_Input0,
 LogicBlockLUTInputSelector_Input1,
 LogicBlockLUTInputSelector_Input2,
 LogicBlockLUTInputSelector Input3,
 NUM LOGICBLOCKLUTINPUTSELECTOR }

    enum spinLogicBlockLUTInputSourceEnums {

 LogicBlockLUTInputSource Zero,
 LogicBlockLUTInputSource_Line0,
 LogicBlockLUTInputSource_Line1,
 LogicBlockLUTInputSource Line2,
 LogicBlockLUTInputSource_Line3,
 LogicBlockLUTInputSource_UserOutput0,
 LogicBlockLUTInputSource_UserOutput1,
 LogicBlockLUTInputSource UserOutput2.
 LogicBlockLUTInputSource UserOutput3,
 LogicBlockLUTInputSource Counter0Start,
 LogicBlockLUTInputSource Counter1Start,
 LogicBlockLUTInputSource Counter0End,
 LogicBlockLUTInputSource Counter1End,
 LogicBlockLUTInputSource LogicBlock0,
 LogicBlockLUTInputSource LogicBlock1,
 LogicBlockLUTInputSource ExposureStart,
 LogicBlockLUTInputSource_ExposureEnd,
 LogicBlockLUTInputSource FrameTriggerWait,
 LogicBlockLUTInputSource AcquisitionActive.
 NUM LOGICBLOCKLUTINPUTSOURCE }

    enum spinLogicBlockLUTSelectorEnums {

 LogicBlockLUTSelector Value,
 LogicBlockLUTSelector_Enable,
 NUM LOGICBLOCKLUTSELECTOR }
```

```
    enum spinColorTransformationSelectorEnums {

 ColorTransformationSelector RGBtoRGB,
 ColorTransformationSelector RGBtoYUV.
 NUM COLORTRANSFORMATIONSELECTOR }
 enum spinRgbTransformLightSourceEnums {
 RgbTransformLightSource General,
 RgbTransformLightSource Tungsten2800K,
 RgbTransformLightSource WarmFluorescent3000K,
 RgbTransformLightSource CoolFluorescent4000K.
 RgbTransformLightSource Daylight5000K,
 RgbTransformLightSource Cloudy6500K,
 RgbTransformLightSource Shade8000K,
 RgbTransformLightSource Custom.
 NUM RGBTRANSFORMLIGHTSOURCE }
 enum spinColorTransformationValueSelectorEnums {
 ColorTransformationValueSelector Gain00.
 ColorTransformationValueSelector Gain01,
 ColorTransformationValueSelector Gain02,
 ColorTransformationValueSelector Gain10.
 ColorTransformationValueSelector Gain11,
 ColorTransformationValueSelector Gain12,
 ColorTransformationValueSelector Gain20,
 ColorTransformationValueSelector Gain21,
 ColorTransformationValueSelector Gain22,
 ColorTransformationValueSelector_Offset0,
 ColorTransformationValueSelector Offset1,
 ColorTransformationValueSelector Offset2.
 NUM COLORTRANSFORMATIONVALUESELECTOR }
 enum spinDeviceRegistersEndiannessEnums {
 DeviceRegistersEndianness Little.
 DeviceRegistersEndianness_Big,
 NUM_DEVICEREGISTERSENDIANNESS }
• enum spinDeviceScanTypeEnums {
 DeviceScanType Areascan,
 NUM DEVICESCANTYPE }
enum spinDeviceCharacterSetEnums {
 DeviceCharacterSet UTF8,
 DeviceCharacterSet ASCII.
 NUM DEVICECHARACTERSET }

    enum spinDeviceTLTypeEnums {

 DeviceTLType GigEVision,
 DeviceTLType_CameraLink,
 DeviceTLType CameraLinkHS,
 DeviceTLType CoaXPress.
 DeviceTLType USB3Vision,
 DeviceTLType_Custom,
 NUM DEVICETLTYPE }
• enum spinDevicePowerSupplySelectorEnums {
 DevicePowerSupplySelector External,
 NUM DEVICEPOWERSUPPLYSELECTOR }

    enum spinDeviceTemperatureSelectorEnums {

 DeviceTemperatureSelector Sensor,
 NUM DEVICETEMPERATURESELECTOR }

    enum spinDeviceIndicatorModeEnums {

 DeviceIndicatorMode Inactive,
 DeviceIndicatorMode Active.
 DeviceIndicatorMode ErrorStatus,
```

NUM DEVICEINDICATORMODE }

```
    enum spinAutoExposureControlPriorityEnums {

 AutoExposureControlPriority Gain,
 AutoExposureControlPriority ExposureTime,
 NUM AUTOEXPOSURECONTROLPRIORITY }
 enum spinAutoExposureMeteringModeEnums {
 AutoExposureMeteringMode Average,
 AutoExposureMeteringMode Spot,
 AutoExposureMeteringMode Partial,
 AutoExposureMeteringMode_CenterWeighted,
 AutoExposureMeteringMode HistgramPeak,
 NUM AUTOEXPOSUREMETERINGMODE }

    enum spinBalanceWhiteAutoProfileEnums {

 BalanceWhiteAutoProfile_Indoor,
 BalanceWhiteAutoProfile_Outdoor,
 NUM BALANCEWHITEAUTOPROFILE }

    enum spinAutoAlgorithmSelectorEnums {

 AutoAlgorithmSelector Awb,
 AutoAlgorithmSelector Ae.
 NUM_AUTOALGORITHMSELECTOR }

    enum spinAutoExposureTargetGreyValueAutoEnums {

 AutoExposureTargetGreyValueAuto Off,
 AutoExposureTargetGreyValueAuto_Continuous,
 NUM AUTOEXPOSURETARGETGREYVALUEAUTO }

    enum spinAutoExposureLightingModeEnums {

 AutoExposureLightingMode AutoDetect,
 AutoExposureLightingMode Backlight,
 AutoExposureLightingMode Frontlight.
 AutoExposureLightingMode Normal,
 NUM_AUTOEXPOSURELIGHTINGMODE }

    enum spinGevIEEE1588StatusEnums {

 GevIEEE1588Status_Initializing,
 GevIEEE1588Status_Faulty,
 GevIEEE1588Status_Disabled,
 GevIEEE1588Status Listening.
 GevIEEE1588Status PreMaster,
 GevIEEE1588Status Master,
 GevIEEE1588Status Passive,
 GevIEEE1588Status Uncalibrated,
 GevIEEE1588Status_Slave,
 NUM_GEVIEEE1588STATUS }
• enum spinGevIEEE1588ModeEnums {
 GevIEEE1588Mode_Auto,
 GevIEEE1588Mode SlaveOnly,
 NUM GEVIEEE1588MODE }

    enum spinGevIEEE1588ClockAccuracyEnums {

 GevIEEE1588ClockAccuracy Unknown,
 NUM GEVIEEE1588CLOCKACCURACY }

    enum spinGevCCPEnums {

 GevCCP OpenAccess,
 GevCCP ExclusiveAccess,
 GevCCP_ControlAccess,
 NUM GEVCCP }

    enum spinGevSupportedOptionSelectorEnums {

 GevSupportedOptionSelector UserDefinedName,
 GevSupportedOptionSelector SerialNumber,
 GevSupportedOptionSelector_HeartbeatDisable,
 GevSupportedOptionSelector_LinkSpeed,
```

GevSupportedOptionSelector\_CCPApplicationSocket,

```
GevSupportedOptionSelector_ManifestTable,
 GevSupportedOptionSelector TestData,
 GevSupportedOptionSelector DiscoveryAckDelay,
 GevSupportedOptionSelector_DiscoveryAckDelayWritable,
 GevSupportedOptionSelector_ExtendedStatusCodes,
 GevSupportedOptionSelector Action,
 GevSupportedOptionSelector PendingAck.
 GevSupportedOptionSelector EventData,
 GevSupportedOptionSelector Event,
 GevSupportedOptionSelector PacketResend.
 GevSupportedOptionSelector WriteMem,
 GevSupportedOptionSelector_CommandsConcatenation,
 GevSupportedOptionSelector_IPConfigurationLLA,
 GevSupportedOptionSelector IPConfigurationDHCP,
 GevSupportedOptionSelector_IPConfigurationPersistentIP,
 GevSupportedOptionSelector_StreamChannelSourceSocket,
 GevSupportedOptionSelector MessageChannelSourceSocket,
 NUM GEVSUPPORTEDOPTIONSELECTOR }

    enum spinBlackLevelSelectorEnums {

 BlackLevelSelector All,
 BlackLevelSelector Analog,
 BlackLevelSelector_Digital,
 NUM_BLACKLEVELSELECTOR }

    enum spinBalanceWhiteAutoEnums {

 BalanceWhiteAuto_Off,
 BalanceWhiteAuto Once,
 BalanceWhiteAuto Continuous.
 NUM BALANCEWHITEAUTO }
enum spinGainAutoEnums {
 GainAuto Off,
 GainAuto_Once,
 GainAuto_Continuous,
 NUM GAINAUTO }

    enum spinBalanceRatioSelectorEnums {

 BalanceRatioSelector Red,
 BalanceRatioSelector Blue.
 NUM_BALANCERATIOSELECTOR }

    enum spinGainSelectorEnums {

 GainSelector All.
 NUM_GAINSELECTOR }
• enum spinDefectCorrectionModeEnums {
 DefectCorrectionMode_Average,
 DefectCorrectionMode Highlight,
 DefectCorrectionMode Zero.
 NUM DEFECTCORRECTIONMODE }

    enum spinUserSetSelectorEnums {

 UserSetSelector Default,
 UserSetSelector UserSet0,
 UserSetSelector UserSet1,
 NUM USERSETSELECTOR }
enum spinUserSetDefaultEnums {
 UserSetDefault Default,
 UserSetDefault UserSet0.
 UserSetDefault UserSet1.
 NUM USERSETDEFAULT }

    enum spinSerialPortBaudRateEnums {

 SerialPortBaudRate Baud300,
 SerialPortBaudRate_Baud600,
```

```
SerialPortBaudRate Baud1200,
 SerialPortBaudRate Baud2400,
 SerialPortBaudRate Baud4800,
 SerialPortBaudRate_Baud9600,
 SerialPortBaudRate Baud14400,
 SerialPortBaudRate Baud19200,
 SerialPortBaudRate Baud38400.
 SerialPortBaudRate Baud57600,
 SerialPortBaudRate Baud115200,
 SerialPortBaudRate Baud230400,
 SerialPortBaudRate_Baud460800,
 SerialPortBaudRate_Baud921600,
 NUM_SERIALPORTBAUDRATE }
• enum spinSerialPortParityEnums {
 SerialPortParity_None,
 SerialPortParity Odd,
 SerialPortParity Even,
 SerialPortParity_Mark,
 SerialPortParity_Space,
 NUM SERIALPORTPARITY }

    enum spinSerialPortSelectorEnums {

 SerialPortSelector SerialPort0,
 NUM_SERIALPORTSELECTOR }
• enum spinSerialPortStopBitsEnums {
 SerialPortStopBits Bits1.
 SerialPortStopBits Bits1AndAHalf,
 SerialPortStopBits Bits2,
 NUM SERIALPORTSTOPBITS }
 enum spinSerialPortSourceEnums {
 SerialPortSource Line0,
 SerialPortSource Line1,
 SerialPortSource Line2,
 SerialPortSource_Line3,
 SerialPortSource_Off,
 NUM SERIALPORTSOURCE }

    enum spinSequencerModeEnums {

 SequencerMode Off,
 SequencerMode On.
 NUM_SEQUENCERMODE }
 enum spinSequencerConfigurationValidEnums {
 SequencerConfigurationValid No,
 SequencerConfigurationValid_Yes,
 NUM SEQUENCERCONFIGURATIONVALID }

    enum spinSequencerSetValidEnums {

 SequencerSetValid No,
 SequencerSetValid Yes,
 NUM SEQUENCERSETVALID }

    enum spinSequencerTriggerActivationEnums {

 SequencerTriggerActivation RisingEdge,
 SequencerTriggerActivation FallingEdge,
 SequencerTriggerActivation_AnyEdge,
 SequencerTriggerActivation LevelHigh,
 SequencerTriggerActivation LevelLow.
 NUM SEQUENCERTRIGGERACTIVATION }
 enum spinSequencerConfigurationModeEnums {
 SequencerConfigurationMode Off.
 SequencerConfigurationMode_On,
 NUM SEQUENCERCONFIGURATIONMODE }
```

```
    enum spinSequencerTriggerSourceEnums {

 SequencerTriggerSource Off,
 SequencerTriggerSource FrameStart,
 NUM_SEQUENCERTRIGGERSOURCE }

    enum spinTransferQueueModeEnums {

 TransferQueueMode FirstInFirstOut,
 NUM TRANSFERQUEUEMODE }
• enum spinTransferOperationModeEnums {
 TransferOperationMode Continuous,
 TransferOperationMode_MultiBlock,
 NUM_TRANSFEROPERATIONMODE }

    enum spinTransferControlModeEnums {

 TransferControlMode Basic,
 TransferControlMode Automatic,
 TransferControlMode UserControlled,
 NUM_TRANSFERCONTROLMODE }
 enum spinChunkGainSelectorEnums {
 ChunkGainSelector All,
 ChunkGainSelector Red.
 ChunkGainSelector Green,
 ChunkGainSelector Blue,
 NUM CHUNKGAINSELECTOR }

    enum spinChunkSelectorEnums {

 ChunkSelector_Image,
 ChunkSelector_CRC,
 ChunkSelector FrameID,
 ChunkSelector OffsetX.
 ChunkSelector OffsetY,
 ChunkSelector Width,
 ChunkSelector Height,
 ChunkSelector ExposureTime,
 ChunkSelector Gain,
 ChunkSelector_BlackLevel,
 ChunkSelector PixelFormat,
 ChunkSelector Timestamp,
 ChunkSelector_SequencerSetActive,
 ChunkSelector SerialData,
 ChunkSelector ExposureEndLineStatusAll,
 NUM CHUNKSELECTOR }

    enum spinChunkBlackLevelSelectorEnums {

 ChunkBlackLevelSelector All,
 NUM CHUNKBLACKLEVELSELECTOR }

    enum spinChunkPixelFormatEnums {

 ChunkPixelFormat Mono8.
 ChunkPixelFormat Mono12Packed,
 ChunkPixelFormat Mono16,
 ChunkPixelFormat RGB8Packed,
 ChunkPixelFormat_YUV422Packed,
 ChunkPixelFormat BayerGR8,
 ChunkPixelFormat BayerRG8,
 ChunkPixelFormat BayerGB8,
 ChunkPixelFormat BayerBG8,
 ChunkPixelFormat YCbCr601 422 8 CbYCrY,
 NUM CHUNKPIXELFORMAT }

    enum spinFileOperationStatusEnums {

 FileOperationStatus_Success,
```

FileOperationStatus\_Failure,

```
FileOperationStatus_Overflow,
 NUM FILEOPERATIONSTATUS }

    enum spinFileOpenModeEnums {

 FileOpenMode Read,
 FileOpenMode Write,
 FileOpenMode_ReadWrite,
 NUM FILEOPENMODE }

    enum spinFileOperationSelectorEnums {

 FileOperationSelector_Open,
 FileOperationSelector_Close,
 FileOperationSelector_Read,
 FileOperationSelector Write,
 FileOperationSelector_Delete,
 NUM FILEOPERATIONSELECTOR }
enum spinFileSelectorEnums {
 FileSelector UserSetDefault,
 FileSelector UserSet0,
 FileSelector UserSet1,
 FileSelector_UserFile1,
 FileSelector_SerialPort0,
 NUM FILESELECTOR }

    enum spinBinningSelectorEnums {

 BinningSelector All.
 BinningSelector Sensor,
 BinningSelector ISP,
 NUM BINNINGSELECTOR }

    enum spinTestPatternGeneratorSelectorEnums {

 TestPatternGeneratorSelector_Sensor,
 TestPatternGeneratorSelector PipelineStart,
 NUM TESTPATTERNGENERATORSELECTOR }

    enum spinCompressionSaturationPriorityEnums {

 CompressionSaturationPriority_DropFrame,
 CompressionSaturationPriority ReduceFrameRate,
 NUM_COMPRESSIONSATURATIONPRIORITY }
enum spinTestPatternEnums {
 TestPattern Off,
 TestPattern Increment,
 TestPattern SensorTestPattern.
 NUM TESTPATTERN }

    enum spinPixelColorFilterEnums {

 PixelColorFilter_None,
 PixelColorFilter_BayerRG,
 PixelColorFilter BayerGB,
 PixelColorFilter_BayerGR,
 PixelColorFilter BayerBG,
 NUM PIXELCOLORFILTER }

    enum spinAdcBitDepthEnums {

 AdcBitDepth Bit8,
 AdcBitDepth_Bit10,
 AdcBitDepth_Bit12,
 AdcBitDepth_Bit14,
 NUM ADCBITDEPTH }

    enum spinDecimationHorizontalModeEnums {

 DecimationHorizontalMode_Discard,
 NUM DECIMATIONHORIZONTALMODE }
• enum spinBinningVerticalModeEnums {
```

BinningVerticalMode\_Sum,

BinningVerticalMode\_Average, NUM BINNINGVERTICALMODE } • enum spinPixelSizeEnums { PixelSize Bpp1, PixelSize\_Bpp2, PixelSize Bpp4, PixelSize Bpp8, PixelSize Bpp10, PixelSize\_Bpp12, PixelSize\_Bpp14, PixelSize Bpp16, PixelSize Bpp20, PixelSize\_Bpp24, PixelSize\_Bpp30, PixelSize Bpp32, PixelSize\_Bpp36, PixelSize Bpp48, PixelSize Bpp64, PixelSize Bpp96, NUM PIXELSIZE } • enum spinDecimationSelectorEnums { DecimationSelector\_All, DecimationSelector Sensor, NUM DECIMATIONSELECTOR } enum spinImageCompressionModeEnums { ImageCompressionMode Off, ImageCompressionMode Lossless, NUM IMAGECOMPRESSIONMODE } • enum spinBinningHorizontalModeEnums { BinningHorizontalMode\_Sum, BinningHorizontalMode Average, NUM BINNINGHORIZONTALMODE } enum spinPixelFormatEnums { PixelFormat Mono8, PixelFormat Mono16, PixelFormat RGB8Packed, PixelFormat BayerGR8, PixelFormat\_BayerRG8, PixelFormat\_BayerGB8, PixelFormat BayerBG8, PixelFormat\_BayerGR16, PixelFormat BayerRG16, PixelFormat BayerGB16, PixelFormat BayerBG16, PixelFormat Mono12Packed, PixelFormat\_BayerGR12Packed, PixelFormat\_BayerRG12Packed, PixelFormat BayerGB12Packed, PixelFormat\_BayerBG12Packed, PixelFormat\_YUV411Packed, PixelFormat YUV422Packed, PixelFormat YUV444Packed, PixelFormat Mono12p, PixelFormat BayerGR12p, PixelFormat BayerRG12p, PixelFormat BayerGB12p, PixelFormat\_BayerBG12p, PixelFormat\_YCbCr8,

- PixelFormat\_YCbCr422\_8,
- PixelFormat YCbCr411 8,
- PixelFormat\_BGR8,
- PixelFormat\_BGRa8,
- PixelFormat\_Mono10Packed,
- PixelFormat BayerGR10Packed,
- PixelFormat BayerRG10Packed,
- PixelFormat BayerGB10Packed,
- PixelFormat BayerBG10Packed,
- PixelFormat Mono10p,
- PixelFormat\_BayerGR10p,
- PixelFormat\_BayerRG10p,
- PixelFormat\_BayerGB10p,
- PixelFormat\_BayerBG10p,
- PixelFormat\_Mono1p,
- PixelFormat\_Mono2p,
- PixelFormat Mono4p,
- PixelFormat Mono8s,
- PixelFormat\_Mono10,
- PixelFormat\_Mono12,
- PixelFormat Mono14,
- PixelFormat Mono16s,
- PixelFormat\_Mono32f,
- PixelFormat\_BayerBG10,
- PixelFormat BayerBG12,
- PixelFormat\_BayerGB10,
- PixelFormat\_BayerGB12,
- PixelFormat BayerGR10,
- PixelFormat BayerGR12.
- PixelFormat BayerRG10,
- PixelFormat\_BayerRG12,
- PixelFormat\_RGBa8,
- PixelFormat\_RGBa10,
- PixelFormat\_RGBa10p,
- PixelFormat\_RGBa12,
- PixelFormat\_RGBa12p,
- PixelFormat\_RGBa14,
- PixelFormat\_RGBa16,
- PixelFormat RGB8,
- PixelFormat\_RGB8\_Planar,
- PixelFormat\_RGB10,
- PixelFormat\_RGB10\_Planar,
- PixelFormat\_RGB10p,
- PixelFormat\_RGB10p32,
- PixelFormat\_RGB12,
- PixelFormat\_RGB12\_Planar,
- PixelFormat\_RGB12p,
- PixelFormat\_RGB14,
- PixelFormat\_RGB16,
- PixelFormat\_RGB16s,
- PixelFormat RGB32f,
- PixelFormat RGB16 Planar,
- PixelFormat RGB565p,
- PixelFormat\_BGRa10,
- PixelFormat\_BGRa10p,
- PixelFormat BGRa12,
- PixelFormat\_BGRa12p,
- PixelFormat\_BGRa14,

PixelFormat\_BGRa16, PixelFormat RGBa32f, PixelFormat BGR10, PixelFormat\_BGR10p, PixelFormat BGR12, PixelFormat BGR12p, PixelFormat BGR14. PixelFormat BGR16, PixelFormat BGR565p, PixelFormat R8. PixelFormat R10, PixelFormat\_R12, PixelFormat\_R16, PixelFormat G8, PixelFormat\_G10, PixelFormat\_G12, PixelFormat G16, PixelFormat B8. PixelFormat B10, PixelFormat B12, PixelFormat B16, PixelFormat Coord3D ABC8, PixelFormat\_Coord3D\_ABC8\_Planar, PixelFormat\_Coord3D\_ABC10p, PixelFormat Coord3D ABC10p Planar, PixelFormat\_Coord3D\_ABC12p, PixelFormat\_Coord3D\_ABC12p\_Planar, PixelFormat Coord3D ABC16, PixelFormat Coord3D ABC16 Planar. PixelFormat\_Coord3D\_ABC32f, PixelFormat\_Coord3D\_ABC32f\_Planar, PixelFormat\_Coord3D\_AC8, PixelFormat Coord3D AC8 Planar, PixelFormat\_Coord3D\_AC10p, PixelFormat\_Coord3D\_AC10p\_Planar, PixelFormat\_Coord3D\_AC12p, PixelFormat Coord3D AC12p Planar, PixelFormat\_Coord3D\_AC16, PixelFormat Coord3D AC16 Planar, PixelFormat Coord3D AC32f, PixelFormat Coord3D AC32f Planar, PixelFormat\_Coord3D\_A8, PixelFormat Coord3D A10p, PixelFormat Coord3D A12p, PixelFormat Coord3D A16, PixelFormat\_Coord3D\_A32f, PixelFormat\_Coord3D\_B8, PixelFormat Coord3D B10p, PixelFormat Coord3D B12p, PixelFormat\_Coord3D\_B16, PixelFormat\_Coord3D\_B32f, PixelFormat Coord3D C8, PixelFormat Coord3D C10p, PixelFormat\_Coord3D\_C12p, PixelFormat\_Coord3D\_C16, PixelFormat Coord3D C32f, PixelFormat\_Confidence1,

PixelFormat\_Confidence1p,

PixelFormat\_Confidence8, PixelFormat Confidence16, PixelFormat Confidence32f, PixelFormat\_BiColorBGRG8, PixelFormat\_BiColorBGRG10, PixelFormat BiColorBGRG10p, PixelFormat BiColorBGRG12, PixelFormat BiColorBGRG12p, PixelFormat BiColorRGBG8, PixelFormat BiColorRGBG10, PixelFormat BiColorRGBG10p, PixelFormat\_BiColorRGBG12, PixelFormat\_BiColorRGBG12p, PixelFormat SCF1WBWG8, PixelFormat\_SCF1WBWG10, PixelFormat\_SCF1WBWG10p, PixelFormat SCF1WBWG12, PixelFormat SCF1WBWG12p, PixelFormat\_SCF1WBWG14, PixelFormat SCF1WBWG16, PixelFormat SCF1WGWB8, PixelFormat SCF1WGWB10, PixelFormat\_SCF1WGWB10p, PixelFormat\_SCF1WGWB12, PixelFormat SCF1WGWB12p, PixelFormat\_SCF1WGWB14, PixelFormat\_SCF1WGWB16, PixelFormat SCF1WGWR8, PixelFormat SCF1WGWR10. PixelFormat SCF1WGWR10p, PixelFormat\_SCF1WGWR12, PixelFormat\_SCF1WGWR12p, PixelFormat SCF1WGWR14, PixelFormat\_SCF1WGWR16, PixelFormat\_SCF1WRWG8, PixelFormat\_SCF1WRWG10, PixelFormat SCF1WRWG10p, PixelFormat\_SCF1WRWG12, PixelFormat SCF1WRWG12p, PixelFormat SCF1WRWG14, PixelFormat SCF1WRWG16, PixelFormat\_YCbCr8\_CbYCr, PixelFormat\_YCbCr10\_CbYCr, PixelFormat YCbCr10p CbYCr, PixelFormat YCbCr12 CbYCr, PixelFormat\_YCbCr12p\_CbYCr, PixelFormat\_YCbCr411\_8\_CbYYCrYY, PixelFormat YCbCr422 8 CbYCrY, PixelFormat YCbCr422 10, PixelFormat\_YCbCr422\_10\_CbYCrY, PixelFormat\_YCbCr422\_10p, PixelFormat YCbCr422 10p CbYCrY, PixelFormat\_YCbCr422\_12, PixelFormat\_YCbCr422\_12\_CbYCrY, PixelFormat\_YCbCr422\_12p, PixelFormat\_YCbCr422\_12p\_CbYCrY, PixelFormat\_YCbCr601\_8\_CbYCr,

PixelFormat\_YCbCr601\_10\_CbYCr,

PixelFormat\_YCbCr601\_10p\_CbYCr, PixelFormat YCbCr601 12 CbYCr, PixelFormat\_YCbCr601\_12p\_CbYCr, PixelFormat\_YCbCr601\_411\_8\_CbYYCrYY, PixelFormat\_YCbCr601\_422\_8, PixelFormat YCbCr601 422 8 CbYCrY, PixelFormat YCbCr601 422 10, PixelFormat YCbCr601 422 10 CbYCrY, PixelFormat YCbCr601 422 10p, PixelFormat YCbCr601 422 10p CbYCrY, PixelFormat\_YCbCr601\_422\_12, PixelFormat\_YCbCr601\_422\_12\_CbYCrY, PixelFormat\_YCbCr601\_422\_12p, PixelFormat YCbCr601 422 12p CbYCrY, PixelFormat\_YCbCr709\_8\_CbYCr, PixelFormat\_YCbCr709\_10\_CbYCr, PixelFormat YCbCr709 10p CbYCr, PixelFormat YCbCr709 12 CbYCr, PixelFormat\_YCbCr709\_12p\_CbYCr, PixelFormat\_YCbCr709\_411\_8\_CbYYCrYY, PixelFormat YCbCr709 422 8, PixelFormat YCbCr709 422 8 CbYCrY, PixelFormat\_YCbCr709\_422\_10, PixelFormat\_YCbCr709\_422\_10\_CbYCrY, PixelFormat YCbCr709 422 10p, PixelFormat\_YCbCr709\_422\_10p\_CbYCrY, PixelFormat\_YCbCr709\_422\_12, PixelFormat YCbCr709 422 12 CbYCrY, PixelFormat YCbCr709 422 12p. PixelFormat YCbCr709 422 12p CbYCrY, PixelFormat\_YUV8\_UYV, PixelFormat\_YUV411\_8\_UYYVYY, PixelFormat YUV422 8, PixelFormat\_YUV422\_8\_UYVY, PixelFormat\_Polarized8, PixelFormat\_Polarized10p, PixelFormat Polarized12p, PixelFormat\_Polarized16, PixelFormat BayerRGPolarized8, PixelFormat BayerRGPolarized10p, PixelFormat BayerRGPolarized12p, PixelFormat BayerRGPolarized16, PixelFormat LLCMono8, PixelFormat LLCBayerRG8, PixelFormat JPEGMono8, PixelFormat\_JPEGColor8, PixelFormat\_Raw16, PixelFormat Raw8, PixelFormat\_R12\_Jpeg, PixelFormat\_GR12\_Jpeg, PixelFormat GB12 Jpeg, PixelFormat B12 Jpeg, UNKNOWN PIXELFORMAT, NUM\_PIXELFORMAT } • enum spinDecimationVerticalModeEnums {

- enum spinDecimationVerticalModeEnums {
   DecimationVerticalMode\_Discard,
   NUM\_DECIMATIONVERTICALMODE }
- enum spinLineModeEnums {

```
LineMode_Input,
 LineMode Output,
 NUM LINEMODE }
enum spinLineSourceEnums {
 LineSource Off,
 LineSource Line0,
 LineSource Line1,
 LineSource Line2,
 LineSource Line3,
 LineSource_UserOutput0,
 LineSource_UserOutput1,
 LineSource UserOutput2,
 LineSource_UserOutput3,
 LineSource_Counter0Active,
 LineSource_Counter1Active,
 LineSource LogicBlock0,
 LineSource LogicBlock1,
 LineSource ExposureActive,
 LineSource FrameTriggerWait,
 LineSource SerialPort0.
 LineSource_PPSSignal,
 LineSource AllPixel,
 LineSource AnyPixel,
 NUM_LINESOURCE }

    enum spinLineInputFilterSelectorEnums {

 LineInputFilterSelector Dealitch.
 LineInputFilterSelector Debounce,
 NUM LINEINPUTFILTERSELECTOR }

    enum spinUserOutputSelectorEnums {

 UserOutputSelector UserOutput0,
 UserOutputSelector_UserOutput1,
 UserOutputSelector UserOutput2,
 UserOutputSelector_UserOutput3,
 NUM_USEROUTPUTSELECTOR }
enum spinLineFormatEnums {
 LineFormat NoConnect,
 LineFormat TriState,
 LineFormat TTL.
 LineFormat LVDS,
 LineFormat_RS422,
 LineFormat OptoCoupled,
 LineFormat OpenDrain,
 NUM_LINEFORMAT }
• enum spinLineSelectorEnums {
 LineSelector Line0,
 LineSelector Line1,
 LineSelector Line2,
 LineSelector_Line3,
 NUM_LINESELECTOR }

    enum spinExposureActiveModeEnums {

 ExposureActiveMode_Line1,
 ExposureActiveMode_AnyPixels,
 ExposureActiveMode AllPixels,
 NUM EXPOSUREACTIVEMODE }

    enum spinCounterTriggerActivationEnums {

 CounterTriggerActivation LevelLow,
 CounterTriggerActivation_LevelHigh,
```

CounterTriggerActivation\_FallingEdge,

CounterTriggerActivation AnyEdge, NUM COUNTERTRIGGERACTIVATION } enum spinCounterSelectorEnums { CounterSelector Counter0, CounterSelector Counter1, NUM COUNTERSELECTOR } enum spinCounterStatusEnums { CounterStatus CounterIdle, CounterStatus\_CounterTriggerWait, CounterStatus\_CounterActive, CounterStatus\_CounterCompleted, CounterStatus CounterOverflow, NUM COUNTERSTATUS } enum spinCounterTriggerSourceEnums { CounterTriggerSource\_Off, CounterTriggerSource\_Line0, CounterTriggerSource Line1, CounterTriggerSource\_Line2, CounterTriggerSource\_Line3, CounterTriggerSource\_UserOutput0, CounterTriggerSource UserOutput1, CounterTriggerSource UserOutput2, CounterTriggerSource UserOutput3, CounterTriggerSource Counter0Start, CounterTriggerSource Counter1Start, CounterTriggerSource\_Counter0End, CounterTriggerSource Counter1End, CounterTriggerSource LogicBlock0, CounterTriggerSource LogicBlock1, CounterTriggerSource\_ExposureStart, CounterTriggerSource\_ExposureEnd, CounterTriggerSource\_FrameTriggerWait, NUM COUNTERTRIGGERSOURCE } enum spinCounterResetSourceEnums { CounterResetSource Off, CounterResetSource\_Line0, CounterResetSource\_Line1, CounterResetSource Line2, CounterResetSource\_Line3, CounterResetSource\_UserOutput0, CounterResetSource UserOutput1, CounterResetSource UserOutput2. CounterResetSource\_UserOutput3, CounterResetSource Counter0Start, CounterResetSource Counter1Start, CounterResetSource Counter0End, CounterResetSource\_Counter1End, CounterResetSource\_LogicBlock0, CounterResetSource LogicBlock1, CounterResetSource\_ExposureStart, CounterResetSource\_ExposureEnd, CounterResetSource FrameTriggerWait, NUM COUNTERRESETSOURCE } enum spinCounterEventSourceEnums { CounterEventSource Off, CounterEventSource MHzTick, CounterEventSource\_Line0,

CounterTriggerActivation\_RisingEdge,

```
CounterEventSource_Line1,
 CounterEventSource Line2,
 CounterEventSource Line3,
 CounterEventSource_UserOutput0,
 CounterEventSource_UserOutput1,
 CounterEventSource UserOutput2,
 CounterEventSource UserOutput3.
 CounterEventSource Counter0Start,
 CounterEventSource Counter1Start,
 CounterEventSource Counter0End,
 CounterEventSource_Counter1End,
 CounterEventSource_LogicBlock0,
 CounterEventSource_LogicBlock1,
 CounterEventSource ExposureStart,
 CounterEventSource_ExposureEnd,
 CounterEventSource_FrameTriggerWait,
 NUM COUNTEREVENTSOURCE }

    enum spinCounterEventActivationEnums {

 CounterEventActivation LevelLow,
 CounterEventActivation LevelHigh,
 CounterEventActivation_FallingEdge,
 CounterEventActivation_RisingEdge,
 CounterEventActivation_AnyEdge,
 NUM_COUNTEREVENTACTIVATION }
 enum spinCounterResetActivationEnums {
 CounterResetActivation LevelLow,
 CounterResetActivation LevelHigh,
 CounterResetActivation FallingEdge,
 CounterResetActivation_RisingEdge,
 CounterResetActivation AnyEdge,
 NUM_COUNTERRESETACTIVATION }
enum spinDeviceTypeEnums {
 DeviceType Transmitter,
 DeviceType Receiver,
 DeviceType_Transceiver,
 DeviceType Peripheral,
 NUM DEVICETYPE }

    enum spinDeviceConnectionStatusEnums {

 DeviceConnectionStatus Active,
 DeviceConnectionStatus Inactive,
 NUM DEVICECONNECTIONSTATUS }

    enum spinDeviceLinkThroughputLimitModeEnums {

 DeviceLinkThroughputLimitMode_On,
 DeviceLinkThroughputLimitMode_Off,
 NUM_DEVICELINKTHROUGHPUTLIMITMODE }

    enum spinDeviceLinkHeartbeatModeEnums {

 DeviceLinkHeartbeatMode On.
 DeviceLinkHeartbeatMode Off,
 NUM_DEVICELINKHEARTBEATMODE }

    enum spinDeviceStreamChannelTypeEnums {

 DeviceStreamChannelType_Transmitter,
 DeviceStreamChannelType Receiver,
 NUM DEVICESTREAMCHANNELTYPE }
• enum spinDeviceStreamChannelEndiannessEnums {
 DeviceStreamChannelEndianness Big.
 DeviceStreamChannelEndianness_Little,
 NUM DEVICESTREAMCHANNELENDIANNESS }
```

```
    enum spinDeviceClockSelectorEnums {

 DeviceClockSelector Sensor,
 DeviceClockSelector SensorDigitization,
 DeviceClockSelector_CameraLink,
 NUM DEVICECLOCKSELECTOR }

    enum spinDeviceSerialPortSelectorEnums {

 DeviceSerialPortSelector CameraLink.
 NUM_DEVICESERIALPORTSELECTOR }

    enum spinDeviceSerialPortBaudRateEnums {

 DeviceSerialPortBaudRate_Baud9600,
 DeviceSerialPortBaudRate Baud19200,
 DeviceSerialPortBaudRate Baud38400,
 DeviceSerialPortBaudRate Baud57600,
 DeviceSerialPortBaudRate Baud115200,
 DeviceSerialPortBaudRate Baud230400.
 DeviceSerialPortBaudRate Baud460800,
 DeviceSerialPortBaudRate Baud921600,
 NUM DEVICESERIALPORTBAUDRATE }
enum spinSensorTapsEnums {
 SensorTaps One,
 SensorTaps Two,
 SensorTaps Three,
 SensorTaps Four,
 SensorTaps_Eight,
 SensorTaps_Ten,
 NUM SENSORTAPS }

    enum spinSensorDigitizationTapsEnums {

 SensorDigitizationTaps_One,
 SensorDigitizationTaps Two,
 SensorDigitizationTaps Three,
 SensorDigitizationTaps Four,
 SensorDigitizationTaps_Eight,
 SensorDigitizationTaps_Ten,
 NUM SENSORDIGITIZATIONTAPS }

    enum spinRegionSelectorEnums {

 RegionSelector_Region0,
 RegionSelector Region1,
 RegionSelector Region2,
 RegionSelector_All,
 NUM_REGIONSELECTOR }
• enum spinRegionModeEnums {
 RegionMode Off,
 RegionMode On,
 NUM REGIONMODE }

    enum spinRegionDestinationEnums {

 RegionDestination Stream0,
 RegionDestination Stream1,
 RegionDestination Stream2,
 NUM REGIONDESTINATION }
 enum spinImageComponentSelectorEnums {
 ImageComponentSelector Intensity.
 ImageComponentSelector Color,
 ImageComponentSelector Infrared,
 ImageComponentSelector Ultraviolet,
 ImageComponentSelector Range,
 ImageComponentSelector_Disparity,
```

ImageComponentSelector\_Confidence,

ImageComponentSelector\_Scatter,
NUM IMAGECOMPONENTSELECTOR }

enum spinPixelFormatInfoSelectorEnums {

PixelFormatInfoSelector Mono1p,

PixelFormatInfoSelector Mono2p,

PixelFormatInfoSelector Mono4p,

PixelFormatInfoSelector Mono8,

PixelFormatInfoSelector\_Mono8s,

PixelFormatInfoSelector Mono10,

PixelFormatInfoSelector Mono10p.

PixelFormatInfoSelector Mono12,

PixelFormatInfoSelector Mono12p,

PixelFormatInfoSelector Mono14,

PixelFormatInfoSelector Mono16,

PixelFormatInfoSelector Mono16s,

PixelFormatInfoSelector Mono32f,

PixelFormatInfoSelector BayerBG8,

PixelFormatInfoSelector BayerBG10,

PixelFormatInfoSelector BayerBG10p,

PixelFormatInfoSelector BayerBG12,

PixelFormatInfoSelector BayerBG12p.

PixelFormatInfoSelector BayerBG16,

PixelFormatInfoSelector BayerGB8,

PixelFormatInfoSelector BayerGB10,

PixelFormatInfoSelector BayerGB10p,

PixelFormatInfoSelector\_BayerGB12,

PixelFormatInfoSelector\_BayerGB12p,

PixelFormatInfoSelector\_BayerGB16,

PixelFormatInfoSelector BayerGR8,

PixelFormatInfoSelector BayerGR10,

PixelFormatInfoSelector BayerGR10p,

PixelFormatInfoSelector BayerGR12,

PixelFormatInfoSelector\_BayerGR12p,

PixelFormatInfoSelector BayerGR16,

PixelFormatInfoSelector BayerRG8,

PixelFormatInfoSelector BayerRG10,

PixelFormatInfoSelector BayerRG10p,

PixelFormatInfoSelector\_BayerRG12,

 $Pixel Format Info Selector\_Bayer RG 12p,\\$ 

PixelFormatInfoSelector BayerRG16,

PixelFormatInfoSelector\_RGBa8,

PixelFormatInfoSelector RGBa10,

PixelFormatInfoSelector RGBa10p,

PixelFormatInfoSelector RGBa12,

 $Pixel Format Info Selector\_RGBa12p,\\$ 

 ${\bf Pixel Format Info Selector\_RGBa14,}$ 

PixelFormatInfoSelector\_RGBa16,

PixelFormatInfoSelector\_RGB8,

PixelFormatInfoSelector\_RGB8\_Planar, PixelFormatInfoSelector\_RGB10,

PixelFormatInfoSelector RGB10 Planar,

PixelFormatInfoSelector RGB10p.

PixelFormatInfoSelector RGB10p32,

PixelFormatInfoSelector\_RGB12,

PixelFormatInfoSelector\_RGB12\_Planar,

PixelFormatInfoSelector RGB12p,

PixelFormatInfoSelector\_RGB14,

PixelFormatInfoSelector\_RGB16,

PixelFormatInfoSelector RGB16s, PixelFormatInfoSelector RGB32f, PixelFormatInfoSelector RGB16 Planar, PixelFormatInfoSelector RGB565p, PixelFormatInfoSelector BGRa8, PixelFormatInfoSelector BGRa10, PixelFormatInfoSelector BGRa10p. PixelFormatInfoSelector BGRa12, PixelFormatInfoSelector BGRa12p, PixelFormatInfoSelector BGRa14. PixelFormatInfoSelector BGRa16. PixelFormatInfoSelector\_RGBa32f, PixelFormatInfoSelector BGR8, PixelFormatInfoSelector BGR10, PixelFormatInfoSelector BGR10p, PixelFormatInfoSelector\_BGR12, PixelFormatInfoSelector BGR12p, PixelFormatInfoSelector BGR14. PixelFormatInfoSelector BGR16, PixelFormatInfoSelector BGR565p, PixelFormatInfoSelector R8, PixelFormatInfoSelector R10. PixelFormatInfoSelector R12, PixelFormatInfoSelector R16, PixelFormatInfoSelector G8, PixelFormatInfoSelector G10, PixelFormatInfoSelector G12, PixelFormatInfoSelector G16. PixelFormatInfoSelector B8. PixelFormatInfoSelector B10. PixelFormatInfoSelector B12, PixelFormatInfoSelector B16, PixelFormatInfoSelector Coord3D ABC8, PixelFormatInfoSelector Coord3D ABC8 Planar, PixelFormatInfoSelector\_Coord3D\_ABC10p, PixelFormatInfoSelector\_Coord3D\_ABC10p\_Planar, PixelFormatInfoSelector Coord3D ABC12p, PixelFormatInfoSelector\_Coord3D\_ABC12p\_Planar, PixelFormatInfoSelector Coord3D ABC16, PixelFormatInfoSelector Coord3D ABC16 Planar, PixelFormatInfoSelector Coord3D ABC32f, PixelFormatInfoSelector Coord3D ABC32f Planar, PixelFormatInfoSelector Coord3D AC8, PixelFormatInfoSelector Coord3D AC8 Planar, PixelFormatInfoSelector Coord3D AC10p, PixelFormatInfoSelector\_Coord3D\_AC10p\_Planar, PixelFormatInfoSelector\_Coord3D\_AC12p, PixelFormatInfoSelector Coord3D AC12p Planar, PixelFormatInfoSelector Coord3D AC16, PixelFormatInfoSelector Coord3D AC16 Planar, PixelFormatInfoSelector Coord3D AC32f, PixelFormatInfoSelector Coord3D AC32f Planar, PixelFormatInfoSelector Coord3D A8, PixelFormatInfoSelector\_Coord3D\_A10p, PixelFormatInfoSelector\_Coord3D\_A12p, PixelFormatInfoSelector Coord3D A16, PixelFormatInfoSelector Coord3D A32f,

PixelFormatInfoSelector\_Coord3D\_B8,

PixelFormatInfoSelector\_Coord3D\_B10p, PixelFormatInfoSelector Coord3D B12p, PixelFormatInfoSelector Coord3D B16, PixelFormatInfoSelector Coord3D B32f, PixelFormatInfoSelector Coord3D C8, PixelFormatInfoSelector Coord3D C10p, PixelFormatInfoSelector Coord3D C12p. PixelFormatInfoSelector Coord3D C16, PixelFormatInfoSelector Coord3D C32f, PixelFormatInfoSelector Confidence1, PixelFormatInfoSelector Confidence1p, PixelFormatInfoSelector\_Confidence8, PixelFormatInfoSelector\_Confidence16, PixelFormatInfoSelector Confidence32f, PixelFormatInfoSelector\_BiColorBGRG8, PixelFormatInfoSelector\_BiColorBGRG10, PixelFormatInfoSelector BiColorBGRG10p, PixelFormatInfoSelector BiColorBGRG12, PixelFormatInfoSelector BiColorBGRG12p, PixelFormatInfoSelector BiColorRGBG8, PixelFormatInfoSelector BiColorRGBG10, PixelFormatInfoSelector BiColorRGBG10p. PixelFormatInfoSelector\_BiColorRGBG12, PixelFormatInfoSelector BiColorRGBG12p, PixelFormatInfoSelector SCF1WBWG8, PixelFormatInfoSelector SCF1WBWG10, PixelFormatInfoSelector\_SCF1WBWG10p, PixelFormatInfoSelector\_SCF1WBWG12, PixelFormatInfoSelector SCF1WBWG12p. PixelFormatInfoSelector SCF1WBWG14. PixelFormatInfoSelector\_SCF1WBWG16, PixelFormatInfoSelector SCF1WGWB8, PixelFormatInfoSelector SCF1WGWB10, PixelFormatInfoSelector\_SCF1WGWB10p, PixelFormatInfoSelector\_SCF1WGWB12, PixelFormatInfoSelector\_SCF1WGWB12p, PixelFormatInfoSelector SCF1WGWB14, PixelFormatInfoSelector\_SCF1WGWB16, PixelFormatInfoSelector SCF1WGWR8, PixelFormatInfoSelector SCF1WGWR10, PixelFormatInfoSelector SCF1WGWR10p, PixelFormatInfoSelector SCF1WGWR12, PixelFormatInfoSelector SCF1WGWR12p, PixelFormatInfoSelector SCF1WGWR14, PixelFormatInfoSelector\_SCF1WGWR16, PixelFormatInfoSelector\_SCF1WRWG8, PixelFormatInfoSelector\_SCF1WRWG10, PixelFormatInfoSelector SCF1WRWG10p, PixelFormatInfoSelector SCF1WRWG12, PixelFormatInfoSelector SCF1WRWG12p, PixelFormatInfoSelector SCF1WRWG14, PixelFormatInfoSelector SCF1WRWG16, PixelFormatInfoSelector YCbCr8, PixelFormatInfoSelector\_YCbCr8\_CbYCr, PixelFormatInfoSelector\_YCbCr10\_CbYCr, PixelFormatInfoSelector\_YCbCr10p\_CbYCr, PixelFormatInfoSelector\_YCbCr12\_CbYCr,

PixelFormatInfoSelector\_YCbCr12p\_CbYCr,

PixelFormatInfoSelector\_YCbCr411\_8, PixelFormatInfoSelector YCbCr411 8 CbYYCrYY, PixelFormatInfoSelector YCbCr422 8, PixelFormatInfoSelector\_YCbCr422\_8\_CbYCrY, PixelFormatInfoSelector\_YCbCr422\_10, PixelFormatInfoSelector YCbCr422 10 CbYCrY, PixelFormatInfoSelector YCbCr422 10p. PixelFormatInfoSelector YCbCr422 10p CbYCrY, PixelFormatInfoSelector YCbCr422 12, PixelFormatInfoSelector YCbCr422 12 CbYCrY, PixelFormatInfoSelector\_YCbCr422\_12p, PixelFormatInfoSelector\_YCbCr422\_12p\_CbYCrY, PixelFormatInfoSelector\_YCbCr601\_8\_CbYCr, PixelFormatInfoSelector YCbCr601 10 CbYCr, PixelFormatInfoSelector\_YCbCr601\_10p\_CbYCr, PixelFormatInfoSelector\_YCbCr601\_12\_CbYCr, PixelFormatInfoSelector YCbCr601 12p CbYCr, PixelFormatInfoSelector YCbCr601 411 8 CbYYCrYY, PixelFormatInfoSelector\_YCbCr601\_422\_8, PixelFormatInfoSelector YCbCr601 422 8 CbYCrY, PixelFormatInfoSelector YCbCr601 422 10, PixelFormatInfoSelector YCbCr601 422 10 CbYCrY. PixelFormatInfoSelector\_YCbCr601\_422\_10p, PixelFormatInfoSelector\_YCbCr601\_422\_10p\_CbYCrY, PixelFormatInfoSelector YCbCr601 422 12, PixelFormatInfoSelector\_YCbCr601\_422\_12\_CbYCrY, PixelFormatInfoSelector\_YCbCr601\_422\_12p, PixelFormatInfoSelector YCbCr601 422 12p CbYCrY, PixelFormatInfoSelector YCbCr709 8 CbYCr. PixelFormatInfoSelector YCbCr709 10 CbYCr, PixelFormatInfoSelector\_YCbCr709\_10p\_CbYCr, PixelFormatInfoSelector\_YCbCr709\_12\_CbYCr, PixelFormatInfoSelector YCbCr709 12p CbYCr, PixelFormatInfoSelector\_YCbCr709\_411\_8\_CbYYCrYY, PixelFormatInfoSelector\_YCbCr709\_422\_8, PixelFormatInfoSelector\_YCbCr709\_422\_8\_CbYCrY, PixelFormatInfoSelector YCbCr709 422 10, PixelFormatInfoSelector\_YCbCr709\_422\_10\_CbYCrY, PixelFormatInfoSelector\_YCbCr709\_422\_10p, PixelFormatInfoSelector YCbCr709 422 10p CbYCrY, PixelFormatInfoSelector YCbCr709 422 12, PixelFormatInfoSelector\_YCbCr709\_422\_12\_CbYCrY, PixelFormatInfoSelector YCbCr709 422 12p, PixelFormatInfoSelector YCbCr709 422 12p CbYCrY, PixelFormatInfoSelector YUV8 UYV, PixelFormatInfoSelector\_YUV411\_8\_UYYVYY, PixelFormatInfoSelector\_YUV422\_8, PixelFormatInfoSelector YUV422 8 UYVY, PixelFormatInfoSelector Polarized8, PixelFormatInfoSelector Polarized10p, PixelFormatInfoSelector Polarized12p, PixelFormatInfoSelector Polarized16, PixelFormatInfoSelector BaverRGPolarized8. PixelFormatInfoSelector\_BayerRGPolarized10p, PixelFormatInfoSelector\_BayerRGPolarized12p, PixelFormatInfoSelector BayerRGPolarized16, PixelFormatInfoSelector LLCMono8, PixelFormatInfoSelector\_LLCBayerRG8,

```
PixelFormatInfoSelector_JPEGMono8,
 PixelFormatInfoSelector JPEGColor8,
 NUM PIXELFORMATINFOSELECTOR }
• enum spinDeinterlacingEnums {
 Deinterlacing Off,
 Deinterlacing LineDuplication,
 Deinterlacing_Weave,
 NUM DEINTERLACING }

    enum spinImageCompressionRateOptionEnums {

 ImageCompressionRateOption_FixBitrate,
 ImageCompressionRateOption FixQuality,
 NUM_IMAGECOMPRESSIONRATEOPTION }

    enum spinImageCompressionJPEGFormatOptionEnums {

 ImageCompressionJPEGFormatOption Lossless,
 ImageCompressionJPEGFormatOption BaselineStandard,
 ImageCompressionJPEGFormatOption BaselineOptimized,
 ImageCompressionJPEGFormatOption Progressive,
 NUM IMAGECOMPRESSIONJPEGFORMATOPTION }

    enum spinAcquisitionStatusSelectorEnums {

 AcquisitionStatusSelector_AcquisitionTriggerWait,
 AcquisitionStatusSelector_AcquisitionActive,
 AcquisitionStatusSelector_AcquisitionTransfer,
 AcquisitionStatusSelector_FrameTriggerWait,
 AcquisitionStatusSelector FrameActive,
 AcquisitionStatusSelector ExposureActive,
 NUM ACQUISITIONSTATUSSELECTOR }

    enum spinExposureTimeModeEnums {

 ExposureTimeMode_Common,
 ExposureTimeMode_Individual,
 NUM EXPOSURETIMEMODE }
enum spinExposureTimeSelectorEnums {
 ExposureTimeSelector_Common,
 ExposureTimeSelector Red,
 ExposureTimeSelector Green,
 ExposureTimeSelector Blue,
 ExposureTimeSelector Cyan,
 ExposureTimeSelector_Magenta,
 ExposureTimeSelector_Yellow,
 ExposureTimeSelector_Infrared,
 ExposureTimeSelector Ultraviolet,
 ExposureTimeSelector Stage1,
 ExposureTimeSelector_Stage2,
 NUM_EXPOSURETIMESELECTOR }

    enum spinGainAutoBalanceEnums {

 GainAutoBalance Off,
 GainAutoBalance Once,
 GainAutoBalance_Continuous,
 NUM_GAINAUTOBALANCE }

    enum spinBlackLevelAutoEnums {

 BlackLevelAuto Off,
 BlackLevelAuto_Once,
 BlackLevelAuto Continuous,
 NUM BLACKLEVELAUTO }

    enum spinBlackLevelAutoBalanceEnums {

 BlackLevelAutoBalance Off,
 BlackLevelAutoBalance Once.
 BlackLevelAutoBalance_Continuous,
 NUM BLACKLEVELAUTOBALANCE }
```

```
• enum spinWhiteClipSelectorEnums {
 WhiteClipSelector All,
 WhiteClipSelector Red,
 WhiteClipSelector_Green,
 WhiteClipSelector_Blue,
 WhiteClipSelector Y,
 WhiteClipSelector U.
 WhiteClipSelector V,
 WhiteClipSelector Tap1,
 WhiteClipSelector Tap2.
 NUM WHITECLIPSELECTOR }
 enum spinTimerSelectorEnums {
 TimerSelector_Timer0,
 TimerSelector Timer1,
 TimerSelector Timer2,
 NUM TIMERSELECTOR }

    enum spinTimerStatusEnums {

 TimerStatus_TimerIdle,
 TimerStatus_TimerTriggerWait,
 TimerStatus_TimerActive,
 TimerStatus TimerCompleted,
 NUM_TIMERSTATUS }
 enum spinTimerTriggerSourceEnums {
 TimerTriggerSource Off,
 TimerTriggerSource AcquisitionTrigger,
 TimerTriggerSource_AcquisitionStart,
 TimerTriggerSource_AcquisitionEnd,
 TimerTriggerSource_FrameTrigger,
 TimerTriggerSource_FrameStart,
 TimerTriggerSource FrameEnd,
 TimerTriggerSource FrameBurstStart,
 TimerTriggerSource FrameBurstEnd,
 TimerTriggerSource LineTrigger,
 TimerTriggerSource LineStart,
 TimerTriggerSource LineEnd,
 TimerTriggerSource ExposureStart,
 TimerTriggerSource ExposureEnd,
 TimerTriggerSource_Line0,
 TimerTriggerSource_Line1,
 TimerTriggerSource Line2,
 TimerTriggerSource UserOutput0.
 TimerTriggerSource UserOutput1,
 TimerTriggerSource UserOutput2,
 TimerTriggerSource Counter0Start,
 TimerTriggerSource_Counter1Start,
 TimerTriggerSource_Counter2Start,
 TimerTriggerSource_Counter0End,
 TimerTriggerSource Counter1End,
 TimerTriggerSource_Counter2End,
 TimerTriggerSource_Timer0Start,
 TimerTriggerSource Timer1Start,
 TimerTriggerSource Timer2Start,
 TimerTriggerSource Timer0End,
 TimerTriggerSource Timer1End,
 TimerTriggerSource Timer2End,
 TimerTriggerSource Encoder0,
 TimerTriggerSource Encoder1,
 TimerTriggerSource_Encoder2,
```

```
TimerTriggerSource_SoftwareSignal0,
 TimerTriggerSource SoftwareSignal1,
 TimerTriggerSource_SoftwareSignal2,
 TimerTriggerSource_Action0,
 TimerTriggerSource_Action1,
 TimerTriggerSource Action2,
 TimerTriggerSource_LinkTrigger0,
 TimerTriggerSource LinkTrigger1,
 TimerTriggerSource LinkTrigger2,
 NUM TIMERTRIGGERSOURCE }

    enum spinTimerTriggerActivationEnums {

 TimerTriggerActivation RisingEdge,
 TimerTriggerActivation FallingEdge,
 TimerTriggerActivation_AnyEdge,
 TimerTriggerActivation_LevelHigh,
 TimerTriggerActivation LevelLow,
 NUM TIMERTRIGGERACTIVATION }
 enum spinEncoderSelectorEnums {
 EncoderSelector Encoder0,
 EncoderSelector_Encoder1,
 EncoderSelector Encoder2,
 NUM ENCODERSELECTOR }
enum spinEncoderSourceAEnums {
 EncoderSourceA_Off,
 EncoderSourceA Line0.
 EncoderSourceA Line1,
 EncoderSourceA_Line2,
 NUM ENCODERSOURCEA }
enum spinEncoderSourceBEnums {
 EncoderSourceB Off,
 EncoderSourceB Line0,
 EncoderSourceB_Line1,
 EncoderSourceB_Line2,
 NUM ENCODERSOURCEB }
enum spinEncoderModeEnums {
 EncoderMode FourPhase,
 EncoderMode HighResolution,
 NUM ENCODERMODE }

    enum spinEncoderOutputModeEnums {

 EncoderOutputMode Off,
 EncoderOutputMode_PositionUp,
 EncoderOutputMode PositionDown,
 EncoderOutputMode DirectionUp.
 EncoderOutputMode DirectionDown,
 EncoderOutputMode_Motion,
 NUM_ENCODEROUTPUTMODE }

    enum spinEncoderStatusEnums {

 EncoderStatus EncoderUp,
 EncoderStatus EncoderDown,
 EncoderStatus EncoderIdle,
 EncoderStatus_EncoderStatic,
 NUM ENCODERSTATUS }

    enum spinEncoderResetSourceEnums {

 EncoderResetSource Off,
 EncoderResetSource AcquisitionTrigger,
 EncoderResetSource AcquisitionStart,
 EncoderResetSource_AcquisitionEnd,
 EncoderResetSource_FrameTrigger,
```

EncoderResetSource FrameStart, EncoderResetSource FrameEnd, EncoderResetSource ExposureStart, EncoderResetSource\_ExposureEnd, EncoderResetSource Line0, EncoderResetSource Line1, EncoderResetSource Line2. EncoderResetSource Counter0Start, EncoderResetSource Counter1Start, EncoderResetSource Counter2Start, EncoderResetSource\_Counter0End, EncoderResetSource\_Counter1End, EncoderResetSource\_Counter2End, EncoderResetSource Timer0Start, EncoderResetSource Timer1Start, EncoderResetSource\_Timer2Start, EncoderResetSource Timer0End, EncoderResetSource\_Timer1End, EncoderResetSource\_Timer2End, EncoderResetSource UserOutput0, EncoderResetSource UserOutput1, EncoderResetSource UserOutput2. EncoderResetSource\_SoftwareSignal0, EncoderResetSource SoftwareSignal1, EncoderResetSource SoftwareSignal2, EncoderResetSource\_Action0, EncoderResetSource\_Action1, EncoderResetSource Action2, EncoderResetSource LinkTrigger0. EncoderResetSource LinkTrigger1. EncoderResetSource\_LinkTrigger2, NUM\_ENCODERRESETSOURCE } enum spinEncoderResetActivationEnums { EncoderResetActivation RisingEdge, EncoderResetActivation FallingEdge, EncoderResetActivation AnyEdge, EncoderResetActivation LevelHigh, EncoderResetActivation LevelLow, NUM ENCODERRESETACTIVATION } enum spinSoftwareSignalSelectorEnums { SoftwareSignalSelector\_SoftwareSignal0, SoftwareSignalSelector\_SoftwareSignal1, SoftwareSignalSelector SoftwareSignal2, NUM\_SOFTWARESIGNALSELECTOR } enum spinActionUnconditionalModeEnums { ActionUnconditionalMode Off. ActionUnconditionalMode On, NUM ACTIONUNCONDITIONALMODE } enum spinSourceSelectorEnums { SourceSelector Source0, SourceSelector\_Source1, SourceSelector\_Source2, SourceSelector All, NUM SOURCESELECTOR } enum spinTransferSelectorEnums { TransferSelector Stream0. TransferSelector\_Stream1, TransferSelector\_Stream2,

```
TransferSelector_All,
 NUM TRANSFERSELECTOR }
 enum spinTransferTriggerSelectorEnums {
 TransferTriggerSelector TransferStart,
 TransferTriggerSelector TransferStop,
 TransferTriggerSelector TransferAbort,
 TransferTriggerSelector TransferPause,
 TransferTriggerSelector TransferResume,
 TransferTriggerSelector_TransferActive,
 TransferTriggerSelector TransferBurstStart,
 TransferTriggerSelector_TransferBurstStop,
 NUM TRANSFERTRIGGERSELECTOR }
 enum spinTransferTriggerModeEnums {
 TransferTriggerMode Off,
 TransferTriggerMode On,
 NUM TRANSFERTRIGGERMODE }
enum spinTransferTriggerSourceEnums {
 TransferTriggerSource_Line0,
 TransferTriggerSource Line1,
 TransferTriggerSource Line2,
 TransferTriggerSource_Counter0Start,
 TransferTriggerSource_Counter1Start,
 TransferTriggerSource Counter2Start,
 TransferTriggerSource Counter0End,
 TransferTriggerSource Counter1End,
 TransferTriggerSource Counter2End,
 TransferTriggerSource Timer0Start,
 TransferTriggerSource_Timer1Start,
 TransferTriggerSource_Timer2Start,
 TransferTriggerSource_Timer0End,
 TransferTriggerSource Timer1End,
 TransferTriggerSource_Timer2End,
 TransferTriggerSource_SoftwareSignal0,
 TransferTriggerSource SoftwareSignal1,
 TransferTriggerSource SoftwareSignal2,
 TransferTriggerSource_Action0,
 TransferTriggerSource Action1,
 TransferTriggerSource Action2,
 NUM TRANSFERTRIGGERSOURCE }
 enum spinTransferTriggerActivationEnums {
 TransferTriggerActivation RisingEdge,
 TransferTriggerActivation_FallingEdge,
 TransferTriggerActivation AnyEdge,
 TransferTriggerActivation LevelHigh,
 TransferTriggerActivation LevelLow.
 NUM_TRANSFERTRIGGERACTIVATION }

    enum spinTransferStatusSelectorEnums {

 TransferStatusSelector_Streaming,
 TransferStatusSelector_Paused,
 TransferStatusSelector Stopping,
 TransferStatusSelector_Stopped,
 TransferStatusSelector_QueueOverflow,
 NUM TRANSFERSTATUSSELECTOR }
 enum spinTransferComponentSelectorEnums {
 TransferComponentSelector Red,
 TransferComponentSelector Green.
 TransferComponentSelector_Blue,
 TransferComponentSelector All,
```

```
NUM_TRANSFERCOMPONENTSELECTOR }

    enum spinScan3dDistanceUnitEnums {

 Scan3dDistanceUnit_Millimeter,
 Scan3dDistanceUnit_Inch,
 NUM SCAN3DDISTANCEUNIT }

    enum spinScan3dCoordinateSystemEnums {

 Scan3dCoordinateSystem Cartesian.
 Scan3dCoordinateSystem Spherical,
 Scan3dCoordinateSystem Cylindrical,
 NUM SCAN3DCOORDINATESYSTEM }
 enum spinScan3dOutputModeEnums {
 Scan3dOutputMode UncalibratedC,
 Scan3dOutputMode CalibratedABC Grid,
 Scan3dOutputMode CalibratedABC PointCloud.
 Scan3dOutputMode CalibratedAC,
 Scan3dOutputMode CalibratedAC Linescan,
 Scan3dOutputMode CalibratedC.
 Scan3dOutputMode CalibratedC Linescan,
 Scan3dOutputMode_RectifiedC,
 Scan3dOutputMode_RectifiedC_Linescan,
 Scan3dOutputMode DisparityC,
 Scan3dOutputMode_DisparityC_Linescan,
 NUM_SCAN3DOUTPUTMODE }
 enum spinScan3dCoordinateSystemReferenceEnums {
 Scan3dCoordinateSystemReference Anchor,
 Scan3dCoordinateSystemReference Transformed,
 NUM SCAN3DCOORDINATESYSTEMREFERENCE }
 enum spinScan3dCoordinateSelectorEnums {
 Scan3dCoordinateSelector CoordinateA,
 Scan3dCoordinateSelector CoordinateB,
 Scan3dCoordinateSelector CoordinateC,
 NUM_SCAN3DCOORDINATESELECTOR }

    enum spinScan3dCoordinateTransformSelectorEnums {

 Scan3dCoordinateTransformSelector RotationX,
 Scan3dCoordinateTransformSelector RotationY,
 Scan3dCoordinateTransformSelector RotationZ.
 Scan3dCoordinateTransformSelector TranslationX,
 Scan3dCoordinateTransformSelector TranslationY,
 Scan3dCoordinateTransformSelector TranslationZ,
 NUM SCAN3DCOORDINATETRANSFORMSELECTOR }
 enum spinScan3dCoordinateReferenceSelectorEnums {
 Scan3dCoordinateReferenceSelector RotationX.
 Scan3dCoordinateReferenceSelector RotationY,
 Scan3dCoordinateReferenceSelector RotationZ,
 Scan3dCoordinateReferenceSelector TranslationX,
 Scan3dCoordinateReferenceSelector TranslationY,
 Scan3dCoordinateReferenceSelector TranslationZ,
 NUM SCAN3DCOORDINATEREFERENCESELECTOR }
```

enum spinChunkImageComponentEnums { ChunkImageComponent\_Intensity, ChunkImageComponent Color, ChunkImageComponent Infrared. ChunkImageComponent Ultraviolet, ChunkImageComponent Range, ChunkImageComponent Disparity, ChunkImageComponent Confidence, ChunkImageComponent Scatter, NUM CHUNKIMAGECOMPONENT }

```
enum spinChunkCounterSelectorEnums {
 ChunkCounterSelector Counter0,
 ChunkCounterSelector Counter1,
 ChunkCounterSelector_Counter2,
 NUM CHUNKCOUNTERSELECTOR }

    enum spinChunkTimerSelectorEnums {

 ChunkTimerSelector Timer0,
 ChunkTimerSelector Timer1,
 ChunkTimerSelector_Timer2,
 NUM CHUNKTIMERSELECTOR }

    enum spinChunkEncoderSelectorEnums {

 ChunkEncoderSelector_Encoder0,
 ChunkEncoderSelector_Encoder1,
 ChunkEncoderSelector_Encoder2,
 NUM CHUNKENCODERSELECTOR }

    enum spinChunkEncoderStatusEnums {

 ChunkEncoderStatus EncoderUp,
 ChunkEncoderStatus EncoderDown,
 ChunkEncoderStatus_EncoderIdle,
 ChunkEncoderStatus EncoderStatic,
 NUM CHUNKENCODERSTATUS }
• enum spinChunkExposureTimeSelectorEnums {
 ChunkExposureTimeSelector_Common,
 ChunkExposureTimeSelector Red,
 ChunkExposureTimeSelector Green,
 ChunkExposureTimeSelector Blue,
 ChunkExposureTimeSelector Cyan,
 ChunkExposureTimeSelector Magenta,
 ChunkExposureTimeSelector Yellow,
 ChunkExposureTimeSelector Infrared,
 ChunkExposureTimeSelector Ultraviolet,
 ChunkExposureTimeSelector Stage1,
 ChunkExposureTimeSelector_Stage2,
 NUM CHUNKEXPOSURETIMESELECTOR }

    enum spinChunkSourceIDEnums {

 ChunkSourceID Source0,
 ChunkSourceID Source1,
 ChunkSourceID Source2.
 NUM_CHUNKSOURCEID }
 enum spinChunkRegionIDEnums {
 ChunkRegionID_Region0,
 ChunkRegionID_Region1,
 ChunkRegionID Region2,
 NUM CHUNKREGIONID }

    enum spinChunkTransferStreamIDEnums {

 ChunkTransferStreamID Stream0,
 ChunkTransferStreamID Stream1.
 ChunkTransferStreamID Stream2,
 ChunkTransferStreamID Stream3,
 NUM CHUNKTRANSFERSTREAMID }
• enum spinChunkScan3dDistanceUnitEnums {
 ChunkScan3dDistanceUnit Millimeter,
 ChunkScan3dDistanceUnit Inch.
 NUM CHUNKSCAN3DDISTANCEUNIT }

    enum spinChunkScan3dOutputModeEnums {

 ChunkScan3dOutputMode UncalibratedC,
 ChunkScan3dOutputMode_CalibratedABC_Grid,
 ChunkScan3dOutputMode_CalibratedABC_PointCloud,
```

```
ChunkScan3dOutputMode CalibratedAC,
 ChunkScan3dOutputMode CalibratedAC Linescan,
 ChunkScan3dOutputMode CalibratedC,
 ChunkScan3dOutputMode_CalibratedC_Linescan,
 ChunkScan3dOutputMode RectifiedC,
 ChunkScan3dOutputMode RectifiedC Linescan,
 ChunkScan3dOutputMode DisparityC.
 ChunkScan3dOutputMode DisparityC Linescan,
 NUM CHUNKSCAN3DOUTPUTMODE }

    enum spinChunkScan3dCoordinateSystemEnums {

 ChunkScan3dCoordinateSystem_Cartesian,
 ChunkScan3dCoordinateSystem Spherical,
 ChunkScan3dCoordinateSystem_Cylindrical,
 NUM_CHUNKSCAN3DCOORDINATESYSTEM }

    enum spinChunkScan3dCoordinateSystemReferenceEnums {

 ChunkScan3dCoordinateSystemReference_Anchor,
 ChunkScan3dCoordinateSystemReference Transformed,
 NUM CHUNKSCAN3DCOORDINATESYSTEMREFERENCE }

    enum spinChunkScan3dCoordinateSelectorEnums {

 ChunkScan3dCoordinateSelector CoordinateA,
 ChunkScan3dCoordinateSelector CoordinateB,
 ChunkScan3dCoordinateSelector CoordinateC,
 NUM CHUNKSCAN3DCOORDINATESELECTOR }
 enum spinChunkScan3dCoordinateTransformSelectorEnums {
 ChunkScan3dCoordinateTransformSelector RotationX.
 ChunkScan3dCoordinateTransformSelector RotationY.
 ChunkScan3dCoordinateTransformSelector_RotationZ,
 ChunkScan3dCoordinateTransformSelector TranslationX,
 ChunkScan3dCoordinateTransformSelector TranslationY,
 ChunkScan3dCoordinateTransformSelector TranslationZ,
 NUM_CHUNKSCAN3DCOORDINATETRANSFORMSELECTOR }

    enum spinChunkScan3dCoordinateReferenceSelectorEnums {

 ChunkScan3dCoordinateReferenceSelector RotationX,
 ChunkScan3dCoordinateReferenceSelector RotationY,
 ChunkScan3dCoordinateReferenceSelector RotationZ.
 ChunkScan3dCoordinateReferenceSelector TranslationX,
 ChunkScan3dCoordinateReferenceSelector TranslationY,
 ChunkScan3dCoordinateReferenceSelector TranslationZ,
 NUM CHUNKSCAN3DCOORDINATEREFERENCESELECTOR }
 enum spinDeviceTapGeometryEnums {
 DeviceTapGeometry Geometry 1X 1Y,
 DeviceTapGeometry Geometry 1X2 1Y,
 DeviceTapGeometry Geometry 1X2 1Y2,
 DeviceTapGeometry_Geometry_2X_1Y,
 DeviceTapGeometry_Geometry_2X_1Y2Geometry_2XE_1Y,
 DeviceTapGeometry_Geometry_2XE_1Y2,
 DeviceTapGeometry_Geometry_2XM_1Y,
 DeviceTapGeometry Geometry 2XM 1Y2,
 DeviceTapGeometry_Geometry_1X_1Y2,
 DeviceTapGeometry_Geometry_1X_2YE,
 DeviceTapGeometry Geometry 1X3 1Y,
 DeviceTapGeometry Geometry_3X_1Y,
 DeviceTapGeometry Geometry 1X,
 DeviceTapGeometry Geometry 1X2,
 DeviceTapGeometry Geometry 2X,
 DeviceTapGeometry Geometry 2XE,
 DeviceTapGeometry_Geometry_2XM,
 DeviceTapGeometry_Geometry_1X3,
```

```
DeviceTapGeometry_Geometry_3X,
 DeviceTapGeometry Geometry 1X4 1Y,
 DeviceTapGeometry_Geometry_4X_1Y,
 DeviceTapGeometry_Geometry_2X2_1Y,
 DeviceTapGeometry_Geometry_2X2E_1YGeometry_2X2M_1Y,
 DeviceTapGeometry Geometry 1X2 2YE,
 DeviceTapGeometry Geometry 2X 2YE,
 DeviceTapGeometry Geometry 2XE 2YE,
 DeviceTapGeometry Geometry 2XM 2YE,
 DeviceTapGeometry Geometry 1X4,
 DeviceTapGeometry_Geometry_4X,
 DeviceTapGeometry_Geometry_2X2,
 DeviceTapGeometry_Geometry_2X2E,
 DeviceTapGeometry Geometry 2X2M,
 DeviceTapGeometry_Geometry_1X8_1Y,
 DeviceTapGeometry_Geometry_8X_1Y,
 DeviceTapGeometry Geometry 4X2 1Y,
 DeviceTapGeometry Geometry 2X2E 2YE,
 DeviceTapGeometry_Geometry_1X8,
 DeviceTapGeometry_Geometry_8X,
 DeviceTapGeometry Geometry 4X2,
 DeviceTapGeometry Geometry 4X2E,
 DeviceTapGeometry_Geometry_4X2E_1Y,
 DeviceTapGeometry_Geometry_1X10_1Y,
 DeviceTapGeometry Geometry 10X 1Y,
 DeviceTapGeometry_Geometry_1X10,
 DeviceTapGeometry_Geometry_10X,
 NUM DEVICETAPGEOMETRY }
 enum spinGevPhysicalLinkConfigurationEnums {
 GevPhysicalLinkConfiguration_SingleLink,
 GevPhysicalLinkConfiguration MultiLink,
 GevPhysicalLinkConfiguration StaticLAG,
 GevPhysicalLinkConfiguration_DynamicLAG,
 NUM_GEVPHYSICALLINKCONFIGURATION }
• enum spinGevCurrentPhysicalLinkConfigurationEnums {
 GevCurrentPhysicalLinkConfiguration SingleLink,
 GevCurrentPhysicalLinkConfiguration MultiLink,
 GevCurrentPhysicalLinkConfiguration StaticLAG,
 GevCurrentPhysicalLinkConfiguration DynamicLAG,
 NUM GEVCURRENTPHYSICALLINKCONFIGURATION }
 enum spinGevIPConfigurationStatusEnums {
 GevIPConfigurationStatus None,
 GevIPConfigurationStatus PersistentIP,
 GevIPConfigurationStatus_DHCP,
 GevIPConfigurationStatus LLA,
 GevIPConfigurationStatus ForceIP.
 NUM GEVIPCONFIGURATIONSTATUS }

    enum spinGevGVCPExtendedStatusCodesSelectorEnums {

 GevGVCPExtendedStatusCodesSelector Version1 1,
 GevGVCPExtendedStatusCodesSelector_Version2_0,
 NUM_GEVGVCPEXTENDEDSTATUSCODESSELECTOR }
• enum spinGevGVSPExtendedIDModeEnums {
 GevGVSPExtendedIDMode Off,
 GevGVSPExtendedIDMode On.
 NUM GEVGVSPEXTENDEDIDMODE }

    enum spinClConfigurationEnums {

 ClConfiguration_Base,
 ClConfiguration Medium,
```

```
ClConfiguration Full,
 ClConfiguration DualBase,
 ClConfiguration EightyBit,
 NUM CLCONFIGURATION }
• enum spinClTimeSlotsCountEnums {
 CITimeSlotsCount One.
 CITimeSlotsCount Two,
 CITimeSlotsCount Three,
 NUM CLTIMESLOTSCOUNT }

    enum spinCxpLinkConfigurationStatusEnums {

 CxpLinkConfigurationStatus_None,
 CxpLinkConfigurationStatus Pending,
 CxpLinkConfigurationStatus CXP1 X1,
 CxpLinkConfigurationStatus CXP2 X1,
 CxpLinkConfigurationStatus_CXP3_X1,
 CxpLinkConfigurationStatus_CXP5_X1,
 CxpLinkConfigurationStatus CXP6 X1,
 CxpLinkConfigurationStatus CXP1 X2,
 CxpLinkConfigurationStatus_CXP2_X2,
 CxpLinkConfigurationStatus CXP3 X2,
 CxpLinkConfigurationStatus CXP5 X2,
 CxpLinkConfigurationStatus CXP6 X2,
 CxpLinkConfigurationStatus CXP1 X3,
 CxpLinkConfigurationStatus CXP2 X3,
 CxpLinkConfigurationStatus CXP3 X3.
 CxpLinkConfigurationStatus_CXP5_X3,
 CxpLinkConfigurationStatus_CXP6_X3,
 CxpLinkConfigurationStatus_CXP1_X4,
 CxpLinkConfigurationStatus CXP2 X4,
 CxpLinkConfigurationStatus_CXP3 X4,
 CxpLinkConfigurationStatus_CXP5_X4,
 CxpLinkConfigurationStatus_CXP6_X4,
 CxpLinkConfigurationStatus CXP1 X5,
 CxpLinkConfigurationStatus CXP2 X5,
 CxpLinkConfigurationStatus CXP3 X5,
 CxpLinkConfigurationStatus CXP5 X5,
 CxpLinkConfigurationStatus CXP6 X5.
 CxpLinkConfigurationStatus CXP1 X6,
 CxpLinkConfigurationStatus CXP2 X6,
 CxpLinkConfigurationStatus CXP3 X6,
 CxpLinkConfigurationStatus CXP5 X6,
 CxpLinkConfigurationStatus_CXP6_X6,
 NUM CXPLINKCONFIGURATIONSTATUS }

    enum spinCxpLinkConfigurationPreferredEnums {

 CxpLinkConfigurationPreferred CXP1 X1,
 CxpLinkConfigurationPreferred_CXP2_X1,
 CxpLinkConfigurationPreferred_CXP3_X1,
 CxpLinkConfigurationPreferred CXP5 X1,
 CxpLinkConfigurationPreferred_CXP6_X1,
 CxpLinkConfigurationPreferred_CXP1_X2,
 CxpLinkConfigurationPreferred CXP2 X2,
 CxpLinkConfigurationPreferred CXP3 X2.
 CxpLinkConfigurationPreferred CXP5 X2,
 CxpLinkConfigurationPreferred CXP6 X2,
 CxpLinkConfigurationPreferred CXP1 X3,
 CxpLinkConfigurationPreferred CXP2 X3,
 CxpLinkConfigurationPreferred CXP3 X3,
 CxpLinkConfigurationPreferred_CXP5_X3,
```

```
CxpLinkConfigurationPreferred_CXP6_X3,
 CxpLinkConfigurationPreferred CXP1 X4,
 CxpLinkConfigurationPreferred_CXP2_X4,
 CxpLinkConfigurationPreferred_CXP3_X4,
 CxpLinkConfigurationPreferred_CXP5_X4,
 CxpLinkConfigurationPreferred CXP6 X4,
 CxpLinkConfigurationPreferred CXP1 X5,
 CxpLinkConfigurationPreferred CXP2 X5,
 CxpLinkConfigurationPreferred CXP3 X5,
 CxpLinkConfigurationPreferred CXP5 X5,
 CxpLinkConfigurationPreferred CXP6 X5,
 CxpLinkConfigurationPreferred_CXP1_X6,
 CxpLinkConfigurationPreferred_CXP2_X6,
 CxpLinkConfigurationPreferred CXP3 X6,
 CxpLinkConfigurationPreferred_CXP5_X6,
 CxpLinkConfigurationPreferred_CXP6_X6,
 NUM CXPLINKCONFIGURATIONPREFERRED }

    enum spinCxpLinkConfigurationEnums {

 CxpLinkConfiguration_Auto,
 CxpLinkConfiguration_CXP1_X1,
 CxpLinkConfiguration CXP2 X1,
 CxpLinkConfiguration CXP3 X1,
 CxpLinkConfiguration_CXP5_X1,
 CxpLinkConfiguration_CXP6_X1,
 CxpLinkConfiguration CXP1 X2.
 CxpLinkConfiguration CXP2 X2,
 CxpLinkConfiguration CXP3 X2,
 CxpLinkConfiguration CXP5 X2,
 CxpLinkConfiguration CXP6 X2,
 CxpLinkConfiguration_CXP1_X3,
 CxpLinkConfiguration_CXP2_X3,
 CxpLinkConfiguration_CXP3_X3,
 CxpLinkConfiguration_CXP5_X3,
 CxpLinkConfiguration_CXP6_X3,
 CxpLinkConfiguration_CXP1_X4,
 CxpLinkConfiguration CXP2 X4,
 CxpLinkConfiguration CXP3 X4,
 CxpLinkConfiguration CXP5 X4,
 CxpLinkConfiguration CXP6 X4,
 CxpLinkConfiguration CXP1 X5,
 CxpLinkConfiguration CXP2 X5,
 CxpLinkConfiguration_CXP3_X5,
 CxpLinkConfiguration_CXP5_X5,
 CxpLinkConfiguration CXP6 X5,
 CxpLinkConfiguration CXP1 X6,
 CxpLinkConfiguration CXP2 X6,
 CxpLinkConfiguration CXP3 X6,
 CxpLinkConfiguration CXP5 X6,
 CxpLinkConfiguration CXP6 X6,
 NUM_CXPLINKCONFIGURATION }


    enum spinCxpConnectionTestModeEnums {

 CxpConnectionTestMode Off,
 CxpConnectionTestMode_Mode1,
 NUM CXPCONNECTIONTESTMODE }
enum spinCxpPoCxpStatusEnums {
 CxpPoCxpStatus Auto,
 CxpPoCxpStatus_Off,
 CxpPoCxpStatus_Tripped,
```


NUM\_CXPPOCXPSTATUS }

# 13.9 include/spinc/ChunkDataDefC.h File Reference

Include dependency graph for ChunkDataDefC.h:

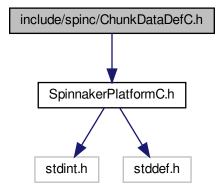

This graph shows which files directly or indirectly include this file:

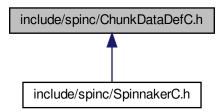


### **Data Structures**

struct spinChunkData


The type of information that can be obtained from image chunk data.

## 13.10 include/spinc/QuickSpinC.h File Reference

Include dependency graph for QuickSpinC.h:

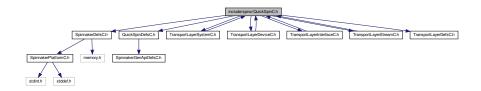

This graph shows which files directly or indirectly include this file:

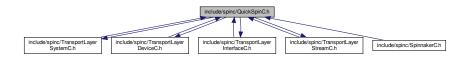


#### **Functions**


- SPINNAKERC\_API quickSpinInit (spinCamera hCamera, quickSpin \*pQuickSpin)
- SPINNAKERC\_API quickSpinInitEx (spinCamera hCamera, quickSpin \*pQuickSpin, quickSpinTLDevice \*pQuickSpinTLDevice, quickSpinTLStream \*pQuickSpinTLStream)
- SPINNAKERC\_API quickSpinTLDeviceInit (spinCamera hCamera, quickSpinTLDevice \*pQuickSpinTL→
  Device)
- SPINNAKERC\_API quickSpinTLStreamInit (spinCamera hCamera, quickSpinTLStream \*pQuickSpinTL ← Stream)
- SPINNAKERC\_API quickSpinTLInterfaceInit (spinInterface hInterface, quickSpinTLInterface \*pQuickSpin← TLInterface)

## 13.11 include/spinc/QuickSpinDefsC.h File Reference

Include dependency graph for QuickSpinDefsC.h:

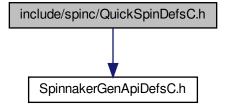

This graph shows which files directly or indirectly include this file:

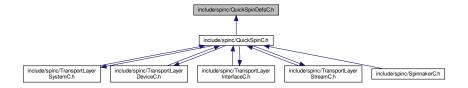

## **Data Structures**

struct quickSpin

## **Typedefs**

- typedef spinNodeHandle quickSpinStringNode
- typedef spinNodeHandle quickSpinIntegerNode
- typedef spinNodeHandle quickSpinFloatNode
- typedef spinNodeHandle quickSpinBooleanNode
- typedef spinNodeHandle quickSpinEnumerationNode
- typedef spinNodeHandle quickSpinCommandNode
- typedef spinNodeHandle quickSpinRegisterNode

## 13.11.1 Typedef Documentation

## 13.11.1.1 quickSpinBooleanNode

typedef spinNodeHandle quickSpinBooleanNode

#### 13.11.1.2 quickSpinCommandNode

 $\verb|typedef| spinNodeHandle| quickSpinCommandNode|$ 

## 13.11.1.3 quickSpinEnumerationNode

typedef spinNodeHandle quickSpinEnumerationNode

#### 13.11.1.4 quickSpinFloatNode

typedef spinNodeHandle quickSpinFloatNode

## 13.11.1.5 quickSpinIntegerNode

typedef spinNodeHandle quickSpinIntegerNode

## 13.11.1.6 quickSpinRegisterNode


typedef spinNodeHandle quickSpinRegisterNode

## 13.11.1.7 quickSpinStringNode

typedef spinNodeHandle quickSpinStringNode

# 13.12 include/spinc/SpinnakerC.h File Reference

Include dependency graph for SpinnakerC.h:

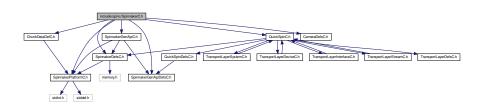

#### **Functions**

SPINNAKERC API spinErrorGetLast (spinError \*pError)

Retrieves the error code of the last error.

SPINNAKERC\_API spinErrorGetLastMessage (char \*pBuf, size\_t \*pBufLen)

Retrieves the error message of the last error.

SPINNAKERC API spinErrorGetLastBuildDate (char \*pBuf, size t \*pBufLen)

Retrieves the build date of the last error.

• SPINNAKERC\_API spinErrorGetLastBuildTime (char \*pBuf, size\_t \*pBufLen)

Retrieves the build time of the last error.

SPINNAKERC\_API spinErrorGetLastFileName (char \*pBuf, size\_t \*pBufLen)

Retrieves the filename of the last error.

SPINNAKERC\_API spinErrorGetLastFullMessage (char \*pBuf, size\_t \*pBufLen)

Retrieves the full error message of the last error.

SPINNAKERC API spinErrorGetLastFunctionName (char \*pBuf, size t \*pBufLen)

Retrieves the function name of the last error.

SPINNAKERC API spinErrorGetLastLineNumber (int64 t \*pLineNum)

Retrieves the line number of the last error.

SPINNAKERC\_API spinSystemGetInstance (spinSystem \*phSystem)

Retrieves an instance of the system object; the system is a singleton, so there will only ever be one instance; system instance must be destroyed by calling spinSystemReleaseInstance.

SPINNAKERC\_API spinSystemReleaseInstance (spinSystem hSystem)

Releases the system; make sure handle is cleaned up properly by setting it to NULL after system is released; the handle can only be used again after calling spinSystemGetInstance.

SPINNAKERC\_API spinSystemGetInterfaces (spinSystem hSystem, spinInterfaceList hInterfaceList)

Retrieves a list of detected (and enumerable) interfaces on the system; interface lists must be created and destroyed.

SPINNAKERC\_API spinSystemGetCameras (spinSystem hSystem, spinCameraList hCameraList)

Retrieves a list of detected (and enumerable) cameras on the system; camera lists must be created and destroyed.

• SPINNAKERC\_API spinSystemGetCamerasEx (spinSystem hSystem, bool8\_t bUpdateInterfaces, bool8\_t

bUpdateCameras, spinCameraList hCameraList)

Retrieves a list of detected (and enumerable) cameras on the system; manually set whether to update the current interface and camera lists; camera lists must be created and destroyed.

SPINNAKERC\_API spinSystemSetLoggingLevel (spinSystem hSystem, spinnakerLogLevel logLevel)

Sets the logging level for all logging events on the system.

SPINNAKERC\_API spinSystemGetLoggingLevel (spinSystem hSystem, spinnakerLogLevel \*pLogLevel)

Retrieves the logging level for all logging events on the system.

SPINNAKERC\_API spinSystemRegisterLogEventHandler (spinSystem hSystem, spinLogEventHandler h
 LogEventHandler)

Registers a logging event handler to the system (event handlers registered in this way must be unregistered)

SPINNAKERC\_API spinSystemUnregisterLogEventHandler (spinSystem hSystem, spinLogEventHandler hLogEventHandler)

Unregisters a selected logging event handler from the system.

SPINNAKERC\_API spinSystemUnregisterAllLogEventHandlers (spinSystem hSystem)

Unregisters all logging event handlers from the system.

SPINNAKERC\_API spinSystemIsInUse (spinSystem hSystem, bool8\_t \*pbIsInUse)

Checks whether a system is currently in use.

Registers a device arrival event handler to every interface on the system (event handlers registered this way must be unregistered)

• SPINNAKERC\_API spinSystemRegisterDeviceRemovalEventHandler (spinSystem hSystem, spinDevice ← RemovalEventHandler hDeviceRemovalEventHandler)

Registers a device removal event handler to the system to every interface on the system (event handlers registered this way must be unregistered)

SPINNAKERC\_API spinSystemUnregisterDeviceArrivalEventHandler (spinSystem hSystem, spinDevice
 ArrivalEventHandler hDeviceArrivalEventHandler)

Unregisters a device arrival event handler from the system.

SPINNAKERC\_API spinSystemUnregisterDeviceRemovalEventHandler (spinSystem hSystem, spinDevice
 — RemovalEventHandler hDeviceRemovalEventHandler)

Unregisters a device removal event handler from the system.

Registers an interface event handler (device arrival and device removal) to every interface on the system (interface events registered this way must be unregistered) If new interfaces are detected by the system after spinSystem RegisterInterfaceEventHandler() is called, those interfaces will be automatically registered with this event.

• SPINNAKERC\_API spinSystemUnregisterInterfaceEventHandler (spinSystem hSystem, spinInterface ← EventHandler hInterfaceEventHandler)

Unregisters an interface event handler from the system.

SPINNAKERC API spinSystemUpdateCameras (spinSystem hSystem, bool8 t \*pbChanged)

Updates the list of cameras on the system, informing whether there has been any changes.

 SPINNAKERC\_API spinSystemUpdateCamerasEx (spinSystem hSystem, bool8\_t bUpdateInterfaces, bool8\_t \*pbChanged)

Updates the list of cameras on the system, informing whether there has been any changes; manually set whether to update the current interface lists.

• SPINNAKERC\_API spinSystemSendActionCommand (spinSystem hSystem, size\_t iDeviceKey, size\_t i
GroupKey, size\_t iGroupMask, size\_t iActionTime, size\_t \*piResultSize, actionCommandResult results[])

Broadcast an Action Command to all devices on system.

SPINNAKERC\_API spinSystemGetLibraryVersion (spinSystem hSystem, spinLibraryVersion \*hLibrary←
 Version)

Get current library version of Spinnaker.

• SPINNAKERC\_API spinSystemGetTLNodeMap (spinSystem hSystem, spinNodeMapHandle \*phNodeMap)

Retrieves the transport layer nodemap from the system.

SPINNAKERC API spinInterfaceListCreateEmpty (spinInterfaceList \*phInterfaceList)

Creates an empty interface list (interface lists created this way must be destroyed)

• SPINNAKERC\_API spinInterfaceListDestroy (spinInterfaceList hInterfaceList)

Destroys an interface list.

SPINNAKERC\_API spinInterfaceListGetSize (spinInterfaceList hInterfaceList, size\_t \*pSize)

Retrieves the number of interfaces in an interface list.

SPINNAKERC\_API spinInterfaceListGet (spinInterfaceList hInterfaceList, size\_t index, spinInterface \*ph← Interface)

Retrieves an interface from an interface list using an index (interfaces retrieved this way must be released)

• SPINNAKERC API spinInterfaceListClear (spinInterfaceList hInterfaceList)

Clears an interface list.

SPINNAKERC\_API spinCameraListCreateEmpty (spinCameraList \*phCameraList)

Creates an empty camera list (camera lists created this way must be destroyed)

SPINNAKERC\_API spinCameraListDestroy (spinCameraList hCameraList)

Destroys a camera list.

SPINNAKERC\_API spinCameraListGetSize (spinCameraList hCameraList, size\_t \*pSize)

Retrieves the number of cameras on a camera list.

Retrieves a camera from a camera list using an index.

SPINNAKERC API spinCameraListClear (spinCameraList hCameraList)

Clears a camera list.

• SPINNAKERC API spinCameraListRemove (spinCameraList hCameraList, size t index)

Removes a camera from a camera list using its index.

SPINNAKERC\_API spinCameraListAppend (spinCameraList hCameraListBase, spinCameraList hCamera
 ListToAppend)

Appends all the cameras from one camera list to another.

 SPINNAKERC\_API spinCameraListGetBySerial (spinCameraList hCameraList, const char \*pSerial, spin← Camera \*phCamera)

Retrieves a camera from a camera list using its serial number.

 $\bullet \ SPINNAKERC\_API \ spinCameraListRemoveBySerial \ (spinCameraList \ hCameraList, \ const \ char \ *pSerial)$ 

Removes a camera from a camera list using its serial number.

SPINNAKERC API spinInterfaceUpdateCameras (spinInterface hInterface, bool8 t \*pbChanged)

Checks whether any cameras have been connected or disconnected on an interface.

SPINNAKERC API spinInterfaceGetCameras (spinInterface hInterface, spinCameraList)

Retrieves a camera list from an interface; camera lists must be created and destroy.

 SPINNAKERC\_API spinInterfaceGetCamerasEx (spinInterface hInterface, bool8\_t bUpdateCameras, spin← CameraList hCameraList)

Retrieves a camera list from an interface; manually set whether to update the cameras; camera lists must be created and destroyed.

Retrieves the transport layer nodemap from an interface.

Registers a device arrival event handler on an interface (event handlers registered in this way must be unregistered)

SPINNAKERC\_API spinInterfaceRegisterDeviceRemovalEventHandler (spinInterface hInterface, spin
 — DeviceRemovalEventHandler hDeviceRemovalEventHandler)

Registers a device removal event handler on an interface (event handlers registered in this way must be unregistered)

SPINNAKERC\_API spinInterfaceUnregisterDeviceArrivalEventHandler (spinInterface hInterface, spin
 — DeviceArrivalEventHandler hDeviceArrivalEventHandler)

Unregisters a device arrival event handler from an interface.

SPINNAKERC\_API spinInterfaceUnregisterDeviceRemovalEventHandler (spinInterface hInterface, spin
 — DeviceRemovalEventHandler hDeviceRemovalEventHandler)

Unregisters a device removal event handler from an interface.

SPINNAKERC\_API spinInterfaceRegisterInterfaceEventHandler (spinInterface hInterface, spinInterface EventHandler)

Registers an interface event handler (both device arrival and device removal) on an interface.

 SPINNAKERC\_API spinInterfaceUnregisterInterfaceEventHandler (spinInterface hInterface, spinInterface EventHandler hInterfaceEventHandler)

Unregisters an interface event handler from an interface.

• SPINNAKERC API spinInterfaceRelease (spinInterface hInterface)

Releases an interface.

• SPINNAKERC\_API spinInterfaceIsInUse (spinInterface hInterface, bool8\_t \*pbIsInUse)

Checks whether an interface is in use.

• SPINNAKERC\_API spinInterfaceSendActionCommand (spinInterface hInterface, size\_t iDeviceKey, size\_ t iGroupKey, size\_t iGroupMask, size\_t iActionTime, size\_t \*piResultSize, actionCommandResult results[])

Broadcast an Action Command to all devices on interface.

SPINNAKERC\_API spinCameraInit (spinCamera hCamera)

Initializes a camera, allowing for much more interaction.

SPINNAKERC\_API spinCameraDeInit (spinCamera hCamera)

Deinitializes a camera, greatly reducing functionality.

- SPINNAKERC\_API spinCameraGetNodeMap (spinCamera hCamera, spinNodeMapHandle \*phNodeMap)

  Retrieves the GenlCam nodemap from a camera.
- SPINNAKERC\_API spinCameraGetTLDeviceNodeMap (spinCamera hCamera, spinNodeMapHandle \*ph
   — NodeMap)

Retrieves the transport layer device nodemap from a camera.

SPINNAKERC\_API spinCameraGetTLStreamNodeMap (spinCamera hCamera, spinNodeMapHandle \*ph← NodeMap)

Retrieves the transport layer stream nodemap from a camera.

• SPINNAKERC\_API spinCameraGetAccessMode (spinCamera hCamera, spinAccessMode \*pAccessMode)

Retrieves the access mode of a camera (as an enum, spinAccessMode)

- SPINNAKERC\_API spinCameraReadPort (spinCamera hCamera, uint64\_t iAddress, void \*pBuffer, size\_t iSize)
- SPINNAKERC\_API spinCameraWritePort (spinCamera hCamera, uint64\_t iAddress, void \*pBuffer, size\_t iSize)
- SPINNAKERC\_API spinCameraBeginAcquisition (spinCamera hCamera)

Has a camera start acquiring images.

SPINNAKERC\_API spinCameraEndAcquisition (spinCamera hCamera)

Has a camera stop acquiring images.

• SPINNAKERC\_API spinCameraGetNextImage (spinCamera hCamera, spinImage \*phImage)

Retrieves an image from a camera.

 SPINNAKERC\_API spinCameraGetNextImageEx (spinCamera hCamera, uint64\_t grabTimeout, spinImage \*phImage)

Retrieves an image from a camera; manually set the timeout in milliseconds.

SPINNAKERC\_API spinCameraGetUniqueID (spinCamera hCamera, char \*pBuf, size\_t \*pBufLen)

Retrieves a unique identifier for a camera.

SPINNAKERC\_API spinCameralsStreaming (spinCamera hCamera, bool8\_t \*pblsStreaming)

Checks whether a camera is currently acquiring images.

SPINNAKERC\_API spinCameraGetGuiXml (spinCamera hCamera, char \*pBuf, size\_t \*pBufLen)

Retrieves the GUI XML from a camera.

Registers a universal device event handler (every device event type) to a camera.

Registers a specific device event handler (only one device event type) to a camera.

Unregisters a device event handler from a camera.

Registers an image event handler to a camera.

Unregisters an image event handler from a camera.

• SPINNAKERC\_API spinCameraRelease (spinCamera hCamera)

Releases a camera.

SPINNAKERC\_API spinCameralsValid (spinCamera hCamera, bool8\_t \*pbValid)

Checks whether a camera is still valid for use.

• SPINNAKERC\_API spinCameralsInitialized (spinCamera hCamera, bool8\_t \*pbInit)

Checks whether a camera is currently initialized.

SPINNAKERC\_API spinCameraDiscoverMaxPacketSize (spinCamera hCamera, unsigned int \*pMax↔ PacketSize)

Returns the largest packet size that can be safely used on the interface that device is connected to.

SPINNAKERC\_API spinCameraForceIP ()

Forces the camera to be on the same subnet as its corresponding interface.

SPINNAKERC\_API spinImageCreateEmpty (spinImage \*phImage)

Creates an empty image; images created this way must be destroyed.

SPINNAKERC\_API spinImageCreate (spinImage hSrcImage, spinImage \*phDestImage)

Creates an image from another; images created this way must be destroyed.

SPINNAKERC\_API spinImageCreateEx (spinImage \*phImage, size\_t width, size\_t height, size\_t offsetX, size\_t offsetY, spinPixelFormatEnums pixelFormat, void \*pData)

Creates an image with some set properties; images created this way must be destroyed.

SPINNAKERC\_API spinImageCreateEx2 (spinImage \*phImage, size\_t width, size\_t height, size\_t offsetX, size\_t offsetY, spinPixelFormatEnums pixelFormat, void \*pData, spinPayloadTypeInfoIDs dataPayloadType, size\_t dataSize)

Creates an image with some set properties; images created this way must be destroyed.

SPINNAKERC API spinImageDestroy (spinImage hImage)

Destroys an image.

SPINNAKERC API spinImageSetDefaultColorProcessing (spinColorProcessingAlgorithm algorithm)

Sets the default color processing algorithm of all images (if not otherwise set)

SPINNAKERC\_API spinImageGetDefaultColorProcessing (spinColorProcessingAlgorithm \*pAlgorithm)

Retrieves the default color processing algorithm.

SPINNAKERC\_API spinImageGetColorProcessing (spinImage hImage, spinColorProcessingAlgorithm \*p
 — Algorithm)

Retrieves the color processing algorithm of a specific image.

SPINNAKERC\_API spinImageSetNumDecompressionThreads (unsigned int numThreads)

Sets the default number of threads used for image decompression during spinImageConvert().

SPINNAKERC API spinImageGetNumDecompressionThreads (unsigned int \*pNumThreads)

Gets the number of threads used for image decompression during Convert().

SPINNAKERC\_API spinImageConvert (spinImage hSrcImage, spinPixelFormatEnums pixelFormat, spin
 —
 Image hDestImage)

Converts the pixel format of one image into a new image.

• SPINNAKERC\_API spinImageConvertEx (spinImage hSrcImage, spinPixelFormatEnums pixelFormat, spinColorProcessingAlgorithm algorithm, spinImage hDestImage)

Converts the pixel format and color processing algorithm of one image into a new image.

SPINNAKERC\_API spinImageReset (spinImage hlmage, size\_t width, size\_t height, size\_t offsetX, size\_t offsetY, spinPixelFormatEnums pixelFormat)

Resets an image with some set properties.

SPINNAKERC\_API spinImageResetEx (spinImage hImage, size\_t width, size\_t height, size\_t offsetX, size
 \_t offsetY, spinPixelFormatEnums pixelFormat, void \*pData)

Resets an image with some set properties and image data.

SPINNAKERC\_API spinImageGetID (spinImage hImage, uint64\_t \*pId)

Retrieves the ID of an image.

• SPINNAKERC\_API spinImageGetData (spinImage hImage, void \*\*ppData)

Retrieves the image data of an image.

SPINNAKERC\_API spinImageGetPrivateData (spinImage hImage, void \*\*ppData)

Retrieves the private data of an image.

• SPINNAKERC\_API spinImageGetBufferSize (spinImage hImage, size t\*pSize)

Retrieves the buffer size of an image.

SPINNAKERC\_API spinImageDeepCopy (spinImage hSrcImage, spinImage hDestImage)

Creates a deep copy of an image (the destination image must be created as an empty image prior to the deep copy)

SPINNAKERC API spinImageGetWidth (spinImage hImage, size t \*pWidth)

Retrieves the width of an image.

SPINNAKERC\_API spinImageGetHeight (spinImage hImage, size\_t \*pHeight)

Retrieves the height of an image.

SPINNAKERC API spinImageGetOffsetX (spinImage hImage, size t \*pOffsetX)

Retrieves the offset of an image along its X axis.

SPINNAKERC\_API spinImageGetOffsetY (spinImage hImage, size\_t \*pOffsetY)

Retrieves the offset of an image along its Y axis.

SPINNAKERC\_API spinImageGetPaddingX (spinImage hImage, size\_t \*pPaddingX)

Retrieves the padding of an image along its X axis.

SPINNAKERC\_API spinImageGetPaddingY (spinImage hImage, size\_t \*pPaddingY)

Retrieves the padding of an image along its Y axis.

SPINNAKERC\_API spinImageGetFrameID (spinImage hImage, uint64\_t \*pFrameID)

Retrieves the frame ID of an image.

SPINNAKERC\_API spinImageGetTimeStamp (spinImage hImage, uint64\_t \*pTimeStamp)

Retrieves the timestamp of an image.

SPINNAKERC\_API spinImageGetPayloadType (spinImage hImage, size\_t \*pPayloadType)

Retrieves the payload type of an image (as an enum, spinPayloadTypeInfolds)

Retrieves the transport layer payload type of an image (as an enum, spinPayloadTypeInfolds)

SPINNAKERC\_API spinImageGetPixelFormat (spinImage hImage, spinPixelFormatEnums \*pPixelFormat)

Retrieves the pixel format of an image (as an enum, spinPixelFormatEnums)

SPINNAKERC API spinImageGetTLPixelFormat (spinImage hImage, uint64 t \*pPixelFormat)

Retrieves the transport layer pixel format of an image (as an unsigned integer)

SPINNAKERC\_API spinImageGetTLPixelFormatNamespace (spinImage hImage, spinPixelFormat← NamespaceID \*pPixelFormatNamespace)

Retrieves the transport layer pixel format namespace of an image (as an enum, spinPixelFormatNamespaceID)

SPINNAKERC API spinImageGetPixelFormatName (spinImage hImage, char \*pBuf, size t \*pBufLen)

Retrieves the pixel format of an image (as a symbolic)

SPINNAKERC\_API spinImageIsIncomplete (spinImage hImage, bool8\_t \*pbIsIncomplete)

Checks whether an image is incomplete.

SPINNAKERC\_API spinImageGetValidPayloadSize (spinImage hImage, size\_t \*pSize)

Retrieves the valid payload size of an image.

SPINNAKERC\_API spinImageSave (spinImage hImage, const char \*pFilename, spinImageFileFormat format)

Saves an image using a specified file format (using an enum, spinImageFileFormat)

• SPINNAKERC\_API spinImageSaveFromExt (spinImage hImage, const char \*pFilename)

Saves an image using a specified file format (using the extension of the filename)

SPINNAKERC\_API spinImageSavePng (spinImage hImage, const char \*pFilename, const spinPNGOption \*pOption)

Saves an image as a PNG image.

SPINNAKERC\_API spinImageSavePpm (spinImage hImage, const char \*pFilename, const spinPPMOption \*pOption)

Saves an image as a PPM image.

• SPINNAKERC\_API spinImageSavePgm (spinImage hImage, const char \*pFilename, const spinPGMOption \*pOption)

Saves an image as an PGM image.

SPINNAKERC\_API spinImageSaveTiff (spinImage hImage, const char \*pFilename, const spinTIFFOption \*pOption)

Saves an image as a TIFF image.

• SPINNAKERC\_API spinImageSaveJpeg (spinImage hImage, const char \*pFilename, const spinJPEGOption \*pOption)

Saves an image as a JPEG image.

• SPINNAKERC\_API spinImageSaveJpg2 (spinImage hImage, const char \*pFilename, const spinJPG2Option \*pOption)

Saves an image as a JPEG 2000 image.

 SPINNAKERC\_API spinImageSaveBmp (spinImage hImage, const char \*pFilename, const spinBMPOption \*pOption)

Saves an image as a BMP image.

SPINNAKERC\_API spinImageGetChunkLayoutID (spinImage hImage, uint64\_t \*pld)

Retrieves the chunk layout ID of an image.

SPINNAKERC\_API spinImageCalculateStatistics (spinImage hImage, const spinImageStatistics hStatistics)
 Calculates the image statistics of an image.

• SPINNAKERC API spinImageGetStatus (spinImage hImage, spinImageStatus \*pStatus)

Retrieves the image status of an image.

SPINNAKERC\_API spinImageGetStatusDescription (spinImageStatus status, char \*pBuf, size\_t \*pBufLen)

Retrieves the description of image status.

SPINNAKERC\_API spinImageRelease (spinImage hImage)

Releases an image.

SPINNAKERC API spinImageHasCRC (spinImage hImage, bool8 t \*pbHasCRC)

Checks whether an image has CRC.

SPINNAKERC\_API spinImageCheckCRC (spinImage hImage, bool8\_t \*pbCheckCRC)

Checks whether the CRC of an image is correct.

SPINNAKERC\_API spinImageGetBitsPerPixel (spinImage hImage, size\_t \*pBitsPerPixel)

Retrieves the number of bits per pixel of an image.

• SPINNAKERC\_API spinImageGetSize (spinImage hImage, size\_t \*pImageSize)

Retrieves the size of an image.

SPINNAKERC\_API spinImageGetStride (spinImage hImage, size\_t \*pStride)

Retrieves the stride of an image.

SPINNAKERC\_API spinDeviceEventHandlerCreate (spinDeviceEventHandler \*phDeviceEventHandler, spinDeviceEventFunction pFunction, void \*pUserData)

Creates a device event handler.

SPINNAKERC\_API spinDeviceEventHandlerDestroy (spinDeviceEventHandler hDeviceEventHandler)

Destroys a device event handler.

 SPINNAKERC\_API spinImageEventHandlerCreate (spinImageEventHandler \*phImageEventHandler, spin← ImageEventFunction pFunction, void \*pUserData)

Creates an image event handler.

SPINNAKERC API spinImageEventHandlerDestroy (spinImageEventHandler hImageEventHandler)

Destroys an image event handler.

• SPINNAKERC\_API spinDeviceArrivalEventHandlerCreate (spinDeviceArrivalEventHandler \*phDevice← ArrivalEventHandler, spinArrivalEventFunction pFunction, void \*pUserData)

Creates a device arrival event handler.

Destroys a device arrival event handler.

SPINNAKERC\_API spinDeviceRemovalEventHandlerCreate (spinDeviceRemovalEventHandler \*ph
 — DeviceRemovalEventHandler, spinRemovalEventFunction pFunction, void \*pUserData)

Creates a device removal event handler.

• SPINNAKERC\_API spinDeviceRemovalEventHandlerDestroy (spinDeviceRemovalEventHandler hDevice ← RemovalEventHandler)

Destroys a device removal event handler.

• SPINNAKERC\_API spinInterfaceEventHandlerCreate (spinInterfaceEventHandler \*phInterfaceEvent ← Handler, spinArrivalEventFunction pArrivalFunction, spinRemovalEventFunction pRemovalFunction, void \*pUserData)

Creates an interface event handler (both device arrival and device removal)

- SPINNAKERC\_API spinInterfaceEventHandlerDestroy (spinInterfaceEventHandler hInterfaceEventHandler)
   Destroys an interface event handler (both device arrival and device removal)
- SPINNAKERC\_API spinLogEventHandlerCreate (spinLogEventHandler \*phLogEventHandler, spinLog
   —
   EventFunction pFunction, void \*pUserData)

Creates a log event handler.

SPINNAKERC\_API spinLogEventHandlerDestroy (spinLogEventHandler hLogEventHandler)

Destroys a log event handler.

SPINNAKERC API spinImageStatisticsCreate (spinImageStatistics \*phStatistics)

Creates an image statistics context.

SPINNAKERC\_API spinImageStatisticsDestroy (spinImageStatistics hStatistics)

Destroys an image statistics context.

• SPINNAKERC\_API spinImageStatisticsEnableAll (spinImageStatistics hStatistics)

Enables all channels of an image statistics context.

SPINNAKERC\_API spinImageStatisticsDisableAll (spinImageStatistics hStatistics)

Disables all channels of an image statistics context.

SPINNAKERC\_API spinImageStatisticsEnableGreyOnly (spinImageStatistics hStatistics)

Disables all channels of an image statistics context except grey-scale.

• SPINNAKERC\_API spinImageStatisticsEnableRgbOnly (spinImageStatistics hStatistics)

Disables all channels of an image statistics context except red, blue, and green.

SPINNAKERC API spinImageStatisticsEnableHslOnly (spinImageStatistics)

Disables all channels of an image statistics context except hue, saturation, and lightness.

SPINNAKERC\_API spinImageStatisticsGetChannelStatus (spinImageStatistics hStatistics, spinStatistics
 — Channel channel, bool8 t \*pbEnabled)

Checks whether an image statistics context is enabled.

SPINNAKERC\_API spinImageStatisticsSetChannelStatus (spinImageStatistics hStatistics, spinStatistics ← Channel channel, bool8 t bEnable)

Sets the status of an image statistics channel.

• SPINNAKERC\_API spinImageStatisticsGetRange (spinImageStatistics hStatistics, spinStatisticsChannel channel, unsigned int \*pMin, unsigned int \*pMax)

Retrieves the range of an image statistics channel.

SPINNAKERC\_API spinImageStatisticsGetPixelValueRange (spinImageStatistics hStatistics, spin
 — StatisticsChannel channel, unsigned int \*pMin, unsigned int \*pMax)

Retrieves the pixel value range of an image statistics channel.

SPINNAKERC\_API spinImageStatisticsGetNumPixelValues (spinImageStatistics hStatistics, spinStatistics ← Channel channel, unsigned int \*pNumValues)

Retrieves the number of pixel values of an image statistics channel.

• SPINNAKERC\_API spinImageStatisticsGetMean (spinImageStatistics hStatistics, spinStatisticsChannel channel, float \*pMean)

Retrieves the mean of pixel values of an image statistics channel.

 SPINNAKERC\_API spinImageStatisticsGetHistogram (spinImageStatistics hStatistics, spinStatisticsChannel channel, int \*\*ppHistogram)

Retrieves a histogram of an image statistics channel.

SPINNAKERC\_API spinImageStatisticsGetAll (spinImageStatistics hStatistics, spinStatisticsChannel channel, unsigned int \*pRangeMin, unsigned int \*pRangeMax, unsigned int \*pPixelValueMin, unsigned int \*pPixelValueMax, unsigned int \*pNumPixelValues, float \*pPixelValueMean, int \*\*ppHistogram)

Retrieves all available information of an image statistics channel.

SPINNAKERC\_API spinLogDataGetCategoryName (spinLogEventData hLogEventData, char \*pBuf, size\_t \*pBufLen)

Retrieves the category name of a log event.

SPINNAKERC\_API spinLogDataGetPriority (spinLogEventData hLogEventData, int64\_t \*pValue)

Retrieves the priority of a log event.

SPINNAKERC\_API spinLogDataGetPriorityName (spinLogEventData hLogEventData, char \*pBuf, size\_←
 t \*pBufLen)

Retrieves the priority name of a log event.

• SPINNAKERC\_API spinLogDataGetTimestamp (spinLogEventData hLogEventData, char \*pBuf, size\_t \*p↔ BufLen)

Retrieves the timestamp of a log event.

• SPINNAKERC\_API spinLogDataGetNDC (spinLogEventData hLogEventData, char \*pBuf, size\_t \*pBufLen)

Retrieves the NDC of a log event.

SPINNAKERC\_API spinLogDataGetThreadName (spinLogEventData hLogEventData, char \*pBuf, size\_
 t \*pBufLen)

Retrieves the thread name of a log event.

SPINNAKERC\_API spinLogDataGetLogMessage (spinLogEventData hLogEventData, char \*pBuf, size\_
 t \*pBufLen)

Retrieves the log message of a log event.

 $\bullet \ SPINNAKERC\_API \ spinDeviceEventGetId \ (spinDeviceEventData \ hDeviceEventData, \ uint 64\_t \ *pEventId)$ 

Retrieves the event ID of a device event.

• SPINNAKERC\_API spinDeviceEventGetPayloadData (spinDeviceEventData hDeviceEventData, const uint8\_t \*pBuf, size\_t \*pBufSize)

Retrieves the payload data of a device event.

SPINNAKERC\_API spinDeviceEventGetPayloadDataSize (spinDeviceEventData hDeviceEventData, size\_t \*pBufSize)

Retrieves the payload data size of a device event.

SPINNAKERC\_API spinDeviceEventGetName (spinDeviceEventData hDeviceEventData, char \*pBuf, size
 \_t \*pBufLen)

Retrieves the event name of a device event.

- SPINNAKERC\_API spinImageChunkDataGetIntValue (spinImage hImage, const char \*pName, int64\_t \*p↔ Value)
- SPINNAKERC\_API spinImageChunkDataGetFloatValue (spinImage hImage, const char \*pName, double \*pValue)

#### 13.12.1 Function Documentation

```
13.12.1.1 spinCameraForcelP()
```

```
SPINNAKERC_API spinCameraForceIP ( )
```


Forces the camera to be on the same subnet as its corresponding interface.

#### Returns


spinError The error code; returns SPINNAKER\_ERR\_SUCCESS (or 0) for no error

# 13.13 include/spinc/SpinnakerDefsC.h File Reference

Include dependency graph for SpinnakerDefsC.h:

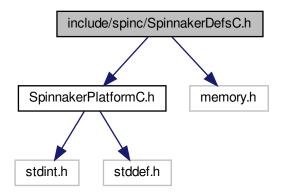

This graph shows which files directly or indirectly include this file:

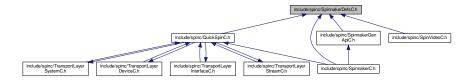

#### **Data Structures**

• struct spinPNGOption

Options for saving PNG images.

• struct spinPPMOption

Options for saving PPM images.

• struct spinPGMOption

Options for saving PGM images.

struct spinTIFFOption

Options for saving TIFF images.

struct spinJPEGOption

Options for saving JPEG images.

• struct spinJPG2Option

Options for saving JPEG 2000 images.

· struct spinBMPOption

Options for saving BMP images.

• struct spinMJPGOptionEx

Options for saving MJPG videos.

• struct spinH264Option

Options for saving H264 videos.

struct spinAVIOptionEx

Options for saving uncompressed videos.

struct spinLibraryVersion

Provides easier access to the current version of Spinnaker.

struct actionCommandResult

Action Command Result.

### **Typedefs**

- typedef uint8\_t bool8\_t
- typedef void \* spinSystem

Handle for system functionality.

typedef void \* spinInterfaceList

Handle for interface list functionality.

typedef void \* spinInterface

Handle for interface functionality.

typedef void \* spinCameraList

Handle for interface functionality.

typedef void \* spinCamera

Handle for camera functionality.

typedef void \* spinImage

Handle for image functionality.

typedef void \* spinImageStatistics

Handle for image statistics functionality.

typedef void \* spinDeviceEventHandler

Handle for device event handler functionality.

• typedef void \* spinImageEventHandler

Handle for image event handler functionality.

typedef void \* spinDeviceArrivalEventHandler

Handle for arrival event handler functionality.

typedef void \* spinDeviceRemovalEventHandler

Handle for removal event handler functionality.

• typedef void \* spinInterfaceEventHandler

Handle for interface event handler functionality.

typedef void \* spinLogEventHandler

Handle for logging event handler functionality.

typedef void \* spinLogEventData

Handle for logging event data functionality.

typedef void \* spinDeviceEventData

Handle for device event data functionality.

typedef void \* spinVideo

Handle for video recording functionality.

typedef void(\* spinDeviceEventFunction) (const spinDeviceEventData hEventData, const char \*pEvent
 — Name, void \*pUserData)

Function signatures are used to create and trigger callbacks and events.

- typedef void(\* spinImageEventFunction) (const spinImage hImage, void \*pUserData)
- typedef void(\* spinArrivalEventFunction) (uint64 t deviceSerialNumber, void \*pUserData)
- typedef void(\* spinRemovalEventFunction) (uint64\_t deviceSerialNumber, void \*pUserData)
- typedef void(\* spinLogEventFunction) (const spinLogEventData hEventData, void \*pUserData)

#### **Enumerations**

```
enum spinError {
 SPINNAKER ERR SUCCESS = 0,
 SPINNAKER ERR ERROR = -1001,
 SPINNAKER_ERR_NOT_INITIALIZED = -1002,
 SPINNAKER_ERR_NOT_IMPLEMENTED = -1003,
 SPINNAKER_ERR_RESOURCE_IN_USE = -1004,
 SPINNAKER ERR ACCESS DENIED = -1005,
 SPINNAKER_ERR_INVALID_HANDLE = -1006,
 SPINNAKER_ERR_INVALID_ID = -1007,
 SPINNAKER_ERR_NO_DATA = -1008,
 SPINNAKER_ERR_INVALID_PARAMETER = -1009,
 SPINNAKER_ERR_IO = -1010,
 SPINNAKER ERR TIMEOUT = -1011,
 SPINNAKER ERR ABORT = -1012,
 SPINNAKER ERR INVALID BUFFER = -1013,
 SPINNAKER_ERR_NOT_AVAILABLE = -1014,
 SPINNAKER_ERR_INVALID_ADDRESS = -1015,
 SPINNAKER ERR BUFFER TOO SMALL = -1016,
 SPINNAKER_ERR_INVALID_INDEX = -1017,
 SPINNAKER_ERR_PARSING_CHUNK_DATA = -1018,
 SPINNAKER_ERR_INVALID_VALUE = -1019,
 SPINNAKER ERR RESOURCE EXHAUSTED = -1020,
 SPINNAKER ERR OUT OF MEMORY = -1021,
 SPINNAKER_ERR_BUSY = -1022,
 GENICAM ERR INVALID ARGUMENT = -2001,
 GENICAM ERR OUT OF RANGE = -2002,
 GENICAM ERR PROPERTY = -2003,
 GENICAM_ERR_RUN_TIME = -2004,
 GENICAM_ERR_LOGICAL = -2005,
 GENICAM ERR ACCESS = -2006,
 GENICAM_ERR_TIMEOUT = -2007,
 GENICAM_ERR_DYNAMIC_CAST = -2008,
 GENICAM ERR GENERIC = -2009,
 GENICAM ERR BAD ALLOCATION = -2010,
 SPINNAKER ERR IM CONVERT = -3001,
 SPINNAKER ERR IM COPY = -3002,
 SPINNAKER ERR IM MALLOC = -3003,
 SPINNAKER_ERR_IM_NOT_SUPPORTED = -3004,
 SPINNAKER_ERR_IM_HISTOGRAM_RANGE = -3005,
 SPINNAKER_ERR_IM_HISTOGRAM_MEAN = -3006,
 SPINNAKER ERR IM MIN MAX = -3007,
 SPINNAKER ERR IM COLOR CONVERSION = -3008,
 SPINNAKER_ERR_CUSTOM_ID = -10000 }
    The error codes used in Spinnaker C.

    enum spinColorProcessingAlgorithm {

 DEFAULT,
 NO_COLOR_PROCESSING,
 NEAREST_NEIGHBOR,
 NEAREST NEIGHBOR AVG,
 BILINEAR.
 EDGE_SENSING,
 HQ LINEAR,
 IPP.
 DIRECTIONAL FILTER,
 RIGOROUS,
 WEIGHTED_DIRECTIONAL_FILTER }
```

```
Color processing algorithms.

    enum spinStatisticsChannel {

 GREY,
 RED,
 GREEN,
 BLUE,
 HUE.
 SATURATION,
 LIGHTNESS,
 NUM STATISTICS CHANNELS }
    Channels that allow statistics to be calculated.

    enum spinImageFileFormat {

 FROM_FILE_EXT = -1,
 PGM,
 PPM,
 BMP.
 JPEG,
 JPEG2000,
 TIFF,
 PNG,
 RAW,
 IMAGE FILE FORMAT FORCE 32BITS = 0x7FFFFFFF }
    File formats to be used for saving images to disk.

    enum spinPixelFormatNamespaceID {

 SPINNAKER PIXELFORMAT NAMESPACE UNKNOWN = 0,
 SPINNAKER PIXELFORMAT NAMESPACE GEV = 1,
 SPINNAKER PIXELFORMAT NAMESPACE IIDC = 2,
 SPINNAKER_PIXELFORMAT_NAMESPACE_PFNC_16BIT = 3,
 SPINNAKER_PIXELFORMAT_NAMESPACE_PFNC_32BIT = 4,
 SPINNAKER_PIXELFORMAT_NAMESPACE_CUSTOM_ID = 1000 }
     This enum represents the namespace in which the TL specific pixel format resides.
• enum spinImageStatus {
 IMAGE_UNKNOWN_ERROR = -1,
 IMAGE NO ERROR = 0,
 IMAGE CRC CHECK FAILED = 1,
 IMAGE DATA OVERFLOW = 2,
 IMAGE MISSING PACKETS,
 IMAGE_LEADER_BUFFER_SIZE_INCONSISTENT,
 IMAGE TRAILER BUFFER SIZE INCONSISTENT,
 IMAGE PACKETID INCONSISTENT,
 IMAGE_MISSING_LEADER = 7,
 IMAGE MISSING TRAILER = 8,
 IMAGE DATA INCOMPLETE = 9.
 IMAGE INFO INCONSISTENT = 10,
 IMAGE CHUNK DATA INVALID = 11,
 IMAGE_NO_SYSTEM_RESOURCES = 12 }
    Status of images returned from spinImageGetStatus() call.
enum spinnakerLogLevel {
 LOG_LEVEL_OFF = -1,
 LOG_LEVEL_FATAL = 0,
 LOG LEVEL ALERT = 100,
 LOG LEVEL CRIT = 200.
 LOG_LEVEL_ERROR = 300,
 LOG LEVEL WARN = 400,
 LOG LEVEL NOTICE = 500,
 LOG LEVEL INFO = 600.
 LOG_LEVEL_DEBUG = 700,
 LOG_LEVEL_NOTSET = 800 }
```

```
log levels

    enum spinPayloadTypeInfoIDs {

 PAYLOAD_TYPE_UNKNOWN = 0,
 PAYLOAD TYPE IMAGE = 1,
 PAYLOAD TYPE RAW DATA = 2,
 PAYLOAD TYPE FILE = 3,
 PAYLOAD TYPE CHUNK DATA = 4,
 PAYLOAD_TYPE_JPEG = 5,
 PAYLOAD_TYPE_JPEG2000 = 6,
 PAYLOAD_TYPE_H264 = 7,
 PAYLOAD_TYPE_CHUNK_ONLY = 8,
 PAYLOAD TYPE DEVICE SPECIFIC = 9,
 PAYLOAD_TYPE_MULTI_PART = 10,
 PAYLOAD_TYPE_CUSTOM_ID = 1000,
 PAYLOAD_TYPE_EXTENDED_CHUNK = 1001,
 PAYLOAD TYPE LOSSLESS COMPRESSED = 1002,
 PAYLOAD_TYPE_LOSSY_COMPRESSED = 1003,
 PAYLOAD TYPE JPEG LOSSLESS COMPRESSED = 1004,
 PAYLOAD TYPE CHUNK DATA LOSSLESS COMPRESSED = 1005,
 PAYLOAD TYPE CHUNK DATA LOSSY COMPRESSED = 1006 }

    enum spinCompressionMethod {

 NONE = 1.
 PACKBITS,
 DEFLATE,
 ADOBE DEFLATE,
 CCITTFAX3.
 CCITTFAX4,
 LZW,
 JPG }
    Compression method used in saving TIFF images in the spinTIFFOption struct.

    enum actionCommandStatus {

 ACTION COMMAND STATUS OK = 0,
 ACTION COMMAND STATUS NO REF TIME = 0x8013,
 ACTION COMMAND STATUS OVERFLOW = 0x8015,
```

Possible Status Codes Returned from Action Command.

ACTION\_COMMAND\_STATUS\_ACTION\_LATE = 0x8016, ACTION\_COMMAND\_STATUS\_ERROR = 0x8FFF }

### **Functions**

typedef SPINNAKERC\_STRUCT\_DEPRECATED ("spinMJPGOption is deprecated, use spinMJPGOptionEx instead.") \_spinMJPGOption

DEPRECATED.

• typedef SPINNAKERC\_STRUCT\_DEPRECATED ("spinAVIOption is deprecated, use spinAVIOptionEx instead.") spinAVIOption


DEPRECATED.

#### **Variables**


- static const bool8\_t False = 0
- static const bool8 t True = 1
- spinMJPGOption
- spinAVIOption

## 13.14 include/spinc/SpinnakerGenApiC.h File Reference

Include dependency graph for SpinnakerGenApiC.h:

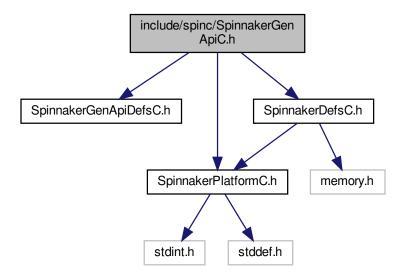

This graph shows which files directly or indirectly include this file:

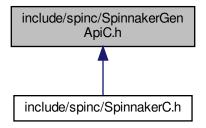

#### **Functions**

- SPINNAKERC\_API spinNodeMapGetNode (spinNodeMapHandle hNodeMap, const char \*pName, spin← NodeHandle \*phNode)
  - Retrieves a node from the nodemap by name.
- SPINNAKERC\_API spinNodeMapGetNumNodes (spinNodeMapHandle hNodeMap, size\_t \*pValue) Gets the number of nodes in the map.
- SPINNAKERC\_API spinNodeMapGetNodeByIndex (spinNodeMapHandle hNodeMap, size\_t index, spin 

  NodeHandle \*phNode)

Retrieves a node from the nodemap by index.

• SPINNAKERC\_API spinNodeMapReleaseNode (spinNodeMapHandle hNodeMap, spinNodeHandle hNode)

Releases the entry node handle.

SPINNAKERC\_API spinNodeMapPoll (spinNodeMapHandle hNodeMap, int64\_t timestamp)

Fires nodes which have a polling time.

• SPINNAKERC\_API spinNodeIsImplemented (spinNodeHandle hNode, bool8\_t \*pbResult)

Checks whether a node is implemented.

SPINNAKERC API spinNodelsReadable (spinNodeHandle hNode, bool8 t \*pbResult)

Checks whether a node is readable.

SPINNAKERC API spinNodelsWritable (spinNodeHandle hNode, bool8 t \*pbResult)

Checks whether a node is writable.

• SPINNAKERC API spinNodelsAvailable (spinNodeHandle hNode, bool8 t \*pbResult)

Checks whether a node is available.

 SPINNAKERC\_API spinNodelsEqual (spinNodeHandle hNodeFirst, spinNodeHandle hNodeSecond, bool8 t\*pbResult)

Checks whether two nodes are equal.

SPINNAKERC\_API spinNodeGetAccessMode (spinNodeHandle hNode, spinAccessMode \*pAccessMode)
 Retrieves the access mode of a node (as an enum, spinAccessMode)

SPINNAKERC API spinNodeGetName (spinNodeHandle hNode, char \*pBuf, size t \*pBufLen)

Retrieves the name of a node (no whitespace)

• SPINNAKERC API spinNodeGetNameSpace (spinNodeHandle hNode, spinNameSpace \*pNamespace)

Retrieve the namespace of a node (as an enum, spinNameSpace)

SPINNAKERC API spinNodeGetVisibility (spinNodeHandle hNode, spinVisibility \*pVisibility)

Retrieves the recommended visibility of a node (as an enum, spinVisibility)

SPINNAKERC API spinNodeInvalidateNode (spinNodeHandle hNode)

Invalidates a node in case its values may have changed, rendering it no longer valid.

SPINNAKERC\_API spinNodeGetCachingMode (spinNodeHandle hNode, spinCachingMode \*pCaching← Mode)

Retrieves the caching mode of a node (as an enum, spinCachingMode)

SPINNAKERC\_API spinNodeGetToolTip (spinNodeHandle hNode, char \*pBuf, size\_t \*pBufLen)

Retrieves a short description of a node.

SPINNAKERC\_API spinNodeGetDescription (spinNodeHandle hNode, char \*pBuf, size\_t \*pBufLen)

Retrieves a longer description of a node.

SPINNAKERC\_API spinNodeGetDisplayName (spinNodeHandle hNode, char \*pBuf, size\_t \*pBufLen)

Retrieves the display name of a node (whitespace possible)

SPINNAKERC\_API spinNodeGetType (spinNodeHandle hNode, spinNodeType \*pType)

Retrieves the type of a node (as an enum, spinNodeType)

SPINNAKERC\_API spinNodeGetPollingTime (spinNodeHandle hNode, int64\_t \*pPollingTime)

Retrieve the polling time of a node.

 SPINNAKERC\_API spinNodeRegisterCallback (spinNodeHandle hNode, spinNodeCallbackFunction pCb← Function, spinNodeCallbackHandle \*phCb)

Registers a callback to a node.

• SPINNAKERC\_API spinNodeDeregisterCallback (spinNodeHandle hNode, spinNodeCallbackHandle hCb)

Unregisters a callback from a node.

SPINNAKERC\_API spinNodeGetImposedAccessMode (spinNodeHandle hNode, spinAccessMode imposedAccessMode)

Retrieves the imposed access mode of a node.

• SPINNAKERC\_API spinNodeGetImposedVisibility (spinNodeHandle hNode, spinVisibility imposedVisibility)

Retrieves the imposed visibility of a node.

SPINNAKERC API spinNodeToString (spinNodeHandle hNode, char \*pBuf, size t \*pBufLen)

Retrieves the value of any node type as a c-string.

SPINNAKERC\_API spinNodeToStringEx (spinNodeHandle hNode, bool8\_t bVerify, char \*pBuf, size\_t \*p
 —
 BufLen)

Retrieves the value of any node type as a c-string; manually set whether to verify the node.

SPINNAKERC API spinNodeFromString (spinNodeHandle hNode, const char \*pBuf)

Sets the value of any node type from a c-string; it is important to ensure that the value of the c-string is appropriate to the node type.

SPINNAKERC\_API spinNodeFromStringEx (spinNodeHandle hNode, bool8\_t bVerify, const char \*pBuf)

Sets the value of any node type from a c-string; manually set whether to verify the node; ensure the value of the c-string is appropriate to the node type.

SPINNAKERC\_API spinStringSetValue (spinNodeHandle hNode, const char \*pBuf)

Sets the value of a string node.

SPINNAKERC\_API spinStringSetValueEx (spinNodeHandle hNode, bool8\_t bVerify, const char \*pBuf)

Sets the value of a string node; manually set whether to verify the node.

SPINNAKERC\_API spinStringGetValue (spinNodeHandle hNode, char \*pBuf, size\_t \*pBufLen)

Retrieves the value of a string node as a c-string.

SPINNAKERC\_API spinStringGetValueEx (spinNodeHandle hNode, bool8\_t bVerify, char \*pBuf, size\_t \*p
 —
 BufLen)

Retrieves the value of a string node as a cstring; manually set whether to verify the node.

SPINNAKERC API spinStringGetMaxLength (spinNodeHandle hNode, int64 t \*pValue)

Retrieves the maximum length of the c-string to be returned.

• SPINNAKERC API spinIntegerSetValue (spinNodeHandle hNode, int64 t value)

Sets the value of an integer node.

SPINNAKERC API spinIntegerSetValueEx (spinNodeHandle hNode, bool8 t bVerify, int64 t value)

Sets the value of an integer node; manually set whether to verify the node.

SPINNAKERC API spinIntegerGetValue (spinNodeHandle hNode, int64 t \*pValue)

Retrieves the value of an integer node.

SPINNAKERC\_API spinIntegerGetValueEx (spinNodeHandle hNode, bool8\_t bVerify, int64\_t \*pValue)

Retrieves the value of an integer node; manually set whether to verify the node.

SPINNAKERC\_API spinIntegerGetMin (spinNodeHandle hNode, int64\_t \*pValue)

Retrieves the minimum value of an integer node; all potential values must be greater than or equal to the minimum.

• SPINNAKERC API spinIntegerGetMax (spinNodeHandle hNode, int64 t \*pValue)

Retrieves the maximum value of an integer node; all potential values must be lesser than or equal to the maximum.

SPINNAKERC\_API spinIntegerGetInc (spinNodeHandle hNode, int64\_t \*pValue)

Retrieves the increment of an integer node; all possible values must be divisible by the increment.

• SPINNAKERC API spinIntegerGetRepresentation (spinNodeHandle hNode, spinRepresentation \*pValue)

Retrieves the numerical representation of the value of a node; i.e.

SPINNAKERC\_API spinFloatSetValue (spinNodeHandle hNode, double value)

Sets the value of a float node.

SPINNAKERC API spinFloatSetValueEx (spinNodeHandle hNode, bool8 t bVerify, double value)

Sets the value of a float node; manually set whether to verify the node.

SPINNAKERC\_API spinFloatGetValue (spinNodeHandle hNode, double \*pValue)

Retrieves the value of a float node.

• SPINNAKERC\_API spinFloatGetValueEx (spinNodeHandle hNode, bool8\_t bVerify, double \*pValue)

Retrieves the value of a float node; manually set whether to verify the node.

SPINNAKERC API spinFloatGetMin (spinNodeHandle hNode, double \*pValue)

Retrieves the minimum value of a float node; all potential values must be greater than or equal to the minimum.

• SPINNAKERC API spinFloatGetMax (spinNodeHandle hNode, double \*pValue)

Retrieves the maximum value of a float node; all potential values must be lesser than or equal to the maximum.

SPINNAKERC\_API spinFloatGetRepresentation (spinNodeHandle hNode, spinRepresentation \*pValue)

Retrieves the numerical representation of the value of a node; i.e.

• SPINNAKERC API spinFloatGetUnit (spinNodeHandle hNode, char \*pBuf, size t \*pBufLen)

Retrieves the units of the float node value.

SPINNAKERC\_API spinEnumerationGetNumEntries (spinNodeHandle hEnumNode, size\_t \*pValue)

Retrieves the number of entries of an enum node.

SPINNAKERC\_API spinEnumerationGetEntryByIndex (spinNodeHandle hEnumNode, size\_t index, spin
 — NodeHandle \*phEntry)

Retrieves an entry node from an enum node using an index.

SPINNAKERC\_API spinEnumerationGetEntryByName (spinNodeHandle hEnumNode, const char \*pName, spinNodeHandle \*phEntry)

Retrieves an entry node from an enum node using the entry's symbolic.

SPINNAKERC\_API spinEnumerationGetCurrentEntry (spinNodeHandle hEnumNode, spinNodeHandle \*phEntry)

Retrieves the currently selected entry node from an enum node.

- SPINNAKERC\_API spinEnumerationReleaseNode (spinNodeHandle hEnumNode, spinNodeHandle hEntry)

  Releases the entry node from the enum node handle.
- SPINNAKERC\_API spinEnumerationSetIntValue (spinNodeHandle hEnumNode, int64\_t value)

Sets a new entry using its integer value retrieved from a call to spinEnumerationEntryGetIntValue(); note that enumeration entry int and enum values are different - int values defined on camera, enum values found in SpinnakerDefsC.h.

• SPINNAKERC\_API spinEnumerationSetEnumValue (spinNodeHandle hEnumNode, size\_t value)

Sets a new entry using its enum; note that enumeration entry int and enum values are different - int values defined on camera, enum values found in SpinnakerDefsC.h.

SPINNAKERC API spinEnumerationEntryGetIntValue (spinNodeHandle hNode, int64 t \*pValue)

Retrieves the integer value of an entry node; note that enumeration entry int and enum values are different - int values defined on camera, enum values found in SpinnakerDefsC.h.

SPINNAKERC API spinEnumerationEntryGetEnumValue (spinNodeHandle hNode, size t \*pValue)

Retrieves the enum value (as an integer) of an entry node; note that enumeraiton entry int and enum values are different - int values defined on camera, enum values found in SpinnakerDefsC.h.

SPINNAKERC\_API spinEnumerationEntryGetSymbolic (spinNodeHandle hNode, char \*pBuf, size\_t \*pBuf
 Len)

Retrieves the symbolic of an entry node as a c-string.

SPINNAKERC\_API spinBooleanSetValue (spinNodeHandle hNode, bool8\_t value)

Sets the value of a boolean node; boolean values are represented by 'True' (which equals '0') and 'False' (which equals '1')

SPINNAKERC\_API spinBooleanGetValue (spinNodeHandle hNode, bool8\_t \*pbValue)

Retrieves the value of a boolean node; boolean values are represented by 'True' (which equals '0') and 'False' (which equals '1')

• SPINNAKERC\_API spinCommandExecute (spinNodeHandle hNode)

Executes the action associated to a command node.

SPINNAKERC\_API spinCommandIsDone (spinNodeHandle hNode, bool8\_t \*pbValue)

Retrieves whether or not the action of a command node has completed.

• SPINNAKERC\_API spinCategoryGetNumFeatures (spinNodeHandle hCategoryNode, size\_t \*pValue)

Retrieves the number of a features (or child nodes) or a category node.

SPINNAKERC\_API spinCategoryGetFeatureByIndex (spinNodeHandle hCategoryNode, size\_t index, spin
 — NodeHandle \*phFeature)

Retrieves a node from a category node using an index.

SPINNAKERC\_API spinCategoryReleaseNode (spinNodeHandle hCategoryNode, spinNodeHandle h
 Feature)

Releases the feature node from the category node.

SPINNAKERC API spinRegisterGet (spinNodeHandle hNode, uint8 t \*pBuf, int64 t length)

Retrieves the value of a register node.

• SPINNAKERC\_API spinRegisterGetEx (spinNodeHandle hNode, bool8\_t bVerify, bool8\_t bIgnoreCache, uint8 t \*pBuf, int64 t length)

Retrieves the value of a register node; manually set whether to verify the node and whether to ignore the cache.

• SPINNAKERC\_API spinRegisterGetAddress (spinNodeHandle hNode, int64\_t \*pAddress)

Retrieves the address of a register node.

SPINNAKERC\_API spinRegisterGetLength (spinNodeHandle hNode, int64\_t \*pLength)

Retrieves the length (in bytes) of the value of a register node.

- SPINNAKERC\_API spinRegisterSet (spinNodeHandle hNode, const uint8\_t \*pBuf, int64\_t length)

  Sets the value of a register node.
- SPINNAKERC\_API spinRegisterSetEx (spinNodeHandle hNode, bool8\_t bVerify, const uint8\_t \*pBuf, int64←
   \_t length)


Sets the value of a register node; manually set whether to verify the node.

• SPINNAKERC\_API spinRegisterSetReference (spinNodeHandle hNode, spinNodeHandle hRef)

Uses a second node as a reference for a register node.

## 13.15 include/spinc/SpinnakerGenApiDefsC.h File Reference

This graph shows which files directly or indirectly include this file:

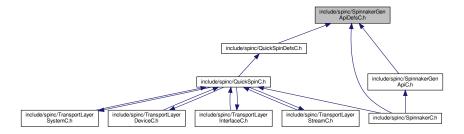

#### **Typedefs**

• typedef void \* spinNodeMapHandle

Handle for nodemap functionality.

• typedef void \* spinNodeHandle

Handle for node functionality.

• typedef void \* spinNodeCallbackHandle

Handle for callback functionality.

• typedef void(\* spinNodeCallbackFunction) (spinNodeHandle hNode)

Function signatures are used to create and trigger callbacks and events.

#### **Enumerations**

enum spinNodeType {

ValueNode.

BaseNode,

IntegerNode,

BooleanNode,

FloatNode,

CommandNode,

StringNode,

RegisterNode,

EnumerationNode,

EnumEntryNode,

CategoryNode,

PortNode,

UnknownNode = -1 }

```
enum spinSign {
 Signed,
 Unsigned,
  _UndefinedSign }
• enum spinAccessMode {
 NI,
 NA,
 WO.
 RO,
 RW,
  UndefinedAccesMode,
  _CycleDetectAccesMode }
• enum spinVisibility {
 Beginner = 0,
 Expert = 1,
 Guru = 2,
 Invisible = 3,
  _UndefinedVisibility = 99 }
enum spinCachingMode {
 NoCache,
 WriteThrough,
 WriteAround,
  _UndefinedCachingMode }
• enum spinRepresentation {
 Linear,
 Logarithmic,
 Boolean,
 PureNumber,
 HexNumber,
 IPV4Address,
 MACAddress,
 _UndefinedRepresentation }
     recommended representation of a node value
enum spinEndianess {
 BigEndian,
 LittleEndian,
  _UndefinedEndian }
     Endianess of a value in a register.
enum spinNameSpace {
 Custom,
 Standard,
  UndefinedNameSpace }
     Defines if a node name is standard or custom.
• enum spinStandardNameSpace {
 None,
 GEV,
 IIDC,
 CL,
 USB,
 UndefinedStandardNameSpace }
     Defines from which standard namespace a node name comes from.
• enum spinYesNo {
 Yes = 1,
 No = 0,
  UndefinedYesNo = 2 }
     Defines the chices of a Yes/No alternaitve.
```


```
• enum spinSlope {
  Increasing,
  Decreasing,
  Varying,
  Automatic,
  UndefinedESlope }
     typedef for fomula type
• enum spinXMLValidation {
 xvLoad = 0x00000001L,
 xvCycles = 0x00000002L,
  xvSFNC = 0x00000004L,
  xvDefault = 0x00000000L
 xvAII = 0xfffffffL,
  _UndefinedEXMLValidation = 0x8000000L }
     typedef describing the different validity checks which can be performed on an XML file

    enum spinDisplayNotation {


 fnAutomatic,
 fnFixed.
 fnScientific,
  _UndefinedEDisplayNotation }
     typedef for float notation
• enum spinInterfaceType {
 intflValue,
 intflBase,
 intflInteger,
 intflBoolean,
 intflCommand,
 intflFloat,
 intflString,
 intflRegister,
 intflCategory,
 intflEnumeration,
 intflEnumEntry,
 intflPort }
     typedef for interface type
enum spinLinkType {
  ctAllDependingNodes,
 ctAllTerminalNodes,
 ctInvalidators,
  ctReadingChildren,
  ctWritingChildren,
  ctDependingChildren }
     typedef for link type
• enum spinIncMode {
  noIncrement,
 fixedIncrement,
 listIncrement }
     typedef for increment mode
• enum spinInputDirection {
 idFrom,
  idTo,
  idNone }
     typedef for link type
```

## 13.16 include/spinc/SpinnakerPlatformC.h File Reference

Include dependency graph for SpinnakerPlatformC.h:

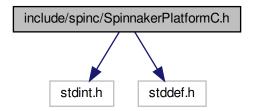

This graph shows which files directly or indirectly include this file:

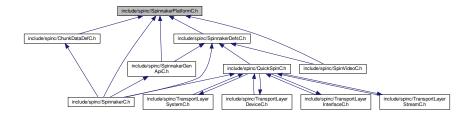

## Macros

• #define SPINNAKERC\_API SPINC\_IMPORT\_EXPORT spinError SPINC\_CALLTYPE


## 13.16.1 Macro Definition Documentation

## 13.16.1.1 SPINNAKERC\_API

#define SPINNAKERC\_API SPINC\_IMPORT\_EXPORT spinError SPINC\_CALLTYPE

## 13.17 include/spinc/SpinVideoC.h File Reference

Include dependency graph for SpinVideoC.h:

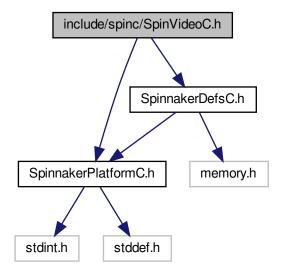

## **Functions**


- SPINNAKERC\_API\_DEPRECATED ("spinVideoOpenUncompressed is deprecated, use spinVideoOpen
   UncompressedEx instead.", spinVideoOpenUncompressed(spinVideo \*phSpinVideo, const char \*pName,
   spinAVIOption option))
- SPINNAKERC\_API spinVideoOpenUncompressedEx (spinVideo \*phSpinVideo, const char \*pName, spin← AVIOptionEx option)
- SPINNAKERC\_API\_DEPRECATED ("spinVideoOpenMJPG is deprecated, use spinVideoOpenMJPGEx instead.", spinVideoOpenMJPG(spinVideo \*phSpinVideo, const char \*pName, spinMJPGOption option))
- SPINNAKERC\_API spinVideoOpenMJPGEx (spinVideo \*phSpinVideo, const char \*pName, spinMJPG←
  OptionEx option)
- SPINNAKERC\_API spinVideoOpenH264 (spinVideo \*phSpinVideo, const char \*pName, spinH264Option option)
- SPINNAKERC\_API spinVideoAppend (spinVideo hSpinVideo, spinImage hImage)
- SPINNAKERC API spinVideoSetMaximumFileSize (spinVideo hSpinVideo, unsigned int size)

Set the maximum file size (in megabytes) of a AVI/MP4 file.

SPINNAKERC API spinVideoClose (spinVideo hSpinVideo)

## 13.18 include/spinc/TransportLayerDefsC.h File Reference

This graph shows which files directly or indirectly include this file:

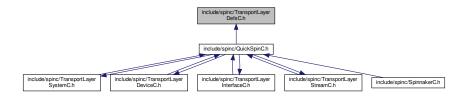

#### **Enumerations**

enum spinTLStreamTypeEnums {
 StreamType\_GigEVision,
 StreamType\_CameraLink,
 StreamType\_CameraLinkHS,
 StreamType\_CoaXPress,
 StreamType\_USB3Vision,
 StreamType\_Custom,
 NUMSTREAMTYPE }

The enumeration definitions for transport layer nodes.

 enum spinTLStreamModeEnums { StreamMode\_Socket,

StreamMode\_LWF,

StreamMode\_MVA,

NUMSTREAMMODE }

• enum spinTLStreamBufferCountModeEnums {

StreamBufferCountMode Manual,

StreamBufferCountMode\_Auto,

NUMSTREAMBUFFERCOUNTMODE }

enum spinTLStreamBufferHandlingModeEnums {

StreamBufferHandlingMode\_OldestFirst,

 $Stream Buffer Handling Mode\_Oldest First Overwrite,\\$ 

StreamBufferHandlingMode\_NewestOnly,

StreamBufferHandlingMode\_NewestFirst,

NUMSTREAMBUFFERHANDLINGMODE }

enum spinTLDeviceTypeEnums {

DeviceType\_GigEVision,

DeviceType CameraLink,

DeviceType\_CameraLinkHS,

DeviceType\_CoaXPress,

DeviceType\_USB3Vision,

DeviceType Custom,

NUMDEVICETYPE }

• enum spinTLDeviceAccessStatusEnums {

DeviceAccessStatus Unknown,

DeviceAccessStatus\_ReadWrite,

DeviceAccessStatus ReadOnly,

DeviceAccessStatus\_NoAccess,

DeviceAccessStatus Busy,

DeviceAccessStatus OpenReadWrite,

DeviceAccessStatus\_OpenReadOnly,

NUMDEVICEACCESSSTATUS }

```
enum spinTLGevCCPEnums {
 GevCCP_EnumEntry_GevCCP_OpenAccess,
 {\tt GevCCP\_EnumEntry\_GevCCP\_ExclusiveAccess},
 GevCCP_EnumEntry_GevCCP_ControlAccess,
 NUMGEVCCP }
• enum spinTLGUIXMLLocationEnums {
 GUIXMLLocation Device,
 GUIXMLLocation Host,
 NUMGUIXMLLOCATION }

    enum spinTLGenICamXMLLocationEnums {

 GenICamXMLLocation_Device,
 GenICamXMLLocation_Host,
 NUMGENICAMXMLLOCATION }

    enum spinTLDeviceEndianessMechanismEnums {

 DeviceEndianessMechanism Legacy,
 DeviceEndianessMechanism_Standard,
 NUMDEVICEENDIANESSMECHANISM }

    enum spinTLDeviceCurrentSpeedEnums {


 DeviceCurrentSpeed UnknownSpeed,
 DeviceCurrentSpeed LowSpeed,
 DeviceCurrentSpeed FullSpeed,
 DeviceCurrentSpeed HighSpeed,
 DeviceCurrentSpeed SuperSpeed,
 NUMDEVICECURRENTSPEED }

    enum spinTLInterfaceTypeEnums {


 InterfaceType_GigEVision,
 InterfaceType_CameraLink,
 InterfaceType CameraLinkHS,
 InterfaceType CoaXPress,
 InterfaceType_USB3Vision,
 InterfaceType_Custom,
 NUMINTERFACETYPE }
enum spinTLPOEStatusEnums {
 POEStatus NotSupported,
 POEStatus_PowerOff,
 POEStatus_PowerOn,
 NUMPOESTATUS }
enum spinTLFilterDriverStatusEnums {
 FilterDriverStatus_NotSupported,
 FilterDriverStatus_Disabled,
 FilterDriverStatus Enabled,
 NUMFILTERDRIVERSTATUS }
• enum spinTLTLTypeEnums {
 TLType GigEVision,
 TLType CameraLink,
 TLType CameraLinkHS,
 TLType CoaXPress,
 TLType USB3Vision.
 TLType_Mixed,
 TLType_Custom,
 NUMTLTYPE }
```

# 13.19 include/spinc/TransportLayerDeviceC.h File Reference

Include dependency graph for TransportLayerDeviceC.h:

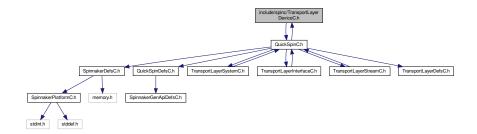

This graph shows which files directly or indirectly include this file:

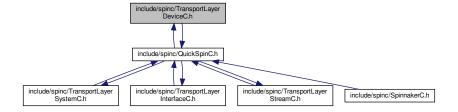


## **Data Structures**


• struct quickSpinTLDevice

## 13.20 include/spinc/TransportLayerInterfaceC.h File Reference

Include dependency graph for TransportLayerInterfaceC.h:

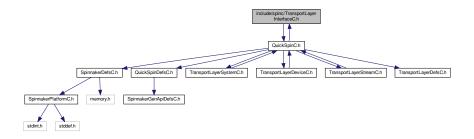

This graph shows which files directly or indirectly include this file:

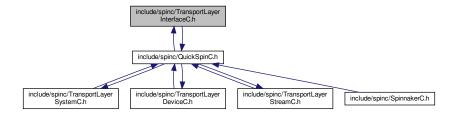


## **Data Structures**


• struct quickSpinTLInterface

# 13.21 include/spinc/TransportLayerStreamC.h File Reference

Include dependency graph for TransportLayerStreamC.h:

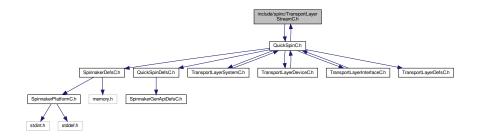

This graph shows which files directly or indirectly include this file:

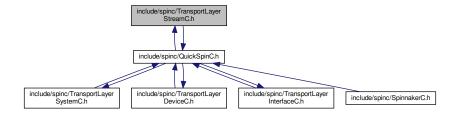


## **Data Structures**


• struct quickSpinTLStream

## 13.22 include/spinc/TransportLayerSystemC.h File Reference

Include dependency graph for TransportLayerSystemC.h:

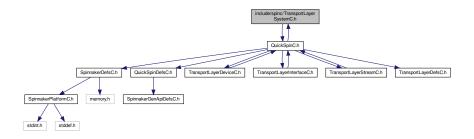

This graph shows which files directly or indirectly include this file:

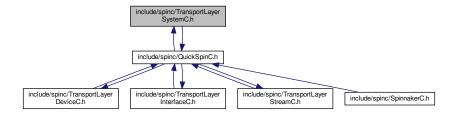

## **Data Structures**

• struct quickSpinTLSystem

556 File Documentation

## Index

aPAUSEMACCtrlFramesReceived	ActionGroupKey
quickSpin, 367	quickSpin, 366
aPAUSEMACCtrlFramesTransmitted	ActionGroupMask
quickSpin, 367	quickSpin, 366
AasRoiEnable	ActionQueueSize
quickSpin, 364	quickSpin, 367
AasRoiHeight	ActionSelector
quickSpin, 364	quickSpin, 367
AasRoiOffsetX	ActionUnconditionalMode
quickSpin, 364	quickSpin, 367
AasRoiOffsetY	AdaptiveCompressionEnable
quickSpin, 364	quickSpin, 367
AasRoiWidth	AdcBitDepth
quickSpin, 364	quickSpin, 367
AcquisitionAbort	AutoAlgorithmSelector
quickSpin, 365	quickSpin, 367
AcquisitionArm	AutoExposureControlLoopDamping
quickSpin, 365	quickSpin, 368
AcquisitionBurstFrameCount	AutoExposureControlPriority
quickSpin, 365	quickSpin, 368
AcquisitionFrameCount	AutoExposureEVCompensation
quickSpin, 365	quickSpin, 368
AcquisitionFrameRate	AutoExposureExposureTimeLowerLimit
quickSpin, 365	quickSpin, 368
AcquisitionFrameRateEnable	AutoExposureExposureTimeUpperLimit
quickSpin, 365	quickSpin, 368
AcquisitionLineRate	AutoExposureGainLowerLimit
quickSpin, 365	quickSpin, 368
AcquisitionMode	AutoExposureGainUpperLimit
quickSpin, 365	quickSpin, 368
AcquisitionResultingFrameRate	AutoExposureGreyValueLowerLimit
quickSpin, 366	quickSpin, 368
AcquisitionStart	AutoExposureGreyValueUpperLimit
quickSpin, 366	quickSpin, 369
AcquisitionStatus	AutoExposureLightingMode
quickSpin, 366	quickSpin, 369
AcquisitionStatusSelector	AutoExposureMeteringMode
quickSpin, 366	quickSpin, 369
AcquisitionStop	AutoExposureTargetGreyValue
quickSpin, 366	quickSpin, 369
ActionCommand	AutoExposureTargetGreyValueAuto
quickSpinTLInterface, 456	quickSpin, 369
actionCommandResult, 351	BalanceRatio
DeviceAddress, 351	quickSpin, 369
Status, 351	BalanceRatioSelector
actionCommandStatus	
Spinnaker C Structures, 264	quickSpin, 369 BalanceWhiteAuto
ActionDeviceKey	quickSpin, 369
quickSpin, 366	BalanceWhiteAutoDamping
quickopini, odd	DalancewhiteAutoDamping

quickSpin, 370	spinCameraRelease, 192
BalanceWhiteAutoLowerLimit	spinCameraUnregisterDeviceEventHandler, 192
quickSpin, 370	spinCameraUnregisterImageEventHandler, 193
BalanceWhiteAutoProfile	spinCameraWritePort, 193
quickSpin, 370	Camera Enumerations, 23
BalanceWhiteAutoUpperLimit	spinAcquisitionModeEnums, 55
quickSpin, 370	spinAcquisitionStatusSelectorEnums, 55
binaryFile	spinActionUnconditionalModeEnums, 56
spinPGMOption, 487	spinAdcBitDepthEnums, 56
spinPPMOption, 488	spinAutoAlgorithmSelectorEnums, 56
BinningHorizontal	spinAutoExposureControlPriorityEnums, 57
quickSpin, 370	spinAutoExposureLightingModeEnums, 57
BinningHorizontalMode	spinAutoExposureMeteringModeEnums, 58
quickSpin, 370	spinAutoExposureTargetGreyValueAutoEnums, 58
BinningSelector	spinBalanceRatioSelectorEnums, 58
quickSpin, 370	spinBalanceWhiteAutoEnums, 59
BinningVertical	spinBalanceWhiteAutoProfileEnums, 59
quickSpin, 370	spinBinningHorizontalModeEnums, 59
BinningVerticalMode	spinBinningSelectorEnums, 60
quickSpin, 371	spinBinningSelectorEnums, 60 spinBinningVerticalModeEnums, 60
bitrate	spinBlackLevelAutoBalanceEnums, 60
spinH264Option, 481	spinBlackLevelAutoEnums, 61
BlackLevel	spinBlackLevelSelectorEnums, 61
quickSpin, 371	spinChunkBlackLevelSelectorEnums, 61
BlackLevelAuto	•
quickSpin, 371	spinChunkCounterSelectorEnums, 62
BlackLevelAutoBalance	spinChunkEncoderSelectorEnums, 62
quickSpin, 371	spinChunkEncoderStatusEnums, 62
BlackLevelClampingEnable	spinChunkExposureTimeSelectorEnums, 63
quickSpin, 371	spinChunkGainSelectorEnums, 63
BlackLevelRaw	spinChunkImageComponentEnums, 63
quickSpin, 371	spinChunkPixelFormatEnums, 64
BlackLevelSelector	spinChunkRegionIDEnums, 64
quickSpin, 371	spinChunkScan3dCoordinateReferenceSelector ←
bool8 t	Enums, 65
Spinnaker C Definitions, 22	spinChunkScan3dCoordinateSelectorEnums, 65
build	spinChunkScan3dCoordinateSystemEnums, 65
spinLibraryVersion, 484	spinChunkScan3dCoordinateSystemReference ←
,	Enums, 66
Camera Access, 182	spinChunkScan3dCoordinateTransformSelector←
spinCameraBeginAcquisition, 183	Enums, 66
spinCameraDeInit, 184	spinChunkScan3dDistanceUnitEnums, 66
spinCameraEndAcquisition, 184	spinChunkScan3dOutputModeEnums, 67
spinCameraGetAccessMode, 184	spinChunkSelectorEnums, 67
spinCameraGetGuiXml, 185	spinChunkSourceIDEnums, 68
spinCameraGetNextImage, 185	spinChunkTimerSelectorEnums, 68
spinCameraGetNextImageEx, 186	spinChunkTransferStreamIDEnums, 69
spinCameraGetNodeMap, 186	spinClConfigurationEnums, 69
spinCameraGetTLDeviceNodeMap, 187	spinClTimeSlotsCountEnums, 69
spinCameraGetTLStreamNodeMap, 187	spinColorTransformationSelectorEnums, 70
spinCameraGetUniqueID, 188	spinColorTransformationValueSelectorEnums, 70
spinCameraInit, 188	spinCompressionSaturationPriorityEnums, 71
spinCameralsInitialized, 189	spinCounterEventActivationEnums, 71
spinCameralsStreaming, 189	spinCounterEventSourceEnums, 71
spinCameralsValid, 190	spinCounterResetActivationEnums, 72
spinCameraReadPort, 190	spinCounterResetSourceEnums, 72
spinCameraRegisterDeviceEventHandler, 190	spinCounterSelectorEnums, 73
spinCameraRegisterDeviceEventHandlerEx, 191	spinCounterStatusEnums, 73
spinCameraRegisterImageEventHandler, 191	spinCounterTriggerActivationEnums, 74

spinCounterTriggerSourceEnums, 74	spinGevIEEE1588StatusEnums, 97
spinCxpConnectionTestModeEnums, 75	spinGevIPConfigurationStatusEnums, 98
·	
spinCxpLinkConfigurationEnums, 75	spinGevPhysicalLinkConfigurationEnums, 98
spinCxpLinkConfigurationPreferredEnums, 76	spinGevSupportedOptionSelectorEnums, 98
spinCxpLinkConfigurationStatusEnums, 77	spinImageComponentSelectorEnums, 99
spinCxpPoCxpStatusEnums, 78	spinImageCompressionJPEGFormatOption ←
spinDecimationHorizontalModeEnums, 78	Enums, 100
spinDecimationSelectorEnums, 78	spinImageCompressionModeEnums, 100
spinDecimationVerticalModeEnums, 79	spinImageCompressionRateOptionEnums, 101
spinDefectCorrectionModeEnums, 79	spinLUTSelectorEnums, 105
spinDeinterlacingEnums, 79	spinLineFormatEnums, 101
spinDeviceCharacterSetEnums, 80	spinLineInputFilterSelectorEnums, 101
spinDeviceClockSelectorEnums, 80	spinLineModeEnums, 102
spinDeviceConnectionStatusEnums, 80	spinLineSelectorEnums, 102
spinDeviceIndicatorModeEnums, 81	spinLineSourceEnums, 102
spinDeviceLinkHeartbeatModeEnums, 81	spinLogicBlockLUTInputActivationEnums, 103
spinDeviceLinkThroughputLimitModeEnums, 81	spinLogicBlockLUTInputSelectorEnums, 103
spinDevicePowerSupplySelectorEnums, 81	spinLogicBlockLUTInputSourceEnums, 104
spinDeviceRegistersEndiannessEnums, 82	spinLogicBlockLUTSelectorEnums, 104
spinDeviceScanTypeEnums, 82	spinLogicBlockSelectorEnums, 105
spinDeviceSerialPortBaudRateEnums, 82	spinPixelColorFilterEnums, 105
spinDeviceSerialPortSelectorEnums, 83	spinPixelFormatEnums, 106
spinDeviceStreamChannelEndiannessEnums, 83	spinPixelFormatInfoSelectorEnums, 111
spinDeviceStreamChannelTypeEnums, 83	spinPixelSizeEnums, 117
spinDeviceTLTypeEnums, 85	spinRegionDestinationEnums, 118
spinDeviceTapGeometryEnums, 84	spinRegionModeEnums, 118
spinDeviceTemperatureSelectorEnums, 85	spinRegionSelectorEnums, 118
spinDeviceTypeEnums, 86	spinRgbTransformLightSourceEnums, 118
spinEncoderModeEnums, 86	spinScan3dCoordinateReferenceSelectorEnums,
spinEncoderOutputModeEnums, 86	119
spinEncoderResetActivationEnums, 87	spinScan3dCoordinateSelectorEnums, 119
spinEncoderResetSourceEnums, 87	spinScan3dCoordinateSystemEnums, 120
spinEncoderSelectorEnums, 88	spinScan3dCoordinateSystemReferenceEnums,
spinEncoderSourceAEnums, 89	120
spinEncoderSourceBEnums, 89	spinScan3dCoordinateTransformSelectorEnums,
spinEncoderStatusEnums, 89	120
spinEventNotificationEnums, 90	spinScan3dDistanceUnitEnums, 121
spinEventSelectorEnums, 90	spinScan3dOutputModeEnums, 121
spinExposureActiveModeEnums, 90	spinSensorDigitizationTapsEnums, 122
spinExposureAutoEnums, 90	spinSensorShutterModeEnums, 122
spinExposureModeEnums, 91	spinSensorTapsEnums, 123
spinExposureTimeModeEnums, 91	spinSequencerConfigurationModeEnums, 123
spinExposureTimeSelectorEnums, 92	spinSequencerConfigurationValidEnums, 124
spinFileOpenModeEnums, 92	spinSequencerModeEnums, 124
spinFileOperationSelectorEnums, 92	spinSequencerSetValidEnums, 124
spinFileOperationStatusEnums, 93	spinSequencerTriggerActivationEnums, 124
spinFileSelectorEnums, 93	spinSequencerTriggerSourceEnums, 125
spinGainAutoBalanceEnums, 93	spinSerialPortBaudRateEnums, 125
spinGainAutoEnums, 95	spinSerialPortParityEnums, 126
spinGainSelectorEnums, 95	spinSerialPortSelectorEnums, 126
spinGevCCPEnums, 95	spinSerialPortSourceEnums, 126
spinGevCurrentPhysicalLinkConfigurationEnums,	spinSerialPortStopBitsEnums, 127
96	spinSoftwareSignalSelectorEnums, 127
spinGevGVCPExtendedStatusCodesSelector ←	spinSourceSelectorEnums, 127
Enums, 96	spinTestPatternEnums, 127
spinGevGVSPExtendedIDModeEnums, 96	spinTestPatternGeneratorSelectorEnums, 128
spinGevIEEE1588ClockAccuracyEnums, 97	spinTimerSelectorEnums, 128
spinGevIEEE1588ModeEnums, 97	spinTimerStatusEnums, 128

spinTimerTriggerActivationEnums, 129	quickSpin, 373
spinTimerTriggerSourceEnums, 129	ChunkExposureTime
spinTransferComponentSelectorEnums, 131	quickSpin, 373
spinTransferControlModeEnums, 131	ChunkExposureTimeSelector
spinTransferOperationModeEnums, 131	quickSpin, 373
spinTransferQueueModeEnums, 132	ChunkFrameID
spinTransferSelectorEnums, 132	quickSpin, 373
spinTransferStatusSelectorEnums, 132	ChunkGain
spinTransferTriggerActivationEnums, 133	quickSpin, 373
spinTransferTriggerModeEnums, 133	ChunkGainSelector
spinTransferTriggerSelectorEnums, 133	quickSpin, 373
spinTransferTriggerSourceEnums, 134	ChunkHeight
spinTriggerActivationEnums, 135	quickSpin, 374
spinTriggerModeEnums, 135	ChunkImage
spinTriggerOverlapEnums, 136	quickSpin, 374
spinTriggerSelectorEnums, 136	ChunkImageComponent
spinTriggerSourceEnums, 136	quickSpin, 374
spinUserOutputSelectorEnums, 137	ChunkInferenceBoundingBoxResult
spinUserSetDefaultEnums, 137	quickSpin, 374
spinUserSetSelectorEnums, 138	ChunkInferenceConfidence
spinOserGelectorEndins, 138	quickSpin, 374
CameraList Access, 168	ChunkInferenceFrameId
spinCameraListAppend, 168	quickSpin, 374 ChunkInferenceResult
spinCameraListClear, 169	
spinCameraListCreateEmpty, 169	quickSpin, 374
spinCameraListDestroy, 170	ChunkLinePitch
spinCameraListGet, 170	quickSpin, 374
spinCameraListGetBySerial, 171	ChunkLineStatusAll
spinCameraListGetSize, 171	quickSpin, 375
spinCameraListRemove, 172	ChunkModeActive
spinCameraListRemoveBySerial, 172	quickSpin, 375
Chunk data access, 248	ChunkOffsetX
spinImageChunkDataGetFloatValue, 248	quickSpin, 375
spinImageChunkDataGetIntValue, 248	ChunkOffsetY
Chunk Data Structures, 139	quickSpin, 375
ChunkBlackLevel	ChunkPartSelector
quickSpin, 371	quickSpin, 375
ChunkBlackLevelSelector	ChunkPixeIDynamicRangeMax
quickSpin, 372	quickSpin, 375
ChunkCRC	ChunkPixeIDynamicRangeMin
quickSpin, 372	quickSpin, 375
ChunkCompressionMode	ChunkPixelFormat
quickSpin, 372	quickSpin, 375
ChunkCompressionRatio	ChunkRegionID
quickSpin, 372	quickSpin, 376
ChunkCounterSelector	ChunkScan3dAxisMax
quickSpin, 372	quickSpin, 376
ChunkCounterValue	ChunkScan3dAxisMin
quickSpin, 372	quickSpin, 376
ChunkEnable	ChunkScan3dCoordinateOffset
quickSpin, 372	quickSpin, 376
ChunkEncoderSelector	• •
	ChunkScan3dCoordinateReferenceSelector
quickSpin, 372	quickSpin, 376
ChunkEncoderStatus	ChunkScan3dCoordinateReferenceValue
quickSpin, 373	quickSpin, 376
ChunkEncoderValue	ChunkScan3dCoordinateScale
quickSpin, 373	quickSpin, 376
ChunkExposureEndLineStatusAll	ChunkScan3dCoordinateSelector

quickSpin, 376	quickSpin, 380
ChunkScan3dCoordinateSystem	ColorTransformationValueSelector
quickSpin, 377	quickSpin, 380
ChunkScan3dCoordinateSystemReference	compression
quickSpin, 377	spinTIFFOption, 489
ChunkScan3dCoordinateTransformSelector	compressionLevel
quickSpin, 377	spinPNGOption, 487
ChunkScan3dDistanceUnit	CompressionRatio
quickSpin, 377	quickSpin, 380
ChunkScan3dInvalidDataFlag	CompressionSaturationPriority
quickSpin, 377	quickSpin, 380
ChunkScan3dInvalidDataValue	CounterDelay
quickSpin, 377	quickSpin, 381
ChunkScan3dOutputMode	CounterDuration
quickSpin, 377	quickSpin, 381
ChunkScan3dTransformValue	CounterEventActivation
quickSpin, 377	quickSpin, 381
ChunkScanLineSelector	CounterEventSource
quickSpin, 378	quickSpin, 381
ChunkSelector	CounterReset
quickSpin, 378	quickSpin, 381
ChunkSequencerSetActive	CounterResetActivation
quickSpin, 378	quickSpin, 381
ChunkSerialData	CounterResetSource
quickSpin, 378	quickSpin, 381
ChunkSerialDataLength	CounterSelector
quickSpin, 378	quickSpin, 381
ChunkSerialReceiveOverflow	CounterStatus
quickSpin, 378	quickSpin, 382
ChunkSourceID	CounterTriggerActivation
quickSpin, 378	quickSpin, 382
ChunkStreamChannelID	CounterTriggerSource
quickSpin, 378	quickSpin, 382
ChunkTimerSelector	CounterValue
quickSpin, 379	quickSpin, 382
ChunkTimerValue	CounterValueAtReset
quickSpin, 379	quickSpin, 382
ChunkTimestamp	CxpConnectionSelector
quickSpin, 379	quickSpin, 382
ChunkTimestampLatchValue	CxpConnectionTestErrorCount
quickSpin, 379	quickSpin, 382
ChunkTransferBlockID	CxpConnectionTestMode
quickSpin, 379	quickSpin, 382
ChunkTransferQueueCurrentBlockCount	CxpConnectionTestPacketCount
quickSpin, 379	quickSpin, 383
ChunkTransferStreamID	CxpLinkConfiguration
quickSpin, 379	quickSpin, 383
ChunkWidth	CxpLinkConfigurationPreferred
quickSpin, 379	quickSpin, 383
ClConfiguration	CxpLinkConfigurationStatus
quickSpin, 380	quickSpin, 383
CITimeSlotsCount	CxpPoCxpAuto
quickSpin, 380	quickSpin, 383
ColorTransformationEnable	CxpPoCxpStatus
quickSpin, 380	quickSpin, 383
ColorTransformationSelector	CxpPoCxpTripReset
quickSpin, 380	quickSpin, 383
ColorTransformationValue	CxpPoCxpTurnOff

DecimationHorizontal quickSpin, 384  DecimationHorizontalMode quickSpin, 384  DecimationSelector quickSpin, 384  DecimationVertical quickSpin, 384  DecimationVertical quickSpin, 384  DefectCorrectStaticEnable quickSpin, 384  DefectCorrectionMode quickSpin, 384  DefectCorrectionMode quickSpin, 384  DefectCorrectionMode quickSpin, 384  DefectCorrectionMode quickSpin, 384  DefectTableApply quickSpin, 384  DefectTableApply quickSpin, 385  DefectTableFactoryRestore quickSpin, 385  DefectTableIndex quickSpin, 385  DefectTableIndex quickSpin, 385  DefectTableNexDeverunGetIdqx quickSpin, 385  DefectTableSpin (385  DefectTableSpin (385)  DefectTableSpin (385)  DefectTableSpin, 385  DefectTableSpin (385)  DefectTableSpin (385)  DefectTableSpin (385)  DefectTableSpin, 385  DefectTableSpin, 385  DefectTableSpin (385)  DefectTableSpin, 385  DefectTableSpin (385)  DefectTableSpin (385)  DefectTableSpin (385)  DefectTableSpin, 385  DefectTableSpin, 385  DefectTableSpin (385)  DefectTableSpin, 385  DefectTableSpin (385)  DefectTableSpin, 385  DefectTableSpin, 386  DeviceDonitertical quickSpin, 386  DeviceDindSpin, 386  DeviceClonCorrectionSpect quickSpin, 386  DeviceConnectionSpect quickSpin, 388  DeviceLinkCorrection quickSpin, 388  DeviceLinkSpin, 388  DeviceLinkSpin, 388  DeviceLinkSpin, 38	quickSpin, 383	quickSpinTLDevice, 450 DeviceDriverVersion
quickSpin, 384 DecimationNetricantalMode quickSpin, 384 DecimationNetricantalMode quickSpin, 384 DecimationNetrical quickSpin, 384 DecimationNetrical quickSpin, 384 DecimationNetrical duickSpin, 384 DecimationNetricalMode quickSpin, 384 DefectCrorectStaticEnable quickSpin, 384 DefectCrorectStaticEnable quickSpin, 384 DefectCrorectStaticEnable quickSpin, 384 DefectTableApply quickSpin, 385 DefectTableCoordinateX quickSpin, 385 DefectTableCoordinateY quickSpin, 385 DefectTablePactoryRestore quickSpin, 385 DefectTablePactory quickSpin, 385 DeviceContectventGetPayloadData, 246 spinDeviceEventGetPayloadData, 246 spinDeviceCoventGetPayloadData, 246 spinDeviceCoventGetPaylo	DecimationHorizontal	
Decimation-HorizontalMode quickSpin, 384 Decimation-Selector quickSpin, 384 Decimation-Vertical quickSpin, 384 Decimation-VerticalMode quickSpin, 384 DefectCorrectStaticEnable quickSpin, 384 DefectCorrectionMode quickSpin, 384 DefectCorrectionMode quickSpin, 384 DefectCorrectionMode quickSpin, 384 DefectTableApply quickSpin, 384 DefectTableApply quickSpin, 385 DefectTableCoordinateY quickSpin, 385 DefectTableFactoryRestore quickSpin, 385 DefectTableIndex quickSpin, 385 DefectTableIndex quickSpin, 385 DefectTableSave quickSpin, 385 DefectTableSave quickSpin, 385 Device Event Data Access, 245 spinDeviceEventGettd, 245 spinDeviceEventGettd, 245 spinDeviceEventGettd, 245 spinDeviceEventGettd, 245 spinDeviceEventGettale, 246 spinDeviceEventGettale, 246 spinDeviceEventGettale, 246 spinDeviceEventGettale, 246 spinDeviceEventGettale, 246 spinDeviceEventGettale, 246 spinDeviceEventGettale, 456 DeviceClockFrequency quickSpin, 386 DeviceClockSelector quickSpin, 386 DeviceConnectionSpeed quickSpin, 386 DeviceConnectionSpeed quickSpinTLDevice, 450 DeviceManifestErimayURL quickSpin, 386 DeviceConnectionStatus quickSpinTLInterface, 456 DeviceConnectionSpeed quickSpinTLInterface,		
quickSpin, 384 DecimationSelector quickSpin, 384 DecimationVertical quickSpin, 384 DecimationVerticalMode quickSpin, 384 DefectCrarectStaticEnable quickSpin, 384 DefectCrarectStaticEnable quickSpin, 384 DefectCrarectStaticEnable quickSpin, 384 DefectTableApply quickSpin, 385 DefectTableApply quickSpin, 385 DefectTableCoordinateX quickSpin, 385 DefectTableCoordinateX quickSpin, 385 DefectTableApply quickSpin, 386 DeviceDementagetTableApply quickSpin, 386 DeviceClockFrequency quickSpin, 386 DeviceClockFrequency quickSpin, 386 DeviceConnectionSpeed quickSpin, 388 DeviceLinkThroughputLimit quickSpin, 389 DeviceLinkThroughputLimit quickSpin, 389 DeviceManifestSchemaMajorVersion	·	
DecimationVertical quickSpin, 384  DecimationVertical quickSpin, 384  DecimationVertical quickSpin, 384  DecimationVertical quickSpin, 384  DefectCorrectStaticEnable quickSpin, 384  DefectCorrectionMode quickSpin, 384  DefectCorrectionMode quickSpin, 384  DefectTableApply quickSpin, 385  DefectTableApply quickSpin, 385  DefectTableFactoryRestore quickSpin, 385  DefectTableFactoryRestore quickSpin, 385  DefectTablePixelCount quickSpin, 385  DefectTableBixew quickSpin, 385  DefectTableRixes quickSpin, 385  DefectTableRixes quickSpin, 385  DefectTablePixelCount quickSpin, 385  DefectTablePixelCount quickSpin, 385  DefectTablePixelCount quickSpin, 385  DefectTablePixelCount quickSpin, 385  DeviceEventGetld, 245 spinDeviceEventGetlApyloadDataSize, 247  DeviceAccessStatus quickSpinTLInterface, 456  DeviceAddress actionCommandResult, 351  DeviceCharacterSet quickSpin, 386  DeviceConnectionSpeed quickSpin, 386  DeviceConnectionSpeed quickSpin, 386  DeviceConnectionSpeed quickSpin, 386  DeviceConnectionSpeed quickSpinTLDevice, 450  DeviceManifestErrimaryURL quickSpin, 389		• • • •
quickSpin, 384 DecimationVertical quickSpin, 384 DefectCorrectStaticEnable quickSpin, 384 DefectCorrectStaticEnable quickSpin, 384 DefectCorrectStaticEnable quickSpin, 384 DefectCorrectIonMode quickSpin, 384 DefectTableApply quickSpin, 385 DefectTableCoordinateX quickSpin, 385 DefectTableCoordinateY quickSpin, 385 DefectTableCoordinateY quickSpin, 385 DefectTableCoordinateY quickSpin, 385 DefectTableDector quickSpin, 385 DefectTableDector quickSpin, 385 DefectTableDexectOordinateY quickSpin, 385 DeviceDexentGetPayloadDatasZize, 247 DeviceDexectEventGetPayloadDatasZize, 247 DeviceDordinateX quickSpin, 386 DeviceConnectionSpeed quickSpin, 386 DeviceConnectionSpeed quickSpin, 386 DeviceConnectionSpeed quickSpin, 386 DeviceConnectionSpeed quickSpinTLDevice, 450 DeviceManifestPrimaryURL quickSpin, 389 DeviceConnetionSpeed quickSpinTLDevice, 450 DeviceManifestPrimaryURL quickSpin, 389 DeviceConnetionSpeed quickSpinTLDevice, 450 DeviceManifestPrimaryURL quickSpin, 389 DeviceConnetionSpeed quickSpin, 386 DeviceConnetionSpeed quickSpin, 389 DeviceConnetionSpeed quickSp		
Decimation Vertical quickSpin, 384  DefectCorrectStaticEnable quickSpin, 384  DefectCorrectStaticEnable quickSpin, 384  DefectCorrectionMode quickSpin, 384  DefectTableApply quickSpin, 385  DefectTableCoordinateX quickSpin, 385  DefectTableCoordinateY quickSpin, 385  DefectTableCoordinateY quickSpin, 385  DefectTableIndex quickSpin, 386  DeviceLorentCount quickSpin, 387  DeviceInstanceld quickSpinTLDevice, 450  DeviceLinkGonnectionCount quickSpin, 388  DeviceLinkCommandTimeout quickSpin, 388  DeviceLinkCommandTimeout quickSpin, 388  DeviceLinkConnectionCount quickSpin, 388  DeviceLinkSpin, 389  DeviceLinkSpin, 389  DeviceLinkSpin, 389  DeviceLinkTproughputLimitMode quickSpin, 389  DeviceLocation quickSpin, 389  DeviceLocation quickSpin, 389  DeviceLocation quickSpin, 389  DeviceLocation quickSpin, 389  DeviceManifestEntrySelector quickSpin 189  DeviceManifestSchemaMajorVersion		•
quickSpin, 384  DecinationVerticalMode quickSpin, 384  DefectCorrectStaticEnable quickSpin, 384  DefectCorrectionMode quickSpin, 384  DefectTableApply quickSpin, 385  DefectTableCoordinateY quickSpin, 385  DefectTableCoordinateY quickSpin, 385  DefectTableSpin, 386  DeviceConnectionSpin, 386  DeviceConnectionSpeed quickSpin, 386  DeviceConnectionSpeed quickSpin, 386  DeviceConnectionSpeed quickSpinTLDevice, 450  DeviceManifesItpTimaryURL quickSpinTILDevice, 450  DeviceManifesItpTimaryURL	·	
Decimation Vertical Mode quickSpin, 384 DefectCorrect Static Enable quickSpin, 384 DefectCorrectionMode quickSpin, 384 DefectTorrectionMode quickSpin, 384 DefectTable Apply quickSpin, 385 DefectTable CoordinateX quickSpin, 385 DefectTable Enable quickSpin, 386 Device Event Data Access, 245 spin Device Event Gett Payload Data Size, 247 Device Enable Enable quickSpin, 386 Device Clock Frequency quickSpin, 386 Device Clock Frequency quickSpin, 386 Device Clock Elector quickSpin, 386 Device Connection Selector quickSpin, 386 Device Connection Status quickSpin TLI Device, 450 Device Manifest Entry Selector quickSpin, 389 Device Device Count quickSpin TLI Device, 450 Device Device Manifest Entry Selector quickSpin, 389 Device Device Manifest Entry Sele		•
quickSpin, 384  DefectCorrectStaticEnable quickSpin, 384  DefectCorrectionMode quickSpin, 384  DefectTableApply quickSpin, 385  DefectTableCoordinateX quickSpin, 385  DefectTableFactoryRestore quickSpin, 385  DefectTableFactoryRestore quickSpin, 385  DefectTablePixelCount quickSpin, 385  DefectTablePixelCount quickSpin, 385  DefectTableSave quickSpin, 385  DefectTableSave quickSpin, 385  DeviceEventGetName, 246 spinDeviceEventGetName, 246 spinDeviceEventGetPayloadData, 246 spinDeviceEventGetPayloadDataSize, 247  DeviceCharacterSet quickSpin, 386  DeviceClockSelector quickSpin, 386  DeviceClockSelector quickSpin, 386  DeviceConnectionSpeed quickSpin, 386  DeviceConnectionSpeed quickSpin, 386  DeviceConnectionSpeed quickSpin, 386  DeviceConnectionStatus quickSpin, 386  DeviceConnectionStatus quickSpin, 386  DeviceConnectionSpeed quickSpin, 386  DeviceConnectionStatus quickSpin, 389  DeviceLinkThroughputLimitMode quickSpin, 389  DeviceLocation quickSpin, 389  DeviceLocation quickSpin, 389  DeviceManifestErtimaryURL quickSpin, 389  DeviceManifestSchemaMajorVersion	·	
DefectCorrectStaticEnable quickSpin, 384 DefectCrarectionMode quickSpin, 384 DefectTableApply quickSpin, 385 DefectTableCoordinateX quickSpin, 385 DefectTableCoordinateY quickSpin, 385 DefectTableFactoryRestore quickSpin, 385 DefectTableIndex quickSpin, 385 DefectTableSave quickSpin, 385 DeviceEventDeta Access, 245 spinDeviceEventGettPayloadData, 246 spinDeviceEventGettPayloadData, 246 spinDeviceEventGetPayloadData, 246 spinDeviceConnectionSpin, 386 DeviceCharacterSet quickSpin, 386 DeviceCharacterSet quickSpin, 386 DeviceConnectionSpeed quickSpin, 386 DeviceConnectionStatus quickSpin, 386 DeviceConnectionStatus quickSpin, 386 DeviceConnectionStatus quickSpin, 386 DeviceConnectionStatus quickSpin, 389 DeviceManifestEntrySelector quickSpin, 389 DeviceManifestSchemaMajorVersion		•
quickSpin, 384  DefectCorrectionMode quickSpin, 384  DefectTableApply quickSpin, 385  DefectTableCoordinateX quickSpin, 385  DefectTableCoordinateX quickSpin, 385  DefectTableCoordinateY quickSpin, 385  DefectTableIndex quickSpin, 385  DefectTableIndex quickSpin, 385  DefectTableIndex quickSpin, 385  DefectTablePixelCount quickSpin, 385  DefectTableSave quickSpin, 385  Deinterlacing quickSpin, 385  Device Event Data Access, 245 spinDeviceEventGettd, 245 spinDeviceEventGettd, 246 spinDeviceEventGettAme, 246 spinDeviceEventGettAme, 246 spinDeviceEventGettAme, 246 quickSpinTLDevice, 449 quickSpinTLDevice, 449 quickSpin, 386  DeviceCharacterSet quickSpin, 386  DeviceConnectionSelector quickSpin, 386  DeviceConnectionSelector quickSpin, 386  DeviceConnectionSeped quickSpin, 386  DeviceConnectionSeped quickSpin, 386  DeviceConnectionSeped quickSpin, 386  DeviceConnectionSeped quickSpin, 386  DeviceConnectionStatus quickSpin, 386  DeviceConnectionStatus quickSpin, 386  DeviceConnectionStatus quickSpin, 386  DeviceConnectionSeped quickSpin, 386  DeviceConnectionStatus quickSpin, 389  DeviceManifestEntrySelector quickSpin, 389  DeviceManifestEntrySelector quickSpin, 389  DeviceManifestEntrySelector quickSpin, 389  DeviceManifestSchemaMajorVersion	·	
DefectCorrectionMode quickSpin, 384 DefectTableApply quickSpin, 385 DefectTableCoordinateX quickSpin, 385 DefectTableCoordinateY quickSpin, 385 DefectTableCoordinateY quickSpin, 385 DefectTableFactoryRestore quickSpin, 385 DefectTablePactoryRestore quickSpin, 385 DefectTablePactoryRestore quickSpin, 385 DefectTablePixelCount quickSpin, 385 DefectTablePixelCount quickSpin, 385 DefectTableSave quickSpin, 385 Device Event Data Access, 245 spinDeviceEventGetPayloadData, 246 spinDeviceCeventGetPayloadData, 246 spinDeviceCeventGetPayloadData, 246 spinDeviceEventGetPayloadData, 246 spinDeviceEventGetPayloadData, 246 spinDeviceCeventGetPayloadData, 2		• •
quickSpin, 384 DefectTableApply quickSpin, 384 DefectTableCoordinateX quickSpin, 385 DefectTableCoordinateY quickSpin, 385 DefectTableCoordinateY quickSpin, 385 DefectTableCoordinateY quickSpin, 385 DefectTableFactoryRestore quickSpin, 385 DefectTableIndex quickSpin, 385 DefectTableIndex quickSpin, 385 DefectTableIndex quickSpin, 385 DefectTablePixelCount quickSpin, 385 DefectTableSave quickSpin, 385 Deinterlacing quickSpin, 385 DeviceEvent Data Access, 245 spinDeviceEventGetld, 245 spinDeviceEventGetld, 245 spinDeviceEventGetPayloadData, 246 spinDeviceEventGetPayloadDataSize, 247 DeviceAccessStatus quickSpinTLInterface, 456 DeviceAddress actionCommandResult, 351 DeviceClockFrequency quickSpin, 386 DeviceClockSelector quickSpin, 386 DeviceConnectionSelector quickSpin, 386 DeviceConnectionSelector quickSpin, 386 DeviceConnectionSpeed quickSpin, 389 DeviceManifestEntrySelector quickSpin, 389 DeviceManifestEntrySelector quickSpin, 389 DeviceManifestEntrySelector quickSpin, 389 DeviceManifestSchemaMajorVersion		
DefectTableApply quickSpin, 384 DefectTableCoordinateX quickSpin, 385 DefectTableCoordinateY quickSpin, 385 DefectTableCoordinateY quickSpin, 385 DefectTableFactoryRestore quickSpin, 385 DefectTableIndex quickSpin, 385 DefectTableIndex quickSpin, 385 DefectTableIndex quickSpin, 385 DefectTablePixelCount quickSpin, 385 DefectTableSave quickSpin, 385 Deinterlacing quickSpin, 385 Device Event Data Access, 245 spinDeviceEventGetld, 245 spinDeviceEventGetld, 245 spinDeviceEventGetPayloadData, 246 spinDeviceEventGetPayloadDataSize, 247 DeviceAccessStatus quickSpinTLDevice, 449 quickSpinTLDevice, 449 quickSpinTLDevice, 449 quickSpin, 385 DeviceCharacterSet quickSpin, 386 DeviceClockFrequency quickSpin, 386 DeviceConnectionSelector quickSpin, 386 DeviceConnectionSpeed quickSpin, 386 DeviceConnectionSpeed quickSpin, 386 DeviceConnectionStatus quickSpin, 386 DeviceConnectionStatus quickSpin, 386 DeviceConnectionSpeed quickSpin, 386 DeviceConnectionStatus quickSpin, 386 DeviceConnectionStatus quickSpin, 386 DeviceConnectionStatus quickSpin, 386 DeviceConnectionSpeed quickSpin, 386 DeviceConnectionStatus quickSpin, 386 DeviceConnectionSpeed quickSpin, 386 DeviceConnectionStatus quickSpin, 386 DeviceConnectionStatus quickSpin, 389 DeviceManifestPrimaryURL quickSpin, 389 DeviceManifestPrimaryURL quickSpin, 389 DeviceManifestSchemaMajorVersion		
quickSpin, 384  DefectTableCoordinateX quickSpin, 385  DefectTableCoordinateY quickSpin, 385  DefectTableFactoryRestore quickSpin, 385  DefectTablePactoryRestore quickSpin, 385  DefectTablePactoryRestore quickSpin, 385  DefectTablePixelCount quickSpin, 385  Deinterlacing quickSpin, 385  Device Event Data Access, 245 spinDeviceEventGetld, 245 spinDeviceEventGetlAume, 246 spinDeviceEventGetPayloadData, 246 spinDeviceEventGetPayloadDataSize, 247  DeviceAccessStatus quickSpinTLInterface, 456  DeviceAddress actionCommandResult, 351  DeviceClockFrequency quickSpin, 386  DeviceConnectionSpeed quickSpin, 386  DeviceConnectionSpeed quickSpin, 386  DeviceConnectionSpeed quickSpin, 386  DeviceConnectionSqued quickSpin, 388  DeviceLinkThroughputLimitMode quickSpin, 388  DeviceLinkThroughputLimitMode quickSpin, 389  DeviceManifestEntrySelector quickSpin, 389  DeviceManifestEntrySelector quickSpin, 389  DeviceManifestSchemaMajorVersion	·	
DefectTableCoordinateX quickSpin, 385  DefectTableCoordinateY quickSpin, 385  DefectTableCoordinateY quickSpin, 385  DefectTableFactoryRestore quickSpin, 385  DefectTableIndex quickSpin, 385  DefectTableIndex quickSpin, 385  DefectTableIndex quickSpin, 385  DefectTablePixelCount quickSpin, 385  DefectTableSave quickSpin, 385  Deinterlacing quickSpin, 385  Device Event Data Access, 245 spinDeviceEventGetPayloadData, 246 spinDeviceEventGetPayloadData, 246 spinDeviceEventGetPayloadDataSize, 247  DeviceAddress quickSpin, 385  Device Address actionCommandResult, 351  DeviceCharacterSet quickSpin, 386  DeviceClockSelector quickSpin, 386  DeviceClockSelector quickSpin, 386  DeviceConnectionSpeed quickSpin, 386  DeviceConnectionSpeed quickSpin, 386  DeviceCount quickSpin, 389  DeviceManifestEntrySelector quickSpin, 388  DeviceCount quickSpin, 389  DeviceManifestEntrySelector quickSpin, 388  DeviceCount quickSpin, 389  DeviceManifestEntrySelector quickSpin, 389  DeviceCount quickSpin, 389  DeviceManifestEntrySelector quickSpin, 389  DeviceManifestEntrySelector quickSpin, 389  DeviceManifestEntrySelector quickSpin, 389  DeviceManifestEchemaMajorVersion	• • •	• •
quickSpin, 385  DefectTableCoordinateY quickSpin, 385  DefectTableFactoryRestore quickSpin, 385  DefectTableIndex quickSpin, 385  DefectTablePixelCount quickSpin, 385  DefectTablePixelCount quickSpin, 385  DefectTableSave quickSpin, 385  Deinterfacing quickSpin, 385  Device Event Data Access, 245 spinDeviceEventGettQ, 245 spinDeviceEventGetPayloadData, 246 spinDeviceEventGetPayloadDatasize, 247  DeviceAddress actionCommandResult, 351  DeviceCharacterSet quickSpin, 386  DeviceClockSelector quickSpin, 386  DeviceConnectionSpeed quickSpin, 386  DeviceConnectionSpeed quickSpin, 386  DeviceCount quickSpin, 388  DeviceCurrentSpeed quickSpin, 388  DeviceLinkThroughputLimitMode quickSpin, 388  DeviceLocation quickSpin, 388  DeviceLocation quickSpin, 388  DeviceCurrentSpeed quickSpin, 389  DeviceManifestSchemaMajorVersion	·	
DefectTableCoordinateY quickSpin, 385 DefectTableFactoryRestore quickSpin, 385 DefectTableIndex quickSpin, 385 DefectTablePixelCount quickSpin, 385 DefectTablePixelCount quickSpin, 385 DefectTableSave quickSpin, 385 Deinterlacing quickSpin, 385 Device Event Data Access, 245 spinDeviceEventGetPayloadData, 246 spinDeviceEventGetPayloadDataSize, 247 DeviceAccessStatus quickSpinTLInterface, 456 DeviceAccessStatus quickSpinTLInterface, 456 DeviceCharacterSet quickSpin, 385 DeviceClockFrequency quickSpin, 386 DeviceClockFrequency quickSpin, 386 DeviceConnectionSpeed quickSpin, 386 DeviceConnectionSpeed quickSpin, 386 DeviceConnettonSpeed quickSpin, 386 DeviceConnettonSpeed quickSpin, 386 DeviceConnettonSpeed quickSpin, 386 DeviceConnettonSpeed quickSpin, 386 DeviceCount quickSpin, 388 DeviceManifestStrimanyURL quickSpin, 389 DeviceManifestSchemaMajorVersion		
quickSpin, 385 DefectTableFactoryRestore quickSpin, 385 DefectTableIndex quickSpin, 385 DefectTableIndex quickSpin, 385 DefectTablePixelCount quickSpin, 385 DefectTableSave quickSpin, 385 Deinterlacing quickSpin, 385 Device Event Data Access, 245 spinDeviceEventGetPayloadData, 246 spinDeviceEventGetPayloadDataSize, 247 DeviceAccessStatus quickSpinTLInterface, 456 DeviceCharacterSet quickSpin, 385 DeviceClockFrequency quickSpin, 386 DeviceConnectionSpeed quickSpin, 386 DeviceConnectionSpeed quickSpin, 386 DeviceConnettonStatus quickSpin, 386 DeviceCont quickSpin, 386 DeviceConnettonSpeed quickSpin, 386 DeviceConnettonStatus quickSpin, 386 DeviceCont quickSpin, 386 DeviceConnettonSpeed quickSpin, 386 DeviceCont quickSpin, 386 DeviceConnettonSpeed quickSpin, 386 DeviceCont quickSpin, 386 DeviceCont quickSpin, 386 DeviceCont quickSpin, 386 DeviceCont quickSpin, 388 DeviceLinkThroughputLimit quickSpin, 388 DeviceLocation quickSpin, 389 DeviceManifestSchemaMajorVersion		
DefectTableFactoryRestore quickSpin, 385  DefectTableIndex quickSpin, 385  DefectTablePixelCount quickSpin, 385  DefectTableSave quickSpin, 385  Deinterlacing quickSpin, 385  Device Event Data Access, 245 spinDeviceEventGetld, 245 spinDeviceEventGetPayloadData, 246 spinDeviceEventGetPayloadDatasSize, 247  DeviceAccessStatus quickSpinTLInterface, 456  DeviceAccessStatus quickSpin, 385  DeviceClockFrequency quickSpin, 386  DeviceConnectionSpeed quickSpin, 386  DeviceConnectionSpeed quickSpin, 386  DeviceCount quickSpin, 386  DeviceCount quickSpin, 386  DeviceCourt quickSpin, 389  DeviceManifestSchemaMajorVersion		•
quickSpin, 385  DefectTableIndex quickSpin, 385  DefectTablePixelCount quickSpin, 385  DefectTableSave quickSpin, 385  Deinterlacing quickSpin, 385  Device Event Data Access, 245 spinDeviceEventGetld, 245 spinDeviceEventGetPayloadData, 246 spinDeviceEventGetPayloadDataSize, 247  DeviceAccessStatus quickSpinTLDevice, 449 quickSpinTLDevice, 456  DeviceCharacterSet quickSpin, 385  DeviceClockFrequency quickSpin, 386  DeviceConnectionSpeed quickSpin, 386  DeviceConnectionSpeed quickSpin, 386  DeviceConnectionStatus quickSpin, 386  DeviceConnectionStatus quickSpin, 386  DeviceConnectionStatus quickSpin, 386  DeviceConnectionSpeed quickSpin, 386  DeviceCount quickSpin, 386  DeviceCount quickSpin, 386  DeviceConnectionSpeed quickSpin, 386  DeviceCount quickSpin, 386  DeviceCount quickSpin, 386  DeviceCount quickSpin, 386  DeviceCountertonSpeed quickSpin, 386  DeviceCountertonSpeed quickSpin, 386  DeviceCountertonSpeed quickSpin, 386  DeviceCountertonStatus quickSpin, 386  DeviceCountertonSpeed quickSpin, 386  DeviceCountertonStatus quickSpin, 386  DeviceCountertonSpeed quickSpin, 386  DeviceCountertonSpeed quickSpin, 386  DeviceCountertonStatus quickSpin, 386  DeviceCountertonSpeed quickSpin, 386  DeviceCountertonSpeed quickSpin, 386  DeviceCountertonStatus quickSpin, 386  DeviceCountertonSpeed quickSpin, 386  DeviceCountertonStatus quickSpin, 386  DeviceCountertonSpeed quickSpin, 389  DeviceManifestFrimaryURL quickSpin, 389  DeviceManifestSchemaMajorVersion		•
DefectTableIndex quickSpin, 385 DefectTablePixelCount quickSpin, 385 DefectTableSave quickSpin, 385 Deinterlacing quickSpin, 385 Device Event Data Access, 245 spinDeviceEventGetld, 245 spinDeviceEventGetPayloadData, 246 spinDeviceEventGetPayloadDataSize, 247 DeviceAccessStatus quickSpinTLInterface, 456 DeviceClockFrequency quickSpin, 386 DeviceClockFrequency quickSpin, 386 DeviceConnectionSpeed quickSpin, 386 DeviceConnectionSpeed quickSpin, 386 DeviceConnectionStatus quickSpin, 386 DeviceCount quickSpin, 389 DeviceManifestEntrySelector quickSpin, 389 DeviceManifestSchemaMajorVersion	<u>.</u>	quickSpinTLInterface, 456
quickSpin, 385  DefectTablePixelCount quickSpin, 385  DefectTableSave quickSpin, 385  Deinterlacing quickSpin, 385  Device Event Data Access, 245 spinDeviceEventGetld, 245 spinDeviceEventGetPayloadData, 246 spinDeviceEventGetPayloadDataSize, 247  DeviceAccessStatus quickSpinTLDevice, 449 quickSpinTLDevice, 456  DeviceCharacterSet quickSpin, 386  DeviceClockFrequency quickSpin, 386  DeviceConnectionSelector quickSpin, 386  DeviceConnectionSpeed quickSpin, 386  DeviceConnectionStatus quickSpin, 388  DeviceLocation quickSpin, 389  DeviceManifestEntrySelector quickSpin, 389  DeviceManifestSchemaMajorVersion		DeviceIndicatorMode
DefectTablePixelCount quickSpin, 385  DefectTableSave quickSpin, 385  Deinterlacing quickSpin, 385  Device Event Data Access, 245 spinDeviceEventGetld, 245 spinDeviceEventGetPayloadData, 246 spinDeviceEventGetPayloadDataSize, 247  DeviceAccessStatus quickSpinTLDevice, 449 quickSpinTLDevice, 449 quickSpinTLInterface, 456  DeviceClockFrequency quickSpin, 386  DeviceClockSelector quickSpin, 386  DeviceConnectionSpeed quickSpin, 386  DeviceConnectionSpeed quickSpin, 386  DeviceConnectionStatus quickSpin, 386  DeviceCourtentSpeed quickSpin, 386  DeviceCourtentSpeed quickSpin, 386  DeviceCourtentSpeed quickSpin, 386  DeviceCourtentSpeed quickSpin, 389  DeviceManifestEntrySelector quickSpin, 386  DeviceCurrentSpeed quickSpin, 389  DeviceManifestSchemaMajorVersion		quickSpin, 387
quickSpin, 385  DefectTableSave quickSpin, 385  Deinterlacing quickSpin, 385  Device Event Data Access, 245 spinDeviceEventGetld, 245 spinDeviceEventGetPayloadData, 246 spinDeviceEventGetPayloadData 246 spinDeviceEventGetPayloadDataSize, 247  DeviceAccessStatus quickSpinTLDevice, 449 quickSpinTLDevice, 456  DeviceCharacterSet quickSpin, 385  DeviceClockFrequency quickSpin, 386  DeviceClockSelector quickSpin, 386  DeviceConnectionSpeed quickSpin, 386  DeviceConnectionSpeed quickSpin, 386  DeviceConnectionStatus quickSpin, 386  DeviceConnectionStatus quickSpin, 386  DeviceConnectionStatus quickSpin, 386  DeviceConnectionStatus quickSpin, 386  DeviceConnectionSpeed quickSpin, 386  DeviceConnectionStatus quickSpin, 386  DeviceConnectionStatus quickSpin, 386  DeviceConnectionStatus quickSpinTLDevice, 456  DeviceConnectionStatus quickSpin, 386  DeviceConnectionStatus quickSpinTLDevice, 456  DeviceConnectionStatus quickSpinTLDevice, 456  DeviceConnectionStatus quickSpinTLDevice, 456  DeviceCornectionStatus quickSpinTLDevice, 456  DeviceCornectionSpeed quickSpinTLDevice, 456  DeviceCornectionSpeed quickSpinTLDevice, 456  DeviceCornetSpeed quickSpinTLDevice, 456  DeviceCornetSpeed quickSpinTLDevice, 456  DeviceCornetSpeed quickSpinTLDevice, 456  DeviceCornetSpeed quickSpinTLDevice, 456  DeviceManifestEntrySelector quickSpin, 389  DeviceManifestPrimaryURL quickSpin, 389  DeviceManifestSchemaMajorVersion	·	DeviceInstanceId
DefectTableSave quickSpin, 385  Deinterlacing quickSpin, 385  Device Event Data Access, 245 spinDeviceEventGetld, 245 spinDeviceEventGetPayloadData, 246 spinDeviceEventGetPayloadDataSize, 247  DeviceAccessStatus quickSpinTLDevice, 449 quickSpinTLDevice, 449 quickSpin, 385  DeviceCharacterSet quickSpin, 385  DeviceClockFrequency quickSpin, 386  DeviceConnectionSelector quickSpin, 386  DeviceConnectionSpeed quickSpin, 386  DeviceConnectionSpeed quickSpin, 386  DeviceConnectionStatus quickSpin, 386  DeviceCount quickSpin TLInterface, 456  DeviceCourrentSpeed quickSpinTLDevice, 450  DeviceCourentSpeed quickSpin TLInterface, 456  DeviceCurentSpeed quickSpin, 388  DeviceManifestSchemaMajorVersion		quickSpinTLDevice, 450
quickSpin, 385  Deinterlacing quickSpin, 385  Device Event Data Access, 245 spinDeviceEventGetld, 245 spinDeviceEventGetRame, 246 spinDeviceEventGetPayloadData, 246 spinDeviceEventGetPayloadDataSize, 247  DeviceAccessStatus quickSpinTLDevice, 449 quickSpinTLDevice, 446 DeviceAddress actionCommandResult, 351  DeviceClockFrequency quickSpin, 386  DeviceClockSpin, 386  DeviceClockSpin, 386  DeviceConnectionSelector quickSpin, 386  DeviceConnectionSpeed quickSpin, 386  DeviceConnectionSpeed quickSpin, 386  DeviceConnectionStatus quickSpin, 386  DeviceCount quickSpin, 388  DeviceManifestErrimaryURL quickSpin, 389  DeviceManifestSchemaMajorVersion	·	DeviceIsUpdater
Deinterlacing quickSpin, 385  Device Event Data Access, 245 spinDeviceEventGetld, 245 spinDeviceEventGetPayloadData, 246 spinDeviceEventGetPayloadData, 246 spinDeviceEventGetPayloadDataSize, 247  DeviceAccessStatus quickSpinTLDevice, 449 quickSpinTLInterface, 456  DeviceCloreAracterSet quickSpin, 385  DeviceClockFrequency quickSpin, 386  DeviceClockSelector quickSpin, 386  DeviceConnectionSpeed quickSpin, 386  DeviceConnectionStatus quickSpin, 386  DeviceCount quickSpinTLInterface, 456  DeviceCount quickSpinTLInterface, 456  DeviceCourrentSpeed quickSpinTLInterface, 456  DeviceCourrentSpeed quickSpin, 389  DeviceManifestPrimaryURL quickSpin, 389  DeviceManifestSchemaMajorVersion		quickSpinTLDevice, 450
quickSpin, 385  Device Event Data Access, 245     spinDeviceEventGetld, 245     spinDeviceEventGetPayloadData, 246     spinDeviceEventGetPayloadData, 246     spinDeviceEventGetPayloadData 246     spinDeviceEventGetPayloadData 246     spinDeviceEventGetPayloadDataSize, 247  DeviceAccessStatus     quickSpinTLDevice, 449     quickSpinTLInterface, 456  DeviceAddress     actionCommandResult, 351  DeviceCharacterSet     quickSpin, 385  DeviceClockFrequency     quickSpin, 386  DeviceClockSelector     quickSpin, 386  DeviceConnectionSelector     quickSpin, 386  DeviceConnectionSpeed     quickSpin, 386  DeviceConnectionSpeed     quickSpin, 386  DeviceConnectionStatus     quickSpin, 386  DeviceConnectionStatus     quickSpin, 386  DeviceConnectionStatus     quickSpin, 386  DeviceCount     quickSpinTLInterface, 456  DeviceCount     quickSpinTLInterface, 456  DeviceCourrentSpeed     quickSpinTLDevice, 451  DeviceManifestPrimaryURL     quickSpin, 389  DeviceManifestPrimaryURL     quickSpin, 389  DeviceManifestSchemaMajorVersion		DeviceLinkBandwidthReserve
Device Event Data Access, 245     spinDeviceEventGetId, 245     spinDeviceEventGetName, 246     spinDeviceEventGetPayloadData, 246     spinDeviceEventGetPayloadDataSize, 247  DeviceAccessStatus     quickSpinTLDevice, 449     quickSpinTLInterface, 456  DeviceCharacterSet     quickSpin, 385  DeviceClockFrequency     quickSpin, 386  DeviceConnectionSpeed     quickSpin, 386  DeviceConnectionSpeed     quickSpin, 386  DeviceConnectionSpeed     quickSpin, 386  DeviceConnectionStatus     quickSpin, 386  DeviceConnectionSpeed     quickSpin, 386  DeviceConnectionStatus     quickSpin, 386  DeviceCount     quickSpin, 389  DeviceCount     quickSpin, 389  DeviceCourrentSpeed     quickSpin, 389  DeviceCount     quickSpin, 389  DeviceManifestSchemaMajorVersion		quickSpin, 387
spinDeviceEventGetId, 245 spinDeviceEventGetName, 246 spinDeviceEventGetPayloadData, 246 spinDeviceEventGetPayloadDataSize, 247  DeviceAccessStatus quickSpinTLDevice, 449 quickSpinTLInterface, 456  DeviceAddress actionCommandResult, 351  DeviceCharacterSet quickSpin, 388  DeviceLinkHeartbeatTimeout quickSpin, 388  DeviceLinkHeartbeatTimeout quickSpin, 388  DeviceLinkSpin, 388  DeviceLinkThroughputLimit quickSpin, 386  DeviceConnectionSelector quickSpin, 386  DeviceConnectionSpeed quickSpin, 386  DeviceConnectionStatus quickSpin, 386  DeviceConnectionStatus quickSpin, 386  DeviceConnectionStatus quickSpin, 386  DeviceConnectionStatus quickSpin, 386  DeviceManifestEntrySelector quickSpin, 389 DeviceManifestSchemaMajorVersion	·	DeviceLinkCommandTimeout
spinDeviceEventGetName, 246 spinDeviceEventGetPayloadData, 246 spinDeviceEventGetPayloadData, 246 spinDeviceEventGetPayloadDataSize, 247  DeviceAccessStatus quickSpinTLDevice, 449 quickSpinTLInterface, 456  DeviceAddress actionCommandResult, 351  DeviceCharacterSet quickSpin, 385  DeviceClockFrequency quickSpin, 386  DeviceClockSelector quickSpin, 386  DeviceConnectionSelector quickSpin, 386  DeviceConnectionSpeed quickSpin, 386  DeviceConnectionStatus quickSpin, 389 DeviceManifestSchemaMajorVersion		quickSpin, 387
spinDeviceEventGetPayloadData, 246 spinDeviceEventGetPayloadDataSize, 247  DeviceAccessStatus quickSpinTLDevice, 449 quickSpinTLInterface, 456  DeviceAddress actionCommandResult, 351  DeviceCharacterSet quickSpin, 385  DeviceClockFrequency quickSpin, 386  DeviceClockSelector quickSpin, 386  DeviceConnectionSelector quickSpin, 386  DeviceConnectionStatus quickSpin, 386  DeviceConnectionStatus quickSpin, 386  DeviceConnectionStatus quickSpin, 386  DeviceCount quickSpin, 389 DeviceCount quickSpin, 389 DeviceComandiestSchemaMajorVersion	•	DeviceLinkConnectionCount
spinDeviceEventGetPayloadDataSize, 247  DeviceAccessStatus   quickSpinTLDevice, 449   quickSpinTLInterface, 456  DeviceAddress   actionCommandResult, 351  DeviceCharacterSet   quickSpin, 385  DeviceClockFrequency   quickSpin, 386  DeviceClockSelector   quickSpin, 386  DeviceConnectionSelector   quickSpin, 386  DeviceConnectionStatus   quickSpin, 386  DeviceCount   quickSpin, 389  DeviceCurrentSpeed   quickSpin, 389  DeviceManifestSchemaMajorVersion	•	quickSpin, 388
DeviceAccessStatus quickSpinTLDevice, 449 quickSpinTLInterface, 456  DeviceAddress actionCommandResult, 351  DeviceCharacterSet quickSpin, 385  DeviceClockFrequency quickSpin, 386  DeviceClockSelector quickSpin, 386  DeviceConnectionSelector quickSpin, 386  DeviceConnectionSpeed quickSpin, 386  DeviceConnectionStatus quickSpin, 388  DeviceCount quickSpin, 386  DeviceCount quickSpin, 389 DeviceCount quickSpin, 389 DeviceCount quickSpin, 389 DeviceManifestSchemaMajorVersion	•	DeviceLinkCurrentThroughput
quickSpinTLDevice, 449 quickSpinTLInterface, 456  DeviceAddress actionCommandResult, 351  DeviceCharacterSet quickSpin, 385  DeviceClockFrequency quickSpin, 386  DeviceClockSelector quickSpin, 386  DeviceConnectionSelector quickSpin, 386  DeviceConnectionSpeed quickSpin, 386  DeviceConnectionStatus quickSpin, 386  DeviceManifestEntrySelector quickSpin, 389  DeviceCurrentSpeed quickSpin, 389  DeviceManifestSchemaMajorVersion	•	quickSpin, 388
quickSpinTLInterface, 456  DeviceAddress		
DeviceAddress     actionCommandResult, 351  DeviceCharacterSet     quickSpin, 388  DeviceClockFrequency     quickSpin, 386  DeviceClockSelector     quickSpin, 386  DeviceConnectionSelector     quickSpin, 386  DeviceConnectionSpeed     quickSpin, 386  DeviceConnectionSpeed     quickSpin, 386  DeviceConnectionSpeed     quickSpin, 388  DeviceConnectionSpeed     quickSpin, 388  DeviceConnectionStatus     quickSpin, 386  DeviceConnectionStatus     quickSpin, 389  DeviceCount     quickSpinTLInterface, 456  DeviceCurrentSpeed     quickSpin, 389  DeviceManifestSchemaMajorVersion	·	quickSpin, 388
actionCommandResult, 351  DeviceCharacterSet quickSpin, 385  DeviceClockFrequency quickSpin, 386  DeviceClockSelector quickSpin, 386  DeviceClockSelector quickSpin, 386  DeviceConnectionSelector quickSpin, 386  DeviceConnectionSpeed quickSpin, 386  DeviceConnectionSpeed quickSpin, 386  DeviceConnectionSpeed quickSpin, 386  DeviceConnectionSpeed quickSpin, 386  DeviceConnectionStatus quickSpin, 386  DeviceManifestEntrySelector quickSpin, 389  DeviceManifestSchemaMajorVersion	·	DeviceLinkHeartbeatTimeout
DeviceCharacterSet quickSpin, 385  DeviceClockFrequency quickSpin, 386  DeviceClockSelector quickSpin, 386  DeviceConnectionSelector quickSpin, 386  DeviceConnectionSpeed quickSpin, 386  DeviceConnectionSpeed quickSpin, 386  DeviceConnectionSpeed quickSpin, 386  DeviceConnectionSpeed quickSpin, 386  DeviceConnectionStatus quickSpin, 386  DeviceManifestEntrySelector quickSpin, 389  DeviceCurrentSpeed quickSpin, 389  DeviceManifestSchemaMajorVersion		quickSpin, 388
quickSpin, 385  DeviceClockFrequency quickSpin, 386  DeviceClockSelector quickSpin, 386  DeviceConnectionSelector quickSpin, 386  DeviceConnectionSpeed quickSpin, 386  DeviceConnectionSpeed quickSpin, 386  DeviceConnectionSpeed quickSpin, 386  DeviceConnectionStatus quickSpin, 386  DeviceManifestEntrySelector quickSpin, 389  DeviceCurrentSpeed quickSpin, 389  DeviceManifestSchemaMajorVersion		DeviceLinkSelector
DeviceClockFrequency quickSpin, 386  DeviceClockSelector quickSpin, 386  DeviceConnectionSelector quickSpin, 386  DeviceConnectionSpeed quickSpin, 386  DeviceConnectionSpeed quickSpin, 386  DeviceConnectionSpeed quickSpin, 386  DeviceConnectionStatus quickSpin, 386  DeviceManifestEntrySelector quickSpin, 389  DeviceCurrentSpeed quickSpin, 389  DeviceManifestSchemaMajorVersion		quickSpin, 388
quickSpin, 386  DeviceClockSelector quickSpin, 386  DeviceConnectionSelector quickSpin, 386  DeviceConnectionSelector quickSpin, 386  DeviceConnectionSpeed quickSpin, 386  DeviceConnectionSpeed quickSpin, 386  DeviceConnectionStatus quickSpin, 386  DeviceConnectionStatus quickSpin, 386  DeviceConnectionStatus quickSpin, 386  DeviceConnectionStatus quickSpin, 386  DeviceManifestEntrySelector quickSpin, 389  DeviceCurrentSpeed quickSpinTLDevice, 450  DeviceManifestSchemaMajorVersion		
DeviceClockSelector quickSpin, 386 DeviceConnectionSelector quickSpin, 386 DeviceConnectionSpeed quickSpin, 386 DeviceConnectionSpeed quickSpin, 386 DeviceConnectionSpeed quickSpin, 386 DeviceConnectionStatus quickSpin, 386 DeviceConnectionStatus quickSpin, 386 DeviceConnectionStatus quickSpin, 386 DeviceConnectionStatus quickSpin, 386 DeviceManifestEntrySelector quickSpin, 389 DeviceCount quickSpinTLInterface, 456 DeviceCurrentSpeed quickSpinTLDevice, 450 DeviceManifestSchemaMajorVersion		•
quickSpin, 386  DeviceConnectionSelector quickSpin, 386  DeviceConnectionSpeed quickSpin, 386  DeviceConnectionSpeed quickSpin, 386  DeviceConnectionStatus quickSpin, 386  DeviceConnectionStatus quickSpin, 386  DeviceConnectionStatus quickSpin, 386  DeviceConnectionStatus quickSpin, 386  DeviceManifestEntrySelector quickSpin, 389  DeviceCurrentSpeed quickSpinTLDevice, 450  DeviceManifestPrimaryURL quickSpin, 389  DeviceManifestSchemaMajorVersion	·	·
DeviceConnectionSelector quickSpin, 386 DeviceConnectionSpeed quickSpin, 386 DeviceConnectionSpeed quickSpin, 386 DeviceConnectionStatus quickSpin, 386 DeviceConnectionStatus quickSpin, 386 DeviceConnectionStatus quickSpin, 386 DeviceManifestEntrySelector quickSpin, 389 QuickSpinTLInterface, 456 DeviceCurrentSpeed quickSpinTLDevice, 450 DeviceManifestSchemaMajorVersion		
quickSpin, 386  DeviceConnectionSpeed quickSpin, 388  QuickSpin, 386  DeviceConnectionStatus quickSpin, 386  DeviceConnectionStatus quickSpin, 386  DeviceConnectionStatus quickSpin, 386  DeviceCount quickSpin, 389  QuickSpinTLInterface, 456  DeviceCurrentSpeed quickSpin, 389  QuickSpinTLDevice, 450  DeviceManifestSchemaMajorVersion		- ·
DeviceConnectionSpeed quickSpin, 388    quickSpin, 386 DeviceConnectionStatus quickSpin, 386 DeviceConnectionStatus quickSpin, 386 DeviceCount quickSpin, 389 QuickSpinTLInterface, 456 DeviceCurrentSpeed quickSpin, 389 QuickSpinTLDevice, 450 DeviceManifestPrimaryURL QuickSpin, 389 DeviceManifestSchemaMajorVersion		
quickSpin, 386  DeviceConnectionStatus quickSpin, 386  DeviceConnectionStatus quickSpin, 386  DeviceManifestEntrySelector quickSpin, 389 quickSpinTLInterface, 456  DeviceCurrentSpeed quickSpinTLDevice, 450  DeviceManifestPrimaryURL quickSpin, 389  peviceManifestSchemaMajorVersion	·	
DeviceConnectionStatus quickSpin, 386 DeviceManifestEntrySelector quickSpin, 389 quickSpinTLInterface, 456 DeviceCurrentSpeed quickSpinTLDevice, 450 QuickSpinTLDevice, 450 QuickSpinTLDevice, 450 QuickSpinTLDevice, 450 QuickSpinTLDevice, 451 QuickSpinTL	•	
quickSpin, 386  DeviceManifestEntrySelector quickSpin, 389 quickSpinTLInterface, 456  DeviceCurrentSpeed quickSpinTLDevice, 450  DeviceManifestPrimaryURL quickSpin, 389  peviceManifestSchemaMajorVersion	·	
DeviceCount quickSpin, 389 quickSpinTLInterface, 456 DeviceCurrentSpeed quickSpinTLDevice, 450  DeviceManifestPrimaryURL quickSpin, 389 DeviceManifestSchemaMajorVersion		•
quickSpinTLInterface, 456DeviceManifestPrimaryURLDeviceCurrentSpeedquickSpin, 389quickSpinTLDevice, 450DeviceManifestSchemaMajorVersion		
DeviceCurrentSpeed quickSpin, 389 quickSpinTLDevice, 450 DeviceManifestSchemaMajorVersion		
quickSpinTLDevice, 450 DeviceManifestSchemaMajorVersion		
		·
	DeviceDisplayName	quickSpin, 389

DeviceManifestSchemaMinorVersion quickSpin, 389	DeviceStreamChannelLink quickSpin, 392
DeviceManifestSecondaryURL	DeviceStreamChannelPacketSize
quickSpin, 389	quickSpin, 392
·	DeviceStreamChannelSelector
DeviceManifestXMLMajorVersion	
quickSpin, 389	quickSpin, 392
DeviceManifestXMLMinorVersion	DeviceStreamChannelType
quickSpin, 389	quickSpin, 392
DeviceManifestXMLSubMinorVersion	DeviceTLType
quickSpin, 389	quickSpin, 393
DeviceManufacturerInfo	DeviceTLVersionMajor
quickSpin, 390	quickSpin, 393
DeviceMaxThroughput	DeviceTLVersionMinor
quickSpin, 390	quickSpin, 393
DeviceModelName	DeviceTLVersionSubMinor
quickSpin, 390	quickSpin, 393
quickSpinTLDevice, 451	DeviceTapGeometry
quickSpinTLInterface, 456	quickSpin, 392
DeviceMulticastMonitorMode	DeviceTemperature
quickSpinTLDevice, 451	quickSpin, 393
DevicePortId	DeviceTemperatureSelector
quickSpinTLDevice, 451	quickSpin, 393
DevicePowerSupplySelector	DeviceType
• • •	quickSpin, 393
quickSpin, 390	quickSpinTLDevice, 451
DeviceRegistersCheck	DeviceU3VProtocol
quickSpin, 390	quickSpinTLDevice, 451
DeviceRegistersEndianness	DeviceUnlock
quickSpin, 390	quickSpinTLInterface, 457
DeviceRegistersStreamingEnd	DeviceUpdateList
quickSpin, 390	·
DeviceRegistersStreamingStart	quickSpinTLInterface, 457
quickSpin, 390	DeviceUptime
DeviceRegistersValid	quickSpin, 393
quickSpin, 391	DeviceUserID
DeviceReset	quickSpin, 394
quickSpin, 391	quickSpinTLDevice, 451
DeviceSFNCVersionMajor	DeviceVendorName
quickSpin, 391	quickSpin, 394
DeviceSFNCVersionMinor	quickSpinTLDevice, 452
quickSpin, 391	quickSpinTLInterface, 457
DeviceSFNCVersionSubMinor	DeviceVersion
quickSpin, 392	quickSpin, 394
DeviceScanType	quickSpinTLDevice, 452
quickSpin, 391	doc/spindocs/C/GettingStarted.dox, 491
DeviceSelector	doc/spindocs/C/ProgrammerGuide.dox, 491
quickSpinTLInterface, 457	doc/spindocs/shared/Benefits.dox, 491
DeviceSerialNumber	doc/spindocs/shared/FlyCapture2Comparison.dox, 49
	doc/spindocs/shared/GenICamGenTL.dox, 491
quickSpin, 391	doc/spindocs/shared/Licensing.dox, 491
quickSpinTLDevice, 451	doc/spindocs/shared/Maintenance.dox, 491
quickSpinTLInterface, 457	
DeviceSerialPortBaudRate	EncoderDivider
quickSpin, 391	quickSpin, 394
DeviceSerialPortSelector	EncoderMode
quickSpin, 391	quickSpin, 394
DeviceStreamChannelCount	EncoderOutputMode
quickSpin, 392	quickSpin, 394
DeviceStreamChannelEndianness	EncoderReset
quickSpin, 392	quickSpin, 394

EncoderResetActivation	EventAcquisitionErrorTimestamp
quickSpin, 394	quickSpin, 396
EncoderResetSource	EventAcquisitionStart
quickSpin, 395	quickSpin, 396
EncoderSelector	EventAcquisitionStartFrameID
quickSpin, 395	quickSpin, 397
EncoderSourceA	EventAcquisitionStartTimestamp
quickSpin, 395	quickSpin, 397
EncoderSourceB	EventAcquisitionTransferEnd
quickSpin, 395	quickSpin, 397
EncoderStatus	EventAcquisitionTransferEndFrameID
quickSpin, 395	quickSpin, 397
EncoderTimeout	EventAcquisitionTransferEndTimestamp
quickSpin, 395	quickSpin, 397
EncoderValue	EventAcquisitionTransferStart
quickSpin, 395	quickSpin, 397
EncoderValueAtReset	EventAcquisitionTransferStartFrameID
quickSpin, 395	quickSpin, 397
EnumerateGEVInterfaces	EventAcquisitionTransferStartTimestamp
quickSpinTLSystem, 469	quickSpin, 397
EnumerateGen2Cameras	EventAcquisitionTrigger
quickSpinTLSystem, 469 EnumerateUSBInterfaces	quickSpin, 398
	EventAcquisitionTriggerFrameID
quickSpinTLSystem, 469	quickSpin, 398
EnumerationCount	EventAcquisitionTriggerTimestamp
quickSpin, 396	quickSpin, 398
Error Handling, 145	EventActionLate
spinErrorGetLast, 145	quickSpin, 398
spinErrorGetLastBuildDate, 146	EventActionLateFrameID
spinErrorGetLastBuildTime, 146	quickSpin, 398
spinErrorGetLastFileName, 147	EventActionLateTimestamp
spinErrorGetLastFullMessage, 147	quickSpin, 398
spinErrorGetLastFunctionName, 148	EventCounter0End
spinErrorGetLastLineNumber, 148	quickSpin, 398
spinErrorGetLastMessage, 149	EventCounter0EndFrameID
Event Access, 224	quickSpin, 398
spinDeviceArrivalEventHandlerCreate, 224	EventCounter0EndTimestamp
spinDeviceArrivalEventHandlerDestroy, 225	quickSpin, 399
spinDeviceEventHandlerCreate, 225	EventCounter0Start
spinDeviceEventHandlerDestroy, 226	quickSpin, 399
spinDeviceRemovalEventHandlerCreate, 226	EventCounter0StartFrameID
spinDeviceRemovalEventHandlerDestroy, 227	quickSpin, 399
spinImageEventHandlerCreate, 227	EventCounter0StartTimestamp
spinImageEventHandlerDestroy, 228	quickSpin, 399
spinInterfaceEventHandlerCreate, 228	EventCounter1End
spinInterfaceEventHandlerDestroy, 229	quickSpin, 399
spinLogEventHandlerCreate, 229	EventCounter1EndFrameID
spinLogEventHandlerDestroy, 230	
•	quickSpin, 399
EventAcquisitionEnd	EventCounter1EndTimestamp
quickSpin, 396	quickSpin, 399
EventAcquisitionEndFrameID	EventCounter1Start
quickSpin, 396	quickSpin, 399
EventAcquisitionEndTimestamp	EventCounter1StartFrameID
quickSpin, 396	quickSpin, 400
EventAcquisitionError	EventCounter1StartTimestamp
quickSpin, 396	quickSpin, 400
EventAcquisitionErrorFrameID	EventEncoder0Restarted
quickSpin, 396	quickSpin, 400

EventEncoder0RestartedFrameID quickSpin, 400	EventFrameEndTimestamp quickSpin, 404
EventEncoder0RestartedTimestamp	EventFrameStart
quickSpin, 400	quickSpin, 404
EventEncoder0Stopped	EventFrameStartFrameID
quickSpin, 400	quickSpin, 404
EventEncoder0StoppedFrameID	EventFrameStartTimestamp
quickSpin, 400	quickSpin, 404
EventEncoder0StoppedTimestamp	EventFrameTransferEnd
quickSpin, 400	quickSpin, 404
EventEncoder1Restarted	EventFrameTransferEndFrameID
quickSpin, 401	quickSpin, 404
EventEncoder1RestartedFrameID	EventFrameTransferEndTimestamp
quickSpin, 401	quickSpin, 404
EventEncoder1RestartedTimestamp	EventFrameTransferStart
quickSpin, 401	quickSpin, 404
EventEncoder1Stopped	EventFrameTransferStartFrameID
quickSpin, 401	quickSpin, 405
EventEncoder1StoppedFrameID	$\label{prop:continuous} Event Frame Transfer Start Time stamp$
quickSpin, 401	quickSpin, 405
EventEncoder1StoppedTimestamp	EventFrameTrigger
quickSpin, 401	quickSpin, 405
EventError	EventFrameTriggerFrameID
quickSpin, 401	quickSpin, 405
EventErrorCode	EventFrameTriggerTimestamp
quickSpin, 401	quickSpin, 405
EventErrorFrameID	EventLine0AnyEdge
quickSpin, 402	quickSpin, 405
EventErrorTimestamp	EventLine0AnyEdgeFrameID
quickSpin, 402	quickSpin, 405
EventExposureEnd	EventLine0AnyEdgeTimestamp
quickSpin, 402	quickSpin, 405
EventExposureEndFrameID	EventLine0FallingEdge
quickSpin, 402 EventExposureEndTimestamp	quickSpin, 406 EventLine0FallingEdgeFrameID
quickSpin, 402	quickSpin, 406
EventExposureStart	EventLine0FallingEdgeTimestamp
quickSpin, 402	quickSpin, 406
EventExposureStartFrameID	EventLine0RisingEdge
quickSpin, 402	quickSpin, 406
EventExposureStartTimestamp	EventLine0RisingEdgeFrameID
quickSpin, 402	quickSpin, 406
EventFrameBurstEnd	EventLine0RisingEdgeTimestamp
quickSpin, 403	quickSpin, 406
EventFrameBurstEndFrameID	EventLine1AnyEdge
quickSpin, 403	quickSpin, 406
EventFrameBurstEndTimestamp	EventLine1AnyEdgeFrameID
quickSpin, 403	quickSpin, 406
EventFrameBurstStart	EventLine1AnyEdgeTimestamp
quickSpin, 403	quickSpin, 407
EventFrameBurstStartFrameID	EventLine1FallingEdge
quickSpin, 403	quickSpin, 407
EventFrameBurstStartTimestamp	EventLine1FallingEdgeFrameID
quickSpin, 403	quickSpin, 407
EventFrameEnd	EventLine1FallingEdgeTimestamp
quickSpin, 403	quickSpin, 407
EventFrameEndFrameID	EventLine1RisingEdge
auickSpin, 403	guickSpin. 407

EventLine1RisingEdgeFrameID quickSpin, 407	EventStream0TransferBlockTriggerTimestamp quickSpin, 411
EventLine1RisingEdgeTimestamp	EventStream0TransferBurstEnd
quickSpin, 407 EventLinkSpeedChange	quickSpin, 411 EventStream0TransferBurstEndFrameID
quickSpin, 407	quickSpin, 411
EventLinkSpeedChangeFrameID	EventStream0TransferBurstEndTimestamp
· · · · · · · · · · · · · · · · · · ·	•
quickSpin, 408 EventLinkSpeedChangeTimestamp	quickSpin, 411 EventStream0TransferBurstStart
quickSpin, 408	quickSpin, 411 EventStream0TransferBurstStartFrameID
EventLinkTrigger0	
quickSpin, 408 EventLinkTrigger0FrameID	quickSpin, 411 EventStream0TransferBurstStartTimestamp
quickSpin, 408	
• •	quickSpin, 412 EventStream0TransferEnd
EventLinkTrigger0Timestamp	
quickSpin, 408	quickSpin, 412 EventStream0TransferEndFrameID
EventLinkTrigger1	
quickSpin, 408	quickSpin, 412
EventLinkTrigger1FrameID	EventStream0TransferEndTimestamp
quickSpin, 408	quickSpin, 412
EventLinkTrigger1Timestamp	EventStream0TransferOverflow
quickSpin, 408	quickSpin, 412
EventNotification	EventStream0TransferOverflowFrameID
quickSpin, 409	quickSpin, 412
EventSelector	EventStream0TransferOverflowTimestamp
quickSpin, 409	quickSpin, 412
EventSequencerSetChange	EventStream0TransferPause
quickSpin, 409	quickSpin, 412
EventSequencerSetChangeFrameID	EventStream0TransferPauseFrameID
quickSpin, 409	quickSpin, 413
EventSequencerSetChangeTimestamp	EventStream0TransferPauseTimestamp
quickSpin, 409	quickSpin, 413
EventSerialData	EventStream0TransferResume
quickSpin, 409	quickSpin, 413
EventSerialDataLength	EventStream0TransferResumeFrameID
quickSpin, 409	quickSpin, 413
EventSerialPortReceive	EventStream0TransferResumeTimestamp
quickSpin, 409	quickSpin, 413
EventSerialPortReceiveTimestamp	EventStream0TransferStart
quickSpin, 410	quickSpin, 413
EventSerialReceiveOverflow	EventStream0TransferStartFrameID
quickSpin, 410	quickSpin, 413
EventStream0TransferBlockEnd	EventStream0TransferStartTimestamp
quickSpin, 410	quickSpin, 413
EventStream0TransferBlockEndFrameID	EventTest
quickSpin, 410	quickSpin, 414
EventStream0TransferBlockEndTimestamp	EventTestTimestamp
quickSpin, 410	quickSpin, 414
EventStream0TransferBlockStart	EventTimer0End
quickSpin, 410	quickSpin, 414
EventStream0TransferBlockStartFrameID	EventTimer0EndFrameID
quickSpin, 410	quickSpin, 414
EventStream0TransferBlockStartTimestamp	EventTimer0EndTimestamp
quickSpin, 410	quickSpin, 414
EventStream0TransferBlockTrigger	EventTimer0Start
quickSpin, 411	quickSpin, 414
EventStream0TransferBlockTriggerFrameID	EventTimer0StartFrameID
auickSpin. 411	auickSpin, 414

EventTimer0StartTimestamp	quickSpinTLDevice, 454
quickSpin, 414	GUIXMLPath
EventTimer1End	quickSpinTLDevice, 455
quickSpin, 415	Gain
EventTimer1EndFrameID	quickSpin, 417
quickSpin, 415	GainAuto
EventTimer1EndTimestamp	quickSpin, 418
quickSpin, 415	GainAutoBalance
EventTimer1Start	quickSpin, 418
quickSpin, 415	GainSelector
EventTimer1StartFrameID	quickSpin, 418
quickSpin, 415	Gamma
EventTimer1StartTimestamp	
quickSpin, 415	quickSpin, 418 GammaEnable
ExposureActiveMode	
quickSpin, 415	quickSpin, 418
ExposureAuto	GenlCamXMLLocation
quickSpin, 415	quickSpinTLDevice, 452
	GenlCamXMLPath
ExposureMode	quickSpinTLDevice, 452
quickSpin, 416	GenTLSFNCVersionMajor
ExposureTime	quickSpinTLSystem, 469
quickSpin, 416	GenTLSFNCVersionMinor
ExposureTimeMode	quickSpinTLSystem, 469
quickSpin, 416	GenTLSFNCVersionSubMinor
ExposureTimeSelector	quickSpinTLSystem, 469
quickSpin, 416	GenTLVersionMajor
Forton Doort	quickSpinTLSystem, 469
FactoryReset	GenTLVersionMinor
quickSpin, 416	quickSpinTLSystem, 469
False	GevActionDeviceKey
Spinnaker C Definitions, 22	quickSpinTLInterface, 457
FileAccessBuffer	GevActionGroupKey
quickSpin, 416	quickSpinTLInterface, 457
FileAccessLength	GevActionGroupMask
quickSpin, 416	quickSpinTLInterface, 458
FileAccessOffset	GevActionTime
quickSpin, 416	quickSpinTLInterface, 458
FileOpenMode	
quickSpin, 417	GevActiveLinkCount
FileOperationExecute	quickSpin, 418
quickSpin, 417	GevCCP
FileOperationResult	quickSpin, 418
quickSpin, 417	quickSpinTLDevice, 452
FileOperationSelector	GevCurrentDefaultGateway
quickSpin, 417	quickSpin, 418
FileOperationStatus	GevCurrentIPAddress
quickSpin, 417	quickSpin, 419
FileSelector	GevCurrentIPConfigurationDHCP
quickSpin, 417	quickSpin, 419
FileSize	GevCurrentIPConfigurationLLA
quickSpin, 417	quickSpin, 419
FilterDriverStatus	GevCurrentIPConfigurationPersistentIP
quickSpinTLInterface, 457	quickSpin, 419
frameRate	GevCurrentPhysicalLinkConfiguration
spinAVIOptionEx, 472	quickSpin, 419
spinH264Option, 481	GevCurrentSubnetMask
spinMJPGOptionEx, 485	quickSpin, 419
Spirition GoptionEx, 700	GevDeviceAutoForceIP
GUIXMLLocation	quickSpinTLDevice, 452
	45.5p == 01.00; 10=

quickSpinTLInterface, 458	quickSpin, 420
GevDeviceDiscoverMaximumPacketSize	GevIEEE1588
quickSpinTLDevice, 452	quickSpin, 420
GevDeviceForceGateway	GevIEEE1588ClockAccuracy
quickSpinTLDevice, 452	quickSpin, 421
quickSpinTLInterface, 458	GevIEEE1588Mode
GevDeviceForcelPAddress	quickSpin, 421
quickSpinTLDevice, 453	GevIEEE1588Status
quickSpinTLInterface, 458	quickSpin, 421
GevDeviceForceIP	GevIPConfigurationStatus
quickSpinTLDevice, 453	quickSpin, 421
quickSpinTLInterface, 458	GevInterfaceDefaultGateway
GevDeviceForceSubnetMask	quickSpinTLSystem, 470
quickSpinTLDevice, 453	GevInterfaceDefaultIPAddress
quickSpinTLInterface, 458	quickSpinTLSystem, 470
GevDeviceGateway	GevInterfaceDefaultSubnetMask
quickSpinTLDevice, 453	quickSpinTLSystem, 470
quickSpinTLInterface, 458	GevInterfaceGateway
GevDeviceIPAddress	quickSpinTLInterface, 459
quickSpinTLDevice, 453	GevInterfaceGatewaySelector
quickSpinTLInterface, 459	quickSpinTLInterface, 459
GevDeviceIsWrongSubnet	GevInterfaceMACAddress
quickSpinTLDevice, 453	quickSpinTLInterface, 459
GevDeviceMACAddress	quickSpinTLSystem, 470
quickSpinTLDevice, 453	GevInterfaceMTU
quickSpinTLInterface, 459	quickSpinTLInterface, 459
GevDeviceMaximumPacketSize	GevInterfaceReceiveLinkSpeed
quickSpinTLDevice, 453	quickSpinTLInterface, 459
·	GevInterfaceSelector
GevDeviceMaximumRetryCount	
quickSpinTLDevice, 454	quickSpin, 421
GevDeviceModeIsBigEndian	GevInterfaceSubnetIPAddress
quickSpinTLDevice, 454	quickSpinTLInterface, 460
GevDevicePort	GevInterfaceSubnetMask
quickSpinTLDevice, 454	quickSpinTLInterface, 460
GevDeviceReadAndWriteTimeout	GevInterfaceSubnetSelector
quickSpinTLDevice, 454	quickSpinTLInterface, 460
GevDeviceSubnetMask	GevInterfaceTransmitLinkSpeed
quickSpinTLDevice, 454	quickSpinTLInterface, 460
quickSpinTLInterface, 459	GevMACAddress
GevDiscoveryAckDelay	quickSpin, 421
quickSpin, 419	GevMCDA
GevFailedPacketCount	quickSpin, 421
quickSpinTLStream, 463	GevMCPHostPort
GevFirstURL	quickSpin, 421
quickSpin, 419	GevMCRC
GevGVCPExtendedStatusCodes	quickSpin, 422
quickSpin, 420	GevMCSP
GevGVCPExtendedStatusCodesSelector	quickSpin, 422
quickSpin, 420	GevMCTT
GevGVCPHeartbeatDisable	quickSpin, 422
quickSpin, 420	GevMaximumNumberResendRequests
GevGVCPPendingAck	quickSpinTLStream, 463
quickSpin, 420	GevNumberOfInterfaces
GevGVCPPendingTimeout	quickSpin, 422
quickSpin, 420	GevPAUSEFrameReception
GevGVSPExtendedIDMode	quickSpin, 422
quickSpin, 420	GevPAUSEFrameTransmission
GevHeartbeatTimeout	quickSpin, 422

GevPacketResendMode	GevStreamChannelSelector
quickSpinTLStream, 463	quickSpin, 425
GevPacketResendTimeout	GevSupportedOption
quickSpinTLStream, 463	quickSpin, 426
GevPersistentDefaultGateway	GevSupportedOptionSelector
quickSpin, 422	quickSpin, 426
GevPersistentIPAddress	GevTimestampTickFrequency
quickSpin, 422	quickSpin, 426
GevPersistentSubnetMask	GevTotalPacketCount
quickSpin, 423	quickSpinTLStream, 464
·	GevVersionMajor
GevPhysicalLinkConfiguration	quickSpinTLDevice, 454
quickSpin, 423	·
GevPrimaryApplicationIPAddress	quickSpinTLSystem, 470
quickSpin, 423	GevVersionMinor
GevPrimaryApplicationSocket	quickSpinTLDevice, 454
quickSpin, 423	quickSpinTLSystem, 470
GevPrimaryApplicationSwitchoverKey	GuiXmlManifestAddress
quickSpin, 423	quickSpin, 426
GevResendPacketCount	
quickSpinTLStream, 463	Height
GevResendRequestCount	quickSpin, 426
quickSpinTLStream, 464	height
GevSCCFGAllInTransmission	spinAVIOptionEx, 473
quickSpin, 423	spinH264Option, 481
GevSCCFGExtendedChunkData	spinMJPGOptionEx, 485
quickSpin, 423	HeightMax
·	quickSpin, 426
GevSCCFGPacketResendDestination	HostAdapterDriverVersion
quickSpin, 423	quickSpinTLInterface, 460
GevSCCFGUnconditionalStreaming	HostAdapterName
quickSpin, 424	quickSpinTLInterface, 460
GevSCDA	HostAdapterVendor
quickSpin, 424	quickSpinTLInterface, 460
GevSCPDirection	quisitopii i Emitoriass, 100
quickSpin, 424	IBoolean Access, 311
GevSCPHostPort	spinBooleanGetValue, 311
quickSpin, 424	spinBooleanSetValue, 312
GevSCPInterfaceIndex	ICategory Access, 315
quickSpin, 424	spinCategoryGetFeatureByIndex, 315
GevSCPSBigEndian	spinCategoryGetNumFeatures, 316
quickSpin, 424	ICommand Access, 313
GevSCPSDoNotFragment	
quickSpin, 424	spinCommandExecute, 313
GevSCPSFireTestPacket	spinCommandIsDone, 314
	IEnumEntry Access, 308
quickSpin, 425	spinEnumerationEntryGetEnumValue, 308
GevSCPSPacketSize	spinEnumerationEntryGetIntValue, 309
quickSpin, 425	spinEnumerationEntryGetSymbolic, 309
GevSCPD	IEnumeration Access, 303
quickSpin, 424	spinEnumerationGetCurrentEntry, 303
GevSCSP	spinEnumerationGetEntryByIndex, 304
quickSpin, 425	spinEnumerationGetEntryByName, 304
GevSCZoneConfigurationLock	spinEnumerationGetNumEntries, 305
quickSpin, 425	spinEnumerationReleaseNode, 305
GevSCZoneCount	spinEnumerationSetEnumValue, 306
quickSpin, 425	spinEnumerationSetIntValue, 306
GevSCZoneDirectionAll	IFloat Access, 298
quickSpin, 425	spinFloatGetMax, 298
GevSecondURL	spinFloatGetMin, 299
quickSpin, 425	spinFloatGetRepresentation, 299
	-p 3 at 6.0 t. top. 000 i i at 10 i i a

· El . · O . · III · i· . 000	1.1 0.101 1 D 1.11 014
spinFloatGetUnit, 300	spinImageGetStatusDescription, 211
spinFloatGetValue, 300	spinImageGetStride, 212
spinFloatGetValueEx, 301	spinImageGetTLPayloadType, 213
spinFloatSetValue, 301	spinImageGetTLPixelFormat, 213
spinFloatSetValueEx, 302	spinImageGetTLPixelFormatNamespace, 214
IInteger Access, 293	spinImageGetTimeStamp, 212
spinIntegerGetInc, 293	spinImageGetValidPayloadSize, 214
spinIntegerGetMax, 294	spinImageGetWidth, 215
spinIntegerGetMin, 294	spinImageHasCRC, 215
spinIntegerGetRepresentation, 295	spinImageIsIncomplete, 216
spinIntegerGetValue, 295	spinImageRelease, 216
spinIntegerGetValueEx, 296	spinImageReset, 216
spinIntegerSetValue, 296	spinImageResetEx, 217
spinIntegerSetValueEx, 297	spinImageSave, 218
IRegister Access, 317	spinImageSaveBmp, 218
spinRegisterGet, 317	spinImageSaveFromExt, 219
spinRegisterGetAddress, 318	spinImageSaveJpeg, 219
spinRegisterGetEx, 318	spinImageSaveJpg2, 220
spinRegisterGetLength, 319	spinImageSavePgm, 220
spinRegisterSet, 320	spinImageSavePng, 221
spinRegisterSetEx, 320	spinImageSavePpm, 221
spinRegisterSetReference, 321	spinImageSaveTiff, 222
IValue Access, 286	spinImageSetDefaultColorProcessing, 222
spinNodeFromString, 286	spinImageSetNumDecompressionThreads, 223
spinNodeFromStringEx, 287	ImageComponentEnable
spinNodeToString, 287	quickSpin, 426
spinNodeToStringEx, 288	ImageComponentSelector
Image Access, 194	quickSpin, 426
spinImageCalculateStatistics, 196	ImageCompressionBitrate
spinImageCheckCRC, 197	quickSpin, 427
spinImageConvert, 197	ImageCompressionJPEGFormatOption
spinImageConvertEx, 198	quickSpin, 427
spinImageCreate, 198	ImageCompressionMode
spinImageCreateEmpty, 199	quickSpin, 427
spinImageCreateEx, 199	ImageCompressionQuality
spinImageCreateEx2, 200	quickSpin, 427
spinImageDeepCopy, 201	ImageCompressionRateOption
spinImageDestroy, 201	quickSpin, 427
spinImageGetBitsPerPixel, 201	ImageStatistics Access, 231
spinImageGetBufferSize, 202	spinImageStatisticsCreate, 232
spinImageGetChunkLayoutID, 202	spinImageStatisticsDestroy, 232
spinImageGetColorProcessing, 203	spinImageStatisticsDisableAll, 232
spinImageGetData, 203	spinImageStatisticsEnableAll, 233
spinImageGetDefaultColorProcessing, 204	spinImageStatisticsEnableGreyOnly, 233
spinImageGetFrameID, 204	spinImageStatisticsEnableHslOnly, 234
spinImageGetHeight, 205	spinImageStatisticsEnableRgbOnly, 234
spinImageGetID, 205	spinImageStatisticsGetAll, 235
spinImageGetNumDecompressionThreads, 206	spinImageStatisticsGetChannelStatus, 235
spinImageGetOffsetX, 206	spinImageStatisticsGetHistogram, 236
spinImageGetOffsetY, 207	spinImageStatisticsGetMean, 236
spinImageGetPaddingX, 207	spinImageStatisticsGetNumPixelValues, 237
spinImageGetPaddingY, 208	spinImageStatisticsGetPixelValueRange, 237
spinImageGetPayloadType, 208	spinImageStatisticsGetRange, 238
spinImageGetPixelFormat, 209	spinImageStatisticsSetChannelStatus, 238
spinImageGetPixelFormatName, 209	include/spinc/CameraDefsC.h, 491
spinImageGetPrivateData, 210	include/spinc/ChunkDataDefC.h, 524
spinImageGetSize, 210	include/spinc/QuickSpinC.h, 525
spinImageGetStatus, 211	include/spinc/QuickSpinDefsC.h, 525
opininago o o to tatao, E i i	

include/spinc/SpinVideoC.h, 550	spinInterfaceListGetSize, 166
include/spinc/SpinnakerC.h, 527	InterfaceSelector
include/spinc/SpinnakerDefsC.h, 537	quickSpinTLSystem, 471
include/spinc/SpinnakerGenApiC.h, 542	InterfaceType
include/spinc/SpinnakerGenApiDefsC.h, 546	quickSpinTLInterface, 462
include/spinc/SpinnakerPlatformC.h, 549	InterfaceUpdateList
include/spinc/TransportLayerDefsC.h, 551	quickSpinTLSystem, 471
include/spinc/TransportLayerDeviceC.h, 553	interlaced
include/spinc/TransportLayerInterfaceC.h, 553	spinPNGOption, 488
include/spinc/TransportLayerStreamC.h, 554	IspEnable
include/spinc/TransportLayerSystemC.h, 555	quickSpin, 427
IncompatibleDeviceCount	
quickSpinTLInterface, 460	LUTEnable
IncompatibleDeviceID	quickSpin, 430
quickSpinTLInterface, 461	LUTIndex
IncompatibleDeviceModelName	quickSpin, 430
quickSpinTLInterface, 461	LUTSelector
IncompatibleDeviceSelector	quickSpin, 430
quickSpinTLInterface, 461	LUTValue
IncompatibleDeviceVendorName	quickSpin, 430
quickSpinTLInterface, 461	LUTValueAll
IncompatibleGevDeviceIPAddress	quickSpin, 430
quickSpinTLInterface, 461	LineFilterWidth
IncompatibleGevDeviceMACAddress	quickSpin, 427
quickSpinTLInterface, 461	LineFormat
IncompatibleGevDeviceSubnetMask	quickSpin, 427
quickSpinTLInterface, 461	LineInputFilterSelector
indexedColor_8bit	quickSpin, 428
spinBMPOption, 474	LineInverter
Interface Access, 174	quickSpin, 428
spinInterfaceGetCameras, 175	LineMode
spinInterfaceGetCamerasEx, 175	quickSpin, 428
spinInterfaceGetTLNodeMap, 176	LinePitch
spinInterfaceIsInUse, 176	quickSpin, 428 LineSelector
spinInterfaceRegisterDeviceArrivalEventHandler,	
177	quickSpin, 428 LineSource
spinInterfaceRegisterDeviceRemovalEvent←	
Handler, 177	quickSpin, 428 LineStatus
spinInterfaceRegisterInterfaceEventHandler, 178	quickSpin, 428
spinInterfaceRelease, 178	LineStatusAll
spinInterfaceSendActionCommand, 179	quickSpin, 428
spinInterfaceUnregisterDeviceArrivalEventHandler,	LinkErrorCount
179	quickSpin, 429
spinInterfaceUnregisterDeviceRemovalEvent↔	LinkUptime
Handler, 180	quickSpin, 429
spinInterfaceUnregisterInterfaceEventHandler, 180	Logging Event Data Access, 240
spinInterfaceUpdateCameras, 181	spinLogDataGetCategoryName, 240
InterfaceDisplayName	spinLogDataGetLogMessage, 241
quickSpinTLInterface, 461	spinLogDataGetNDC, 241
quickSpinTLSystem, 470	spinLogDataGetNbG, 241
InterfaceID	spinLogDataGetPriorityName, 242
quickSpinTLInterface, 462	spinLogDataGetThreadName, 243
quickSpinTLSystem, 470	spinLogDataGetTimestamp, 243
InterfaceList Access, 164	LogicBlockLUTInputActivation
spinInterfaceListClear, 164	quickSpin, 429
spinInterfaceListCreateEmpty, 165	LogicBlockLUTInputSelector
spinInterfaceListDestroy, 165	quickSpin, 429
spinInterfaceListGet, 166	LogicBlockLUTInputSource
1	J F

quickSpin, 429	spinChunkData, 478
LogicBlockLUTOutputValue	m_scan3dCoordinateOffset
quickSpin, 429	spinChunkData, 478
LogicBlockLUTOutputValueAll	m_scan3dCoordinateReferenceValue
quickSpin, 429	spinChunkData, 478
LogicBlockLUTRowIndex	m_scan3dCoordinateScale
quickSpin, 429	spinChunkData, 478
LogicBlockLUTSelector	m_scan3dInvalidDataValue
quickSpin, 430	spinChunkData, 478
LogicBlockSelector	m scan3dTransformValue
quickSpin, 430	spinChunkData, 479
	m_scanLineSelector
m_blackLevel	spinChunkData, 479
spinChunkData, 475	m_sequencerSetActive
m_cRC	spinChunkData, 479
spinChunkData, 476	m_serialDataLength
m_compressionMode	spinChunkData, 479
spinChunkData, 475	m streamChannelID
m_compressionRatio	spinChunkData, 479
spinChunkData, 475	m timerValue
m counterValue	<del>-</del>
spinChunkData, 475	spinChunkData, 479
m_encoderValue	m_timestamp
spinChunkData, 476	spinChunkData, 479
m_exposureEndLineStatusAll	m_timestampLatchValue
spinChunkData, 476	spinChunkData, 479
m_exposureTime	m_transferBlockID
spinChunkData, 476	spinChunkData, 480
m_frameID	m_transferQueueCurrentBlockCount
	spinChunkData, 480
spinChunkData, 476	m_width
m_gain	spinChunkData, 480
spinChunkData, 476	major
m_height	spinLibraryVersion, 484
spinChunkData, 476	MaxDeviceResetTime
m_image	quickSpin, 430
spinChunkData, 476	minor
m_inferenceConfidence	spinLibraryVersion, 484
spinChunkData, 477	
m_inferenceFrameId	Node Access, 274
spinChunkData, 477	spinNodeDeregisterCallback, 275
m_inferenceResult	spinNodeGetAccessMode, 275
spinChunkData, 477	spinNodeGetCachingMode, 276
m_linePitch	spinNodeGetDescription, 276
spinChunkData, 477	spinNodeGetDisplayName, 277
m_lineStatusAll	spinNodeGetImposedAccessMode, 278
spinChunkData, 477	spinNodeGetImposedVisibility, 278
m_offsetX	spinNodeGetName, 278
spinChunkData, 477	spinNodeGetNameSpace, 279
m_offsetY	spinNodeGetPollingTime, 279
spinChunkData, 477	spinNodeGetToolTip, 280
m_partSelector	spinNodeGetType, 280
spinChunkData, 477	spinNodeGetVisibility, 281
m_pixelDynamicRangeMax	spinNodeInvalidateNode, 281
spinChunkData, 478	spinNodelsAvailable, 282
m_pixelDynamicRangeMin	spinNodeIsEqual, 282
spinChunkData, 478	spinNodelsImplemented, 283
m_scan3dAxisMax	spinNodelsReadable, 283
spinChunkData, 478	spinNodelsWritable, 284
m_scan3dAxisMin	spinNodeRegisterCallback, 284
<del>_</del>	

Node Map Access, 270	AcquisitionResultingFrameRate, 366
spinNodeMapGetNode, 270	AcquisitionStart, 366
spinNodeMapGetNodeByIndex, 271	AcquisitionStatus, 366
spinNodeMapGetNumNodes, 271	AcquisitionStatusSelector, 366
spinNodeMapPoll, 272	AcquisitionStop, 366
spinNodeMapReleaseNode, 272	ActionDeviceKey, 366
	ActionGroupKey, 366
OffsetX	ActionGroupMask, 366
quickSpin, 431	ActionQueueSize, 367
OffsetY	ActionSelector, 367
quickSpin, 431	ActionUnconditionalMode, 367
POFO: I	AdaptiveCompressionEnable, 367
POEStatus	AdcBitDepth, 367
quickSpinTLInterface, 462	AutoAlgorithmSelector, 367
PacketResendRequestCount	AutoExposureControlLoopDamping, 368
quickSpin, 431	AutoExposureControlPriority, 368
PayloadSize	AutoExposureEVCompensation, 368
quickSpin, 431	AutoExposureExposureTimeLowerLimit, 368
PixelColorFilter	AutoExposureExposureTimeUpperLimit, 368
quickSpin, 431 PixeIDynamicRangeMax	AutoExposureGainLowerLimit, 368
quickSpin, 431	AutoExposureGainUpperLimit, 368
PixelDynamicRangeMin	AutoExposureGreyValueLowerLimit, 368
quickSpin, 431	AutoExposureGreyValueUpperLimit, 369
PixelFormat	AutoExposureLightingMode, 369
quickSpin, 431	AutoExposureMeteringMode, 369
PixelFormatInfoID	AutoExposureTargetGreyValue, 369
quickSpin, 432	AutoExposureTargetGreyValueAuto, 369
PixelFormatInfoSelector	BalanceRatio, 369
quickSpin, 432	BalanceRatioSelector, 369
PixelSize	BalanceWhiteAuto, 369
quickSpin, 432	BalanceWhiteAutoDamping, 370
PowerSupplyCurrent	BalanceWhiteAutoLowerLimit, 370
quickSpin, 432	BalanceWhiteAutoProfile, 370
PowerSupplyVoltage	BalanceWhiteAutoUpperLimit, 370
quickSpin, 432	BinningHorizontal, 370
progressive	BinningHorizontalMode, 370
spinJPEGOption, 482	BinningSelector, 370
	BinningVertical, 370
quality	BinningVerticalMode, 371
spinJPEGOption, 482	BlackLevel, 371
spinJPG2Option, 483	BlackLevelAuto, 371
spinMJPGOptionEx, 486	BlackLevelAutoBalance, 371
quickSpin, 352	BlackLevelClampingEnable, 371
aPAUSEMACCtrlFramesReceived, 367	BlackLevelRaw, 371
aPAUSEMACCtrlFramesTransmitted, 367	BlackLevelSelector, 371
AasRoiEnable, 364	ChunkBlackLevel, 371
AasRoiHeight, 364	ChunkBlackLevelSelector, 372
AasRoiOffsetX, 364	ChunkCRC, 372
AasRoiOffsetY, 364	ChunkCompressionMode, 372
AasRoiWidth, 364	ChunkCompressionRatio, 372
AcquisitionAbort, 365	ChunkCounterSelector, 372
AcquisitionArm, 365	ChunkCounterValue, 372
AcquisitionBurstFrameCount, 365	ChunkEnable, 372
AcquisitionFrameCount, 365	ChunkEncoderSelector, 372
AcquisitionFrameRate, 365	ChunkEncoderStatus, 373
AcquisitionFrameRateEnable, 365	ChunkEncoderValue, 373
AcquisitionLineRate, 365	ChunkExposureEndLineStatusAll, 373
AcquisitionMode, 365	ChunkExposureTime, 373

ChunkExposureTimeSelector, 373	CompressionRatio, 380
ChunkFrameID, 373	CompressionSaturationPriority, 380
ChunkGain, 373	CounterDelay, 381
ChunkGainSelector, 373	CounterDuration, 381
ChunkHeight, 374	CounterEventActivation, 381
Chunklmage, 374	CounterEventSource, 381
ChunkImageComponent, 374	CounterReset, 381
ChunkInferenceBoundingBoxResult, 374	CounterResetActivation, 381
ChunkInferenceConfidence, 374	CounterResetSource, 381
ChunkInferenceFrameId, 374	CounterSelector, 381
ChunkInferenceResult, 374	CounterStatus, 382
ChunkLinePitch, 374	CounterTriggerActivation, 382
ChunkLineStatusAll, 375	CounterTriggerSource, 382
ChunkModeActive, 375	CounterValue, 382
ChunkOffsetX, 375	CounterValueAtReset, 382
ChunkOffsetY, 375	CxpConnectionSelector, 382
ChunkPartSelector, 375	CxpConnectionTestErrorCount, 382
ChunkPixelDynamicRangeMax, 375	CxpConnectionTestMode, 382
ChunkPixelDynamicRangeMin, 375	CxpConnectionTestPacketCount, 383
ChunkPixelFormat, 375	CxpLinkConfiguration, 383
ChunkRegionID, 376	CxpLinkConfigurationPreferred, 383
ChunkScan3dAxisMax, 376	CxpLinkConfigurationStatus, 383
ChunkScan3dAxisMin, 376	CxpPoCxpAuto, 383
ChunkScan3dCoordinateOffset, 376	CxpPoCxpStatus, 383
ChunkScan3dCoordinateReferenceSelector, 376	CxpPoCxpTripReset, 383
ChunkScan3dCoordinateReferenceValue, 376	CxpPoCxpTurnOff, 383
ChunkScan3dCoordinateScale, 376	DecimationHorizontal, 384
ChunkScan3dCoordinateSelector, 376	DecimationHorizontalMode, 384
ChunkScan3dCoordinateSystem, 377	DecimationSelector, 384
ChunkScan3dCoordinateSystemReference, 377	DecimationVertical, 384
ChunkScan3dCoordinateTransformSelector, 377	DecimationVerticalMode, 384
ChunkScan3dDistanceUnit, 377	DefectCorrectStaticEnable, 384
ChunkScan3dInvalidDataFlag, 377	DefectCorrectionMode, 384
ChunkScan3dInvalidDataValue, 377	DefectTableApply, 384
ChunkScan3dOutputMode, 377	DefectTableCoordinateX, 385
ChunkScan3dTransformValue, 377	DefectTableCoordinateY, 385
ChunkScanLineSelector, 378	DefectTableFactoryRestore, 385
ChunkSelector, 378	DefectTableIndex, 385
ChunkSequencerSetActive, 378	DefectTablePixelCount, 385
ChunkSerialData, 378	DefectTableSave, 385
ChunkSerialDataLength, 378	Deinterlacing, 385
ChunkSerialReceiveOverflow, 378	DeviceCharacterSet, 385
ChunkSourceID, 378	DeviceClockFrequency, 386
ChunkStreamChannelID, 378	DeviceClockSelector, 386
ChunkTimerSelector, 379	DeviceConnectionSelector, 386
ChunkTimerValue, 379	DeviceConnectionSpeed, 386
ChunkTimestamp, 379	DeviceConnectionStatus, 386
ChunkTimestampLatchValue, 379	DeviceEventChannelCount, 386
ChunkTransferBlockID, 379	DeviceFamilyName, 386
ChunkTransferQueueCurrentBlockCount, 379	DeviceFeaturePersistenceEnd, 386
ChunkWidth 379	DeviceFeaturePersistenceStart, 387
ChunkWidth, 379	DeviceFirmwareVersion, 387
CIConfiguration, 380	DeviceGenCPVersionMajor, 387
ClarTaneformation Facility 200	DeviceGenCPVersionMinor, 387
ColorTransformationEnable, 380	DeviceID, 387
ColorTransformationSelector, 380	DeviceIndicatorMode, 387
ColorTransformationValue, 380	DeviceLinkBandwidthReserve, 387
ColorTransformationValueSelector, 380	DeviceLinkCommandTimeout, 387

DeviceLinkConnectionCount, 388	EncoderSourceA, 395
DeviceLinkCurrentThroughput, 388	EncoderSourceB, 395
DeviceLinkHeartbeatMode, 388	EncoderStatus, 395
DeviceLinkHeartbeatTimeout, 388	EncoderTimeout, 395
DeviceLinkSelector, 388	EncoderValue, 395
DeviceLinkSpeed, 388	EncoderValueAtReset, 395
DeviceLinkThroughputLimit, 388	EnumerationCount, 396
DeviceLinkThroughputLimitMode, 388	EventAcquisitionEnd, 396
DeviceManifestEntrySelector, 389	EventAcquisitionEndFrameID, 396
DeviceManifestPrimaryURL, 389	EventAcquisitionEndTimestamp, 396
DeviceManifestSchemaMajorVersion, 389	EventAcquisitionError, 396
DeviceManifestSchemaMinorVersion, 389	EventAcquisitionErrorFrameID, 396
DeviceManifestSecondaryURL, 389	EventAcquisitionErrorTimestamp, 396
DeviceManifestXMLMajorVersion, 389	EventAcquisitionStart, 396
DeviceManifestXMLMinorVersion, 389	EventAcquisitionStartFrameID, 397
DeviceManifestXMLSubMinorVersion, 389	EventAcquisitionStartTimestamp, 397
DeviceManufacturerInfo, 390	EventAcquisitionTransferEnd, 397
DeviceMaxThroughput, 390	EventAcquisitionTransferEndFrameID, 397
DeviceModelName, 390	EventAcquisitionTransferEndTimestamp, 397
DevicePowerSupplySelector, 390	EventAcquisitionTransferStart, 397
DeviceRegistersCheck, 390	EventAcquisitionTransferStartFrameID, 397
DeviceRegistersEndianness, 390	EventAcquisitionTransferStartTimestamp, 397
DeviceRegistersStreamingEnd, 390	EventAcquisitionTrigger, 398
DeviceRegistersStreamingStart, 390	EventAcquisitionTriggerFrameID, 398
DeviceRegistersValid, 391	EventAcquisitionTriggerTimestamp, 398
DeviceReset, 391	EventActionLate, 398
DeviceSFNCVersionMajor, 391	EventActionLateFrameID, 398
DeviceSFNCVersionMinor, 391	EventActionLateTimestamp, 398
DeviceSFNCVersionSubMinor, 392	EventCounter0End, 398
DeviceScanType, 391	EventCounter0EndFrameID, 398
DeviceSerialNumber, 391	EventCounter0EndTimestamp, 399
DeviceSerialPortBaudRate, 391	EventCounter0Start, 399
DeviceSerialPortSelector, 391	EventCounter0StartFrameID, 399
DeviceStreamChannelCount, 392	EventCounter0StartTimestamp, 399
DeviceStreamChannelEndianness, 392	EventCounter1End, 399
DeviceStreamChannelLink, 392	EventCounter1EndFrameID, 399
DeviceStreamChannelPacketSize, 392 DeviceStreamChannelSelector, 392	EventCounter1EndTimestamp, 399 EventCounter1Start, 399
DeviceStreamChannelType, 392	EventCounter1Start, 399 EventCounter1StartFrameID, 400
•••	EventCounter1StartTimestamp, 400
DeviceTLType, 393 DeviceTLVersionMajor, 393	EventEncoder0Restarted, 400
Device TL VersionMinor, 393	EventEncoder0RestartedFrameID, 400
Device TL VersionSubMinor, 393	EventEncoder0RestartedTimestamp, 400
Device Teversion Submittor, 393  Device TapGeometry, 392	EventEncoderOStopped, 400
Device Tapaeometry, 392  Device Temperature, 393	EventEncoder0StoppedFrameID, 400
Device TemperatureSelector, 393	EventEncoder0StoppedTimestamp, 400
Device Type, 393	EventEncoder1Restarted, 401
DeviceUptime, 393	EventEncoder1RestartedFrameID, 401
DeviceUserID, 394	EventEncoder1RestartedTimestamp, 401
DeviceVendorName, 394	EventEncoder1Stopped, 401
Device Version, 394	EventEncoder1StoppedFrameID, 401
EncoderDivider, 394	EventEncoder1StoppedTimestamp, 401
EncoderMode, 394	EventError, 401
EncoderNode, 394 EncoderOutputMode, 394	EventErrorCode, 401
EncoderOutputwiode, 394 EncoderReset, 394	EventErrorFrameID, 402
EncoderResetActivation, 394	EventErrorTimestamp, 402
EncoderResetSource, 395	EventExposureEnd, 402
Encoder Reset Source, 395 Encoder Selector, 395	EventExposureEnd, 402 EventExposureEndFrameID, 402
LITOUGI SCIECTOI, 333	EventExposureEnurramerD, 402

EventExposureEndTimestamp, 402	EventSerialDataLength, 409
EventExposureStart, 402	EventSerialPortReceive, 409
EventExposureStartFrameID, 402	EventSerialPortReceiveTimestamp, 410
EventExposureStartTimestamp, 402	EventSerialReceiveOverflow, 410
EventFrameBurstEnd, 403	EventStream0TransferBlockEnd, 410
EventFrameBurstEndFrameID, 403	EventStream0TransferBlockEndFrameID, 410
EventFrameBurstEndTimestamp, 403	EventStream0TransferBlockEndTimestamp, 410
EventFrameBurstStart, 403	EventStream0TransferBlockStart, 410
EventFrameBurstStartFrameID, 403	EventStream0TransferBlockStartFrameID, 410
EventFrameBurstStartTimestamp, 403	EventStream0TransferBlockStartTimestamp, 410
EventFrameEnd, 403	EventStream0TransferBlockTrigger, 411
EventFrameEndFrameID, 403	EventStream0TransferBlockTriggerFrameID, 411
EventFrameEndTimestamp, 404	EventStream0TransferBlockTriggerTimestamp, 411
EventFrameStart, 404	EventStream0TransferBurstEnd, 411
EventFrameStartFrameID, 404	EventStream0TransferBurstEndFrameID, 411
EventFrameStartTimestamp, 404	EventStream0TransferBurstEndTimestamp, 411
EventFrameTransferEnd, 404	EventStream0TransferBurstStart, 411
EventFrameTransferEndFrameID, 404	EventStream0TransferBurstStartFrameID, 411
EventFrameTransferEndTimestamp, 404	EventStream0TransferBurstStartTimestamp, 412
EventFrameTransferStart, 404	EventStream0TransferEnd, 412
EventFrameTransferStartFrameID, 405	EventStream0TransferEndFrameID, 412
EventFrameTransferStartTimestamp, 405	EventStream0TransferEndTimestamp, 412
EventFrameTrigger, 405	EventStream0TransferOverflow, 412
EventFrameTriggerFrameID, 405	EventStream0TransferOverflowFrameID, 412
EventFrameTriggerTimestamp, 405	EventStream0TransferOverflowTimestamp, 412
EventLine0AnyEdge, 405	EventStream0TransferPause, 412
EventLine0AnyEdgeFrameID, 405	EventStream0TransferPauseFrameID, 413
EventLine0AnyEdgeTimestamp, 405	EventStream0TransferPauseTimestamp, 413
EventLine0FallingEdge, 406	EventStream0TransferResume, 413
EventLine0FallingEdgeFrameID, 406	EventStream0TransferResumeFrameID, 413
EventLine0FallingEdgeTimestamp, 406	EventStream0TransferResumeTimestamp, 413
EventLine0RisingEdge, 406	EventStream0TransferStart, 413
EventLine0RisingEdgeFrameID, 406	EventStream0TransferStartFrameID, 413
EventLine0RisingEdgeTimestamp, 406	EventStream0TransferStartTimestamp, 413
EventLine1AnyEdge, 406	EventTest, 414
EventLine1AnyEdgeFrameID, 406	EventTestTimestamp, 414
EventLine1AnyEdgeTimestamp, 407	EventTimer0End, 414
EventLine1FallingEdge, 407	EventTimer0EndFrameID, 414
EventLine1FallingEdgeFrameID, 407	EventTimer0EndTimestamp, 414
EventLine1FallingEdgeTimestamp, 407	EventTimer0Start, 414
EventLine1RisingEdge, 407	EventTimer0StartFrameID, 414
EventLine1RisingEdgeFrameID, 407	EventTimer0StartTimestamp, 414
EventLine1RisingEdgeTimestamp, 407	EventTimer1End, 415
EventLinkSpeedChange, 407	EventTimer1EndFrameID, 415
EventLinkSpeedChangeFrameID, 408	EventTimer1EndTimestamp, 415
EventLinkSpeedChangeTimestamp, 408	EventTimer1Start, 415
EventLinkTrigger0, 408	EventTimer1StartFrameID, 415
EventLinkTrigger0FrameID, 408	EventTimer1StartTimestamp, 415
EventLinkTrigger0Timestamp, 408	ExposureActiveMode, 415
EventLinkTrigger1, 408	ExposureAuto, 415
EventLinkTrigger1FrameID, 408	ExposureMode, 416
EventLinkTrigger1Timestamp, 408	ExposureTime, 416
EventNotification, 409	ExposureTimeMode, 416
EventSelector, 409	ExposureTimeSelector, 416
EventSequencerSetChange, 409	FactoryReset, 416
EventSequencerSetChangeFrameID, 409	FileAccessBuffer, 416
EventSequencerSetChangeTimestamp, 409	FileAccessLength, 416
EventSerialData, 409	FileAccessOffset, 416
Evolitochalbata, 700	1 110/100000011001, 710

FileOpenMode, 417	GevSCPDirection, 424
FileOperationExecute, 417	GevSCPHostPort, 424
FileOperationResult, 417	GevSCPInterfaceIndex, 424
FileOperationSelector, 417	GevSCPSBigEndian, 424
FileOperationStatus, 417	GevSCPSDoNotFragment, 424
FileSelector, 417	GevSCPSFireTestPacket, 425
FileSize, 417	GevSCPSPacketSize, 425
Gain, 417	GevSCPD, 424
GainAuto, 418	GevSCSP, 425
GainAutoBalance, 418	GevSCZoneConfigurationLock, 425
GainSelector, 418	GevSCZoneCount, 425
Gamma, 418	GevSCZoneDirectionAll, 425
GammaEnable, 418	GevSecondURL, 425
GevActiveLinkCount, 418	GevStreamChannelSelector, 425
GevCCP, 418	GevSupportedOption, 426
GevCurrentIPAddress, 418	GevSupportedOptionSelector, 426 GevTimestampTickFrequency, 426
GevCurrentIPAddress, 419	GuiXmlManifestAddress, 426
GevCurrentIPConfigurationDHCP, 419 GevCurrentIPConfigurationLLA, 419	Height, 426
GevCurrentIPConfigurationPersistentIP, 419	HeightMax, 426
GevCurrentPhysicalLinkConfiguration, 419	ImageComponentEnable, 426
GevCurrentSubnetMask, 419	ImageComponentSelector, 426
GevDiscoveryAckDelay, 419	ImageCompressionBitrate, 427
GevFirstURL, 419	ImageCompressionJPEGFormatOption, 427
GevGVCPExtendedStatusCodes, 420	ImageCompressionMode, 427
GevGVCPExtendedStatusCodesSelector, 420	ImageCompressionQuality, 427
GevGVCPHeartbeatDisable, 420	ImageCompressionRateOption, 427
GevGVCPPendingAck, 420	IspEnable, 427
GevGVCPPendingTimeout, 420	LUTEnable, 430
GevGVSPExtendedIDMode, 420	LUTIndex, 430
GevHeartbeatTimeout, 420	LUTSelector, 430
GevIEEE1588, 420	LUTValue, 430
GevIEEE1588ClockAccuracy, 421	LUTValueAll, 430
GevIEEE1588Mode, 421	LineFilterWidth, 427
GevIEEE1588Status, 421	LineFormat, 427
GevIPConfigurationStatus, 421	LineInputFilterSelector, 428
GevInterfaceSelector, 421	LineInverter, 428
GevMACAddress, 421	LineMode, 428
GevMCDA, 421	LinePitch, 428
GevMCPHostPort, 421	LineSelector, 428
GevMCRC, 422	LineSource, 428
GevMCSP, 422	LineStatus, 428
GevMCTT, 422	LineStatusAll, 428
GevNumberOfInterfaces, 422	LinkErrorCount, 429
GevPAUSEFrameReception, 422	LinkUptime, 429
GevPAUSEFrameTransmission, 422	LogicBlockLUTInputActivation, 429
GevPersistentDefaultGateway, 422	LogicBlockLUTInputSelector, 429
GevPersistentIPAddress, 422	LogicBlockLUTInputSource, 429
GevPersistentSubnetMask, 423	LogicBlockLUTOutputValue, 429
GevPhysicalLinkConfiguration, 423	LogicBlockLUTOutputValueAll, 429
GevPrimaryApplicationIPAddress, 423	LogicBlockLUTRowlndex, 429
GevPrimaryApplicationSocket, 423	LogicBlockLUTSelector, 430
GevPrimaryApplicationSwitchoverKey, 423	LogicBlockSelector, 430
GevSCCFGAllInTransmission, 423 GevSCCFGExtendedChunkData, 423	MaxDeviceResetTime, 430
GevSCCFGExtendedChunkData, 423 GevSCCFGPacketResendDestination, 423	OffsetX, 431 OffsetY, 431
GevSCCFGUnconditionalStreaming, 424	PacketResendRequestCount, 431
GevSCDA, 424	PayloadSize, 431
GOVOODA, TET	i ayidadoize, <del>to</del> i

PixelColorFilter, 431	SerialReceiveFramingErrorCount, 438
PixelDynamicRangeMax, 431	SerialReceiveParityErrorCount, 438
PixelDynamicRangeMin, 431	SerialReceiveQueueClear, 439
PixelFormat, 431	SerialReceiveQueueCurrentCharacterCount, 439
PixelFormatInfoID, 432	SerialReceiveQueueMaxCharacterCount, 439
PixelFormatInfoSelector, 432	SerialTransmitQueueCurrentCharacterCount, 439
PixelSize, 432	SerialTransmitQueueMaxCharacterCount, 439
PowerSupplyCurrent, 432	Sharpening, 439
PowerSupplyVoltage, 432	SharpeningAuto, 439
RegionDestination, 432	SharpeningEnable, 439
RegionMode, 432	SharpeningThreshold, 440
RegionSelector, 432	SoftwareSignalPulse, 440
ReverseX, 433	SoftwareSignalSelector, 440
ReverseY, 433	SourceCount, 440
RgbTransformLightSource, 433	SourceSelector, 440
Saturation, 433	TLParamsLocked, 442
SaturationEnable, 433	Test0001, 440
Scan3dAxisMax, 433	TestEventGenerate, 440
Scan3dAxisMin, 433	TestPattern, 440
Scan3dCoordinateOffset, 433	TestPatternGeneratorSelector, 441
Scan3dCoordinateReferenceSelector, 434	TestPendingAck, 441
Scan3dCoordinateReferenceValue, 434	TimerDelay, 441
Scan3dCoordinateScale, 434	TimerDuration, 441
Scan3dCoordinateSelector, 434	TimerReset, 441
Scan3dCoordinateSystem, 434	TimerSelector, 441
Scan3dCoordinateSystemReference, 434	TimerStatus, 441
Scan3dCoordinateTransformSelector, 434	TimerTriggerActivation, 441
Scan3dDistanceUnit, 434	TimerTriggerSource, 442
Scan3dInvalidDataFlag, 435	TimerValue, 442
Scan3dInvalidDataValue, 435	Timestamp, 442
Scan3dOutputMode, 435	TimestampLatch, 442
Scan3dTransformValue, 435	TimestampLatchValue, 442
SensorDescription, 435	TimestampReset, 442
SensorDigitizationTaps, 435	TransferAbort, 442
SensorHeight, 435	TransferBlockCount, 443
SensorShutterMode, 435	TransferBurstCount, 443
SensorTaps, 436	TransferComponentSelector, 443
SensorWidth, 436	TransferControlMode, 443
SequencerConfigurationMode, 436	TransferOperationMode, 443
SequencerConfigurationValid, 436	TransferPause, 443
SequencerFeatureEnable, 436	TransferQueueCurrentBlockCount, 443
SequencerMode, 436	TransferQueueMaxBlockCount, 443
SequencerPathSelector, 436	TransferQueueMode, 444
SequencerSetActive, 436	TransferQueueOverflowCount, 444
SequencerSetLoad, 437	TransferResume, 444
SequencerSetNext, 437	TransferSelector, 444
SequencerSetSave, 437	TransferStart, 444
SequencerSetSelector, 437	TransferStatus, 444
SequencerSetStart, 437	TransferStatusSelector, 444
SequencerSetValid, 437	TransferStop, 444
SequencerTriggerActivation, 437	TransferStreamChannel, 445
SequencerTriggerSource, 437	TransferTriggerActivation, 445
SerialPortBaudRate, 438	TransferTriggerMode, 445
SerialPortDataBits, 438	TransferTriggerSelector, 445
SerialPortParity, 438	TransferTriggerSource, 445
SerialPortSelector, 438	TriggerActivation, 445
SerialPortSource, 438	TriggerDelay, 445
SerialPortStopBits, 438	TriggerDivider, 445

TriggerEventTest, 446	Davisa Driver Version 450
TriggerMode, 446	DeviceDriverVersion, 450 DeviceEndianessMechanism, 450
TriggerMultiplier, 446	DeviceID, 450
TriggerOverlap, 446	DeviceID, 450  DeviceInstanceId, 450
TriggerSelector, 446	DeviceInstanceId, 450 DeviceIsUpdater, 450
TriggerSoftware, 446	DeviceIsopdater, 450  DeviceLinkSpeed, 450
TriggerSource, 446	DeviceLinkSpeed, 450  DeviceLocation, 451
	DeviceLocation, 451  DeviceModelName, 451
UserOutputSelector, 446 UserOutputValue, 447	DeviceMulticastMonitorMode, 451
•	DeviceMulticastMonitorMode, 431  DevicePortId, 451
UserOutputValueAll, 447 UserOutputValueAllMask, 447	,
•	DeviceSerialNumber, 451
UserSetFeetureFeeble 447	DeviceType, 451
UserSetLead 447	DeviceU3VProtocol, 451
UserSetSeve 447	DeviceUserID, 451
UserSetSalector, 447	DeviceVendorName, 452
UserSetSelector, 447	DeviceVersion, 452
V3_3Enable, 448	GUIXMLLocation, 454
WhiteClip, 448	GUIXMLPath, 455
WhiteClipSelector, 448	GenICamXMLLocation, 452
Width, 448	GenlCamXMLPath, 452
WidthMax, 448	GevCCP, 452
QuickSpin Access, 141	GevDeviceAutoForceIP, 452
quickSpinInit, 141	GevDeviceDiscoverMaximumPacketSize, 452
quickSpinInitEx, 141	GevDeviceForceGateway, 452
quickSpinTLDeviceInit, 142	GevDeviceForceIPAddress, 453
quickSpinTLInterfaceInit, 142	GevDeviceForceIP, 453
quickSpinTLStreamInit, 142	GevDeviceForceSubnetMask, 453
quickSpinTLSystemInit, 142	GevDeviceGateway, 453
quickSpinBooleanNode	GevDeviceIPAddress, 453
QuickSpinDefsC.h, 526	GevDeviceIsWrongSubnet, 453
quickSpinCommandNode	GevDeviceMACAddress, 453
QuickSpinDefsC.h, 526	GevDeviceMaximumPacketSize, 453
QuickSpinDefsC.h	GevDeviceMaximumRetryCount, 454
quickSpinBooleanNode, 526	GevDeviceModeIsBigEndian, 454
quickSpinCommandNode, 526	GevDevicePort, 454
quickSpinEnumerationNode, 526	GevDeviceReadAndWriteTimeout, 454
quickSpinFloatNode, 526	GevDeviceSubnetMask, 454
quickSpinIntegerNode, 527	GevVersionMajor, 454
quickSpinRegisterNode, 527	GevVersionMinor, 454
quickSpinStringNode, 527	quickSpinTLDeviceInit
quickSpinEnumerationNode	QuickSpin Access, 142
QuickSpinDefsC.h, 526	quickSpinTLInterface, 455
quickSpinFloatNode	ActionCommand, 456
QuickSpinDefsC.h, 526	DeviceAccessStatus, 456
quickSpinInit	DeviceCount, 456
QuickSpin Access, 141	DeviceID, 456
quickSpinInitEx	DeviceModelName, 456
QuickSpin Access, 141	DeviceSelector, 457
quickSpinIntegerNode	DeviceSerialNumber, 457
QuickSpinDefsC.h, 527	DeviceUnlock, 457
quickSpinRegisterNode	DeviceUpdateList, 457
QuickSpinDefsC.h, 527	DeviceVendorName, 457
quickSpinStringNode	FilterDriverStatus, 457
QuickSpinDefsC.h, 527	GevActionDeviceKey, 457
quickSpinTLDevice, 449	GevActionGroupKey, 457
DeviceAccessStatus, 449	GevActionGroupMask, 458
DeviceCurrentSpeed, 450	GevActionTime, 458
DeviceDisplayName, 450	GevDeviceAutoForceIP, 458

GevDeviceForceGateway, 458	StreamInputBufferCount, 466
GevDeviceForceIPAddress, 458	StreamIsGrabbing, 466
GevDeviceForceIP, 458	StreamLostFrameCount, 466
GevDeviceForceSubnetMask, 458	StreamMissedPacketCount, 466
GevDeviceGateway, 458	StreamMode, 466
GevDeviceIPAddress, 459	StreamOutputBufferCount, 466
GevDeviceMACAddress, 459	StreamPacketResendEnable, 467
GevDeviceSubnetMask, 459	StreamPacketResendMaxRequests, 467
GevInterfaceGateway, 459	StreamPacketResendReceivedPacketCount, 467
GevInterfaceGatewaySelector, 459	StreamPacketResendRequestCount, 467
GevInterfaceMACAddress, 459	StreamPacketResendRequestSuccessCount, 467
GevInterfaceMTU, 459	StreamPacketResendRequestedPacketCount, 467
GevInterfaceReceiveLinkSpeed, 459	StreamPacketResendTimeout, 467
GevInterfaceSubnetIPAddress, 460	StreamReceivedFrameCount, 467
GevInterfaceSubnetMask, 460	StreamReceivedPacketCount, 468
GevInterfaceSubnetSelector, 460	StreamStartedFrameCount, 468
GevInterfaceTransmitLinkSpeed, 460	StreamType, 468
HostAdapterDriverVersion, 460	quickSpinTLStreamInit
HostAdapterName, 460	QuickSpin Access, 142
•	quickSpinTLSystem, 468
HostAdapterVendor, 460	EnumerateGEVInterfaces, 469
Incompatible Device Count, 460	EnumerateGen2Cameras, 469
IncompatibleDeviceID, 461	Enumerate USBInterfaces, 469
IncompatibleDeviceModelName, 461	GenTLSFNCVersionMajor, 469
IncompatibleDeviceSelector, 461	GenTLSFNCVersionMinor, 469
IncompatibleDeviceVendorName, 461	GenTLSFNCVersionSubMinor, 469
IncompatibleGevDeviceIPAddress, 461	GenTLVersionMajor, 469
IncompatibleGevDeviceMACAddress, 461	GenTLVersionMinor, 469
IncompatibleGevDeviceSubnetMask, 461	GevInterfaceDefaultGateway, 470
InterfaceDisplayName, 461	•
InterfaceID, 462	GevInterfaceDefaultIPAddress, 470
InterfaceType, 462	GevInterfaceDefaultSubnetMask, 470
POEStatus, 462	GevInterfaceMACAddress, 470
quickSpinTLInterfaceInit	GevVersionMajor, 470
QuickSpin Access, 142	GevVersionMinor, 470
quickSpinTLStream, 462	InterfaceDisplayName, 470
GevFailedPacketCount, 463	InterfaceID, 470
GevMaximumNumberResendRequests, 463	InterfaceSelector, 471
GevPacketResendMode, 463	InterfaceUpdateList, 471
GevPacketResendTimeout, 463	TLDisplayName, 471
GevResendPacketCount, 463	TLFileName, 471
GevResendRequestCount, 464	TLID, 471
GevTotalPacketCount, 464	TLModelName, 471
StreamAnnounceBufferMinimum, 464	TLPath, 471
StreamAnnouncedBufferCount, 464	TLType, 471
StreamBlockTransferSize, 464	TLVendorName, 472
StreamBufferAlignment, 464	TLVersion, 472
StreamBufferCountManual, 464	quickSpinTLSystemInit
	QuickSpin Access, 142
StreamBufferCountMax, 464	
StreamBufferCountMode, 465	RegionDestination
StreamBufferCountResult, 465	quickSpin, 432
StreamBufferHandlingMode, 465	RegionMode
StreamCRCCheckEnable, 465	quickSpin, 432
StreamChunkCountMaximum, 465	RegionSelector
StreamDeliveredFrameCount, 465	quickSpin, 432
StreamDroppedFrameCount, 465	reserved
StreamFailedBufferCount, 465	spinAVIOptionEx, 473
StreamID, 466	spinBMPOption, 474
StreamIncompleteFrameCount, 466	spinH264Option, 481

spinJPEGOption, 482	quickSpin, 435
spinJPG2Option, 483	SensorShutterMode
spinMJPGOptionEx, 486	quickSpin, 435
spinPGMOption, 487	SensorTaps
spinPNGOption, 488	quickSpin, 436
spinPPMOption, 489	SensorWidth
spinTIFFOption, 489	quickSpin, 436
ReverseX	SequencerConfigurationMode
quickSpin, 433	quickSpin, 436
ReverseY	SequencerConfigurationValid
quickSpin, 433	quickSpin, 436
RgbTransformLightSource	SequencerFeatureEnable
quickSpin, 433	quickSpin, 436
SDININAKEDO ADI DEDDECATED	SequencerMode
SPINNAKERC_API_DEPRECATED	quickSpin, 436
SpinVideo Recording Access, 335	SequencerPathSelector
SPINNAKERC_API	quickSpin, 436
SpinnakerPlatformC.h, 549	SequencerSetActive
SPINNAKERC_STRUCT_DEPRECATED	quickSpin, 436
Spinnaker C Structures, 265	SequencerSetLoad
Saturation	quickSpin, 437
quickSpin, 433	SequencerSetNext
SaturationEnable	quickSpin, 437
quickSpin, 433	SequencerSetSave
Scan3dAxisMax	quickSpin, 437
quickSpin, 433	SequencerSetSelector
Scan3dAxisMin	•
quickSpin, 433	quickSpin, 437
Scan3dCoordinateOffset	SequencerSetStart
quickSpin, 433	quickSpin, 437
Scan3dCoordinateReferenceSelector	SequencerSetValid
quickSpin, 434	quickSpin, 437
Scan3dCoordinateReferenceValue	SequencerTriggerActivation
quickSpin, 434	quickSpin, 437
Scan3dCoordinateScale	SequencerTriggerSource
quickSpin, 434	quickSpin, 437
Scan3dCoordinateSelector	SerialPortBaudRate
quickSpin, 434	quickSpin, 438
Scan3dCoordinateSystem	SerialPortDataBits
quickSpin, 434	quickSpin, 438
Scan3dCoordinateSystemReference	SerialPortParity
quickSpin, 434	quickSpin, 438
Scan3dCoordinateTransformSelector	SerialPortSelector
quickSpin, 434	quickSpin, 438
Scan3dDistanceUnit	SerialPortSource
quickSpin, 434	quickSpin, 438
Scan3dInvalidDataFlag	SerialPortStopBits
quickSpin, 435	quickSpin, 438
Scan3dInvalidDataValue	SerialReceiveFramingErrorCount
quickSpin, 435	quickSpin, 438
Scan3dOutputMode	SerialReceiveParityErrorCount
quickSpin, 435	quickSpin, 438
Scan3dTransformValue	SerialReceiveQueueClear
quickSpin, 435	quickSpin, 439
SensorDescription	SerialReceiveQueueCurrentCharacterCount
•	
quickSpin, 435	quickSpin, 439
SensorDigitizationTaps	SerialReceiveQueueMaxCharacterCount
quickSpin, 435	quickSpin, 439
SensorHeight	SerialTransmitQueueCurrentCharacterCount

quickSpin, 439	Camera Enumerations, 59
SerialTransmitQueueMaxCharacterCount	spinBinningSelectorEnums
quickSpin, 439	Camera Enumerations, 60
Sharpening	spinBinningVerticalModeEnums
quickSpin, 439	Camera Enumerations, 60
SharpeningAuto	spinBlackLevelAutoBalanceEnums
quickSpin, 439	Camera Enumerations, 60
SharpeningEnable	spinBlackLevelAutoEnums
quickSpin, 439	Camera Enumerations, 61
SharpeningThreshold	spinBlackLevelSelectorEnums
quickSpin, 440	Camera Enumerations, 61
SoftwareSignalPulse	spinBooleanGetValue
quickSpin, 440	IBoolean Access, 311
SoftwareSignalSelector	spinBooleanSetValue
quickSpin, 440	IBoolean Access, 312
SourceCount	spinCachingMode
quickSpin, 440	Spinnaker C GenlCam Enumerations, 327
SourceSelector	spinCamera
quickSpin, 440	Spinnaker C Handles, 250
spinAVIOption	spinCameraBeginAcquisition
Spinnaker C Structures, 265	Camera Access, 183
spinAVIOptionEx, 472	spinCameraDeInit
frameRate, 472	Camera Access, 184
height, 473	spinCameraDiscoverMaxPacketSize
reserved, 473	Spinnaker C API, 144
width, 473	spinCameraEndAcquisition
spinAccessMode	Camera Access, 184
Spinnaker C GenlCam Enumerations, 326	spinCameraForceIP
spinAcquisitionModeEnums	SpinnakerC.h, 536
Camera Enumerations, 55	spinCameraGetAccessMode
spinAcquisitionStatusSelectorEnums	Camera Access, 184
Camera Enumerations, 55	spinCameraGetGuiXml
spinActionUnconditionalModeEnums	Camera Access, 185
Camera Enumerations, 56	spinCameraGetNextImage
spinAdcBitDepthEnums	Camera Access, 185
Camera Enumerations, 56	spinCameraGetNextImageEx
spinArrivalEventFunction	Camera Access, 186
Spinnaker C Function Signatures, 253	spinCameraGetNodeMap
spinAutoAlgorithmSelectorEnums	Camera Access, 186
Camera Enumerations, 56	spinCameraGetTLDeviceNodeMap
spinAutoExposureControlPriorityEnums	Camera Access, 187
Camera Enumerations, 57	spinCameraGetTLStreamNodeMap
spinAutoExposureLightingModeEnums	Camera Access, 187
Camera Enumerations, 57	spinCameraGetUniqueID
spinAutoExposureMeteringModeEnums	Camera Access, 188
Camera Enumerations, 58	spinCameralnit
spinAutoExposureTargetGreyValueAutoEnums	Camera Access, 188
Camera Enumerations, 58	spinCameralsInitialized
spinBMPOption, 473	Camera Access, 189
indexedColor_8bit, 474	spinCameralsStreaming
reserved, 474	Camera Access, 189
spinBalanceRatioSelectorEnums	spinCameralsValid
Camera Enumerations, 58	Camera Access, 190
spinBalanceWhiteAutoEnums	spinCameraList
Camera Enumerations, 59	Spinnaker C Handles, 250
spinBalanceWhiteAutoProfileEnums	spinCameraListAppend
Camera Enumerations, 59	CameraList Access, 168
spinBinningHorizontalModeEnums	spinCameraListClear

Cameral ist Access 160	m_lineStatusAll, 477
CameraList Access, 169 spinCameraListCreateEmpty	m_offsetX, 477
CameraList Access, 169	m_offsetY, 477
spinCameraListDestroy	m_partSelector, 477
CameraList Access, 170	m_pixelDynamicRangeMax, 478
spinCameraListGet	m_pixelDynamicRangeMin, 478
CameraList Access, 170	
	m_scan3dAxisMax, 478
spinCameraListGetBySerial CameraList Access, 171	m_scan3dAxisMin, 478 m_scan3dCoordinateOffset, 478
spinCameraListGetSize	m_scan3dCoordinateCriset, 478 m_scan3dCoordinateReferenceValue, 478
CameraList Access, 171 spinCameraListRemove	m_scan3dCoordinateScale, 478 m_scan3dInvalidDataValue, 478
CameraList Access, 172	
	m_scan3dTransformValue, 479
spinCameraListRemoveBySerial	m_scanLineSelector, 479
CameraList Access, 172 spinCameraReadPort	m_sequencerSetActive, 479
	m_serialDataLength, 479
Camera Access, 190	m_streamChannelID, 479
spinCameraRegisterDeviceEventHandler	m_timerValue, 479
Camera Access, 190	m_timestamp, 479
spinCameraRegisterDeviceEventHandlerEx	m_timestampLatchValue, 479
Camera Access, 191	m_transferBlockID, 480
spinCameraRegisterImageEventHandler	m_transferQueueCurrentBlockCount, 480
Camera Access, 191	m_width, 480
spinCameraRelease	spinChunkEncoderSelectorEnums
Camera Access, 192	Camera Enumerations, 62
spinCameraUnregisterDeviceEventHandler	spinChunkEncoderStatusEnums
Camera Access, 192	Camera Enumerations, 62
spinCameraUnregisterImageEventHandler	spinChunkExposureTimeSelectorEnums
Camera Access, 193	Camera Enumerations, 63
spinCameraWritePort	spinChunkGainSelectorEnums
Camera Access, 193	Camera Enumerations, 63
spinCategoryGetFeatureByIndex	spinChunkImageComponentEnums
ICategory Access, 315	Camera Enumerations, 63
spinCategoryGetNumFeatures	spinChunkPixelFormatEnums
ICategory Access, 316	Camera Enumerations, 64
spinCategoryReleaseNode	spinChunkRegionIDEnums
Spinnaker C GenlCam API, 268	Camera Enumerations, 64
spinChunkBlackLevelSelectorEnums	spinChunkScan3dCoordinateReferenceSelectorEnums
Camera Enumerations, 61	Camera Enumerations, 65
spinChunkCounterSelectorEnums	spinChunkScan3dCoordinateSelectorEnums
Camera Enumerations, 62	Camera Enumerations, 65
spinChunkData, 474	spinChunkScan3dCoordinateSystemEnums
m_blackLevel, 475	Camera Enumerations, 65
m_cRC, 476	spinChunkScan3dCoordinateSystemReferenceEnums
m_compressionMode, 475	Camera Enumerations, 66
m_compressionRatio, 475	spinChunkScan3dCoordinateTransformSelectorEnums
m_counterValue, 475	Camera Enumerations, 66
m_encoderValue, 476	spinChunkScan3dDistanceUnitEnums
m_exposureEndLineStatusAll, 476	Camera Enumerations, 66
m_exposureTime, 476	spinChunkScan3dOutputModeEnums
m_frameID, 476	Camera Enumerations, 67
m_gain, 476	spinChunkSelectorEnums
m_height, 476	Camera Enumerations, 67
m_image, 476	spinChunkSourceIDEnums
m_inferenceConfidence, 477	Camera Enumerations, 68
m_inferenceFrameId, 477	spinChunkTimerSelectorEnums
m_inferenceResult, 477	Camera Enumerations, 68
m_linePitch, 477	spinChunkTransferStreamIDEnums

Camera Enumerations, 69	Event Access, 224
spinClConfigurationEnums	spinDeviceArrivalEventHandlerDestroy
Camera Enumerations, 69	Event Access, 225
spinClTimeSlotsCountEnums	spinDeviceCharacterSetEnums
Camera Enumerations, 69	Camera Enumerations, 80
spinColorProcessingAlgorithm	spinDeviceClockSelectorEnums
Spinnaker C Enumerations, 257	Camera Enumerations, 80
spinColorTransformationSelectorEnums	spinDeviceConnectionStatusEnums
Camera Enumerations, 70	Camera Enumerations, 80
spinColorTransformationValueSelectorEnums	spinDeviceEventData
Camera Enumerations, 70	Spinnaker C Handles, 250
spinCommandExecute	spinDeviceEventFunction
ICommand Access, 313	Spinnaker C Function Signatures, 253
spinCommandIsDone	spinDeviceEventGetId
ICommand Access, 314	Device Event Data Access, 245
spinCompressionMethod	spinDeviceEventGetName
Spinnaker C Structures, 264	Device Event Data Access, 246
spinCompressionSaturationPriorityEnums	spinDeviceEventGetPayloadData
Camera Enumerations, 71	Device Event Data Access, 246
spinCounterEventActivationEnums	spinDeviceEventGetPayloadDataSize
Camera Enumerations, 71	Device Event Data Access, 247
spinCounterEventSourceEnums	spinDeviceEventHandler
Camera Enumerations, 71	Spinnaker C Handles, 250
spinCounterResetActivationEnums	spinDeviceEventHandlerCreate
Camera Enumerations, 72	Event Access, 225
spinCounterResetSourceEnums	spinDeviceEventHandlerDestroy
Camera Enumerations, 72	Event Access, 226
spinCounterSelectorEnums	spinDeviceIndicatorModeEnums
Camera Enumerations, 73	Camera Enumerations, 81
spinCounterStatusEnums	spinDeviceLinkHeartbeatModeEnums
Camera Enumerations, 73	Camera Enumerations, 81
spinCounterTriggerActivationEnums	spinDeviceLinkThroughputLimitModeEnums
Camera Enumerations, 74	Camera Enumerations, 81
spinCounterTriggerSourceEnums	spinDevicePowerSupplySelectorEnums
Camera Enumerations, 74	Camera Enumerations, 81
spinCxpConnectionTestModeEnums	spinDeviceRegistersEndiannessEnums
Camera Enumerations, 75	Camera Enumerations, 82
spinCxpLinkConfigurationEnums	spinDeviceRemovalEventHandler
Camera Enumerations, 75	Spinnaker C Handles, 251
spinCxpLinkConfigurationPreferredEnums	spinDevice Removal Event Handler Create
Camera Enumerations, 76	Event Access, 226
spinCxpLinkConfigurationStatusEnums	spinDeviceRemovalEventHandlerDestroy
Camera Enumerations, 77	Event Access, 227
spinCxpPoCxpStatusEnums	spinDeviceScanTypeEnums
Camera Enumerations, 78	Camera Enumerations, 82
spinDecimationHorizontalModeEnums	spinDeviceSerialPortBaudRateEnums
Camera Enumerations, 78	Camera Enumerations, 82
spinDecimationSelectorEnums	spinDeviceSerialPortSelectorEnums
Camera Enumerations, 78	Camera Enumerations, 83
spinDecimationVerticalModeEnums	spinDeviceStreamChannelEndiannessEnums
Camera Enumerations, 79	Camera Enumerations, 83
spinDefectCorrectionModeEnums	spinDeviceStreamChannelTypeEnums
Camera Enumerations, 79	Camera Enumerations, 83
spinDeinterlacingEnums	spinDeviceTLTypeEnums
Camera Enumerations, 79	Camera Enumerations, 85
spinDeviceArrivalEventHandler	spinDeviceTapGeometryEnums
Spinnaker C Handles, 250	Camera Enumerations, 84
spinDeviceArrivalEventHandlerCreate	spinDeviceTemperatureSelectorEnums
	•

Camera Enumerations, 85	Error Handling, 148
spinDeviceTypeEnums	spinErrorGetLastMessage
Camera Enumerations, 86	Error Handling, 149
spinDisplayNotation	spinEventNotificationEnums
Spinnaker C GenlCam Enumerations, 327	Camera Enumerations, 90
spinEncoderModeEnums	spinEventSelectorEnums
Camera Enumerations, 86	Camera Enumerations, 90
spinEncoderOutputModeEnums	spinExposureActiveModeEnums
Camera Enumerations, 86	Camera Enumerations, 90
spinEncoderResetActivationEnums	spinExposureAutoEnums
Camera Enumerations, 87	Camera Enumerations, 90
spinEncoderResetSourceEnums	spinExposureModeEnums
Camera Enumerations, 87	Camera Enumerations, 91
spinEncoderSelectorEnums	spinExposureTimeModeEnums
Camera Enumerations, 88	Camera Enumerations, 91
spinEncoderSourceAEnums	spinExposureTimeSelectorEnums
Camera Enumerations, 89	Camera Enumerations, 92
spinEncoderSourceBEnums	spinFileOpenModeEnums
Camera Enumerations, 89	Camera Enumerations, 92
spinEncoderStatusEnums	spinFileOperationSelectorEnums
Camera Enumerations, 89	Camera Enumerations, 92
spinEndianess	spinFileOperationStatusEnums
Spinnaker C GenlCam Enumerations, 327	Camera Enumerations, 93
spinEnumerationEntryGetEnumValue	spinFileSelectorEnums
IEnumEntry Access, 308	Camera Enumerations, 93
spinEnumerationEntryGetIntValue	spinFloatGetMax
	•
IEnumEntry Access, 309	IFloat Access, 298
spinEnumerationEntryGetSymbolic	spinFloatGetMin
IEnumEntry Access, 309	IFloat Access, 299
spinEnumerationGetCurrentEntry	spinFloatGetRepresentation
IEnumeration Access, 303	IFloat Access, 299
spinEnumerationGetEntryByIndex	spinFloatGetUnit
IEnumeration Access, 304	IFloat Access, 300
spinEnumerationGetEntryByName	spinFloatGetValue
IEnumeration Access, 304	IFloat Access, 300
spinEnumerationGetNumEntries	spinFloatGetValueEx
IEnumeration Access, 305	IFloat Access, 301
spinEnumerationReleaseNode	spinFloatSetValue
IEnumeration Access, 305	IFloat Access, 301
spinEnumerationSetEnumValue	spinFloatSetValueEx
IEnumeration Access, 306	IFloat Access, 302
spinEnumerationSetIntValue	spinGainAutoBalanceEnums
IEnumeration Access, 306	Camera Enumerations, 93
spinError	spinGainAutoEnums
Spinnaker C Enumerations, 258	Camera Enumerations, 95
spinErrorGetLast	spinGainSelectorEnums
•	•
Error Handling, 145	Camera Enumerations, 95
spinErrorGetLastBuildDate	spinGevCCPEnums
Error Handling, 146	Camera Enumerations, 95
spinErrorGetLastBuildTime	spinGevCurrentPhysicalLinkConfigurationEnums
Error Handling, 146	Camera Enumerations, 96
spinErrorGetLastFileName	spinGevGVCPExtendedStatusCodesSelectorEnums
Error Handling, 147	Camera Enumerations, 96
spinErrorGetLastFullMessage	spinGevGVSPExtendedIDModeEnums
Error Handling, 147	Camera Enumerations, 96
spinErrorGetLastFunctionName	spinGevIEEE1588ClockAccuracyEnums
Error Handling, 148	Camera Enumerations, 97
spinErrorGetLastLineNumber	spinGevIEEE1588ModeEnums

Camera Enumerations, 97	Spinnaker C Enumerations, 259
spinGevIEEE1588StatusEnums	spinImageGetBitsPerPixel
•	
Camera Enumerations, 97	Image Access, 201
spinGevIPConfigurationStatusEnums	spinImageGetBufferSize
Camera Enumerations, 98	Image Access, 202
spinGevPhysicalLinkConfigurationEnums	spinImageGetChunkLayoutID
Camera Enumerations, 98	Image Access, 202
spinGevSupportedOptionSelectorEnums	spinImageGetColorProcessing
Camera Enumerations, 98	Image Access, 203
spinH264Option, 480	spinImageGetData
bitrate, 481	Image Access, 203
frameRate, 481	spinImageGetDefaultColorProcessing
height, 481	Image Access, 204
reserved, 481	spinImageGetFrameID
width, 481	Image Access, 204
spinImage	spinImageGetHeight
Spinnaker C Handles, 251	Image Access, 205
spinImageCalculateStatistics	spinImageGetID
Image Access, 196	Image Access, 205
spinImageCheckCRC	spinImageGetNumDecompressionThreads
Image Access, 197	Image Access, 206
spinImageChunkDataGetFloatValue	spinImageGetOffsetX
Chunk data access, 248	Image Access, 206
	,
spinImageChunkDataGetIntValue	spinImageGetOffsetY
Chunk data access, 248	Image Access, 207
spinImageComponentSelectorEnums	spinImageGetPaddingX
Camera Enumerations, 99	Image Access, 207
spinImageCompressionJPEGFormatOptionEnums	spinImageGetPaddingY
Camera Enumerations, 100	Image Access, 208
spinImageCompressionModeEnums	spinImageGetPayloadType
Camera Enumerations, 100	Image Access, 208
spinImageCompressionRateOptionEnums	spinImageGetPixelFormat
Camera Enumerations, 101	Image Access, 209
spinImageConvert	spinImageGetPixelFormatName
Image Access, 197	Image Access, 209
spinImageConvertEx	spinImageGetPrivateData
Image Access, 198	Image Access, 210
spinImageCreate	spinImageGetSize
Image Access, 198	Image Access, 210
spinImageCreateEmpty	spinImageGetStatus
Image Access, 199	Image Access, 211
spinImageCreateEx	spinImageGetStatusDescription
Image Access, 199	Image Access, 211
spinImageCreateEx2	spinImageGetStride
Image Access, 200	Image Access, 212
spinImageDeepCopy	spinImageGetTLPayloadType
Image Access, 201	Image Access, 213
_	
spinImageDestroy	spinImageGetTLPixelFormat
Image Access, 201	Image Access, 213
spinImageEventFunction	spinImageGetTLPixelFormatNamespace
Spinnaker C Function Signatures, 253	Image Access, 214
spinImageEventHandler	spinImageGetTimeStamp
Spinnaker C Handles, 251	Image Access, 212
spinImageEventHandlerCreate	spinImageGetValidPayloadSize
Event Access, 227	Image Access, 214
spinImageEventHandlerDestroy	spinImageGetWidth
Event Access, 228	Image Access, 215
spinImageFileFormat	spinImageHasCRC

Image Access, 215	Image Statistics Access 237
spinImageIsIncomplete	ImageStatistics Access, 237 spinImageStatisticsGetRange
Image Access, 216	ImageStatistics Access, 238
-	<del>-</del>
spinImageRelease	spinImageStatisticsSetChannelStatus
Image Access, 216	ImageStatistics Access, 238
spinImageReset	spinImageStatus
Image Access, 216	Spinnaker C Enumerations, 260
spinImageResetEx	spinIncMode
Image Access, 217	Spinnaker C GenlCam Enumerations, 328
spinImageSave	spinInputDirection
Image Access, 218	Spinnaker C GenlCam Enumerations, 328
spinImageSaveBmp	spinIntegerGetInc
Image Access, 218	IInteger Access, 293
spinImageSaveFromExt	spinIntegerGetMax
Image Access, 219	IInteger Access, 294
spinImageSaveJpeg	spinIntegerGetMin
Image Access, 219	IInteger Access, 294
spinImageSaveJpg2	spinIntegerGetRepresentation
Image Access, 220	IInteger Access, 295
spinImageSavePgm	spinIntegerGetValue
Image Access, 220	IInteger Access, 295
spinImageSavePng	spinIntegerGetValueEx
Image Access, 221	IInteger Access, 296
spinImageSavePpm	spinIntegerSetValue
Image Access, 221	IInteger Access, 296
spinImageSaveTiff	spinIntegerSetValueEx
Image Access, 222	IInteger Access, 297
spinImageSetDefaultColorProcessing	spinInterface
Image Access, 222	Spinnaker C Handles, 251
spinImageSetNumDecompressionThreads	spinInterfaceEventHandler
Image Access, 223	Spinnaker C Handles, 251
spinImageStatistics	spinInterfaceEventHandlerCreate
Spinnaker C Handles, 251	Event Access, 228
•	
spinImageStatisticsCreate	spinInterfaceEventHandlerDestroy
ImageStatistics Access, 232	Event Access, 229
spinImageStatisticsDestroy	spinInterfaceGetCameras
ImageStatistics Access, 232	Interface Access, 175
spinImageStatisticsDisableAll	spinInterfaceGetCamerasEx
ImageStatistics Access, 232	Interface Access, 175
spinImageStatisticsEnableAll	spinInterfaceGetTLNodeMap
ImageStatistics Access, 233	Interface Access, 176
spinImageStatisticsEnableGreyOnly	spinInterfaceIsInUse
ImageStatistics Access, 233	Interface Access, 176
spinImageStatisticsEnableHslOnly	spinInterfaceList
ImageStatistics Access, 234	Spinnaker C Handles, 252
spinImageStatisticsEnableRgbOnly	spinInterfaceListClear
ImageStatistics Access, 234	InterfaceList Access, 164
spinImageStatisticsGetAll	spinInterfaceListCreateEmpty
ImageStatistics Access, 235	InterfaceList Access, 165
spinImageStatisticsGetChannelStatus	spinInterfaceListDestroy
ImageStatistics Access, 235	InterfaceList Access, 165
spinImageStatisticsGetHistogram	spinInterfaceListGet
ImageStatistics Access, 236	InterfaceList Access, 166
spinImageStatisticsGetMean	spinInterfaceListGetSize
ImageStatistics Access, 236	InterfaceList Access, 166
spinImageStatisticsGetNumPixeIValues	spinInterfaceRegisterDeviceArrivalEventHandler
ImageStatistics Access, 237	Interface Access, 177
spinImageStatisticsGetPixeIValueRange	spinInterfaceRegisterDeviceRemovalEventHandler
	,

Interface Access, 177	Spinnaker C Handles, 252
spinInterfaceRegisterInterfaceEventHandler	spinLogEventFunction
Interface Access, 178	Spinnaker C Function Signatures, 254
spinInterfaceRelease	spinLogEventHandler
Interface Access, 178	Spinnaker C Handles, 252
	•
spinInterfaceSendActionCommand	spinLogEventHandlerCreate
Interface Access, 179	Event Access, 229
spinInterfaceType	spinLogEventHandlerDestroy
Spinnaker C GenlCam Enumerations, 328	Event Access, 230
spinInterfaceUnregisterDeviceArrivalEventHandler	spinLogicBlockLUTInputActivationEnums
Interface Access, 179	Camera Enumerations, 103
spinInterfaceUnregisterDeviceRemovalEventHandler	spinLogicBlockLUTInputSelectorEnums
Interface Access, 180	Camera Enumerations, 103
spinInterfaceUnregisterInterfaceEventHandler	spinLogicBlockLUTInputSourceEnums
Interface Access, 180	Camera Enumerations, 104
spinInterfaceUpdateCameras	spinLogicBlockLUTSelectorEnums
Interface Access, 181	Camera Enumerations, 104
spinJPEGOption, 482	spinLogicBlockSelectorEnums
progressive, 482	Camera Enumerations, 105
quality, 482	spinMJPGOption
reserved, 482	Spinnaker C Structures, 266
spinJPG2Option, 483	spinMJPGOptionEx, 485
	·
quality, 483	frameRate, 485
reserved, 483	height, 485
spinLUTSelectorEnums	quality, 486
Camera Enumerations, 105	reserved, 486
spinLibraryVersion, 484	width, 486
build, 484	spinNameSpace
major, 484	Spinnaker C GenlCam Enumerations, 330
minor, 484	spinNodeCallbackFunction
type, 484	Spinnaker C GenlCam Handles, 322
spinLineFormatEnums	spinNodeCallbackHandle
Camera Enumerations, 101	Spinnaker C GenlCam Handles, 322
spinLineInputFilterSelectorEnums	spinNodeDeregisterCallback
Camera Enumerations, 101	Node Access, 275
spinLineModeEnums	spinNodeFromString
Camera Enumerations, 102	IValue Access, 286
spinLineSelectorEnums	spinNodeFromStringEx
Camera Enumerations, 102	IValue Access, 287
spinLineSourceEnums	spinNodeGetAccessMode
Camera Enumerations, 102	Node Access, 275
spinLinkType	spinNodeGetCachingMode
Spinnaker C GenlCam Enumerations, 329	Node Access, 276
·	spinNodeGetDescription
spinLogDataGetCategoryName	·
Logging Event Data Access, 240	Node Access, 276
spinLogDataGetLogMessage	spinNodeGetDisplayName
Logging Event Data Access, 241	Node Access, 277
spinLogDataGetNDC	spinNodeGetImposedAccessMode
Logging Event Data Access, 241	Node Access, 278
spinLogDataGetPriority	spinNodeGetImposedVisibility
Logging Event Data Access, 242	Node Access, 278
spinLogDataGetPriorityName	spinNodeGetName
Logging Event Data Access, 242	Node Access, 278
spinLogDataGetThreadName	spinNodeGetNameSpace
Logging Event Data Access, 243	Node Access, 279
spinLogDataGetTimestamp	spinNodeGetPollingTime
Logging Event Data Access, 243	Node Access, 279
spinLogEventData	spinNodeGetToolTip

Node Access, 280	Spinnaker C Enumerations, 261
spinNodeGetType	spinPixelSizeEnums
Node Access, 280	Camera Enumerations, 117
spinNodeGetVisibility	spinRegionDestinationEnums
Node Access, 281	Camera Enumerations, 118
spinNodeHandle	spinRegionModeEnums
Spinnaker C GenlCam Handles, 322	Camera Enumerations, 118
spinNodeInvalidateNode	spinRegionSelectorEnums
Node Access, 281	Camera Enumerations, 118
spinNodelsAvailable	spinRegisterGet
Node Access, 282	IRegister Access, 317
spinNodelsEqual	spinRegisterGetAddress
Node Access, 282	IRegister Access, 318
spinNodelsImplemented	spinRegisterGetEx
·	•
Node Access, 283	IRegister Access, 318
spinNodelsReadable	spinRegisterGetLength
Node Access, 283	IRegister Access, 319
spinNodelsWritable	spinRegisterSet
Node Access, 284	IRegister Access, 320
spinNodeMapGetNode	spinRegisterSetEx
Node Map Access, 270	IRegister Access, 320
spinNodeMapGetNodeByIndex	spinRegisterSetReference
Node Map Access, 271	IRegister Access, 321
spinNodeMapGetNumNodes	spinRemovalEventFunction
Node Map Access, 271	Spinnaker C Function Signatures, 254
spinNodeMapHandle	spinRepresentation
Spinnaker C GenlCam Handles, 323	Spinnaker C GenlCam Enumerations, 331
spinNodeMapPoll	spinRgbTransformLightSourceEnums
Node Map Access, 272	Camera Enumerations, 118
spinNodeMapReleaseNode	spinScan3dCoordinateReferenceSelectorEnums
Node Map Access, 272	Camera Enumerations, 119
spinNodeRegisterCallback	spinScan3dCoordinateSelectorEnums
Node Access, 284	Camera Enumerations, 119
spinNodeToString	spinScan3dCoordinateSystemEnums
IValue Access, 287	Camera Enumerations, 120
spinNodeToStringEx	spinScan3dCoordinateSystemReferenceEnums
IValue Access, 288	Camera Enumerations, 120
spinNodeType	spinScan3dCoordinateTransformSelectorEnums
Spinnaker C GenlCam Enumerations, 330	Camera Enumerations, 120
spinPGMOption, 486	spinScan3dDistanceUnitEnums
binaryFile, 487	Camera Enumerations, 121
reserved, 487	spinScan3dOutputModeEnums
spinPNGOption, 487	Camera Enumerations, 121
compressionLevel, 487	spinSensorDigitizationTapsEnums
interlaced, 488	Camera Enumerations, 122
reserved, 488	spinSensorShutterModeEnums
spinPPMOption, 488	Camera Enumerations, 122
binaryFile, 488	spinSensorTapsEnums
reserved, 489	Camera Enumerations, 123
spinPayloadTypeInfoIDs	spinSequencerConfigurationModeEnums
Spinnaker C Enumerations, 261	Camera Enumerations, 123
spinPixelColorFilterEnums	spinSequencerConfigurationValidEnums
Camera Enumerations, 105	Camera Enumerations, 124
spinPixelFormatEnums	spinSequencerModeEnums
Camera Enumerations, 106	Camera Enumerations, 124
spinPixelFormatInfoSelectorEnums	
	spinSequencerSetValidEnums
Camera Enumerations, 111	spinSequencerSetValidEnums Camera Enumerations, 124

Camera Enumerations, 124	System Access, 157
spinSequencerTriggerSourceEnums	spinSystemRegisterLogEventHandler
Camera Enumerations, 125	System Access, 157
spinSerialPortBaudRateEnums	spinSystemReleaseInstance
Camera Enumerations, 125	System Access, 158
spinSerialPortParityEnums	spinSystemSendActionCommand
Camera Enumerations, 126	System Access, 158
spinSerialPortSelectorEnums	spinSystemSetLoggingLevel
Camera Enumerations, 126	System Access, 159
spinSerialPortSourceEnums	spinSystemUnregisterAllLogEventHandlers
Camera Enumerations, 126	System Access, 160
spinSerialPortStopBitsEnums	spinSystemUnregisterDeviceArrivalEventHandler
Camera Enumerations, 127	System Access, 160
spinSign	spinSystemUnregisterDeviceRemovalEventHandler
Spinnaker C GenlCam Enumerations, 331	System Access, 160
spinSlope	spinSystemUnregisterInterfaceEventHandler
Spinnaker C GenlCam Enumerations, 331	System Access, 161
spinSoftwareSignalSelectorEnums	spinSystemUnregisterLogEventHandler
Camera Enumerations, 127	System Access, 161
spinSourceSelectorEnums	•
·	spinSystemUpdateCameras
Camera Enumerations, 127	System Access, 162
spinStandardNameSpace	spinSystemUpdateCamerasEx
Spinnaker C GenlCam Enumerations, 332	System Access, 162
spinStatisticsChannel	spinTIFFOption, 489
Spinnaker C Enumerations, 262	compression, 489
spinStringGetMaxLength	reserved, 489
String Access, 289	spinTLDeviceAccessStatusEnums
spinStringGetValue	Transport Layer Enumerations, 339
String Access, 290	spinTLDeviceCurrentSpeedEnums
spinStringGetValueEx	Transport Layer Enumerations, 340
String Access, 290	spinTLDeviceEndianessMechanismEnums
spinStringSetValue	Transport Layer Enumerations, 340
String Access, 291	spinTLDeviceTypeEnums
spinStringSetValueEx	Transport Layer Enumerations, 341
String Access, 291	spinTLFilterDriverStatusEnums
spinSystem	Transport Layer Enumerations, 341
Spinnaker C Handles, 252	spinTLGUIXMLLocationEnums
spinSystemGetCameras	Transport Layer Enumerations, 342
System Access, 151	spinTLGenICamXMLLocationEnums
spinSystemGetCamerasEx	Transport Layer Enumerations, 341
System Access, 152	spinTLGevCCPEnums
spinSystemGetInstance	Transport Layer Enumerations, 342
System Access, 152	spinTLInterfaceTypeEnums
spinSystemGetInterfaces	Transport Layer Enumerations, 342
System Access, 154	spinTLPOEStatusEnums
spinSystemGetLibraryVersion	Transport Layer Enumerations, 343
System Access, 154	spinTLStreamBufferCountModeEnums
spinSystemGetLoggingLevel	Transport Layer Enumerations, 343
System Access, 154	spinTLStreamBufferHandlingModeEnums
spinSystemGetTLNodeMap	Transport Layer Enumerations, 343
System Access, 155	spinTLStreamModeEnums
spinSystemIsInUse	Transport Layer Enumerations, 344
System Access, 155	spinTLStreamTypeEnums
spinSystemRegisterDeviceArrivalEventHandler	Transport Layer Enumerations, 344
System Access, 156	spinTLTLTypeEnums
spinSystemRegisterDeviceRemovalEventHandler	Transport Layer Enumerations, 345
System Access, 156	spinTestPatternEnums
spinSystemRegisterInterfaceEventHandler	Camera Enumerations, 127
spinoysterni tegisterintenace=ventrandiei	Damera Liumeralions, 12/

spinTestPatternGeneratorSelectorEnums	spinVideoClose
Camera Enumerations, 128	SpinVideo Recording Access, 336
spinTimerSelectorEnums	spinVideoOpenH264
Camera Enumerations, 128	SpinVideo Recording Access, 336
spinTimerStatusEnums	spinVideoOpenMJPGEx
Camera Enumerations, 128	SpinVideo Recording Access, 336
spinTimerTriggerActivationEnums	spinVideoOpenUncompressedEx
Camera Enumerations, 129	SpinVideo Recording Access, 336
spinTimerTriggerSourceEnums	spinVideoSetMaximumFileSize
Camera Enumerations, 129	SpinVideo Recording Access, 336
spinTransferComponentSelectorEnums	spinVisibility
Camera Enumerations, 131	Spinnaker C GenlCam Enumerations, 332
spinTransferControlModeEnums	spinWhiteClipSelectorEnums
Camera Enumerations, 131	Camera Enumerations, 138
spinTransferOperationModeEnums	spinXMLValidation
Camera Enumerations, 131	Spinnaker C GenlCam Enumerations, 332
spinTransferQueueModeEnums	spinYesNo
Camera Enumerations, 132	Spinnaker C GenlCam Enumerations, 334
spinTransferSelectorEnums	Spinnaker C API, 143
Camera Enumerations, 132	spinCameraDiscoverMaxPacketSize, 144
spinTransferStatusSelectorEnums	Spinnaker C Definitions, 21
Camera Enumerations, 132	bool8_t, 22
spinTransferTriggerActivationEnums	False, 22
Camera Enumerations, 133	True, 22
spinTransferTriggerModeEnums	Spinnaker C Enumerations, 255
Camera Enumerations, 133	spinColorProcessingAlgorithm, 257
spinTransferTriggerSelectorEnums	spinError, 258
Camera Enumerations, 133	spinImageFileFormat, 259
spinTransferTriggerSourceEnums	spinImageStatus, 260
Camera Enumerations, 134	spinPayloadTypeInfoIDs, 261
spinTriggerActivationEnums	spinPixelFormatNamespaceID, 261
Camera Enumerations, 135	spinStatisticsChannel, 262
spinTriggerModeEnums	spinnakerLogLevel, 260
Camera Enumerations, 135	•
spinTriggerOverlapEnums	Spinnaker C Function Signatures, 253 spinArrivalEventFunction, 253
Camera Enumerations, 136	spinDeviceEventFunction, 253
	•
spinTriggerSelectorEnums	spinImageEventFunction, 253
Camera Enumerations, 136	spinLogEventFunction, 254
spinTriggerSourceEnums	spinRemovalEventFunction, 254
Camera Enumerations, 136	Spinnaker C GenlCam API, 267
spinUserOutputSelectorEnums	spinCategoryReleaseNode, 268
Camera Enumerations, 137	Spinnaker C GenlCam Enumerations, 324
spinUserSetDefaultEnums	spinAccessMode, 326
Camera Enumerations, 137	spinCachingMode, 327
spinUserSetSelectorEnums	spinDisplayNotation, 327
Camera Enumerations, 138	spinEndianess, 327
spinVideo	spinIncMode, 328
Spinnaker C Handles, 252	spinInputDirection, 328
SpinVideo Recording Access, 335	spinInterfaceType, 328
SPINNAKERC_API_DEPRECATED, 335	spinLinkType, 329
spinVideoAppend, 336	spinNameSpace, 330
spinVideoClose, 336	spinNodeType, 330
spinVideoOpenH264, 336	spinRepresentation, 331
spinVideoOpenMJPGEx, 336	spinSign, 331
spinVideoOpenUncompressedEx, 336	spinSlope, 331
spinVideoSetMaximumFileSize, 336	spinStandardNameSpace, 332
spinVideoAppend	spinVisibility, 332
SpinVideo Recording Access, 336	spinXMLValidation, 332

spinYesNo, 334	StreamChunkCountMaximum
Spinnaker C GenlCam Handles, 322	quickSpinTLStream, 465
spinNodeCallbackFunction, 322	StreamDeliveredFrameCount
spinNodeCallbackHandle, 322	quickSpinTLStream, 465
spinNodeHandle, 322	StreamDroppedFrameCount
spinNodeMapHandle, 323	quickSpinTLStream, 465
Spinnaker C Handles, 249	StreamFailedBufferCount
spinCamera, 250	quickSpinTLStream, 465
spinCameraList, 250	StreamID
spinDeviceArrivalEventHandler, 250	quickSpinTLStream, 466
spinDeviceEventData, 250	StreamIncompleteFrameCount
spinDeviceEventHandler, 250	quickSpinTLStream, 466
spinDeviceRemovalEventHandler, 251	StreamInputBufferCount
spinImage, 251	quickSpinTLStream, 466
spinImage, 231 spinImageEventHandler, 251	StreamIsGrabbing
spinImageStatistics, 251	quickSpinTLStream, 466
spinIntageStatistics, 251 spinInterface, 251	StreamLostFrameCount
•	
spinInterfaceEventHandler, 251	quickSpinTLStream, 466
spinInterfaceList, 252	StreamMissedPacketCount
spinLogEventData, 252	quickSpinTLStream, 466
spinLogEventHandler, 252	StreamMode
spinSystem, 252	quickSpinTLStream, 466
spinVideo, 252	StreamOutputBufferCount
Spinnaker C QuickSpin API, 140	quickSpinTLStream, 466
Spinnaker C Structures, 263	StreamPacketResendEnable
actionCommandStatus, 264	quickSpinTLStream, 467
SPINNAKERC_STRUCT_DEPRECATED, 265	StreamPacketResendMaxRequests
spinAVIOption, 265	quickSpinTLStream, 467
spinCompressionMethod, 264	StreamPacketResendReceivedPacketCount
spinMJPGOption, 266	quickSpinTLStream, 467
SpinnakerC.h	StreamPacketResendRequestCount
spinCameraForceIP, 536	quickSpinTLStream, 467
spinnakerLogLevel	StreamPacketResendRequestSuccessCount
Spinnaker C Enumerations, 260	quickSpinTLStream, 467
SpinnakerPlatformC.h	StreamPacketResendRequestedPacketCount
SPINNAKERC_API, 549	quickSpinTLStream, 467
Status	StreamPacketResendTimeout
actionCommandResult, 351	quickSpinTLStream, 467
StreamAnnounceBufferMinimum	StreamReceivedFrameCount
quickSpinTLStream, 464	quickSpinTLStream, 467
StreamAnnouncedBufferCount	StreamReceivedPacketCount
quickSpinTLStream, 464	quickSpinTLStream, 468
StreamBlockTransferSize	StreamStartedFrameCount
quickSpinTLStream, 464	quickSpinTLStream, 468
StreamBufferAlignment	StreamType
quickSpinTLStream, 464	quickSpinTLStream, 468
StreamBufferCountManual	String Access, 289
quickSpinTLStream, 464	spinStringGetMaxLength, 289
StreamBufferCountMax	spinStringGetValue, 290
quickSpinTLStream, 464	spinStringGetValueEx, 290
StreamBufferCountMode	spinStringSetValue, 291
quickSpinTLStream, 465	spinStringSetValueEx, 291
StreamBufferCountResult	System Access, 150
quickSpinTLStream, 465	spinSystemGetCameras, 151
·	• •
StreamBufferHandlingMode	spinSystemGetCamerasEx, 152
quickSpinTLStream, 465	spinSystemGetInstance, 152
StreamCRCCheckEnable	spinSystemGetInterfaces, 154
quickSpinTLStream, 465	spinSystemGetLibraryVersion, 154

spinSystemGetLoggingLevel, 154	quickSpin, 441
spinSystemGetTLNodeMap, 155	TimerSelector
spinSystemIsInUse, 155	quickSpin, 441
spin System Register Device Arrival Event Handler,	TimerStatus
156	quickSpin, 441
spin System Register Device Removal Event Handler,	TimerTriggerActivation
156	quickSpin, 441
spinSystemRegisterInterfaceEventHandler, 157	TimerTriggerSource
spinSystemRegisterLogEventHandler, 157	quickSpin, 442
spinSystemReleaseInstance, 158	TimerValue
spinSystemSendActionCommand, 158	quickSpin, 442
spinSystemSetLoggingLevel, 159	Timestamp
spinSystemUnregisterAllLogEventHandlers, 160	quickSpin, 442
spinSystemUnregisterDeviceArrivalEventHandler,	TimestampLatch
160	quickSpin, 442
spinSystemUnregisterDeviceRemovalEvent←	TimestampLatchValue
Handler, 160	quickSpin, 442
spinSystemUnregisterInterfaceEventHandler, 161	TimestampReset
spinSystemUnregisterLogEventHandler, 161	quickSpin, 442
spinSystemUpdateCameras, 162	TransferAbort
spinSystemUpdateCamerasEx, 162	quickSpin, 442
TI Doving Structures 246	TransferBlockCount
TLDevice Structures, 346	quickSpin, 443
TLDisplayName	TransferBurstCount
quickSpinTLSystem, 471 TLFileName	quickSpin, 443
	TransferComponentSelector
quickSpinTLSystem, 471 TLID	quickSpin, 443
	TransferControlMode
quickSpinTLSystem, 471 TLInterface Structures, 347	quickSpin, 443
TLModelName	TransferOperationMode
quickSpinTLSystem, 471	quickSpin, 443
TLParamsLocked	TransferPause
	quickSpin, 443
quickSpin, 442 TLPath	TransferQueueCurrentBlockCount
quickSpinTLSystem, 471	quickSpin, 443
TLStream Structures, 348	TransferQueueMaxBlockCount
TLSystem Structures, 349	quickSpin, 443
TLType	TransferQueueMode
quickSpinTLSystem, 471	quickSpin, 444
TLVendorName	TransferQueueOverflowCount
quickSpinTLSystem, 472	quickSpin, 444
TLVersion	TransferResume
quickSpinTLSystem, 472	quickSpin, 444
Test0001	TransferSelector
quickSpin, 440	quickSpin, 444
TestEventGenerate	TransferStart
quickSpin, 440	quickSpin, 444
TestPattern	TransferStatus
quickSpin, 440	quickSpin, 444
TestPatternGeneratorSelector	TransferStatusSelector
quickSpin, 441	quickSpin, 444
TestPendingAck	TransferStop
<u> </u>	quickSpin, 444
quickSpin, 441 TimerDelay	TransferStreamChannel
	quickSpin, 445
quickSpin, 441	• •
TimerDuration	TransferTriggerActivation
quickSpin, 441	quickSpin, 445
TimerReset	TransferTriggerMode

quickSpin, 445	quickSpin, 447
TransferTriggerSelector	UserSetSave
quickSpin, 445	quickSpin, 447
TransferTriggerSource	UserSetSelector
quickSpin, 445	quickSpin, 447
Transport Layer Enumerations, 338	
spinTLDeviceAccessStatusEnums, 339	V3_3Enable
spinTLDeviceCurrentSpeedEnums, 340	quickSpin, 448
spinTLDeviceEndianessMechanismEnums, 340	
spinTLDeviceTypeEnums, 341	WhiteClip
spinTLFilterDriverStatusEnums, 341	quickSpin, 448
spinTLGUIXMLLocationEnums, 342	WhiteClipSelector
spinTLGenICamXMLLocationEnums, 341	quickSpin, 448
spinTLGevCCPEnums, 342	Width
spinTLInterfaceTypeEnums, 342	quickSpin, 448
spinTLPOEStatusEnums, 343	width
spinTLStreamBufferCountModeEnums, 343	spinAVIOptionEx, 473
spinTLStreamBufferHandlingModeEnums, 343	spinH264Option, 481
spinTLStreamModeEnums, 344	spinMJPGOptionEx, 486
spinTLStreamTypeEnums, 344	WidthMax
spinTLTLTypeEnums, 345	quickSpin, 448
TriggerActivation	
quickSpin, 445	
TriggerDelay	
quickSpin, 445	
TriggerDivider	
quickSpin, 445	
TriggerEventTest	
quickSpin, 446	
TriggerMode	
quickSpin, 446	
TriggerMultiplier	
quickSpin, 446	
TriggerOverlap	
quickSpin, 446	
TriggerSelector	
quickSpin, 446	
TriggerSoftware	
quickSpin, 446	
TriggerSource	
quickSpin, 446	
True	
Spinnaker C Definitions, 22	
type	
spinLibraryVersion, 484	
UserOutputSelector	
quickSpin, 446	
UserOutputValue	
quickSpin, 447	
UserOutputValueAll	
quickSpin, 447	
UserOutputValueAllMask	
quickSpin, 447	
UserSetDefault	
quickSpin, 447	
UserSetFeatureEnable	
quickSpin, 447	
UserSetLoad	