Ch7: Stability for Non-Autonomous Systems

Amin Fakhari, Fall 2022

000000

Concepts of Stability

Autonomous vs. Non-Autonomous Systems

The fundamental difference between autonomous and non-autonomous systems lies in the fact that the state trajectory of an autonomous system is independent of the initial time t_0 , while that of a non-autonomous system generally is **not**.

$$\dot{\mathbf{x}}(t) = \mathbf{f}(\mathbf{x}(t), t)$$

This difference requires us to **consider the initial time explicitly** in defining stability concepts for non-autonomous systems, and makes the analysis more difficult than that of autonomous systems.


Non-autonomous systems appear in robot control when the desired task is to follow a time-varying trajectory, i.e. in **motion control**, or when there is uncertainty in the physical parameters and therefore, an **adaptive control** approach may be used.



Equilibrium Point

A state x_e is an **Equilibrium Point** (or **Equilibrium State**) if the system starts there (initial state $x(t_0) = x_e$) it will remain there for all future time.

$$\dot{\boldsymbol{x}} = \mathbf{f}(\boldsymbol{x}_e, t) = \mathbf{0} \qquad \forall t \ge t_0$$

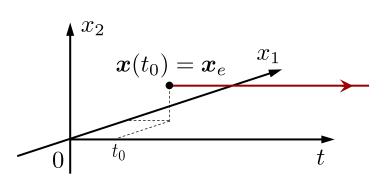

For example, the system $\dot{x} = -\frac{a(t)x}{1+x^2}$ has an equilibrium point at x = 0.

However, the system $\dot{x} = -\frac{a(t)x}{1+x^2} + b(x)$, $b(x) \neq 0$ does not have an equilibrium point.




Extensions of Stability Concepts

The concepts of stability for non-autonomous systems are quite similar to those of autonomous systems. However, the definitions include the **initial time** t_0 explicitly.

The equilibrium point x_e is said to be **Stable** at t_0 if for any R > 0, there exists $r = r(R, t_0) > 0$, such that if $\|\boldsymbol{x}\left(\boldsymbol{t}_{0}\right) - \boldsymbol{x}_{e}\| < r$, then $\|\boldsymbol{x}\left(t\right) - \boldsymbol{x}_{e}\| < R$ for all $t \geq \boldsymbol{t}_{0}$. Otherwise, the equilibrium point is **Unstable**.

$$|\forall R > 0, \exists r > 0 : || \boldsymbol{x}(t_0) - \boldsymbol{x}_e || < r \Rightarrow || \boldsymbol{x}(t) - \boldsymbol{x}_e || < R, \ \forall t \ge t_0$$

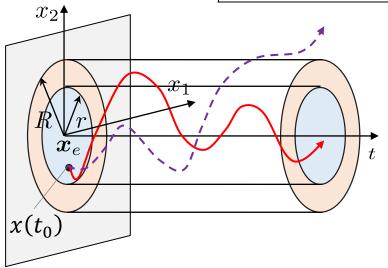

(we can keep the state in a ball of arbitrarily small radius *R* by starting the state trajectory in a ball of sufficiently small radius r)

The equilibrium point x_e is said to be **Uniformly Stable**, if r can be chosen **independently** of the initial time t_0 .

Extensions of Stability Concepts (cont.)

The equilibrium point x_e is said to be **Asymptotically Stable** at t_0 if (1) it is **Lyapunov Stable**, and (2) there exists $r = r(t_0) > 0$ such that if $\|\boldsymbol{x}(t_0) - \boldsymbol{x}_e\| < r$, then $\|\boldsymbol{x}(t) - \boldsymbol{x}_e\| \to 0$ as $t\to\infty$.

$$\exists r > 0 : \|\boldsymbol{x}(t_0) - \boldsymbol{x}_e\| < r \Rightarrow \|\boldsymbol{x}(t) - \boldsymbol{x}_e\| \to 0, \text{ as } t \to \infty$$

The equilibrium point x_e is said to be **Uniformly Asymptotically Stable**, if it is **Uniformly Stable** and r can be chosen **independently** of the initial time t_0 where

$$\exists r > 0 : \|\boldsymbol{x}(t_0) - \boldsymbol{x}_e\| < r \Rightarrow \|\boldsymbol{x}(t) - \boldsymbol{x}_e\| \to 0, \text{ as } t \to \infty$$

Concepts of Stability

$$\dot{x} = -\frac{x}{(1+t)}$$

$$\dot{x} = -\frac{x}{(1+t)}$$
 $x(t) = \frac{1+t_0}{1+t}x(t_0)$

The origin is asymptotically stable but not uniformly asymptotically stable, because a larger t_0 requires a longer time to get close to the origin.



Extensions of Stability Concepts (cont.)

The equilibrium point x_e is said to be **Exponentially Stable** if there exist $\alpha, \lambda, r > 0$ such that $\text{if } \|\boldsymbol{x}\left(t_{0}\right) - \boldsymbol{x}_{e}\| < r \text{, then } \|\boldsymbol{x}\left(t\right) - \boldsymbol{x}_{e}\| < \alpha \|\boldsymbol{x}\left(t_{0}\right) - \boldsymbol{x}_{e}\| e^{-\lambda(t-t_{0})} \quad \forall t \geq t_{0}.$

$$\exists \alpha, \lambda, r > 0 : \|\boldsymbol{x}(t_0) - \boldsymbol{x}_e\| < r \Rightarrow \|\boldsymbol{x}(t) - \boldsymbol{x}_e\| \le \alpha \|\boldsymbol{x}(t_0) - \boldsymbol{x}_e\| e^{-\lambda(t - t_0)}$$

If asymptotic (or exponential) stability holds for any initial states $x(t_0) \in \mathbb{R}^n$, the equilibrium point is said to be Globally Asymptotically (or Exponentially) Stable.

★ It can be shown that **exponential stability** always implies **uniform asymptotic stability**.



Example: A First-Order Linear Time-varying System

Consider the first-order system $\dot{x}(t) = -a(t)x(t)$

Its solution is
$$x(t) = x(t_o)e^{-\int_{t_0}^t a(r)dr}$$

The system is stable if $a(t) \ge 0$, $\forall t \ge t_0$. It is asymptotically stable if $\int_0^\infty a(r)dr = +\infty$.

For Example:

Concepts of Stability

 $\dot{x} = -\frac{x}{(1+t)^2}$: The origin is stable (but not asymptotically stable), because $\int_0^\infty \frac{1}{(1+r)^2} dr = 1$.

 $\dot{x} = -\frac{x}{1+t}$: The origin is asymptotically stable, because $\int_0^\infty \frac{1}{1+r} dr = +\infty$.

 $\dot{x} = -tx$: The origin is exponentially stable, because $x = c_1 e^{-t^2/2}$.

000000



Lyapunov Analysis

Time-Varying Positive Definite Functions

A scalar, time-varying function V(x,t) ($V:D\times\mathbb{R}_+\to\mathbb{R},\ D\subset\mathbb{R}^n,\ 0\in D$) is said to be

Locally Positive Definite if


1) $V(\mathbf{0}, t) = 0$ $\forall t \ge t_0$

Concepts of Stability

- 2) $V(\boldsymbol{x},t) \ge V_0(\boldsymbol{x}) \quad \forall t \ge t_0 , \forall \boldsymbol{x} \in D$

where $V_0({\pmb x})$ ($V_0:D\to {\mathbb R}$) is a time-invariant positive definite function.

 $V(\boldsymbol{x},t)$ is said to be **Globally Positive Definite** if $D=\mathbb{R}^n$.



- A function $V(\boldsymbol{x},t)$ is **positive semi-definite** if $V_0(\boldsymbol{x})$ is positive semi-definite.
- A function V(x,t) is **negative (semi-)definite** if V(x,t) is positive (semi-)definite.




Decrescent Function

A scalar function V(x,t) ($V:D\times\mathbb{R}_+\to\mathbb{R},\ D\subset\mathbb{R}^n,\ \mathbf{0}\in D$) is said to be Locally Decrescent if

- 1) $V(\mathbf{0},t) = 0$ $\forall t \ge t_0$
- 2) $V(\boldsymbol{x},t) \leq V_1(\boldsymbol{x}) \quad \forall t \geq t_0, \ \forall \boldsymbol{x} \in D$

where $V_1(x)$ ($V_1:D\to\mathbb{R}$) is a **time-invariant positive definite** function.

 $V(\boldsymbol{x},t)$ is said to be (Globally) Decrescent if $D=\mathbb{R}^n$.

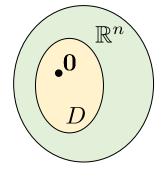

 \Rightarrow A scalar time-variant function V(x,t) is decrescent if it is dominated by a time-invariant positive definite function.

Example:

$$V(\mathbf{x}, t) = (1 + \sin^2 t) (x_1^2 + x_2^2)$$

$$V_0(\mathbf{x}) = x_1^2 + x_2^2$$

$$V_0(\mathbf{x}) = x_1^2 + x_2^2$$
 $V_1(\mathbf{x}) = 2(x_1^2 + x_2^2)$


The function is positive definite and decrescent.



Lyapunov's Direct Method for Non-Autonomous Systems

Consider a non-autonomous system, $\dot{\boldsymbol{x}}=\mathbf{f}(\boldsymbol{x},t)$, with an equilibrium point at origin, $\boldsymbol{x}=\mathbf{0}$. If there exists a scalar function $V(\boldsymbol{x},t)$ ($V:D\times\mathbb{R}_+\to\mathbb{R},\ D\subset\mathbb{R}^n,\ \mathbf{0}\in D$) with continuous partial derivatives such that

- 1) V(x,t) is **positive definite** (locally in D),
- 2) $\dot{V}(x,t)$ is **negative semi-definite** (locally in D), the equilibrium point ${\bf 0}$ is **Stable** (and V is called a Lyapunov function).
- 3) $V(\boldsymbol{x},t)$ is **decrescent** (locally in D), the equilibrium point $\boldsymbol{0}$ is **Uniformly Stable**. If $\dot{V}(\boldsymbol{x},t)$ is **negative definite** (locally in D), the equilibrium point $\boldsymbol{0}$ is **Uniformly Asymptotically Stable**.
- 4) $D = \mathbb{R}^n$,
- 5) V(x,t) is radially unbounded, i.e., $V(x,t)\to\infty$ as $\|x\|\to\infty$. the equilibrium point 0 is Globally Uniformly (Asymptotically) Stable

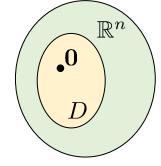

Note:

$$\dot{V}(\boldsymbol{x},t) = \frac{dV}{dt} = \frac{\partial V}{\partial t} + \frac{\partial V}{\partial \boldsymbol{x}} \dot{\boldsymbol{x}} = \frac{\partial V}{\partial t} + \frac{\partial V}{\partial \boldsymbol{x}} \mathbf{f}(\boldsymbol{x},t)$$



Example

Example: Determine the stability of the equilibrium point at **0**.

$$\dot{x}_1 = -x_1 - e^{-2t} x_2$$
$$\dot{x}_2 = x_1 - x_2$$

Let's choose this scalar function:

$$V(\mathbf{x},t) = x_1^2 + (1 + e^{-2t}) x_2^2$$

$$x_1^2 + x_2^2 \le V(\boldsymbol{x}, t) \le x_1^2 + 2x_2^2$$

: The function is positive definite and decrescent.

$$\dot{V}(\mathbf{x},t) = -2\left[x_1^2 - x_1x_2 + x_2^2\left(1 + 2e^{-2t}\right)\right]$$

$$\dot{V} \leq -2\left(x_1^2 - x_1x_2 + x_2^2\right) = -\left(x_1 - x_2\right)^2 - x_1^2 - x_2^2$$
 \dot{V} is negative definite.

 $V({m x},t)$ is radially unbounded, i.e., $V({m x},t) o \infty$ as $\|{m x}\| o \infty$.

: The point **0** is **globally uniformly asymptotically stable**.

000000

Lyapunov-Like Analysis

Barbalat's Lemma

For autonomous systems, the invariant set theorems are powerful tools to study stability, because they allow asymptotic stability conclusions to be drawn even when \dot{V} is only negative semi-definite. However, the invariant set theorems are not applicable to nonautonomous systems. Instead, Barbalat's lemma can be used for non-autonomous systems.

Barbalat's Lemma:

If the differentiable function f(t) has a finite limit as $t \to \infty$, and if \dot{f} is uniformly continuous, then $f(t) \to 0$ as $t \to \infty$.

> A sufficient condition for a differentiable function to be uniformly continuous is that its derivative be bounded.



 \Rightarrow If the differentiable function f(t) has a finite limit as $t \to \infty$, and is such that \ddot{f} exists and is bounded, then $\dot{f} \to 0$ as as $t \to \infty$.



Lyapunov-Like Stability Analysis Using Barbalat's Lemma

If a scalar function V(x,t) satisfies the following conditions

- V(x,t) is lower bounded,
- $\dot{V}(x,t)$ is negative semi-definite,
- $\dot{V}(x,t)$ is uniformly continuous in time ($\ddot{V}(x,t)$ is bounded), then $V(x,t) \to 0$ as $t \to \infty$.

Therefore, V approaches a finite limiting value V_{∞} , such that $V_{\infty} \leq V(x(t_0), 0)$.



Example

The closed-loop error dynamics of an adaptive control system for a first-order plant with one unknown parameter is

$$\dot{e} = -e + \theta w(t)$$

$$\dot{\theta} = -ew(t)$$

where e and θ are the two states of the closed-loop dynamics, representing tracking error and parameter error, and w(t) is a bounded continuous function.

Consider Lyapunov function $V = e^2 + \theta^2$. The time derivative is

$$\dot{V} = 2e(-e + \theta w) + 2\theta(-ew) = -2e^2 \le 0$$

Based on Lyapunov theory, the system is stable, and therefore, e and θ are bounded.



Example (cont.)

To use Barbalat's lemma, we must check the uniform continuity of \dot{V} .

$$\ddot{V} = -4e(-e + \theta w)$$

The derivative of \dot{V} (i.e., \ddot{V}) is bounded, since w is bounded by hypothesis, and e and θ were shown to be bounded. Hence, \dot{V} is uniformly continuous, and application of Barbalat's lemma indicates that $e \to 0$ as $t \to \infty$ ($\dot{V}(x,t) \to 0$ as $t \to \infty$).

Note: Although e converges to zero, the system is not asymptotically stable, because θ is only guaranteed to be bounded.

Simulation with

$$w(t) = 1/(1+t),$$

 $e(0) = \theta(0) = 0.1$

