Branch Hazards

- If branch outcome determined in MEM

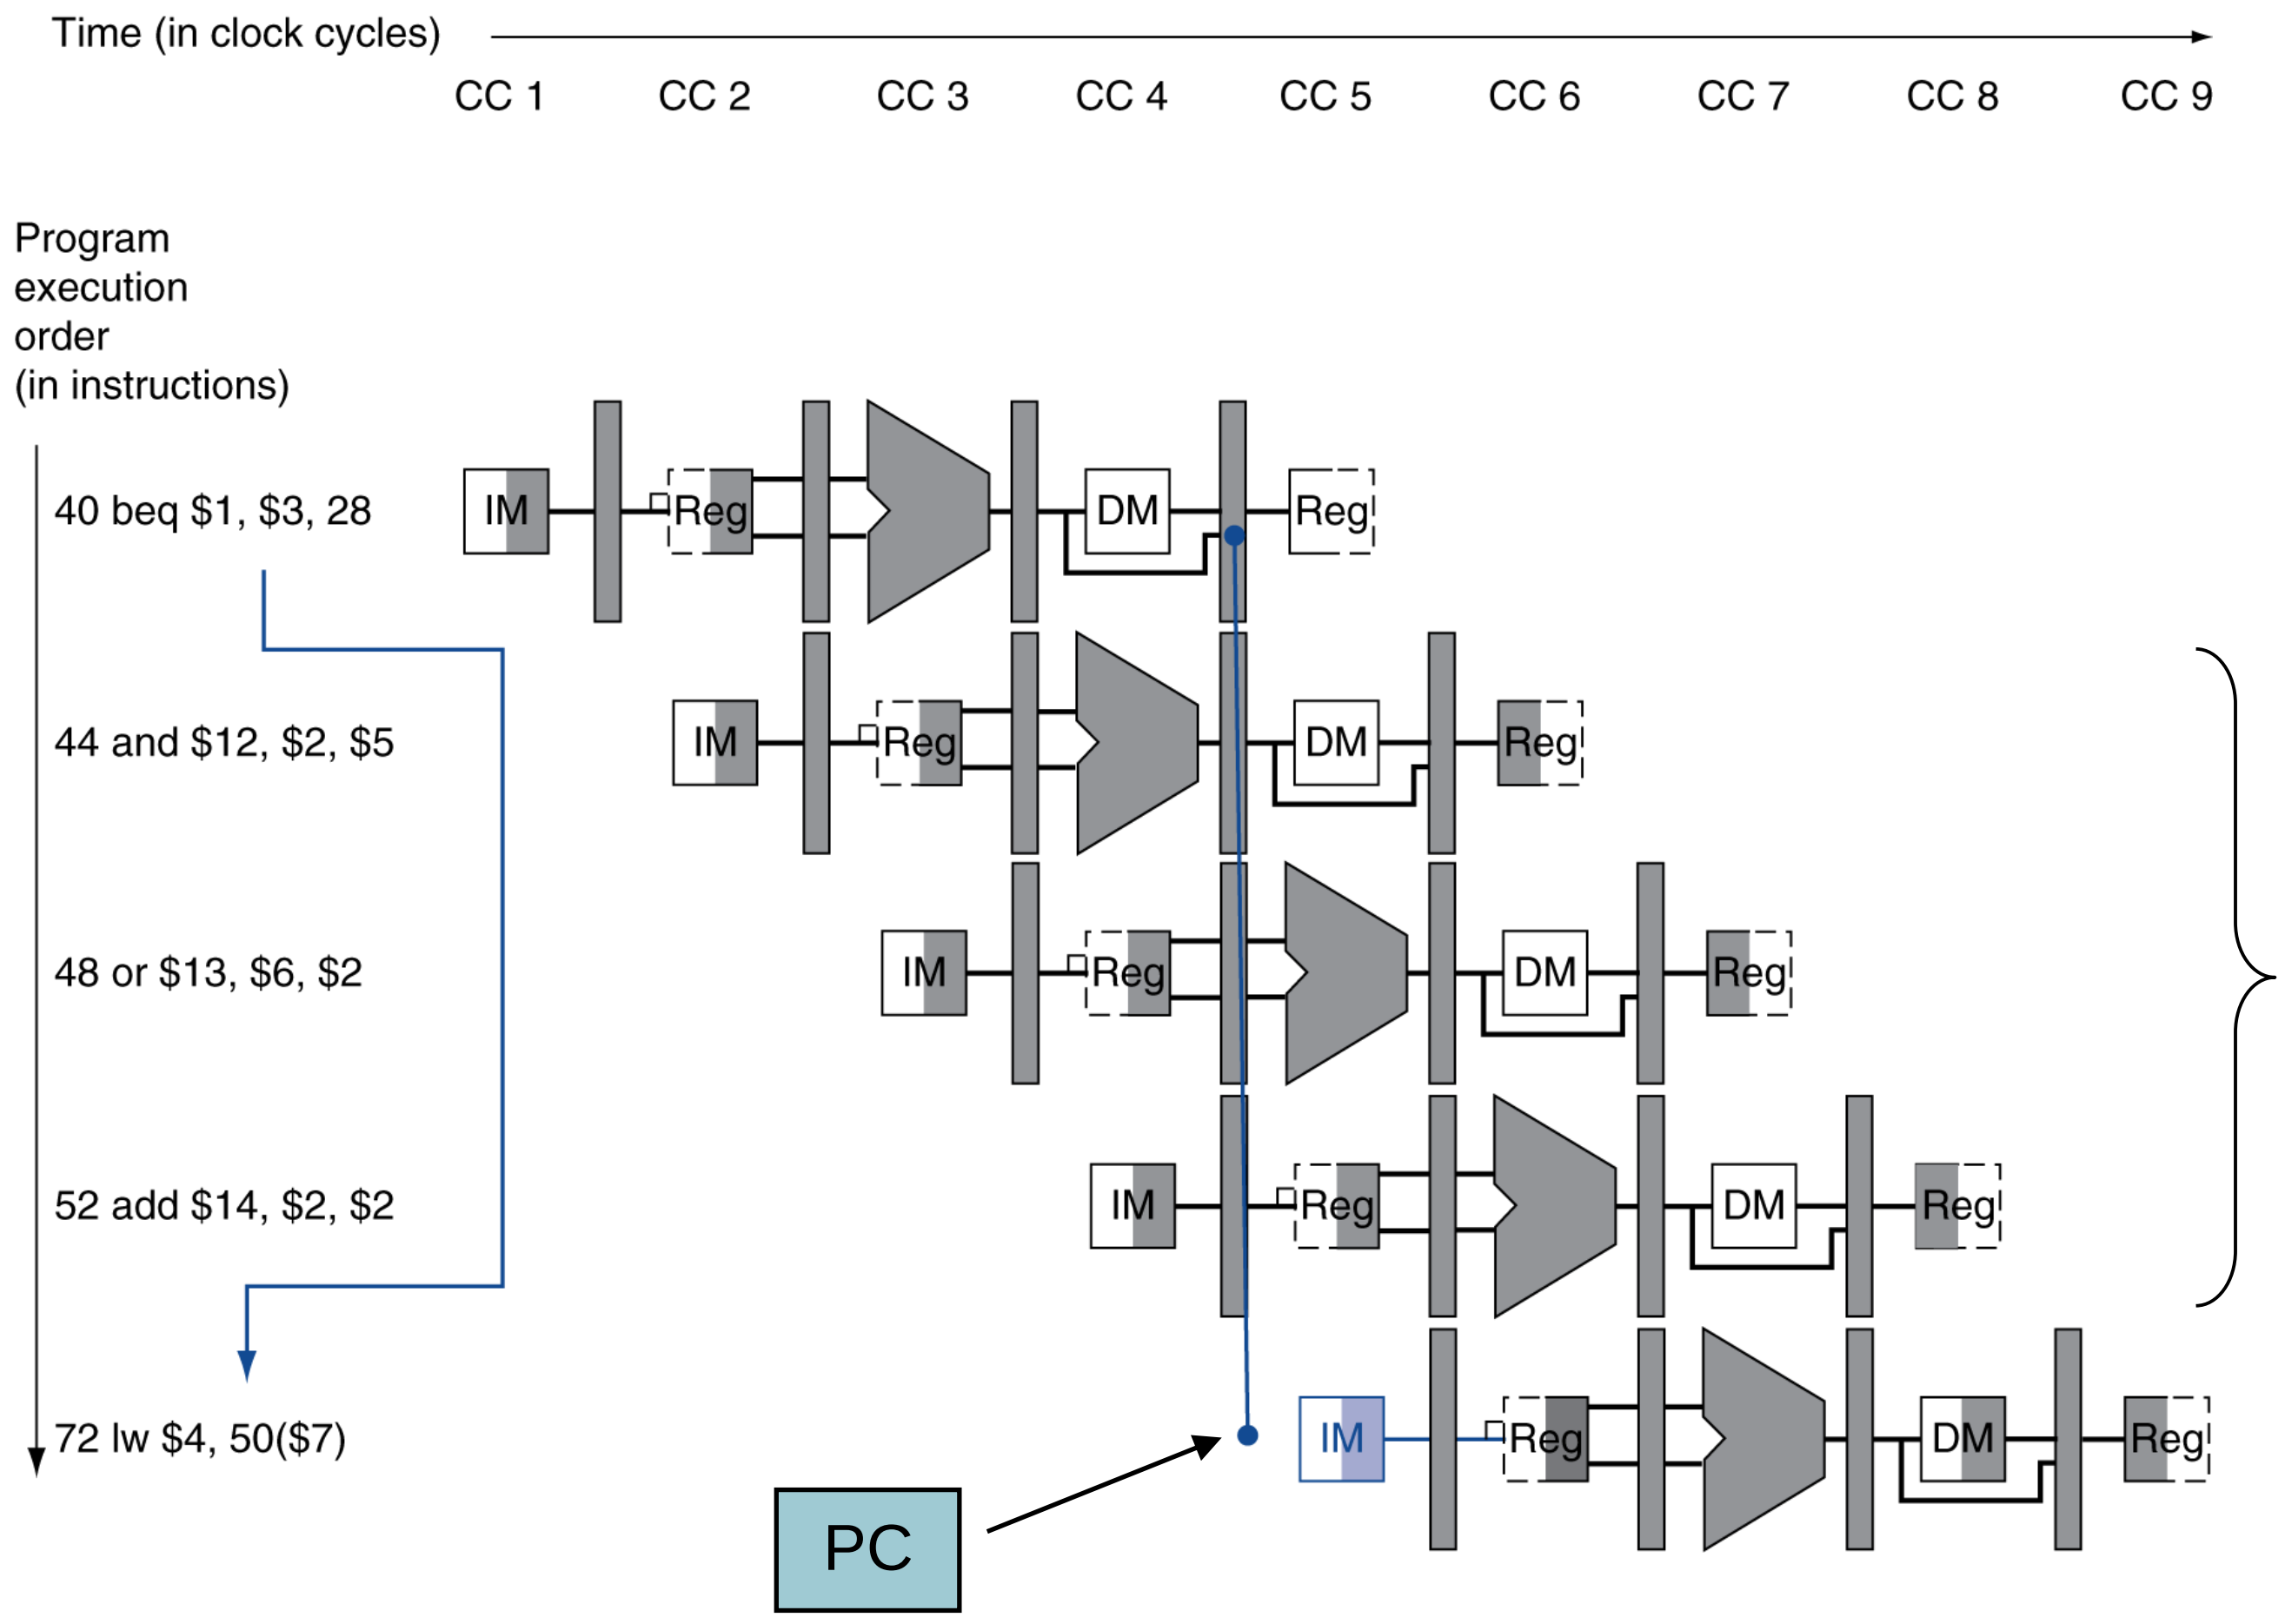

Flush these instructions (Set control values to 0)

Reducing Branch Delay

- Move hardware to determine outcome to ID stage
  - Target address adder
  - Register comparator
- Example: branch taken

```
36:  sub  $10, $4, $8
40:  beq  $1,  $3, 7
44:  and  $12, $2, $5
48:  or   $13, $2, $6
52:  add  $14, $4, $2
56:  slt  $15, $6, $7
     ...
72:  lw   $4, 50($7)
```

Example: Branch Taken

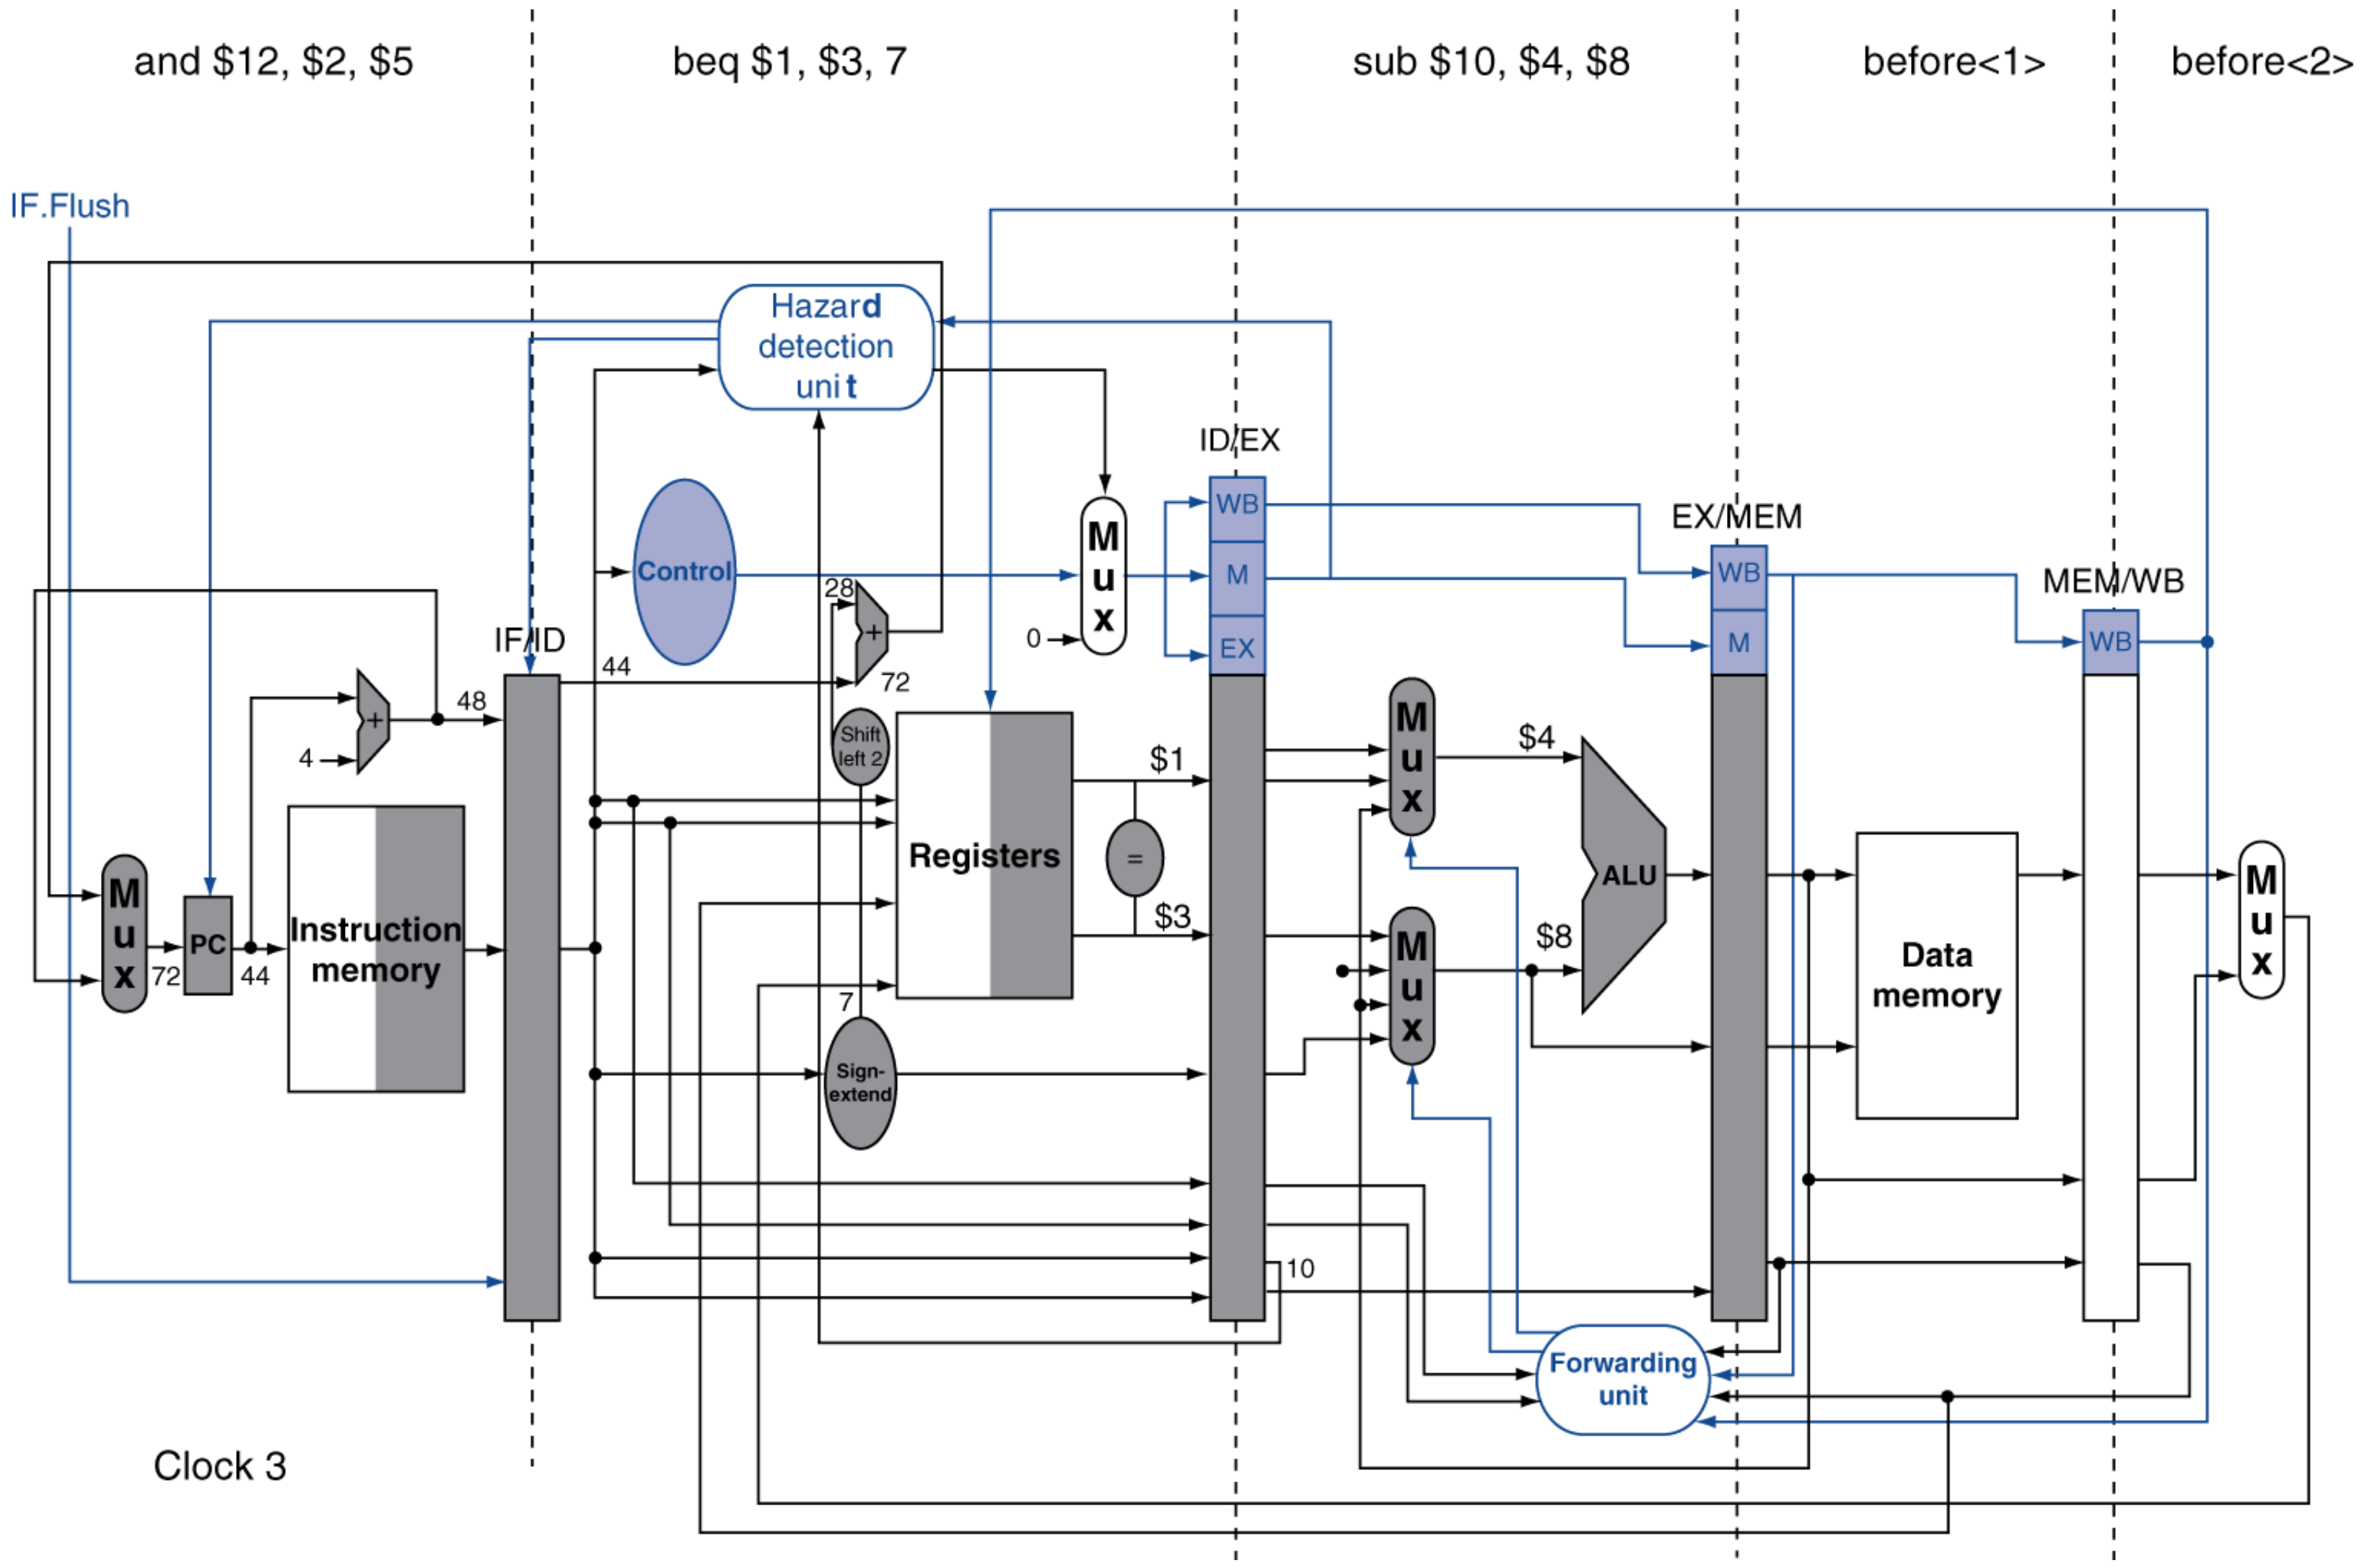

Example: Branch Taken

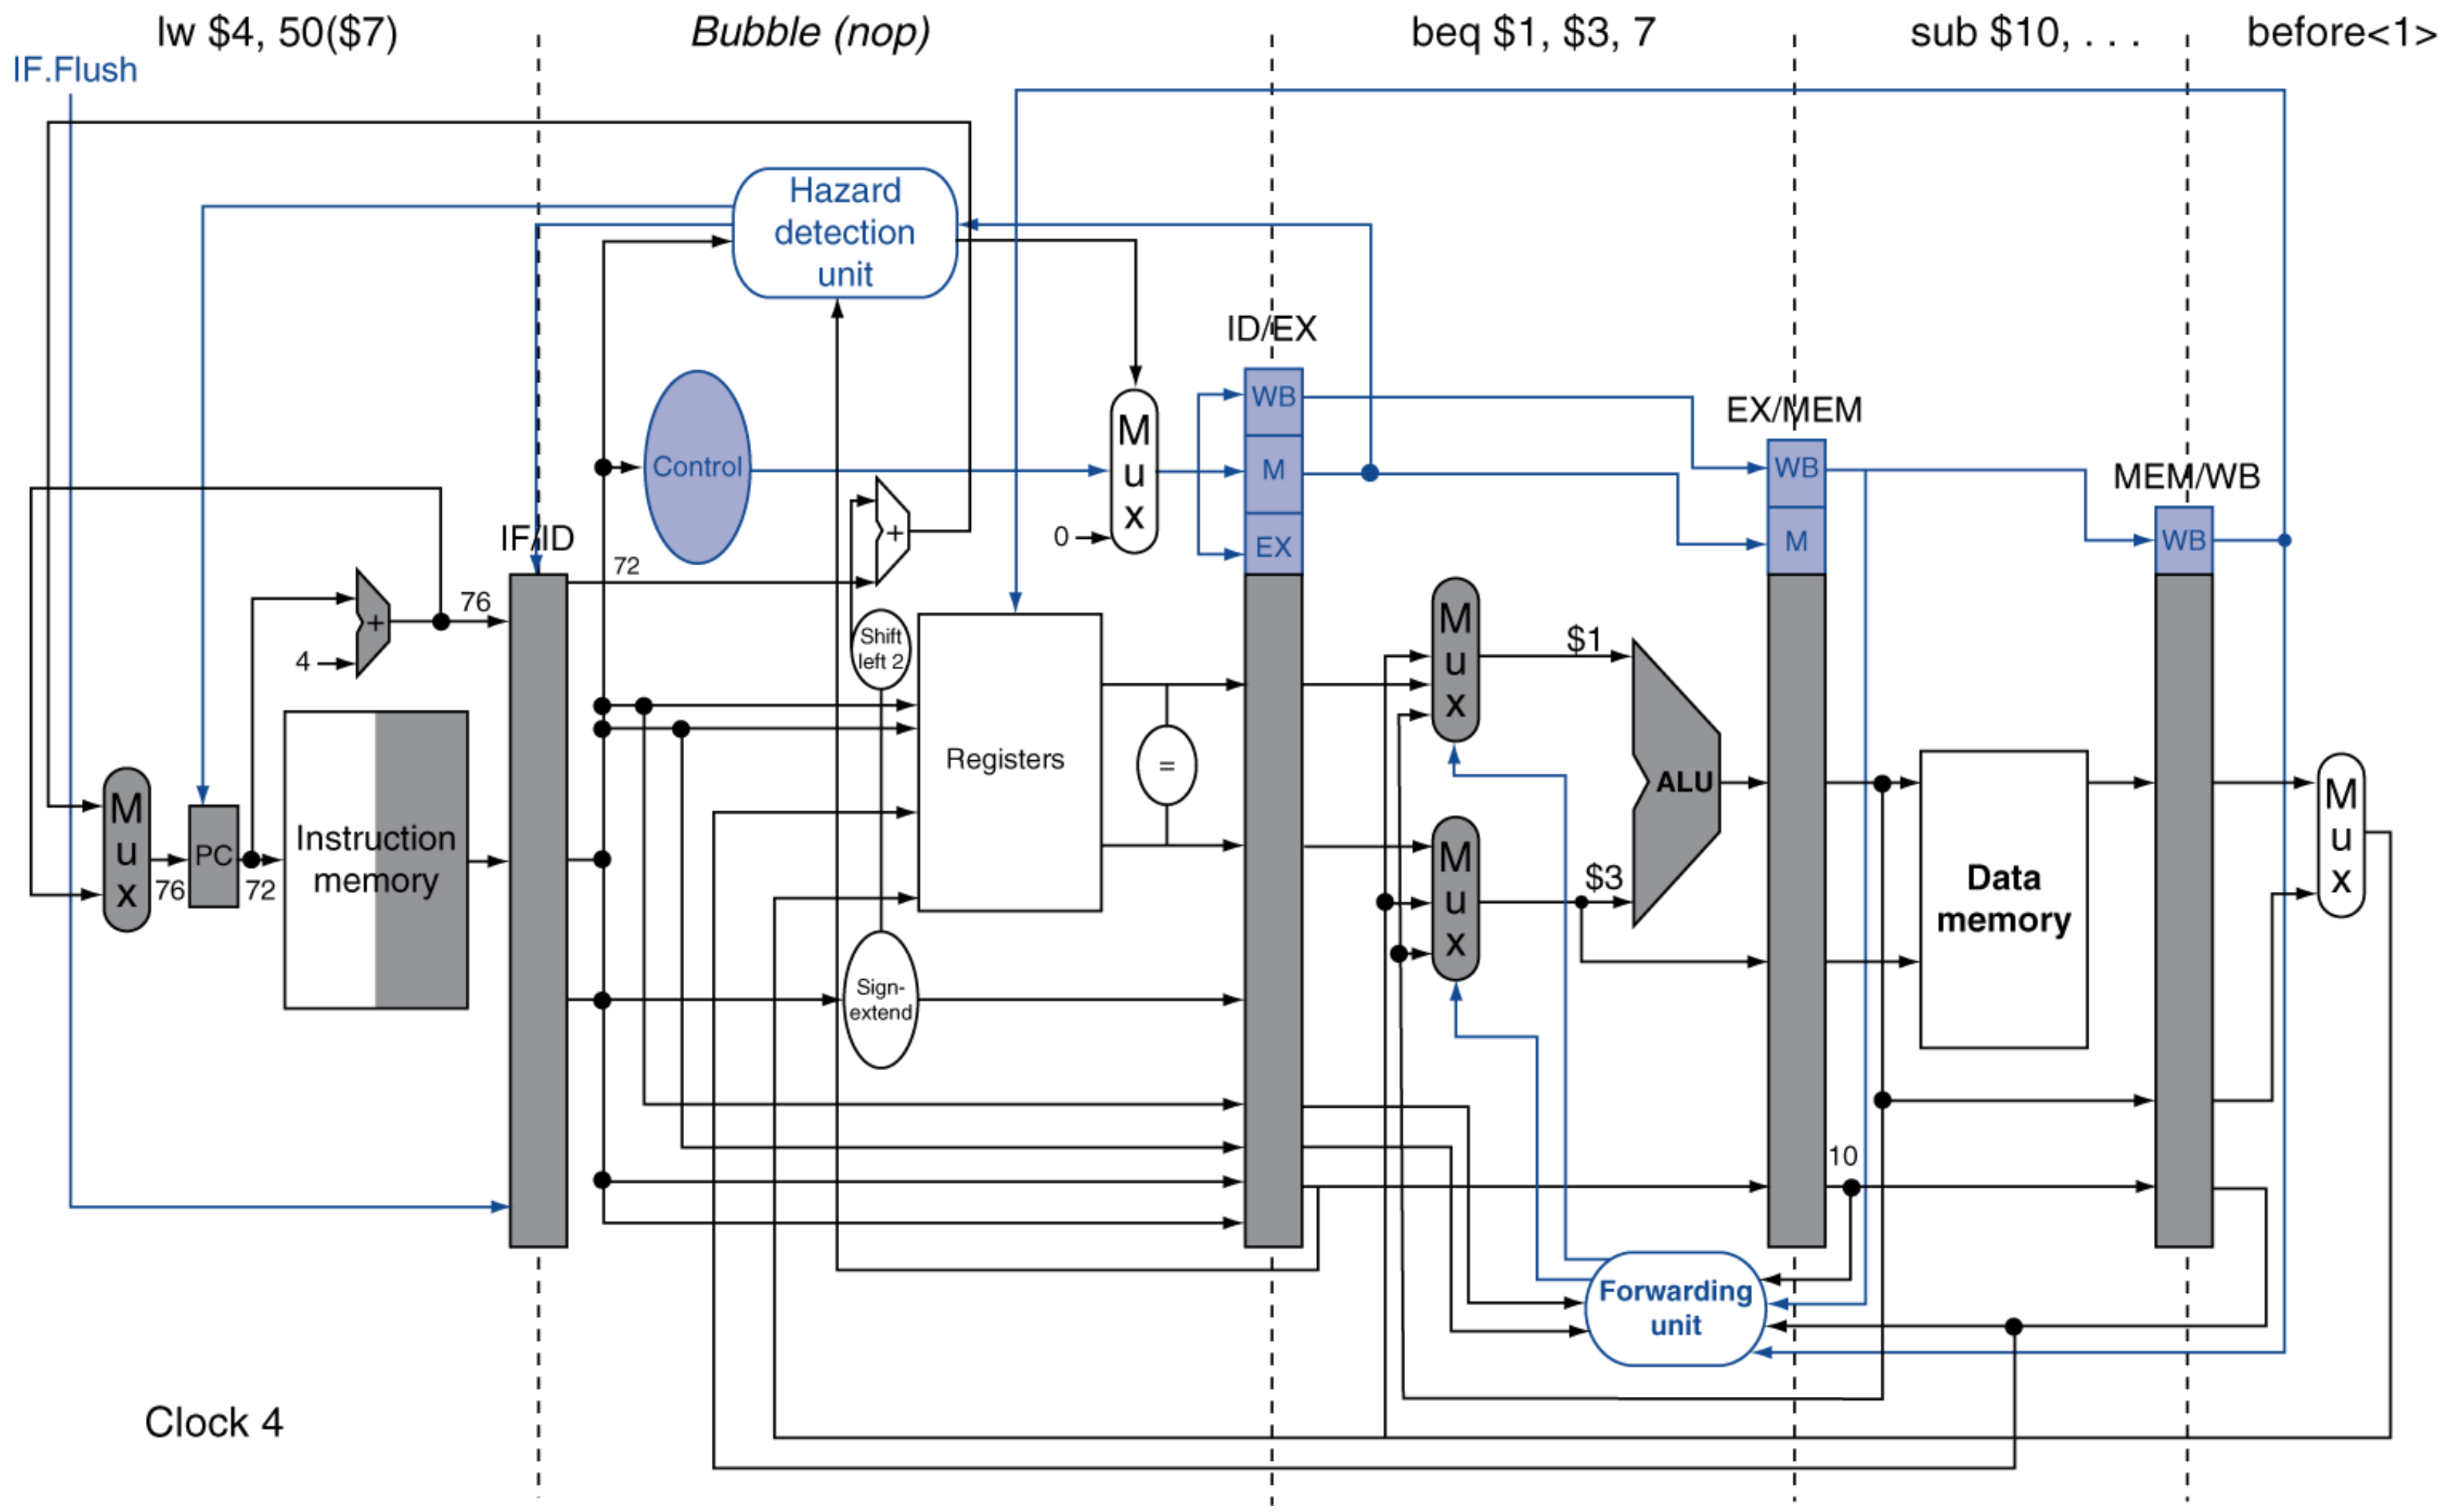

Data Hazards for Branches

- If a comparison register is a destination of 2nd or 3rd preceding ALU instruction

```
add $1, $2, $3
add $4, $5, $6
…
beq $1, $4, target
```

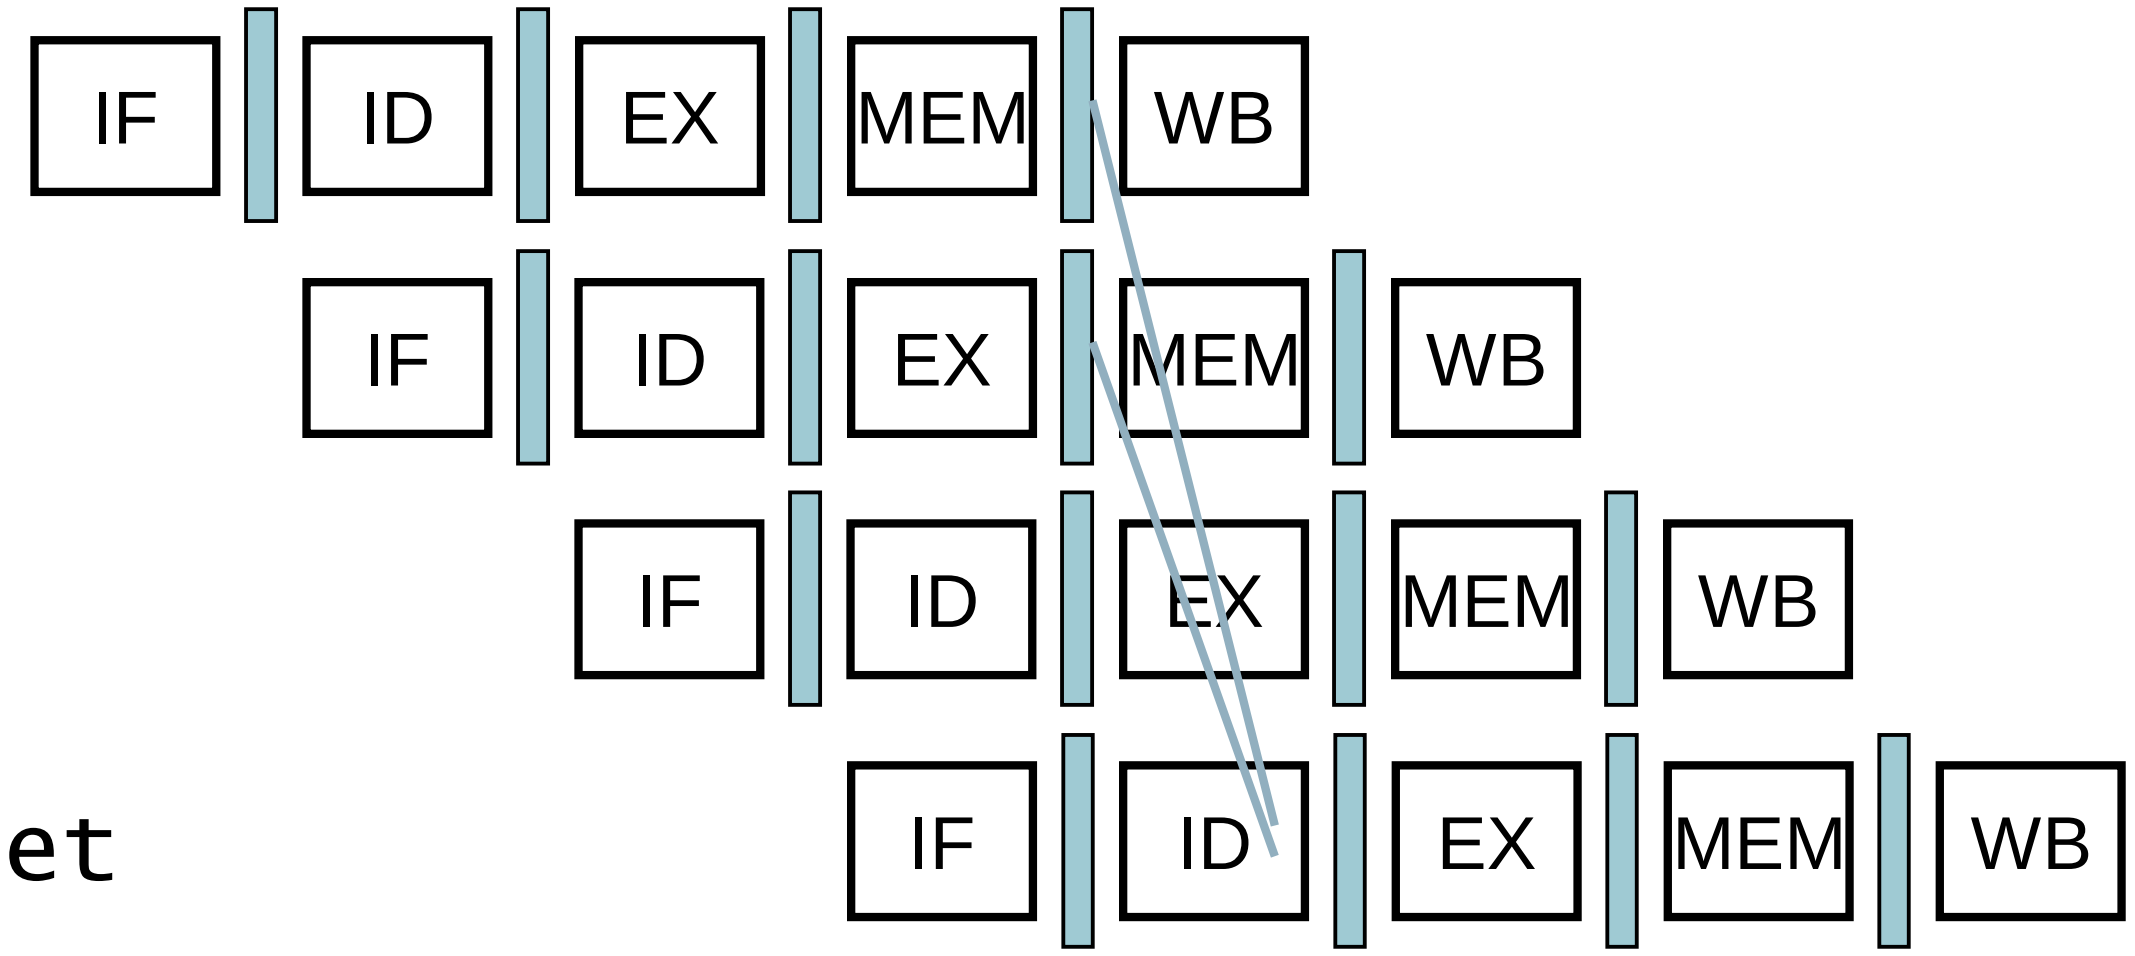

- Can resolve using forwarding

Data Hazards for Branches

- If a comparison register is a destination of preceding ALU instruction or 2nd preceding load instruction
  - Need 1 stall cycle

```
lw  $1, addr
add $4, $5, $6
beq stalled
beq $1, $4, target
```

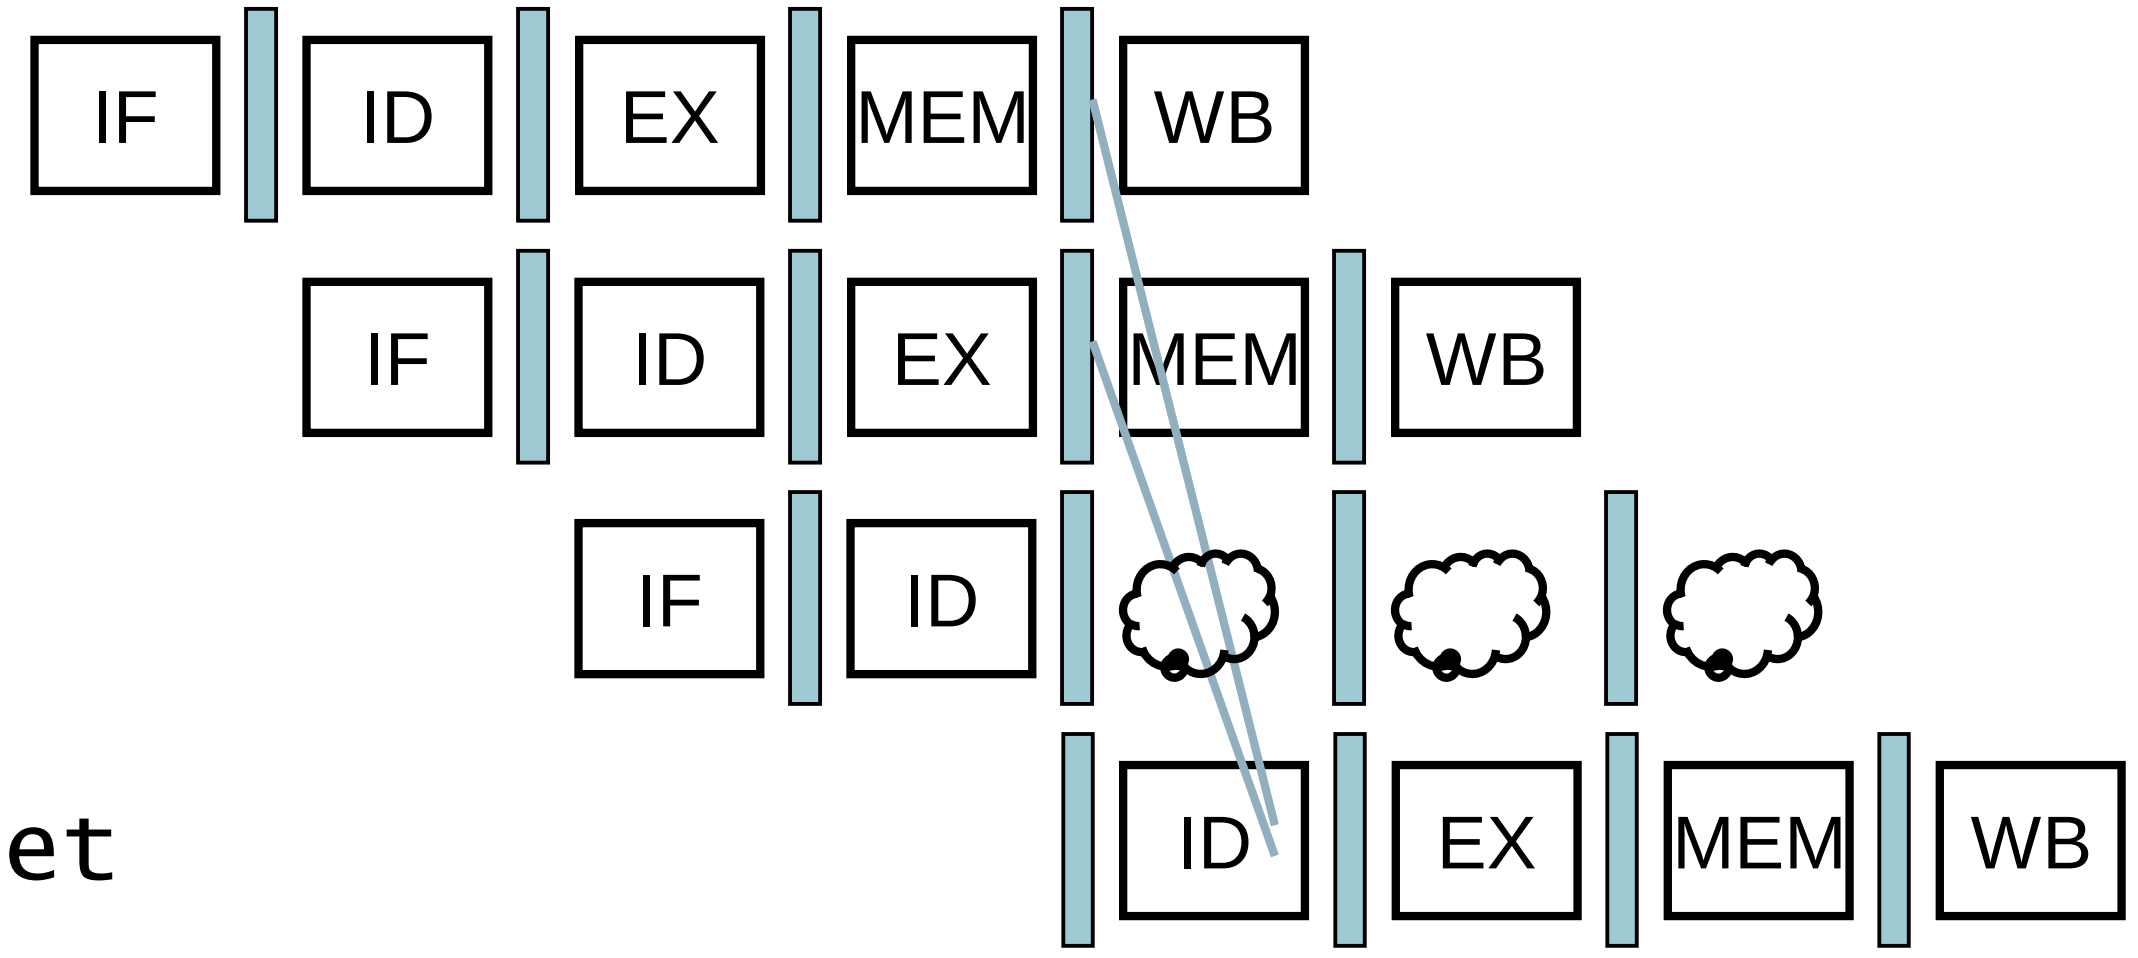

Data Hazards for Branches

- If a comparison register is a destination of immediately preceding load instruction
  - Need 2 stall cycles

```
lw  $1, addr
beq stalled
beq stalled
beq $1, $0, target
```

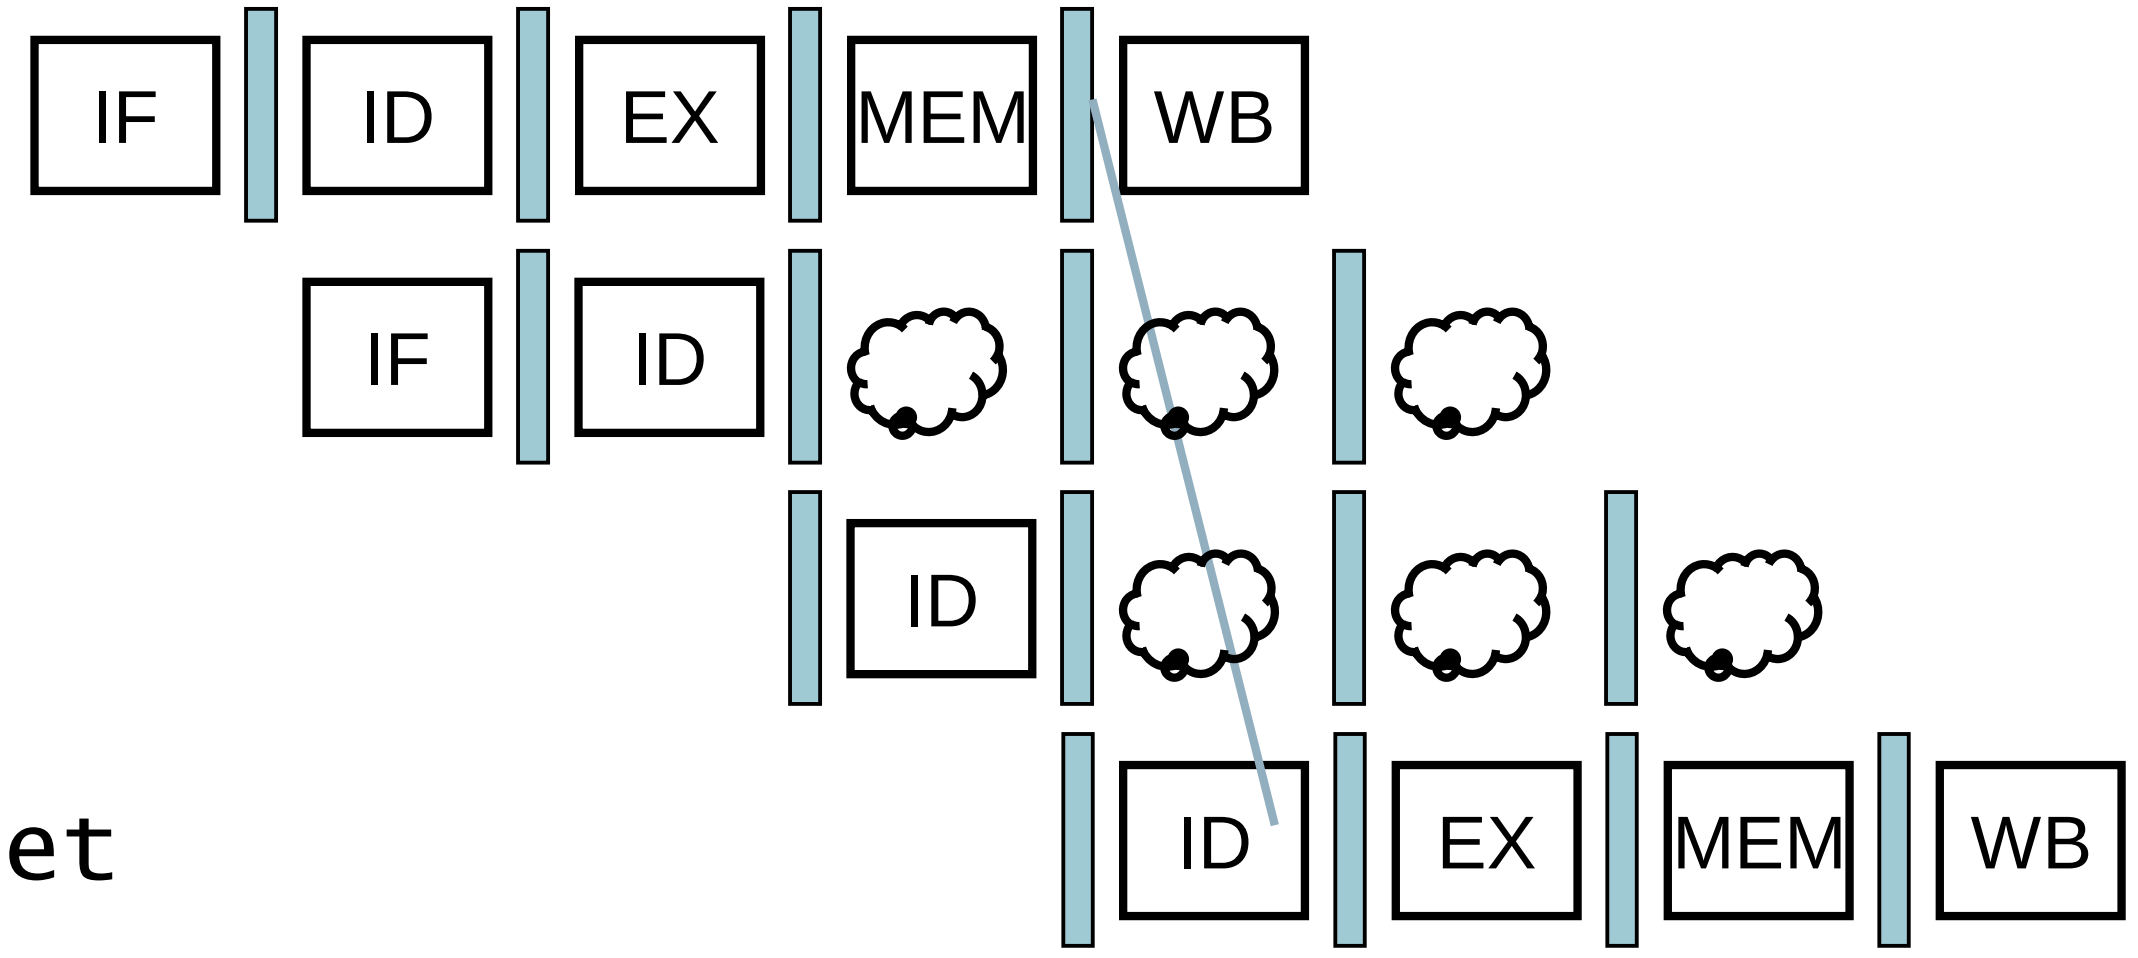

Dynamic Branch Prediction

- In deeper and superscalar pipelines, branch penalty is more significant
- Use dynamic prediction
  - Branch prediction buffer (aka branch history table)
  - Indexed by recent branch instruction addresses
  - Stores outcome (taken/not taken)
  - To execute a branch
    - Check table, expect the same outcome
    - Start fetching from fall-through or target
    - If wrong, flush pipeline and flip prediction

1-Bit Predictor: Shortcoming

- Inner loop branches mispredicted twice!

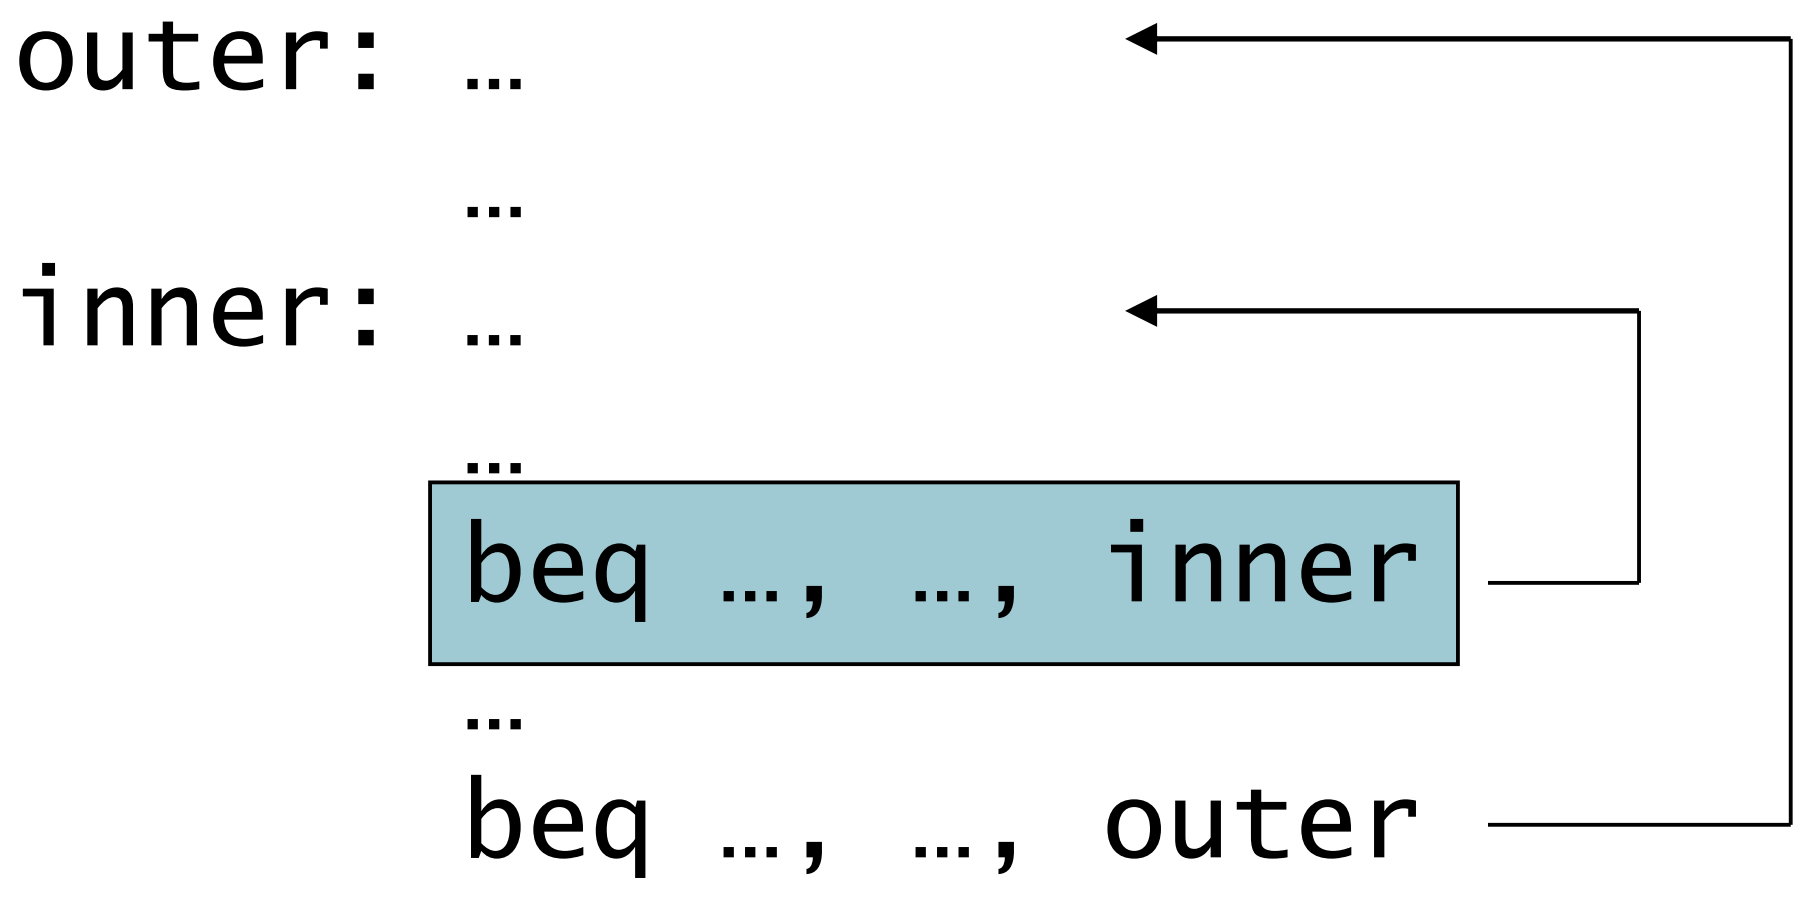

```
outer: …
       …
inner: …
       …
       beq …, …, inner
       …
       beq …, …, outer
```

  - Mispredict as taken on last iteration of inner loop
  - Then mispredict as not taken on first iteration of inner loop next time around

2-Bit Predictor

- Only change prediction on two successive mispredictions

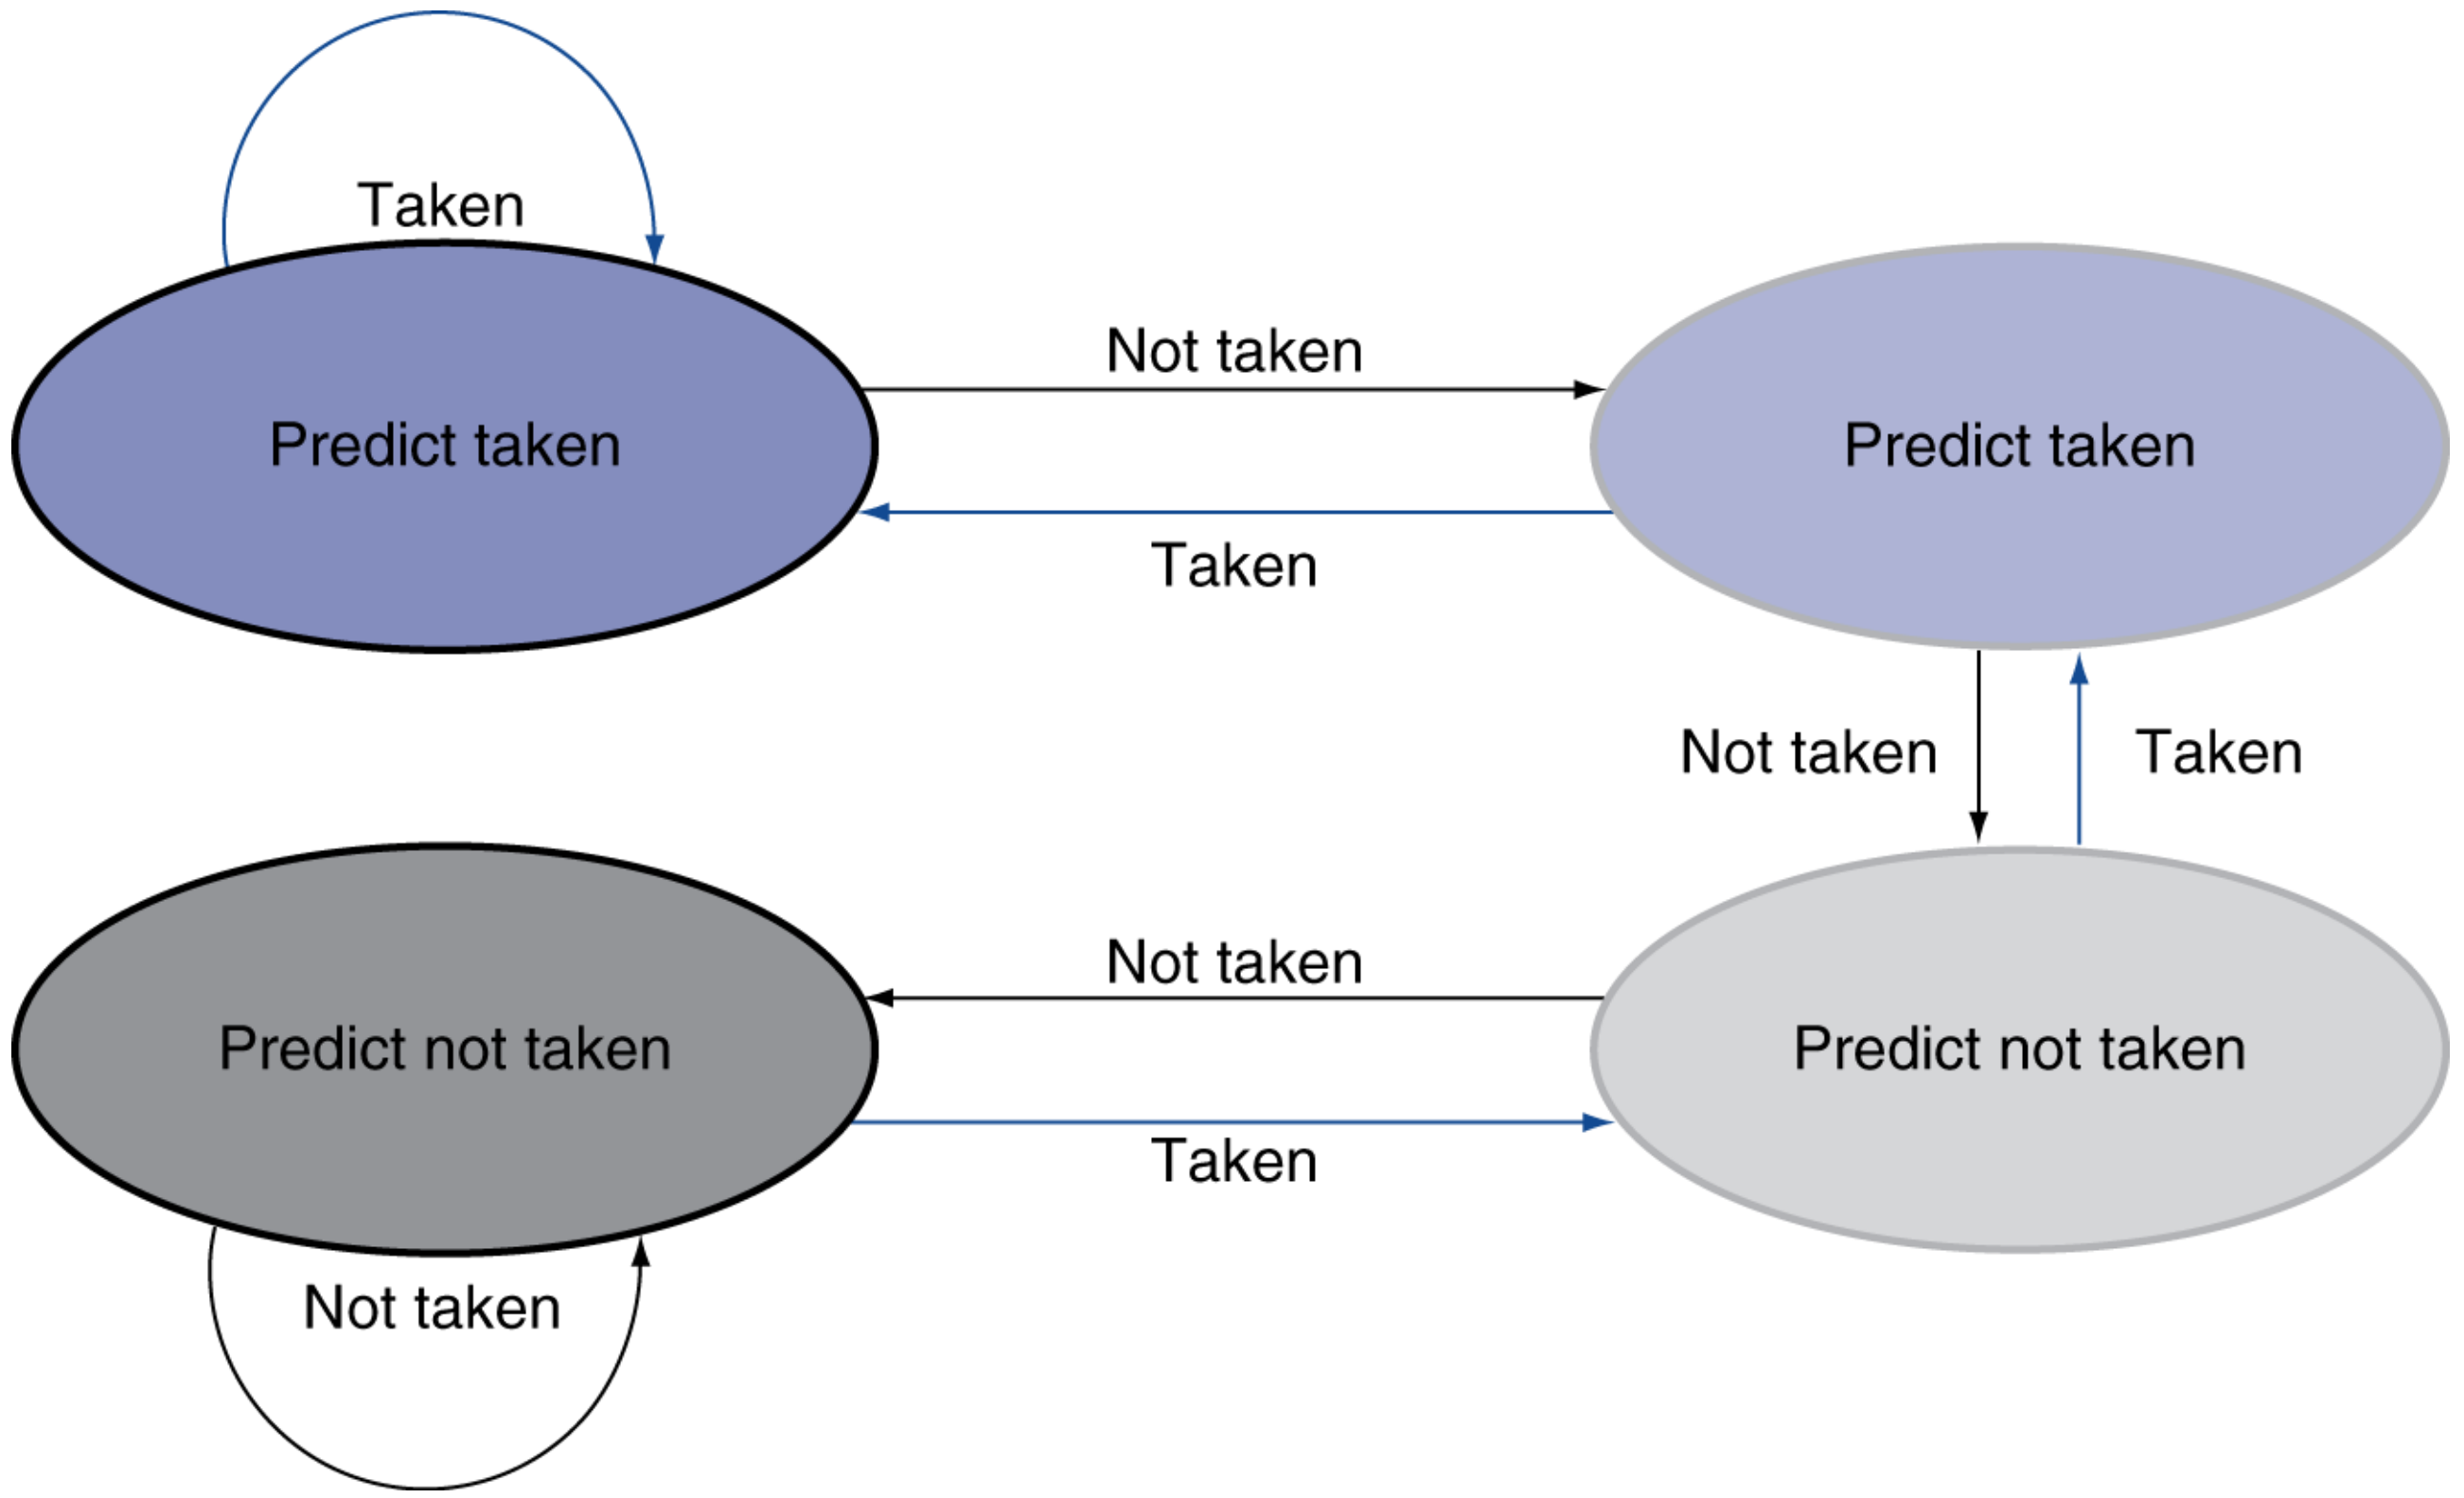

Pop Quiz

- If we have 4096 available bits, how many 2-bit prediction entries can we store?

- A: 4096
- B: 2048
- C: 1024
- D: 512

Calculating the Branch Target

- Even with predictor, still need to calculate the target address
  - 1-cycle penalty for a taken branch
- Branch target buffer
  - Cache of target addresses
  - Indexed by PC when instruction fetched
    - If hit and instruction is branch predicted taken, can fetch target immediately

Exceptions and Interrupts

- "Unexpected" events requiring change in flow of control
  - Different ISAs use the terms differently
- Exception
  - Arises within the CPU
    - e.g., undefined opcode, overflow, syscall, …
- Interrupt
  - From an external I/O controller
- Dealing with them without sacrificing performance is hard

Handling Exceptions

- In MIPS, exceptions managed by a System Control Coprocessor (CP0)
- Save PC of offending (or interrupted) instruction
  - In MIPS: Exception Program Counter (EPC)
- Save indication of the problem
  - In MIPS: Cause register
  - We'll assume 1-bit
    - 0 for undefined opcode, 1 for overflow
- Jump to handler at 8000 00180

An Alternate Mechanism

- Vectored Interrupts
  - Handler address determined by the cause
- Example:

Undefined opcode:	C000 0000
Overflow:	C000 0020
…:	C000 0040

- Instructions either
  - Deal with the interrupt, or
  - Jump to real handler

Handler Actions

- Read cause, and transfer to relevant handler
- Determine action required
- If restartable
  - Take corrective action
  - use EPC to return to program
- Otherwise
  - Terminate program
  - Report error using EPC, cause, …

Exceptions in a Pipeline

- Another form of control hazard
- Consider overflow on add in EX stage

  `add $1, $2, $1`

  - Prevent $1 from being clobbered
  - Complete previous instructions
  - Flush add and subsequent instructions
  - Set Cause and EPC register values
  - Transfer control to handler
- Similar to mispredicted branch
  - Use much of the same hardware

Pipeline with Exceptions

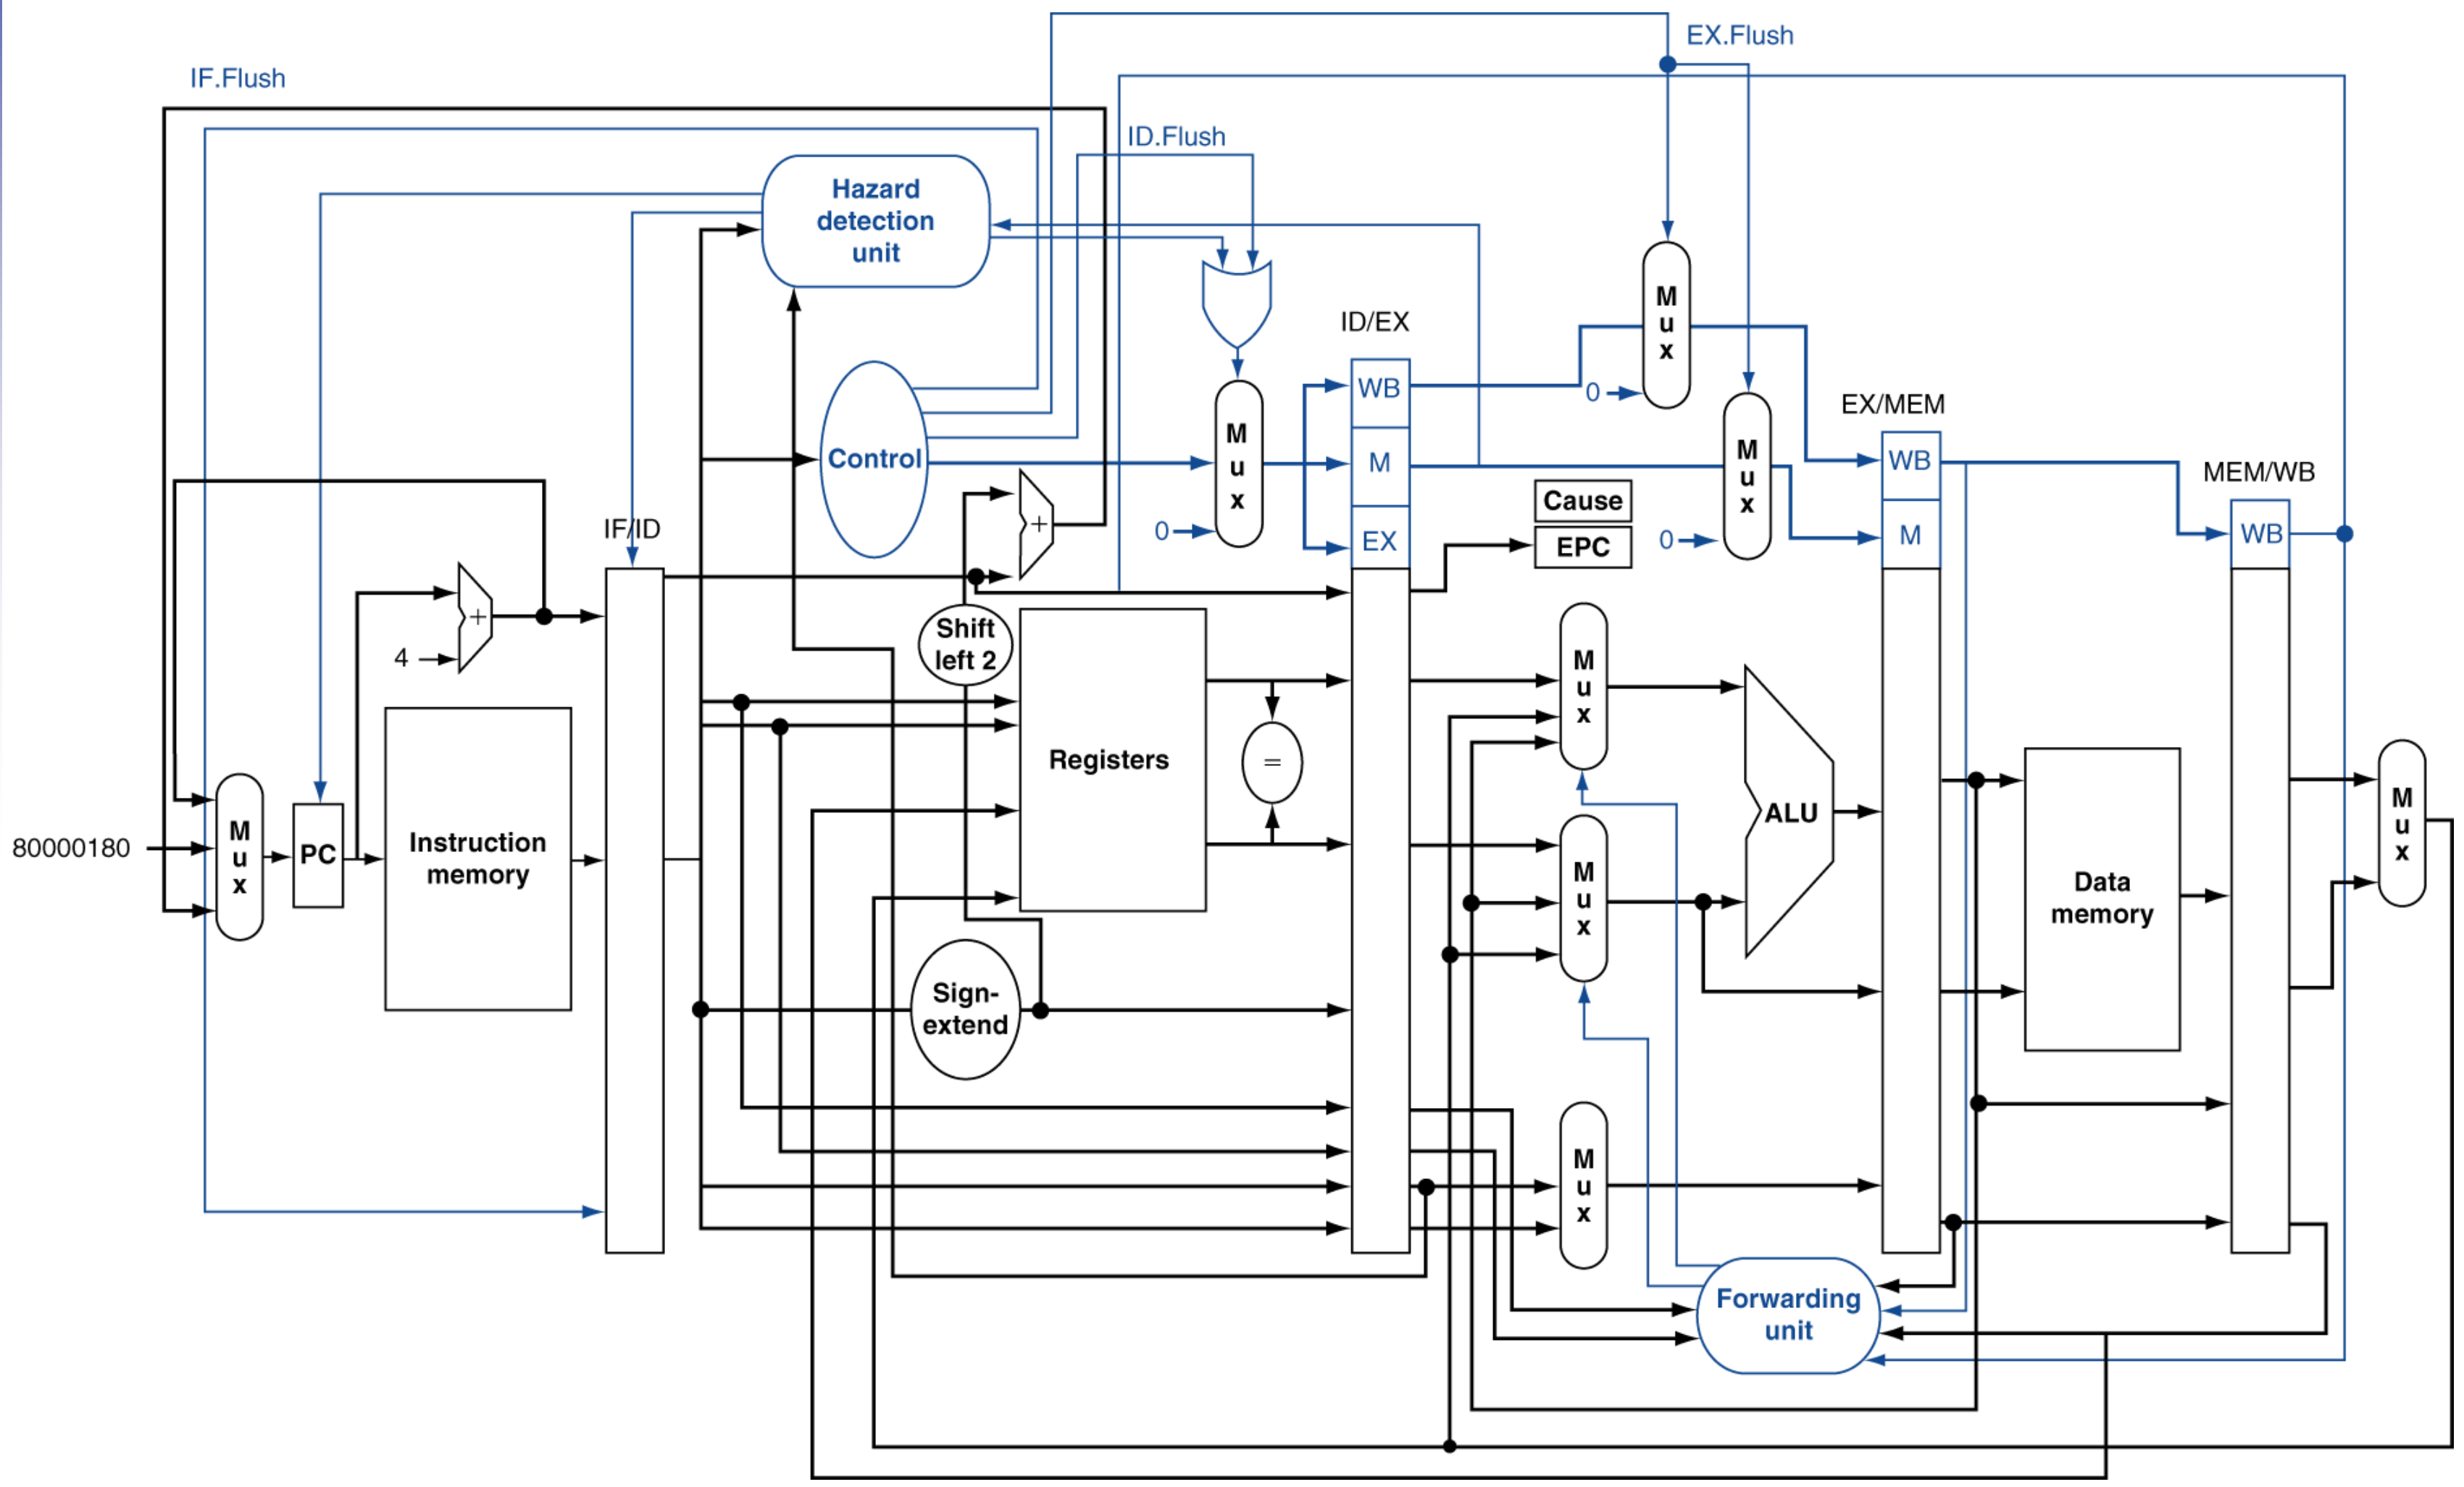

Exception Properties

- Restartable exceptions
  - Pipeline can flush the instruction
  - Handler executes, then returns to the instruction
    - Refetched and executed from scratch
- PC saved in EPC register
  - Identifies causing instruction
  - Actually PC + 4 is saved
    - Handler must adjust

Exception Example

- Exception on add in

```
40      sub   $11, $2, $4
44      and   $12, $2, $5
48      or    $13, $2, $6
4C      add   $1,  $2, $1
50      slt   $15, $6, $7
54      lw    $16, 50($7)
…
```

- Handler

```
80000180    sw    $25, 1000($0)
80000184    sw    $26, 1004($0)
…
```

Exception Example

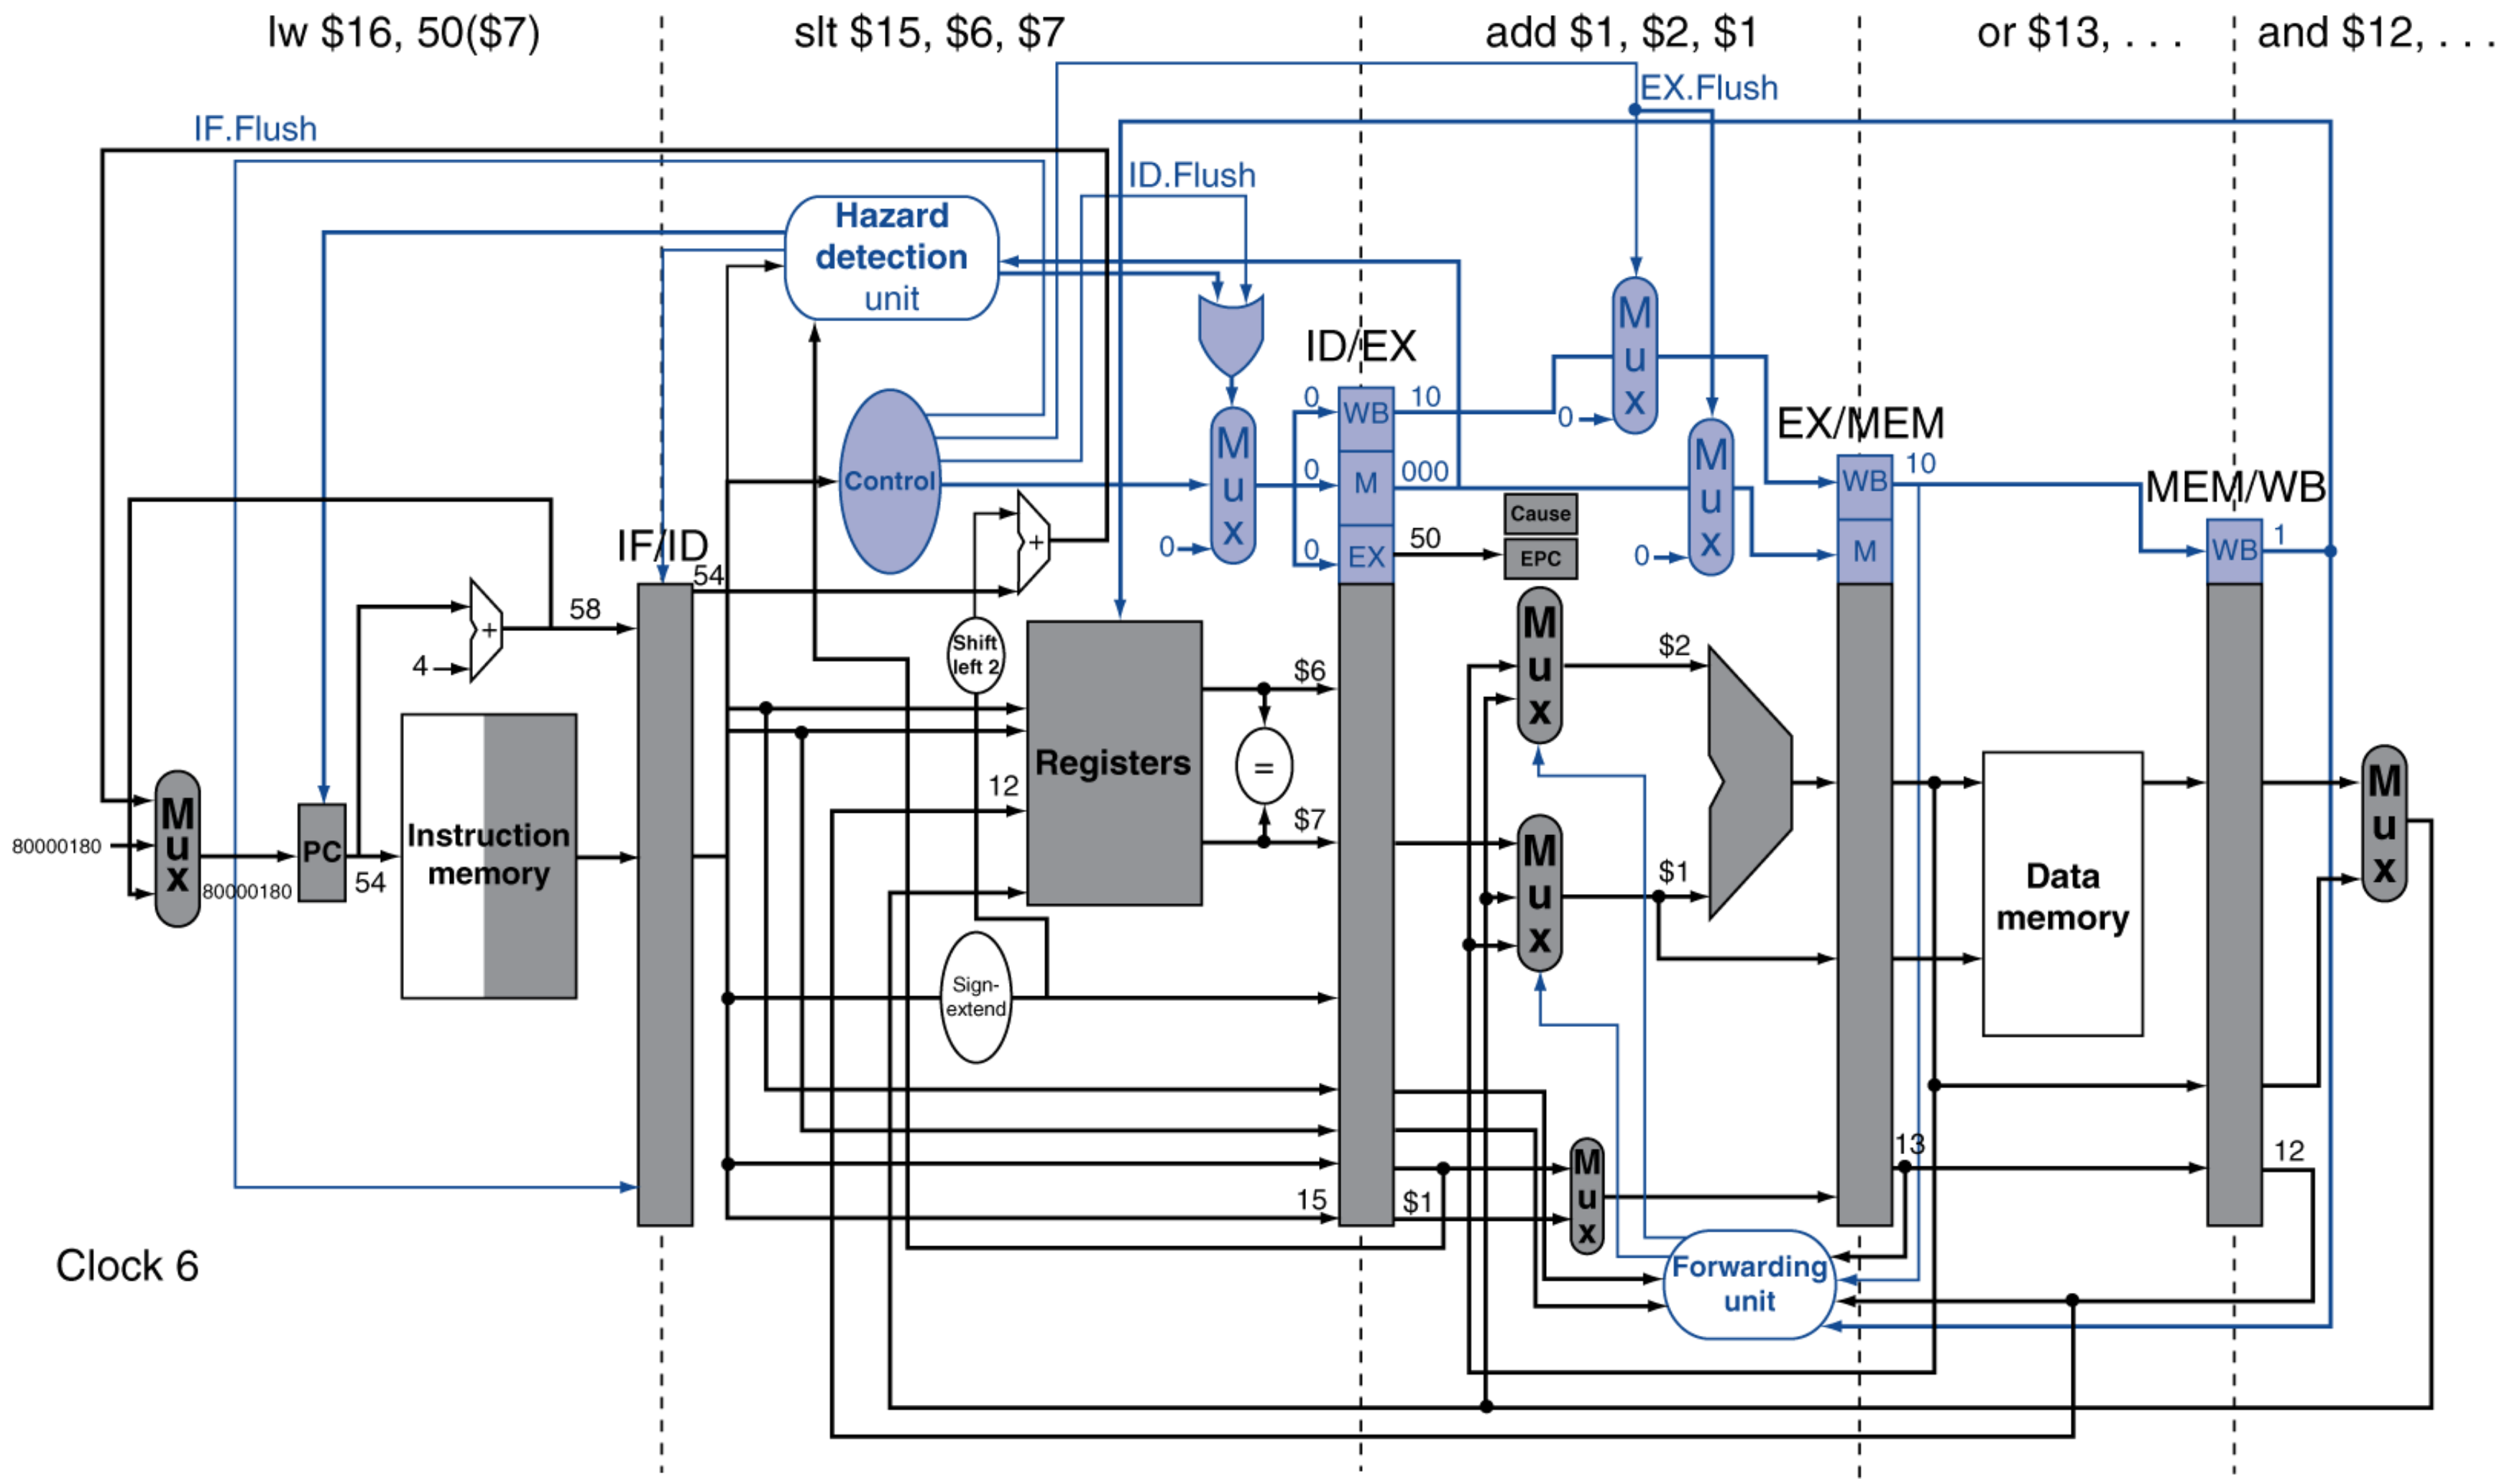

Clock 6

Exception Example

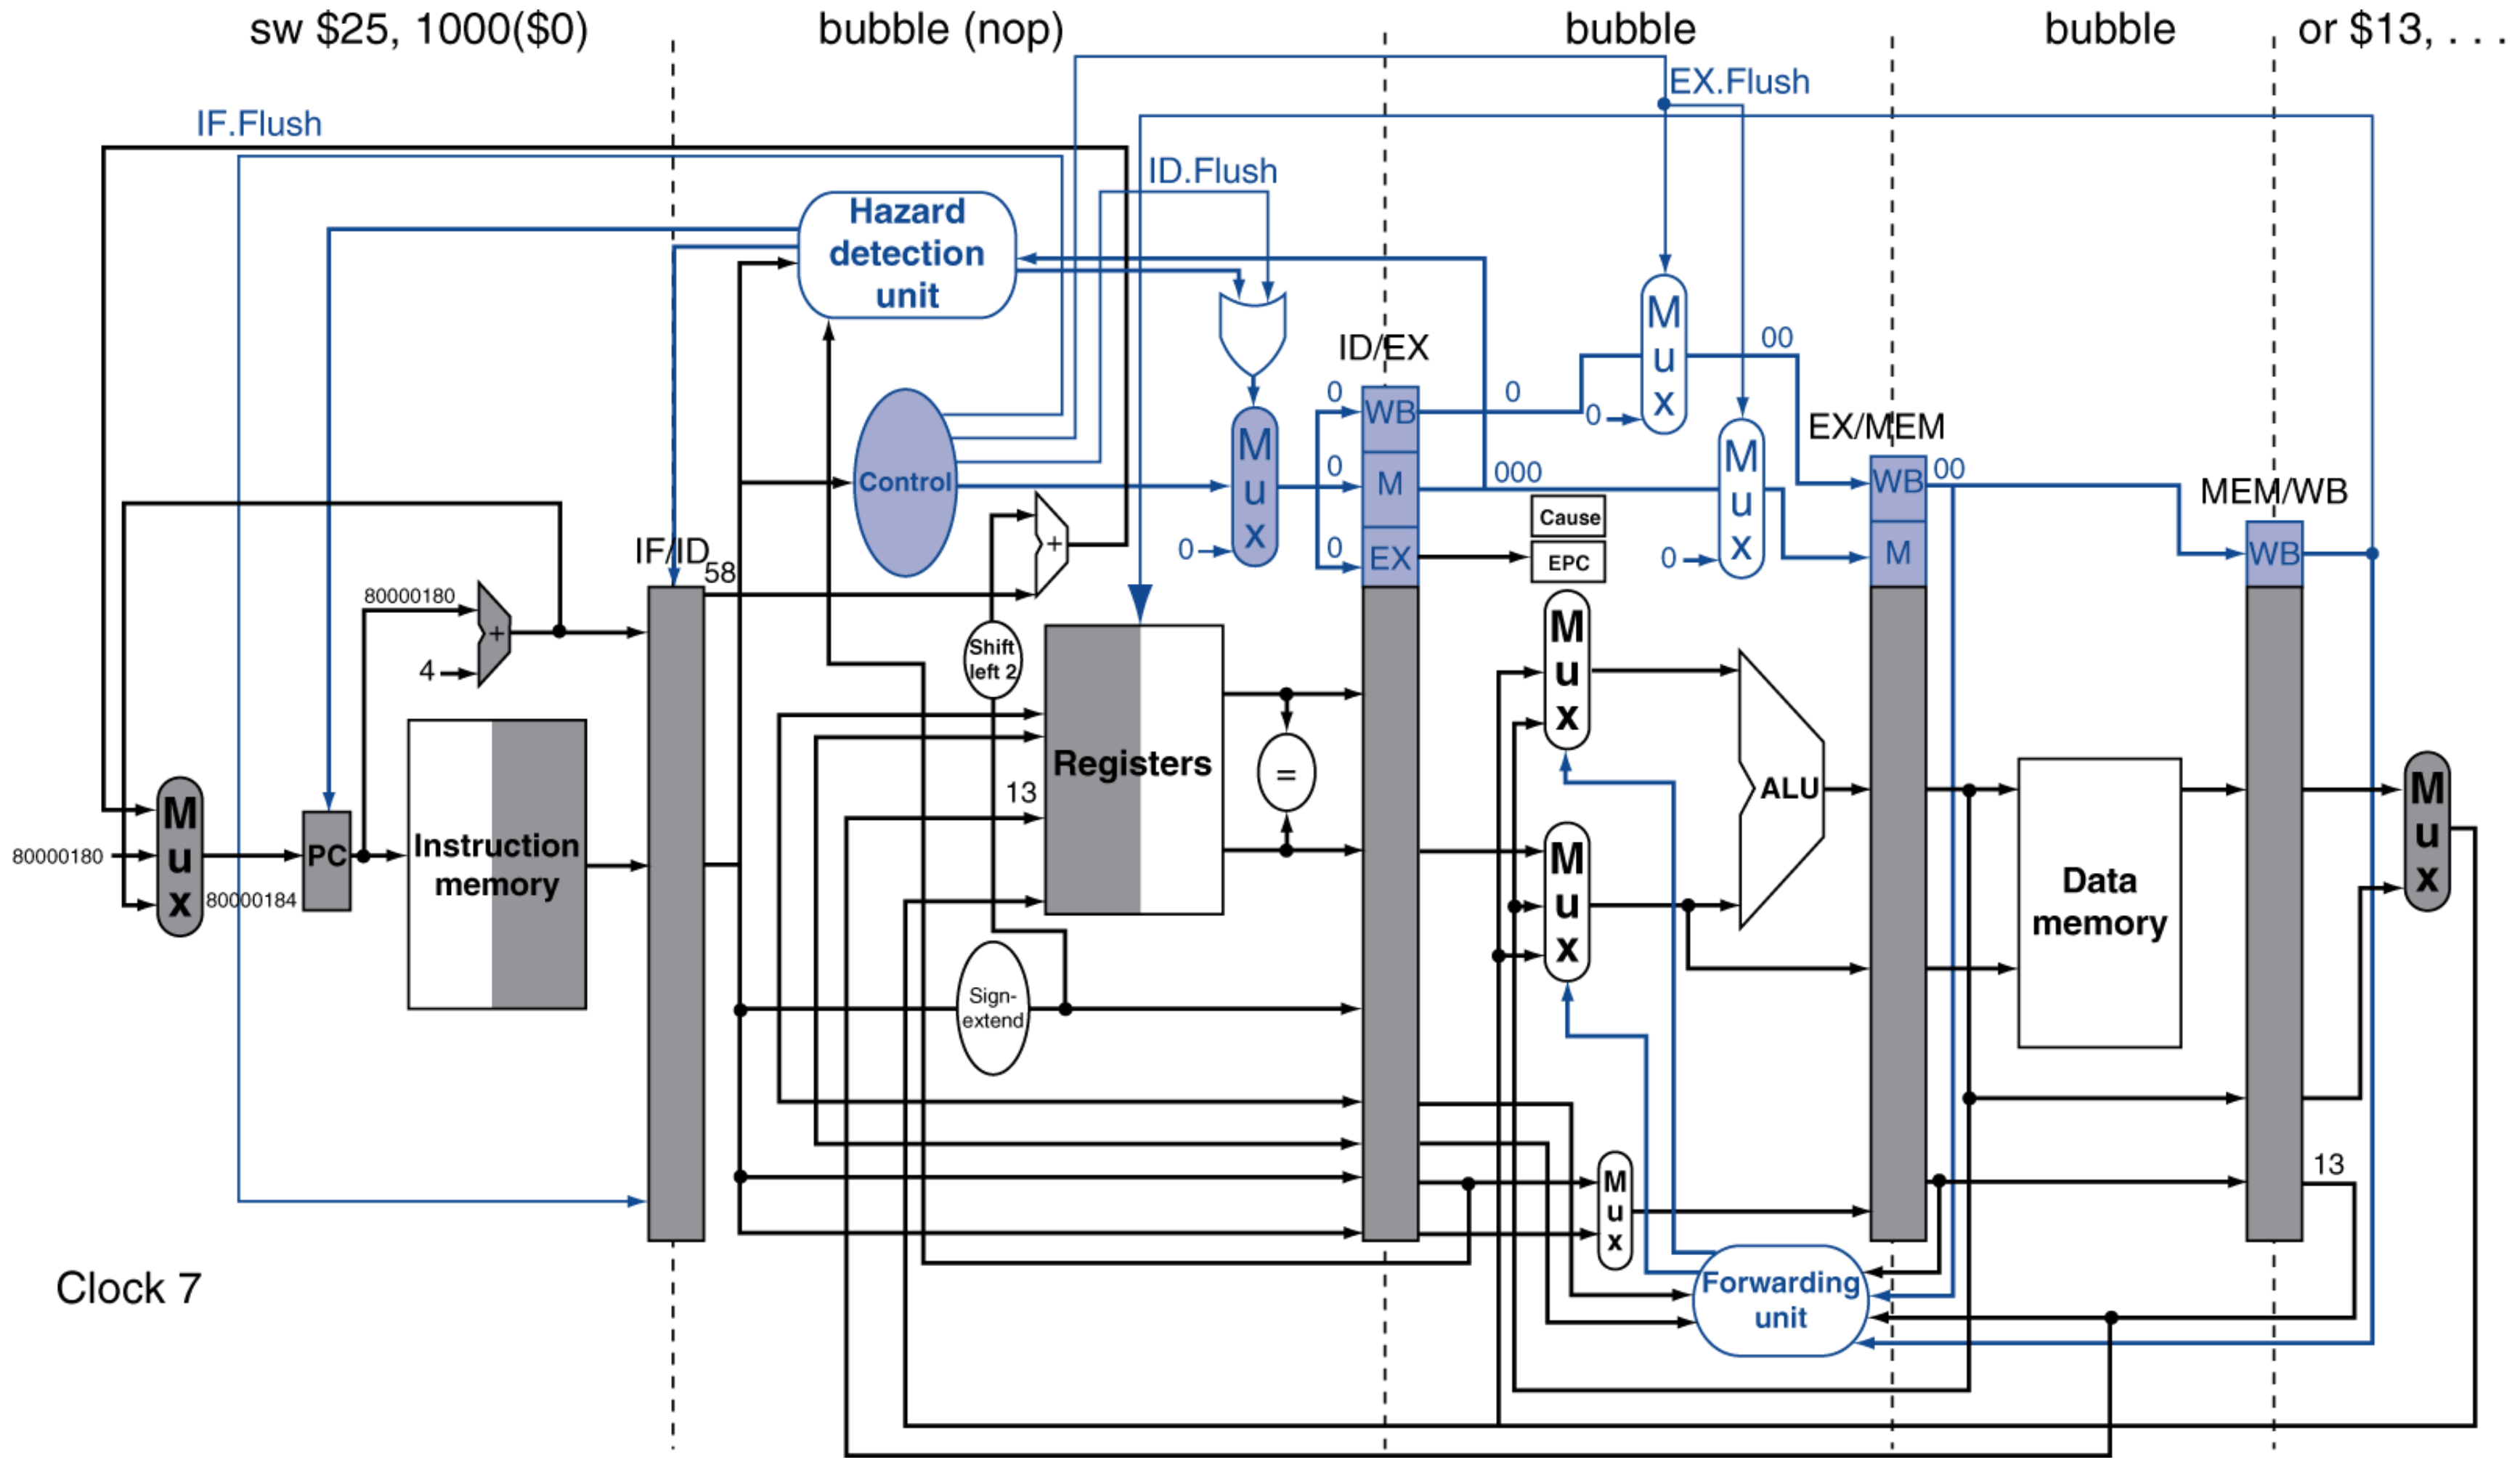

Multiple Exceptions

- Pipelining overlaps multiple instructions
  - Could have multiple exceptions at once
- Simple approach: deal with exception from earliest instruction
  - Flush subsequent instructions
  - "Precise" exceptions
- In complex pipelines
  - Multiple instructions issued per cycle
  - Out-of-order completion
  - Maintaining precise exceptions is difficult!

Imprecise Exceptions

- Just stop pipeline and save state
  - Including exception cause(s)
- Let the handler work out
  - Which instruction(s) had exceptions
  - Which to complete or flush
    - May require "manual" completion
- Simplifies hardware, but more complex handler software
- Not feasible for complex multiple-issue out-of-order pipelines