
# **POWER CONSUMPTION**

ble\_beacon

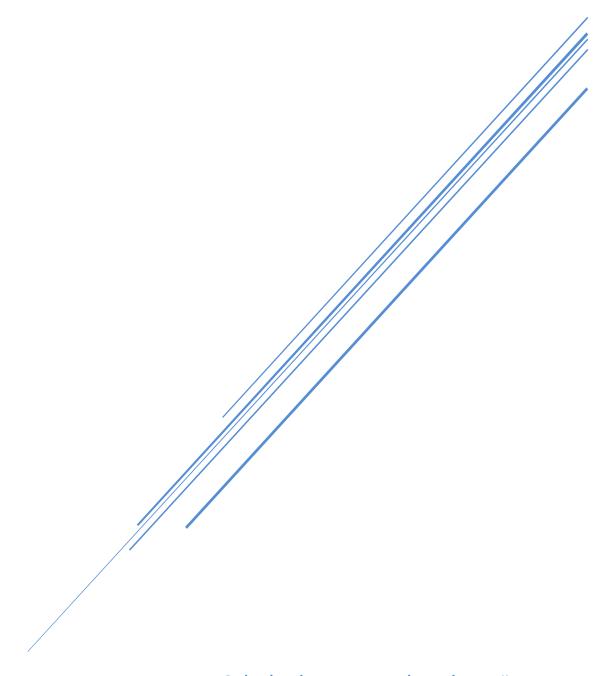

Schule der ansprechenden Künste Andreas Erdmann

1	Pow	er Consumption – ble_beacon	3
	1.1	Summary	3
	1.2	Baseline – the starting point	4
	1.2.	1 Calculation	4
	1.2.	SoftDevice flashed, no app flashed	4
	1.2.	SoftDevice, just go to idle mode	5
	1.2.	SoftDevice, init bsp (led off), and just go to idle mode	5
	1.2.	SoftDevice, init bsp (with one led on), and just go to idle mode	5
	1.2.	SoftDevice, init bsp (led off) + twi_config + (both) sensor_init	6
	1.2.	SoftDevice, init bsp (led off) + twi_config + no sensor_init	6
	1.2.	SoftDevice, init bsp (led off) + twi_config + only kx022 init	6
	1.2.	SoftDevice, init bsp (led off) + twi_config + only SHT3 init	7
	1.2. adv	SoftDevice, init bsp (led off) + twi_config + SHT3 but no KX022, no sensor data + BI 7	LE
	1.2. adv	11 SoftDevice, init bsp (led off) + twi_config + SHT3 but no KX022, no sensor data + BI + SAADC measurement	
	1.2. with	SoftDevice, init bsp (led off) + twi_config + SHT3 but no KX022, no sensor data + out BLE init/adv + SAADC measurement	8
	1.2. with	SoftDevice, init bsp (led off) + twi_config + SHT3 but no KX022, SHT3 measurement out BLE init/adv + SAADC measurement	
	1.2.	all but KX022 measurement, 1/8 data acquisition for SHT and SAADC	8
	1.2.	on top of 1.1.14 use different parameter	8
	1.3	Power Optimization KX022 Accelerometer	10
	1.3.	Baseline, no BLE, no sensor init	10
	1.3.	Change to TWI without transaction manager, SHT3 init and KX022 init to standby	10
	1.3.	With KX022 and SHT3 "one shot" measurement, 1 Hz	10
	1.3.	4 Overall	11
	1.3.	5 Cycle	12
	1.4	Use RTC INT for while waiting for accel data	12
	1.4.	1 Baseline	12
	1.4. duri	Use RTC counter (freq 1/256) for KX022 "put to operation", "wait for accel data", ang SHT3 temp/hum measurement (w/max. 15ms time)	
	1.4.		
	1.5	Further optimization	
	1.5.		
		3 values KX022: ODR 1600 -> delay time 3ms	

	1.5.	one minute, analog to 1.3.3	
	1.5.	3 KX022: ODR 200 -> delay time 7ms	
	1.5.	one minute, analog to 1.3.3	
	1.6	Longer intervals between adv and samples	
	1.7 Button functionality introduced		
2	2 Original Beacon Firmware (for comparison)		
3	Used configuration		

# 1 Power Consumption – ble\_beacon

In the first part in chapter 1.2 we measure the power consumption with the current implementation. We'll identify in sections 1.2.14 and 1.2.15.1 that everything is ok but the accelerometer. Thus, in the following chapter 1.3 we will focus on optimizing the accelerometer usage.

Anyway, the different measurements and information we get from different configurations is interesting, so we will keep this information in the document, too, as a reference and starting point for other interested people during their optimization.

#### 1.1 Summary

In this document we show on how we did the power consumption optimization on the Bluetooth low energy (BLE) device based on Nordic Semiconductor NRF52832.

Our first straight forward implementation states a high usage of around 3.6 mA (see section 1.2.6), which gives a life time based on one cell coin battery (CR2032) of ~1.8 days (220mAh/3.6mA \* 70% = ~42h), which is far too short. In comparison, the supplier's original firmware of that devices has a consumption of 577  $\mu$ A, which corresponds to ~11 days (220mAh/577 $\mu$ A \* 70% = ~267h), and which is not acceptable, too.

With our optimization we were able to reach an average consumption of 14.4 μA, which gives:

220mAh / 0,0144mA \* 0,7 = 10.694 h = ~1.2 Years

The **main reason** we identified was the usage of the KX022 accelerometer. In the IIC initialization sequence we must allow the device a 1.2/ODR delay time when transitioning from stand-by to operating mode to allow new settings to load (as stated in the data sheet). Otherwise, the power consumption will stay high. Because there is no delay function in the TWI transaction manager (but you can use blocking functions), we decided to switch to a blocking TWI mode and don't use the transaction manager in a combined blocking and non-blocking mode. See section 1.3.3.1 for the specific results.

A further optimization is to use the RTC INT and go to sleep while waiting for accel data by setting a timer with the appropriate delay, see section 1.4.2. With these measures the power consumption goes down to 15  $\mu$ A.

Another approach was to use a **nested approach** to first initiate the long running temperature and humidity data request, get the accel data, and then retrieve the temperature/humidity data. Section 1.5.4 shows the results. This gives no noteworthy further improvement.

Finally, **tuning the intervals** between BLE advertising and samples leads us to a result of  $^{\sim}14.4 \,\mu\text{A}$ , see secsion 1.6, which is considered as our new baseline.

I recommend a check against these values for all upcoming releases, e.g. the button introduction, as done in section 1.7.

#### 1.2 Baseline – the starting point

The baseline for the device is measured with only the SoftDevice S132 (Bluetooth 5 Central and Peripheral protocol stack) and no app flashed.

#### 1.2.1 Calculation

From the data sheets for the NRF52832, KX022 (accelerometer) and SHT3 (temperature/humidity sensor) we get the following data which leads to a calculated power consumption.

NRF52 device		
tbd		


KX022 device		
High power mode	145 μA@2.5 V	
Low power mode	10 μΑ	
Standby	0.9 μΑ	

SHT3 device	
Idle state	0.2 μA (max 2 μA)
Average	2 μA while measuring w/lowest repeat.+ single shot


Overall we thus can expect a power consumption as stated in the following table:

Overall			
NRF52			
KX022			
SHT3			
SUM	-		


#### 1.2.2 SoftDevice flashed, no app flashed

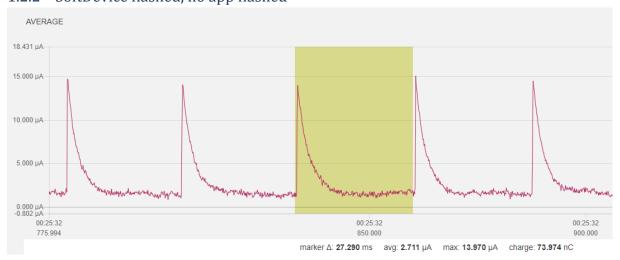


# 1.2.3 SoftDevice, just go to idle mode

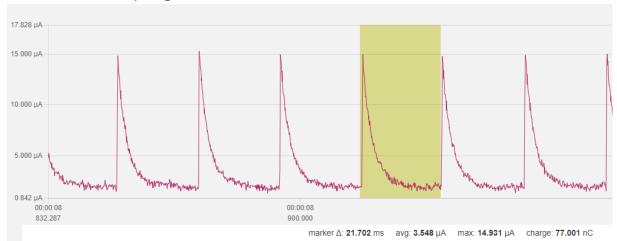


# 1.2.4 SoftDevice, init bsp (led off), and just go to idle mode

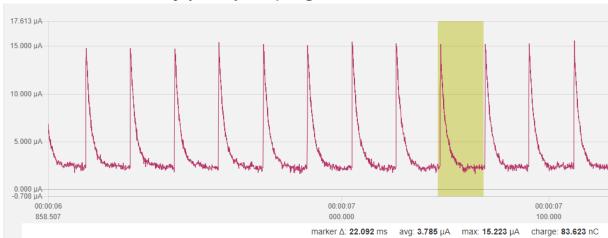


# 1.2.5 SoftDevice, init bsp (with one led on), and just go to idle mode

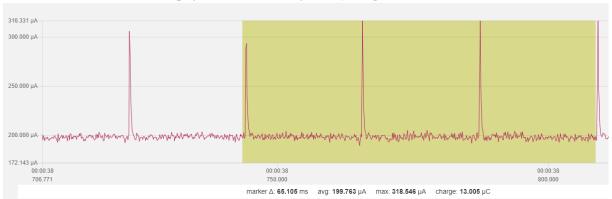


# 1.2.6 SoftDevice, init bsp (led off) + twi\_config + (both) sensor\_init

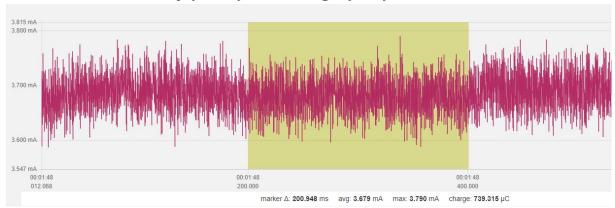


#### 1.2.7 SoftDevice, init bsp (led off) + twi\_config + no sensor\_init

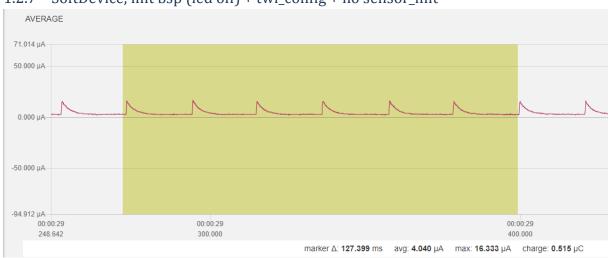

#### 1.2.8 SoftDevice, init bsp (led off) + twi\_config + only kx022 init

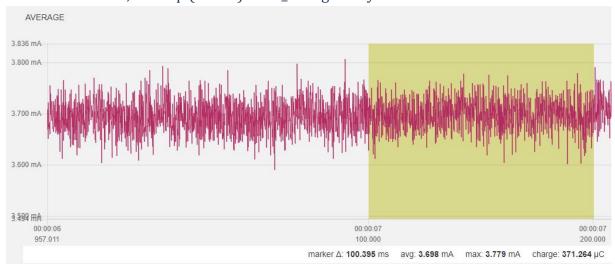


# 1.2.9 SoftDevice, init bsp (led off) + twi\_config + only SHT3 init

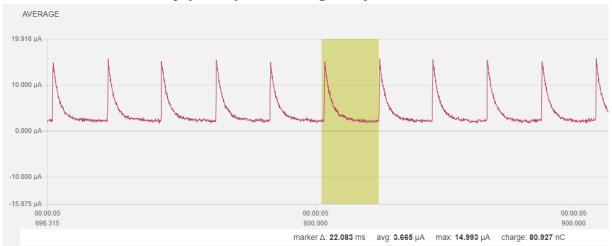


# 1.2.10 SoftDevice, init bsp (led off) + twi\_config + SHT3 but no KX022, no sensor data + BLE adv




# 1.2.11 SoftDevice, init bsp (led off) + twi\_config + SHT3 but no KX022, no sensor data + BLE adv + SAADC measurement

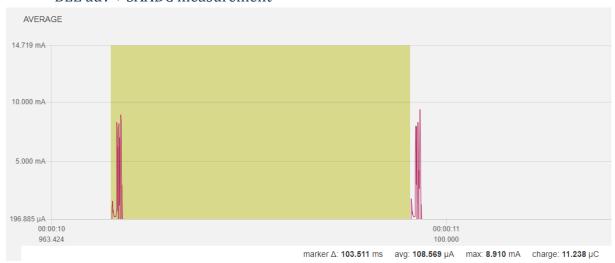

# 1.2.12 SoftDevice, init bsp (led off) + twi\_config + SHT3 but no KX022, no sensor data + without BLE init/adv + SAADC measurement

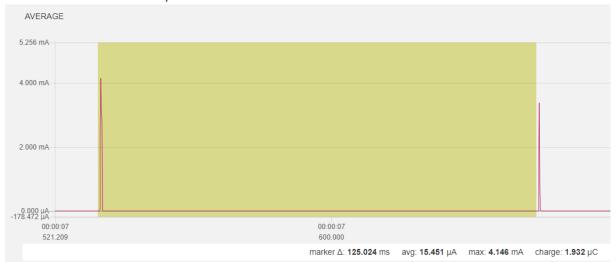

# 1.2.13 SoftDevice, init bsp (led off) + twi\_config + SHT3 but no KX022, SHT3 measurement + without BLE init/adv + SAADC measurement

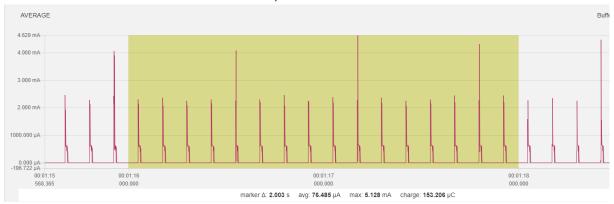


#### 1.2.14 all but KX022 measurement, 1/8 data acquisition for SHT and SAADC



#### 1.2.15 on top of 1.2.14 use different parameter


reduce transmit power to 0dBm from +4dBm
 adv int to 1 sec from 1/10 sec
 SHT update int to 5 sec from 1/8 sec
 SADC update int to 10 sec from 1/8 sec

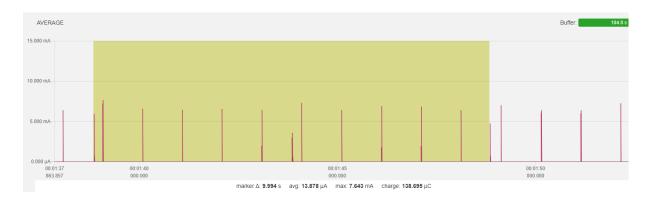


#### 1.2.15.1 Sensor update (all 5 sec)



# 1.2.15.2 Adv (all 1 sec)

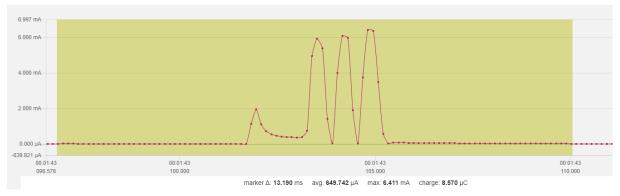

#### 1.2.15.3 Startup

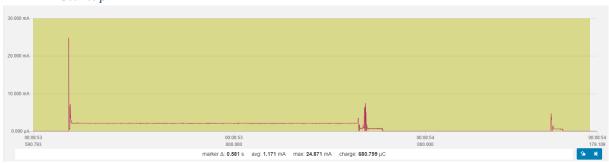

- Peaks
  - Power on peak
  - o First adv
  - o First sensor acquisition


# 1.3 Power Optimization KX022 Accelerometer

As we saw in the previous chapter, we need to focus on optimizing the KX022 accelerometer power consumption.


#### 1.3.1 Baseline, no BLE, no sensor init



#### 1.3.2 Change to TWI without transaction manager, SHT3 init and KX022 init to standby

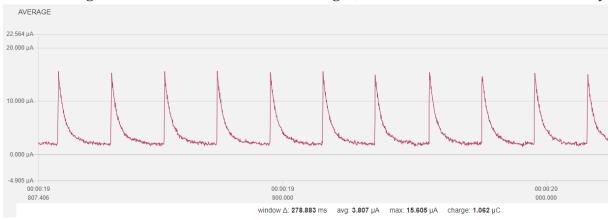

#### 1.3.3 With KX022 and SHT3 "one shot" measurement, 1 Hz

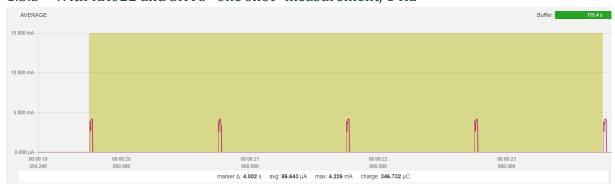

#### 1.3.3.1 One measurement



Init KX022, Standby 1,2ms
wait 1.2/ODR 3ms
set to operate 0,5ms
wait 1.2/ODR for value 3ms
read accel values

SUM ~8ms


Set SHT3 to SHT3\_MEAS\_HIGHREP\_STRETCH

wait clock stretch 12,5ms read temperature and humidity 2,8ms SUM ~15ms


Process data and sleep again...

Overall cycle 25ms, avg. power consumption 3,5mA, idle < 4uA


#### 1.3.4 Overall

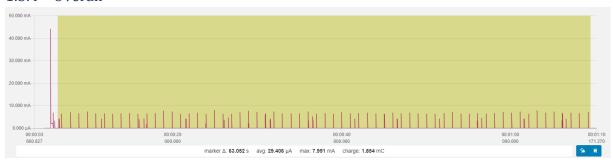

### 1.3.4.1 One 10sec cycle

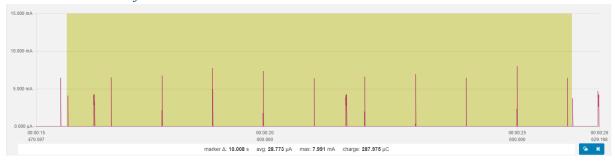

#### 1.3.5 Cycle

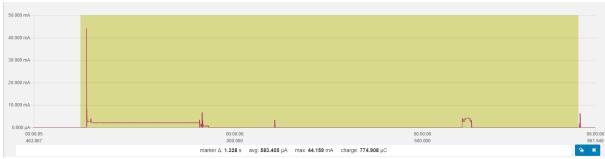

BLE 0 dBm, adv. interval 1s sensor (SHT3 and KX022) interval 5s SAADC (battery level) interval 10s

overall power consumption ~30uA (28,77uA)

idle power consumption 3,5uA

#### 1.4 Use RTC INT for while waiting for accel data


#### 1.4.1 Baseline



# 1.4.2 Use RTC counter (freq 1/256) for KX022 "put to operation", "wait for accel data", and during SHT3 temp/hum measurement (w/max. 15ms time)



#### 1.4.3 one minute, analog to 1.3.4

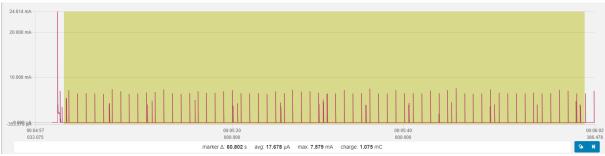

Optimization summary (1.3.4→1.4.3) BLE 0 dBm, adv. interval

sensor (SHT3 and KX022) interval SAADC (battery level) interval

1s 5s 10s


### 1.5 Further optimization

# 1.5.1 Using nested approach: start long running SHT3 first, complete KX022 tasks and read SHT3 values

KX022: ODR 1600 -> delay time 3ms




#### 1.5.2 one minute, analog to 1.4.3

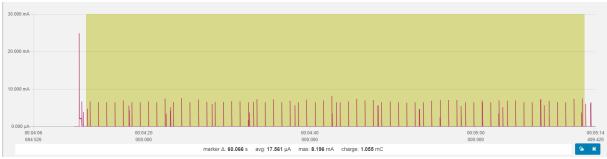

thus, no real further improvement

#### 1.5.3 KX022: ODR 200 -> delay time 7ms

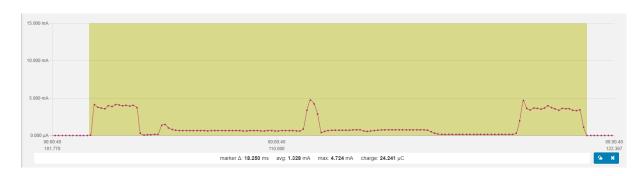


# 1.5.4 one minute, analog to 1.4.3



thus, no real further improvement

# 1.6 Longer intervals between adv and samples

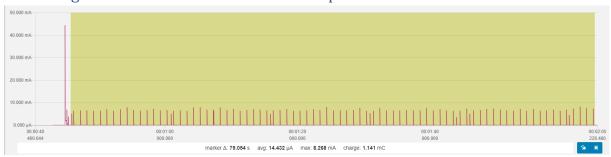


BLE 0 dBm, adv. interval 1s sensor (SHT3 and KX022) interval 15s SAADC (battery level) interval 60s overall power consumption 14,4uA idle power consumption 3,6 uA


220mAh / 0,0144mA \* 0,7 = 10.694 h = ~1.2 Years

(> 1 Year = 365 \* 24h = 8760h; CR2032 = 220 mAh)

# 1.7 Button functionality introduced

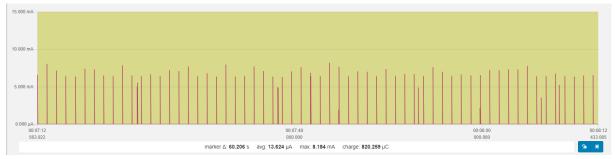

#### Single button press

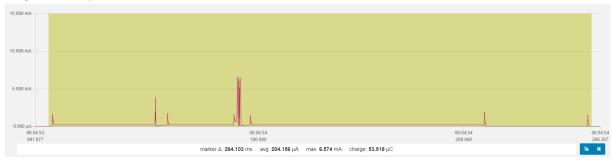

# 2 Original Beacon Firmware (for comparison)



#### Frequent spikes (5 Hz)



### Larger but rarer spikes (1 Hz)



# 3 Used configuration

O .			
Component	Remark		
BLE Beacon with KX022, SHT3, Button, LED	Product <u>Link</u> from Alibaba		
Nordic Semiconductor NRF52832			
nRF5 SDK	Version: 15.2.0		
SoftDevice \$132	S132 SoftDevice v6.1.0		
J-LINK EDU MINI	Segger Microcontroller Systems		
Nordic Power Profiler Kit	Nordic Semiconductor		
nRF52840 Dongle	Nordic Semiconductor		
KEIL MDK-Lite	Version: 5.27.0.0		
Github repository	https://github.com/an-erd/ble_beacon		