# Computer Organization CS1403

#### Instruction Set

- The repertoire of instructions of a computer
- Different computers: different instruction sets
  - But with many aspects in common
- Early computers: very simple instruction sets
  - Simplified implementation
- Many modern computers also have simple instruction sets

#### The MIPS Instruction Set

- Used as the example throughout our course
- Stanford MIPS commercialized by MIPS Technologies (<u>www.mips.com</u>)
- Large share of embedded core market
  - Applications in consumer electronics, network/storage equipment, cameras, printers, ...

## **Arithmetic Operations**

- Add and subtract, three operands
  - Two sources and one destination
  - add a, b, c # a gets b + c
- All arithmetic operations have this form
- Design Principle 1: Simplicity favours regularity
  - Regularity makes implementation simpler
  - Simplicity enables higher performance at lower cost

## **Arithmetic Example**

• C code:

```
f = (g + h) - (i + j);
```

Compiled MIPS code:

```
add t0, g, h # temp t0 = g + h add t1, i, j # temp t1 = i + j sub f, t0, t1 # f = t0 - t1
```

## Register Operands

- Arithmetic instructions use register operands
- MIPS has a 32 × 32-bit register file
  - Use for frequently accessed data
  - Numbered 0 to 31
  - 32-bit data called a "word"
- Assembler names
  - \$t0, \$t1, ..., \$t9 for temporary values
  - + \$50, \$\$1, ..., \$\$7 for saved variables
- Design Principle 2: Smaller is faster
  - c.f. main memory: millions of locations

## Register Operand Example

• C code:

```
f = (g + h) - (i + j);
- f, ..., j in $s0, ..., $s4
```

Compiled MIPS code:

```
add $t0, $s1, $s2
add $t1, $s3, $s4
sub $s0, $t0, $t1
```

## **Memory Operands**

- Main memory used for composite data
  - Arrays, structures, dynamic data
- To apply arithmetic operations
  - Load values from memory into registers
  - Store result from register to memory
- Memory is byte addressed
  - Each address identifies an 8-bit byte
- Words are aligned in memory
  - Address must be a multiple of 4
- MIPS is Big Endian
  - Most-significant byte at least address of a word
  - c.f. Little Endian: least-significant byte at least address

## Memory Operand Example 1

C code:

```
g = h + A[8];
```

- g in \$s1, h in \$s2, base address of A in \$s3
- Compiled MIPS code:
  - Index 8 requires offset of 32
    - 4 bytes per word

```
lw $t0, 32($s3) # load word
add $s1, $s2, $t0

offset base register
```

## Memory Operand Example 2

C code:

```
A[12] = h + A[8];
- h in $s2, base address of A in $s3
```

- Compiled MIPS code:
  - Index 8 requires offset of 32

```
lw $t0, 32($s3)  # load word
add $t0, $s2, $t0
sw $t0, 48($s3)  # store word
```

## Registers vs. Memory

- Registers are faster to access than memory
- Operating on memory data requires loads and stores
  - More instructions to be executed
- Compiler must use registers for variables as much as possible
  - Only spill to memory for less frequently used variables
  - Register optimization is important!

## **Immediate Operands**

- Constant data specified in an instruction addi \$s3, \$s3, 4
- No subtract immediate instruction
  - Just use a negative constantaddi \$s2, \$s1, -1
- Design Principle 3: Make the common case fast
  - Small constants are common
  - Immediate operand avoids a load instruction

#### The Constant Zero

- MIPS register 0 (\$zero) is the constant 0
  - Cannot be overwritten
- Useful for common operations
  - E.g., move between registersadd \$t2, \$s1, \$zero

## **Unsigned Binary Integers**

Given an n-bit number

$$x = x_{n-1}2^{n-1} + x_{n-2}2^{n-2} + \cdots + x_12^{1} + x_02^{0}$$

- Range: 0 to +2<sup>n</sup> 1
- Example
  - 0000 0000 0000 0000 0000 0000 1011<sub>2</sub>

$$= 0 + ... + 1 \times 2^{3} + 0 \times 2^{2} + 1 \times 2^{1} + 1 \times 2^{0}$$
  
=  $0 + ... + 8 + 0 + 2 + 1 = 11_{10}$ 

- Using 32 bits
  - 0 to +4,294,967,295

#### 2s-Complement Signed Integers

Given an n-bit number

$$X = -X_{n-1}2^{n-1} + X_{n-2}2^{n-2} + \cdots + X_12^1 + X_02^0$$

- **Range:**  $-2^{n-1}$  to  $+2^{n-1}-1$
- Example
- Using 32 bits
  - -2,147,483,648 to +2,147,483,647

### 2s-Complement Signed Integers

- Bit 31 is sign bit
  - 1 for negative numbers
  - 0 for non-negative numbers
- $-(-2^{n-1})$  can't be represented
- Non-negative numbers have the same unsigned and 2s-complement representation
- Some specific numbers

```
- 0: 0000 0000 ... 0000
```

- -1: 1111 1111 ... 1111

Most-negative: 1000 0000 ... 0000

- Most-positive: 0111 1111 ... 1111

## Signed Negation

- Complement and add 1
  - Complement means  $1 \rightarrow 0, 0 \rightarrow 1$

$$x + \bar{x} = 1111...111_2 = -1$$
  
 $\bar{x} + 1 = -x$ 

- Example: negate +2
  - **+**2 = 0000 0000 ... 0010<sub>2</sub>

$$-2 = 1111 \ 1111 \ \dots \ 1101_2 + 1$$
  
= 1111 \ 1111 \ \dots \ 1110\_2

## Sign Extension

- Representing a number using more bits
  - Preserve the numeric value
- In MIPS instruction set
  - addi: extend immediate value
  - lb, lh: extend loaded byte/halfword
  - beq, bne: extend the displacement
- Replicate the sign bit to the left
  - c.f. unsigned values: extend with 0s
- Examples: 8-bit to 16-bit
  - +2: 0000 0010 => 0000 0000 0000 0010
  - -2: 1111 1110 => 1111 1111 1111 1110

## Representing Instructions

- Instructions are encoded in binary
  - Called machine code
- MIPS instructions
  - Encoded as 32-bit instruction words
  - Small number of formats encoding operation code (opcode), register numbers, ...
  - Regularity!
- Register numbers
  - \$t0 \$t7 are reg's 8 15
  - \$t8 \$t9 are reg's 24 25
  - \$s0 \$s7 are reg's 16 23

#### MIPS R-format Instructions

ор	rs	rt	rd	shamt	funct
6 bits	5 bits	5 bits	5 bits	5 bits	6 bits

#### Instruction fields

- op: operation code (opcode)
- rs: first source register number
- rt: second source register number
- rd: destination register number
- shamt: shift amount (00000 for now)
- funct: function code (extends opcode)

R-format Example

ор		rs	rt	rd	shamt	funct
6 bits	6	5 bits	5 bits	5 bits	5 bits	6 bits

add \$t0, \$s1, \$s2

special	\$s1	\$s2	\$t0	0	add
0	17	18	8	0	32
000000	10001	10010	01000	00000	100000

 $0000010001100100100000000100000_2 = 02324020_{16}$ 

#### Hexadecimal

- Base 16
  - Compact representation of bit strings
  - 4 bits per hex digit

0	0000	4	0100	8	1000	С	1100
1	0001	5	0101	9	1001	d	1101
2	0010	6	0110	a	1010	е	1110
3	0011	7	0111	b	1011	f	1111


- Example: eca8 6420
  - 1110 1100 1010 1000 0110 0100 0010 0000


#### **MIPS I-format Instructions**

ор	rs	rt	constant or address
6 bits	5 bits	5 bits	16 bits

- Immediate arithmetic and load/store instructions
  - rt: destination or source register number
  - Constant: -2<sup>15</sup> to +2<sup>15</sup> 1
  - Address: offset added to base address in rs
- Design Principle 4: Good design demands good compromises
  - Different formats complicate decoding, but allow 32-bit instructions uniformly
  - Keep formats as similar as possible

## **Stored Program Computers**

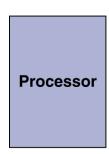

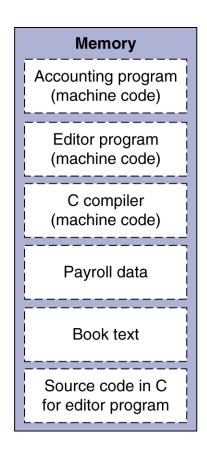

- Instructions represented in binary, just like data
- Instructions and data stored in memory
- Programs can operate on programs
  - e.g., compilers, linkers, ...
- Binary compatibility allows compiled programs to work on different computers
  - Standardized ISAs

## **Logical Operations**

Instructions for bitwise manipulation

Operation	С	Java	MIPS
Shift left	<<	<<	sll
Shift right	>>	>>>	srl
Bitwise AND	&	&	and, andi
Bitwise OR			or, ori
Bitwise NOT	~	~	nor

 Useful for extracting and inserting groups of bits in a word

## **Shift Operations**



- shamt: how many positions to shift
- Shift left logical
  - Shift left and fill with 0 bits
  - sll by i bits multiplies by 2i
- Shift right logical
  - Shift right and fill with 0 bits
  - srl by i bits divides by 2<sup>i</sup> (unsigned only)

## **AND Operations**

- Useful to mask bits in a word
  - Select some bits, clear others to 0

```
and $t0, $t1, $t2
```

```
$t2 | 0000 0000 0000 00<mark>00 11</mark>01 1100 0000
```

\$t0 | 0000 0000 0000 00<mark>00 11</mark>00 0000 0000

## **OR Operations**

- Useful to include bits in a word
  - Set some bits to 1, leave others unchanged

```
or $t0, $t1, $t2
```

## **NOT Operations**

- Useful to invert bits in a word
  - Change 0 to 1, and 1 to 0
- MIPS has NOR 3-operand instruction

```
-a NOR b == NOT (a OR b)
```

```
nor $t0, $t1, $zero ←
```

Register 0: always read as zero

```
$t1 | 0000 0000 0000 0001 1100 0000 0000
```

\$t0 | 1111 1111 1111 1100 0011 1111 1111

## **Conditional Operations**


- Branch to a labeled instruction if a condition is true
  - Otherwise, continue sequentially
- beq rs, rt, L1
  - if (rs == rt) branch to instruction labeled L1;
- bne rs, rt, L1
  - if (rs != rt) branch to instruction labeled L1;
- j L1
  - unconditional jump to instruction labeled L1

## **Compiling If Statements**

• C code:

Exit:

```
if (i==j) f = g+h;
else f = g-h;
-f, g, ... in $s0, $s1, ...
```

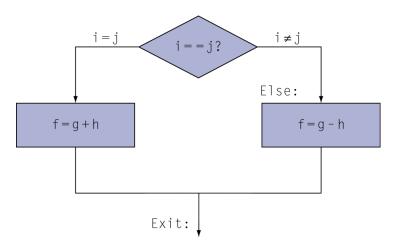

Compiled MIPS code:

```
bne $s3, $s4, Else
add $s0, $s1, $s2
j Exit
Else: sub $s0, $s1, $s2
```

Assembler calculates addresses

## **Compiling Loop Statements**

• C code:


```
while (save[i] == k) i += 1;
  -iin $s3, k in $s5, address of save in $s6
```

Compiled MIPS code:

```
Loop: sll $t1, $s3, 2
add $t1, $t1, $s6
lw $t0, 0($t1)
bne $t0, $s5, Exit
addi $s3, $s3, 1
j Loop
Exit: ...
```

#### **Basic Blocks**

- A basic block is a sequence of instructions with
  - No embedded branches (except at end)
  - No branch targets (except at beginning)

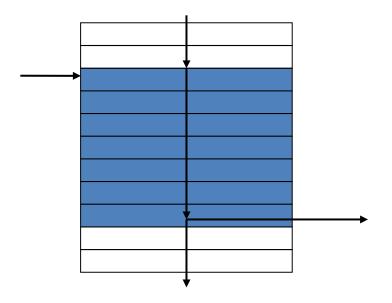

- A compiler identifies basic blocks for optimization
- An advanced processor can accelerate execution of basic blocks

## More Conditional Operations

- Set result to 1 if a condition is true
  - Otherwise, set to 0
- slt rd, rs, rt
  - if (rs < rt) rd = 1; else rd = 0;
- slti rt, rs, constant
  - if (rs < constant) rt = 1; else rt = 0;
- Use in combination with beq, bne

```
slt $t0, $s1, $s2 # if ($s1 < $s2)
bne $t0, $zero, L # branch to L</pre>
```

## **Branch Instruction Design**

- Why not blt, bge, etc?
- Hardware for <, ≥, ... slower than =, ≠</li>
  - Combining with branch involves more work per instruction, requiring a slower clock
  - All instructions penalized!
- beq and bne are the common case
- This is a good design compromise

## Signed vs. Unsigned

- Signed comparison: slt, slti
- Unsigned comparison: sltu, sltui
- Example

  - $-\$s1 = 0000\ 0000\ 0000\ 0000\ 0000\ 0000\ 0000$
  - -slt \$t0, \$s0, \$s1 # signed • -1 < +1  $\Rightarrow$  \$t0 = 1
  - -sltu \$t0, \$s0, \$s1 # unsigned
    - $+4,294,967,295 > +1 \Rightarrow $t0 = 0$

# **Procedure Calling**

- Steps required
  - 1. Place parameters in registers
  - 2. Transfer control to procedure
  - 3. Acquire storage for procedure
  - 4. Perform procedure's operations
  - 5. Place result in register for caller
  - 6. Return to place of call

### Register Usage

- \$a0 \$a3: arguments (reg's 4 7)
- \$v0, \$v1: result values (reg's 2 and 3)
- \$t0 \$t9: temporaries
  - Can be overwritten by callee
- \$s0 \$s7: saved
  - Must be saved/restored by callee
- \$gp: global pointer for static data (reg 28)
- \$sp: stack pointer (reg 29)
- \$fp: frame pointer (reg 30)
- \$ra: return address (reg 31)

### **Procedure Call Instructions**

- Procedure call: jump and link jal ProcedureLabel
  - Address of following instruction put in \$ra
  - Jumps to target address
- Procedure return: jump register
   jr \$ra
  - Copies \$ra to program counter
  - Can also be used for computed jumps
    - e.g., for case/switch statements

# Leaf Procedure Example

• C code:

```
int leaf example (int g, h, i, j)
{ int f;
  f = (q + h) - (i + j);
  return f;
Arguments g, ..., j in $a0, ..., $a3
- f in $s0 (hence, need to save $s0 on stack)
Result in $v0
```

# Leaf Procedure Example

### MIPS code:

<pre>leaf_example:</pre>			
addi	\$sp,	\$sp,	-4
SW	\$s0,	0(\$sp	)
add	\$t0,	\$a0,	\$a1
add	\$t1,	\$a2,	\$a3
sub	\$s0,	\$t0,	\$t1
add	\$v0,	\$s0,	
٦w	\$s0,	0(\$sp	)
addi	\$sp,	\$sp,	4
jr	\$ra		

Save \$s0 on stack

Procedure body

Result

Restore \$s0

Return

### Non-Leaf Procedures

- Procedures that call other procedures
- For nested call, caller needs to save on the stack:
  - Its return address
  - Any arguments and temporaries needed after the call
- Restore from the stack after the call

### Non-Leaf Procedure Example


C code: int fact (int n) if (n < 1) return 1; else return n \* fact(n - 1); Argument n in \$a0 Result in \$v0

### Non-Leaf Procedure Example

### MIPS code:

```
fact:
                        # adjust stack for 2 items
   addi $sp, $sp, -8
   sw $ra, 4($sp)
                        # save return address
   sw $a0, 0($sp)
                        # save argument
                        # test for n < 1
   slti $t0. $a0. 1
   beq $t0, $zero, L1
   addi $v0, $zero, 1 # if so, result is 1
   addi $sp, $sp, 8
                        # pop 2 items from stack
   jr $ra
                        # and return
L1: addi $a0, $a0, -1
                        # else decrement n
   jal fact
                        # recursive call
   lw $a0, 0($sp)
                        # restore original n
   lw $ra, 4($sp)
                        # and return address
   addi $sp, $sp, 8
                        # pop 2 items from stack
                        # multiply to get result
        $v0, $a0, $v0
   mul
   jr
        $ra
                        # and return
```


### Local Data on the Stack

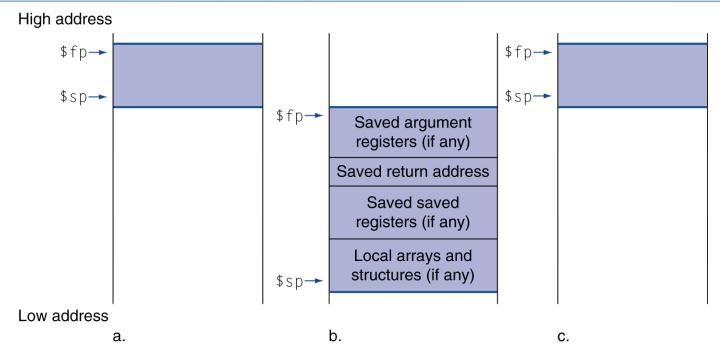

- Local data allocated by callee
  - e.g., C automatic variables
- Procedure frame (activation record)
  - Used by some compilers to manage stack storage

### Memory Layout

- Text: program code
- Static data: global variables
  - e.g., static variables in C,
     constant arrays and strings
  - \$gp initialized to address allowing ±offsets into this segment
- Dynamic data: heap
  - E.g., malloc in C, new in Java
- Stack: automatic storage

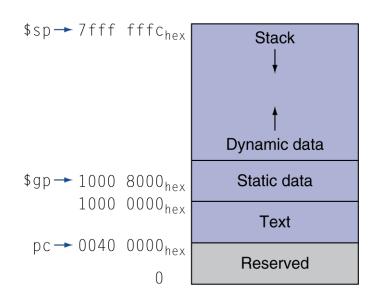

### **Character Data**

- Byte-encoded character sets
  - ASCII: 128 characters
    - 95 graphic, 33 control
  - Latin-1: 256 characters
    - ASCII, +96 more graphic characters
- Unicode: 32-bit character set
  - Used in Java, C++ wide characters, ...
  - Most of the world's alphabets, plus symbols
  - UTF-8, UTF-16: variable-length encodings

### **Byte/Halfword Operations**

- MIPS byte/halfword load/store
  - String processing is a common case

Sign extend to 32 bits in rt

```
lbu rt, offset(rs) lhu rt, offset(rs)
```

- Zero extend to 32 bits in rt

```
sb rt, offset(rs) sh rt, offset(rs)
```

Store just rightmost byte/halfword

# **String Copy Example**

C code (naïve):

```
    Null-terminated string

void strcpy (char x[], char y[])
{ int i;
  i = 0;
  while ((x[i]=y[i])!='\setminus0')
     i += 1;
Addresses of x, y in $a0, $a1
-i in $s0
```

### **String Copy Example**

### MIPS code:


```
strcpy:
   addi $sp, $sp, -4
                          # adjust stack for 1 item
        $s0, 0($sp)
                          # save $s0
   SW
   add $s0, $zero, $zero # i = 0
L1: add $t1, $s0, $a1
                          # addr of y[i] in $t1
   1bu $t2, 0($t1)
                          # $t2 = y[i]
   add $t3, $s0, $a0
                          # addr of x[i] in $t3
   sb $t2, 0($t3)
                          \# x[i] = y[i]
                          # exit loop if y[i] == 0
   beq $t2, $zero, L2
   addi $s0, $s0, 1
                          # i = i + 1
                          # next iteration of loop
        L1
L2: lw $s0, 0($sp)
                          # restore saved $s0
   addi $sp, $sp, 4
                          # pop 1 item from stack
        $ra
                          # and return
   jr
```

### 32-bit Constants

- Most constants are small
  - 16-bit immediate is sufficient
- For the occasional 32-bit constant
   lui rt, constant
  - Copies 16-bit constant to left 16 bits of rt
  - Clears right 16 bits of rt to 0

# **Branch Addressing**

- Branch instructions specify
  - Opcode, two registers, target address
- Most branch targets are near branch
  - Forward or backward

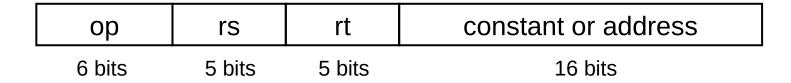

- PC-relative addressing
  - Target address = PC + offset × 4
  - PC already incremented by 4 by this time

# Jump Addressing


- Jump (j and jal) targets could be anywhere in text segment
  - Encode full address in instruction

ор	address
6 bits	26 bits

- (Pseudo)Direct jump addressing
  - Target address =  $PC_{31...28}$ : (address × 4)

### Target Addressing Example

- Loop code from earlier example
  - Assume Loop at location 80000

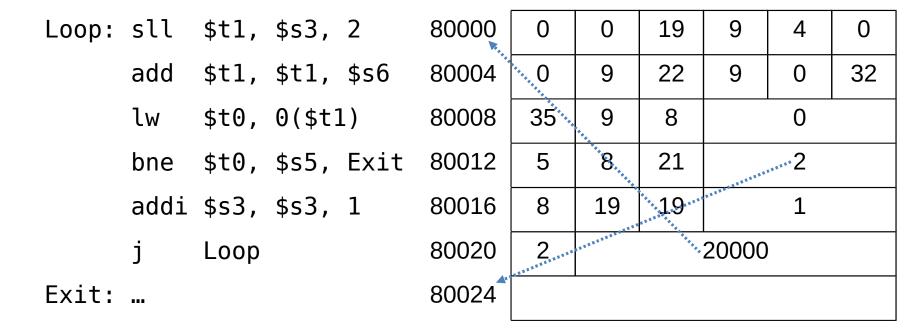

### **Branching Far Away**

- If branch target is too far to encode with 16bit offset, assembler rewrites the code
- Example

# Addressing Mode Summary


#### 1. Immediate addressing




#### 2. Register addressing




#### 3. Base addressing

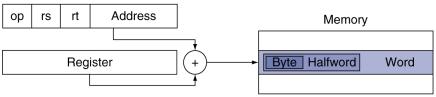


#### 4. PC-relative addressing

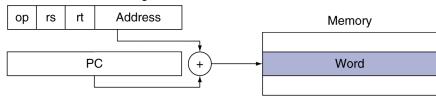

#### 5. Pseudodirect addressing

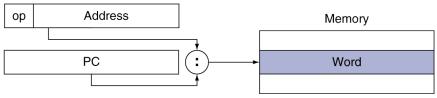

### **Translation and Startup**

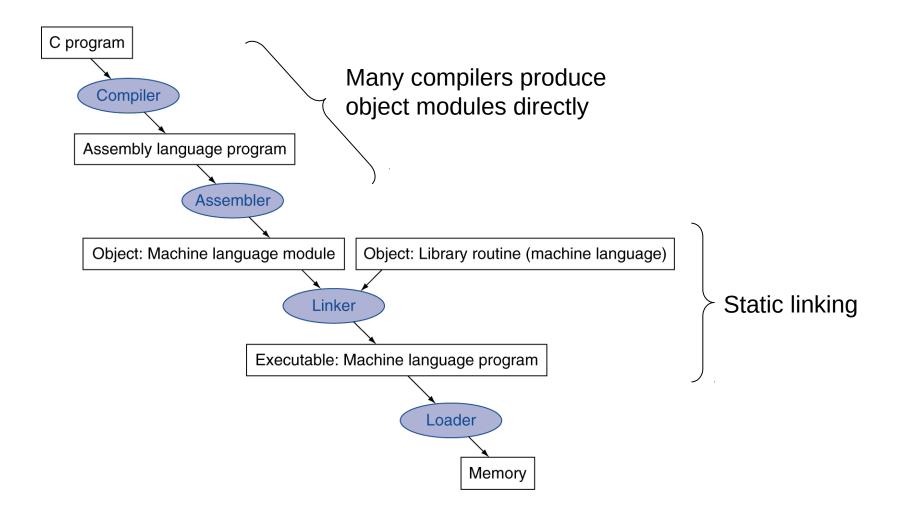

### **Assembler Pseudo-instructions**

- Most assembler instructions represent machine instructions one-to-one
- Pseudoinstructions: figments of the assembler's imagination

```
move $t0, $t1 \rightarrow add $t0, $zero, $t1 blt $t0, $t1, L \rightarrow slt $at, $t0, $t1 bne $at, $zero, L
```

- \$at (register 1): assembler temporary

# Producing an Object Module

- Assembler (or compiler) translates program into machine instructions
- Provides information for building a complete program from the pieces
  - Header: described contents of object module
  - Text segment: translated instructions
  - Static data segment: data allocated for the life of the program
  - Relocation info: for contents that depend on absolute location of loaded program
  - Symbol table: global definitions and external refs
  - Debug info: for associating with source code

# **Linking Object Modules**

- Produces an executable image
  - 1. Merges segments
  - 2. Resolve labels (determine their addresses)
  - 3. Patch location-dependent and external refs
- Could leave location dependencies for fixing by a relocating loader
  - But with virtual memory, no need to do this
  - Program can be loaded into absolute location in virtual memory space

# **Loading a Program**

- Load from image file on disk into memory
  - 1. Read header to determine segment sizes
  - 2. Create virtual address space
  - 3. Copy text and initialized data into memory
    - Or set page table entries so they can be faulted in
  - 4. Set up arguments on stack
  - 5. Initialize registers (including \$sp, \$fp, \$gp)
  - 6. Jump to startup routine
    - Copies arguments to \$a0, ... and calls main
    - When main returns, do exit syscall

# **Dynamic Linking**

- Only link/load library procedure when it is called
  - Requires procedure code to be relocatable
  - Avoids image bloat caused by static linking of all (transitively) referenced libraries
  - Automatically picks up new library versions


# Lazy Linkage


Indirection table


Stub: Loads routine ID, Jump to linker/loader

Linker/loader code

Dynamically mapped code

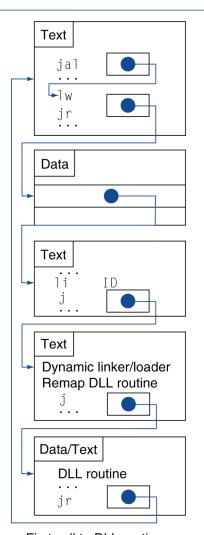


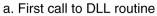

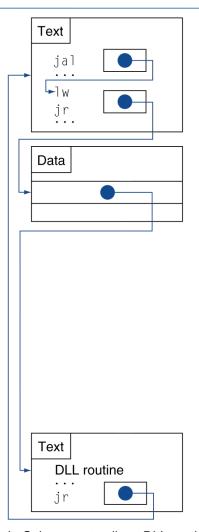

b. Subsequent calls to DLL routine

# **Starting Java Applications**

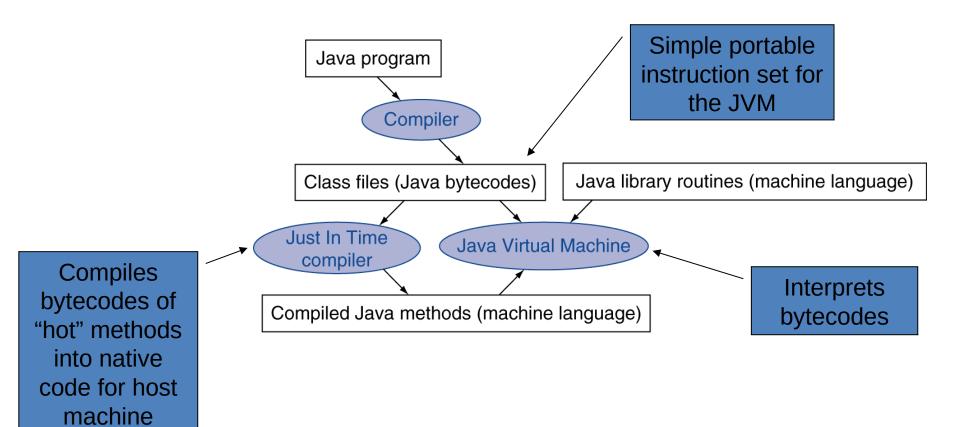

# C Sort Example

- Illustrates use of assembly instructions for a C bubble sort function
- Swap procedure (leaf)

```
void swap(int v[], int k)
    int temp;
    temp = v[k];
   v[k] = v[k+1];
   v[k+1] = temp;
v in $a0, k in $a1, temp in $t0
```

Mayank Pandey, MNNIT, Allahabad, India

### The Procedure Swap

### The Sort Procedure in C

```
    Non-leaf (calls swap)

    void sort (int v[], int n)
       int i, j;
       for (i = 0; i < n; i += 1) {
         for (j = i - 1;
               j >= 0 \&\& v[j] > v[j + 1];
               i -= 1) {
            swap(v,j);
  v in $a0, k in $a1, i in $s0, j in $s1
```

# The Procedure Body

```
move $s2, $a0
                                                                                            # save $a0 into $s2
                                                                                                                                                                                                                     Move
                           move $s3, $a1  # save $a1 into $s3
                                                                                                                                                                                                                      params
                           move $s0, $zero
                                                                                             # i = 0
                                                                                                                                                                                                                     Outer loop
for1tst: slt $t0, $s0, $s3 # $t0 = 0 \text{ if } $s0 \ge $s3 (i \ge n)
                           beg $t0, $zero, exit1 # go to exit1 if $s0 \ge $s3 (i \ge n)
                           addi \$s1, \$s0, -1 # i = i - 1
for 2 tst: s1ti $t0, $s1, 0 # $t0 = 1 if $s1 < 0 (j < 0)
                           bne t0, zero, exit2 # go to exit2 if s1 < 0 (j < 0)
                           s11 $t1, $s1, 2 # $t1 = j * 4
                                                                                                                                                                                                                    Inner loop
                           add $t2, $s2, $t1 # $t2 = v + (j * 4)
                           w $t3, 0($t2) # $t3 = v[i]
                           \frac{1}{w} $t4, 4($t2) # $t4 = v[j + 1]
                           10^{10} \text{ s} 10, 10^{10} \text{ s} 11, 10^{10} \text{ s} 11, 10^{10} \text{ s} 12, 10^{10} \text{ s} 13, 10^{10} \text{ s} 13, 10^{10} \text{ s} 15, 10^{10} \text{ s} 16, 10^{10} \text{ s} 17, 10^{
                           beg $t0, $zero, exit2 # go to exit2 if $t4 ≥ $t3
                           move $a0, $s2 # 1st param of swap is v (old $a0)
                                                                                                                                                                                                                    Pass
                           move $a1, $s1 # 2nd param of swap is j
                                                                                                                                                                                                                      params
                                                                                                                                                                                                                     & call
                                                                        # call swap procedure
                           jal swap
                           addi $s1, $s1, -1 # j -= 1
                                                                                                                                                                                                                    Inner loop
                                          for2tst # jump to test of inner loop
exit2:
                           addi $s0, $s0, 1
                                                                                                     \# i += 1
                                                                                                                                                                                                                     Outer loop
                                          for1tst
                                                                                                     # jump to test of outer loop
```

### The Full Procedure

```
# make room on stack for 5 registers
        addi $sp,$sp, -20
sort:
        sw $ra, 16($sp)
                               # save $ra on stack
        sw $s3,12($sp)
                               # save $s3 on stack
        sw $s2, 8($sp)
                             # save $s2 on stack
        sw $s1, 4($sp)
                             # save $s1 on stack
        sw $s0, 0($sp)
                               # save $s0 on stack
                               # procedure body
                               # restore $s0 from stack
        exit1: lw $s0, 0($sp)
        lw $s1, 4($sp)
                               # restore $s1 from stack
        lw $s2, 8($sp)
                               # restore $s2 from stack
        lw $s3,12($sp)
                               # restore $s3 from stack
        lw $ra,16($sp)
                               # restore $ra from stack
         addi $sp,$sp, 20
                               # restore stack pointer
         ir $ra
                               # return to calling routine
```

### Arrays vs. Pointers

- Array indexing involves
  - Multiplying index by element size
  - Adding to array base address
- Pointers correspond directly to memory addresses
  - Can avoid indexing complexity

# **Example: Clearing and Array**

```
clear1(int array[], int size) {
                                         clear2(int *array, int size) {
 int i;
                                           int *p;
 for (i = 0; i < size; i += 1)
                                           for (p = \&array[0]; p < \&array[size];
   array[i] = 0;
                                                p = p + 1
                                             *p = 0;
                                         }
      move $t0,$zero
                       # i = 0
                                                move $t0,$a0 # p = & array[0]
loop1: sll $t1,$t0,2 # $t1 = i * 4
                                                sll $t1,$a1,2 # $t1 = size * 4
      add $t2,$a0,$t1 # $t2 =
                                                add $t2,$a0,$t1 # $t2 =
                        # &array[i]
                                                                    &array[size]
      sw zero, 0(st2) # array[i] = 0
                                         loop2: sw zero,0(t0) # Memory[p] = 0
      addi $t0,$t0,1 # i = i + 1
                                                addi $t0,$t0,4 # p = p + 4
      slt $t3,$t0,$a1 # $t3 =
                                                slt $t3,$t0,$t2 # $t3 =
                          (i < size)
                                                                #(p<&array[size])</pre>
      bne $t3,$zero,loop1 # if (...)
                                                bne $t3,$zero,loop2 # if (...)
                           # goto loop1
                                                                    # goto loop2
```

### Comparison of Array vs. Ptr

- Multiply "strength reduced" to shift
- Array version requires shift to be inside loop
  - Part of index calculation for incremented i
  - c.f. incrementing pointer
- Compiler can achieve same effect as manual use of pointers
  - Induction variable elimination
  - Better to make program clearer and safer