the programmer can use any seconds rupt status bit must be cleared so it can be set again when a higher-priority interrupt occurs. The contents of processor registers are saved because they may be needed by the program that has been interrupted after control returns to it. The interrupt enable  $\widecheck{IEN}$  is then set to allow other (higher-priority) inter-

rupts and the computer proceeds to service the interrupt request. The final sequence in each interrupt service routine must have instruc-

tions to control the interrupt hardware in the following manner:

1. Clear interrupt enable bit IEN.

EN

2. Restore contents of processor registers.

3. Clear the bit in the interrupt register belonging to the source that has been serviced.

4. Set lower-level priority bits in the mask register.

**5.** Restore return address into *PC* and set *IEN*.



The bit in the interrupt register belonging to the source of the interrupt must be cleared so that it will be available again for the source to interrupt. The lower-priority bits in the mask register (including the bit of the source being interrupted) are set so they can enable the interrupt. The return to the interrupted program is accomplished by restoring the return address to PC. Note that the hardware must be designed so that no interrupts occur while executing steps 2 through 5; otherwise, the return address may be lost and the information in the mask and processor registers may be ambiguous if an interrupt is acknowledged while executing the operations in these steps. For this reason IEN is initially cleared and then set after the return address is transferred into PC.

The initial and final operations listed above are referred to as overhead operations or housekeeping chores. They are not part of the service program proper but are essential for processing interrupts. All overhead operations can be implemented by software. This is done by inserting the proper instructions at the beginning and at the end of each service routine. Some of the overhead operations can be done automatically by the hardware. The contents of processor registers can be pushed into a stack by the hardware before branching to the service routine. Other initial and final operations can be assigned to the hardware. In this way, it is possible to reduce the time between receipt of an interrupt and the execution of the instructions that service the interrupt

source.

## Direct Memory Access (DMA)

The transfer of data between a fast storage device such as magnetic disk and memory is often limited by the speed of the CPU. Removing the CPU from the path and letting the peripheral device manage the memory buses directly





nagnetic Dex - 3 com 3 minery

CHAPTER ELEVEN Input—Output Organization

would improve the speed of transfer. This transfer technique is called direct memory access (DMA). During DMA transfer, the CPU is idle and has no control of the memory buses. A DMA controller takes over the buses to manage the transfer directly between the I/O device and memory.


The CPU may be placed in an idle state in a variety of ways. One common method extensively used in microprocessors is to disable the buses mon method extensively used in microprocessors is to disable the buses through special control signals. Figure 11-16 shows two control signals in the CPU that facilitate the DMA transfer. The bus request (BR) input is used by the DMA controller to request the CPU to relinquish control of the buses. When DMA controller to request the CPU terminates the execution of the current instructhis input is active, the CPU terminates the execution of the current instruction and places the address bus, the data bus, and the read and write lines into tion and places the address bus, the data bus, and the read and write lines into a high-impedance state. The high-impedance state behaves like an open circuit, which means that the output is disconnected and does not have a logic significance (see Sec. 4-3). The CPU activates the bus grant (BG) output to inform the external DMA that the buses are in the high-impedance state. The DMA that originated the bus request can now take control of the buses to conduct memory transfers without processor intervention. When the DMA terminates the transfer, it disables the bus request line. The CPU disables the bus grant, takes control of the buses, and returns to its normal operation.

When the DMA takes control of the bus system, it communicates directly with the memory. The transfer can be made in several ways. In DMA burst transfer, a block sequence consisting of a number of memory words is transferred in a continuous burst while the DMA controller is master of the memory buses. This mode of transfer is needed for fast devices such as magnetic disks, where data transmission cannot be stopped or slowed down until an entire block is transferred. An alternative technique called cycle stealing allows the DMA controller to transfer one data word at a time, after which it must return control of the buses to the CPU. The CPU merely delays its operation for one memory cycle to allow the direct memory I/O transfer to "steal" one memory cycle.

**DMA** Controller

The DMA controller needs the usual circuits of an interface to communicate with the CPU and I/O device. In addition, it needs an address register, a word count register, and a set of address lines. The address register and address lines

Figure 11-16 CPU bus signals for DMA transfer.

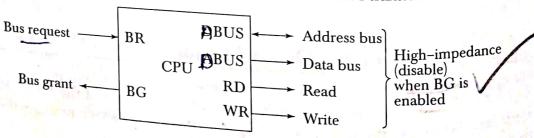

bus request

418



burst transfer


cycle stealing

Jare used for direct communication with the memory The word count register specifies the number of words that must be transferred. The data transfer may be done directly between the device and memory under control of the DMA.

Figure 11-17 shows the block diagram of a typical DMA-controller. The unit communicates with the CPU via the data bus and control lines. The registers in the DMA are selected by the CPU through the address bus by enabling the DS (DMA select) and RS (register select) inputs. The RD (read) and WR (write) inputs are bidirectional. When the BG (bus grant) input is 0, the CPU can communicate with the DMA registers through the data bus to read from or write to the DMA registers. When BG = 1, the CPU has relin quished the buses and the DMA can communicate directly with the memory by specifying an address in the address bus and activating the RD or WR control. The DMA communicates with the external peripheral through the request and acknowledge lines by using a prescribed handshaking procedure.

The DMA controller has three registers: an address register, a word count register, and a control register. The address register contains an address to specify the desired location in memory. The address bits go through bus buffers into the address bus. The address register is incremented after each word that is transferred to memory. The word count register holds the number of words to be transferred. This register is decremented by one after each word transfer and internally tested for zero. The control register specifies the mode of transfer All registers in the DMA appear to the CPU as I/O interface registers. Thus the CPU can read from or write into the DMA registers under program control via the data bus.

Figure 11-17 Block diagram of DMA controller.

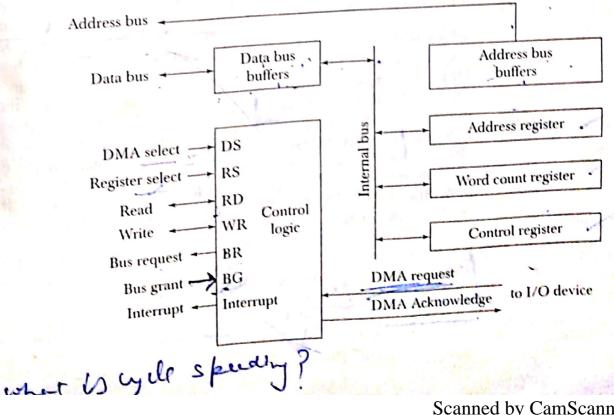

The DMA is first initialized by the CPU. After that, the DMA starts and The DMA is first initialized by continues to transfer data between memory and peripheral unit until an entire continues to transfer data between process is essentially a program continues to transfer data between an entire block is transferred. The initialization process is essentially a program consist block is transferred. block is transferred./I ne initialized the address for selecting particular DMA ing of I/O instructions that include the address for selecting particular DMA through the data bus:

- 7 1. The starting address of the memory block where data are available (for read) or where data are to be stored (for write) 2. The word count, which is the number of words in the memory block

  - 3. Control to specify the mode of transfer such as read or write
    - 4. A control to start the DMA transfer


The starting address is stored in the address register. The word count is stored in the word count register, and the control information in the control register. Once the DMA is initialized, the CPU stops communicating with the DMA unless it receives an interrupt signal or if it wants to check how many words have been transferred.

## DMA Transfer

The position of the DMA controller among the other components in a computer system is illustrated in Fig. 11-18. The ČPU communicates with the DMA through the address and data buses as with any interface unit. The DMA has its own address, which activates the DS and RS lines. The CPU initializes the DMA through the data bus Once the DMA receives the start control command, it can start the transfer between the peripheral device and the memory.

When the peripheral device sends a DMA request, the DMA controller activates the BR line, informing the CPU to relinquish the buses. The CPU responds with its BG line, informing the DMA that its buses are disabled. The DMA then puts the current value of its address register into the address bus, eral device Motor WR signal and sends a DMA acknowledge to the peripheral device. Note that the RD and WR lines in the DMA controller are bidirectional. The direction of transfer depends on the status of the BG line. When BG = 0 the RD and MDBG = 0, the RD and WR are input lines allowing the CPU to communicate with the internal DMA region. with the internal DMA registers. When BG = 1, the RD and WR are output lines from the DMA controller. lines from the DMA controller to the random-access memory to specify the read or write operation for the day.

When the peripheral device receives a DMA acknowledge, it puts a in the data bus (for write) and receives a DMA acknowledge, it puts a Word in the data bus (for write) or receives a DMA acknowledge, it purely the DMA controls the road arrange a word from the data bus (for read). Thus the DMA controls the read or write operations and supplies the address for the memory. The peripheral wait operations and supplies the address for the memory. The peripheral unit can then communicate with memory through the data bus for direct transfer to through the data bus for direct transfer between the two units while the CPU is momentarily disabled.

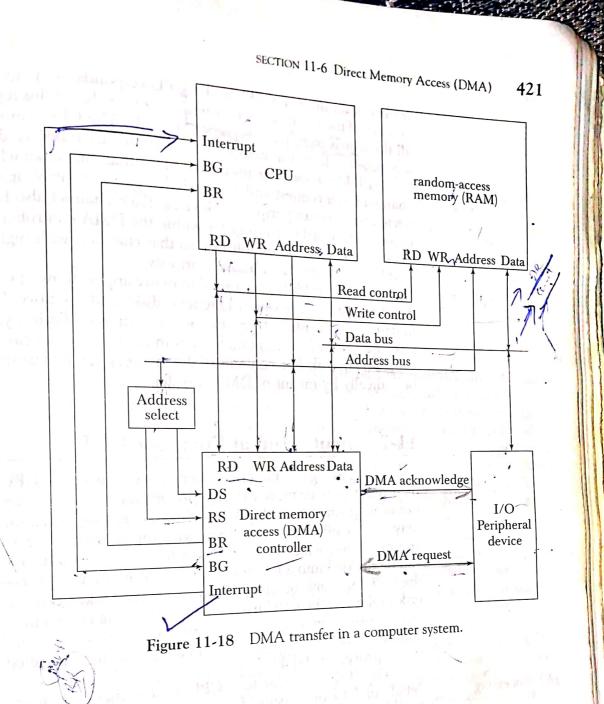

For each word that is transferred, the DMA increments its address register and decrements its word count register. If the word count does not reach zero, the DMA checks the request line coming from the peripheral. For a highspeed device, the line will be active as soon as the previous transfer is completed. A second transfer is then initiated, and the process continues until the entire block is transferred If the peripheral speed is slower, the DMA request line may come somewhat later. In this case the DMA disables the bus request line so that the CPU can continue to execute its program When the peripheral requests a transfer, the DMA requests the buses again If the word count register reaches zero, the DMA stops any further trans-

fer and removes its bus request. It also informs the CPU of the termination by

means of an interrupt. When the CPU responds to the interrupt, it reads the means of an interrupt. When the content of the word count register. The zero value of this register indicates that all the words were transferred successfully. The CPU can read this register at any time to check the number of words already transferred.

ime to check the number of control signals which A DMA controller may have a pair of control signals which are conchannel has a request and active. Each channel also has its own address nected to separate peripheral devices. Each channel also has its own address nected to separate peripheral as method to separate peripheral as register and word country are serve the channels may be established so that channels with high priority are serve iced before channels with lower priority.

DMA transfer is very useful in many applications. It is used for fast trans.

fer of information between magnetic disks and memory. It is also useful for updating the display in an interactive terminal. Typically, an image of the screen display of the terminal is kept in memory which can be updated under program control. The contents of the memory can be transferred to the screen periodically by means of DMA transfer.

## Input-Output Processor (IOP) 11-7

Instead of having each interface communicate with the CPU, a computer may incorporate one or more external processors and assign them the task of communicating directly with all I/O devices. An input-output processor (IOP) may be classified as a processor with direct memory access capability that communicates with I/O devices. In this configuration, the computer system can be divided into a memory unit, and a number of processors comprised of the CPU and one or more IOPs. Each IOP takes care of input and output tasks, relieving the CPU from the housekeeping chores involved in I/O transfers. A processor that communicates with remote terminals over telephone and other communication media in a serial fashion is called a data communication processor (DCF).

The IOP is similar to a CPU except that it is designed to handle the details of I/O processing. Unlike the DMA controller that must be set up entirely by the CPU, the IOP can fetch and execute its own instructions. IOP instructions are specifically designed to facilitate I/O transfers. In addition, the IOP can perform other processing tasks, such as arithmetic, logic, branching, and code translation

The block diagram of a computer with two processors is shown in 1-19. The memory unit Fig. 11-19. The memory unit occupies a central position and can communicate with each processor by many control of the central position and can communicate with each processor by means of direct memory access. The CPU is responsible for processing data poods. The IOP ble for processing data needed in the solution of computational tasks. The IOP provides a path for transfer of the solution of computational tasks. provides a path for transfer of data between various peripheral devices and the memory unit. The CPII is the I/O memory unit. The CPU is usually assigned the task of initiating the I/O program. From then on the IOP operates independent of the CPU and continues to transfer data from outer 1.1

I/O processing