W6100 Ethernet Shield User Guide

How to use the WIZnet Ethernet Library

https://github.com/Wiznet/Ethernet.git

Version 0.0.1





Contents

1.	1. Overview	4
2.	2. Download	5
	2.1 WIZnet Github	5
	2.2 Clone or download	6
	2.2 Download ZIP	6
3.	3. Location	9
4.	4. Example	10
	4.1 ChatServer	10
	4.2 Set Network	12
	4.3 Uploading	13
	4.4 Run	14



Figure

Firgure 2-1 WIZnet Github	5
Firgure 2-2 Clone or download	6
Firgure 2-3 Download ZIP	6
Firgure 2-4 Save	7
Firgure 2-5 Downloading	7
Firgure 2-6 Download Complete	8
Firgure 3-1 Default user Libraries	9
Firgure 3-2 Copy to default user Libraries	9
Firgure 4-1 Arduino IDE	10
Firgure 4-2 Ethernet ChatServer	11
Firgure 4-3 ChatServer	12
Firgure 4-4 Set Network	12
Firgure 4-5 Uploading	13
Firgure 4-6 Done Uploading	13
Firgure 4-7 Run Serial Monitor	14
Firgure 4-8 Serial Monitor	15
Firgure 4-9 TCP Client mode Hercules	15
Firgure 4-10 String from Client	16



1. Overview

For users of the Arduino Ethernet Shield, Arduino¹ includes an Ethernet Library² in the IDE to release. The currently released Arduino IDE is ARDUINO 1.8.7 and the included Ethernet Library is V2.0.0.

The Ethernet Library V2.0.0 supports Arduino Ethernet Shield and Arduino Ethernet Shield 2, and supports W5100 / W5200 / W5500. The Arduino Ethernet Library 2 for Arduino Ethernet Shield 2 is now available as an Ethernet Library V2.0.0, though it still only supports the W5500.

Ethernet Library V2.0.0 is developed and released in Github³, and WIZnet Github has developed it to support W6100, and is currently preparing to release it through pull request.

This document describes how to apply the Ethernet Library installed with WIZnet Github to the Arduino IDE installed for W6100 Ethernet Shield users before the Ethernet Library that supports the W6100 is included in the Arduino IDE.

¹ https://www.arduino.cc/

² https://www.arduino.cc/en/Reference/Ethernet

³ https://github.com/arduino-libraries/Ethernet




2. Download

The WIZnet Github has a library developed to support W6100 by forking in Arduino Ethernet Library V2.0.0. Download as below.

2.1 WIZnet Github

Connect to the following address with Internet Browser. It can be downloaded via TortoiseGit or other Git Client.

Git hub address: https://github.com/Wiznet/Ethernet

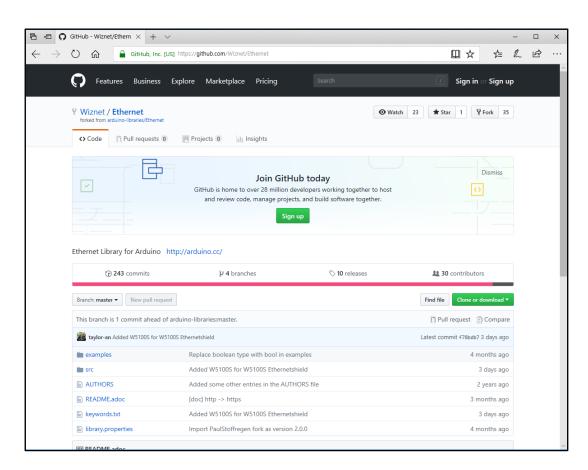


Firgure 2-1 WIZnet Github



2.2 Clone or download


Choose Clone or download.

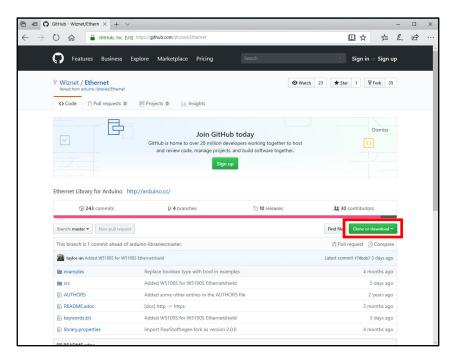

Firgure 2-2 Clone or download


2.2 Download ZIP

Choose Download ZIP and save source codes as a ZIP.

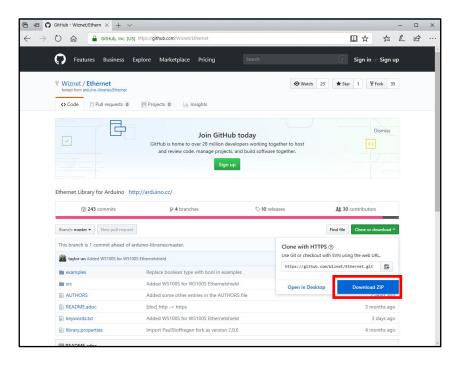


Firgure 2-3 Download ZIP



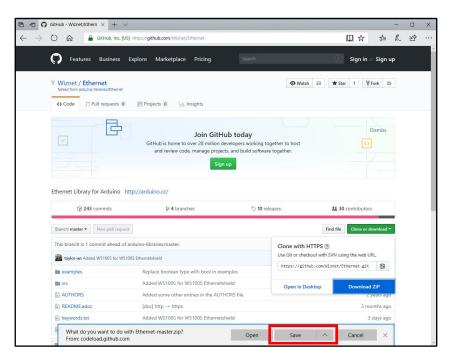


Firgure 2-4 Save

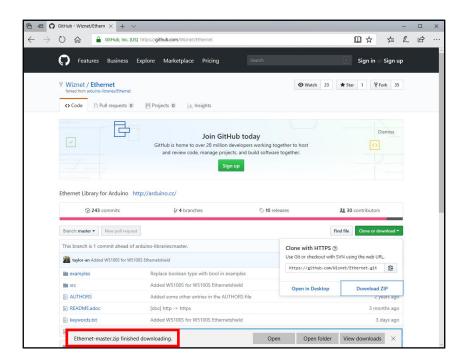

Firgure 2-5 Downloading



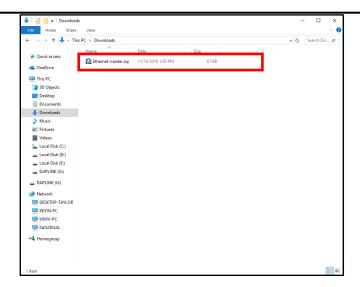

Firgure 2-6 Download Complete




3. Location


Extract the downloaded Ethernet Library Source and copy it to your Arduino Library directory.

The path is generally as follows.

"C:\Users\YOURID\Documents\Arduino\libraries"

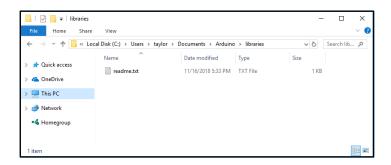

Firgure 3-1 Default user Libraries

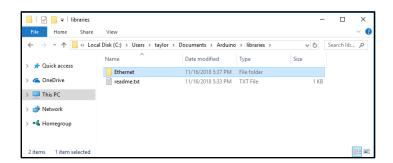

Firgure 3-2 Copy to default user Libraries




4. Example

The copied Ethernet Library can be confirmed by running Example in the Arduino IDE. Below is an example of ChatServer in the example of Ethernet Library running on Arduino UNO Board with the W6100 Ethernet Shield. For another example, see Arduino Site⁴ (RESOURCES > TUTORIAL > EXAMPLE FROM LIBRARYIES > Ethernet Library).

4.1 ChatServer


Launch the Arduino IDE and click File -> Examples -> Ethernet -> ChatServer.

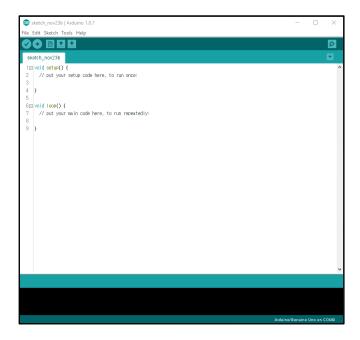

Firgure 4-1 Arduino IDE

⁴ https://www.arduino.cc/en/Tutorial/LibraryExamples



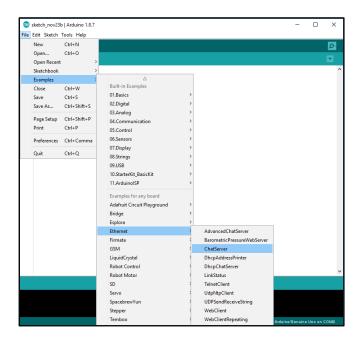


Firgure 4-2 Ethernet ChatServer



4.2 Set Network

To run ChatServer Example, set the W6100 Ethernet Shield network variable(IP, DNS, GATEWAY, SUBNET, PORT) according to your PC network environment.

Firgure 4-3 ChatServer

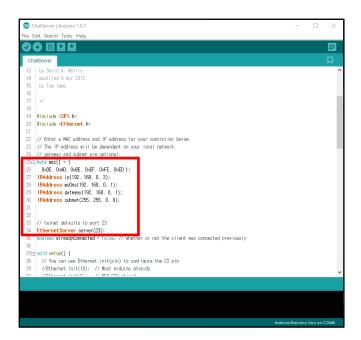

Firgure 4-4 Set Network



4.3 Uploading

Upload to the Arduino Board after set the W6100 Ethernet Shield network variable. You make sure that the Arduino Board is available in the Arduino IDE prior to uploading.

Firgure 4-5 Uploading



Firgure 4-6 Done Uploading



4.4 Run

The example ChatServer is using W6100 Ethernet Shield to output the string, received from the TCP Client to the Serial Monitor and send it back to the TCP Client. You can confirm TCP client connection and received string on Serial Monitor.


Finally execute the TCP Client and connects to the W6100 Ethernet Shield of the Arduino Board. Then you may transmit a string to the W6100 Ethernet Shield. Below is an example for connecting to the W6100 Ethernet Shield as a TCP client via Hercules and transmit a string 'Hi'.

According to 'Figure 4-4 Set Network', the Sever IP to connect TCP Client is 192.168.0.3 and Port is 23.




Firgure 4-7 Run Serial Monitor



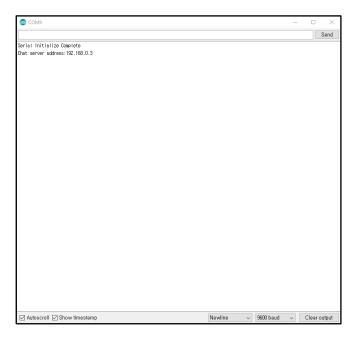

Firgure 4-8 Serial Monitor

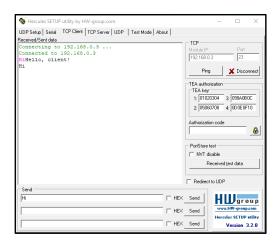

Firgure 4-9 TCP Client mode Hercules





Firgure 4-10 String from Client