Chapter 1

PC to CRU control interface

In order to connect and control the Common Readout Unit (CRU) from a user PC, some sort of serial communication between the user PC and the Field-Programmable Gate Array (FPGA) is needed. The purpose of the serial link in this thesis is mainly to monitor and manipulate the Gigabit Transceiver (GBT) control signals. Because of this, the speed requirements of the link is not a crucial matter.

Figure 1.1 illustrates the different blocks that make up the serial interface: The interface on the PC side consists of a terminal-like interface that lets the user type in requests that enables the user to read and/or write to the GBT control signals via the link. These requests then gets translated into byte-codes and sent out via the transmitter of the PC COM port to the Universal Asynchronous Receiver/Transmitter (UART) on the FPGA side. Here, the bytes are stored in a buffer before they get interpreted by a decoder. Depending on the user-request, the decoder can write to a GBT-switch or read from a GBT-probe.

1.1 Readily Available Standards

The FPGA board used in this thesis (section ??) has various forms of communication standards readily available. The following sections starts off with an evaluation of the

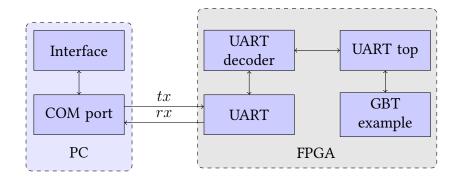


Figure 1.1: Simplified diagram over the PC to CRU serial interface.

different communication standards available on the FPGA, and continues with a description of the final implementation of the serial communication software and hardware.

When choosing the serial communication between the FPGA and the PC, factors like physical compatibility, implementation, availability and complexity were taken into consideration. The FPGA board has the following communication capabilities readily available: Peripheral Component Interconnect (PCI)-express, Ethernet, JTAG UART (through the USB Blaster II), and an SDI-transceiver. The following short sections describe advantages and disadvantages of using one of the standards mentioned above in context with the thesis.

PCI-Express

The PCI-express connection requires the FPGA to be directly mounted on the mother-board of the PC, which is in this situation impractical and not necessary for a simple communication link. This option also limits the compatibility with some FPGA boards and PCs that do not have a PCI-express connection available. It does, however, enable for very fast data transmission and removes potential noise generated by using external cabling.

Ethernet

The ethernet connection is integrated in most FPGA boards, but requires layers of protocols in order to communicate (no direct serial communication). While it is possible to send serial data over ethernet, it would require a serial-to-ethernet adapter [?]; It would just be easier to send serial data directly from the FPGA-pins using an USB-to-RS232 adapter¹ (see section 1.2). The upside is that an ethernet connection offers long distances between the PC and FPGA, either through networking or long cabling. Using ethernet for communication only requires a known IP-address between the devices for connection and transmission.

SDI-Transceiver

The SDI-transceiver is meant for audio/video transmission and uses BNC-connectors for this task. It therefore requires special audio/video equipment on the PC side for connection and transmission, which is not necessary for a simple communication link.

Altera JTAG

Serial communication through the Altera JTAG UART IP is possible through the only USB-connection on the board; the USB Blaster II, which is primary used for programming the FPGA. This requires the implementation of the Nios II soft processor. A soft

¹Adapter to convert between USB and Rs-232 signaling and voltages.

processor is a microprocessor implemented into the FPGA with the help of logic synthesis only. While it is also possible to use a Hard Processor System (HPS), only a few FPGA-boards (SoC-boards) comes with one implemented. There is no support for HPS on the FPGA board used in this thesis. A Nios II-extension for the Eclipse IDE in combination with the C programming language is commonly used to program the soft processor. Using this approach not only limits the user to send and receive data through a dedicated Altera System Console [?]: the Nios II also occupies a large portion of the FPGA.

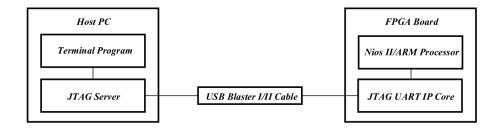


Figure 1.2: JTAG UART communication link between the host PC and the FPGA board [?, Figure 1].

Attempts were made to implement the Nios II and write a simple send- and receive routine in C through the Altera JTAG, but was quickly abandoned due to issues with debugging using the Eclipse Nios II IDE. The most serious debugging issue was the fact that the compiler continued displaying errors after the errors were corrected. Even after the actual bugged function or line of code were deleted completely, the compiler would still complain on the same errors as before it was deleted. This made the dedicated Nios II compiler unreliable, and the code impossible to debug. Not only did this approach make it a whole lot more complicated, but it was also more error prone and permitted the use of user defined software for communication with the FPGA.

1.2 User Defined Communication

In addition to the communication standards described above, which in turn requires specific cable- and socket types for connection, it is possible to connect the transmit and receive signals directly to the FPGA pinout. The only requirement is that the given FPGA has unoccupied transmitter and receiver signal pins available for the user; either through a HSMC-port (with the help of an additional GPIO-extension board), or through a prototype area or header.²

The FPGA board used in this thesis has no dedicated prototyping area for external signal connection. It instead comes with an GPIO-extension board that connects to

²The user has to assign the available pins to the associated transmitter and receive signals in the *Pin Planner* program, as part of the Quartus II suite.

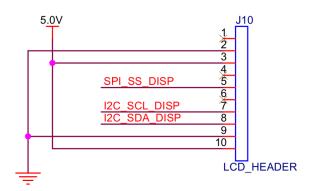


Figure 1.3: J10 header from the Cyclone V GT board schematic. The SCL and SDA signals can be used as single-ended transmitter and receiver signals.

one of the two on-board HSMC-ports.³ However, if removing the on-mounted LCD-display, it is possible to use the exposed header for signaling. The header (J10 in the board schematic, as shown in figure 1.3) is connected to a transmitter- and receiver pair (both running on a voltage of 5 V), several 5 V output pins and a ground pin. By using the transmitter- and receiver pair from the available header on the FPGA, it is possible to implement a type of asynchronous serial protocol. Most FPGA developement boards, including the Terasic Cyclone GX board (see section ??), comes with a built-in UART-to-USB interface. This allows you to connect the board directly to the USB-port of the PC as a serial connection. The FPGA board used in this thesis has no integrated UART interface, so this has to be implemented manually.

1.3 Duplex Systems

Common to all communication systems considered is that they are all duplex systems, which simply means two connected devices that can both transmit and receive signals. While *full-duplex* enables both devices to transmit and receive simultaneously (like a telephone), *half-duplex* only enables one device to transmit at a time (like a walkietalkie). Common to both the duplex systems is that they have two communication channels.

1.4 Choosing Communication Protocol

Perhaps the most well-known and supported serial communications protocol out there is the RS-232 standard. It supports both synchronous and asynchronous transmission, and only requires a single transmit- and receiver pair (if excluding the data control sig-

³By using both the HSMC-ports on the FPGA, the GPIO-Printed Circuit Board (PCB) could not fit properly side-by-side with the HSMC-to-VLDB PCB (see chapter ??) because the latter PCB is a bit to wide.

nals, which are not crucial). It is compatible over a wide range of voltage levels, and can be connected directly to the serial port of a PC (if one is available) or through a USB-to-RS232 adapter. The RS-232-standard was chosen mainly because it only requires two wires (one for transmitting and the other for receiving), and can be easily implemented using available C-libraries. See ?? for more information about the RS-232 standard.

The standard will be used for asynchronous transmission of data between the PC and FPGA. A simple UART with a byte-decoder will be implemented on the FPGA-side, while a dedicated C-program with access to the COM port will be implemented on the PC-side. A USB-to-RS232 adapter with a voltage converter will be used as the connection between the FPGA and the PC. The following chapters describe the implementation of the serial interface, first on the FPGA side (1.5) and then on the PC side (1.6).

1.5 Hardware Design on the FPGA Side

The FPGA hardware design is responsible for treating incoming requests made by the user PC. It will essentially become a module to connect with the GBT example design, were it replaces the In-System Source And Probe Editor (ISSP)-module that is used today. The module must have access to the GBT control signal register, and this is done by reconnecting the already defined probe and source signals, which is connected to the ISSP, to this module. The module is mostly completed; what remains is to implement it in the GBT example design and connect the probe and source/switches registers to the module, effectively replacing the ISSP module. For now, the module uses dummy registers instead of the real probe and source/switches registers.

1.5.1 Specification

When finished, the implemented hardware logic is to contain the following specifications:

- Communication with the user PC using UART and RS-232.
 - Receive requests sent from the user PC. The requests are reserved byte-codes in which the decoder translates to read or write commands to use on the GBT control registers.
 - Send out data from the GBT control-register to the user PC when told. The address of the data must be specified and sent from the user PC.
 - Manage to send and receive data at a reasonable speed, so that the control register information is updated at a practical rate on the user PC.

1.5.2 Hardware Components

The below sections gives a brief description of each part of the module design. The UART itself was based on the UART-design by Pong P. Chu, found in chapter 7 from

his book *FPGA Prototyping By VHDL Examples* [?]. The Baud Rate Generator was borrowed from the *Uart2Bus* VHDL-design by Arild Velure [?]. The UART-decoder was written in conjunction with the C-program on the PC side, and is the one component that ties the communication together.

The end result forms a design that uses an UART to receive and transmit 19200-8-N-1 RS-232 data-bytes. The received bytes are stored in a FIFO until treated by the UART-decoder. The "decoder" translates the received bytes into requests, i.e a read-request if 0xDD or a write-request if 0xEE (write value 0) or 0xFF (write value 1), and manipulates or sends out data-bits from the GBT-register according to the received requests. The UART itself is optimized for $19200 \, \mathrm{bit/s}$, but has been tested to work at speeds up to $57600 \, \mathrm{bit/s}$.

UART

Simply put, an UART is a circuit that transmits and receives parallel data through a serial line [?]. Since it has no dedicated clock line, it uses the concept of oversampling to synchronize with the incoming data. This involves using a sample-clock which is 16 times faster than the transmitted/received data; the transmitting and receiving end must thus have matched data rates.

The UART-design is divided into five parts:

- A Receiver that receives the serial data and reassembles it into parallel data.
- A Transmitter that sends parallel data bit by bit out the serial line.
- A Baud Rate Generator that generates the right amount of ticks relative to the baud rate and global clock.
- Two FIFO-buffers connected to the transmitter and receiver to temporary store the bytes in the order of arrival.

Oversampling and the Baud Rate Generator

To obtain an accurate sampling of the received signal, an asynchronous system like the UART uses what is referred to as oversampling. Figure 1.4 illustrates the oversampling technique. With a typical rate of 16 times the baud rate, the receiver listens for the line to go from idle to the first start bit. When pulled low or high (depending on the system), a counter starts counting from 0 to 7. When the counter reaches 7, the received signal is roughly in the middle of the start bit. By sampling the bit in the middle of its time frame, the receiver avoids the noise and ringing that are generated whenever a serial bit changes [?]. When in the middle of the start bit, the counter needs to tick 16 times before it reaches the middle of the first data bit, the Least Significant Bit (LSB). The LSB can now be sampled, and the procedure is repeated N-1 times until reaching the last data bit, the MSB. If there is a parity bit, the same procedure is repeated one more time to retrieve it. After retrieving all the data bits, the same procedure is used one last time to sample the M stop bits at the end of the signal. After this, the line is held high until a

new start bit arrives.

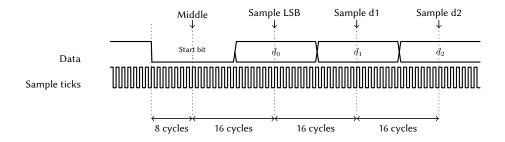


Figure 1.4: UART receive synchronisation and data sampling points with 16 times the sampling rate.

To achieve a sampling rate of 16 times the baud rate, a Baud Rate Generator module is implemented into the design. The module generates a one-clock-cycle tick once every $\frac{clock}{16 \times baud\ rate}$ clock cycles. This is achieved by counting in certain steps given by the formula below:

$$Baud\ frequency = \frac{16 \times baud\ rate}{GCD(clock, 16 \times baud\ rate)} \tag{1.1}$$

, where baud frequency is the count steps, and GCD is the greatest common divisor between the global clock and the baud rate times 16 [?].

For a baud rate of $19200 \ \mathrm{bit/s}$ and a clock of $50 \ \mathrm{MHz}$, the counter must count in steps of $96 \ \mathrm{per}$ clock cycle.

Once the counter reaches a given baud limit, the counter resets and the tick-signal is pulled high. After one clock cycle, the tick-signal is pulled low and the counter starts to count upwards again. The baud limit is given by:

$$Baud\ limit = \frac{clock}{GCD(clock, 16 \times baud\ rate)} - baud\ frequency \tag{1.2}$$

, where clock is the global clock of the system and GCD is the greatest common divisor between the global clock and the baud rate times 16 [?].

For a baud rate of 19200 bit/s and a clock of 50 MHz, the counter must count in steps of 96 up to the baud limit of 15565, before pulling the tick-signal high and start over again.

Receiver

The receiver is essentially a finite state machine, divided into four states: the idle-, start-, data- and stop state. It uses the Start and Stop bits to reset the state machine in an attempt to synchronize the clock phase to the incoming signal. For this, the receiver contains three registers: the s- and n registers for counting, and a b register for data storing. The s-register keeps track of the sample ticks and n-register the number of data bits sampled. There are two constants defined for the receiver: the C_DBIT constant,

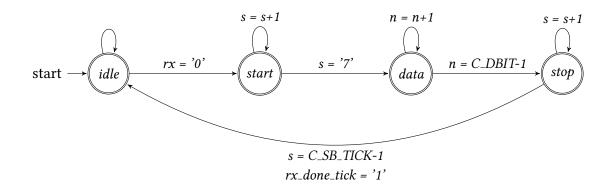


Figure 1.5: UART receiver state machine.

which indicates the number of data bits; and the C_SB_TICK constant, which indicates how many ticks that is required for the stop bit(s) (see $uart_gbt_pkg.vhdl$).

Transmitter

The UART transmitter has a similar design to that of the receiver; it uses the same state machine structure, but for the purpose of shifting out data. In addition to the s-, n-, and b-registers used for counting, the transmitter contains a din-register for parallel input data and a 1 bit tx-register for shifting out the data. To prevent multiple clocks, the baud rate generator is also used to clock the transmitter. For the transmitter to be properly synchronized with the receiver, it instead uses the counter registers to slow down the operation 16 times. This is because there is no oversampling involved in transmitting a signal.

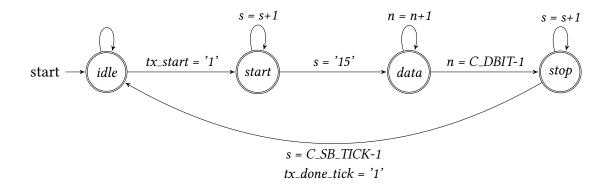


Figure 1.6: UART transmitter state machine, similar to that of the receiver.

FIFO Buffers

Both the UART transmitter and receiver has FIFO-buffers that stores the incoming data sequentially in a "First In, First Out" manner. On the receiver side, the incoming data is stored until it gets the read-out signal (rd_uart goes high). It then places the first stored byte on the (r_data)-line for one clock cycle. As long as the read-out signal remains high and there is bytes stored, the FIFO will spew out data on the (r_data)-line with the rising edge of the clock. The rx_empty signal indicates whether there is one or more bytes stored in the FIFO. On the transmitter side, when data from the FPGA is written into the FIFO, it sends a signal to the transmitter to start shifting out the data stored in the buffer, oldest byte first. Having FIFOs to store data between the UART and the rest of the FPGA logic is necessary to prevent data loss, as the FPGA logic operates at a much higher clock speeds than the UART can transmit and receive data. If a FIFO gets filled up, no new data will be written to it until data is read out of it, freeing one slot.

Decoder

The UART decoder is a state machine connected to the other end of the UART receiver-and transmitter FIFOs. It reads out the stored received bytes and does tasks according to the order and value of the bytes. Starting at the idle state, the decoder waits for a request byte from the FIFO followed by an address byte. Legal request bytes are 0xDD, for read; 0xEE, for write value '1'; and 0xFF, for write value '0'. The request-bytes must then be followed by a byte containing an legal address between 0x00 - 0x40. If all requirements are met, the state machine will perform the requested action on the probe and source registers of the GBT example design. A read of a given address will result in the decoder instructing the UART to transmit a byte containing the data value (stored in the Most Significant Bit (MSB) of the byte) and the register address of the data value (stored in the last seven bits of the byte). A write of a given address will result in the decoder changing the value of the given address in the source register of the GBT example design. The address must thus be smaller than 0x24. See ?? for more information about the GBT source and probe registers.

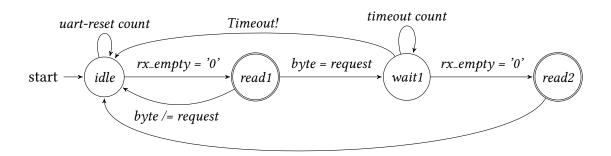


Figure 1.7: UART decoder state machine.

1.5.3 Conclusion

The goal of this hardware design was to develop a module that would eventually be integrated into the GBT example design, and together with a custom made software, manipulate the GBT control signals, effectively replacing the already existing ISSP module. The custom made module communicates well with the software; receiving requests and sends out information accordingly. During testing, it was discovered that the UART would hang after a random period of time. This was fixed by having a reset timer that would reset the UART if it did not respond for a given time period (see ??).

1.6 Software on the PC Side

The program was written with the goal of one day replacing the Quartus-bound In-System-Source-And-Probe Editor, which is used today to access the GBT control-signals; and instead introduce a cross-platform, open-source solution. It was written in conjuction with the custom hardware, with the intention of communicating with the hardware to send and retrieve information from the GBT probe and source control registers. To access the serial port on the PC, the software uses free and cross-platform C-libraries (see appendix ??). The software communicates with the hardware using the RS-232 protocol, using 8 data bits, no parity and 1 stop bit, and a baud rate at 19200 bit/s. The hardware module must have the same specification in order for this to work. The C programming language was chosen for this task mainly because of previous experience with the language, and because of the intention to learn to use the language more professionally.

1.6.1 Specification

The program is to contain the following specifications:

- The ability to send and receive bytes from the UART on the FPGA.
- An user interface that makes it easy to control and monitor the FPGA, i.e a command console.
- Cross-platform. This was not a critical requirement, but was added later because
 of the language the program was written in and also the already cross-platform
 libraries used.

1.6.2 Software Structure and Flowchart

The software is divided into two modules; one module for sending and receiving data, to and from the FPGA; and one module that acts as the actual software interface. Both these modules were intended to be merged together into one program, both because of time constraints were left separated. The below sections describes the inner workings of each of the two modules, and provides flowcharts to further illustrate the behaviour.

Interface module

Figure 1.8 illustrates the behaviour of the interface module. The main loop start by checking for any changes in screen size of the main terminal window. This allows the user to freely change the window size, although full screen is preferred. If a resize has occurred, the program stores the size-parameter and uses it to further resize and properly align all the internal windows ("Command History", "Commandline" and "Signals") using *wresize*, and clears the content using *wclear*. The content will later be redrawn with coordinates aligned according to the new size.

With neurses, by using *getch* in conjunction with *nodelay*, one can check for keypresses without having to pause the entire program (see ??). If a key is pressed, the program analyses the input: If a character is typed, it is appended to a command-string and displayed in the "Commandline" window.

If it is a return-character ('\n'), the program processes the command-string and compares it up against a table of legal commands. The legal commands has associated functions that executes if there is a match between the input and an entry in the table. For it to be a match, the first word of the input-string must be a legal command followed by legal arguments. To see the usage of a command, one can just type in the command without any arguments. It is also possible to type in just a letter or a partial word to print out possible commands that contain the letter or partial word typed in. Legal commands include: write, which writes a bit value to one or more of the switch-signals; read, which sends read requests for one or more signals to the FPGA; open, which opens the COM port if it is not already open; close, which closes the comport if it is open; status, which prints out information about the COM port and its current status; and exit, which closes the COM port and exits the program.

If either return or a character has been typed in, the program checks the input for a special key. Special keys include: "Page Up" and "Page Down", that selects which signals to display in the "Signals" window (probes, switches or both); and "Arrow up" and "Arrow down", that browse previous typed commands and displays them in the "Commandline" window.

After checking for key-presses, the program redraws the windows using *wrefresh* and sleeps with a small delay (to prevent screen flickering and unnecessary cpu loads). It then returns to the top of the main loop and the process starts over again.

Send/Receive module

Figures 1.9 and 1.10 illustrates the behaviour of the main transmitter and receiver functions of the send/receive module. The basic operation goes as follows: The program sends a data-pattern from a 2d-array via the COM port to the GBT-registers on the FPGA side. It then sends a read request to read all values of the GBT-register back to confirm that the data pattern was transmittet properly. There are five different patterns that are sent in sequence to the registers, and each time a pattern is sent it is read back to the program

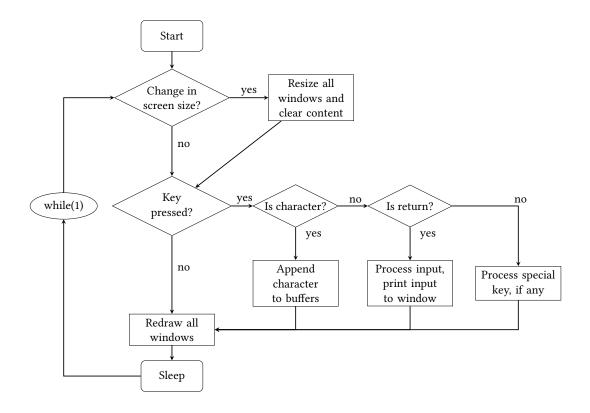


Figure 1.8: Flowchart over the main loop of the interface module.

on the PC side and displayed. This is to confirm that the communication link is working properly.

There are four variables that controls the transmitter: txStatus, txReq, txData[2] and txAdr. The txStatus variable controls the behaviour of both transmitter and receiver function. For the program to be able to send a new byte out the COM port, the txStatus variable must either be flagged as idle (0x00) or as repeat (0xFD). When flagged idle, the program is not waiting for any received address-byte and is ready to transmit a new request-byte to the COM port. When set to repeat, the program has already sent a request, but has not received the desired data and address byte, and must send the same read-request again. The txReq variable determines what request is to be sent to the FPGA. When equal to a read-request (0xDD), both txStatus and txData[0] is set to 0xDD. If txReq is equal to a write-request (0xEE), however, data from the GBT data table is copied into txData[0] using txAdr as index. txData[1] is set always equal to txAdr, which is now the desired address to the GBT-register in which to read from or write to. Sending data to the COM port involves using the RS232_Sendbuf-function (see ??). txAdr is then incremented by one or reset to 0 if it exceeds the width of the GBT data-register. If the latter is the case, it means that the read/write operation is finished, and txReq is set to the opposite operation. If a write operation is done, the pattern index is also incremented, so that the next write operation sends out a different pattern. The transmitter

function is always called before the receiver function, with a specified delay in between the two function calls.

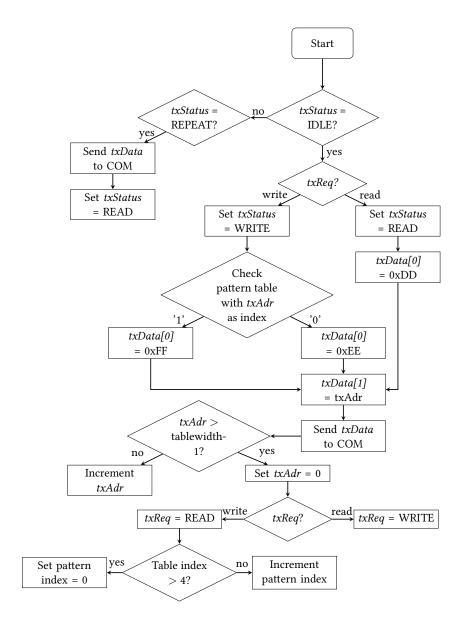


Figure 1.9: Flowchart over the transmitter function.

For the receiver function to read out what is stored in the COM port buffer, *txStatus* must be set to read (0xDD). The process of reading out a byte from the COM port involves using the *RS232_PollComport*-function (see ??). The *n* variable is equal to the number of bytes read from the COM port. If no bytes are present, this means that the previous readrequest has not been received or processed properly by the FPGA UART state machine. *txStatus* is therefore set equal to repeat (0xFD), signaling the transmitter function to

send the same previous read-request to the COM port. If n is larger than 0, the data and address values are filtered out of the byte(s); the data bit being the MSB and the address the remaining bits.

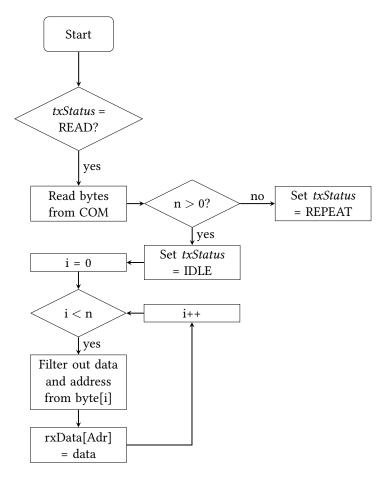


Figure 1.10: Flowchart over the receiver function.

1.6.3 Conclusion

The goal of the software was, together with the hardware design, to one day replace the Quartus-bound In- System-Source-And-Probe Editor, which is used today to access the GBT control-signals, and instead introduce a cross-platform, open-source and thus customizable software solution.

As for now, the serial interface software consists of two modules: the sending and receiving module, and the neurses command interface. Both modules work more or less as they should: The send/receive module writes a pattern to the GBT-register in the FPGA and reads it back to the terminal, and the interface module allows you to perform write-and read-commands and monitor the GBT control signals. What remains is to fully integrate the send/receive module into the interface module. They are partly integrated in

terms of merging the two into one program. What is left undone is to rewrite the main transmit and receive routines from the send/receive module, which are not completed. In addition, some adaptations needs to be made to the write- and read command-entries in order for them to invoke and direct the send/receive module. Also, a final test of the software as a whole remains.

As this software has a goal of being open-source and thus modular, a useful feature to the software to be added in the future would be the ability to log the GBT register information into date-sorted files. This was a feature that was intended to be integrated, but because of time constraints had to be dropped.

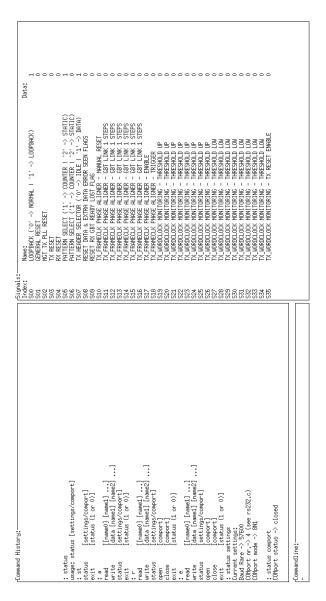


Figure 1.11: Snapshot of the GBT software interface in action. The colors in this picture has been inverted for a better visual representation.