Wireless Vantage Pro® & Vantage Pro Plus™ Stations

Including Fan-Aspirated Models



VANTAGE PRO

The Vantage Pro (6150, 6151) and Vantage Pro Plus (6160, 6161) Wireless Weather Stations include two components: the Integrated Sensor Suite (ISS) which houses and manages the external sensor array; and the console which provides the user in-

terface, data display, A/D conversion, and calculations. The ISS and Vantage Pro console communicate via an FCC-certified, license-free transmitter and receiver. User-selectable DavisTalk ID codes allow up to eight stations to coexist in the same geographic area. The Wireless Vantage Pro Plus Weather Station includes two additional sensors that are optional on the Vantage Pro: the UV Sensor and the Solar Radiation Sensor. The console may be powered by batteries or by the included AC-power adapter. The wireless ISS is solar powered with a battery backup. Use WeatherLInk for Vantage Pro to interface your weather station with a computer, to log weather data, and to upload weather information to the internet.

The **6150** and **6160** rely on passive shielding to reduce solar-radiation induced temperature errors in the outside temperature sensor readings. The Fan-aspirated **6151** and **6161** combine passive shielding with a solar-powered fan that draws outside air in over the temperature and humidity sensors, providing a much more accurate temperature reading than that available using passive shielding alone.

Specifications

3

 Console Operating Temperature
 $+14^{\circ}$ to $+140^{\circ}$ F (-10° to $+60^{\circ}$ C)

 Display Temperature
 $+32^{\circ}$ to $+140^{\circ}$ F (-10° to $+60^{\circ}$ C)

 Non-operating Temperature
 -5° to $+158^{\circ}$ F (-20° to $+70^{\circ}$ C)

each optional wireless transmitter received by the console) at 4 to 6 VDC

 Batteries
 3 C-cells

 Battery Life
 up to 1 year

 Connectors
 Modular RJ-11

 Housing Material
 UV-resistant ABS plastic

 Console Display Type
 LCD Transflective

Dimensions

Integrated Sensor Suite (ISS)

Current Draw (ISS SIM only) 0.07 mA (average), 10 mA (peak) at 4 to 6 VDC

Battery Life (3-Volt Lithium cell) up to 2 years, 1 year with no sun

Battery Life (NiCad C-cells) 1 year

 Connectors, Sensor
 Modular RJ-11

 Cable Type
 4-conductor, 26 AWG

Wind Speed Sensor Wind cups with magnetic switch
Wind Direction Sensor Wind vane with potentiometer

Temperature Sensor Type ... Platinum wire thermistor Relative Humidity Sensor Type ... Film capacitor element Housing Material ... UV-resistant ABS plastic

Dimensions

Weiaht

Wireless Communications

Transmit/Receive Frequency US Models: 916.5 MHz, Overseas Models: 868.35 MHz

2, Wireless Vantage Pro® & Vantage Pro Plus™ Stations VANTAGE PRO

Range

Sensor Inputs

Sensor Outputs (as displayed on console)

Genera

reset

latest value within the last period on the graph; totals can be set or reset

depends upon variable selected)

Graph Variable Span (Vertical Scale) Automatic (varies depending upon data range); Maximum and Minimum value in range

appear in ticker

power. Alarm message is displayed in ticker as long as threshold is met or exceeded.

Alarms can be silenced (but not cleared) by pressing the DONE key.

Update Interval Varies with sensor - see individual sensor specs

Also varies with DavisTalk transmitter ID code - #1=shortest, #8=longest

Forecast

Variables UsedBarometric Reading & Trend, Wind Speed & Direction, Rainfall, Temperature, Humidity,

Latitude & Longitude, Time of Year

Display Format..................lcons on top center of display; detailed message in ticker at bottom

Outside Temperature (sensor located in ISS)

Historical Data and Alarms: 1°F or 1°C (user-selectable)

Range-40° to +150°F (-40° to +65°C)

(reference: RM Young Model 43408 Fan-Aspirated Radiation Shield)

Radiation Induced Error (Fan-Aspirated)+0.6°F (0.3°C) at solar noon (insolation = 1040 W/m^2 , avg. wind speed $\leq 2 \text{ mph}$ (1 m/s))

(reference: RM Young Model 43408 Fan-Aspirated Radiation Shield)

Extra Temperature Sensors or Probes

Historical Data and Alarms: 1°F or 1°C (user-selectable)

Sensor Accuracy±1°F (±0.5°C) up to 110°F (43°C), ±2°F (±1°C) over 110°F (43°C) (see Fig. 2)

Temperature Stations)

Inside Temperature (sensor located in console)

Historical Data and Alarms: 1°F or 1°C (user-selectable)

Range+32° to +140°F (0° to +60°C)

Wind Speed

Resolution and Units 1 mph, 1 km/h, 0.1 m/s, or 1 knot (user-selectable)
Range (large wind cups) 2 to 150 mph, 2 to 130 knots, 1 to 67 m/s, 3 to 241 km/h
Range (small wind cups) 3 to 175 mph, 3 to 150 knots, 1.5 to 79 m/s, 5 to 282 km/h
Update Interval Instant Reading: 2.5 to 3 seconds, 10-minute Average: 1 minute

Accuracy (small wind cups) ±3 mph (3 kts, 5 km/h, 1.5 m/s) or ±5%, whichever is greater High with Direction of High Direction of Highs Wind Direction Update Interval 2.5 to 3 seconds Wind Chill (Calculated) Resolution and Units 1°F or 1°C (user-selectable) Source United States National Weather Service (NWS)/NOAA Variables Used Instant Outside Temperature and 10-min. Avg. Wind Speed Historical Data..... Hourly, Daily and Monthly Lows Alarm Low Threshold from Instant Calculation Rainfall Daily/Storm Rainfall Range 0 to 99.99" (0 to 9999 mm) Monthly/Yearly/Total Rainfall Range 0 to 199.99" (0 to 19999 mm) the bucket), whichever is greater For rain rates from 2"/hr (50 mm/hr) to 4"/hr (100 mm/hr): ±5% of total or +0.01" (0.25 mm) (0.01" = one tip of the bucket), whichever is greater event and Storm (with begin date); Umbrella is displayed when 15 minute Total exceeds zero begin and end dates) Alarms...... High Threshold from Latest Flash Flood (15-min. Total, default is 0.50", 12.7 mm), 24-hour Total, Storm Total, Rain Rate minutes or only one tip of the rain collector constitutes a rain rate of zero. Historical Data......1-min Reading; Hourly, Daily, Monthly and Yearly Highs Alarm High Threshold from Instant Reading Barometric Pressure (sensor located in console) Sea-Level Reduction Equation Used United States Method employed prior to use of current "R Factor" method Equation Source Smithsonian Meteorological Tables Elevation Accuracy Required ±10' (3m) to meet equation accuracy specification Change Š0.2" (.7hPa/mb, .5 mm Hg)= Slowly

VANTAGE PRO

Low Threshold from Current Trend for Storm Warning (Falling Trend) Inside Relative Humidity (sensor located in console) Update Interval1 minute Outside Relative Humidity (sensor located in ISS) Extra Outside Relative Humidity (sensor located inside Temperature/Humidity Station) Accuracy±3% (0 to 90% RH), ±4% (90 to 100% RH) Dewpoint (calculated) Heat Index (calculated) of use Alarm......High Threshold from Instant Calculation Evapotranspiration (calculated, requires solar radiation sensor) ET weather station Information System) including Net Radiation calculation Current Data Latest Hourly Total Calculation, Daily, Monthly, Yearly Total Alarm......High Threshold from Latest Daily Total Calculation Solar Radiation (requires solar radiation sensor)

Temperature Coefficient-0.067% per °F (-0.12% per °C); reference temperature = 77°F (25 °C) Current Data Instant Reading and Hourly Average; Daily, Monthly High Historical Data..... Hourly Average, Daily, Monthly Highs Alarm High Threshold from Instant Reading Temperature Humidity Sun Wind Index (requires solar radiation sensor) Resolution and Units 1°F or 1°C (user-selectable) Sources and Formulation Used United States National Weather Service(NWS)/NOAA Steadman (1979) modified by US NWS/NOAA and Davis Instruments to increase range of use and allow for cold weather use Speed, 10-minute Average Solar Radiation or subtracted from this base to give an overall effective tempertature Current Data Instant and Hourly Calculation; Daily, Monthly High Historical Data...... Hourly Calculation; Daily, Monthly Highs Alarm High Threshold from Instant Reading Ultra Violet (UV) Radiation Index (requires UV sensor) Resolution and Units 0.1 Index Current Data Instant Reading and Hourly Average; Daily, Monthly High Historical Data...... Hourly Average, Daily, Monthly Highs Alarm High Threshold from Instant Calculation Ultra Violet (UV) Radiation Dose (requires UV sensor) Drift.....up to ±2% per year Current Data Latest Daily Total (user resetable at any time from Current Screen) Alarm High Threshold from Daily Total Soil Moisture (requires soil moisture Sensor) Alarms...... High and Low Thresholds from Instant Reading Leaf Wetness (requires leaf wetness Sensor) Update Interval (to be provided) Alarms...... High and Low Thresholds from Instant Reading Moon Phase Gibbous, Last Quarter, Waning Cresent Sunrise and Sunset

6, Wireless Vantage Pro® & Vantage Pro Plus™ Stations VANTAGE PRO

Clock

that observe it in AUTO mode, MANUAL setting available for all other areas)

Date: Automatic Leap Year

Alarms Once per day at set time when active

Sensor Charts

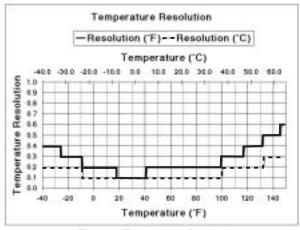


Figure 1. Temperature Resolution

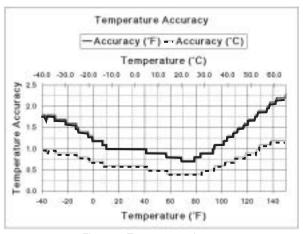


Figure 2. Temperature Accuracy

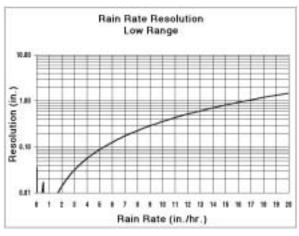


Figure 3. Low Range Rain Rate Resolution

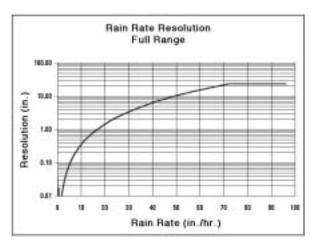


Figure 4. Full Range Rain Rate Resolution