

Dynamics of second-order systems.

Definition. A second-order system is one whose output $y(t)$ is modeled by a second-order differential equation.

$$\checkmark \quad a_2 \frac{d^2y}{dt^2} + a_1 \frac{dy}{dt} + a_0 y = b f(t)$$

$$\frac{a_2}{a_0} \frac{d^2y}{dt^2} + \frac{a_1}{a_0} \frac{dy}{dt} + y = \frac{b}{a_0} f(t) \quad a_0 \neq 0.$$

$$\tau^2 \frac{d^2y}{dt^2} + 2\gamma\tau \frac{dy}{dt} + y = K_p f(t),$$

where,

$$\tau^2 = \frac{a_2}{a_0}, \quad 2\gamma\tau = \frac{a_1}{a_0}, \quad K_p = \frac{b}{a_0}$$


τ = natural period of oscillation

γ = damping factor


K_p = steady-state / static gain

$$\checkmark \quad G(s) = \frac{\bar{y}(s)}{\bar{f}(s)} = \frac{K_p}{\tau^2 s^2 + 2\gamma\tau s + 1} \quad y, f \Rightarrow \text{deviation variables.}$$

- o τ determines the speed of response (response time).
- o The decrease in size of oscillation (size of two successive peaks) we call "damping". small value of γ implies little damping but a large amount of oscillation.

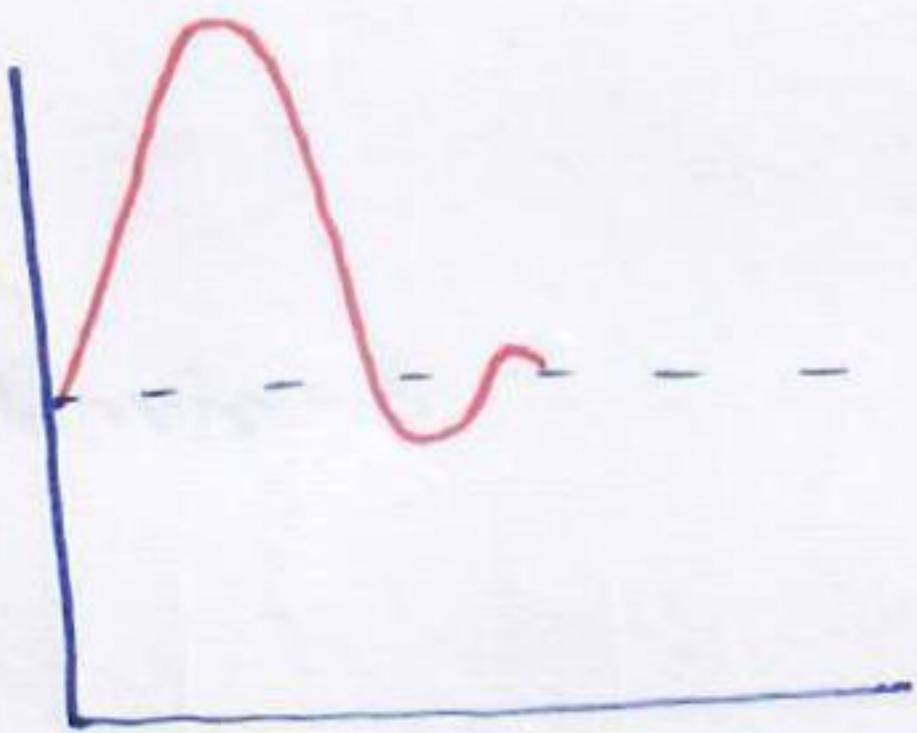

Large damping
small oscillation

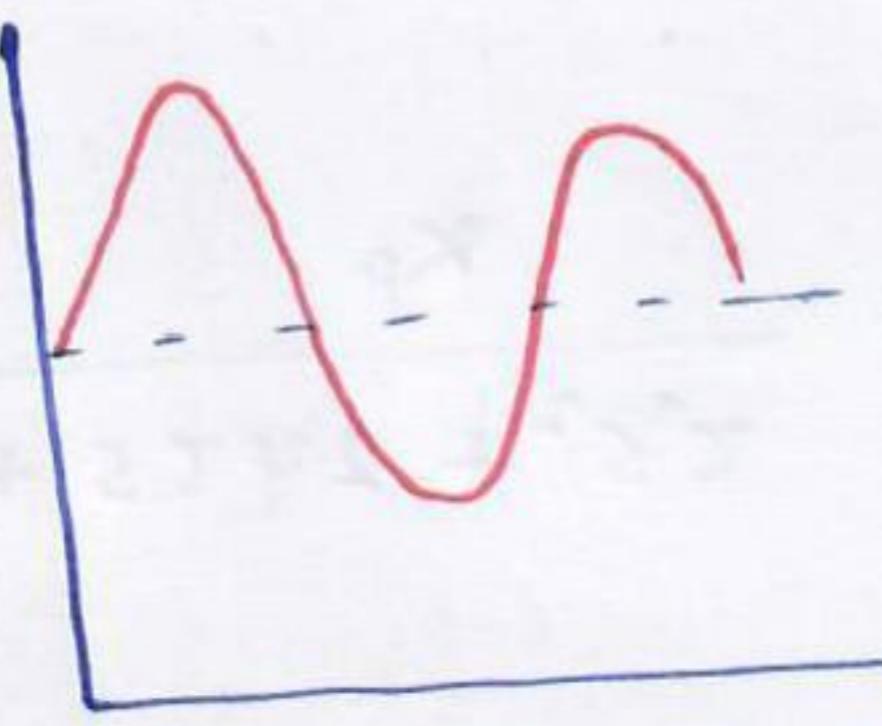

small damping
oscillation for a
long time



zero damping
oscillation with const.
amplitude.

$\zeta = 0$	Undamped system	Oscillation with const. amplitude
$\zeta < 0$	Unstable system	Oscillation with increasing ampltd.
$\zeta > 0$	Stable system	Oscillation with decreasing ampltd.

Systems with second- or higher-order dynamics.

1. "Multi capacity processes." Processes that consist of two or more capacities (1st-order systems) in series.
2. "Inherently 2nd-order Systems." Examples include fluid or mechanical solid components of a process that possess inertia and are subjected to acceleration.
3. "System + controller". or leads to 2nd- or higher-order dynamics.

Dynamic response of second-order system

✓ $G(s) = \frac{\bar{y}(s)}{\bar{f}(s)} = \frac{k_p}{\tau^2 s^2 + 2\zeta\tau s + 1}$ --- derived before

✓ Determining poles:

$$\tau^2 s^2 + 2\zeta\tau s + 1 = 0$$

$$\left. \begin{aligned} p_1 &= \frac{-2\zeta\tau + \sqrt{(2\zeta\tau)^2 - 4\tau^2}}{2\tau^2} \\ &= -\frac{\zeta}{\tau} + \frac{\sqrt{\zeta^2 - 1}}{\tau} \end{aligned} \right| \quad \left. \begin{aligned} p_2 &= \frac{-2\zeta\tau - \sqrt{(2\zeta\tau)^2 - 4\tau^2}}{2\tau^2} \\ &= -\frac{\zeta}{\tau} - \frac{\sqrt{\zeta^2 - 1}}{\tau} \end{aligned} \right.$$

✓ Thus,

$$G(s) = \frac{\bar{y}(s)}{\bar{f}(s)} = \frac{k_p / \tau^2}{(s - p_1)(s - p_2)}$$

$y(t)$ will depend strongly on ζ .

Case 1. $\zeta > 1$ two distinct and real poles Overdamped system

Case 2. $\zeta = 1$ two equal poles ($= -\zeta\tau$) Critically damped

Case 3. $0 < \zeta < 1$ two complex conjugate poles Underdamped

$$\left. \begin{aligned} p_1 &= -\frac{\zeta}{\tau} + i \frac{\sqrt{1-\zeta^2}}{\tau} \\ p_2 &= -\frac{\zeta}{\tau} - i \frac{\sqrt{1-\zeta^2}}{\tau} \end{aligned} \right|$$

Step-response time-domain solutions.

- ✓ For the step input $\bar{f}(s) = \frac{A}{s}$, we have:

$$\bar{y}(s) = \frac{k_p}{\tau^2 s^2 + 2\zeta \omega_n s + 1} \cdot \frac{A}{s}$$

- ✓ After inverting to the time domain:

overdamped ($\zeta > 1$)

$$y(t) = k_p A \left[1 - e^{-\zeta t/\tau} \left\{ \cosh \frac{\sqrt{\zeta^2 - 1}}{2} t + \frac{\zeta}{\sqrt{\zeta^2 - 1}} \sinh \frac{\sqrt{\zeta^2 - 1}}{2} t \right\} \right]$$

critically damped ($\zeta = 1$)

$$y(t) = k_p A \left[1 - \left(1 + \frac{t}{\tau} \right) e^{-t/\tau} \right]$$

underdamped ($0 < \zeta < 1$)


$$y(t) = k_p A \left[1 - e^{-\zeta t/\tau} \left\{ \cos \frac{\sqrt{1-\zeta^2}}{2} t + \frac{\zeta}{\sqrt{1-\zeta^2}} \sin \frac{\sqrt{1-\zeta^2}}{2} t \right\} \right]$$

Rearranging,

$$y(t) = k_p A \left[1 - \frac{1}{\sqrt{1-\zeta^2}} e^{-\zeta t/\tau} \sin(\omega t + \phi) \right]$$


Radian frequency (rad/time): $\omega = \frac{\sqrt{1-\zeta^2}}{\tau}$

phase angle (rad): $\phi = \tan^{-1} \left(\frac{\sqrt{1-\zeta^2}}{\zeta} \right)$

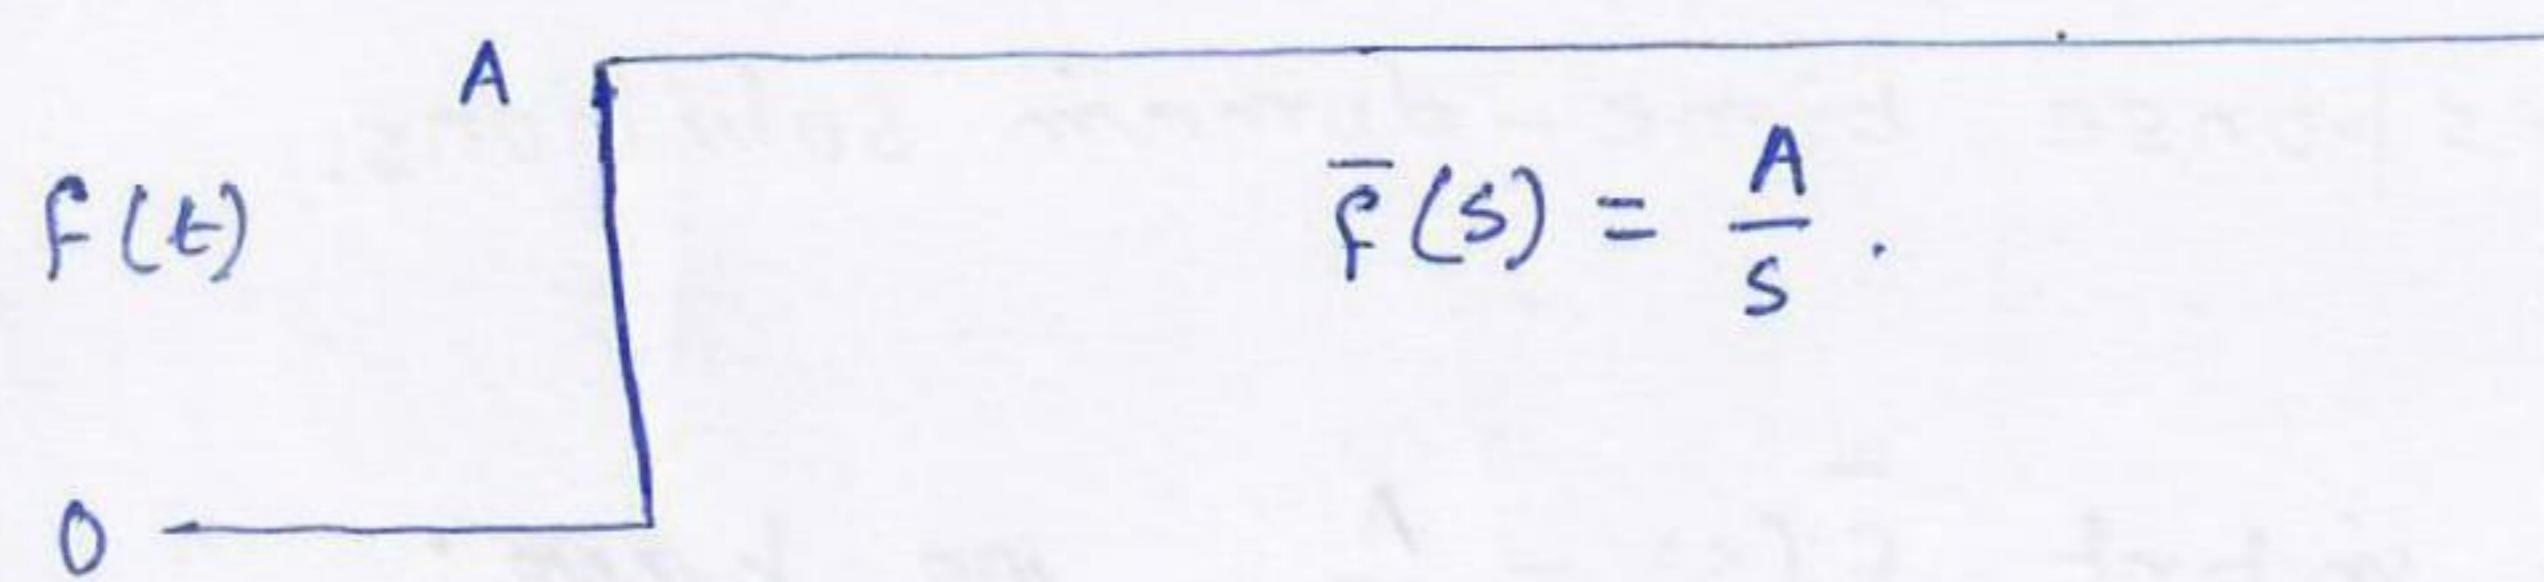

$$\bar{f}(s) = \frac{A}{s}.$$

γ	0.1
	0.5
	1.0
	2.0

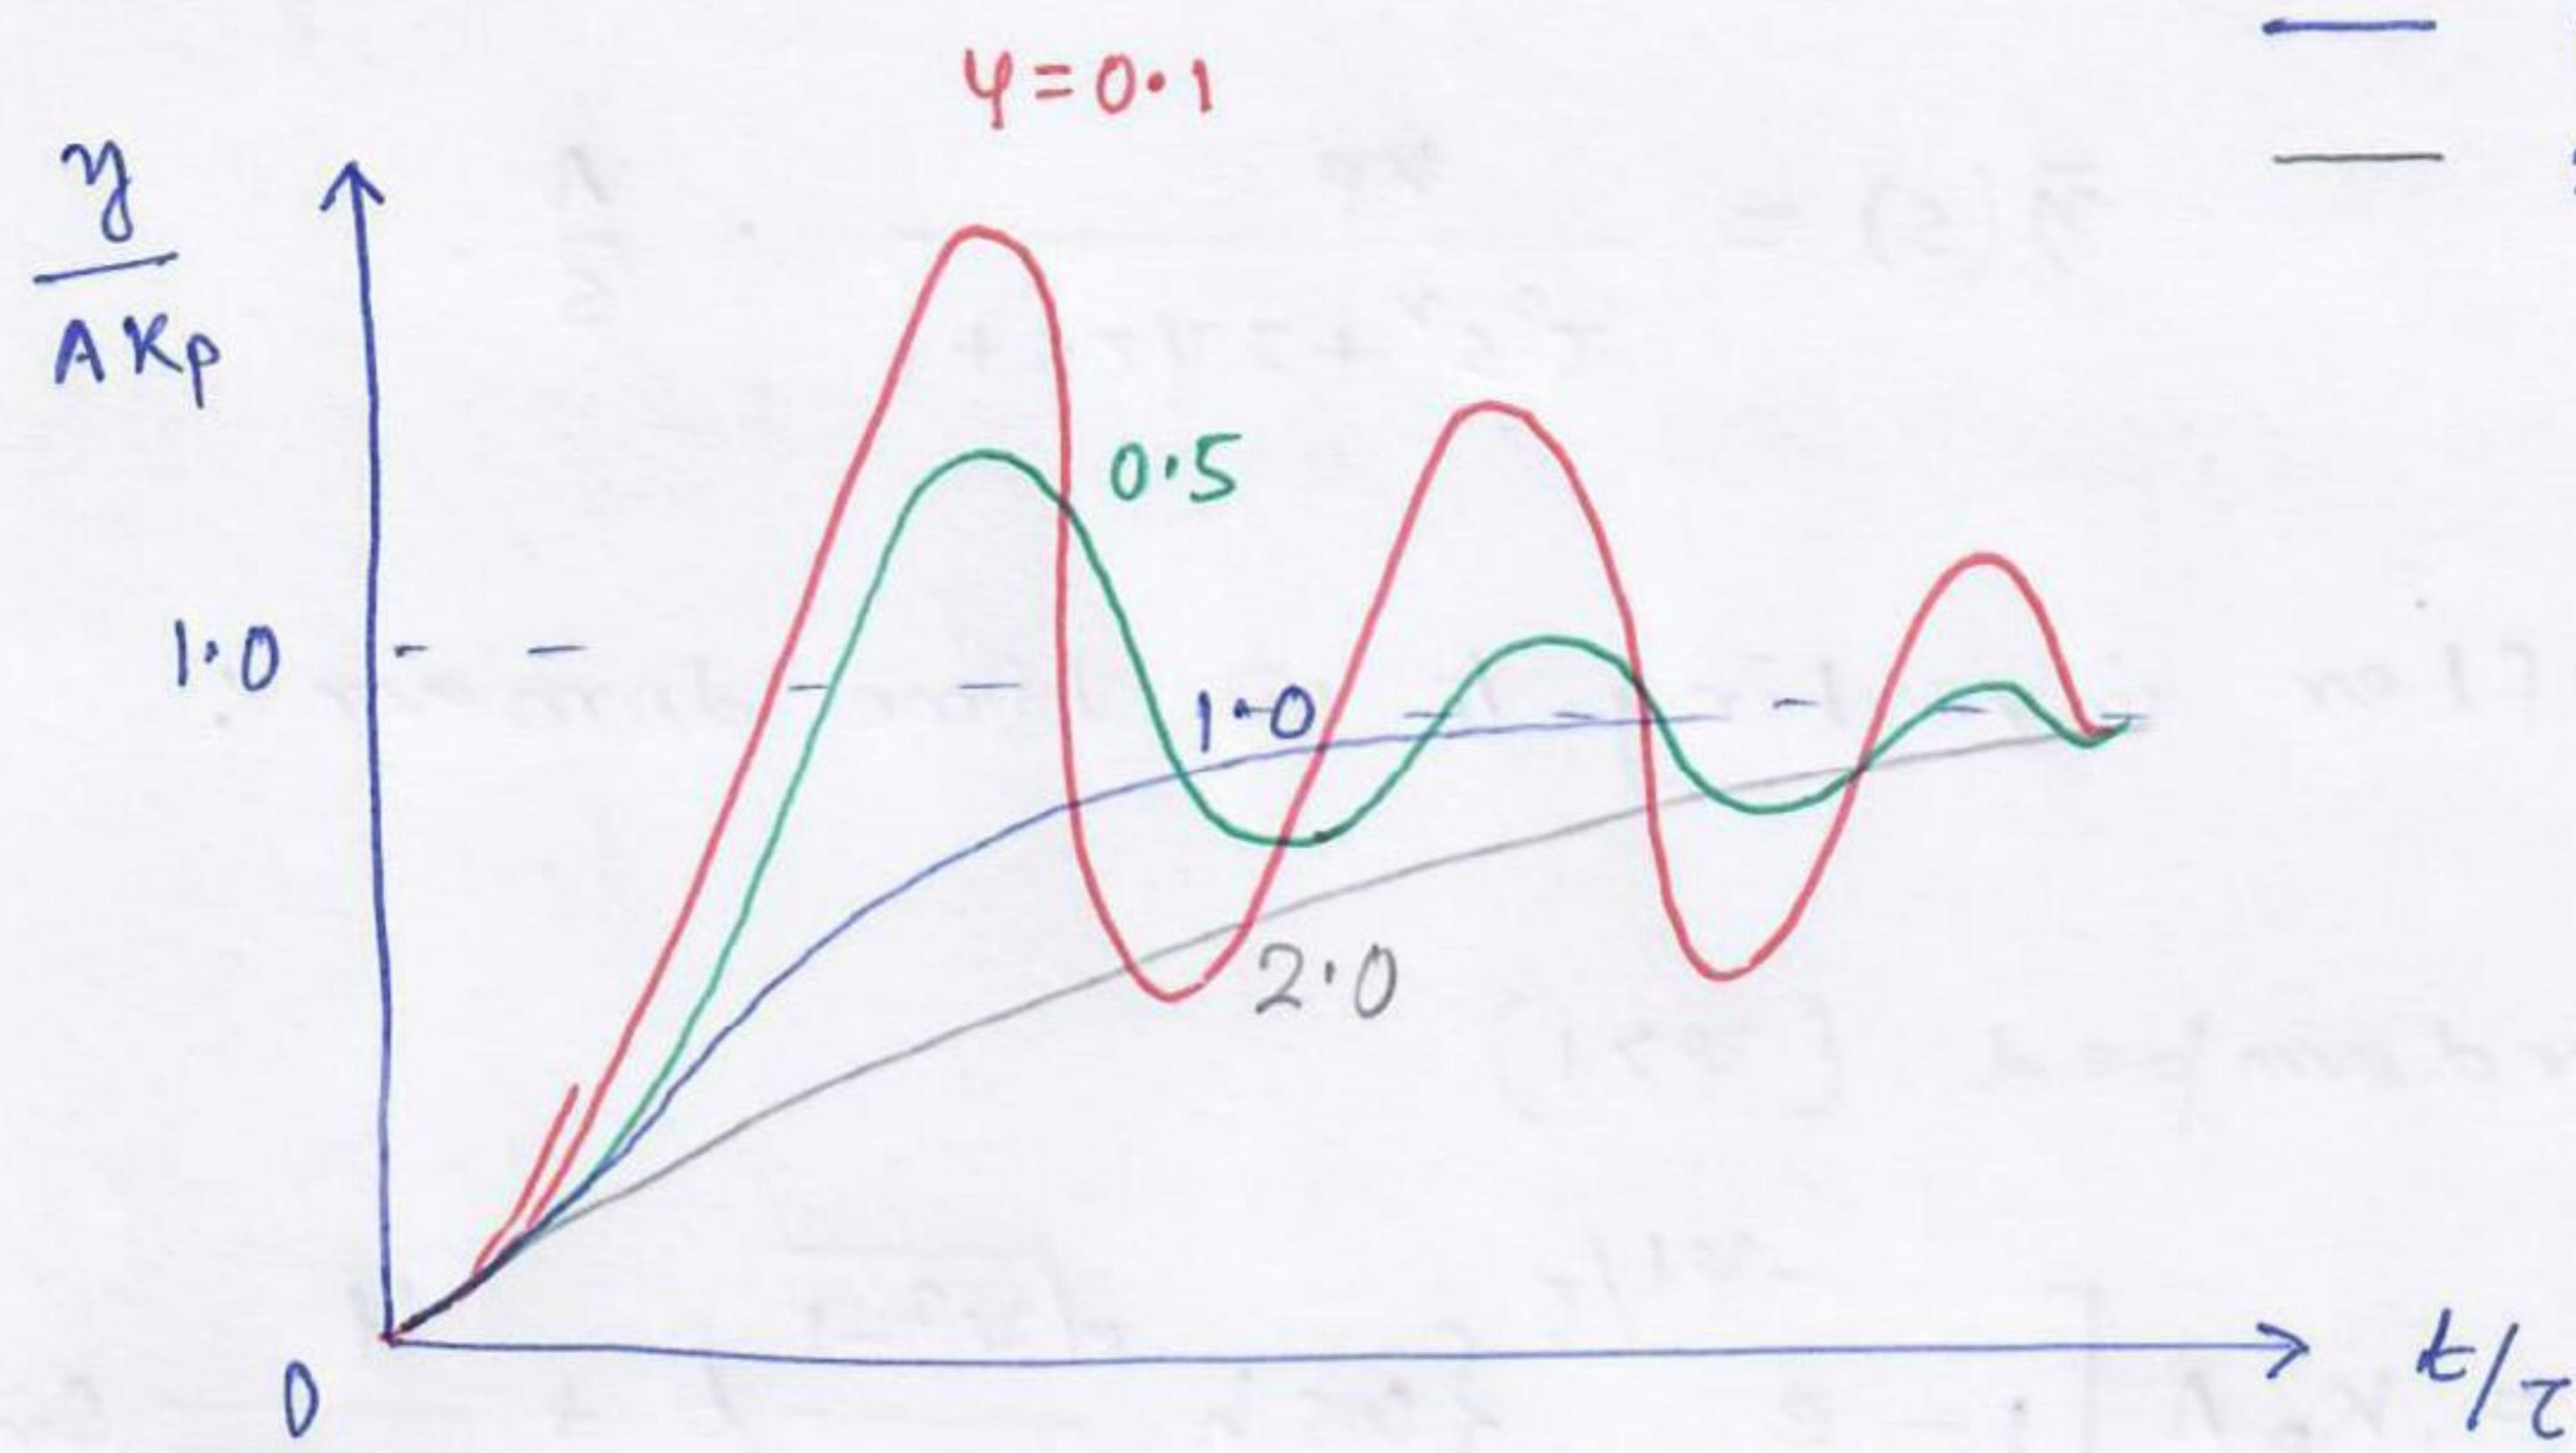


$$\underset{t \rightarrow \infty}{\text{Lt}} \frac{y(t)}{K_p A} = 1.0$$

Underdamped system: time-domain features.

Overdamped response \equiv 1st-order systems connected in series

Underdamped response \equiv system + controller

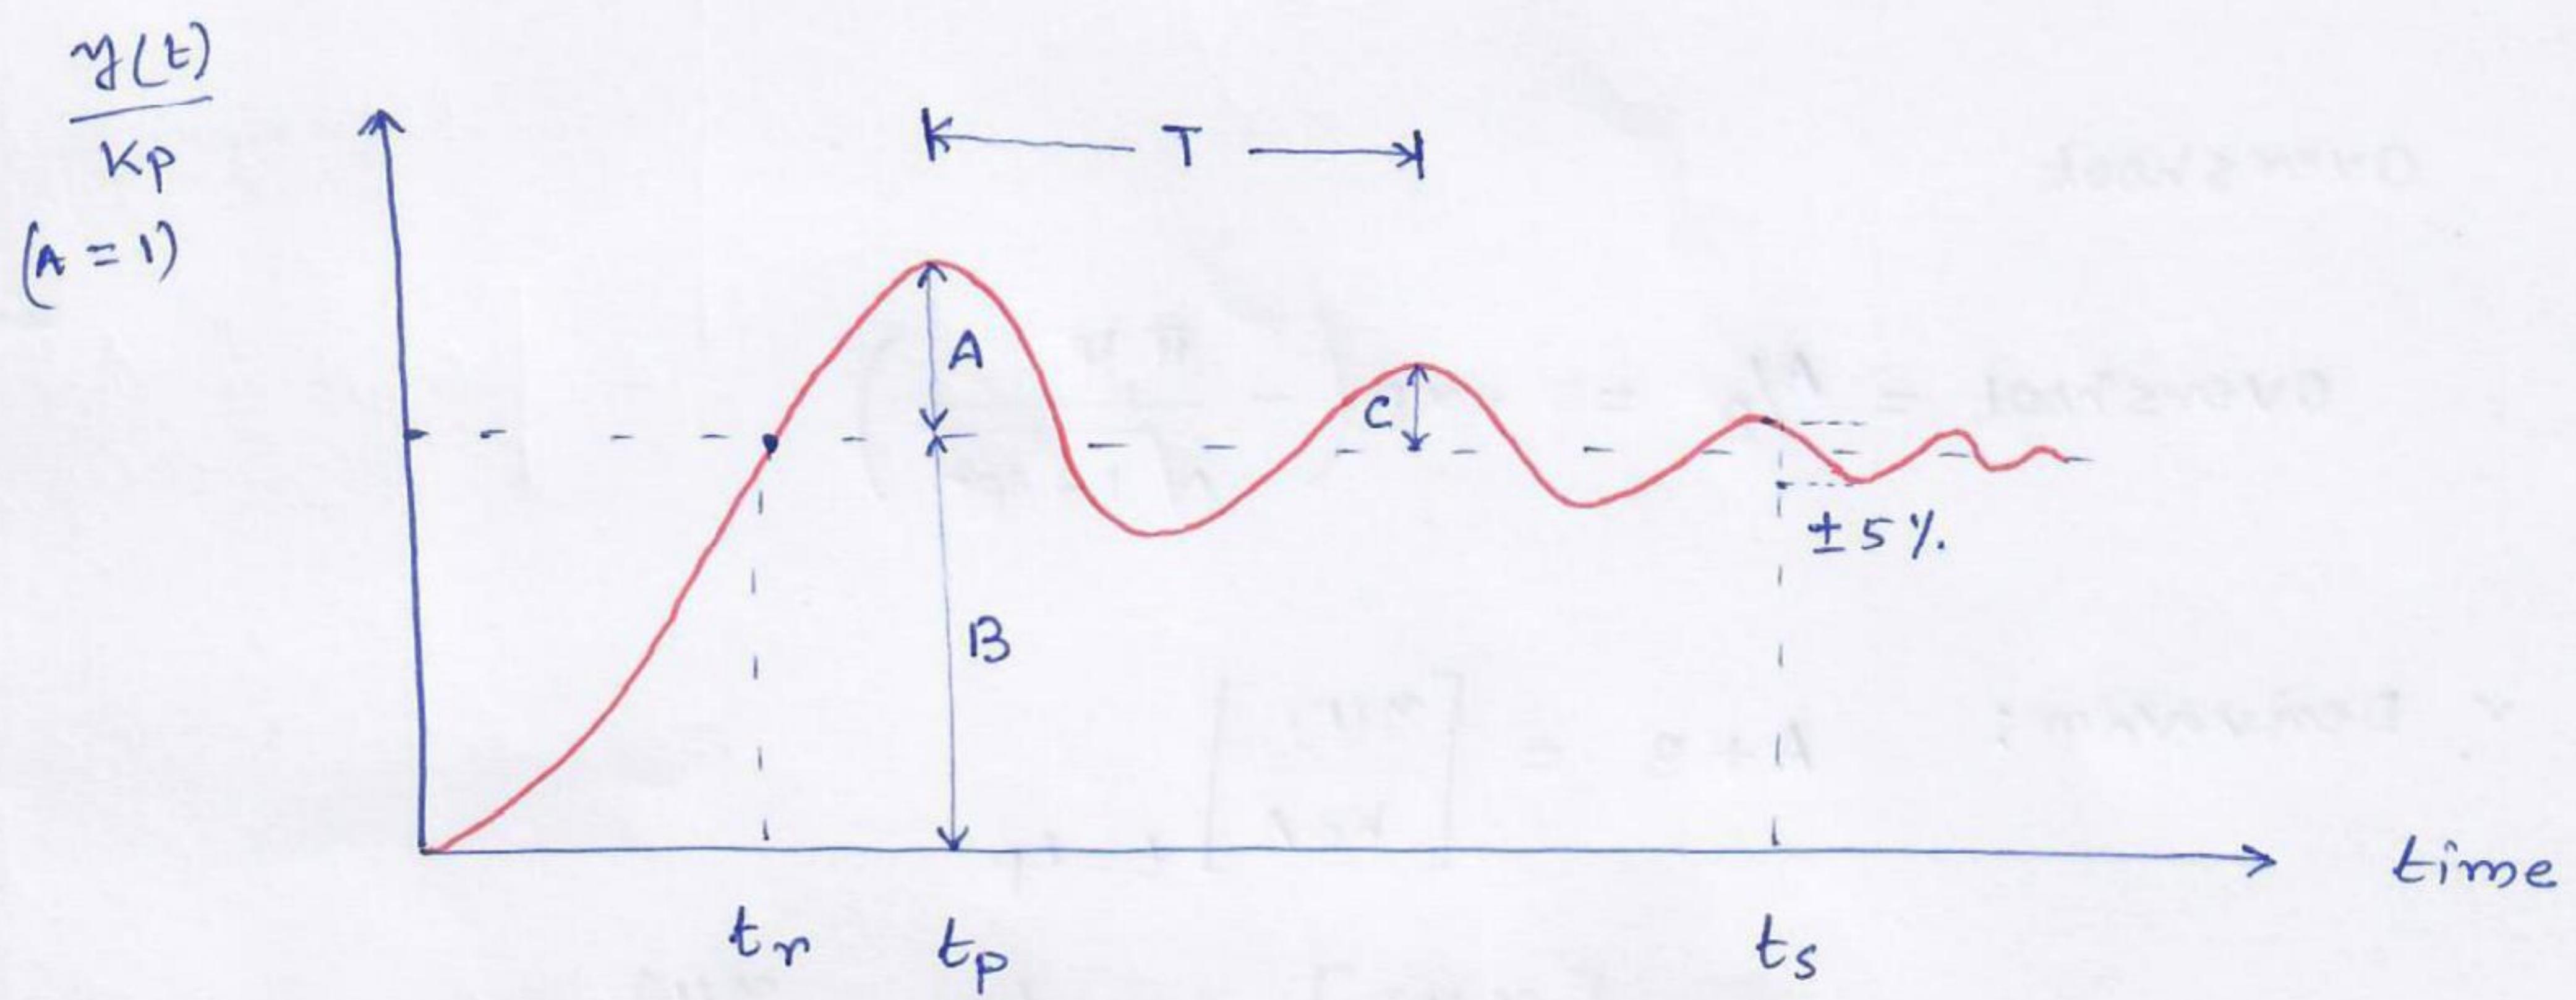


t_r = rise time

t_s = settling time

t_p = peak time / time to 1st peak

T = period.

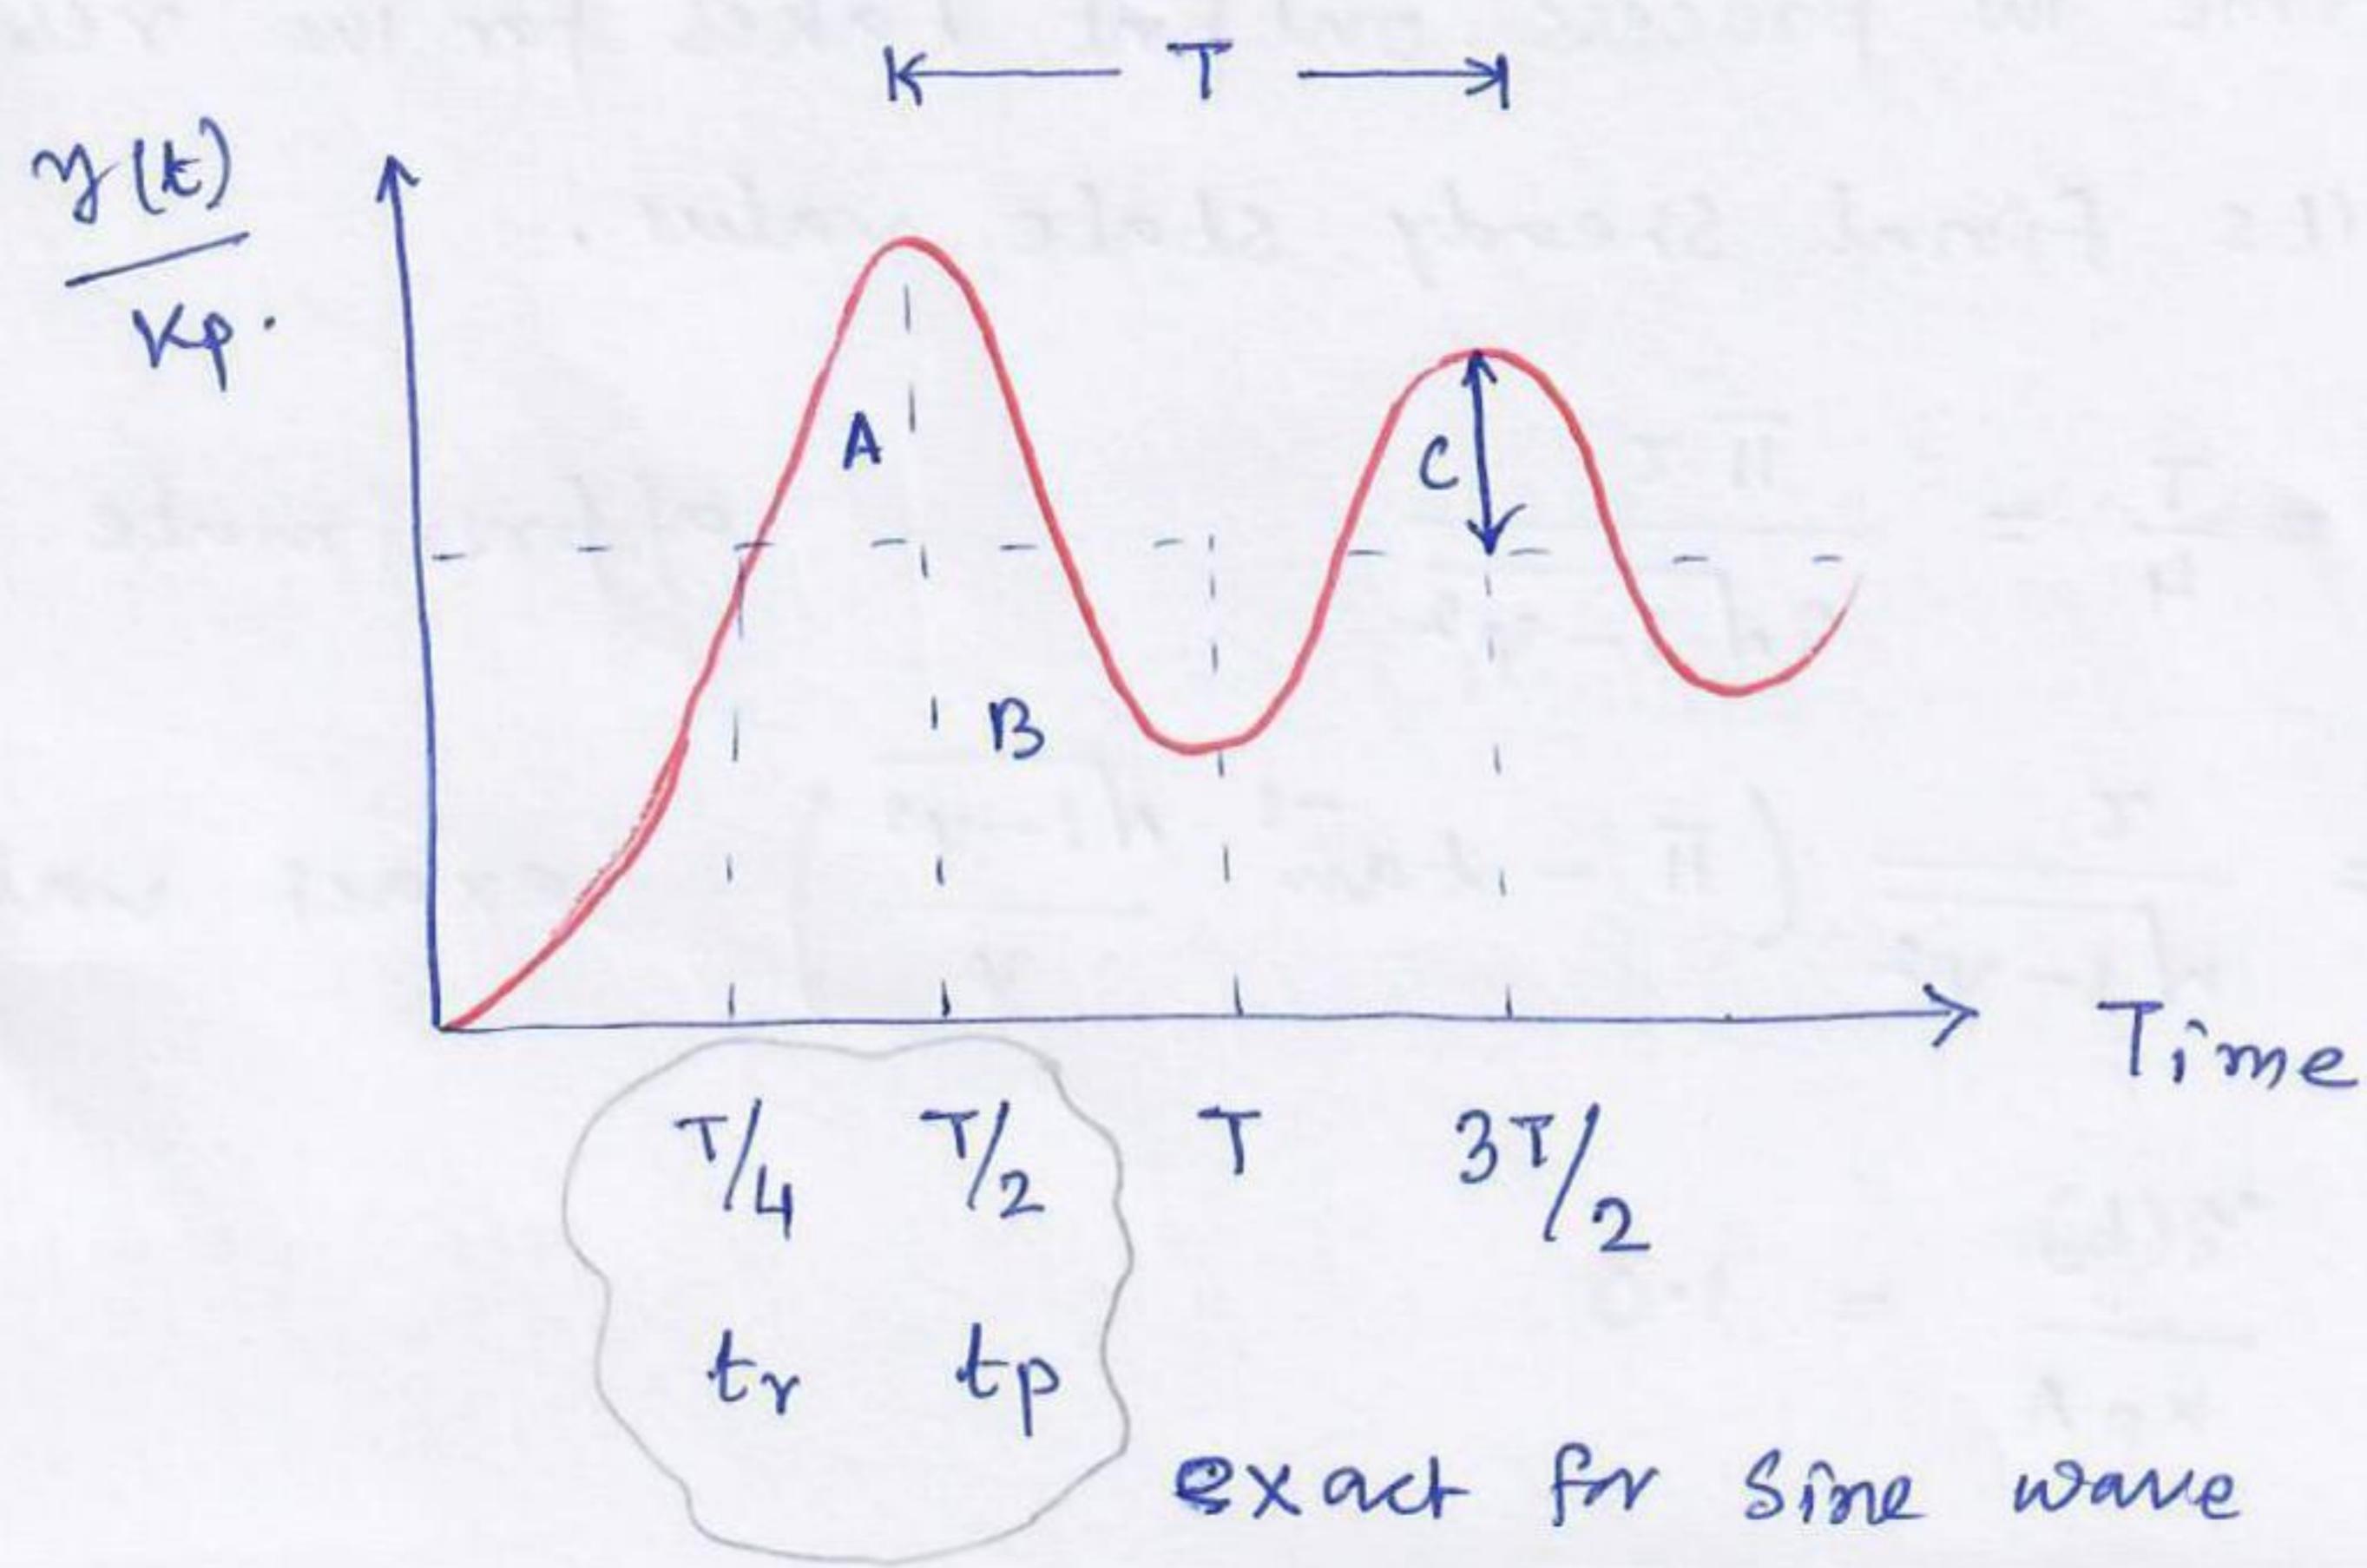

Peak time (t_p).

This is the time required for the output to reach its first maximum value.

$$t_p = \frac{T}{2} = \frac{\pi \tau}{\sqrt{1-\varphi^2}}$$

$$\omega T = 2\pi$$

$$T = \frac{2\pi}{\omega} = \frac{2\pi\tau}{\sqrt{1-\varphi^2}}$$

✓ Derivation : $\frac{d}{dt} \left[\frac{y}{K_p A} \right] = 0$

Overshoot

$$\text{Overshoot} = \frac{A}{B} = \exp \left(- \frac{\pi \varphi}{\sqrt{1-\varphi^2}} \right)$$

✓ Derivation : $A + B = \left[\frac{y(t)}{K_p A} \right]_{t=t_p}$

$$B = \left[\frac{y(t)}{K_p A} \right]_{ss} = \lim_{t \rightarrow \infty} \frac{y(t)}{K_p A} = 1.0$$

Rise time (t_r)

This is the time the process output takes for the response to first reach its final steady state value.

$$t_r = \frac{T}{4} = \frac{\pi \tau}{2\sqrt{1-\varphi^2}} \quad \dots \text{approximate}$$

$$t_r = \frac{\tau}{\sqrt{1-\varphi^2}} \left(\pi - \tan^{-1} \frac{\sqrt{1-\varphi^2}}{\varphi} \right) \quad \text{--- exact value}$$

✓ Derivation : $\frac{y(t)}{K_p A} = 1.0$

Decay ratio

$$\text{decay ratio} = \frac{C}{A} = \exp\left(-\frac{2\pi\varphi}{\sqrt{1-\varphi^2}}\right) = (\text{overshoot})^2$$

✓ Derivation :

$$B + C = \left[\frac{y(t)}{K_p A} \right]_{t=\frac{3T}{2}}$$

$$B = 1.0$$

$t_p = \frac{T}{2}$ (exactly). Another T is there to reach

the time corresponding to C . So, $t = T + \frac{T}{2} = \frac{3T}{2}$.

Settling time / Response time (t_s)

This is the time required for the process output to come within some prescribed band of the final steady state value and remain in this band. Typical band limits are $\pm 1\%$, $\pm 2\%$, $\pm 3\%$, $\pm 4\%$, $\pm 5\%$.

$$\text{For band limit of } \pm 1\% : t_s = \frac{5\tau}{\varphi}$$

$$\pm 2\% : t_s = \frac{4\tau}{\varphi}$$

✓ Note: When $t_s = \frac{4\tau}{\varphi} \Rightarrow -\frac{\varphi t_s}{\tau} = -4 \therefore e^{-4} \approx 0.02 (= 0.018)$

When $t_s = \frac{5\tau}{\varphi} \Rightarrow -\frac{\varphi t_s}{\tau} = -5 \therefore e^{-5} \approx 0.01 (= 0.0067)$

Ex. A step change of magnitude 10 is introduced into a system having im TF

$$\frac{\bar{y}(s)}{\bar{F}(s)} = \frac{4}{s^2 + 1.6s + 4}$$

- (i) comment on the type of response with finding φ .
- (ii) determine ultimate value of response and overshoot
- (iii) calculate im rise time.

✓ soln: (i)

$$\frac{\bar{y}(s)}{\bar{F}(s)} = \frac{4}{s^2 + 1.6s + 4} = \frac{1}{0.25s^2 + 0.4s + 1} = \frac{k_p}{\tau^2 s^2 + 2\zeta\tau s + 1}$$

so, $k_p = 1$, $\tau = 0.5$, $\zeta = 0.4$ (< 1) Underdamped response

(ii) Since $\bar{F}(s) = \frac{10}{s}$, $\bar{y}(s) = \frac{40}{s(s^2 + 1.6s + 4)}$

Ultimate value of response = $B = \lim_{s \rightarrow 0} [s \bar{y}(s)] = 10$


Overshoot = $\exp\left(-\frac{\pi\varphi}{\sqrt{1-\varphi^2}}\right) = 0.254 = A/B$.

(iii) Rise time $t_r = \frac{\tau}{\sqrt{1-\varphi^2}} \left(\pi - \tan^{-1} \frac{\sqrt{1-\varphi^2}}{\varphi} \right) = 1.08$


Second - order systems

- Connecting 2 or more 1st-order systems in series
- Including a controller with a 1st- or higher-order system

Two 1st-order systems in series

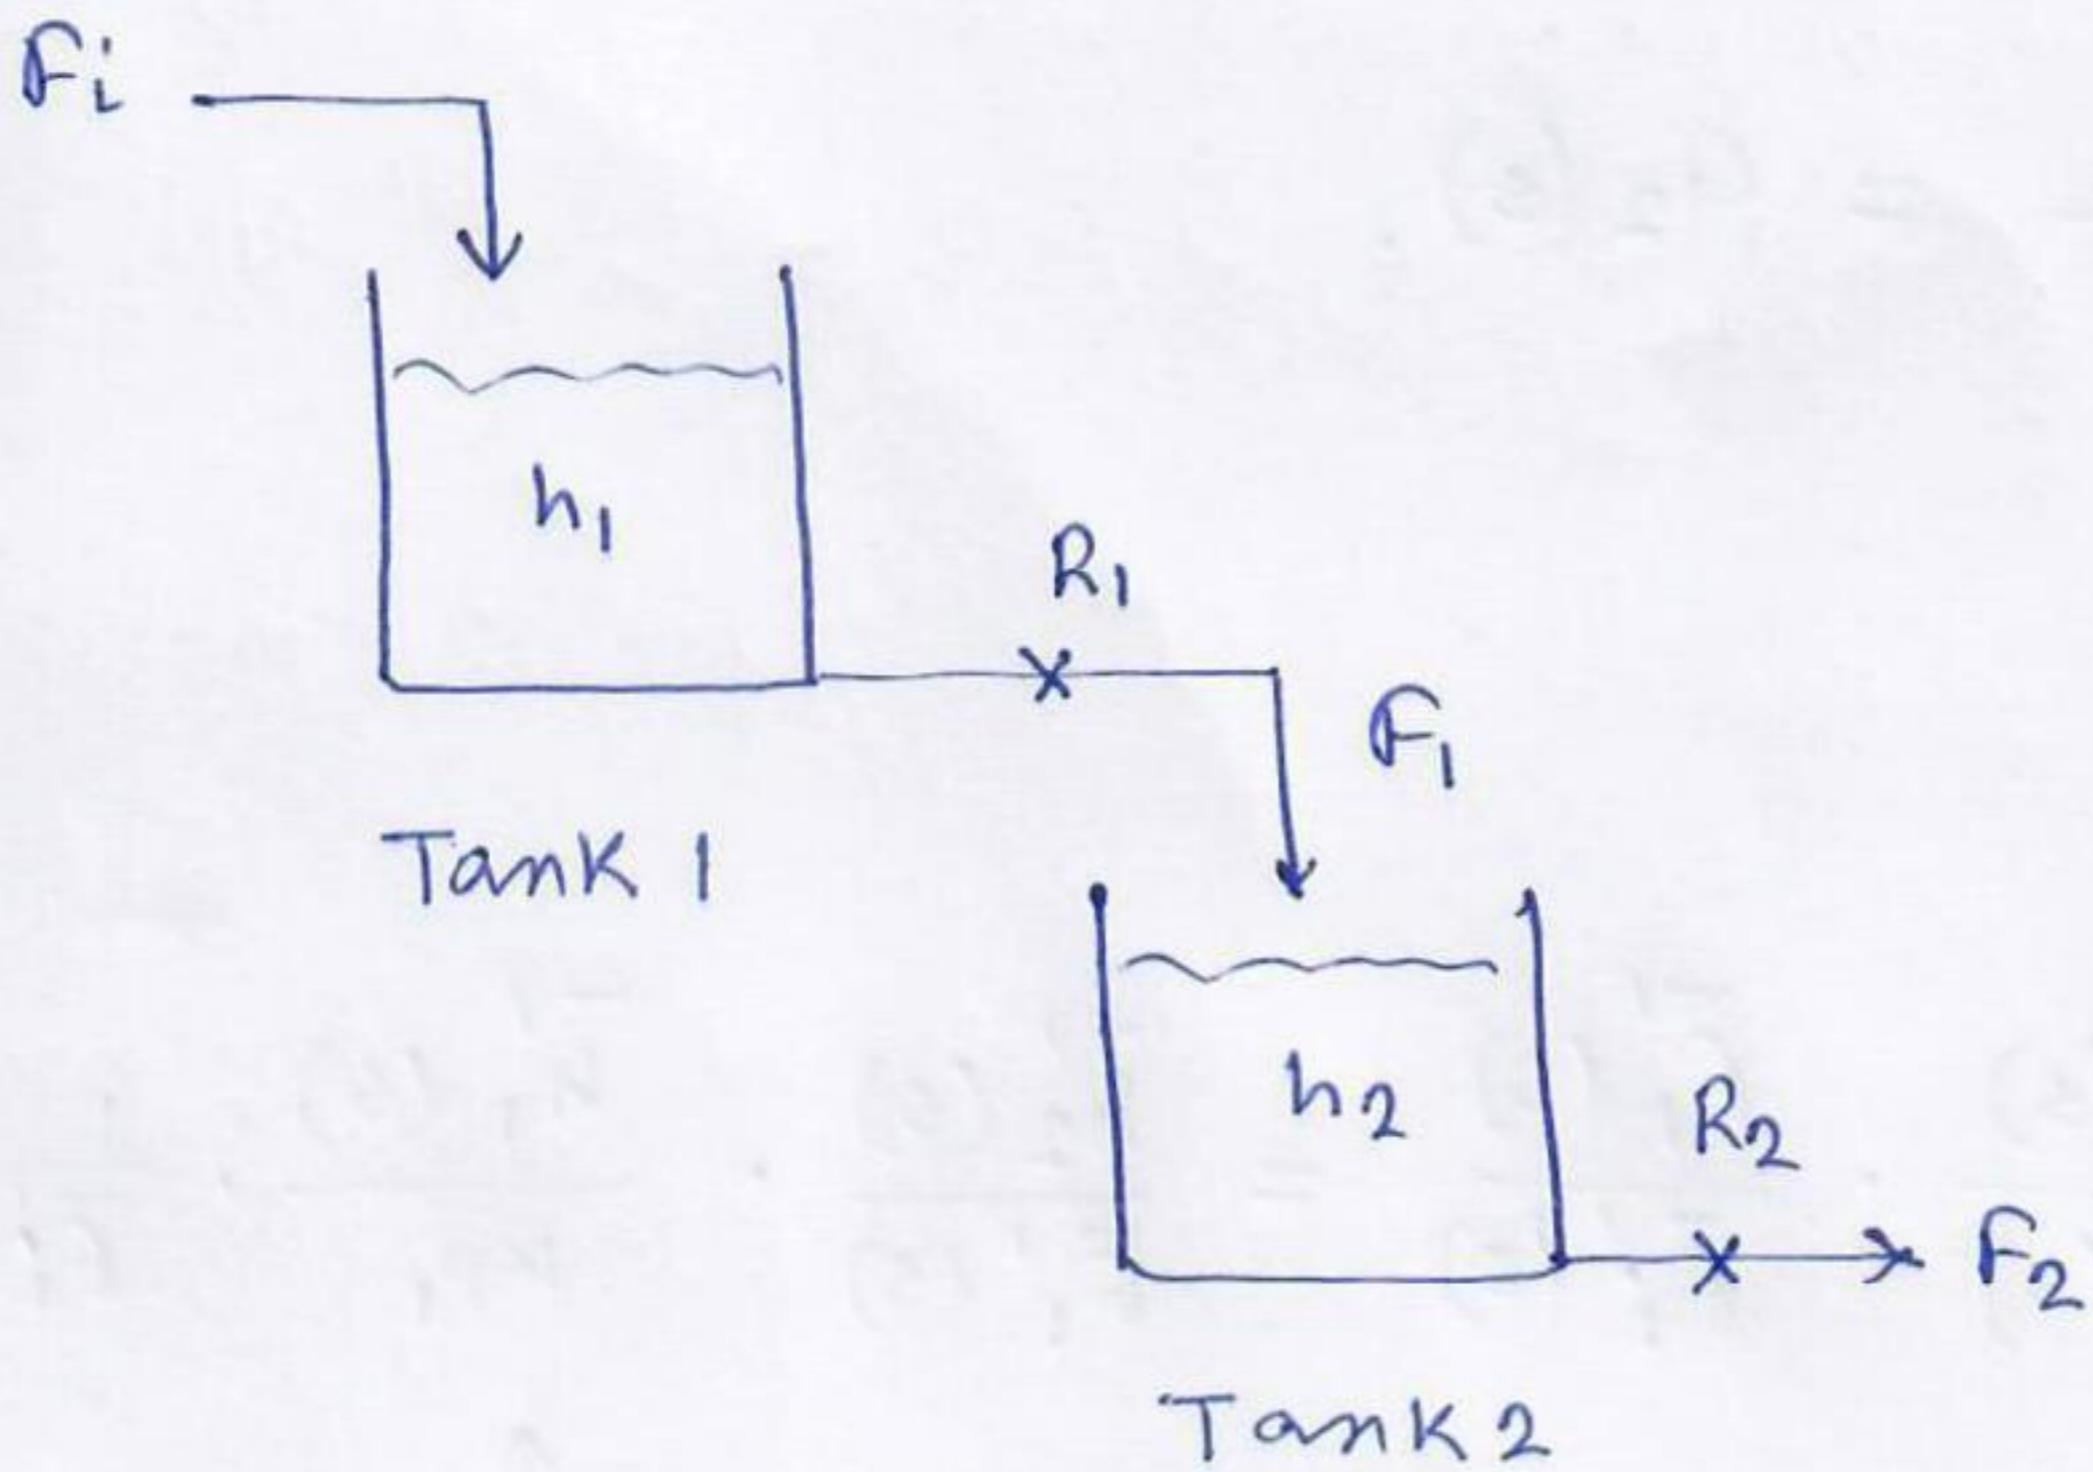

Noninteracting tanks.

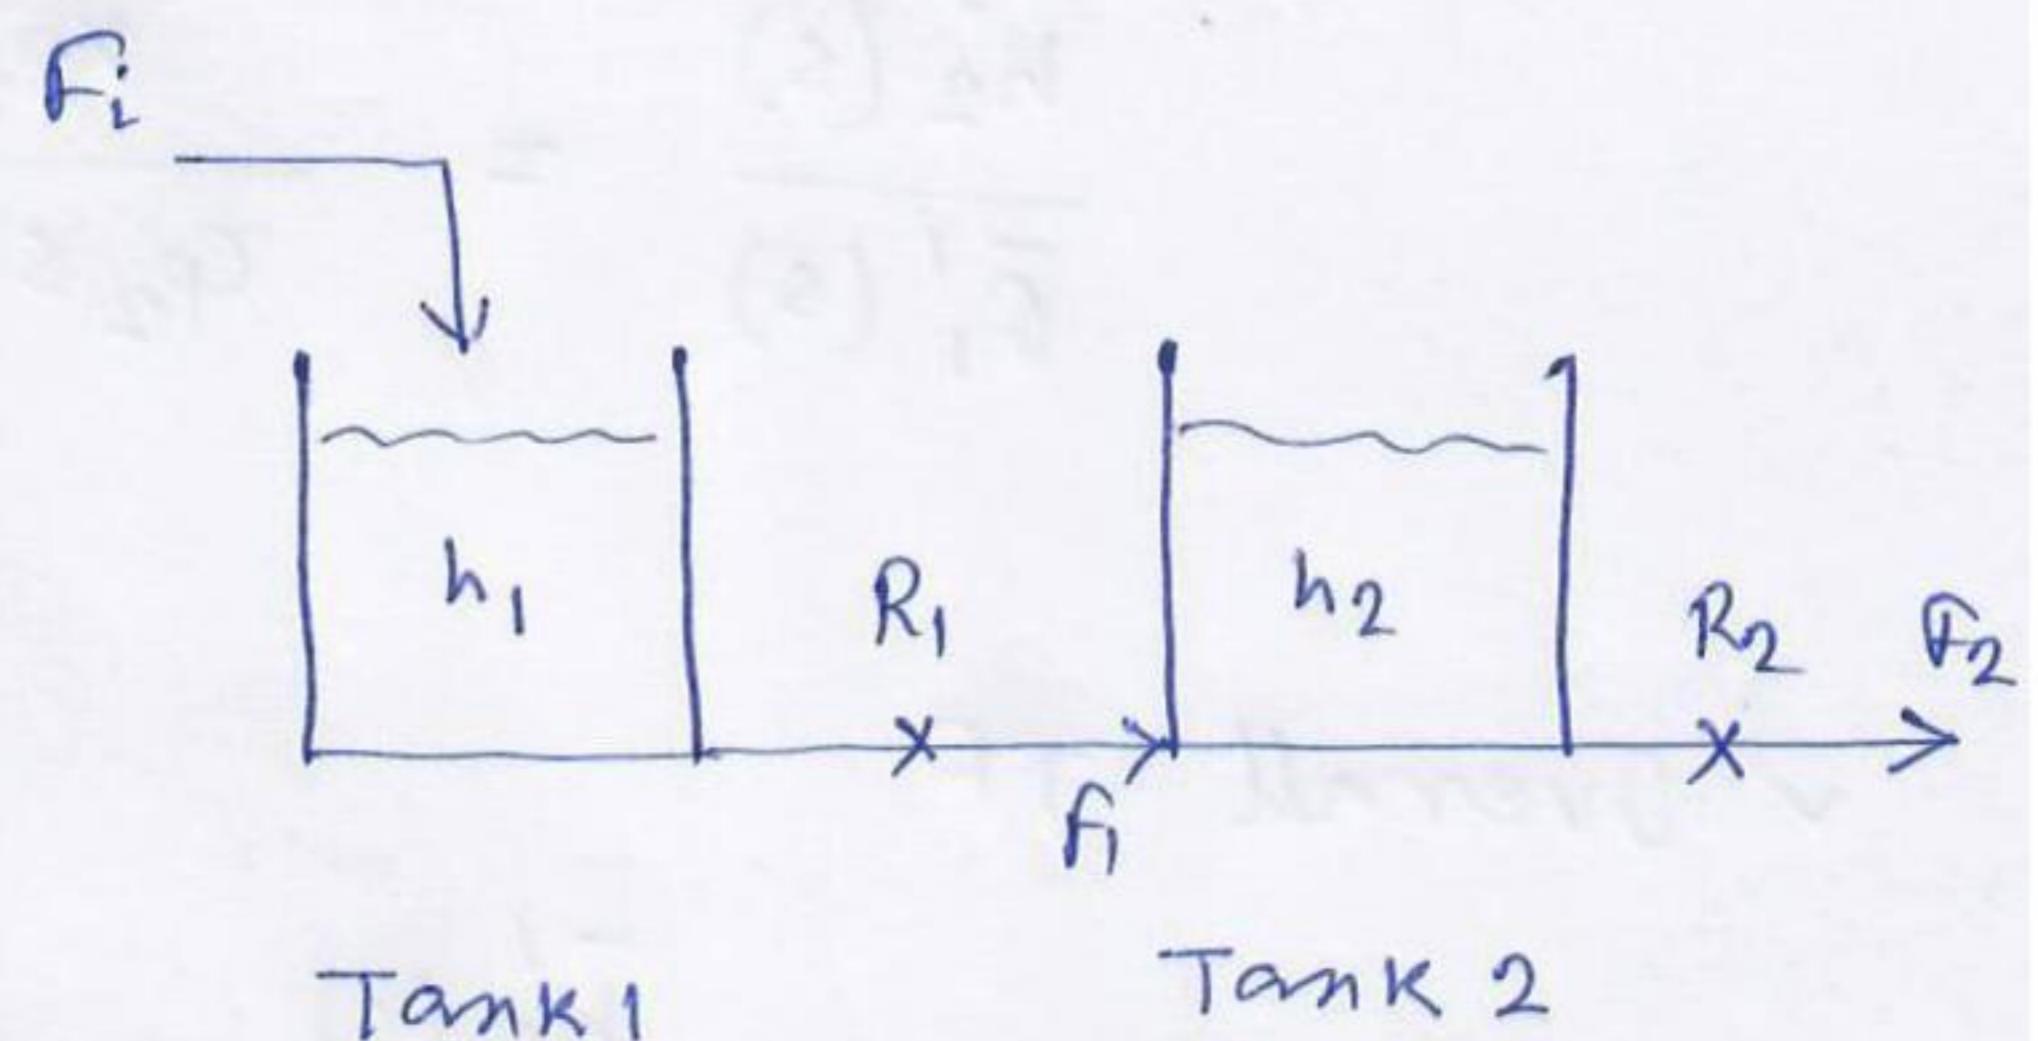

Interacting tanks.

Noninteracting tanks.

$$\text{Tank 1: } A_1 \frac{dh_1}{dt} = F_i - F_1 = F_i - \frac{h_1}{R_1}$$

$$A_1 R_1 \frac{dh'_1}{dt} + h'_1 = R_1 F'_i$$

$$\bar{\zeta}_{p_1} \frac{dh'_1}{dt} + h'_1 = \kappa_{p_1} F'_i$$

$$\bar{\zeta}_{p_1} = A_1 R_1$$

$$\kappa_{p_1} = R_1$$

$$\frac{-h'_1(s)}{F'_i(s)} = \frac{\kappa_{p_1}}{\bar{\zeta}_{p_1} s + 1} = G_1(s).$$

$$\checkmark \text{ Tank 2: } A_2 \frac{dh_2}{dt} = f_1 - f_2 = f_1 - \frac{h_2}{R_2}$$

$$A_2 R_2 \frac{dh'_2}{dt} + h'_2 = R_2 f'_1$$

$$\tau_{p_2} = A_2 R_2$$

$$\tau_{p_2} \frac{dh'_2}{dt} + h'_2 = K_{p_2} f'_1$$

$$K_{p_2} = R_2$$

$$\frac{\bar{h}'_2(s)}{\bar{f}'_1(s)} = \frac{K_{p_2}}{\tau_{p_2}s + 1} = G_2(s),$$

\checkmark Overall TF

$$\begin{aligned} G_0(s) &= \frac{\bar{h}'_2(s)}{\bar{f}'_1(s)} = \frac{\bar{h}'_2(s)}{\bar{f}'_1(s)} \cdot \frac{\bar{f}'_1(s)}{\bar{f}'_1(s)} = \frac{\bar{h}'_2(s)}{\bar{f}'_1(s)} \cdot \frac{\bar{h}'_1(s)}{K_{p_1}} \cdot \frac{1}{\bar{f}'_1(s)}, \\ &= \frac{K_{p_2}}{(\tau_{p_1}s + 1)(\tau_{p_2}s + 1)} \end{aligned}$$

\uparrow
 $f'_1 = \frac{h'_1}{R_1} = \frac{h'_1}{K_{p_1}}$

\checkmark Inverting it,

$$h'_2(t) = K_{p_2} \left[1 + \frac{1}{\tau_{p_2} - \tau_{p_1}} \left(\tau_{p_1} e^{-t/\tau_{p_1}} - \tau_{p_2} e^{-t/\tau_{p_2}} \right) \right]$$

Remarks.


1. Connecting two first-order systems yields 2nd-order system

↑


see $G_0(s)$.

2. Response of overdamped system is S-shaped (it initially changes slowly and then it picks up speed)

1st-order response — largest rate of change at the beginning.

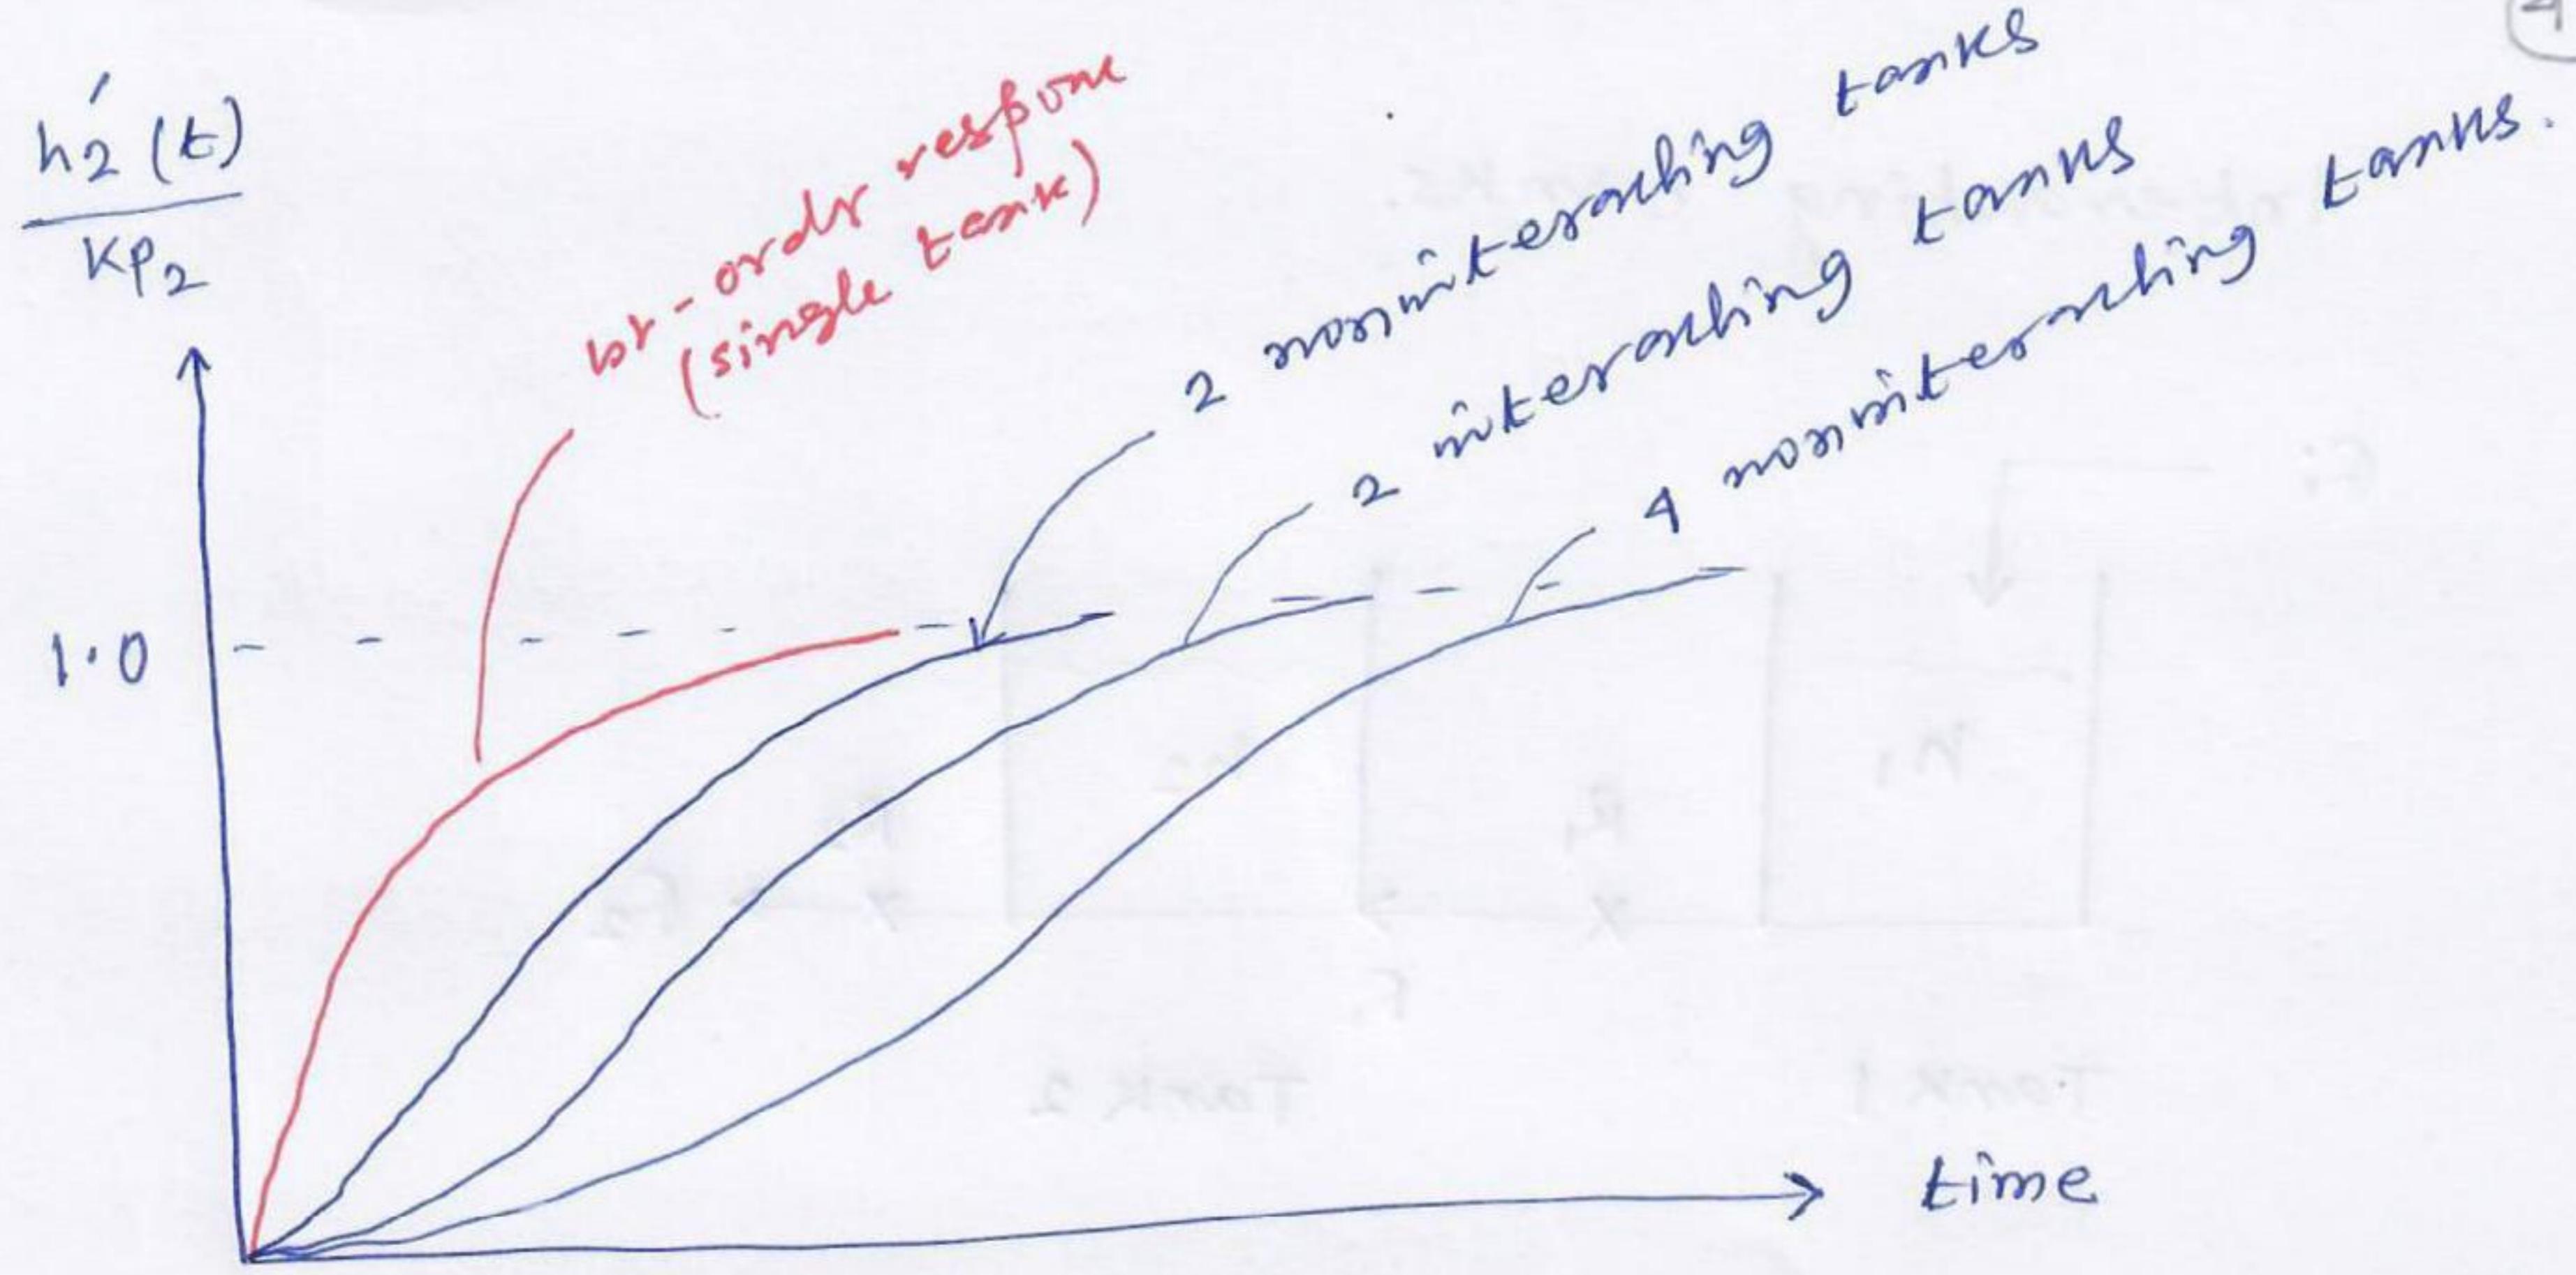


3. As the no. of capacities in series increases, the delay in the initial response becomes more pronounced.

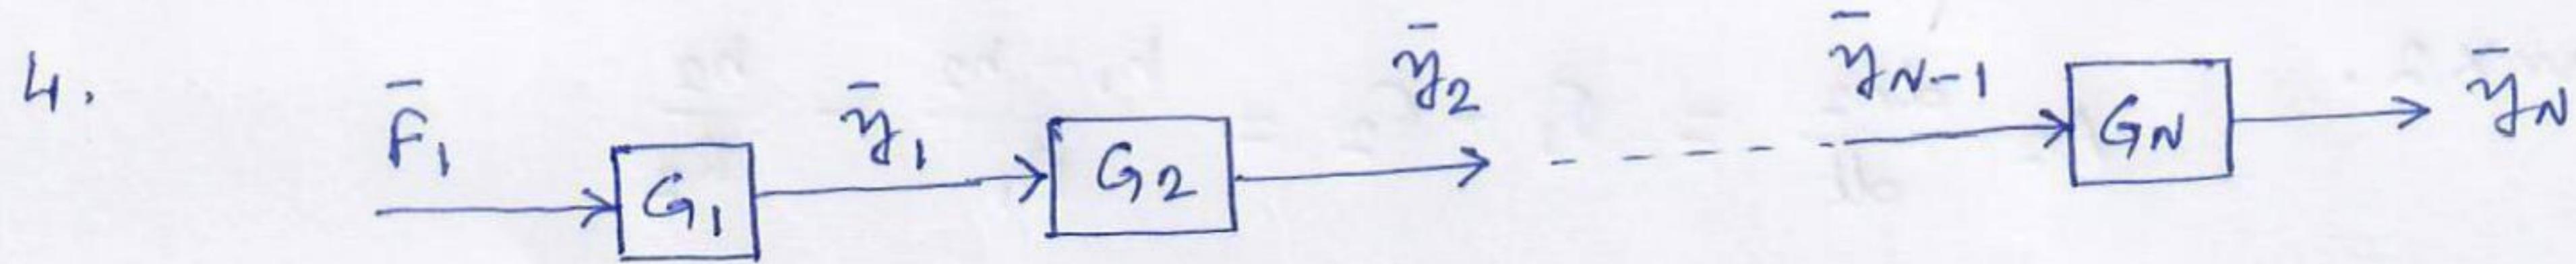

$$G_o(s) = G_1 \cdot G_2 \cdot \dots \cdot G_N = \frac{k_{p_1} k_{p_2} \dots k_{p_N}}{(T_{p_1}s+1)(T_{p_2}s+1) \dots (T_{p_N}s+1)}$$

Interacting tanks.

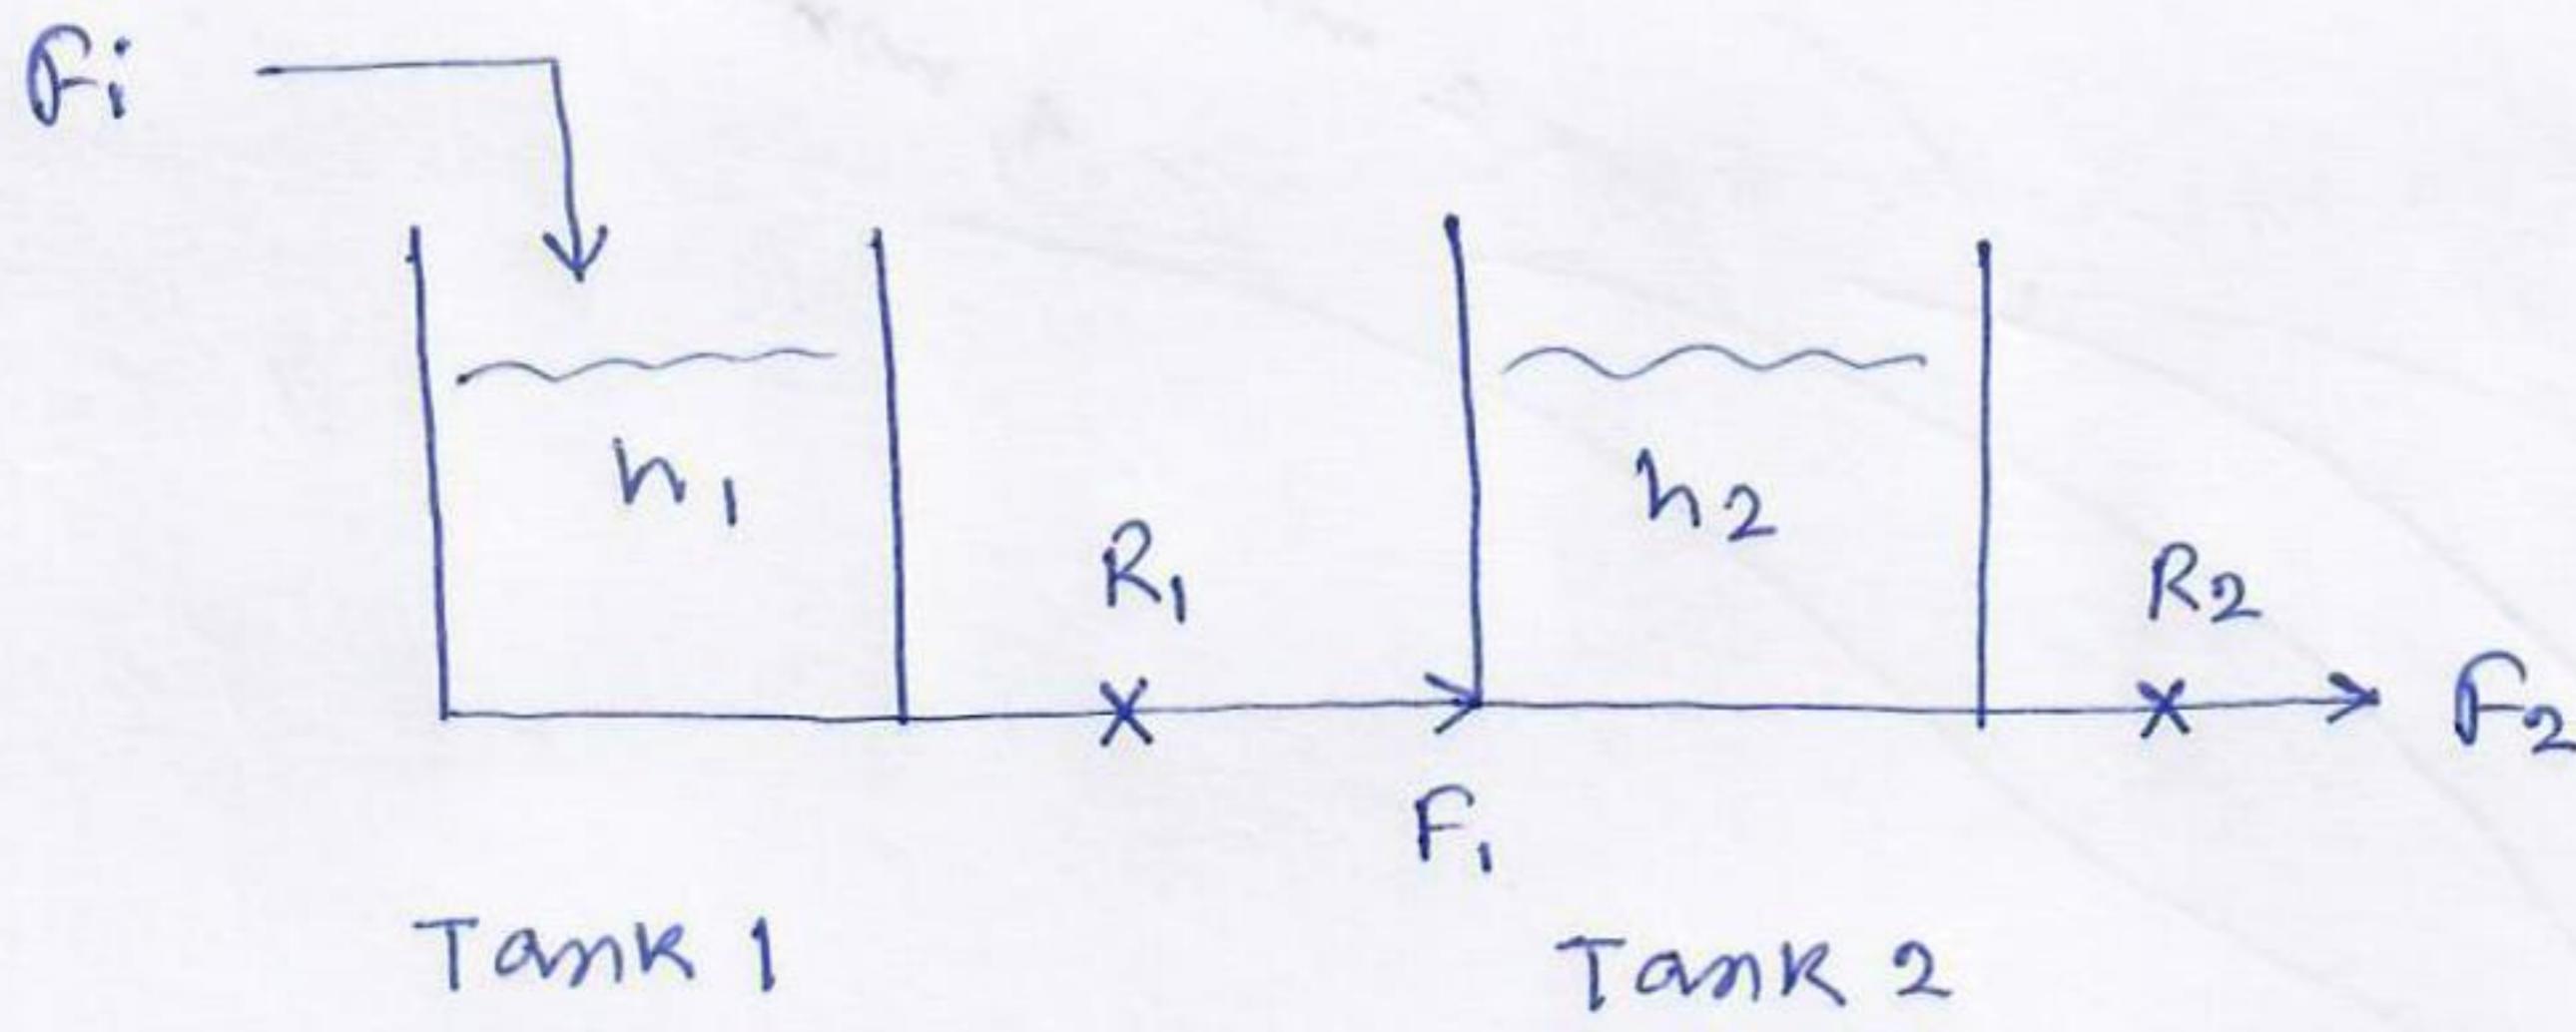

$$\text{Tank 1. } A_1 \frac{dh_1}{dt} = F_i - F_1 = F_i - \frac{h_1 - h_2}{R_1}$$

$$A_1 R_1 \frac{dh_1'}{dt} + h_1' - h_2' = R_1 F_i'$$

$$\text{Tank 2. } A_2 \frac{dh_2}{dt} = F_1 - F_2 = \frac{h_1 - h_2}{R_1} - \frac{h_2}{R_2}$$

$$A_2 R_2 \frac{dh_2'}{dt} + \left(1 + \frac{R_2}{R_1}\right) h_2' - \frac{R_2}{R_1} h_1' = 0$$

Solving,

$$\bar{h}_1'(s) = \frac{\tau_{p_2} R_1 s + (R_1 + R_2)}{\tau_{p_1} \tau_{p_2} s^2 + (\tau_{p_1} + \tau_{p_2} + A_1 R_2) s + 1} \bar{F}_i'(s)$$

$$\bar{h}_2'(s) = \frac{R_2}{\tau_{p_1} \tau_{p_2} s^2 + (\tau_{p_1} + \tau_{p_2} + \cancel{A_1 R_2}) s + 1} \bar{F}_i'(s) \dots \text{Interacting}$$

$$\bar{h}_2'(s) = \frac{R_2}{\tau_{p_1} \tau_{p_2} s^2 + (\tau_{p_1} + \tau_{p_2}) s + 1} \bar{F}_i'(s) \dots \text{noninteracting}$$

Remarks.

1. Above two equations differ only by the term $A_1 R_2$. This may be thought of as the interaction factor.
2. Connecting two 1st-order systems in series yields 2nd-order system.
3. Poles are :


$$P_{1,2} = \frac{-(\tau_{p_1} + \tau_{p_2} + A_1 R_2) \pm \sqrt{(\tau_{p_1} + \tau_{p_2} + A_1 R_2)^2 - 4 \tau_{p_1} \tau_{p_2}}}{2 \tau_{p_1} \tau_{p_2}}$$

Since

$$(\tau_{p_1} + \tau_{p_2} + A_1 R_2)^2 - 4 \tau_{p_1} \tau_{p_2} > 0$$

so P_1 and P_2 are distinct and real poles. Thus, the response of interacting capacities is always overdamped.

1st-order process + controller = 2nd-order process.

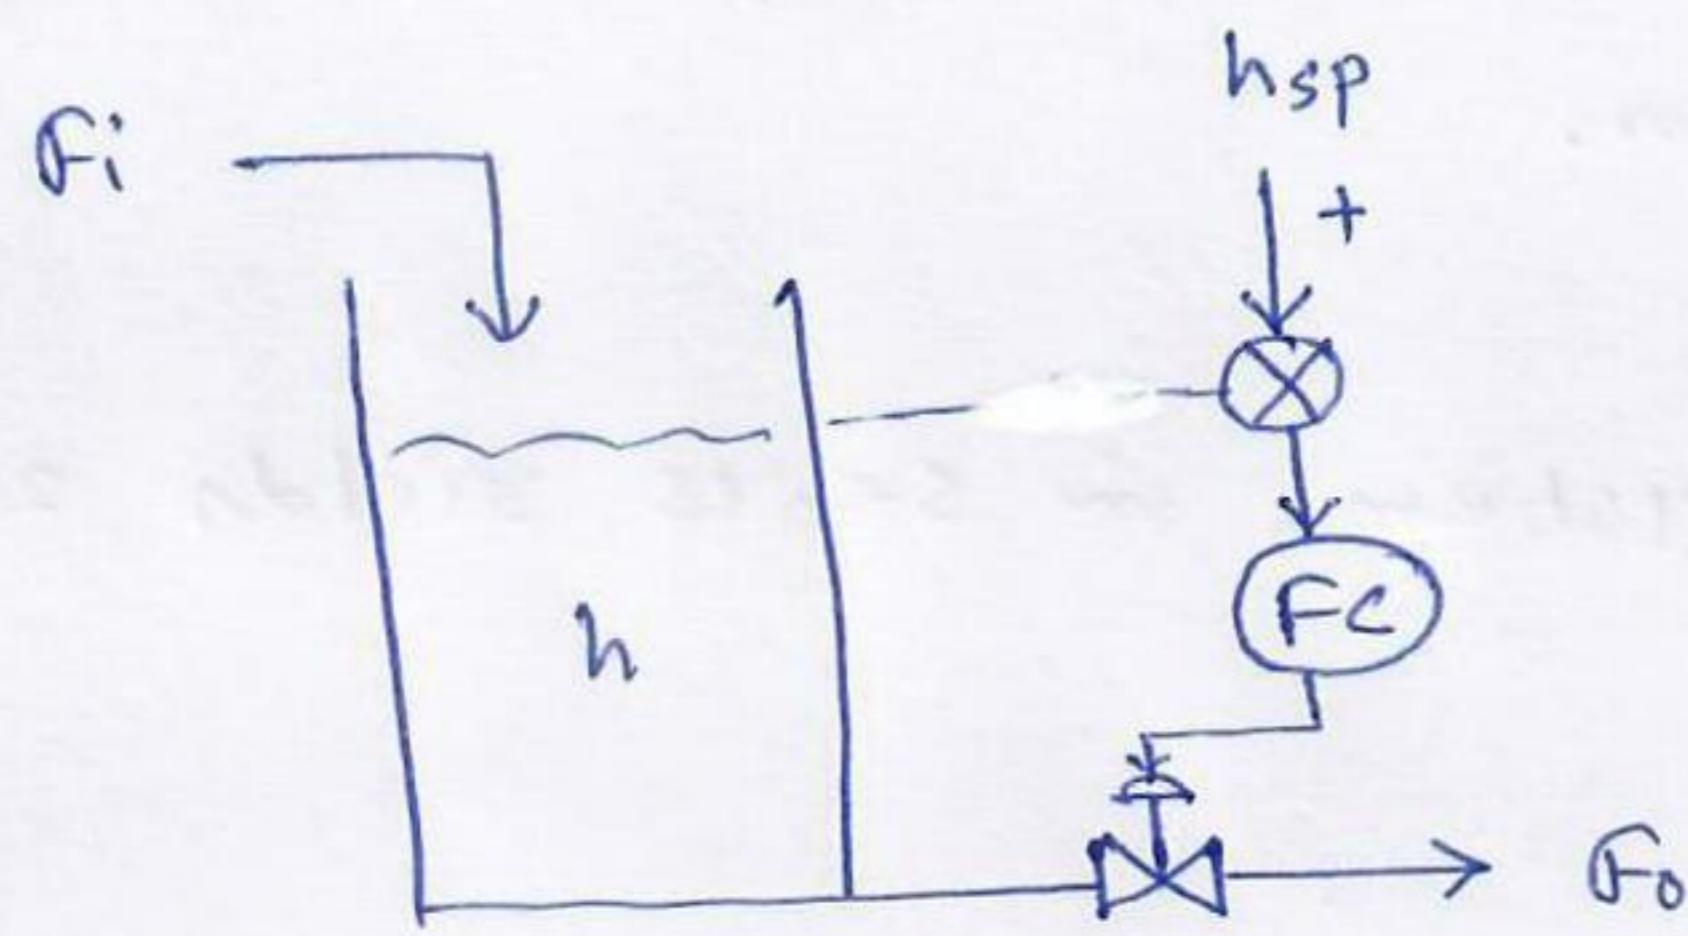

$$\frac{CV}{h} \quad \frac{MV}{F_o}$$

Model : $A \frac{dh'}{dt} = F_i' - F_o' \quad \dots \text{open-loop}$

Controller : $F_o = F_{os} + K_c h' + \frac{K_c}{\tau_i} \int h' dt \quad \dots \text{PI controller}$

$K_c, \tau_i \rightarrow$ controller parameters (+ve values).

$$h' = h - h_s$$

(i) If $h' = 0$ (i.e., $h = h_s$), then $F_o = F_{os}$ no change of

valve opening.

(ii) If $h' < 0$ ($h < h_s$, level goes down), then $F_o < F_{os}$

controller reduces F_o so h starts increasing.

(iii) If $h' > 0$ ($h > h_s$, level goes up), then $F_o > F_{os}$

controller increases F_o so h starts decreasing.

Model : $A \frac{dh'}{dt} + K_c h' + \frac{K_c}{\tau_i} \int h' dt = F_i' \quad \dots \text{closed-loop}$

Taking L-transform:

$$AS\bar{h}'(s) + K_c \bar{h}'(s) + \frac{K_c}{\tau_i} \cdot \frac{1}{s} \cdot \bar{h}'(s) = \bar{f}_i'(s).$$

$$\frac{\bar{h}'(s)}{\bar{f}_i'(s)} = \frac{\tau_i/K_c \cdot s}{\frac{A\tau_i}{K_c}s^2 + \tau_i s + 1} = \frac{K_p s}{\tau^2 s^2 + 2\zeta\tau s + 1}$$

where, $K_p = \frac{\tau_i}{K_c}$ $\tau^2 = \frac{A\tau_i}{K_c}$ $2\zeta\tau = \tau'$

Then we get:

$$\zeta = \sqrt{\frac{A\tau_i}{K_c}} \quad \zeta = \frac{1}{2} \sqrt{\frac{K_c \tau'}{A}}$$

Remarks.

1. Liquid level + controller \equiv 2nd-order process.
(1st-order process)

$\sqrt{\frac{K_c \tau'}{A}}$	ζ	Type
< 1	< 1	Underdamped
$= 1$	1	Critically damped
> 1	> 1	Overdamped.

Higher-order systems.

Three classes of higher-order systems:

1. N first-order processes in series
2. Processes with dead-time
3. Processes with inverse response.

N capacities in series

Previously we discussed the dynamics of 2 capacities in series. When the input is changed by a step, we can extend those conclusions to the systems of N capacities.

✓ N noninteracting capacities


(i) Overdamped response (S-shaped and sluggish).

(ii) Increasing the no. of capacities in series increases the sluggishness of the response.

(iii) $G_o(s) = G_1(s) G_2(s) \dots G_N(s) = \frac{k_1, k_2, \dots, k_N}{(\tau_1 s + 1)(\tau_2 s + 1) \dots (\tau_N s + 1)}$



✓ N interacting capacities

(i) Interacting increases the sluggishness of the overall response.


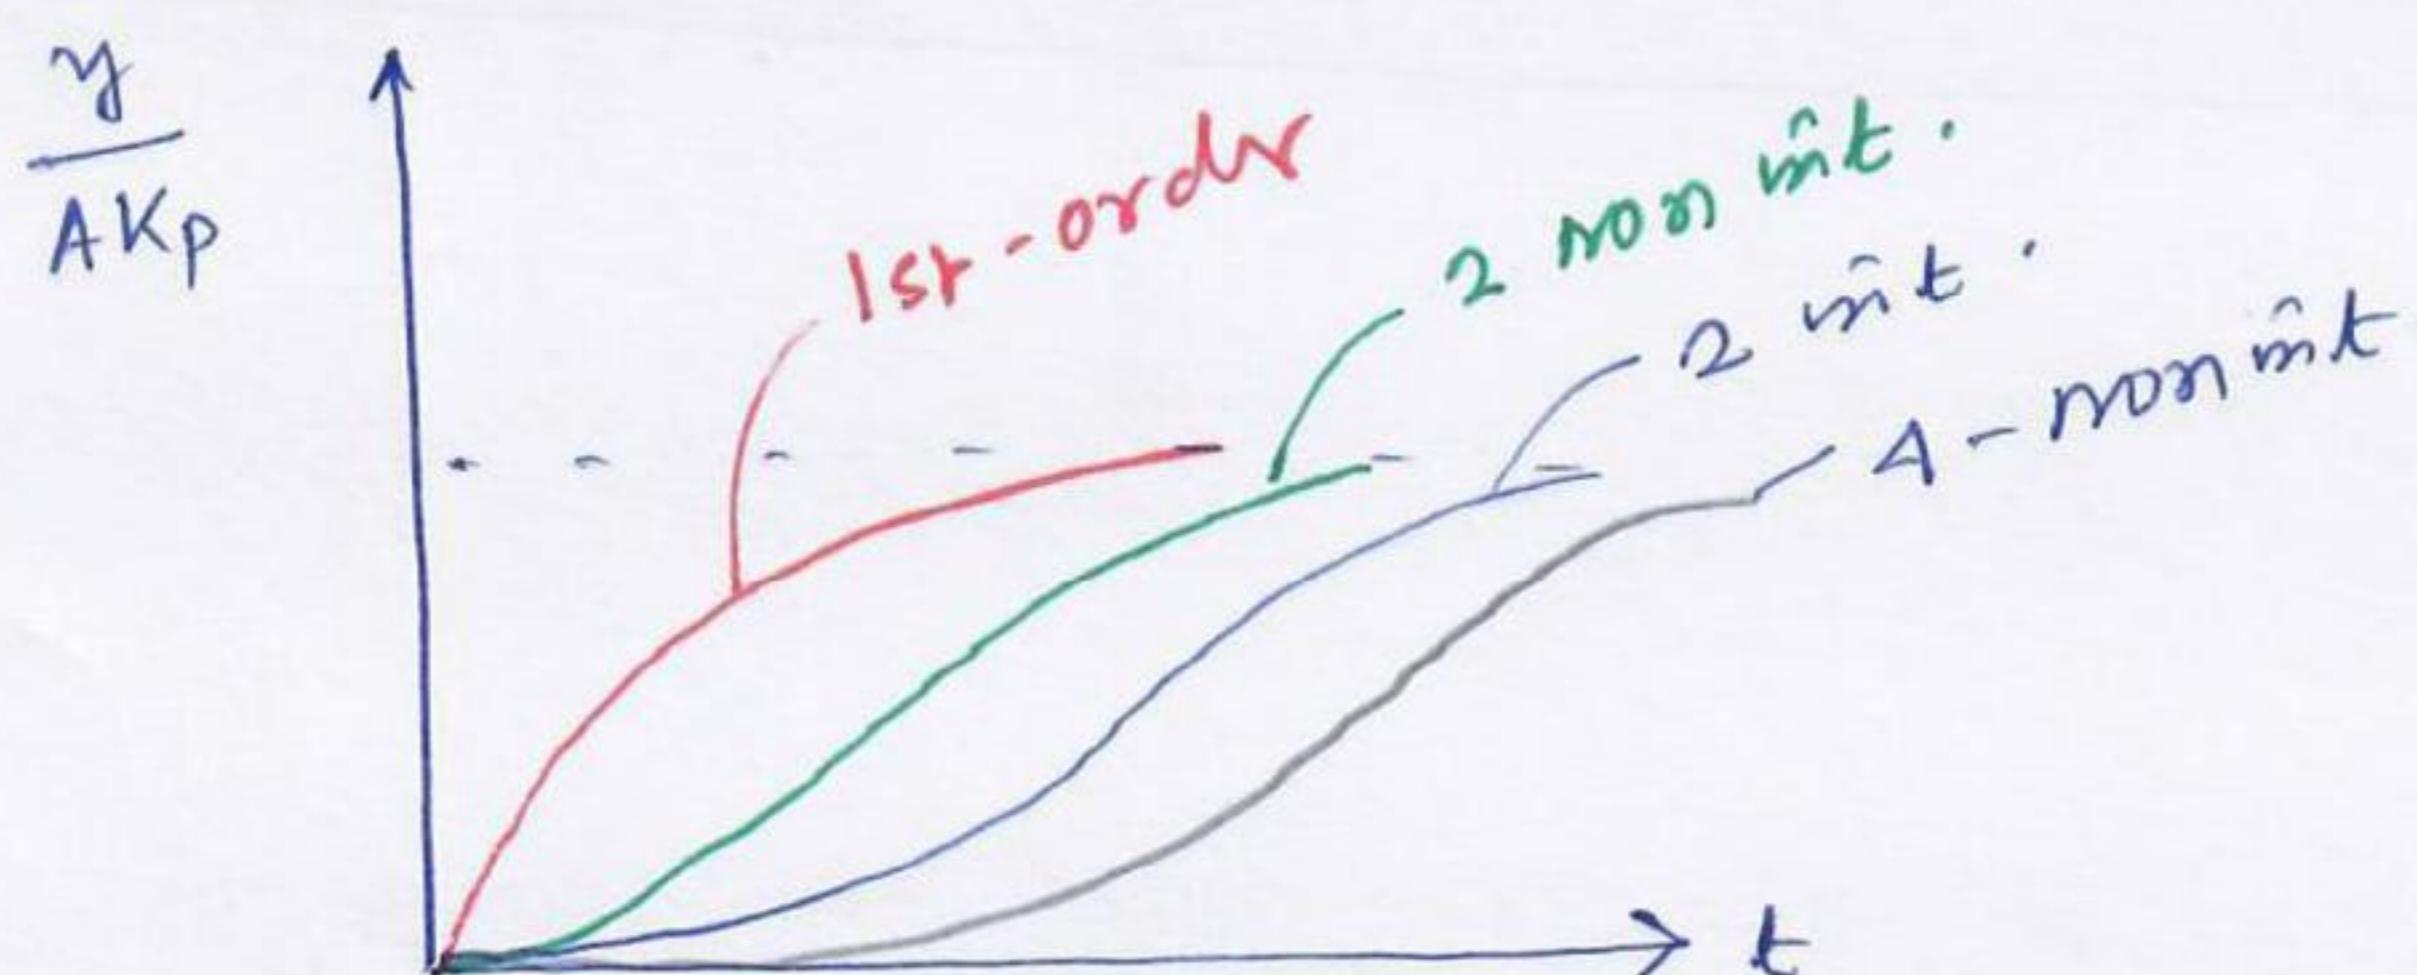


Recall this fig.

Dynamic systems with dead-time. (t_d)

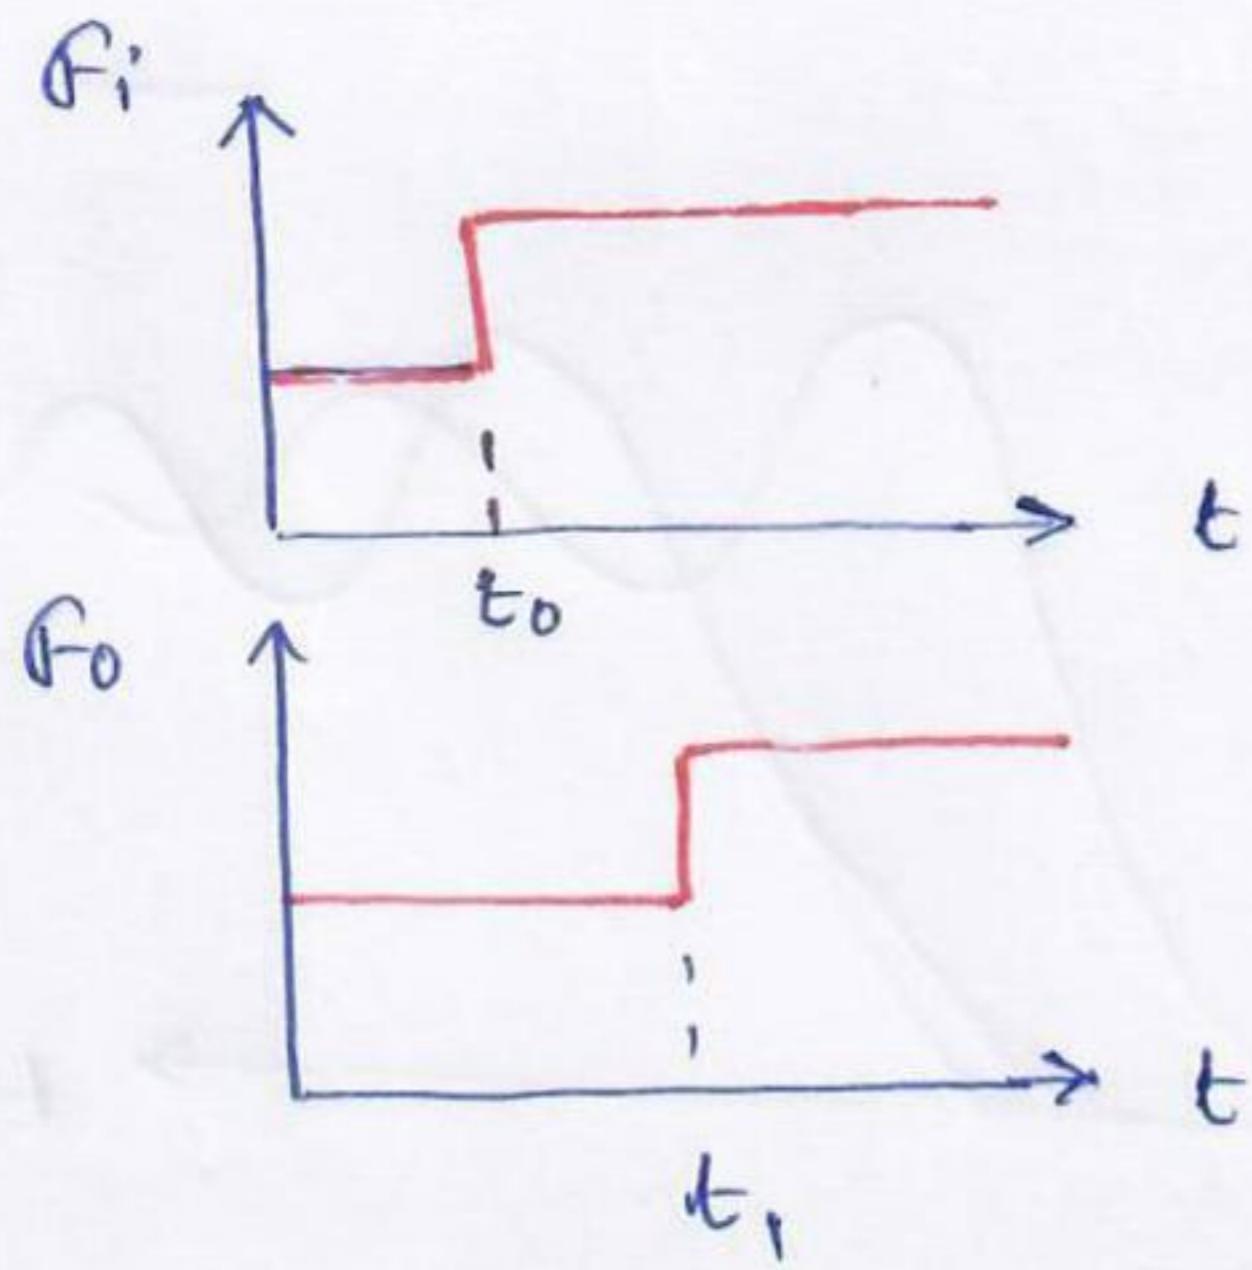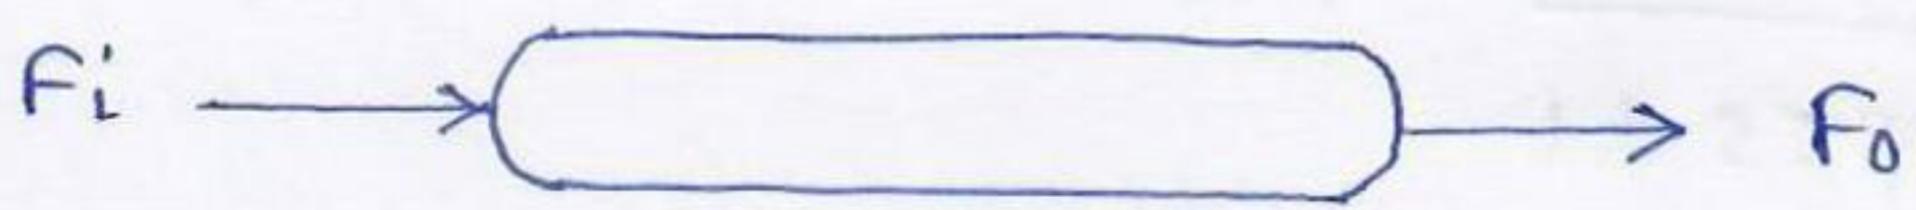

If we introduce a step change in f_i , after a certain time period it is reflected in f_o . This time lag is called dead-time.

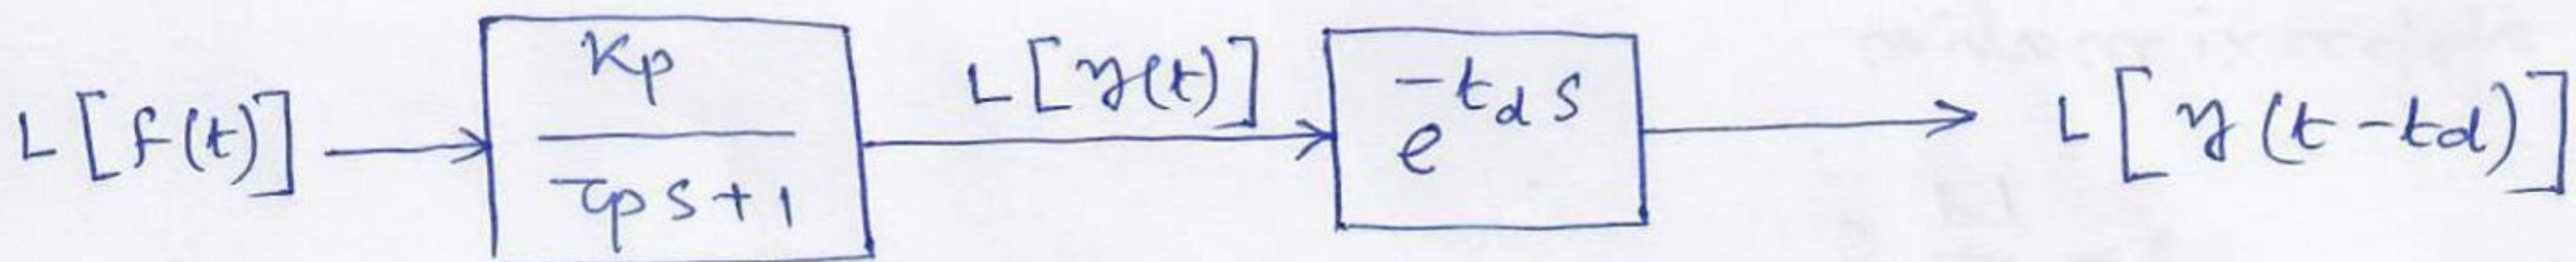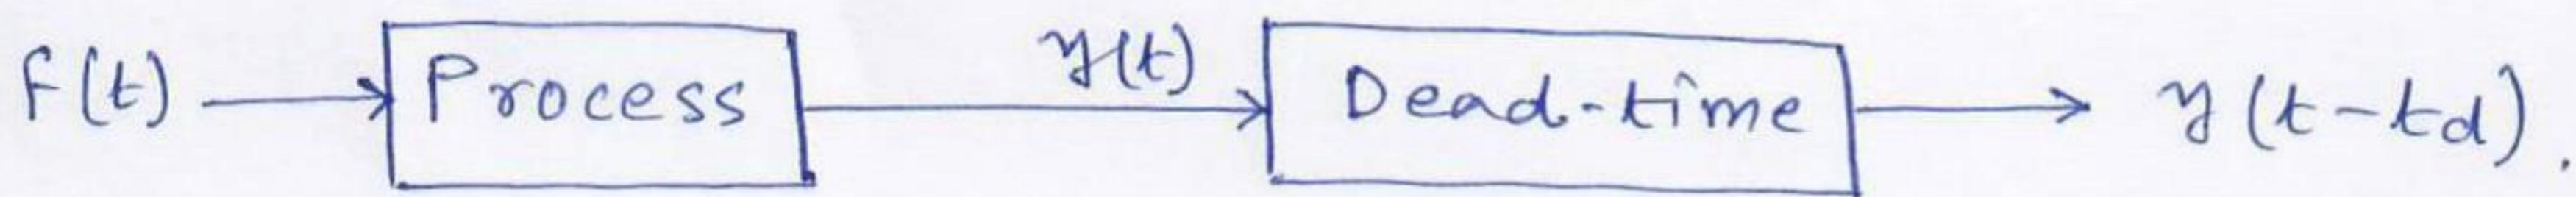

1st-order system


$$\frac{L[y(t)]}{L[f(t)]} = \frac{\bar{y}(s)}{\bar{f}(s)} = \frac{K_p}{\tau_p s + 1} \quad \dots \text{Process}$$

$$\frac{L[y(t-t_d)]}{L[y(t)]} = e^{-t_d s} \quad \dots \text{dead-time element}$$


$$G_o(s) = \frac{L[y(t-t_d)]}{L[f(t)]} = \frac{K_p e^{-t_d s}}{\tau_p s + 1} \quad \dots \text{first-order-plus-dead-time (FOPDT) system}$$

similarly,

$$\frac{L[y(t-t_d)]}{L[f(t)]} = \frac{k_p e^{-t_d s}}{\tau^2 s^2 + 2\zeta\tau s + 1} \quad \dots \text{SOPDT system.}$$

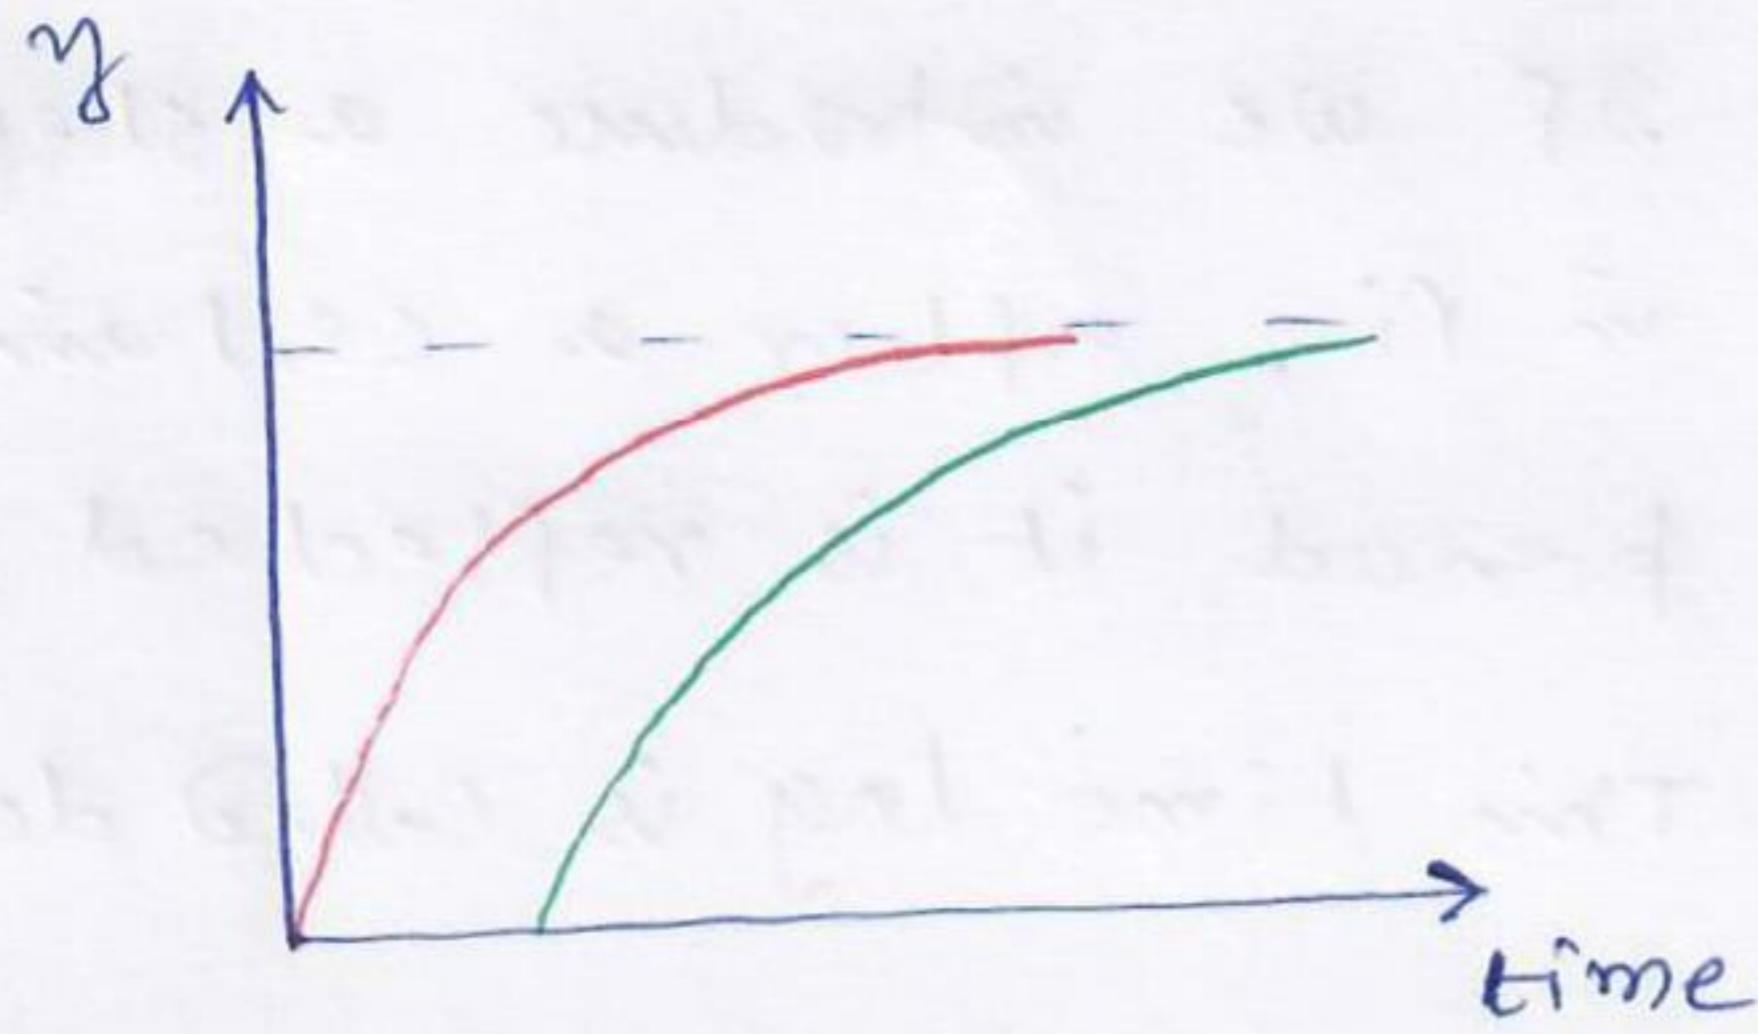

first-order system

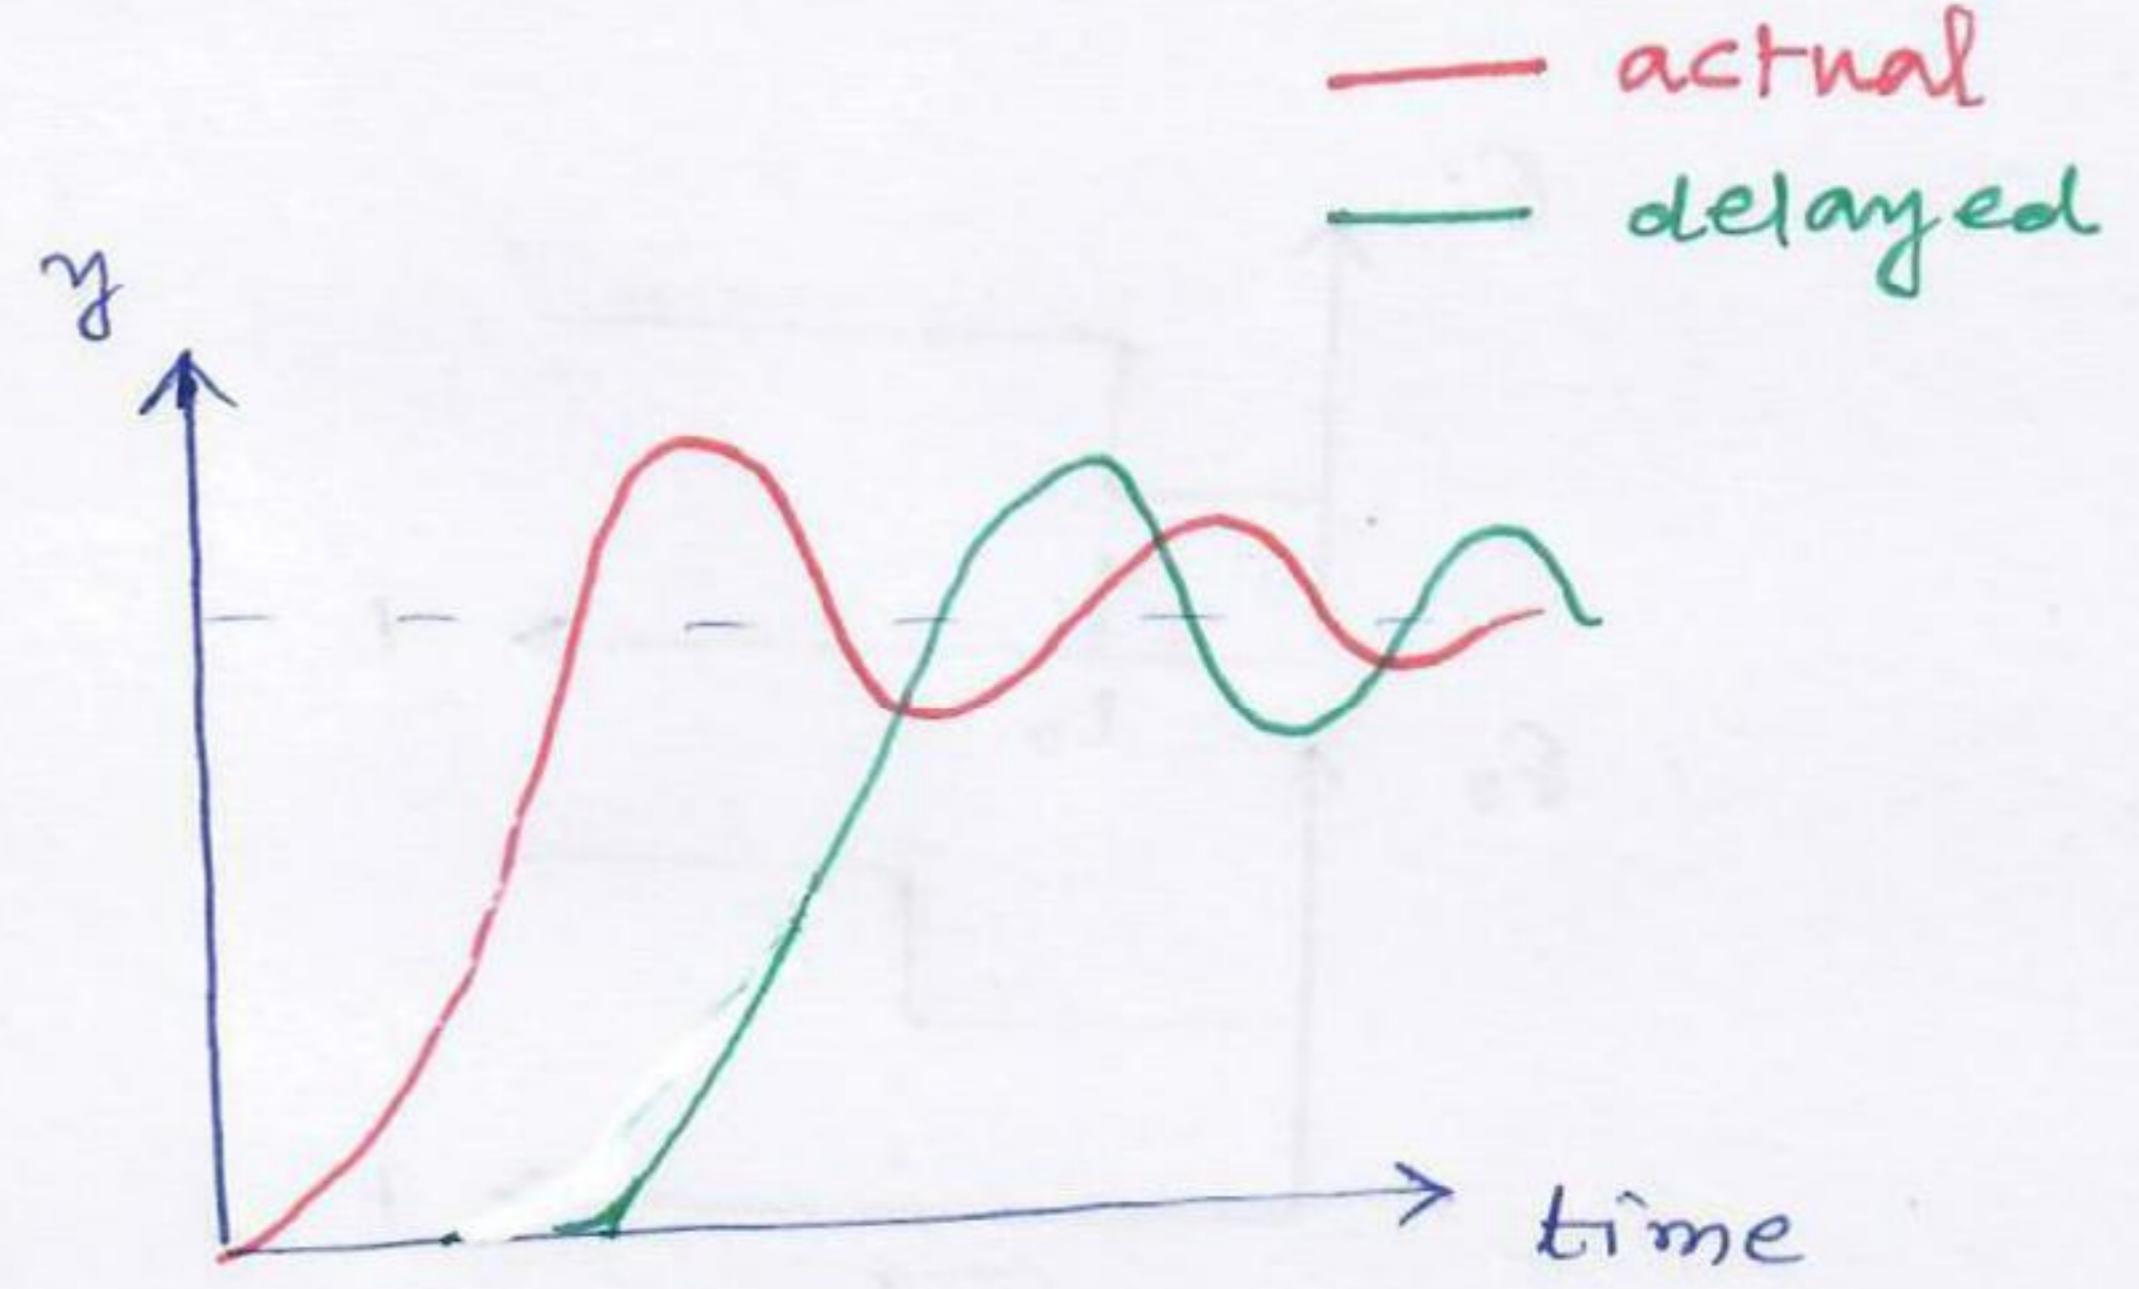

Second-order system.

Pade approximation

$$e^{-t_d s} \approx \frac{1 - \frac{t_d}{2} s}{1 + \frac{t_d}{2} s}$$

... 1st-order approximation

$$e^{-t_d s} = \frac{t_d^2 s^2 - 6 t_d s + 12}{t_d^2 s^2 + 6 t_d s + 12}$$


... 2nd-order approximation

FOPDT system


$$G_1(s) = \frac{k_p \cdot e^{-t_d s}}{\tau_p s + 1} = \frac{k_p}{\tau_p s + 1} \cdot \frac{1 - \frac{t_d}{2} s}{1 + \frac{t_d}{2} s}$$

Dynamic systems with inverse response

Boiler system

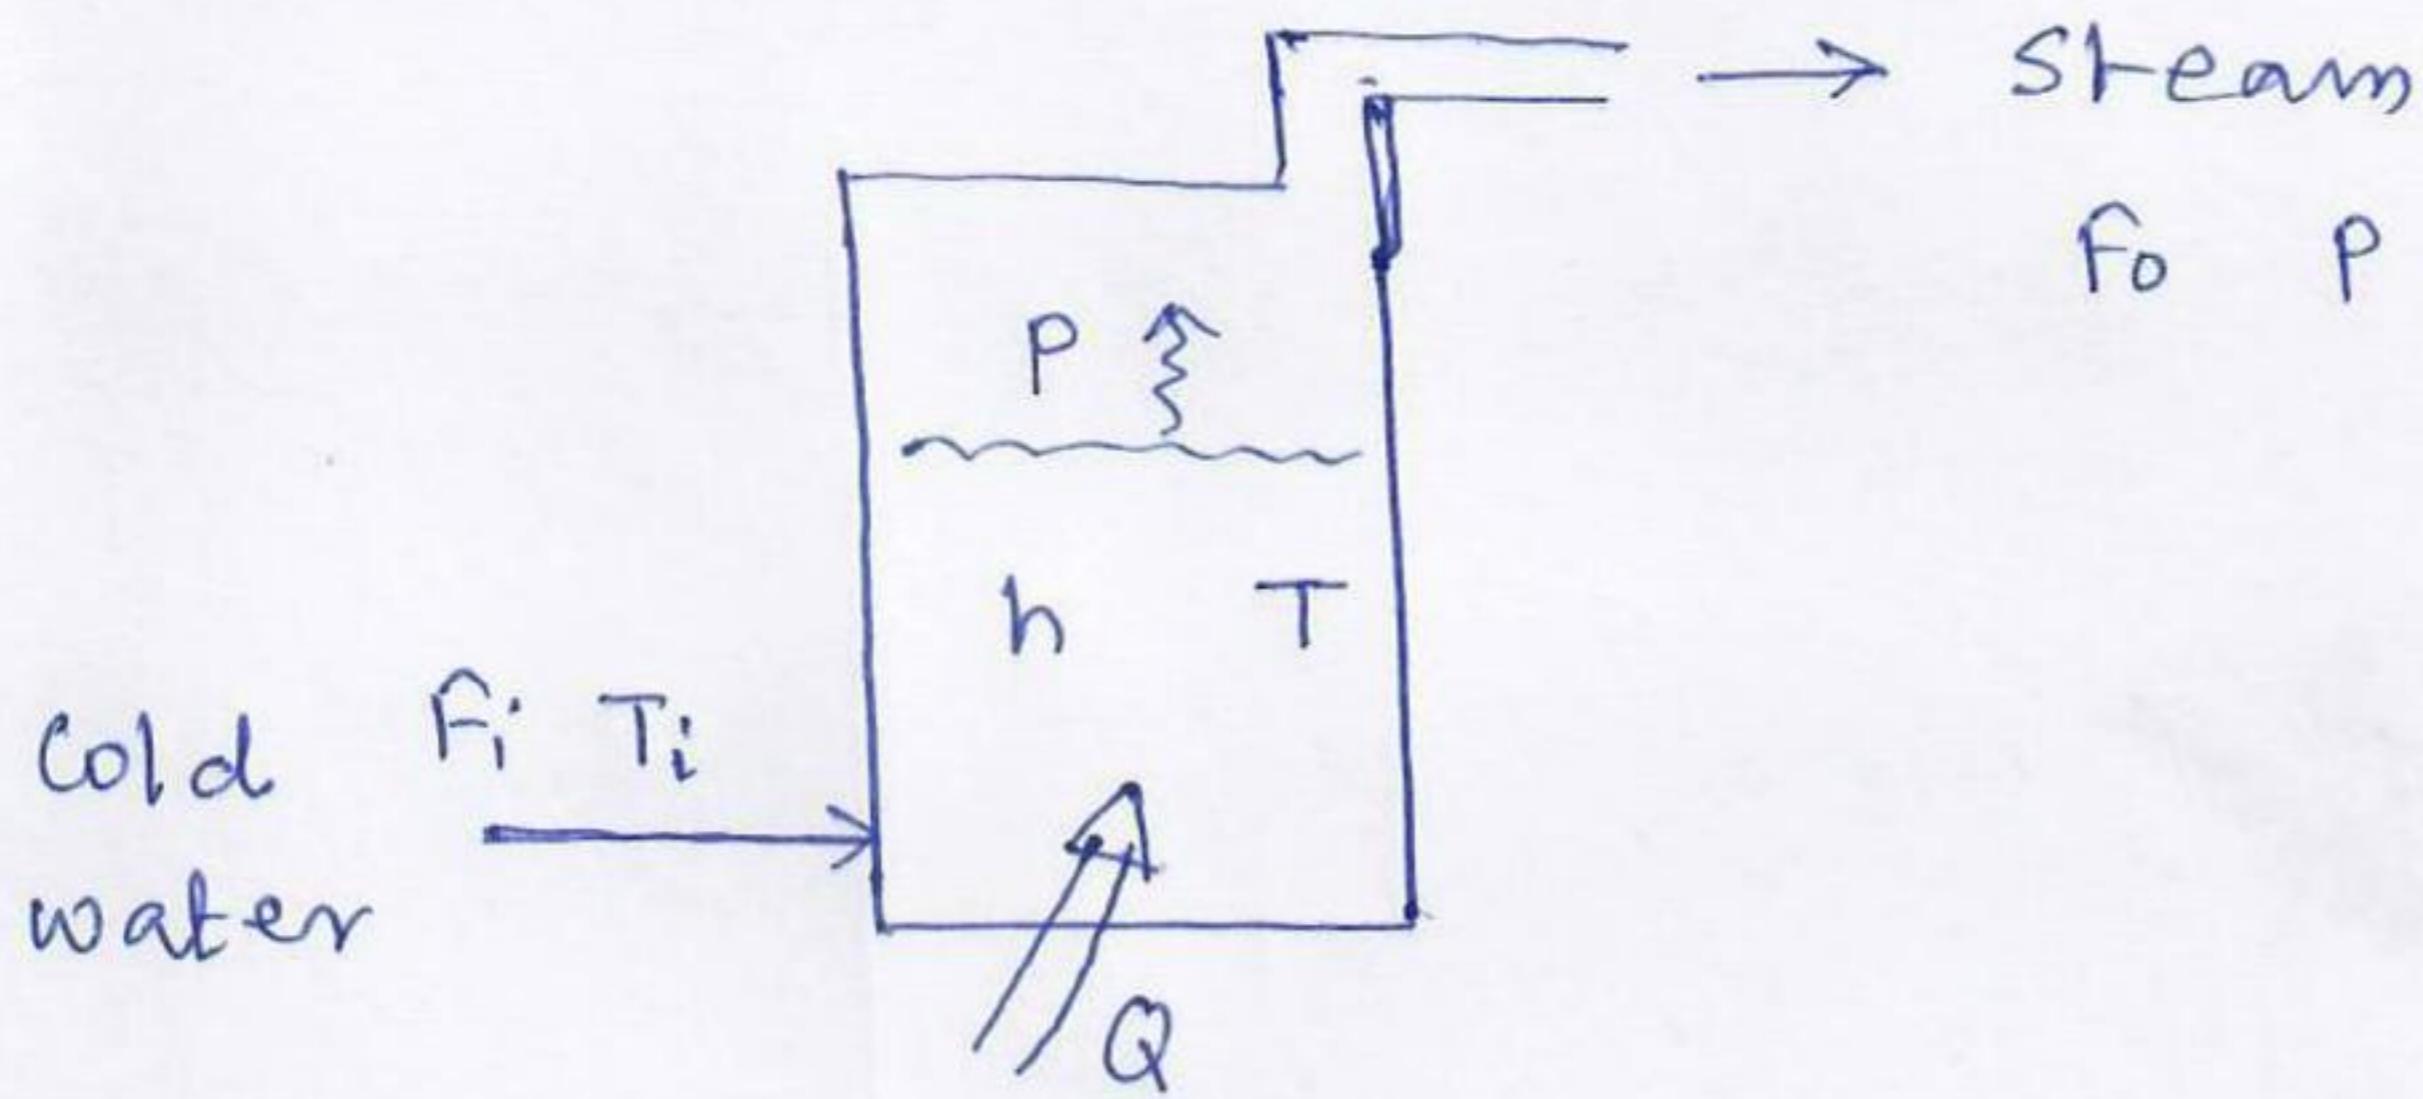

Combustion
of fuel

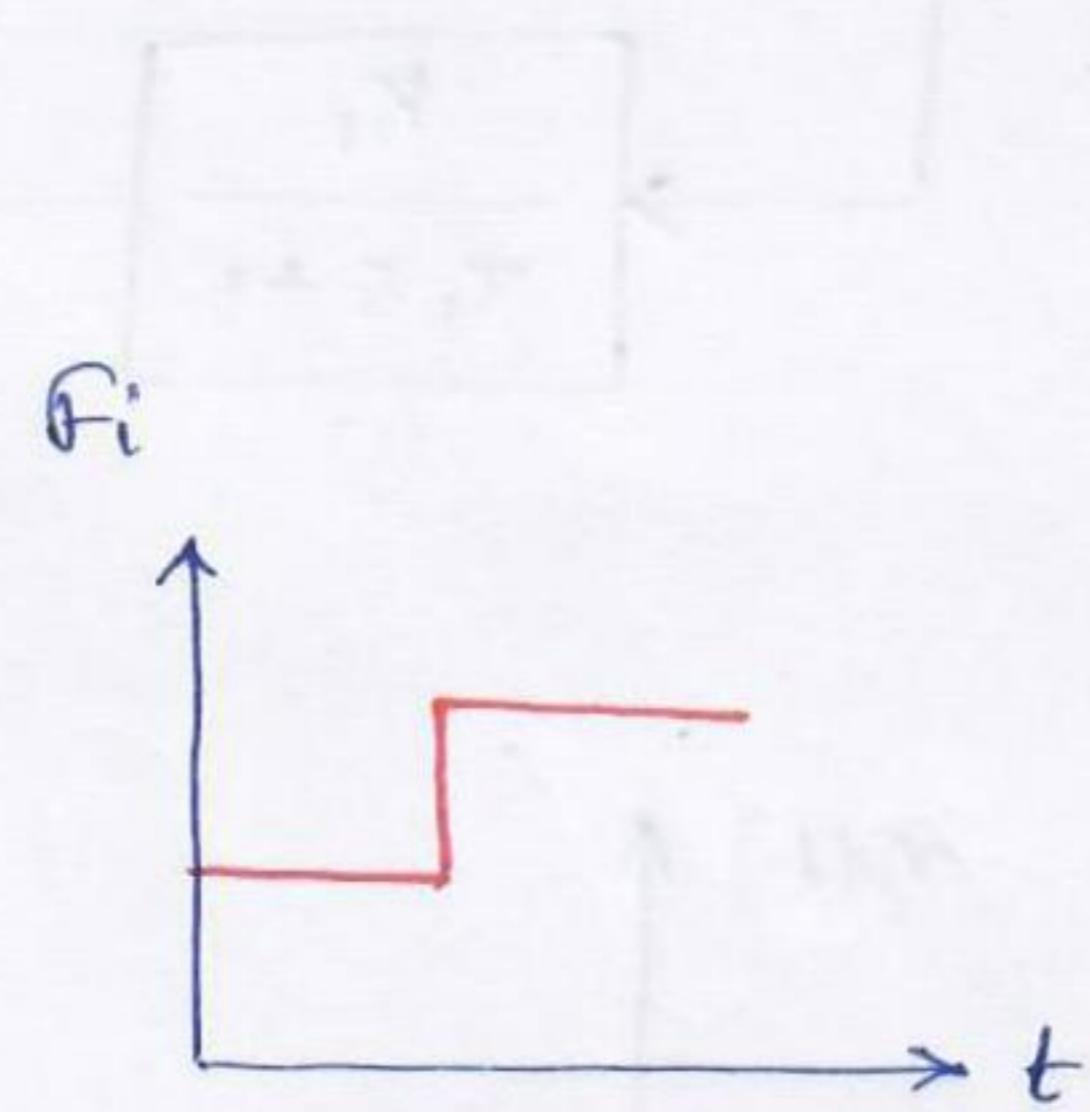



- ✓ If $F_i \uparrow$ by a step $\Rightarrow h \downarrow$ for a short period & then start increasing.

- (i) If $F_i \uparrow$, $T \downarrow$ that leads to decrease in vol of in entrained vap bubbles. Thus $h \downarrow$ following first-order behavior:

$$-\frac{-K_1}{\tau_Q s + 1}$$

- (ii) With const. heat supply, the steam production remains const and consequently h starts increasing in an integral form with TF:

$$+ \frac{K_2}{s}$$

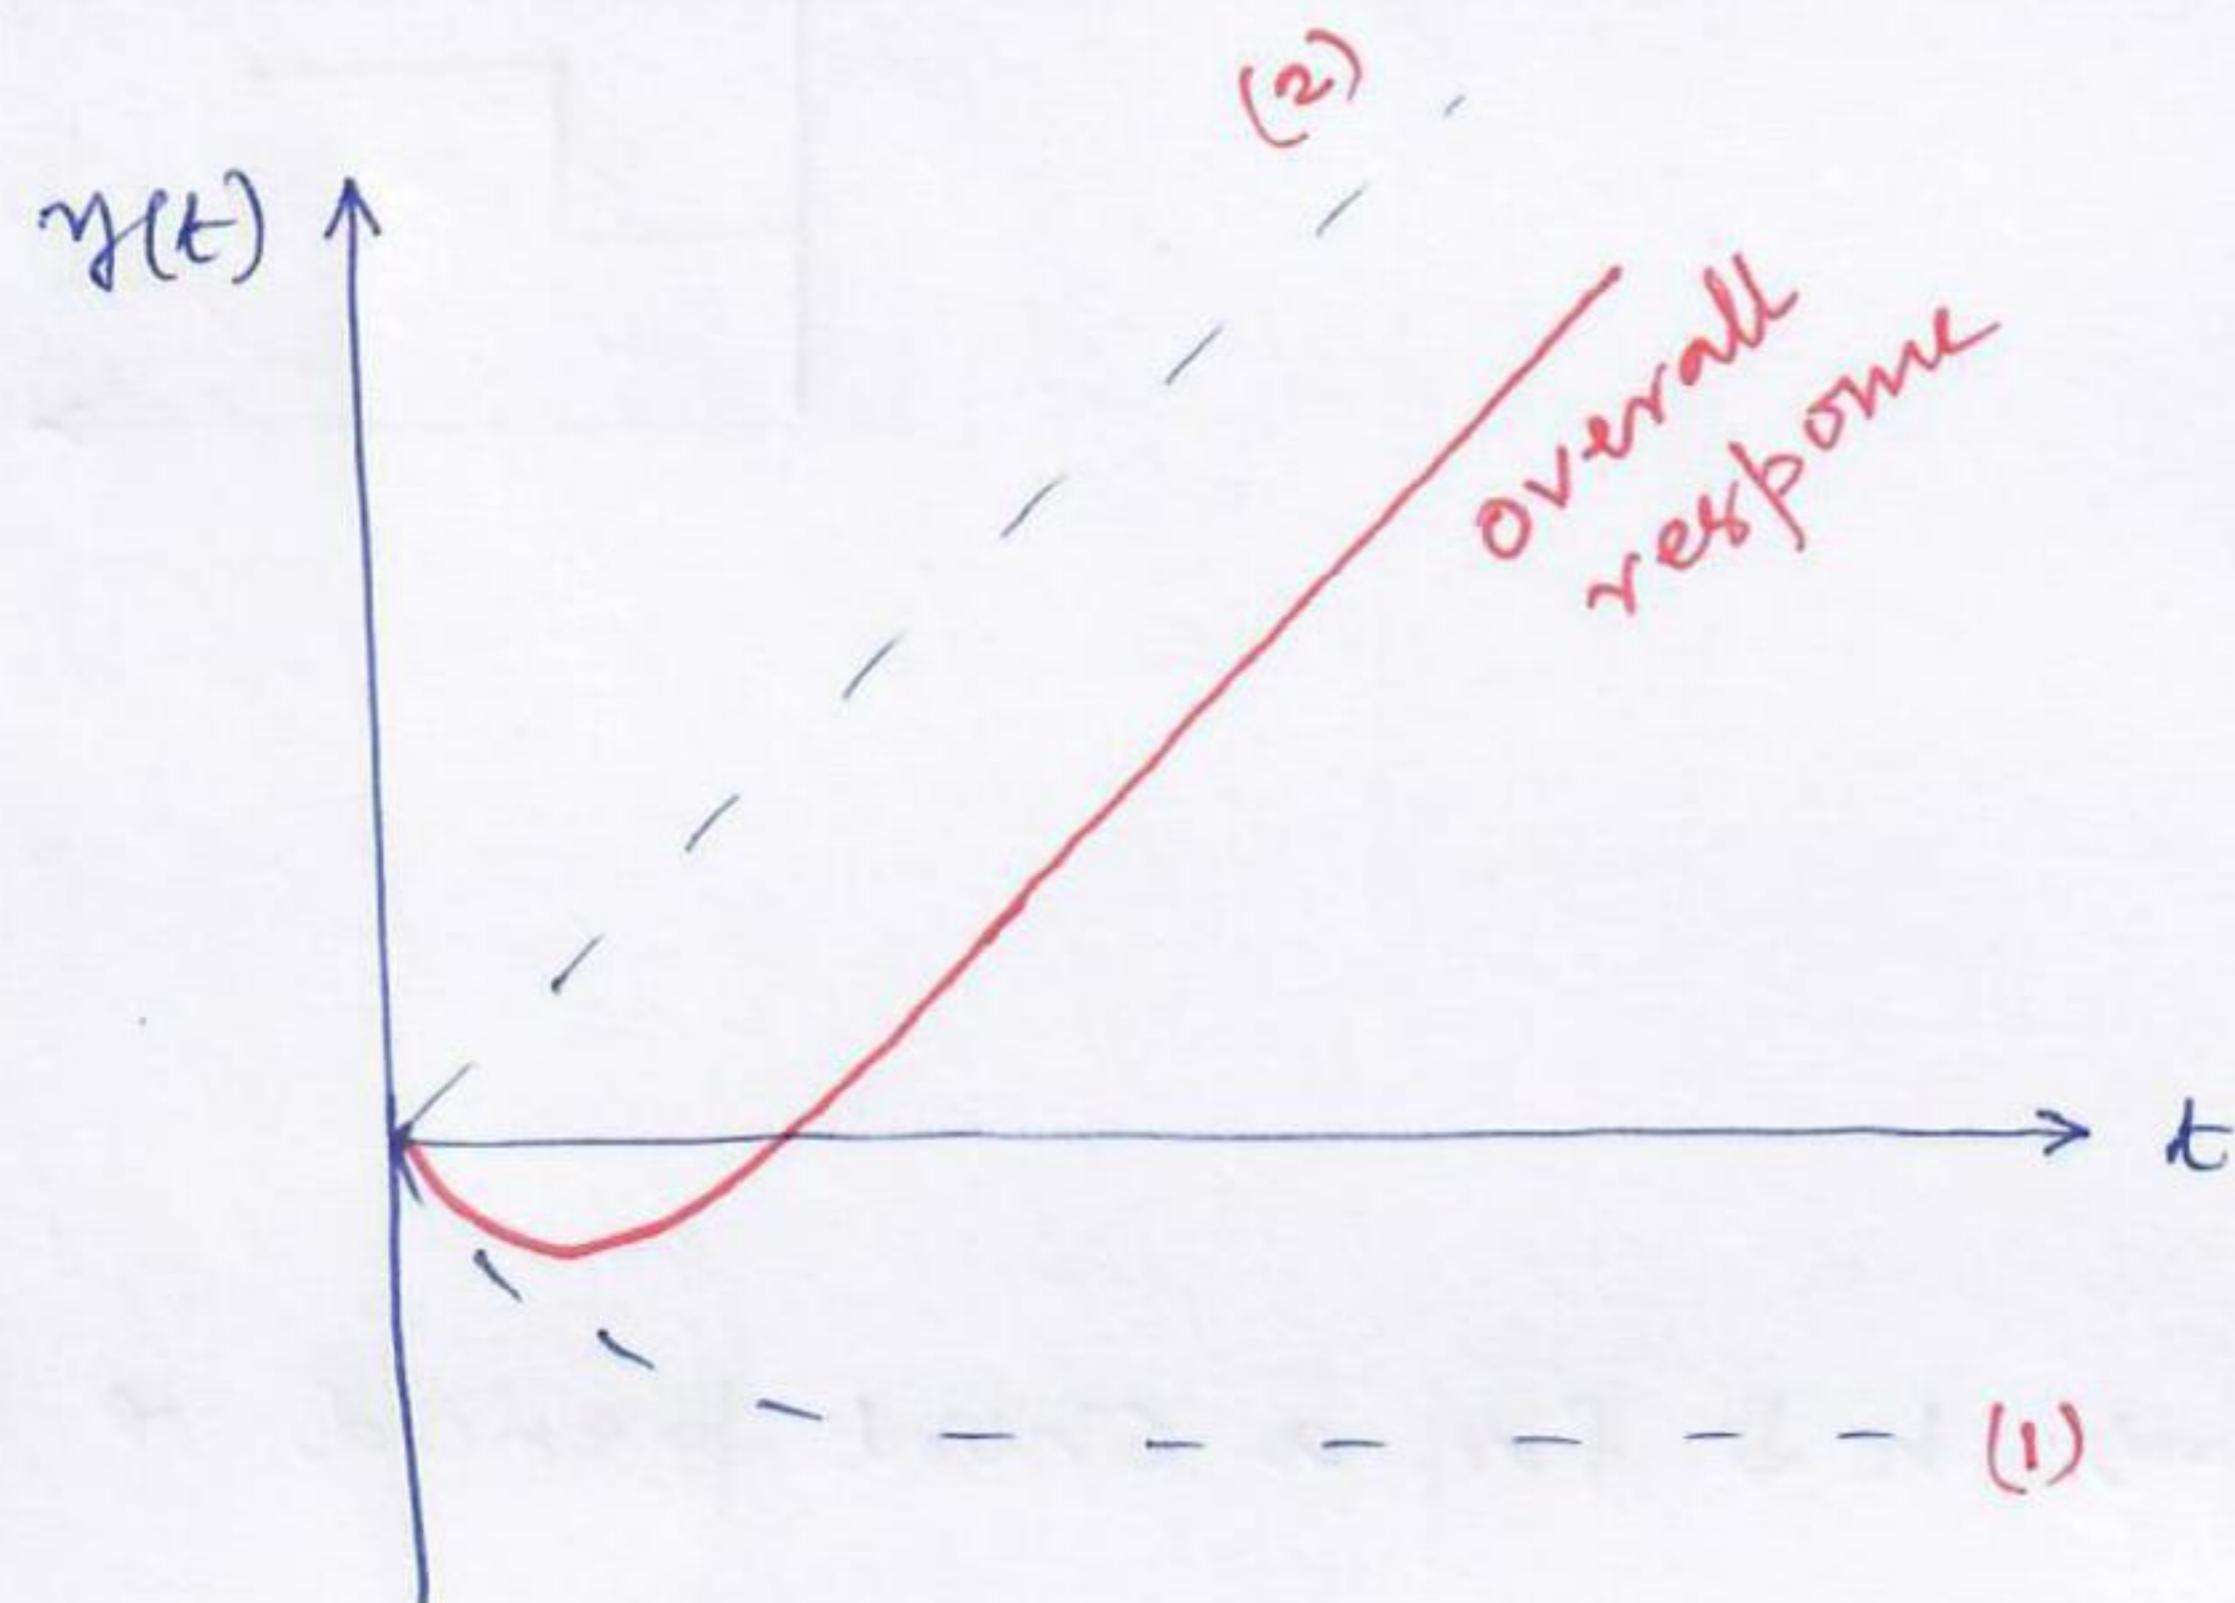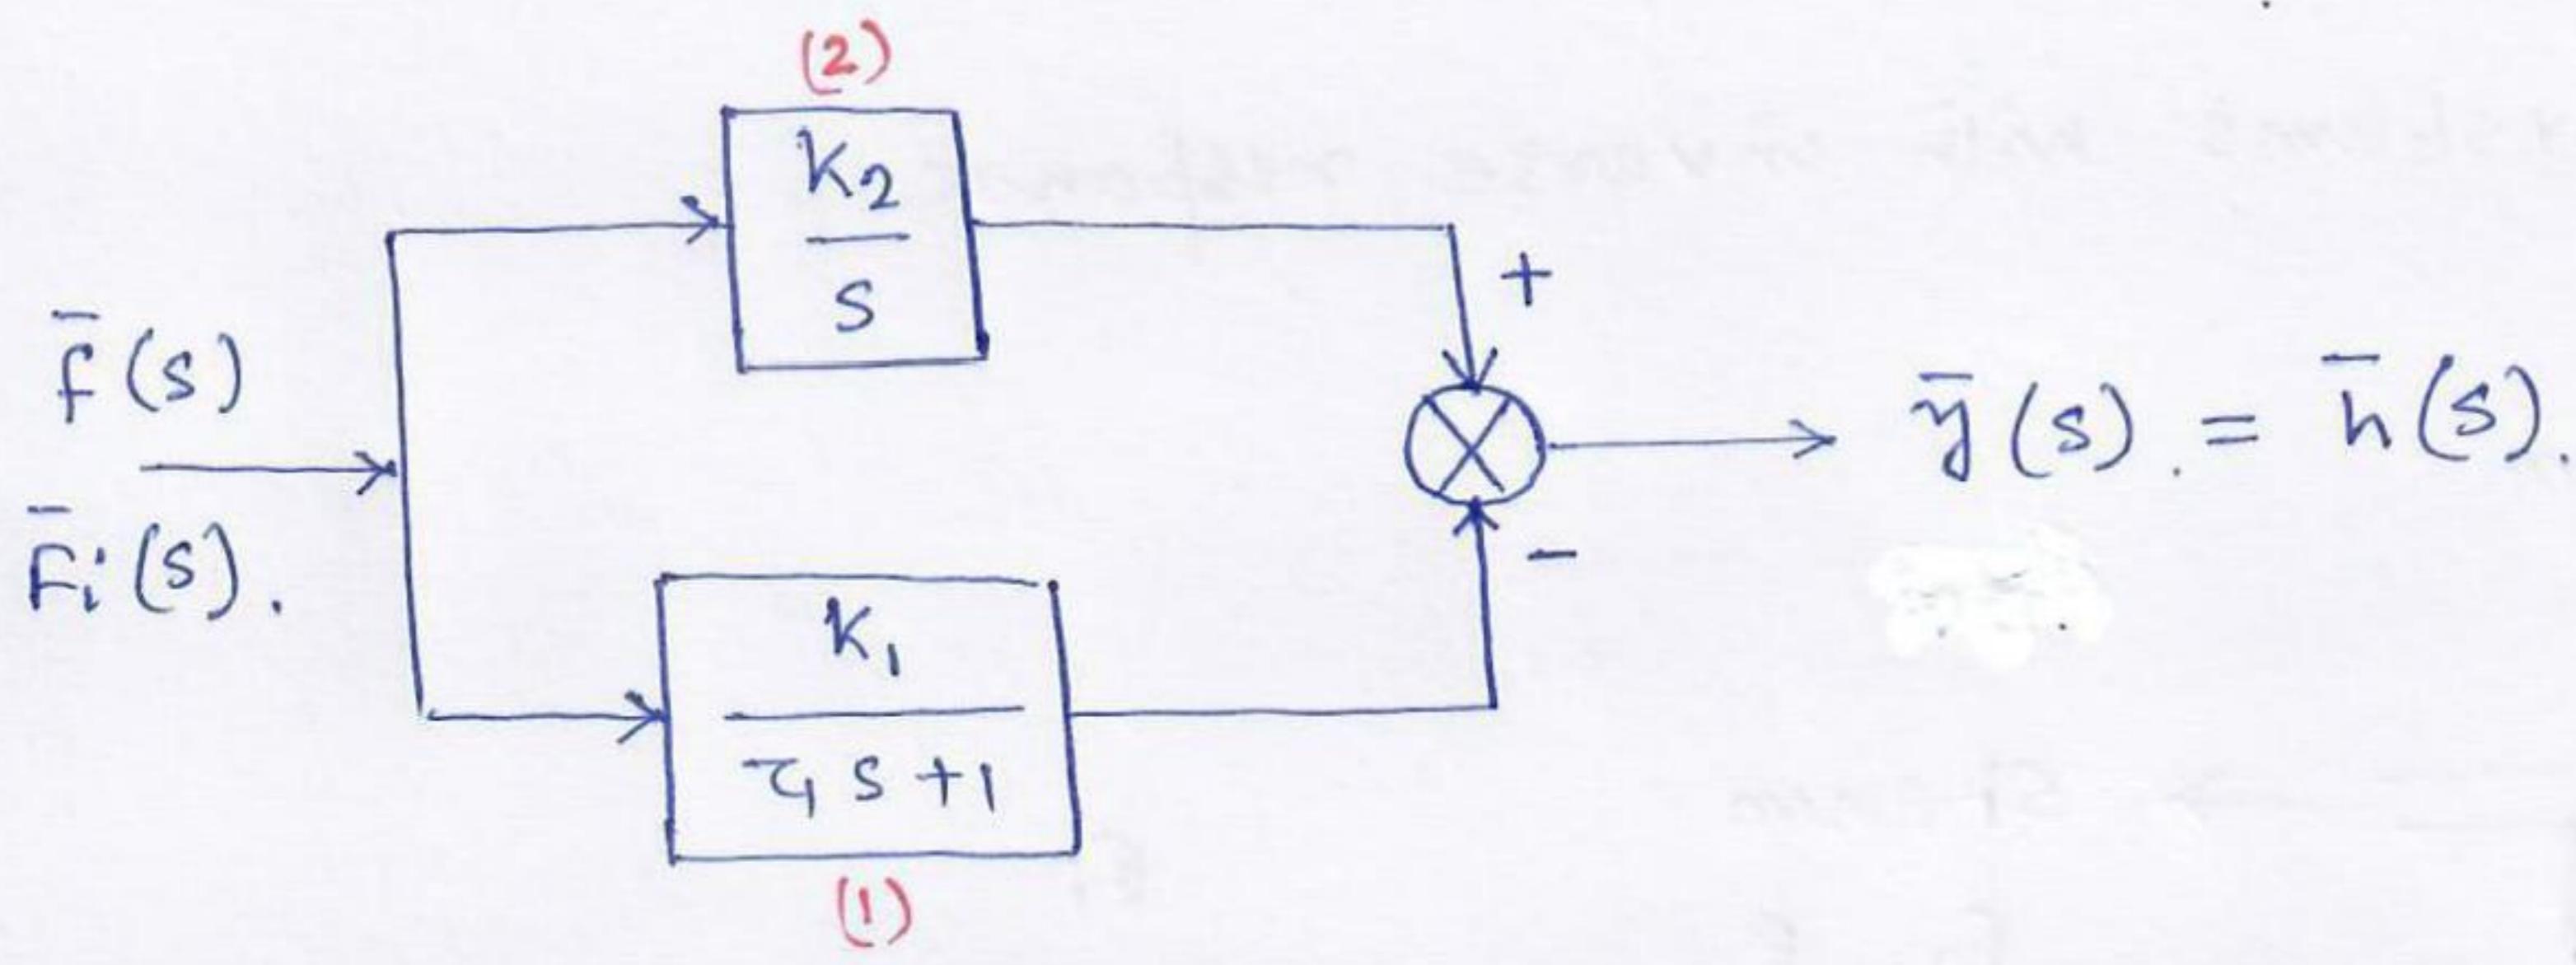

- ✓ overall response \equiv result of two opposing effects
 \equiv inverse response.

✓
$$\frac{\bar{y}(s)}{\bar{f}(s)} = \frac{k_2}{s} - \frac{k_1}{\tau_1 s + 1} = \frac{(k_2 \tau_1 - k_1) s + k_2}{s(\tau_1 s + 1)}$$

- ✓ condition for inverse response:

$$k_1 > k_2 \tau_1 \quad +ve \text{ Zero}$$

If this is not satisfied, there is no existence of inverse resp.