P441/P442 - Open Lab Experiment

Antenna Simulation for 21cm Hydrogen Line

 $Submitted\ By$

ASHMITA PANDA ROLL NO. 1811042

School of Physical Sciences

Under the Guidance of

Dr. Pratap Kumar Sahoo

Associate Professor

School of Physical Sciences

National Institute of Science Education and Research (NISER), Bhubaneswar



Contents

		$\mathbf{P}_{\mathbf{c}}$	age
1.	Intr	roduction	1
2.	21cm Hydrogen Line		1
	2.1	Theory	
	2.2	Importance	
		2.2.1 In Radio Astronomy	
		2.2.2 In Cosmology	
3.	Was	veguides	3
	3.1	What Are Waveguides?	3
	3.2	Arbitrary Waveguide	4
	3.3	Rectangular Waveguides	7
		3.3.1 TM Mode	7
		3.3.2 TE Mode	9
		3.3.3 Cut-off Frequency, Dominant Mode and Field Pattern	9
4.	Ant	tenna Parameters	10
	4.1	Bandwidth	11
	4.2	Radiation Pattern	11
	4.3	Field Regions	11
	4.4	Directivity	11
	4.5	Gain	12
	4.6	Lobes and HPBW	12
5.	Hor	n Antenna	13

Abstract

21cm Hydrogen line is one of the most useful tool of Radio Astronomy in current times. It can give us information about galaxy structures and rotation curves. It also finds applications in cosmology to probe the period from recombination to reionisation.

In this report, an attempt has been made to design an antenna for detecting this 21cm line. First, the theory of waveguides and antennas has been discussed. The optimum parameters have been calculated using ewa library in Matlab/Octave. The final design has been implemented using the software FEKO.

I. Introduction

Antennas are one of the most widely used instrumental tool in physics. They are devices which either convert voltage from a transmitter to radio waves, or pick up radio waves from the atmosphere and convert it into voltage which can be detected by a receiver.

In this this report, we aim to:

- i.) discuss the importance of the 21cm line in modern astronomy and cosmology
- ii.) discuss the theory of waveguides
- iii.) discuss properties of antennas
- iv.) design the antenna using FEKO

II. 21cm Hydrogen Line

2.1 Theory

Neutral hydrogen is the most abundant element of the Universe. It is made up of one proton and one electron. Both the proton and electron are spin-1/2 particles. They can either be in up-spin or down-spin orientation.

At any given point of time, the electron and proton in the neutral hydrogen atom, can either be aligned parallel to each other, or anti-parallel to each other.

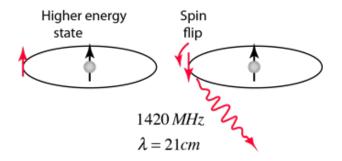


Fig 1. Two orientations of Neutral Hydrogen

The parallel spin state is the higher energy state compared to the anti-parallel spin state. The energy difference between the states is around 5.874eV.

Whenever a neutral hydrogen atom goes from the parallel spin state to the anti-parallel spin state, it releases this energy in the form of a photon. This transition is called the Spin-flip transition.

From the Einstein-Planck equation :

$$E = h\nu \tag{1}$$

We can find the frequency of the emitted photon as 1420MHz. This corresponds to a wavelength of $\lambda = 21 \text{cm}$.

2.2 Importance

2.2.1 In Radio Astronomy

The 21cm line falls in the radio frequency range. It can easily penetrate the interstellar clouds and the Earth's atmosphere, thus can be observed without much interference.

If we assume hydrogen atoms to be uniformly distributed throughout the galaxies, we should observe the 21cm line from all directions. The waves we receive will either be redshifted or blueshifted to different extents, depending on the location of their emission in the galaxy.

We can then use this information to measure the rotation curve of our galaxy and the relative speed of each spiral arm. This information could in turn be used to indirectly calculate the mass of the galaxy.

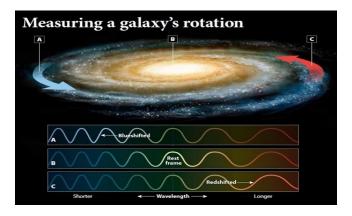


Fig 2. Rotation Curve of a Galaxy

Source: https://physicsopenlab.org/2020/09/08/measurement-of-the-milky-way-rotation/

2.2.2 In Cosmology

The 21cm hydrogen line could be used in cosmology to probe the "dark ages" of the Universe, i.e., the period from recombination to reionisation.

The hydrogen line from that epoch is highly red-shifted and obtained in the frequency range of 200MHz to 9MHz on Earth.

We can obtain a picture of how the reionisation occurred via this information, as we should obtain holes in the 21cm background spectrum from that epoch which correspond to hydrogen atoms which got ionised by the radiation from stars or quasars.

III. Waveguides

Before building an antenna, we need to first talk about waveguiding structures.

3.1 What Are Waveguides?

Waveguides are structures which can guide waves, like sound waves or electromagnetic waves in a particular direction with minimal loss in energies.

Waveguides for electromagnetic waves are made up of hollow metallic (conducting) tubes. They can carry high frequency radio waves.

They can be of several types, namely circular, rectangular, elliptical, ridged etc.

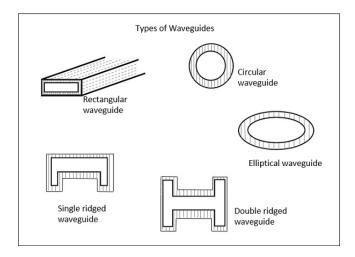


Fig 3. Types of Waveguides

Source: https://www.tutorialspoint.com/microwave_engineering/microwave_engineering_waveguides.htm

3.2 Arbitrary Waveguide

Let us consider a waveguide with some arbitrary cross section.

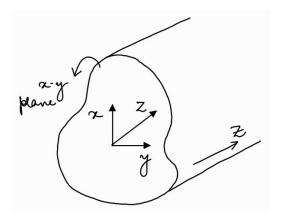


Fig 4. Arbitrary Waveguide Structure

Let's consider z to be the longitudinal direction, and x-y to be the transverse directions. Writing the EM waves :

$$\begin{split} \vec{E} &= \vec{E}_{\perp} + E_z \hat{z} \,, \qquad \vec{E}_{\perp} = E_x \hat{x} + E_y \hat{y} \\ \vec{H} &= \vec{H}_{\perp} + H_z \hat{z} \,, \qquad \vec{H}_{\perp} = H_x \hat{x} + H_y \hat{y} \end{split}$$

We know from Maxwell's equation:

$$\nabla \times \vec{E} = -j\omega \mu \vec{H} \tag{2}$$

where, μ is the permeability of the space.

Using the forms of EM waves written above:

$$\left(\nabla_{\perp} + \frac{\partial}{\partial z}\hat{z}\right) \times \left(\vec{E}_{\perp} + E_{z}\hat{z}\right) = -j\omega\mu\left(\vec{H}_{\perp} + H_{z}\hat{z}\right)$$

$$\Longrightarrow \nabla_{\perp} \times E_{\perp} + \nabla_{\perp} \times (E_{z}\hat{z}) + \frac{\partial}{\partial z}\hat{z} \times \vec{E}_{\perp} + \frac{\partial}{\partial z}\hat{z} \times (E_{z}\hat{z}) \stackrel{0}{=} -j\omega\mu\left(\vec{H}_{\perp} + H_{z}\hat{z}\right)$$

The last term on LHS goes to zero as it involves the cross product of two parallel vectors. We can also see that the first term on LHS is along z direction, and the second and third terms are transverse terms. Equating the transverse components we obtain:

$$\vec{H}_{\perp} = -\frac{1}{j\omega\mu} \left\{ \nabla_{\perp} \times (E_z \hat{z}) + \frac{\partial}{\partial z} \hat{z} \times \vec{E}_{\perp} \right\}$$
 (3)

Similarly, using the other Maxwell's equation:

$$\nabla \times \vec{H} = j\omega \varepsilon \vec{E} \tag{4}$$

where, ϵ is the permittivity of the space.

We obtain the transverse component of electric field as:

$$\vec{E}_{\perp} = \frac{1}{j\omega\varepsilon} \left\{ \nabla_{\perp} \times (H_z \hat{z}) + \frac{\partial}{\partial z} \hat{z} \times \vec{H}_{\perp} \right\}$$
 (5)

Now substituting for \vec{H}_{\perp} from (3) in (5):

$$\omega^2 \mu \varepsilon - \frac{\partial}{\partial z} \hat{z} \times \frac{\partial}{\partial z} \hat{z} \times \vec{E}_{\perp} = -j \omega \mu \nabla_{\perp} \times (H_z \hat{z}) + \left(\frac{\partial}{\partial z} \hat{z}\right) \times \nabla_{\perp} \times (E_z \hat{z})$$

Using the triple product identity:

$$\vec{A} \times \vec{B} \times \vec{C} = \left(\vec{A} . \vec{C} \right) \vec{B} - \left(\vec{A} . \vec{B} \right) \vec{C}$$

We simplify the triple product terms in the equation above:

$$\frac{\partial}{\partial z}\hat{z} \times \frac{\partial}{\partial z}\hat{z} \times \vec{E}_{\perp} = -\frac{\partial^{2}}{\partial z^{2}}\vec{E}_{\perp}$$
$$\frac{\partial}{\partial z}\hat{z} \times \nabla_{\perp} \times E_{z}\hat{z} = \nabla_{\perp} \left(\frac{\partial E_{z}}{\partial z}\right)$$

The final equation now becomes:

$$\omega^2 \mu \varepsilon \vec{E}_{\perp} + \frac{\partial^2}{\partial z^2} \vec{E}_{\perp} = -j\omega \mu \nabla_{\perp} \times (H_z \hat{z}) + \nabla_{\perp} \left(\frac{\partial E_z}{\partial z} \right)$$
 (6)

The Maxwell's equations have only two independent components. Thus, we can choose the z-component of the electric and magnetic fields as the two independent components. So, (6) gives us how the transverse electric field depend on the independent components E_z and H_z .

Taking a travelling wave antasz along the z direction:

$$E, H \sim \exp(-\gamma z)$$
 (7)

 γ is called the absorption coefficient.

We ignore solutions for waves travelling in negative direction after reflection by assuming the waveguide is of infinite length.

Given the ansatz in (7), we can write:

$$\frac{\partial}{\partial z} \equiv -\gamma \,, \quad \frac{\partial^2}{\partial z^2} \equiv \gamma^2$$

Using this in (6):

$$(\omega^2 \mu \varepsilon + \gamma^2) \vec{E}_{\perp} = -j\omega \mu \nabla_{\perp} \times (H_z \hat{z}) - \gamma \nabla_{\perp} E_z$$

We can define:

$$\omega^2 \mu \varepsilon + \gamma^2 = h^2 \tag{8}$$

h is the propagation constant for the transverse wave.

Using this, we get the final form for the transverse electric and magnetic fields as:

$$\vec{E}_{\perp} = -\frac{j\omega\mu}{h^2} \nabla_{\perp} \times (H_z \hat{z}) - \frac{\gamma}{h^2} \nabla_{\perp} E_z \tag{9}$$

$$\vec{H}_{\perp} = \frac{j\omega\varepsilon}{h^2} \nabla_{\perp} \times (E_z \hat{z}) - \frac{\gamma}{h^2} \nabla_{\perp} H_z \tag{10}$$

Since we have chosen the z-components of electric and magnetic fields as the independent components, we can find the complete solutions for the wave motion if we can determine E_z and H_z .

For a medium that is lossless,

$$\gamma = i\beta \tag{11}$$

We can conclude that:

- i.) E_z and H_z both cannot be zero, unless h is zero. Converse is also true. This implies that if both the longitudinal components are zero, there is no transverse wave propagation in the waveguide. EM wave travels as if it is in free space.
- ii.) The above mode is called the TEM mode, i.e., Transverse Electric and Magnetic field mode. It is a non-dispersive mode.
- iii.) When $E_z = 0$ and $H_z \neq 0$, it is called the TE mode, i.e., the Transverse Electric mode.

It is dispersive mode.

iv.) When $E_z \neq 0$ and $H_z = 0$, it is called the TM mode, i.e., the Transverse Magnetic mode. It is a dispersive mode.

3.3 Rectangular Waveguides

A rectangular waveguide is one of the most common types of waveguides used.

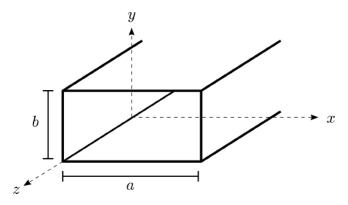


Fig 5. Rectangular Waveguide

Source: https://www.tutorialspoint.com/microwave_engineering/microwave_engineering_waveguides.htm

Let us consider the electromagnetic waves moving along z-direction. We will also assume that for this structure $a \ge b$.

3.3.1 TM Mode

We will first consider the solutions of TM Mode, i.e.,

$$E_z \neq 0$$
, $H_z = 0$

Writing the wave equation for electric field travelling in z-direction:

$$\nabla^{2}E_{z} + \omega^{2}\mu\varepsilon E_{z} = 0$$

$$\Longrightarrow \frac{\partial^{2}E_{z}}{\partial x^{2}} + \frac{\partial^{2}E_{z}}{\partial y^{2}} + \frac{\partial^{2}E_{z}}{\partial z^{2}} + \omega^{2}\mu\varepsilon E_{z} = 0$$

Applying separation of variables:

$$E_z(x, y, z) = X(x)Y(y)Z(z)$$

Putting this in the wave equation, we obtain the final solution as:

$$X(x) = c_1 \cos(Ax) + c_2 \sin(Ax)$$

$$Y(y) = c_3 \cos(By) + c_4 \sin(By)$$

$$Z(z) = c_5 \exp(-j\beta z) + c_6 \exp(j\beta z)$$

The solutions X(x) and Y(y) are standing wave solutions. The solution Z(z) is the travelling wave solution.

As we had assumed earlier that the waveguide we are using is of infinite length, and there is no reflected wave (wave travelling in -z direction), we can write $c_6 = 0$.

Now using the four boundary conditions due to the four walls upon which E_z is tangential, i.e.,

$$E_z = 0$$
 for $x = 0$, $x = a$, $y = 0$, $y = a$

we obtain the constants A and B as:

$$A = \frac{m\pi}{a} \,, \quad B = \frac{n\pi}{b} \tag{12}$$

We obtain the final solution for E_z as:

$$E_z = C \sin\left(\frac{m\pi}{a}x\right) \sin\left(\frac{n\pi}{b}y\right) \exp\left(-j\beta z\right) \tag{13}$$

Now using the expression for E_z (13) in (9) and (10), we obtain the transverse wave equations as:

$$E_x = -\frac{j\beta}{h^2} \frac{\partial E_z}{\partial x} = -\frac{j\beta}{h^2} \left(\frac{m\pi}{a}\right) C \cos\left(\frac{m\pi x}{a}\right) \sin\left(\frac{n\pi y}{b}\right) \exp(-j\beta z) \tag{14}$$

$$E_y = -\frac{j\beta}{h^2} \frac{\partial E_z}{\partial y} = -\frac{j\beta}{h^2} \left(\frac{n\pi}{a}\right) C \sin\left(\frac{m\pi x}{a}\right) \cos\left(\frac{n\pi y}{b}\right) \exp(-j\beta z) \tag{15}$$

$$H_x = \frac{j\omega\varepsilon}{h^2} \frac{\partial E_z}{\partial y} = \frac{j\omega\varepsilon}{h^2} \left(\frac{n\pi}{b}\right) C \sin\left(\frac{m\pi x}{a}\right) \cos\left(\frac{n\pi y}{b}\right) \exp(-j\beta z)$$
 (16)

$$H_y = -\frac{j\omega\varepsilon}{h^2} \frac{\partial E_z}{\partial x} = -\frac{j\omega\varepsilon}{h^2} \left(\frac{m\pi}{a}\right) C\cos\left(\frac{m\pi x}{a}\right) \sin\left(\frac{n\pi y}{b}\right) \exp(-j\beta z)$$
 (17)

The conclusions we can immediately draw from the above equations are as follows:

- i.) The TM_{00} mode does not exist. All the waves become zero.
- ii.) If either m = 0 or n = 0, then also none of the components exist. Thus, TM_{m0} and TM_{0n} modes also do not exist.
- iii.) TM_{11} is the lowest TM mode that can exist in the rectangular waveguide.

Also, from (8), (11) and the separable solutions, we can write:

$$h^2 = \omega^2 \mu \varepsilon - \beta^2 = A^2 + B^2 = \left(\frac{m\pi}{a}\right)^2 + \left(\frac{n\pi}{b}\right)^2 \tag{18}$$

3.3.2 TE Mode

Now considering the TE Mode, i.e.,

$$E_z = 0$$
, $H_z \neq 0$

We need to first solve for H_z , as we did for the case of TM mode.

After following the similar procedure, we obtain the form of H_z as:

$$H_z = C\cos\left(\frac{m\pi x}{a}\right)\cos\left(\frac{n\pi y}{a}\right)\exp(-j\beta z) \tag{19}$$

We can analyse the above equation directly to look for possible lowest order modes.

- i.) For m=n=0, H_z is a constant. It does not vary with time. So, all transverse components of the field is zero, i.e., $\vec{E}_{\perp} = \vec{H}_{\perp} = 0$. This is because \vec{E}_{\perp} and \vec{H}_{\perp} contain space derivatives of H_z . From this we can immediately as H_z must be zero too, as magnetic field cannot exist in the absence of a time-varying electric field. Thus, the TE₀₀ mode does not exist.
- ii.) The TE_{m0} and TE_{0n} modes exist. Thus the lowest order mode could be either TE_{10} or TE_{01} mode.

3.3.3 Cut-off Frequency, Dominant Mode and Field Pattern

We know from the preceding analysis that:

$$h^{2} = \left(\frac{m\pi}{a}\right)^{2} + \left(\frac{n\pi}{b}\right)^{2}$$
$$\beta^{2} = \omega^{2}\mu\varepsilon - \left(\frac{m\pi}{a}\right)^{2} - \left(\frac{n\pi}{b}\right)^{2}$$

Now for a propagating wave, the frequency should be greater than some critical value for the term β to be a real number. If β is a complex number, it would mean the EM wave decays exponentially inside the waveguide.

At the cut-off frequency of a mode, we have $\beta = 0$.

With this, we can find the equation for the cut-off frequency as follows:

$$f_c = \frac{1}{2\pi\sqrt{\mu\varepsilon}} \left\{ \left(\frac{m\pi}{a}\right)^2 + \left(\frac{n\pi}{b}\right)^2 \right\}^{1/2} \tag{20}$$

From the above equation (20), we can calculate the cutoff frequencies of TE_{10} , TE_{02} and TM_{11} modes. We observe that:

$$f_{TE_{10}}^c < f_{TE_{01}}^c < f_{TM_{11}}^c$$

Thus, TE_{10} mode is the lowest order mode of a rectangular waveguide. It has the minimum cutoff frequency. Consequently, it is also the dominant mode of the rectangular waveguide as the probability of a wave being in TE_{10} mode is the greatest. It depends only on the 'a' side of the waveguide.

In the dominant TE_{10} mode:

$$H_z = C \cos\left(\frac{\pi x}{a}\right) \exp(-j\beta z)$$

$$E_y = -\frac{j\omega\mu}{(\pi/a)^2} C\left(\frac{\pi}{a}\right) \sin\left(\frac{\pi x}{a}\right) \exp(-j\beta z)$$

$$H_x = -\frac{j\omega\varepsilon}{(\pi/a)^2} C\left(\frac{\pi}{a}\right) \sin\left(\frac{\pi x}{a}\right) \exp(-j\beta z)$$

$$E_x = 0, \quad H_y = 0$$

The field pattern of electric and magnetic field inside the waveguide depends on which mode is it being operated on.

In the TE_{10} mode, magnetic flux lines appear as continuous loops, and electric field lines occur as sinusodial waves on the x-y plane, which become zero on the y = 0 and y = b walls.

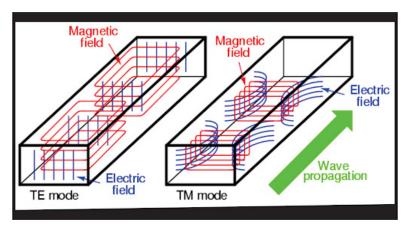


Fig 6. Field Patterns inside Rectangular Waveguide

Source: http://www.engineeringdone.com/te-tm-modes/te-tm-modes/

IV. Antenna Parameters

All kinds of antennas can be characterised or studied using certain parameters which have been summarised in this section.

4.1 Bandwidth

The bandwidth gives us the frequency range over which an antenna operates. All waveguides have a lower cutoff frequency, ω_c . So for an antenna to function properly, the frequency of the wave must be greater than the cutoff frequency. For optimum transport, the frequency of the wave must in the range of $1.25\omega_c$ to $1.9\omega_c$. If the frequency is greater than $1.25\omega_c$ then dispersion down the waveguide gets minimised, and if the frequency is lesser than $1.9\omega_c$, then the higher order modes gets suppressed.

4.2 Radiation Pattern

The radiation pattern of an antenna gives us the power radiated by it as a function of θ and ϕ , i.e., as a function of direction.

We can classify antennas into three types based on their radiation patterns:

- i.) **Isotropic**: Antenna radiates same amount of radiation in all directions.
- ii.) Omni-directional: The antenna is isotropic in one plane.
- iii.) **Directional**: There is no symmetry is power radiation of the antenna. It is usually radiates power as a single peak in some direction.

4.3 Field Regions

The electromagnetic fields surrounding an antenna could be divided into three regions:

- i.) Far Fields: These are the fields in the region far away from the antenna. The electric and magnetic fields do not change shape with distance.
- ii.) Reactive Near Fields: These are the fields in the immediate vicinity of the antenna. The electric and magnetic fields are out of phase by 90 degrees.
- iii.) Radiative Near Fields: These are the fields in the region between far fields and reactive near fields.

4.4 Directivity

Directivity of an antenna is fundamental parameter. It gives us a measure of how directional the radiation pattern of an antenna is.

An antenna which radiates equally in all directions, i.e., the isotropic antenna, would have zero directivity.

If we write the normalised field pattern of an antenna is written in spherical harmonics as $F(\theta, \phi)$, then the mathematical formula for directivity is given as:

$$D = \left[\frac{1}{4\pi} \int_0^{2\pi} \int_0^{\pi} |F(\theta, \phi)|^2 \sin\theta d\theta d\phi\right]^{-1}$$
 (21)

4.5 Gain

The gain of the antenna measures how much power is radiated by the antenna in the peak directivity direction when compared to an isotropic source.

It takes into account the actual losses that might have occurred in the system. Thus, it is often used more to specify the characteristics of an antenna compared to directivity.

4.6 Lobes and HPBW

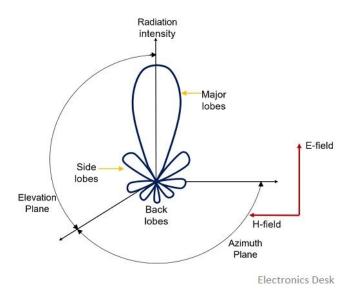


Fig 7. Radiation Pattern of an Antenna

Main Lobe : It is the region around the direction of peak radiation of the antenna, usually the region within 3dB of the peak gain.

Side Lobes: These are the smaller beams away from the main beam. These are usually the radiation along undesired directions.

Null: These are the regions along which no power is radiated.

HPBW: Half Power Full Bandwidth is the angular separation in which the power radiated by the antenna decreases by 50% of the maximum power radiated in the peak direction.

V. Horn Antenna

Horn Antenna is one of the most commonly used antenna structures. It consists of a rectangular waveguide which flares out at one end. They are directional antennas.

The flare is needed to prevent a sudden change of impedance. If the waveguide is open-ended and has no flare, the change in impedance will be too high and a part of the wave energy will get reflected back into the waveguide.

Thus, the flare essentially acts as a transitional structure. It ensures the impedance of the waveguide matches with the impedance of the free space, and the radiation can flow smoothly.

Based on the shape of the flare, the horn antennas can be classified into three types.