
Exercise 1

IoT: Green-House sensor with LoRa link & Gateway

In this exercise we are going to use two different IoT DevKits

- Pomme-Pi ONE LoRa DevKit and
- CubleCell: LoRa/LoRaWAN Devkit

as shown on the following figure:

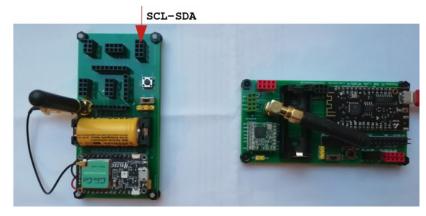

Both boards are programmed with **Arduino IDE** or **PlatformIO**.

Attention:

This exercise is the **starting point** for our 4 hours lab including the development of complete IoT architecture with low power terminal nodes and IoT gateway with Lora to WiFi relay. The gateway sends the data to MQTT and TS IoT servers.

Content

Sending and receiving LoRa packets	
Attention:	
1.1 Receiver side on Lolin D32	
1.2 Sender side on CubeCell board	3
To do:	
1.3 Sender side on CubeCell board with SHT21 & BH1750 sensors	
To do:	
1.4 Receiver/gateway side on Lolin D32 board	
To do:	
1.5 Receiver/gateway on Lolin D32 board (with callback) & OLED	9
Assignment (for students not having a comprehensive specific project)	
Appendix	
A.1 AES encryption	
A.1.1 AES "hardware" ecryption for ESP32	13
A.1.1 AES "software" encryption/decryption for CubeCell	14
A.1.2 Our AES - test example on CubeCell board	
Final remarks	

Attention:

You should install the libraries (tools) for ESP32 and CubeCell boards. Use preferences and board manager to do it.

Remember that you are using ESP32 – Lolin D32 board and CubeCell board – HTCC-AB01 board. The MCUs of these boards are completely different:

ESP32 uses **Extensa-LX06** micro-processor while CubeCell integrates an **ARM-CORTEX-M0** microprocessor.

1.1 Receiver side on Lolin D32

The following is the code for receiver on Pomme-Pi ONE LoRa board. Note the use of union construct to send/receive LoRa packets in a simple but formatted way.

```
union pack
 uint8_t frame[16]; // byte frame
  float data[4]; // 4 float values for sensor data
} rdp ; // data packet
The same union should be used at the sender side.
#include <SPI.h>
#include <LoRa.h>
#define SCK 18
                        // GPIO18 -- SX127x's SCK
#define MISO 19 // GPIO19 -- SX127x's MISO
#define MOSI 23 // GPIO23 -- SX127x's MOSI
#define SS 5 // GPIO05 -- SX127x's CS
#define RST 15 // GPIO15 -- SX127x's RESET
#define DIO 25 // GPIO25 (integrated modem) -- SX127x's IRQ(Interrupt Request)
#define freq
                  8685E5
#define sf 9
#define sb 125E3
union pack
 uint8_t frame[16]; // trames avec octets
float data[4]; // 4 valeurs en virgule flottante
} rdp; // paquet d'émission
void setup() {
  Serial.begin(9600);
  delay(1000);
  SPI.begin(SCK,MISO,MOSI,SS);
  LoRa.setPins(SS,RST,DI0);
  Serial.println(); delay(100); Serial.println();
  if (!LoRa.begin(freq)) {
     Serial.println("Starting LoRa failed!");
     while (1);
Serial.println("Starting LoRa OK!");
delay(1000);
LoRa.setSpreadingFactor(sf);
LoRa.setSignalBandwidth(sb);
LoRa.setCodingRate4(5);
int rssi;
void loop()
int packetLen;
packetLen=LoRa.parsePacket();
if (packetLen==16)
  int i=0;
  while (LoRa.available()) {
    rdp.frame[i]=LoRa.read();i++;
  rssi=LoRa.packetRssi(); // force du signal en réception en dB
Serial.printf("V:%2.2f,T:%2.2f,H:%2.2f\n",rdp.data[0],rdp.data[1],rdp.data[2]);
  Serial.printf("RSSI=%d\n", rssi);
  }
}
```

1.2 Sender side on CubeCell board – sending battery state

```
#include "LoRaWan_APP.h"
#include "Arduino.h"
#ifndef LoraWan_RGB
#define LoraWan_RGB 0
#endif
                                                       868500000 // Hz
#define RF_FREQUENCY
#define TX_OUTPUT_POWER
                                                                 // dBm
#define LORA_BANDWIDTH
                                                       0
                                                                  // [0: 125 kHz,
                                                                  // 1: 250 kHz,
                                                                  // 2: 500 kHz,
                                                                  // 3: Reserved]
// [SF7..SF12]
#define LORA SPREADING FACTOR
                                                                  // [1: 4/5,
#define LORA_CODINGRATE
                                                       1
                                                                  // 2: 4/6,
// 3: 4/7,
                                                                  // 4: 4/8]
// Same for Tx and Rx
#define LORA_PREAMBLE_LENGTH
                                                       Ω
#define LORA_SYMBOL_TIMEOUT
                                                                  // Symbols
#define LORA_FIX_LENGTH_PAYLOAD_ON
                                                       false
#define LORA_IQ_INVERSION_ON
                                                       false
#define RX_TIMEOUT_VALUE
                                                       1000
#define BUFFER_SIZE
                                                       128 // Define the payload size here
char txPacket[BUFFER_SIZE];
static RadioEvents_t RadioEvents;
void OnTxDone( void );
void OnTxTimeout( void );
typedef enum
    LOWPOWER, ReadVoltage, TX // 3 states (1,2,3)
} States_t;
States_t state;
bool sleepMode = false;
int16_t rssi,rxSize;
uint16_t voltage;
union pack
uint8_t frame[16]; // trames avec octets
  float data[4]; // 4 valeurs en virgule flottante
} sdp ; // paquet d'émission
void setup()
    Serial.begin(9600);
    voltage = 0;
    rssi=0:
    RadioEvents.TxDone = OnTxDone;
    RadioEvents.TxTimeout = OnTxTimeout;
    Radio.Init( &RadioEvents );
    Radio.SetChannel( RF_FREQUENCY );
    Radio.SetTxConfig( MODEM_LORA, TX_OUTPUT_POWER, 0, LORA_BANDWIDTH,
                                     LORA_SPREADING_FACTOR, LORA_CODINGRATE, LORA_PREAMBLE_LENGTH, LORA_FIX_LENGTH_PAYLOAD_ON,
                                     true, 0, 0, LORA_IQ_INVERSION_ON, 3000 );
    state=ReadVoltage;
}
void loop()
  switch(state)
    case TX:
      memset(txPacket,0x00,BUFFER_SIZE);
      sprintf(txPacket, "%s", "ADC_battery (mV): ");
      int plen= strlen(txPacket);
      sprintf(txPacket+plen, "%d", voltage);
      sdp.data[0] = (float)voltage;
      if(voltage<(uint16_t)3680)turnOnRGB(COLOR_SEND,0);</pre>
      else turnOnRGB(COLOR_RECEIVED, 200);
      Serial.printf("\r\nsending packet \"%s\"\r\n",txPacket);
```

```
// Radio.Send( (uint8_t *)txPacket, strlen(txPacket) );
      Radio.Send(sdp.frame, 16);
      Serial.println(strlen(txPacket)); delay(100);
      state=LOWPOWER;
     break;
    case LOWPOWER:
      lowPowerHandler(); delay(100);
      turnOffRGB();
      delay(2000);
                    //LowPower time
      state = ReadVoltage;
     break;
    }
    case ReadVoltage:
      pinMode(VBAT_ADC_CTL,OUTPUT);
      digitalWrite(VBAT_ADC_CTL,LOW);
      voltage=analogRead(ADC)+550; //*2;
      pinMode(VBAT_ADC_CTL, INPUT);
      state = TX;
     break;
     default:
         break;
  Radio.IrqProcess();
void OnTxDone( void )
  Serial.print("TX done!");
  turnOnRGB(0,0);
void OnTxTimeout( void )
    Radio.Sleep();
    Serial.print("TX Timeout....");
    state=ReadVoltage;
    Serial.print(state);
```

To do:

Analyze both codes:

- · LoRa modem initialization
- LoRa radio parameters
- · Lora packets structure and content

Modify the Lora radio parameters

1.3 ADS1115 module - ADC converter and soil humidity sensor

For micro-controllers or SBCs without an analog-to-digital converter or when you want a higher-precision ADC, the **ADS1115 provides 16-bit precision** at 860 samples/second **over I2C**. The chip can be configured as 4 single-ended input channels, or two differential channels.

ADS1115 includes a **programmable gain amplifier**, up to x16, to help boost up smaller single/differential signals to the full range. It can run from 2V to 5V power/logic, can measure a large range of signals and its super easy to use. It is a great general purpose 16 bit converter.

The chip's fairly small so it comes on a breakout board with ferrites to keep the AVDD and AGND quiet. Interfacing is done **via I2C**.


The address can be changed to one of four options so you can have up to 4 ADS1115's connected on a single 2-wire I2C bus for 16 single ended inputs. If you connect the address pin **ADDR** to ground the I2C address is **0x40**.



```
#include <Adafruit_ADS1X15.h>
Adafruit_ADS1115 ads; /* Use this for the 16-bit version */
// Adafruit_ADS1015 ads;
                           /* Use this for the 12-bit version */
void setup(void)
  Serial.begin(9600);
  Serial.println("Hello!");
  Serial.println("Getting single-ended readings from AIN0..3");
  Serial.println("ADC Range: +/- 6.144V (1 bit = 3mV/ADS1015, 0.1875mV/ADS1115)");
  pinMode(Vext, OUTPUT);
  digitalWrite(Vext, LOW); //set vext to high
  delay(500);
  // The ADC input range (or gain) can be changed via the following
  // functions, but be careful never to exceed VDD +0.3V max, or to
  // exceed the upper and lower limits if you adjust the input range!
  // Setting these values incorrectly may destroy your ADC!
  //
                                                                        ADS1015 ADS1115
  //
  // ads.setGain(GAIN_TWOTHIRDS); // 2/3x gain +/- 6.144V 1 bit = 3mV
                                                                                 0.1875mV (default)
  // ads.setGain(GAIN_ONE);
                                    // 1x gain +/- 4.096V 1 bit = 2mV
                                                                                 0.125mV
                                                  +/- 2.048V 1 bit = 1mV
  // ads.setGain(GAIN_TWO);
                                    // 2x gain
                                                                                 0.0625mV
                                    // 4x gain
                                                  +/- 1.024V 1 bit = 0.5mV
  // ads.setGain(GAIN FOUR);
                                                                                 0.03125mV
                                                  +/- 0.512V 1 bit = 0.25mV
  // ads.setGain(GAIN_EIGHT);
                                    // 8x gain
                                                                                 0.015625mV
  // ads.setGain(GAIN_SIXTEEN);
                                    // 16x gain +/- 0.256V 1 bit = 0.125mV 0.0078125mV
  ads.begin();
void loop(void)
  int16_t adc0, adc1, adc2, adc3;
  /\star Be sure to update this value based on the IC and the gain settings! \star/
  //float multiplier = 3.0F; /* ADS1015 @ +/- 6.144V gain (12-bit results) */ float multiplier = 0.1875F; /* ADS1115 @ +/- 6.144V gain (16-bit results) */
 adc0 = ads.readADC_SingleEnded(0);
// adc1 = ads.readADC_SingleEnded(1);
// adc2 = ads.readADC_SingleEnded(2);
/// adc3 = ads.readADC_SingleEnded(3);
Serial.print("AINO: "); Serial.println(adc0 * multiplier);
```

#include <Wire.h>

```
// Serial.print("AIN1: "); Serial.println(adc1 * multiplier);
// Serial.print("AIN2: "); Serial.println(adc2 * multiplier);
// Serial.print("AIN3: "); Serial.println(adc3 * multiplier);
Serial.println(" ");
delay(1000);
```

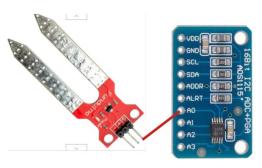


The above program provides the "conductance" value captured on the **soil humidity sensor**. In the air this values is close to zero.

AINO: 0.00
AINO: 0.00
AINO: -0.56
AINO: -0.56
AINO: 0.00
AINO: 0.19
AINO: -0.19
AINO: -0.19
AINO: -0.19

1.3 Sender side on CubeCell board with ADS1115 & SHT21 sensors

The following example shows the use of CubeCell board with connected SHT21 (T/H) and ADS1115 sensors (S). The program operates in three states, **LOWPOWER**, **ReadVTHG**, and **TX** (transmit) enumerated as follows:

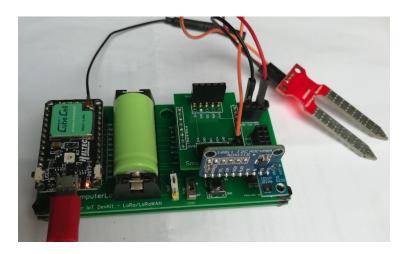

```
typedef enum
{
  LOWPOWER, ReadVTHG, TX // 3 states (1,2,3)
} States_t;
```

The code:

```
#include "LoRaWan APP.h"
#include "Arduino.h"
#include <Adafruit_ADS1X15.h>
Adafruit_ADS1115 ads;
#include <SHT21.h> // include SHT21 library
SHT21 sht;
#ifndef LoraWan_RGB
#define LoraWan RGB 0
#endif
                                                     868500000 // Hz
#define RF_FREQUENCY
#define TX_OUTPUT_POWER
                                                     14
                                                               // dBm
#define LORA BANDWIDTH
                                                     0
                                                               // [0: 125 kHz,
                                                                  1: 250 kHz,
                                                               // 2: 500 kHz,
                                                               // 3: Reserved]
                                                               // [SF7..SF12]
#define LORA_SPREADING_FACTOR
#define LORA_CODINGRATE
                                                     1
                                                               // [1: 4/5,
                                                               //
                                                                  2: 4/6,
                                                               //
                                                                  3: 4/7,
                                                               // 4: 4/8]
                                                               // Same for Tx and Rx
#define LORA_PREAMBLE_LENGTH
                                                     8
#define LORA SYMBOL TIMEOUT
                                                               // Symbols
#define LORA_FIX_LENGTH_PAYLOAD_ON
                                                     false
#define LORA_IQ_INVERSION_ON
                                                     false
#define RX_TIMEOUT_VALUE
                                                     1000
#define BUFFER SIZE
                                                     128 // Define the payload size here
char txPacket[BUFFER_SIZE];
static RadioEvents_t RadioEvents;
void OnTxDone( void );
void OnTxTimeout( void );
typedef enum
            ReadVTHG, TX // 3 states (1,2,3)
  LOWPOWER,
} States_t;
States_t state;
bool sleepMode = false;
int16 t rssi,rxSize;
uint16_t voltage;
```

```
float temperature, humidity, ground; // ground means - soil humidity or conductance
union pack
uint8_t frame[16]; // bytes frame
float data[4];
} sdp; // packet
                   // 4 float values for sensor data for
void setup()
    Serial.begin(9600); delay(200);
    pinMode(Vext, OUTPUT);
    digitalWrite(Vext, LOW); delay(100);
    Wire.begin();
    voltage = 0;
    rssi=0;
    RadioEvents.TxDone = OnTxDone;
    RadioEvents.TxTimeout = OnTxTimeout;
   Radio.Init( &RadioEvents );
    Radio.SetChannel( RF_FREQUENCY );
    Radio.SetTxConfig( MODEM_LORA, TX_OUTPUT_POWER, 0, LORA_BANDWIDTH,
                                    LORA_SPREADING_FACTOR, LORA_CODINGRATE,
                                    LORA_PREAMBLE_LENGTH, LORA_FIX_LENGTH_PAYLOAD_ON,
                                    true, 0, 0, LORA_IQ_INVERSION_ON, 3000 );
    state=ReadVTHG;
                      // read voltage , temperature humidity and ground humidity
}
void loop()
 float multiplier = 0.1875F; /* ADS1115 @ +/- 6.144V gain (16-bit results) */
 switch(state)
  {
    case TX:
      sdp.data[0] = (float)voltage;
      sdp.data[1] = temperature;
      sdp.data[2] = humidity;
      sdp.data[3] = ground;
      if(voltage<(uint16_t)3680)turnOnRGB(COLOR_SEND,0);</pre>
      else turnOnRGB(COLOR_RECEIVED, 200);
      Serial.printf("\r\nsending packet- mV:%d, T:%d, H:%d, G:%d\n",voltage,(int)temperature,
(int)humidity, (int)ground);
     Radio.Send(sdp.frame, 16);
      Serial.println(strlen(txPacket)); delay(100);
      state=LOWPOWER;
     break;
    }
    case LOWPOWER:
      lowPowerHandler(); delay(100);
      turnOffRGB();
      delay(6000); // LowPower time
      state = ReadVTHG;
     break:
    case ReadVTHG:
     pinMode(VBAT_ADC_CTL,OUTPUT);
      digitalWrite(VBAT_ADC_CTL,LOW);
     voltage=analogRead(ADC)+550; //*2;
      pinMode(VBAT_ADC_CTL, INPUT);
      pinMode(Vext, OUTPUT); delay(40);
      digitalWrite(Vext, LOW); delay(40);
      Wire.begin(); delay(40);
      temperature = sht.getTemperature(); // get temp from SHT
      humidity = sht.getHumidity(); // get temp from SHT
      Serial.print("Temp: ");
                                   // print readings
      Serial.print(temperature);
      Serial.print("\t Humidity: ");
      Serial.println(humidity); delay(40);
      digitalWrite(Vext,LOW); // start power before activating Wire
      Wire.begin();delay(100);
      ads.begin(); delay(200);
                                 // 200
      ground = ads.readADC_SingleEnded(0);
      Serial.print("Ground humidity: ");
      Serial.print(ground);
```

```
Serial.println(" %");
      delay(40);
      Wire.end(); delay(40);
      digitalWrite(Vext, HIGH); delay(40);
      state = TX;
      break;
     default:
          break;
  Radio.IrqProcess();
void OnTxDone( void )
  Serial.print("TX done!");
  turnOnRGB(0,0);
void OnTxTimeout( void )
    Radio.Sleep( );
Serial.print("TX Timeout.....");
    state=ReadVTHG;
    Serial.print(state);
```


To do:

In order to shorten the high power period experiment with shorter delay () periods in ReadVTHL state.

1.4 Receiver/gateway side on Lolin D32 board

```
#include <WiFi.h>
#include "ThingSpeak.h"
#include <SoftwareSerial.h>
                     = "Livebox-08B0";
const char* ssid
const char* password = "G79ji6dtEptVTPWmZP";
#include <SPI.h>
#include <LoRa.h>
             18
                    // GPIO18 -- SX127x's SCK
#define SCK
              19 // GPIO19 -- SX127x's MISO
23 // GPIO23 -- SX127x's MOSI
#define MISO
#define MOSI
                5 // GPIO05 -- SX127x's CS
#define SS
                    // GPIO15 -- SX127x's RESET
#define RST
                15
#define DIO 25
                      // GPIO25 (integrated modem) -- SX127x's IRQ(Interrupt Request)
#define freq
                8685E5
#define sf 9
#define sb 125E3
union pack
uint8_t frame[16]; // trames avec octets
float data[4]; // 4 valeurs en virgule flottante
} rdp ; // paquet d'émission
WiFiClient client;
unsigned long myChannelNumber = 1697980;
const char * myWriteAPIKey = "4K897XNNHTW7I4NO";
void setup() {
  Serial.begin(9600);
  Serial.print("[WiFi] Connecting to ");
  Serial.println(ssid);
  WiFi.begin(ssid, password);
  while(WiFi.status() != WL_CONNECTED)
    {
      Serial.print(".");
      delay(500);
  Serial.println("");
  Serial.println("WiFi connected");
  Serial.println("IP address: ");
  Serial.println(WiFi.localIP());
  delay(500);
  ThingSpeak.begin(client); // Initialize ThingSpeak
  delay(1000);
  SPI.begin(SCK, MISO, MOSI, SS);
  LoRa.setPins(SS,RST,DI0);
  Serial.println(); delay(100); Serial.println();
  if (!LoRa.begin(freq)) {
    Serial.println("Starting LoRa failed!"); while (1);
Serial.println("Starting LoRa OK!"); delay(1000);
LoRa.setSpreadingFactor(sf);
LoRa.setSignalBandwidth(sb);
LoRa.setCodingRate4(5);
int rssi;
void loop()
int packetLen;
packetLen=LoRa.parsePacket();
if (packetLen==16)
  int i=0:
  while (LoRa.available()) {
    rdp.frame[i]=LoRa.read();i++;
  rssi=LoRa.packetRssi(); // force du signal en réception en dB
  Serial.printf("V:%2.2f,T:%2.2f,H:%2.2f\n",rdp.data[0],rdp.data[1],rdp.data[2]);
  Serial.printf("RSSI=%d\n", rssi);
  ThingSpeak.setField(1, rdp.data[0]);
```

```
ThingSpeak.setField(2, rdp.data[1]);
  ThingSpeak.setField(3, rdp.data[2]);
  ThingSpeak.setField(4, rssi);
  int x = ThingSpeak.writeFields(myChannelNumber, myWriteAPIKey);
  if(x == 200) {
    Serial.println("Channel update successful.");
  else{
    Serial.println("Problem updating channel. HTTP error code " + String(x));
  delay(15000);
  }
WiFi connected
IP address:
192.168.1.50
Starting LoRa OK!
V:4069.00, T:21.35, H:30.84
RSSI=-32
Channel update successful.
V:4068.00, T:21.32, H:30.81
RSSI=-33
Channel update successful.
V:4068.00,T:21.34,H:30.71
RSSI=-32
Channel update successful.
V:4069.00, T:21.27, H:30.77
RSSI=-32
Channel update successful.
V:4069.00, T:21.30, H:30.77
RSSI=-33
Channel update successful.
V:4068.00,T
```

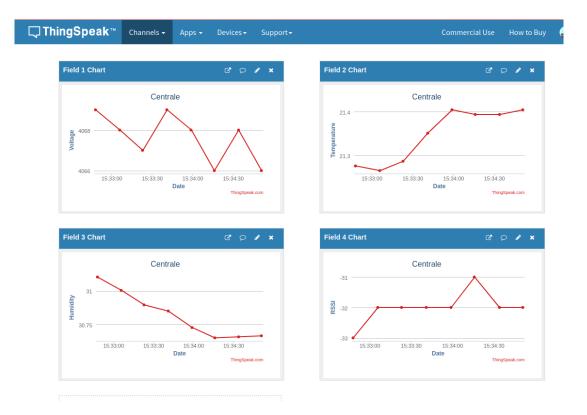

To do:


- 1. Instead of simple WiFi connection use WiFiManager to provide your credentials via local access point and simple web server at: 192.168.1.4
- 2. Use callback function on Receive to capture the arriving LoRa packets

1.5 Receiver/gateway on Lolin D32 board (with callback) & OLED

```
#include <WiFi.h>
#include "ThingSpeak.h"
#include <SoftwareSerial.h>
#include <Wire.h>
#include "SSD1306Wire.h"
SSD1306Wire display(0x3c, 12, 14);
const char* ssid
                     = "Livebox-08B0";
const char* password = "G79ji6dtEptVTPWmZP";
#include <SPI.h>
#include <LoRa.h>
               18
                     // GPI018 -- SX127x's SCK
#define SCK
#define MISO 19 // GPI019 -- SX127x's MISO #define MOSI 23 // GPI023 -- SX127x's MOSI
#define SS 5 // GPIO05 -- SX127x's CS
#define RST 15 // GPIO15 -- SX127x's RESET
               25 // GPIO26 -- SX127x's IRQ(Interrupt Request)
#define DIO
#define freq
                8685E5
#define sf 9
#define sb 125E3
typedef union
 uint8_t frame[16]; // frames with bytes
 float data[4]; // 4 floating point values
} pack_t ; // packet type
WiFiClient client;
unsigned long myChannelNumber = 1697980;
const char * myWriteAPIKey = "4K897XNNHTW7I4NO";
int rssi=0;
QueueHandle_t dqueue; // queues for data packets
void disp(char *d1, char *d2, char *d3, char *d4, char *d5)
  display.init();
  //display.flipScreenVertically();
  display.setTextAlignment(TEXT_ALIGN_LEFT);
  display.setFont(ArialMT_Plain_10); // ArialMT_Plain_10
  display.drawString(0, 0, d1);
  display.drawString(0, 9, d2);
display.drawString(0, 18, d3);
  display.drawString(0, 27, d4);
  display.drawString(0, 36, d5);
  display.drawString(20, 52, "SmartComputerLab");
  display.display();
void onReceive(int packetSize)
pack_t rdp;
Serial.println("received packet");
  if (packetSize==16)
    int i=0;
    while (LoRa.available()) { rdp.frame[i]=LoRa.read();i++; }
    rssi=LoRa.packetRssi();
    xQueueReset(dqueue); // to keep only the last element
    xQueueSend(dqueue, &rdp, portMAX_DELAY);
  }
void setup() {
  Serial.begin(9600);
  Serial.print("[WiFi] Connecting to ");
  Serial.println(ssid);
  WiFi.begin(ssid, password);
  while(WiFi.status() != WL_CONNECTED)
      Serial.print(".");
      delay(500);
```

```
Serial.println("");
  Serial.println("WiFi connected");
  Serial.println("IP address: ");
  Serial.println(WiFi.localIP());
  delay(500);
  ThingSpeak.begin(client); // Initialize ThingSpeak
  delay(1000):
  SPI.begin(SCK, MISO, MOSI, SS);
  LoRa.setPins(SS,RST,DI0);
  Serial.println(); delay(100); Serial.println();
  if (!LoRa.begin(freq)) {
    Serial.println("Starting LoRa failed!");
    while (1);
  Serial.println("Starting LoRa OK!");
  delay(1000);
  LoRa.setSpreadingFactor(sf);
  LoRa.setSignalBandwidth(sb);
  LoRa.setCodingRate4(5);
  dqueue = xQueueCreate(4,16); // queue for 4 data packets
  LoRa.onReceive(onReceive); // register the receive callback
  LoRa.receive(); // put the radio into receive mode
void loop()
  pack_t rdp;
  char d1[32], d2[32], d3[32], d4[32], d5[32];
  xQueueReceive(dqueue,rdp.frame,portMAX_DELAY); // default:portMAX_DELAY
  Serial.printf("Volt(mV): %2.2f, T: %2.2f, H: %2.2f, L: %2.2f\
n",rdp.data[0],rdp.data[1],rdp.data[2],rdp.data[3]);
  Serial.printf("RSSI=%d\n", rssi);
  ThingSpeak.setField(1, rdp.data[0]);
ThingSpeak.setField(2, rdp.data[1]);
  ThingSpeak.setField(3, rdp.data[2]);
  ThingSpeak.setField(4, rdp.data[3]);
  ThingSpeak.setField(5, rssi);
  int x = ThingSpeak.writeFields(myChannelNumber, myWriteAPIKey);
  if(x == 200) {
    Serial.println("Channel update successful.");
  else{
   Serial.println("Problem updating channel. HTTP error code " + String(x));
  sprintf(d1, "Battery (mV): %2.2f",rdp.data[0]);sprintf(d2, "Temperature : %2.2f",rdp.data[1]);
  sprintf(d3,"Humidity : %2.2f",rdp.data[2]);sprintf(d4,"Luminosity : %2.2f",rdp.data[3]);
  sprintf(d5, "RSSI: %d", rssi);
  disp(d1,d2,d3,d4,d5);
  delay(15000);
Starting LoRa OK!
received packet
V:4169.00,T:23.69,H:27.55,L:400.83
RSSI=-30
Channel update successful.
received packet
received packet
received packet
received packet
V:4162.00, T:23.69, H:27.66, L:400.83
RSSI=-30
received packet
Channel update successful.
received packet
received packet
received packet
received packet
V:4161.00, T:23.68, H:29.42, L:400.83
RSSI=-31
received packet
Channel update successful.
received packet
received packet
received packet
```

```
received packet
V:4160.00, T:23.68, H:28.34, L:408.33
RSSI=-31
Channel update successful.
received packet
received packet
received packet
received packet
received packet
V:4162.00, T:23.65, H:27.72, L:408.33
RSSI=-31
Channel update successful.
received packet
received packet
received packet
received packet
```

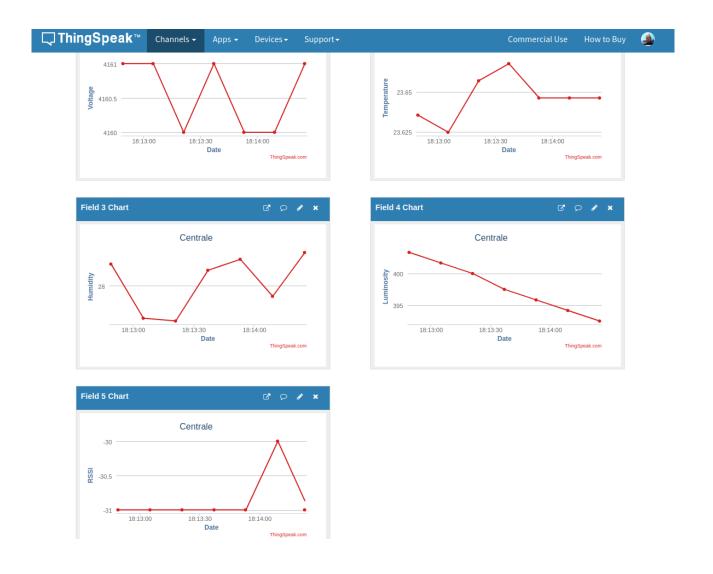

Assignment (Green-House sensor station)

- 1. After testing the presented IoT Architecture modify the code of the gateway to adapt it to your sensor (T/H/G) for temperature, humidity and soil humidity (conductance).
- 2. Analyze the power consumption with PPK2 (Power Profiler).
- 3. Add the small solar panel and analyze once more the battery state and power consumption.
- 4. In order to water the soil automatically you can add another board(s) receiving the data from the ThingSpeak server and activating a water valve.

Appendix

A.1 AES encryption

A.1.1 AES "hardware" ecryption for ESP32

The following example shows the use of AES encryption mechanism for embedded accelerator in ESP32 SoC. The encrypted/decrypted byte frame is 32-byte long; in any case it has to be multiple of 16 bytes.

```
#include "mbedtls/aes.h"
void encrypt (unsigned char *plainText, char *key, unsigned char *outputBuffer, int nblocks)
    mbedtls_aes_context aes;
    mbedtls_aes_init( &aes );
    mbedtls_aes_setkey_enc(&aes, (const unsigned char*)key,strlen(key)*8);
    for(int i=0;i<nblocks;i++)</pre>
        mbedtls_aes_crypt_ecb(&aes,MBEDTLS_AES_ENCRYPT,
                                                     (const unsigned char*) (plainText+i*16), outputBuffer+i*16);
    mbedtls_aes_free(&aes);
void decrypt (unsigned char *chipherText, char *key, unsigned char *outputBuffer, int nblocks)
    mbedtls_aes_context aes;
    mbedtls_aes_init( &aes );
    mbedtls_aes_setkey_dec( &aes, (const unsigned char*) key, strlen(key) * 8 );
        for(int i=0;i<nblocks;i++)
        mbedtls_aes_crypt_ecb(&aes,MBEDTLS_AES_DECRYPT,
                                                   (const unsigned char*) (chipherText+i*16), outputBuffer+i*16);
    mbedtls_aes_free(&aes );
void setup() {
    mbedtls aes context aes;
    Serial.begin(9600); delay(400);
    Serial.println(); Serial.println();
    \label{eq:continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous
0x02, 0x03};
    char *key = "abcdefghijklmnop";
    unsigned char input[16] = { 0xAB, 0xCD, 0xAC, 0xB8,0x8A, 0x77, 0xA6, 0xA6,0x8B, 0xC1, 0xD2,
0xF3,0xBB, 0xF1, 0xF2, 0xF3};
    //unsigned char *input = (unsigned char *) "SmartComputerLabSmartComputerLab";
    unsigned char crypte[16], decrypte[16];
    Serial.println(); Serial.println();delay(400);
    for(int i=0; i<16;i++) Serial.print(input[i], HEX);</pre>
    Serial.println();
    encrypt(input, key, crypte, 1);
    for(int i=0; i<16;i++) Serial.print(crypte[i],HEX);</pre>
    Serial.println(); delay(400);
    Serial.println();
    decrypt (crypte, key, decrypte,1);
    for(int i=0; i<16;i++) Serial.print(decrypte[i], HEX);</pre>
    Serial.println(); delay(400);
void loop() { }
Execution result:
ABCDACB88A77A6A68BC1D2F3BBF1F2F3
E78C3A1E3D356A116AF49CC77EC773C
```

ABCDACB88A77A6A68BC1D2F3BBF1F2F3

A.1.1 AES "software" encryption/decryption for CubeCell

The encryption for CubeCell (ARM) must be done via software. The following are two necessary files to add (include) to your sketch: aes.h and aes.c

https://github.com/HelTecAutomation/CubeCell-Arduino/tree/master/cores/asr650x/lora/system/crypto

```
A.1.1.1 aes.h
 Copyright (c) 1998-2008, Brian Gladman, Worcester, UK. All rights reserved.
 LICENSE TERMS
 The redistribution and use of this software (with or without changes)
 is allowed without the payment of fees or royalties provided that:
  1. source code distributions include the above copyright notice, this
     list of conditions and the following disclaimer;
  2. binary distributions include the above copyright notice, this list
     of conditions and the following disclaimer in their documentation;
  3. the name of the copyright holder is not used to endorse products
     built using this software without specific written permission.
 DISCLAIMER
 This software is provided 'as is' with no explicit or implied warranties
 in respect of its properties, including, but not limited to, correctness
 and/or fitness for purpose.
 Issue 09/09/2006
 This is an AES implementation that uses only 8-bit byte operations on the
 cipher state.
#ifndef AES_H
#define AES_H
# define AES_ENC_PREKEYED /* AES encryption with a precomputed key schedule */
#endif
#if 1
# define AES_DEC_PREKEYED /* AES decryption with a precomputed key schedule */
#endif
#if 0
# define AES_ENC_128_OTFK /* AES encryption with 'on the fly' 128 bit keying */
#endif
#if 0
# define AES_DEC_128_OTFK /* AES decryption with 'on the fly' 128 bit keying */
#endif
#if 0
# define AES_ENC_256_OTFK /* AES encryption with 'on the fly' 256 bit keying */
#if 0
# define AES_DEC_256_OTFK /* AES decryption with 'on the fly' 256 bit keying */
#endif
#define N ROW
#define N COL
#define N_BLOCK (N_ROW * N_COL)
#define N_MAX_ROUNDS
typedef uint8_t return_type;
   Warning: The key length for 256 bit keys overflows a byte
    (see comment below)
typedef uint8_t length_type;
```

typedef struct

```
uint8_t ksch[(N_MAX_ROUNDS + 1) * N_BLOCK];
    uint8_t rnd;
} aes_context;
/* The following calls are for a precomputed key schedule
    NOTE: If the length_type used for the key length is an
    unsigned 8-bit character, a key length of 256 bits must
    be entered as a length in bytes (valid inputs are hence
    128, 192, 16, 24 and 32).
#if defined( AES_ENC_PREKEYED ) || defined( AES_DEC_PREKEYED )
return_type aes_set_key( const uint8_t key[],
                         length_type keylen,
                         aes_context ctx[1] );
#endif
#if defined( AES_ENC_PREKEYED )
return_type aes_encrypt( const uint8_t in[N_BLOCK],
                         uint8_t out[N_BLOCK],
                         const aes_context ctx[1] );
return_type aes_cbc_encrypt( const uint8_t *in,
                         uint8_t *out,
                         int32_t n_block
                         uint8_t iv[N_BLOCK],
                         const aes_context ctx[1] );
#endif
#if defined( AES_DEC_PREKEYED )
return_type aes_decrypt( const uint8_t in[N_BLOCK],
                         uint8_t out[N_BLOCK],
                         const aes_context ctx[1] );
return_type aes_cbc_decrypt( const uint8_t *in,
                         uint8_t *out,
                         int32_t n_block,
                         uint8_t iv[N_BLOCK],
                         const aes_context ctx[1] );
#endif
/* The following calls are for 'on the fly' keying. In this case the
    encryption and decryption keys are different.
    The encryption subroutines take a key in an array of bytes in
    key[L] where L is 16, 24 or 32 bytes for key lengths of 128,
    192, and 256 bits respectively. They then encrypts the input
    data, in[] with this key and put the reult in the output array
    out[]. In addition, the second key array, o_key[L], is used
    to output the key that is needed by the decryption subroutine
    to reverse the encryption operation. The two key arrays can
    be the same array but in this case the original key will be
    overwritten.
    In the same way, the decryption subroutines output keys that
    can be used to reverse their effect when used for encryption.
    Only 128 and 256 bit keys are supported in these 'on the fly'
#if defined( AES_ENC_128_OTFK )
void aes_encrypt_128( const uint8_t in[N_BLOCK],
                      uint8_t out[N_BLOCK],
                      const uint8_t key[N_BLOCK],
                      uint8_t o_key[N_BLOCK] );
#endif
#if defined( AES_DEC_128_OTFK )
void aes_decrypt_128( const uint8_t in[N_BLOCK],
                      uint8_t out[N_BLOCK],
                      const uint8_t key[N_BLOCK],
```

```
uint8_t o_key[N_BLOCK] );
#endif
#if defined( AES_ENC_256_OTFK )
void aes_encrypt_256( const uint8_t in[N_BLOCK],
                      uint8_t out[N_BLOCK],
                      const uint8_t key[2 * N_BLOCK],
                      uint8_t o_key[2 * N_BLOCK] );
#endif
#if defined( AES_DEC_256_OTFK )
void aes_decrypt_256( const uint8_t in[N_BLOCK],
                     uint8_t out[N_BLOCK],
                      const uint8_t key[2 * N_BLOCK],
                      uint8_t o_key[2 * N_BLOCK] );
#endif
#endif
A.1.1.2 aes.c
 Copyright (c) 1998-2008, Brian Gladman, Worcester, UK. All rights reserved.
 LICENSE TERMS
 The redistribution and use of this software (with or without changes)
 is allowed without the payment of fees or royalties provided that:
  1. source code distributions include the above copyright notice, this
     list of conditions and the following disclaimer;
  2. binary distributions include the above copyright notice, this list
     of conditions and the following disclaimer in their documentation;
  3. the name of the copyright holder is not used to endorse products
     built using this software without specific written permission.
DISCLAIMER
 This software is provided 'as is' with no explicit or implied warranties
 in respect of its properties, including, but not limited to, correctness
 and/or fitness for purpose.
 Issue 09/09/2006
 This is an AES implementation that uses only 8-bit byte operations on the
 cipher state (there are options to use 32-bit types if available).
 The combination of mix columns and byte substitution used here is based on
 that developed by Karl Malbrain. His contribution is acknowledged.
/* define if you have a fast memcpy function on your system */
#if 0
# define HAVE MEMCPY
  include <string.h>
 if defined( _MSC_VER )
   include <intrin.h>
    pragma intrinsic( memcpy )
# endif
#endif
#include <stdlib.h>
#include <stdint.h>
/* define if you have fast 32-bit types on your system */
#if 0
# define HAVE_UINT_32T
#endif
/* define if you don't want any tables */
```

```
# define USE_TABLES
#endif
/* On Intel Core 2 duo VERSION_1 is faster */
/* alternative versions (test for performance on your system) */
#if 1
# define VERSION_1
#endif
#include "aes.h"
//#if defined( HAVE_UINT_32T )
// typedef unsigned long uint32_t;
//#endif
/* functions for finite field multiplication in the AES Galois field
#define WPOLY
                                                                                              0 \times 011 b
#define BPOLY
                                                                                                     0x1b
#define DPOLY
                                                                                              0x008d
#define f1(x)
                                                                                                (x)
                                                                                               ((x << 1) ^ (((x >> 7) & 1) * WPOLY))
#define f2(x)
                                                                                               ((x << 2) ^ (((x >> 6) & 1) * WPOLY) ^ (((x >> 6) & 2) * WPOLY))

((x << 3) ^ (((x >> 5) & 1) * WPOLY) ^ (((x >> 5) & 2) * WPOLY) \
#define f4(x)
#define f8(x)
                                                                                                                                                         ^ (((x >> 5) & 4) * WPOLY))
#define d2(x)
                                                                                               (((x) >> 1) ^ ((x) & 1 ? DPOLY : 0))
#define f3(x)
                                                                                                (f2(x)^x
#define f9(x)
                                                                                               (f8(x) ^x)
                                                                                               (f8(x) ^ f2(x) ^ x)
#define fb(x)
                                                                                               (f8(x) ^ f4(x) ^ x)
#define fd(x)
#define fe(x)
                                                                                               (f8(x) ^ f4(x) ^ f2(x))
#if defined( USE TABLES )
                                                                                                                                          /* S Box data values */
#define sb data(w) {
                       w(0x63), w(0x7c), w(0x77), w(0x7b), w(0xf2), w(0x6b), w(0x6f), w(0xc5),
                       w(0x30), w(0x01), w(0x67), w(0x2b), w(0xfe), w(0xd7), w(0xab), w(0x76),
                        \texttt{w(0xca)} \;,\; \texttt{w(0x82)} \;,\; \texttt{w(0xc9)} \;,\; \texttt{w(0x7d)} \;,\; \texttt{w(0xfa)} \;,\; \texttt{w(0x59)} \;,\; \texttt{w(0x47)} \;,\; \texttt{w(0xf0)} \;, \\ \\ \texttt{(0xf0)} \;,\; \texttt{
                       w(0xb7), w(0xfd), w(0x93), w(0x26), w(0x36), w(0x3f), w(0xf7), w(0xcc),
                        w \, (0x09) \, , \, \, w \, (0x83) \, , \, \, w \, (0x2c) \, , \, \, w \, (0x1a) \, , \, \, w \, (0x1b) \, , \, \, w \, (0x6e) \, , \, \, w \, (0x5a) \, , \, \, w \, (0xa0) \, , \, \backslash \, \, (0x6e) \, , \, \, w \, (0x6e)
                       w(0x52), w(0x3b), w(0xd6), w(0xb3), w(0x29), w(0xe3), w(0x2f), w(0x84),
                       w(0x53), w(0xd1), w(0x00), w(0xed), w(0x20), w(0xfc), w(0xb1), w(0x5b),
                       w(0x6a), w(0xcb), w(0xbe), w(0x39), w(0x4a), w(0x4c), w(0x58), w(0xcf), w(0xd0), w(0xef), w(0xaa), w(0xfb), w(0x43), w(0x4d), w(0x33), w(0x85),
                        w \, (0x45) \, , \, \, w \, (0xf9) \, , \, \, w \, (0x02) \, , \, \, w \, (0x7f) \, , \, \, w \, (0x50) \, , \, \, w \, (0x3c) \, , \, \, w \, (0x9f) \, , \, \, w \, (0xa8) \, , \setminus \, (0xa8) \, , \, (0xa8) \, , \, (0xa8) \, , \, (0xa8) \, , \, \, (0xa8) 
                        w\,(0x51)\,,\;w\,(0xa3)\,,\;w\,(0x40)\,,\;w\,(0x8f)\,,\;w\,(0x92)\,,\;w\,(0x9d)\,,\;w\,(0x38)\,,\;w\,(0xf5)\,,\\ \backslash \\
                       w(0xbc), w(0xb6), w(0xda), w(0x21), w(0x10), w(0xff), w(0xf3), w(0xd2),
                        w (0x60) \,, \; w (0x81) \,, \; w (0x4f) \,, \; w (0xdc) \,, \; w (0x22) \,, \; w (0x2a) \,, \; w (0x90) \,, \; w (0x88) \,, \\ \backslash \label{eq:weight} 
                        w \, (0xe0) \, , \, \, w \, (0x32) \, , \, \, w \, (0x3a) \, , \, \, w \, (0x0a) \, , \, \, w \, (0x49) \, , \, \, w \, (0x06) \, , \, \, w \, (0x24) \, , \, \, w \, (0x5c) \, , \backslash 
                        \texttt{w(0xc2)}\,,\,\,\texttt{w(0xd3)}\,,\,\,\texttt{w(0xac)}\,,\,\,\texttt{w(0x62)}\,,\,\,\texttt{w(0x91)}\,,\,\,\texttt{w(0x95)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0x79)}\,,\,\\ \texttt{(0xc2)}\,,\,\,\texttt{w(0xd3)}\,,\,\,\texttt{w(0xac)}\,,\,\,\texttt{w(0x62)}\,,\,\,\texttt{w(0x91)}\,,\,\,\texttt{w(0x95)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0x79)}\,,\\ \texttt{(0x62)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,\texttt{w(0xe4)}\,,\,\,
                       w(0xba), w(0x78), w(0x25), w(0x2e), w(0x1c), w(0xa6), w(0xb4), w(0xc6),
                        \texttt{w(0x9b)}\,,\;\; \texttt{w(0x1e)}\,,\;\; \texttt{w(0x87)}\,,\;\; \texttt{w(0xe9)}\,,\;\; \texttt{w(0xce)}\,,\;\; \texttt{w(0x55)}\,,\;\; \texttt{w(0x28)}\,,\;\; \texttt{w(0xdf)}\,, \\ \\ \texttt{(0x1e)}\,,\;\; \texttt{(
                       w(0x8c), w(0xa1), w(0x89), w(0x0d), w(0xbf), w(0xe6), w(0x42), w(0x68), w(0x41), w(0x99), w(0x2d), w(0x0f), w(0xb0), w(0x54), w(0xbb), w(0x16) }
#define isb_data(w) {    /* inverse S Box data values */
                       w(0x52), w(0x09), w(0x6a), w(0xd5), w(0x30), w(0x36), w(0xa5), w(0x38),
                       w(0xbf), w(0x40), w(0xa3), w(0x9e), w(0x81), w(0xf3), w(0xd7), w(0xfb),
                       w(0x7c), w(0xe3), w(0x39), w(0x82), w(0x9b), w(0x2f), w(0xff), w(0x87), w(0x34), w(0x8e), w(0x43), w(0x44), w(0xc4), w(0xde), w(0xe9), w(0xcb),
```

```
w(0x54), w(0x7b), w(0x94), w(0x32), w(0xa6), w(0xc2), w(0x23), w(0x3d),
     w(0x72), w(0xf8), w(0xf6), w(0x64), w(0x86), w(0x68), w(0x98), w(0x16), w(0xd4), w(0x4), w(0x5c), w(0x5c), w(0x5d), w(0x65), w(0x66), w(0x92),
     w(0x6c), w(0x70), w(0x48), w(0x50), w(0xfd), w(0xed), w(0xb9), w(0xda),
     w(0x90), w(0xd8), w(0xab), w(0x00), w(0x8c), w(0xbc), w(0xd3), w(0x0a),
     w(0xf7), w(0xe4), w(0x58), w(0x05), w(0xb8), w(0xb3), w(0x45), w(0x06),
     w(0xd0), w(0x2c), w(0x1e), w(0x8f), w(0xca), w(0x3f), w(0x0f), w(0x02), w(0xc1), w(0xaf), w(0xbd), w(0x03), w(0x01), w(0x13), w(0x8a), w(0x6b),
     w(0x3a), w(0x91), w(0x11), w(0x41), w(0x4f), w(0x67), w(0xdc), w(0xea),
     w(0x97), w(0xf2), w(0xcf), w(0xce), w(0xf0), w(0xb4), w(0xe6), w(0x73), w(0x96), w(0xac), w(0x74), w(0x22), w(0xe7), w(0xad), w(0x35), w(0x85),
     w(0x6f), w(0xb7), w(0x62), w(0x0e), w(0xaa), w(0x18), w(0xbe), w(0x1b),
     w(0xfc), w(0x56), w(0x3e), w(0x4b), w(0xc6), w(0xd2), w(0x79), w(0x20),
     w(0x9a), w(0xdb), w(0xc0), w(0xfe), w(0x78), w(0xcd), w(0x5a), w(0xf4),
      \texttt{w(0xb1)}\,,\; \texttt{w(0x12)}\,,\; \texttt{w(0x10)}\,,\; \texttt{w(0x59)}\,,\; \texttt{w(0x27)}\,,\; \texttt{w(0x80)}\,,\; \texttt{w(0xec)}\,,\; \texttt{w(0x5f)}\,, \\ \texttt{\column{2}}
     w(0x2d), w(0xe5), w(0x7a), w(0x9f), w(0x93), w(0xc9), w(0x9c), w(0xef),
     w(0xa0), w(0xe0), w(0x3b), w(0x4d), w(0xae), w(0x2a), w(0xf5), w(0xb0),
     w(0xc8), w(0xeb), w(0xbb), w(0x3c), w(0x83), w(0x53), w(0x99), w(0x61),
     w(0x17), w(0x2b), w(0x04), w(0x7e), w(0xba), w(0x77), w(0xd6), w(0x26), w(0xe1), w(0x69), w(0x14), w(0x63), w(0x55), w(0x21), w(0x0c), w(0x7d) }
/* basic data for forming finite field tables */
      \  \  \, w\,(0x08)\,,\;\;w\,(0x09)\,,\;\;w\,(0x0a)\,,\;\;w\,(0x0b)\,,\;\;w\,(0x0c)\,,\;\;w\,(0x0d)\,,\;\;w\,(0x0e)\,,\;\;w\,(0x0f)\,,\\
     w(0x10), w(0x11), w(0x12), w(0x13), w(0x14), w(0x15), w(0x16), w(0x17), w(0x18), w(0x19), w(0x1a), w(0x1b), w(0x1c), w(0x1d), w(0x1e), w(0x1f),
     w(0x28), w(0x29), w(0x2a), w(0x2b), w(0x2c), w(0x2d), w(0x2e), w(0x2f), w(0x30), w(0x31), w(0x32), w(0x33), w(0x34), w(0x35), w(0x36), w(0x37),
     w(0x38), w(0x39), w(0x3a), w(0x3b), w(0x3c), w(0x3d), w(0x3e), w(0x3f),
     w(0x48), w(0x49), w(0x4a), w(0x4b), w(0x4c), w(0x4d), w(0x4e), w(0x4f),
     w(0x60), w(0x61), w(0x62), w(0x63), w(0x64), w(0x65), w(0x66), w(0x67),
     w(0x68), w(0x69), w(0x6a), w(0x6b), w(0x6c), w(0x6d), w(0x6e), w(0x6f), w(0x70), w(0x71), w(0x72), w(0x73), w(0x74), w(0x75), w(0x76), w(0x77),
      w\,(0x78)\,,\; w\,(0x79)\,,\; w\,(0x7a)\,,\; w\,(0x7b)\,,\; w\,(0x7c)\,,\; w\,(0x7d)\,,\; w\,(0x7e)\,,\; w\,(0x7f)\,, \\ \backslash \label{eq:weights} 
     w(0x88), w(0x89), w(0x8a), w(0x8b), w(0x8c), w(0x8d), w(0x8e), w(0x8f),
     w(0x98), w(0x99), w(0x9a), w(0x9b), w(0x9c), w(0x9d), w(0x9e), w(0x9f), w(0xa0), w(0xa1), w(0xa2), w(0xa3), w(0xa4), w(0xa5), w(0xa6), w(0xa7),
     w(0xa8), w(0xa9), w(0xaa), w(0xab), w(0xac), w(0xad), w(0xae), w(0xaf),
     w(0xb8), w(0xb9), w(0xba), w(0xbb), w(0xbc), w(0xbd), w(0xbe), w(0xbf),
     w(0xc0), w(0xc1), w(0xc2), w(0xc3), w(0xc4), w(0xc5), w(0xc6), w(0xc7), w(0xc8), w(0xc9), w(0xca), w(0xcb), w(0xcc), w(0xcd), w(0xce), w(0xce),
     w(0xd8), w(0xd9), w(0xda), w(0xdb), w(0xdc), w(0xdd), w(0xde), w(0xdf),
     \texttt{w(0xe8), w(0xe9), w(0xea), w(0xeb), w(0xec), w(0xed), w(0xee), w(0xef),} \\
     w(0xf0), w(0xf1), w(0xf2), w(0xf3), w(0xf4), w(0xf5), w(0xf6), w(0xf7), \w(0xf8), w(0xf9), w(0xfa), w(0xfb), w(0xfc), w(0xfd), w(0xfe), w(0xff) }
static const uint8_t sbox[256] = sb_data(f1);
#if defined( AES_DEC_PREKEYED )
static const uint8_t isbox[256] = isb_data(f1);
#endif
static const uint8_t gfm2_sbox[256] = sb_data(f2);
static const uint8_t gfm3_sbox[256] = sb_data(f3);
#if defined( AES_DEC_PREKEYED )
static const uint8_t gfmul_9[256] = mm_data(f9);
static const uint8_t gfmul_b[256] = mm_data(fb);
static const uint8_t gfmul_d[256] = mm_data(fd);
```

```
static const uint8_t gfmul_e[256] = mm_data(fe);
#endif
#define s_box(x)
                   sbox[(x)]
#if defined( AES_DEC_PREKEYED )
                   isbox[(x)]
#define is_box(x)
#endif
#define gfm2_sb(x)
                   gfm2_sbox[(x)]
#define gfm3_sb(x)
                   gfm3_sbox[(x)]
#if defined( AES_DEC_PREKEYED )
                gfmul_9[(x)]
#define gfm_9(x)
#define gfm_b(x)
                   gfmul_b[(x)]
#define gfm_d(x)
                  gfmul_d[(x)]
#define gfm_e(x)
                  gfmul_e[(x)]
#endif
#else
/* this is the high bit of x right shifted by 1 */
/* position. Since the starting polynomial has */
/* 9 bits (0x11b), this right shift keeps the
/* values of all top bits within a byte
static uint8_t hibit(const uint8_t x)
{ uint8_t r = (uint8_t)((x >> 1) | (x >> 2));
   r \mid = (r >> 2);
   r |= (r >> 4);
   return (r + 1) >> 1;
/* return the inverse of the finite field element x */
static uint8_t gf_inv(const uint8_t x)
{ uint8_t p1 = x, p2 = BPOLY, n1 = hibit(x), n2 = 0x80, v1 = 1, v2 = 0;
   if(x < 2)
       return x;
   for(;;)
       if(n1)
           while (n2 >= n1)
                                     /* divide polynomial p2 by p1
              v2 ^= (v1 * n2);
                                     /* shift accumulated value and
                                     /* add into result
               n2 = hibit(p2);
           return v1:
       if(n2)
                                     /* repeat with values swapped
                                                                     */
           while (n1 >= n2)
               n1 /= n2;
              p1 ^= p2 * n1;
              v1 ^= v2 * n1;
               n1 = hibit(p1);
           }
       else
           return v2;
/* The forward and inverse affine transformations used in the S-box ^{\star}/
uint8_t fwd_affine(const uint8_t x)
#if defined( HAVE_UINT_32T )
   uint32_t w = x;
w ^= (w << 1) ^ (w << 2) ^ (w << 3) ^ (w << 4);
   return 0x63 ^ ((w ^ (w >> 8)) & 0xff);
   #endif
```

```
uint8_t inv_affine(const uint8_t x)
#if defined( HAVE_UINT_32T )
   uint32_t w = x;
w = (w << 1) ^ (w << 3) ^ (w << 6);
   return 0x05 ^ ((w ^ (w >> 8)) & 0xff);
#else
   #endif
                   fwd_affine(gf_inv(x))
#define s_box(x)
#define is_box(x) gf_inv(inv_affine(x))
#define gfm2_sb(x) f2(s_box(x))
\#define gfm3\_sb(x) f3(s\_box(x))
#define gfm_9(x)
                  f9(x)
#define gfm_b(x)
                  fb(x)
#define gfm_d(x)
                  fd(x)
                 fe(x)
#define gfm_e(x)
#endif
#if defined( HAVE MEMCPY )
# define block_copy_nn(d, s, 1)
                                    memcpy(d, s, 1)
# define block_copy(d, s)
                                   memcpy(d, s, N_BLOCK)
#else
# define block_copy_nn(d, s, 1)
                                   copy_block_nn(d, s, 1)
# define block_copy(d, s)
                                    copy_block(d, s)
static void copy_block( void *d, const void *s )
#if defined( HAVE_UINT_32T )
    ((uint32_t*)d)[0] = ((uint32_t*)s)[0];
    ((uint32_t*)d)[ 1] = ((uint32_t*)s)[ 1];
    ((uint32_t*)d)[2] = ((uint32_t*)s)[2];
    ((uint32_t*)d)[3] = ((uint32_t*)s)[3];
#else
    ((uint8_t*)d)[0] = ((uint8_t*)s)[0];
    ((uint8_t*)d)[1] = ((uint8_t*)s)[1];
    ((uint8_t^*)d)[2] = ((uint8_t^*)s)[2];
    ((uint8_t*)d)[3] = ((uint8_t*)s)[3];
    ((uint8_t*)d)[4] = ((uint8_t*)s)[4];
    ((uint8_t*)d)[5] = ((uint8_t*)s)[5];
    ((uint8_t*)d)[ 6] = ((uint8_t*)s)[ 6];
    ((uint8_t*)d)[7] = ((uint8_t*)s)[7];
    ((uint8_t*)d)[8] = ((uint8_t*)s)[8];
    ((uint8_t*)d)[9] = ((uint8_t*)s)[9];
    ((uint8_t*)d)[10] = ((uint8_t*)s)[10];
    ((uint8_t*)d)[11] = ((uint8_t*)s)[11];
    ((uint8_t*)d)[12] = ((uint8_t*)s)[12];
    ((uint8_t^*)d)[13] = ((uint8_t^*)s)[13];
    ((uint8_t*)d)[14] = ((uint8_t*)s)[14];
    ((uint8_t*)d)[15] = ((uint8_t*)s)[15];
#endif
static void copy_block_nn( uint8_t * d, const uint8_t *s, uint8_t nn )
    while( nn-- )
        //*((uint8_t*)d)++ = *((uint8_t*)s)++;
        *d++ = *s++;
}
static void xor_block( void *d, const void *s )
#if defined( HAVE_UINT_32T )
    ((uint32_t*)d)[ 0] ^= ((uint32_t*)s)[ 0];
    ((uint32_t*)d)[ 1] ^= ((uint32_t*)s)[ 1];
    ((uint32_t*)d)[ 2] ^= ((uint32_t*)s)[ 2];
    ((uint32_t*)d)[ 3] ^= ((uint32_t*)s)[ 3];
    ((uint8_t*)d)[ 0] ^= ((uint8_t*)s)[ 0];
((uint8_t*)d)[ 1] ^= ((uint8_t*)s)[ 1];
```

```
((uint8_t*)d)[ 2] ^= ((uint8_t*)s)[ 2];
    ((uint8_t*)d)[ 3] ^= ((uint8_t*)s)[ 3];
    ((uint8_t*)d)[ 4] ^= ((uint8_t*)s)[ 4];
    ((uint8_t*)d)[5] ^= ((uint8_t*)s)[5];
    ((uint8_t*)d)[ 6] ^= ((uint8_t*)s)[ 6];
    ((uint8_t*)d)[ 7] ^= ((uint8_t*)s)[ 7];
    ((uint8_t*)d)[8] ^= ((uint8_t*)s)[8];
    ((uint8_t*)d)[ 9] ^= ((uint8_t*)s)[ 9];
    ((uint8_t*)d)[10] ^= ((uint8_t*)s)[10];
    ((uint8_t*)d)[11] ^= ((uint8_t*)s)[11];
    ((uint8_t*)d)[12] ^= ((uint8_t*)s)[12];
((uint8_t*)d)[13] ^= ((uint8_t*)s)[13];
    ((uint8_t*)d)[14] ^= ((uint8_t*)s)[14];
    ((uint8_t*)d)[15] ^= ((uint8_t*)s)[15];
#endif
static void copy_and_key( void *d, const void *s, const void *k)
#if defined( HAVE_UINT_32T )
    ((uint32_t*)d)[0] = ((uint32_t*)s)[0] ^ ((uint32_t*)k)[0];
    ((uint32_t*)d)[ 1] = ((uint32_t*)s)[ 1] ^ ((uint32_t*)k)[ 1];
    ((uint32_t*)d)[2] = ((uint32_t*)s)[2] ^ ((uint32_t*)k)[2];
    ((uint32_t*)d)[3] = ((uint32_t*)s)[3] ^ ((uint32_t*)k)[3];
#elif 1
    ((uint8_t*)d)[0] = ((uint8_t*)s)[0] ^ ((uint8_t*)k)[0];
    ((uint8_t*)d)[1] = ((uint8_t*)s)[1] ^ ((uint8_t*)k)[1];
    ((uint8_t*)d)[2] = ((uint8_t*)s)[2] ^ ((uint8_t*)k)[2];
    ((uint8_t*)d)[3] = ((uint8_t*)s)[3] ^ ((uint8_t*)k)[3];
    ((uint8_t*)d)[4] = ((uint8_t*)s)[4] ^ ((uint8_t*)k)[4];
    ((uint8_t^*)d)[5] = ((uint8_t^*)s)[5] ^ ((uint8_t^*)k)[5];
    ((uint8_t*)d)[6] = ((uint8_t*)s)[6] ^ ((uint8_t*)k)[6];
    ((uint8_t*)d)[7] = ((uint8_t*)s)[7] ^ ((uint8_t*)k)[7];
    ((uint8_t*)d)[8] = ((uint8_t*)s)[8] ^ ((uint8_t*)k)[8];
    ((uint8_t*)d)[ 9] = ((uint8_t*)s)[ 9] ^ ((uint8_t*)k)[ 9];
    ((uint8_t*)d)[10] = ((uint8_t*)s)[10] ^ ((uint8_t*)k)[10];
    ((uint8_t*)d)[11] = ((uint8_t*)s)[11] ^ ((uint8_t*)k)[11];
    ((uint8_t*)d)[12] = ((uint8_t*)s)[12] ^ ((uint8_t*)k)[12];
    ((uint8_t*)d)[13] = ((uint8_t*)s)[13] ^ ((uint8_t*)k)[13];
    ((uint8_t*)d)[14] = ((uint8_t*)s)[14] ^ ((uint8_t*)k)[14];
    ((uint8_t*)d)[15] = ((uint8_t*)s)[15] ^ ((uint8_t*)k)[15];
#else
   block_copy(d, s);
    xor_block(d, k);
#endif
}
static void add_round_key( uint8_t d[N_BLOCK], const uint8_t k[N_BLOCK] )
    xor block(d, k);
}
static void shift_sub_rows( uint8_t st[N_BLOCK] )
   uint8 t tt;
    st[0] = s_box(st[0]); st[4] = s_box(st[4]);
    st[8] = s_box(st[8]); st[12] = s_box(st[12]);
    tt = st[1]; st[ 1] = s_box(st[ 5]); st[ 5] = s_box(st[ 9]);
    st[9] = s_box(st[13]); st[13] = s_box(tt);
    tt = st[2]; st[2] = s_box(st[10]); st[10] = s_box(tt);
   tt = st[6]; st[6] = s_box(st[14]); st[14] = s_box(tt);
    tt = st[15]; st[15] = s_box(st[11]); st[11] = s_box(st[7]);
    st[7] = s_box(st[3]); st[3] = s_box(tt);
#if defined( AES_DEC_PREKEYED )
static void inv_shift_sub_rows( uint8_t st[N_BLOCK] )
{ uint8_t tt;
    st[ 0] = is_box(st[ 0]); st[ 4] = is_box(st[ 4]);
    st[ 8] = is_box(st[ 8]); st[12] = is_box(st[12]);
```

```
tt = st[13]; st[13] = is_box(st[9]); st[ 9] = is_box(st[5]);
    st[ 5] = is_box(st[1]); st[ 1] = is_box( tt );
    tt = st[2]; st[ 2] = is_box(st[10]); st[10] = is_box( tt );
    tt = st[6]; st[ 6] = is_box(st[14]); st[14] = is_box( tt );
    tt = st[3]; st[3] = is_box(st[7]); st[7] = is_box(st[11]);
    st[11] = is_box(st[15]); st[15] = is_box( tt );
#endif
#if defined( VERSION_1 )
  static void mix_sub_columns( uint8_t dt[N_BLOCK] )
  { uint8_t st[N_BLOCK];
   block_copy(st, dt);
#else
  static void mix_sub_columns( uint8_t dt[N_BLOCK], uint8_t st[N_BLOCK] )
#endif
    dt[0] = gfm2\_sb(st[0]) ^ gfm3\_sb(st[5]) ^ s_box(st[10]) ^ s_box(st[15]);
    dt[3] = gfm3\_sb(st[0]) ^ s\_box(st[5]) ^ s\_box(st[10]) ^ gfm2\_sb(st[15]);
    dt[4] = gfm2\_sb(st[4]) ^ gfm3\_sb(st[9]) ^ s_box(st[14]) ^ s_box(st[3]);
   dt[8] = gfm2\_sb(st[8]) ^ gfm3\_sb(st[13]) ^ s\_box(st[2]) ^ s\_box(st[7]);
   dt[12] = gfm2\_sb(st[12]) ^ gfm3\_sb(st[1]) ^ s_box(st[6]) ^ s_box(st[11]);
    dt[13] = s_box(st[12]) ^ gfm2_sb(st[1]) ^ gfm3_sb(st[6]) ^ s_box(st[11]);
dt[14] = s_box(st[12]) ^ s_box(st[1]) ^ gfm2_sb(st[6]) ^ gfm3_sb(st[11]);
    dt[15] = gfm3\_sb(st[12]) ^ s\_box(st[1]) ^ s\_box(st[6]) ^ gfm2\_sb(st[11]);
#if defined( AES_DEC_PREKEYED )
#if defined( VERSION_1 )
  static void inv_mix_sub_columns( uint8_t dt[N_BLOCK] )
  { uint8_t st[N_BLOCK];
   block_copy(st, dt);
#else
  static void inv_mix_sub_columns( uint8_t dt[N_BLOCK], uint8_t st[N_BLOCK] )
  {
#endif
    dt[ \ 0] = is_box(gfm_e(st[ \ 0]) \ ^ gfm_b(st[ \ 1]) \ ^ gfm_d(st[ \ 2]) \ ^ gfm_9(st[ \ 3]));
    dt[ 5] = is_box(gfm_9(st[ 0]) ^ gfm_e(st[ 1]) ^ gfm_b(st[ 2]) ^ gfm_d(st[ 3]));
dt[10] = is_box(gfm_d(st[ 0]) ^ gfm_9(st[ 1]) ^ gfm_e(st[ 2]) ^ gfm_b(st[ 3]));
    dt[15] = is_box(gfm_b(st[0]) ^ gfm_d(st[1]) ^ gfm_9(st[2]) ^ gfm_e(st[3]));
    dt[4] = is_box(gfm_e(st[4]) ^ gfm_b(st[5]) ^ gfm_d(st[6]) ^ gfm_9(st[7]));
    dt[ 9] = is_box(gfm_9(st[ 4]) ^ gfm_e(st[ 5]) ^ gfm_b(st[ 6]) ^ gfm_d(st[ 7]));
    dt[14] = is_box(gfm_d(st[4]) ^ gfm_9(st[5]) ^ gfm_e(st[6]) ^ gfm_b(st[7]));
dt[3] = is_box(gfm_b(st[4]) ^ gfm_d(st[5]) ^ gfm_9(st[6]) ^ gfm_e(st[7]));
    dt[8] = is_box(gfm_e(st[8]) ^ gfm_b(st[9]) ^ gfm_d(st[10]) ^ gfm_9(st[11]));
    dt[13] = is_box(gfm_9(st[8]) ^ gfm_e(st[9]) ^ gfm_b(st[10]) ^ gfm_d(st[11]));
    dt[ 2] = is_box(gfm_d(st[ 8]) ^ gfm_9(st[ 9]) ^ gfm_e(st[10]) ^ gfm_b(st[11]));
dt[ 7] = is_box(gfm_b(st[ 8]) ^ gfm_d(st[ 9]) ^ gfm_9(st[10]) ^ gfm_e(st[11]));
    dt[12] = is_box(gfm_e(st[12]) ^ gfm_b(st[13]) ^ gfm_d(st[14]) ^ gfm_9(st[15]));
    dt[1] = is_box(gfm_9(st[12]) ^ gfm_e(st[13]) ^ gfm_b(st[14]) ^ gfm_d(st[15]));
dt[6] = is_box(gfm_d(st[12]) ^ gfm_9(st[13]) ^ gfm_e(st[14]) ^ gfm_b(st[15]));
    dt[11] = is_box(gfm_b(st[12]) ^ gfm_d(st[13]) ^ gfm_9(st[14]) ^ gfm_e(st[15]));
#endif
#if defined( AES_ENC_PREKEYED ) || defined( AES_DEC_PREKEYED )
```

```
/* Set the cipher key for the pre-keyed version */
return_type aes_set_key( const uint8_t key[], length_type keylen, aes_context ctx[1] )
    uint8_t cc, rc, hi;
    switch( keylen )
    case 16:
    case 24:
    case 32:
       break:
    default:
       ctx->rnd = 0;
        return ( uint8_t )-1;
    block_copy_nn(ctx->ksch, key, keylen);
    hi = (keylen + 28) << 2;
    ctx->rnd = (hi >> 4) - 1;
    for( cc = keylen, rc = 1; cc < hi; cc += 4)
    { uint8_t tt, t0, t1, t2, t3;
        t0 = ctx->ksch[cc - 4];
        t1 = ctx->ksch[cc - 3];
        t2 = ctx -> ksch[cc - 2];
        t3 = ctx - ksch[cc - 1];
        if( cc % keylen == 0 )
            tt = t0;
            t0 = s_box(t1) ^ rc;
            t1 = s_box(t2);
            t2 = s\_box(t3);
            t3 = s_box(tt);
            rc = f2(rc);
        else if( keylen > 24 && cc % keylen == 16 )
            t0 = s_box(t0);
            t1 = s_box(t1);
            t2 = s_box(t2);
            t3 = s_box(t3);
        tt = cc - keylen;
        ctx->ksch[cc + 0] = ctx->ksch[tt + 0] ^ t0;
        ctx->ksch[cc + 1] = ctx->ksch[tt + 1] ^ t1;
        ctx->ksch[cc + 2] = ctx->ksch[tt + 2] ^ t2;
        ctx->ksch[cc + 3] = ctx->ksch[tt + 3] ^ t3;
    return 0;
}
#endif
#if defined( AES_ENC_PREKEYED )
/* Encrypt a single block of 16 bytes */
return_type aes_encrypt( const uint8_t in[N_BLOCK], uint8_t out[N_BLOCK], const aes_context
ctx[1] )
{
    if( ctx->rnd )
        uint8_t s1[N_BLOCK], r;
        copy_and_key( s1, in, ctx->ksch );
        for( r = 1 ; r < ctx->rnd ; ++r )
#if defined( VERSION_1 )
        {
            mix_sub_columns( s1 );
            add_round_key( s1, ctx->ksch + r * N_BLOCK);
        }
#else
        {
          uint8_t s2[N_BLOCK];
            mix_sub_columns( s2, s1 );
            \verb"copy_and_key" ( s1, s2, ctx->ksch + r * N_BLOCK");
```

```
#endif
        shift_sub_rows( s1 );
        copy_and_key( out, s1, ctx->ksch + r * N_BLOCK );
       return ( uint8_t )-1;
    return 0:
/* CBC encrypt a number of blocks (input and return an IV) */
return_type aes_cbc_encrypt( const uint8_t *in, uint8_t *out,
                         int32_t n_block, uint8_t iv[N_BLOCK], const aes_context ctx[1] )
{
    while (n_block--)
        xor_block(iv, in);
        if(aes_encrypt(iv, iv, ctx) != EXIT_SUCCESS)
           return EXIT_FAILURE;
        //memcpy(out, iv, N_BLOCK);
       block_copy(out, iv);
       in += N_BLOCK;
       out += N_BLOCK;
    return EXIT_SUCCESS;
#endif
#if defined( AES_DEC_PREKEYED )
/* Decrypt a single block of 16 bytes */
return_type aes_decrypt( const uint8_t in[N_BLOCK], uint8_t out[N_BLOCK], const aes_context ctx[1] )
    if( ctx->rnd )
        uint8_t s1[N_BLOCK], r;
        copy_and_key( s1, in, ctx->ksch + ctx->rnd * N_BLOCK );
        inv_shift_sub_rows( s1 );
        for ( r = ctx->rnd ; --r ; )
#if defined( VERSION_1 )
            add_round_key( s1, ctx->ksch + r * N_BLOCK );
            inv_mix_sub_columns( s1 );
        }
#else
           uint8_t s2[N_BLOCK];
        {
            copy_and_key( s2, s1, ctx->ksch + r * N_BLOCK );
            inv_mix_sub_columns( s1, s2 );
       }
#endif
        copy_and_key( out, s1, ctx->ksch );
    }
    else
        return -1;
    return 0;
/* CBC decrypt a number of blocks (input and return an IV) */
return_type aes_cbc_decrypt( const uint8_t *in, uint8_t *out,
                         int32_t n_block, uint8_t iv[N_BLOCK], const aes_context ctx[1] )
    while (n_block--)
    { uint8_t tmp[N_BLOCK];
        //memcpy(tmp, in, N_BLOCK);
        block_copy(tmp, in);
        if(aes_decrypt(in, out, ctx) != EXIT_SUCCESS)
            return EXIT_FAILURE;
        xor_block(out, iv);
        //memcpy(iv, tmp, N_BLOCK);
        block_copy(iv, tmp);
```

```
in += N_BLOCK;
        out += N_BLOCK;
    return EXIT_SUCCESS;
#endif
#if defined( AES_ENC_128_OTFK )
/* The 'on the fly' encryption key update for for 128 bit keys */
static void update_encrypt_key_128( uint8_t k[N_BLOCK], uint8_t *rc )
{ uint8_t cc;
    k[0] ^= s_box(k[13]) ^ *rc;
    k[1] ^= s_box(k[14]);
    k[2] ^= s_box(k[15]);
    k[3] = s_box(k[12]);
    *rc = f2( *rc );
    for(cc = 4; cc < 16; cc += 4)
        k[cc + 0] ^= k[cc - 4];
        k[cc + 1] ^= k[cc - 3];
k[cc + 2] ^= k[cc - 2];
        k[cc + 3] ^= k[cc - 1];
    }
}
/* Encrypt a single block of 16 bytes with 'on the fly' 128 bit keying */
void aes_encrypt_128( const uint8_t in[N_BLOCK], uint8_t out[N_BLOCK],
                      const uint8_t key[N_BLOCK], uint8_t o_key[N_BLOCK] )
  uint8_t s1[N_BLOCK], r, rc = 1;
    if(o_key != key)
        block_copy( o_key, key );
    copy_and_key( s1, in, o_key );
    for( r = 1 ; r < 10 ; ++r )
#if defined( VERSION_1 )
        mix_sub_columns( s1 );
        update_encrypt_key_128( o_key, &rc );
        add_round_key( s1, o_key );
    }
#else
        uint8_t s2[N_BLOCK];
        mix_sub_columns( s2, s1 );
        update_encrypt_key_128( o_key, &rc );
        copy_and_key( s1, s2, o_key );
#endif
    shift_sub_rows( s1 );
    update_encrypt_key_128( o_key, &rc );
    copy_and_key( out, s1, o_key );
#endif
#if defined( AES_DEC_128_OTFK )
/* The 'on the fly' decryption key update for for 128 bit keys */
static void update_decrypt_key_128( uint8_t k[N_BLOCK], uint8_t *rc )
{ uint8_t cc;
    for( cc = 12; cc > 0; cc -= 4)
        k[cc + 0] ^= k[cc - 4];
k[cc + 1] ^= k[cc - 3];
        k[cc + 2] ^= k[cc - 2];
        k[cc + 3] ^= k[cc - 1];
```

```
*rc = d2(*rc);
    k[0] ^= s_box(k[13]) ^*rc;
    k[1] ^= s_box(k[14]);
    k[2] ^= s_box(k[15]);
    k[3] ^= s_box(k[12]);
/* Decrypt a single block of 16 bytes with 'on the fly' 128 bit keying */
void aes_decrypt_128( const uint8_t in[N_BLOCK], uint8_t out[N_BLOCK],
                      const uint8_t key[N_BLOCK], uint8_t o_key[N_BLOCK] )
    uint8_t s1[N_BLOCK], r, rc = 0x6c;
    if(o_key != key)
       block_copy( o_key, key );
    copy_and_key( s1, in, o_key );
    inv_shift_sub_rows( s1 );
    for( r = 10 ; --r ; )
#if defined( VERSION_1 )
        update_decrypt_key_128( o_key, &rc );
        add_round_key( s1, o_key );
        inv_mix_sub_columns( s1 );
    }
#else
        uint8_t s2[N_BLOCK];
    {
        update_decrypt_key_128( o_key, &rc );
        copy_and_key( s2, s1, o_key );
        inv_mix_sub_columns( s1, s2 );
    }
#endif
    update_decrypt_key_128( o_key, &rc );
    copy_and_key( out, s1, o_key );
#endif
#if defined( AES_ENC_256_OTFK )
/* The 'on the fly' encryption key update for for 256 bit keys */
static void update_encrypt_key_256( uint8_t k[2 * N_BLOCK], uint8_t *rc )
{ uint8_t cc;
    k[0] = s_box(k[29]) * *rc;
    k[1] ^= s_box(k[30]);
    k[2] = s_box(k[31]);
    k[3] ^= s_box(k[28]);
    *rc = f2( *rc );
    for(cc = 4; cc < 16; cc += 4)
        k[cc + 0] ^= k[cc - 4];
        k[cc + 1] ^= k[cc - 3];
        k[cc + 2] ^= k[cc - 2];
        k[cc + 3] ^= k[cc - 1];
   k[16] ^= s_box(k[12]);
k[17] ^= s_box(k[13]);
    k[18] ^= s_box(k[14]);
    k[19] ^= s_box(k[15]);
    for( cc = 20; cc < 32; cc += 4)
        k[cc + 0] ^= k[cc - 4];
        k[cc + 1] ^= k[cc - 3];
        k[cc + 2] ^= k[cc - 2];
        k[cc + 3] ^= k[cc - 1];
    }
}
/* Encrypt a single block of 16 bytes with 'on the fly' 256 bit keying */
```

```
void aes_encrypt_256( const uint8_t in[N_BLOCK], uint8_t out[N_BLOCK],
                       const uint8_t key[2 * N_BLOCK], uint8_t o_key[2 * N_BLOCK] )
{
    uint8_t s1[N_BLOCK], r, rc = 1;
    if(o_key != key)
        block_copy( o_key, key );
block_copy( o_key + 16, key + 16 );
    copy_and_key( s1, in, o_key );
    for( r = 1 ; r < 14 ; ++r )
#if defined( VERSION_1 )
    {
        mix_sub_columns(s1);
        if( r & 1 )
            add_round_key( s1, o_key + 16 );
        else
             update_encrypt_key_256( o_key, &rc );
             add_round_key( s1, o_key );
    }
#else
        uint8_t s2[N_BLOCK];
        mix_sub_columns( s2, s1 );
        if( r & 1 )
            copy_and_key( s1, s2, o_key + 16 );
        else
            update_encrypt_key_256( o_key, &rc );
            copy_and_key( s1, s2, o_key );
#endif
    shift_sub_rows( s1 );
    update_encrypt_key_256( o_key, &rc );
    copy_and_key( out, s1, o_key );
#endif
#if defined( AES_DEC_256_OTFK )
/* The 'on the fly' encryption key update for for 256 bit keys */
static void update_decrypt_key_256( uint8_t k[2 * N_BLOCK], uint8_t *rc )
{ uint8_t cc;
    for(cc = 28; cc > 16; cc -= 4)
        k[cc + 0] ^= k[cc - 4];
        k[cc + 1] ^= k[cc - 3];
        k[cc + 2] ^= k[cc - 2];
        k[cc + 3] ^= k[cc - 1];
    k[16] ^= s_box(k[12]);
    k[17] ^= s_box(k[13]);
    k[18] ^= s_box(k[14]);
    k[19] ^= s_box(k[15]);
    for(cc = 12; cc > 0; cc -= 4)
        k[cc + 0] ^= k[cc - 4];
        k[cc + 1] \stackrel{\wedge}{=} k[cc - 3];

k[cc + 2] \stackrel{\wedge}{=} k[cc - 2];
        k[cc + 3] ^= k[cc - 1];
    *rc = d2(*rc);
    k[0] ^= s_box(k[29]) ^ *rc;
    k[1] ^= s_box(k[30]);
    k[2] ^= s_box(k[31]);
    k[3] ^= s_box(k[28]);
```

```
}
/* Decrypt a single block of 16 bytes with 'on the fly'
    256 bit keying
*/
void aes_decrypt_256( const uint8_t in[N_BLOCK], uint8_t out[N_BLOCK],
                        const uint8_t key[2 * N_BLOCK], uint8_t o_key[2 * N_BLOCK] )
    uint8_t s1[N_BLOCK], r, rc = 0x80;
    if(o_key != key)
        block_copy( o_key, key );
block_copy( o_key + 16, key + 16 );
    copy_and_key( s1, in, o_key );
    inv_shift_sub_rows( s1 );
    for( r = 14 ; --r ; )
#if defined( VERSION_1 )
    {
         if((r&1))
         {
             update_decrypt_key_256( o_key, &rc );
add_round_key( s1, o_key + 16 );
         else
            add_round_key( s1, o_key );
         inv_mix_sub_columns( s1 );
    }
#else
         uint8_t s2[N_BLOCK];
         if((r&1))
         {
             update_decrypt_key_256( o_key, &rc );
copy_and_key( s2, s1, o_key + 16 );
         else
             copy_and_key( s2, s1, o_key );
         inv_mix_sub_columns( s1, s2 );
#endif
    copy_and_key( out, s1, o_key );
#endif
```

A.1.2 Our AES - test example on CubeCell board

```
#include "aes.h"
aes_context ctx[2];
const uint8_t in[16]={ 0xAB, 0xCD, 0xAC, 0xB8,0x8A, 0x77, 0xA6, 0xA6,0x8B, 0xC1, 0xD2, 0xF3,0xBB,
0xF1, 0xF2, 0xF3};
uint8_t out[16], out1[16];
const_uint8_t key[16]={ 0x61, 0x62, 0x63, 0x64, 0x65, 0x66, 0x67, 0x68,0x69, 0x6A, 0x6B, 0x6C,0x6D,
0x6E, 0x6F, 0x70};
void setup(){
  Serial.begin(9600); delay(300);
 Serial.println("startcrypt");delay(300);
  aes_set_key(key,
                              // len in bytes - length_type
                ctx );
 for(int i=0; i<16;i++) Serial.print(in[i],HEX);</pre>
  Serial.println(); delay(300);
  aes_encrypt(in,
              out1,
              ctx );
  for(int i=0; i<16;i++) Serial.print(out1[i],HEX);</pre>
  Serial.println(); delay(300);
  aes_decrypt (out1,
              out,
              ctx );
for(int i=0; i<16;i++) Serial.print(out[i], HEX);</pre>
Serial.println();
void loop() { delay(15000);}
```

Final remarks

Below you can see the execution results of the above presented examples hardware – ESP32 /software – CubeCell (ARM) coded

Execution result for CubeCell - software:

startcrypt ABCDACB88A77A6A68BC1D2F3BBF1F2F3 E78C3A1E3D356A116AF49CC77EC773C ABCDACB88A77A6A68BC1D2F3BBF1F2F3

Remark - the execution result for ESP32 (hardware accelerated):

ABCDACB88A77A6A68BC1D2F3BBF1F2F3 E78C3A1E3D356A116AF49CC77EC773C

ABCDACB88A77A6A68BC1D2F3BBF1F2F3

```
AES.CubeCell.
 #include "aes.h"
aes_context ctx[2];
 const uint8_t in[i6]={ 0xAB, 0xCD, 0xAC, 0xB8,0x8A, 0x77, 0xA6, 0xA6,0x8B, 0xC1, 0xD2, 0xF3,0xBB, 0xF1, 0xF2, 0xF3);
uint8_t out[16], out1[16];
const uint8_t key[16]={ 0x00, 0x01, 0x02, 0x03,0x00, 0x01, 0x02, 0x02
void setup(){
         Serial.begin(9600);delay(300);
Serial.println("startcrypt");delay(300);
         aes_set_key(key,
                                                                         16,
                                                                                                                               // len in bytes - length_type
                                                                    ctx );
         for(int i=0; i=16;i++) Serial.print(in[i],HEX);
Serial.println();delay(300);
         aes_encrypt(in,
                                                             out1,
                                                            ctx);
         for(int i=0; i<16;i++) Serial.print(out1[i],HEX);
Serial.println();delay(300);</pre>
         aes_decrypt(out1,
                                                             out,
                                                            ctx );
for(int i=0; i<16;i++) Serial.print(out[i],HEX);
Serial.println();</pre>
```

Table of Contents

Exercise 1	1
Sending and receiving LoRa packets	1
Attention:	
1.1 Receiver side on Lolin D32	
1.2 Sender side on CubeCell board	
To do:	4
1.3 Sender side on CubeCell board with SHT21 & BH1750 sensors	
To do:	
1.4 Receiver/gateway side on Lolin D32 board	7
To do:	8
1.5 Receiver/gateway on Lolin D32 board (with callback) & OLED	9
Assignment (for students not having a comprehensive specific project)	
Appendix	13
A.1 AES encryption	13
A.1.1 AES "hardware" ecryption for ESP32	
A.1.1 AES "software" encryption/decryption for CubeCell	
A.1.2 Our AES - test example on CubeCell board	
Final remarks	29