#### Vehicle Dynamics and Simulation

# Using Eigenvalues and Eigenvectors

Dr B Mason



#### Lecture overview


- Transfer functions
- Modal motion in free vibration
  - Eigenvalues
  - Eigenvectors





#### **Transfer Functions**

- Transfer functions relate input to output
- The roots of the characteristic equation determine the dynamics of the system (free vibration response)
- Eigen structures provide more information about mode shapes

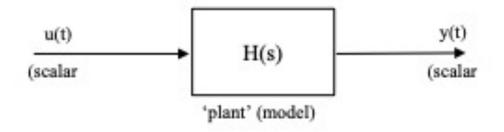

$$H(s) = \frac{b_{n}s^{n} + b_{m-1}s^{m-1} + \dots + b_{1}s + b_{0}}{a_{n}s^{n} + a_{n-1}s^{n-1} + \dots + a_{1}s + a_{0}}$$

$$a_n s^n + a_{n-1} s^{n-1} + \dots + a_1 s + a_0 = 0$$




#### Simple Example

- Using the simple suspension example from Section 2b
  - Assume zero initial conditions
  - Take Laplace transform
  - Write transfer function
  - Enter parameter values
- The roots of the characteristic equation in this example are;

$$-1.875 \pm 6.372i$$

• The nature of the roots e.g. complex, repeated, distinct and real determine the general solution approach.

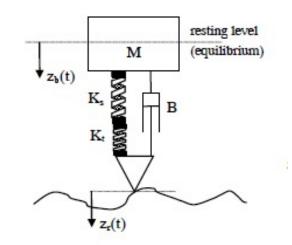

$$H(s) = \frac{Y(s)}{U(s)} = \frac{Bs + K}{Ms^2 + Bs + K}$$

$$H(s) = \frac{3.75s + 44.1}{s^2 + 3.75s + 44.1}$$



## Laplace Transform and the Transfer Function

• State space representation;

$$\dot{X} = AX + BU \tag{1}$$

$$Y = CX + DU ag{2}$$

Assuming zero initial conditions and taking the Laplace transform of [1];

$$sX = AX + BU$$

$$(sI - A)X = BU$$

$$X = (sI - A)^{-1}BU$$

• Substituting into [2];

$$Y = C(sI - A)^{-1}BU + DU$$

$$H(s) = C(sI - A)^{-1}B + D$$



#### Laplace Transform and the Transfer Function

- Equation [3] provides a general solution in terms of the transfer function, H(s) and is an alternate form to the State Space Representation.
- Comparing the denominator of [3] (sI A) with the definition for the eigenvalues;


$$Av = \lambda v$$
 [4]

- It can be shown that the transfer function poles are the roots of the Characteristic Equation and the eigenvalues of A which are found using  $\det(A \lambda I) = 0$
- Matrix A governs the fundamental modes of vibration i.e. how the system will freely vibrate as it settles after some initial disturbance not the inputs.



## worked example

#### An Example

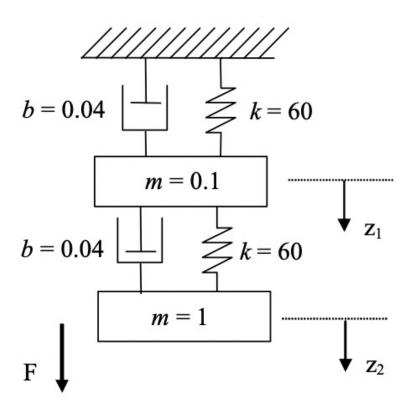

The equations of the above system are (expressed in terms of two second order differential equations);

$$M_2\ddot{z}_2 = F - k(z_2 - z_1) - b(\dot{z}_2 - \dot{z}_1)$$

$$M_1 \ddot{z}_1 = k(z_2 - z_1) + b(\dot{z}_2 - \dot{z}_1) - kz_1 - b\dot{z}_1$$

and the input, u = F. So that the set of equations describing the state derivatives becomes;

$$\dot{x}_1 = x_3$$

$$\dot{x}_2 = x_4$$

$$\dot{x}_3 = -\frac{2k}{m}x_1 + \frac{k}{m}x_2 - \frac{2b}{m}x_3 + \frac{b}{m}x_4$$

$$\dot{x}_4 = kx_1 - kx_2 + bx_3 - bx_4 + u$$

So that the state space representation becomes;

$$\begin{bmatrix} \dot{x}_1 \\ \dot{x}_2 \\ \dot{x}_3 \\ \dot{x}_4 \end{bmatrix} = \begin{bmatrix} 0 & 0 & 1 & 0 \\ 0 & 0 & 0 & 1 \\ -2k/m & k/m & -2b/m & b/m \\ k & -k & b & -b \end{bmatrix} \begin{bmatrix} x_1 \\ x_2 \\ x_3 \\ x_4 \end{bmatrix} + \begin{bmatrix} 0 \\ 0 \\ 0 \\ 1 \end{bmatrix} u$$
 [3]

$$\dot{X} = AX + BU$$

I

• The vector of deflections,  $z(t) = [x_1 \ x_2]^T$  for our LTI example may be written as a linear combination;

$$\mathbf{z}(\mathbf{t}) = Re\{\mathbf{u}_1 e^{\lambda_1 t} + \mathbf{u}_2 e^{\lambda_2 t}\}$$

where each term  $u_i e^{\lambda_i t}$  represents a single vibrational mode,  $u_i$  are complex constants [2x1 vector in this example],  $\lambda_i$  are complex scalars and  $\max(i) = n$  with n being the number of states.

• Evaluating a single term in the above, split  $\lambda_1$  into real and imaginary parts;

$$\lambda_1 = a + bi$$

Using the above and Euler's formula we can better evaluate what is happening;


$$\boldsymbol{u}_1 e^{\lambda_i t} = \boldsymbol{u}_1 e^{(a+bi)t} = \boldsymbol{u}_1 e^{at} e^{ibt}$$

$$\mathbf{v}_1 e^{\lambda_i t} = \mathbf{u}_1 e^{\mathbf{u}t} (\cos(\mathbf{b}t) + i\sin(\mathbf{b}t))$$
 [5]



#### Modal motion in free vibration - Eigenvalues

• From [5], a should be -ve bounding the response to a decaying exponential, b gives the frequency of the sinusoidal component,  $u_i$  (complex) determines the magnitude and the relative phase of each mode.

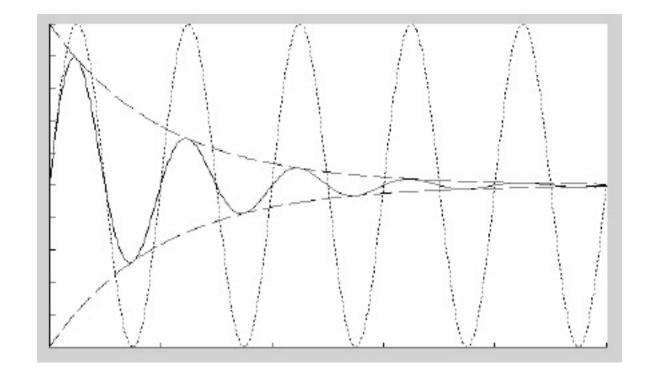

Modal decomposition of response Solid line = total response Short dash = sinusoidal component Long dash = exponential decay



• Eigenvalues come in (complex conjugate) pairs and can be written;

$$\lambda_{1,2} = \lambda_{1&2} = \sigma \pm j\omega_d$$

where  $\sigma$  is the modal damping factor and  $\omega_d$  is the damped natural frequency.




## Check for yourself

- Use the eig() function in MATLAB to determine the eigenvalues of matrix A from the previous example.
- How are the complex conjugate pairs placed within the resulting (vector) answer?



- From the eigenvalues it is possible to tell
  - Damped natural frequency,  $\omega_d$
  - Natural frequency [Hz],  $\omega_n/2\pi$
  - Damping factor,  $\sigma$
  - Damping ratio,  $\zeta = \cos(\theta)$
  - Settling time (within 2%),  $T_S = \frac{4}{|\sigma|}$
  - Percent overshoot,  $100e^{\sqrt{1}-\zeta^2}$
- Note:  $\lambda = 0$  corresponds to the steady-state response of the system (not dynamics)

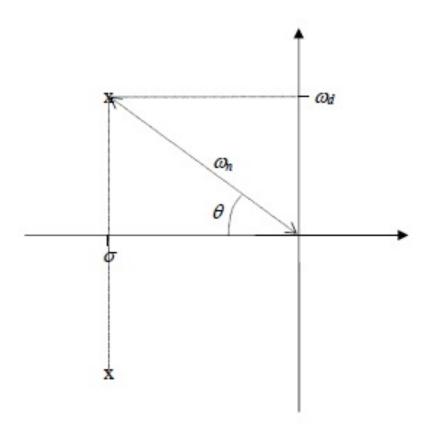



## Check for yourself

- Using the previous example find the eigenvalues of the system and hence determine;
  - Damped natural frequency,  $\omega_d$
  - Natural frequency [Hz],  $\omega_n/2\pi$
  - Damping factor,  $\sigma$
  - Damping ratio,  $\zeta = \cos(\theta)$
  - Settling time (within 2%),  $T_S = \frac{4}{|\sigma|}$
  - Percent overshoot,  $100e^{\frac{-\pi\zeta}{\sqrt{1}-\zeta^2}}$



- Eigenvectors can show the magnitudes at which the states vibrate in relation to one another.
- Writing eigenvalues and eigenvectors together in matrix form;


$$AV = VD$$

where;

$$\mathbf{V} = \begin{bmatrix} u_1 & u_2 & \cdots & u_n \\ \lambda_1 u_1 & \lambda_2 u_2 & \cdots & \lambda_n u_n \end{bmatrix} \text{ and } \mathbf{D} = \begin{bmatrix} \lambda_1 & & & \\ & \lambda_2 & & \\ & & \ddots & \\ & & & \lambda_n \end{bmatrix}$$




 Using MATLAB to find the eigenvalues of the example system, A matrix;

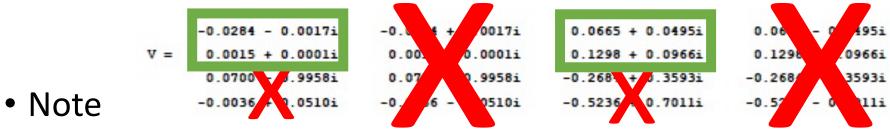


- The second and fourth columns are the complex conjugates of the first and third columns respectively
- Rows three and four are the first and second rows multiplied by their respective eigenvalues
- The system can then be characterized by considerably less 'unique information'



- Dividing through by the largest magnitude eigenvector (-0.0284 0.017i) to normalize the eigenvectors.
- Plot the eigenvector components (first mode)
- The relative magnitude and phase is seen on the two plots

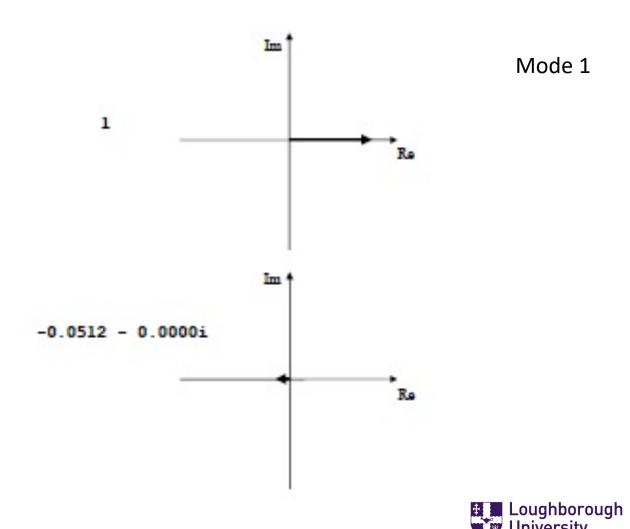

- Similarly for the second (non-conjugate) mode of interest
- The relative magnitude and phase is seen on the two plots
- Note the differences between first and second modes of vibration

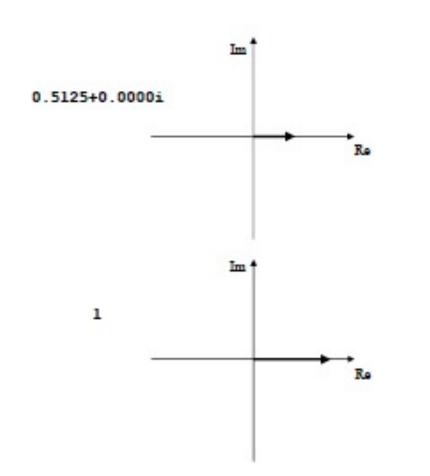

Mode 2



#### Conclusions

- Transfer function vs state space representation
- Eigenvalues tell us;
  - Damped natural frequency
  - Natural frequency
  - Damping factor
  - Damping ratio
  - Settling time
  - Percent overshoot
- Eigenvectors help us to understand vibration of the modes relative to one another

