
# CSE 331 Computer Organization

# Lecture 3 Assembly Programs

## Memory Layout

- Text: program code
- Static data: global variables
  - e.g., static variables in C, constant arrays and strings
  - \$gp initialized to address allowing ±offsets into this segment
- Dynamic data: heap
  - E.g., malloc in C, new in Java
- Stack: automatic storage

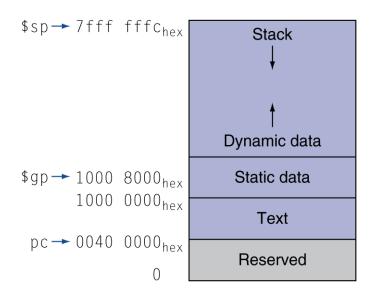

## Assembler Syntax

- Comments in assembler files begin with a sharp sign (#)
- Instruction opcodes (e.g. lw, add, etc.) are reserved words that cannot be used as identifier.
- Labels are declared by putting them at the beginning of a line followed by a colon, for example:

```
.data
item: .word 25
    .text
    .glob1 main # must be globa1
main: lw $t0, item
    . . .
```

## Assembler Syntax (Cont'd)

Numbers are base 10 by default, for example:

```
addi $t0, 20 addi $t0, 0x14
```

Strings are enclosed in double quotes (")

```
.data
temp1:
    .word 3
str:
    .asciiz "Result = "
    .text
    .globl main
main:
    lw $a0, temp1  # load temp1 into a0
    ...
```

#### Two Similar Examples

```
.text
.glob1 main
main:

li $t0, 0x0005  # put 5 into register t0
li $t1, 0x0017  # put 23 into register t1
add $t2, $t0, $t1  # t2 		 t0 + t1
```

```
.data
temp1:
    .word 5

temp2:
    .word 23
    .text
    .glob1 main
main:
    lw $t0, temp1  # put 5 into register t0
    lw $t1, temp2  # put 23 into register t1
    add $t2, $t0, $t1  # t2 	— t0 + t1
```

## **System Services**

Service	System call code	Arguments	Result
print_int	1	\$a0=integer	
print_float	2	\$f12=float	
print_double	3	\$f12=double	
print_string	4	\$a0=string	
read_int	5		integer (in \$v0)
read_float	6		float (in \$f0)
read_double	7		double (in \$f0)
read_string	8	\$a0=buffer, \$a1=length	
sbrk	9	\$a0=amount	address (in \$v0)
exit	10		

#### System Call Example


```
.data
str:
 .asciiz "Result is "
  .text
 .qlobl main
main:
 li $v0, 5  # system call code for read_int
                # read int
 syscall
 syscall move $t0, $v0
                  # move integer to t0
 li $v0, 5  # system call code for read int
 add $t2, $t0, $t1 # add t0 and t1 and put the result into t2
 li $v0, 4  # system call code for print_str
 la $a0, str # address of string to print
                  # print the string
 syscall
 move $a0, $t2  # copy t2 to a0
 li $v0, 1  # system call code for print_int
                  # print it
 syscall
```

## MIPS Register Conventions

#### Conventions

- This is an agreed upon "contract" or "protocol" that everybody follows
- Specifies correct (and expected) usage, and some naming conventions
- Established part of architecture
- Used by all compilers, programs, and libraries
- Assures compatibility

## MIPS Register Conventions

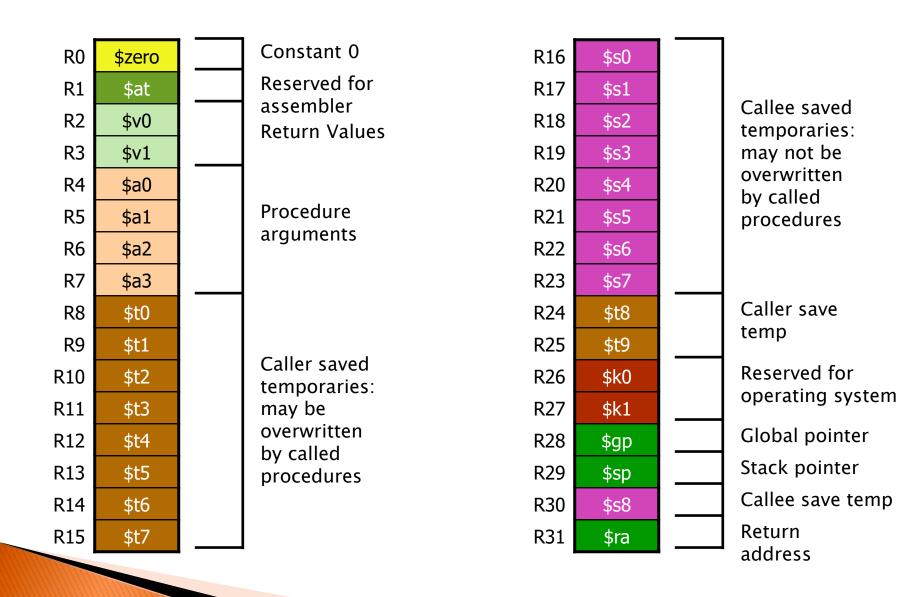

## Program counter

- We need a register to hold the address of the current instruction being executed
  - "Program Counter" PC in MIPS
- ▶ jal saves PC+4 in register \$ra
- At the end of the procedure we jump back to the \$ra (an unconditional jump)

```
jr $ra
```

- The caller puts the parameter values in \$a0-\$a3
- The caller uses jal X to jump to procedure X
- The callee performs the calculations, places the results in \$v0-\$v1
- Returns control to the caller by jr \$ra

## Stack

- Suppose the procedure needs more than 4 arguments
- We store the values in Stack (a last-in-first-out queue)
- A stack needs a pointer to the most recently allocated address in the stack: stack pointer
- Placing data onto the stack is called a Push. Removing data from the stack is called a Pop.
- The stack pointer in MIPS is \$sp. By convention stacks "grow" from higher addresses to lower addresses!!! (You push values onto the stack by subtracting from the stack pointer)

#### Procedure call

- When making a procedure call, it is necessary to
  - 1. Place inputs where the procedure can access them
  - 2. Transfer control to procedure
  - 3. Acquire the storage resources needed for the procedure
  - 4. Perform the desired task
  - 5. Place the result value(s) in a place where the calling program can access it
  - 6. Return control to the point of origin

#### MIPS

- Provides instructions to assist in procedure calls (jal) and returns (jr)
- Uses software conventions to
  - place procedure input and output values
  - control which registers are saved/restored by caller and callee
- Uses a software stack to save/restore values

## Procedure Call Instructions

- Procedure call: jump and link jal ProcedureLabel
  - Address of following instruction put in \$ra
  - Jumps to target address
- Procedure return: jump register jr \$ra
  - Copies \$ra to program counter
  - Can also be used for computed jumps
    - e.g., for case/switch statements

## Simple Procedure Call

```
.text
  .globl get square
get square:
  mult $a0, $a0
  mflo $v0
  jr $ra
  .data
temp1:
  .word 3
str:
  .asciiz "Result = "
  .text
  .globl main
main:
  lw $a0, temp1  # load temp1 into a0
  jal get square # save address of next instr. into ra register
                       # and jump to get square procedure
  move $t0, $v0
                       # put the result in t0
  li $v0, 4  # system call code for print_str
  la $a0, str # address of string to print
                       # print the string
  syscall
  li $v0, 1 # system call code for print int
  move $a0, $t0 # copy result to a0
                       # print it
  syscall
```

# Leaf Procedure Example

C code: int leaf\_example (int g, h, i, j) { int f; f = (g + h) - (i + j);return f; Arguments g, ..., j in \$a0, ..., \$a3 f in \$s0 (hence, need to save \$s0 on stack) Result in \$v0

# Leaf Procedure Example

#### MIPS code:

<u>leaf_example:</u>			
addi	\$sp,	\$sp,	-4
SW	\$s0 <b>,</b>	0(\$5)	o)
add	\$t0,	\$a0,	\$a1
add	\$t1,	\$a2,	\$a3
sub	\$s0,	\$t0,	\$t1
add	\$v0,	\$s0,	\$zero
l lw	\$s0,	0(\$s	o)
addi	\$sp,	\$sp,	4
jr	\$ra		

Save \$s0 on stack

Procedure body

Result


Restore \$s0

Return

#### A procedure call with a stack

```
int leaf-example (int q, int h, int i, int j)
   int f:
                                         Assume the parameter variables g, h, i,
   f = (q+h) - (i+j);
                                         and j correspond to the argument
   return f;
                                         registers $a0, $a1, $a2, and $a3, and f
                                         corresponds to $50.
  leaf_example:
            addi
                     $sp, $sp, -12
                                       # adjust stack to make room for 3 items
                     $t1, 8($sp)
                                       # save register $t1 for use afterwards
            SW
                     $t0, 4($sp)
                                       # save register $t0 for use afterwards
            SW
                     $s0, 0($sp)
                                       # save register $s0 for use afterwards
            SW
            add
                     $t0, $a0, $a1
                                       # register $t0 contains g + h
            add
                     $t1, $a2, $a3
                                       # register $t1 contains i + j
            sub
                     $s0, $t0, $t1
                                       # register s0 contains (g + h) - (i + j)
            add
                     $v0, $s0, $zero
                                       # register $v0 contains the result
            lw
                     $s0, 0($sp)
                                       # restore register $s0 for caller
                     $t0, 4($sp)
                                       # restore register $t0 for caller
            lw
                     $t1, 8($sp)
                                       # restore register $t1 for caller
            lw
            addi
                     $sp, $sp, 12
                                       # adjust stack to delete 3 items
                                       # jump back to calling routine
                     $ra
```

#### The Values of Stack Pointer & Stack

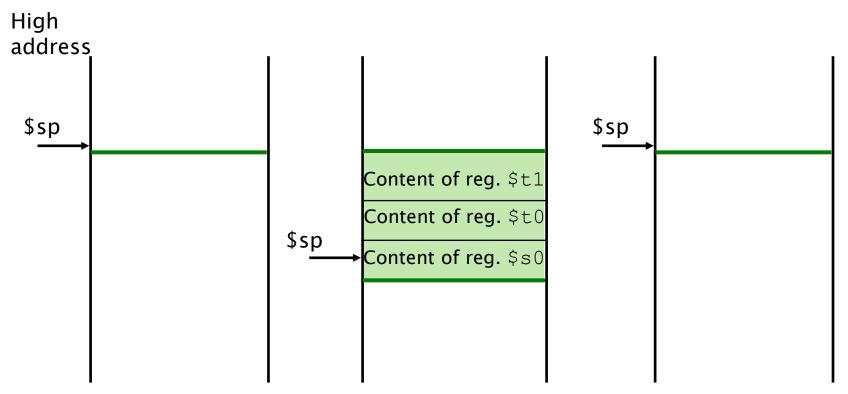


Low address

Before procedure call

During procedure call

After procedure call

## Local Data on the Stack

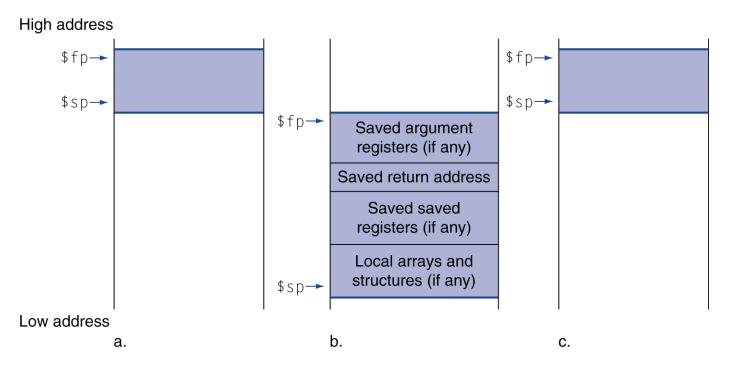

- Local data allocated by callee
  - e.g., C automatic variables
- Procedure frame (activation record)
  - Used by some compilers to manage stack storage

# C Sort Example

- Illustrates use of assembly instructions for a C sort function
- Swap procedure (leaf)
   void swap(int v[], int k)
   {
   int temp;
   temp = v[k];
   v[k] = v[k+1];
   v[k+1] = temp;
   }
   v in \$20 k in \$21 temp in \$40
  - v in \$a0, k in \$a1, temp in \$t0

# The Procedure Swap

## The Sort Procedure in C

# The Procedure Body

```
move $s2, $a0
                             # save $a0 into $s2
                                                            Move
       move $s3, $a1
                          # save $a1 into $s3
                                                            params
       move $s0, $zero
                          # i = 0
                                                            Outer loop
for1tst: s1t $t0, $s0, $s3 # <math>$t0 = 0 if $s0 \ge $s3 (i \ge n)
        beq t0, zero, exit1 # go to exit1 if s0 \ge s3 (i \ge n)
        addi $1, $0, -1 # j = i - 1
for2tst: slti t0, s1, 0 # t0 = 1 if s1 < 0 (j < 0)
        bne t0, zero, exit2 # go to exit2 if s1 < 0 (j < 0)
        Inner loop
        add t2, s2, t1 # t2 = v + (j * 4)
        1w $t3, 0($t2) # $t3 = v[j]
       1w $t4, 4($t2) # $t4 = v[j + 1]
        \$1t \$t0, \$t4, \$t3  # \$t0 = 0 if \$t4 \ge \$t3
        beg t0, zero, exit2 # go to exit2 if t4 \ge t3
       move $a0, $s2
                          # 1st param of swap is v (old $a0) Pass
                                                            params
       move $a1, $s1
                             # 2nd param of swap is j
                                                            & call
        jal swap
                             # call swap procedure
        addi $s1, $s1, -1 # j -= 1
                                                            Inner loop
          for2tst
                             # jump to test of inner loop
exit2:
       addi $s0, $s0, 1
                             \# i += 1
                                                            Outer loop
            for1tst
                             # jump to test of outer loop
```

## The Full Procedure

```
addi $sp,$sp, -20
                             # make room on stack for 5 registers
sort:
        sw ra, 16(sp) # save ra on stack
        sw $s3,12($sp)
                           # save $s3 on stack
        sw $s2, 8($sp)
                          # save $s2 on stack
        sw $s1, 4($sp)
                         # save $s1 on stack
        sw $s0, 0(\$sp)
                             # save $s0 on stack
                             # procedure body
 exit1: lw $s0, 0($sp) # restore $s0 from stack
        lw $s1, 4($sp)
                           # restore $s1 from stack
        lw $s2, 8($sp) # restore $s2 from stack
        lw $s3,12($sp) # restore $s3 from stack
                         # restore $ra from stack
        lw $ra,16($sp)
        addi $sp,$sp, 20
                             # restore stack pointer
        ir $ra
                             # return to calling routine
```

## Non-Leaf Procedures

- Procedures that call other procedures
- For nested call, caller needs to save on the stack:
  - Its return address
  - Any arguments and temporaries needed after the call
- Restore from the stack after the call

## Nested Procedure Example

C code:
 int fact (int n)
{
 if (n < 1) return 1;
 else return n \* fact(n - 1);
}
 Argument n in \$a0
 Result in \$v0</pre>

## Nested Procedure Call Example (Cont'd)

```
.data
str:
  .asciiz "The result is "
  .text
  .qlobl main
main:
  li $v0, 5
                    # System call code for read int
  syscall
                    # Read int
 move $a0, $v0
                    # Move integer to $a0
  jal fact
                    # Call factorial function
 move $a1,$v0
                     # Move fact result to $a1
  li $v0, 4
                    # System call code for print str
  la $a0, str
                    # Address of string to print
  syscall
                    # Print the string
  li $v0, 1
                    # System call code for print int
 move $a0, $a1
                    # Copy result to $a0
  syscall
                    # Print int
  li $v0, 10
                    # System call code for exit
                    # Exit
  syscall
```

## Nested Procedure Example

```
MIPS code:
 fact:
     addi $sp, $sp, -8
                         # adjust stack for 2 items
                         # save return address
     sw $ra, 4($sp)
     sw $a0, 0($sp)
                         # save argument
                         \# test for n < 1
     slti $t0, $a0, 1
     beq $t0, $zero, L1
     addi $v0, $zero, 1
                         # if so, result is 1
     addi $sp, $sp, 8
                         # pop 2 items from stack
                         # and return
     jr $ra
 L1: addi $a0, $a0, -1
                         # else decrement n
     jal fact
                         # recursive call
     lw $a0, 0($sp)
                         # restore original n
     lw $ra, 4($sp)
                         # and return address
     addi $sp, $sp, 8
                         # pop 2 items from stack
     mul $v0, $a0, $v0
                         # multiply to get result
                         # and return1
     jr $ra
```

#### **Arrays versus Pointers**


```
void clear1(int array[], int size)
{
   int i;
   for (i = 0; i < size; i++);
      array[i] = 0;
}</pre>
```

```
void clear2(int *array, int size)
{
   int *p;
   for (p = &array[0]; p < &array[size]; p++);
       *p = 0;
}</pre>
```

# Example: Clearing and Array

```
clear1(int array[], int size) {
                                          clear2(int *array, int size) {
  int i;
                                            int *p;
  for (i = 0; i < size; i += 1)
                                            for (p = \&array[0]; p < \&array[size];
   array[i] = 0;
                                                 p = p + 1
                                              *p = 0:
       move $t0,$zero
                       \# i = 0
                                                 move t0,a0 # p = & array[0]
loop1: sll $t1,$t0,2  # $t1 = i * 4
                                                 s11 $t1,$a1,2 # $t1 = size * 4
       add $t2,$a0,$t1 # $t2 =
                                                 add t2,a0,t1 # t2 =
                        # &array[i]
                                                                     &array[size]
       sw \frac{1}{2} = 0 \frac{1}{2} sw \frac{1}{2} = 0
                                         loop2: sw zero,0(t0) # Memory[p] = 0
       addi $t0,$t0,1 # i = i + 1
                                                 addi t0,t0,4 # p = p + 4
       s1t $t3.$t0.$a1 # $t3 =
                                                 s1t $t3.$t0.$t2 # $t3 =
                        # (i < size)
                                                                 #(p<&array[size])
       bne $t3,$zero,loop1 # if (...)
                                                 bne $t3,$zero,loop2 # if (...)
                           # goto loop1
                                                                     # goto loop2
```

# A Translation Hierarchy

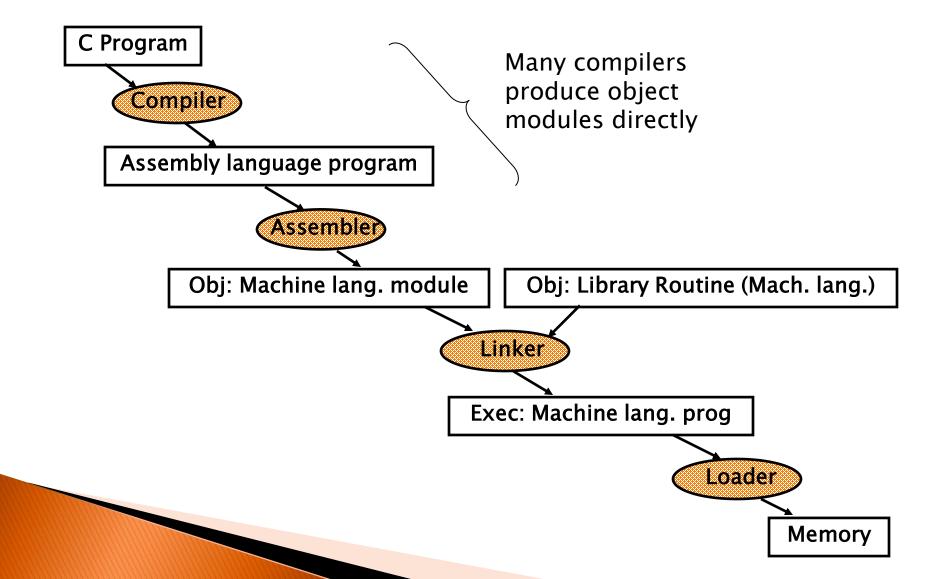

# Producing an Object Module

- Assembler (or compiler) translates program into machine instructions
- Provides information for building a complete program from the pieces
  - Header: described contents of object module
  - Text segment: translated instructions
  - Static data segment: data allocated for the life of the program
  - Relocation info: for contents that depend on absolute location of loaded program
  - Symbol table: global definitions and external refs
  - Debug info: for associating with source code

# Linking Object Modules

- Produces an executable image
  - 1. Merges segments
  - 2. Resolve labels (determine their addresses)
  - 3. Patch location-dependent and external refs

# Loading a Program

- Load from image file on disk into memory
  - 1. Read header to determine segment sizes
  - 2. Create virtual address space
  - 3. Copy text and initialized data into memory
    - · Or set page table entries so they can be faulted in
  - 4. Set up arguments on stack
  - 5. Initialize registers (including \$sp, \$fp, \$gp)
  - 6. Jump to startup routine
    - Copies arguments to \$a0, ... and calls main
    - When main returns, do exit syscall

# Two Obj. Files

Object file header			
	Name	Procedure A	
	Text size	100 <sub>hex</sub>	
	Data size	20 <sub>hex</sub>	
Text segment	Address	Instruction	
	0	lw \$a0, 0(\$gp)	
	4	jal O	
Data segment	0	(X)	
Relocation information	Address	Instruction type	Dependency
	0	1w	X
	4	jal	В
Symbol table	Label	Address	
	Χ	-	
	В	-	
Object file header			
	Name	Procedure B	
	Text size	200 <sub>hex</sub>	
	Data size	30 <sub>hex</sub>	
Text segment	Address	Instruction	
	0	sw \$a1, 0(\$gp)	
	4	jal O	
Data segment	0	(Y)	
Relocation information	Address	Instruction type	Dependency
	0	SW	Υ
	4	jal	А
Symbol table	Label	Address	
	Υ	-	
	Α	-	

# Executable

Executable file header		
	Text size	300 <sub>hex</sub>
	Data size	50 <sub>hex</sub>
Text segment	Address	Instruction
	0040 0000 <sub>hex</sub>	lw \$a0, 8000 <sub>hex</sub> (\$gp)
	0040 0004 <sub>hex</sub>	jal 40 0100 <sub>hex</sub>
	0040 0100 <sub>hex</sub>	sw \$a1, 8020 <sub>hex</sub> (\$gp)
	0040 0104 <sub>hex</sub>	jal 40 0000 <sub>hex</sub>
Data segment	Address	
	1000 0000 <sub>hex</sub>	(X)
	1000 0020 <sub>hex</sub>	(Y)

## Advantages & Disadvantages

- Assembly programming is useful when the speed or size of a program is important.
- But assembly languages are machine specific and they must be rewritten to run on another machine.
- Another disadvantage is that assembly language programs are longer than the equivalent programs written in a high-level language.
- It is also true that programs written in assembly are more difficult to read and understand and they may contain more bugs.

## Assembly Language & Programming

- Assembly language is the symbolic representation of a computer's binary encoding, which is called machine language.
- Assembly language is more readable than machine language because it uses symbols instead of bits.
- Assembly language permits programmers to use *labels* to identify and name particular memory words that hold instructions or data.
- A tool called *assembler* translates assembly language into binary instructions.
- An assembler reads a single assembly language source file and produces object file containing machine instructions and bookkeeping information that helps combine several object files into a program.

## Assembler Pseudoinstructions


- Most assembler instructions represent machine instructions one-to-one
- Pseudoinstructions: figments of the assembler's imagination

```
move $t0, $t1 \rightarrow add $t0, $zero, $t1 blt $t0, $t1, L \rightarrow slt $at, $t0, $t1 bne $at, $zero, L
```

\$at (register 1): assembler temporary

# Effect of Compiler Optimization

Compiled with gcc for Pentium 4 under Linux

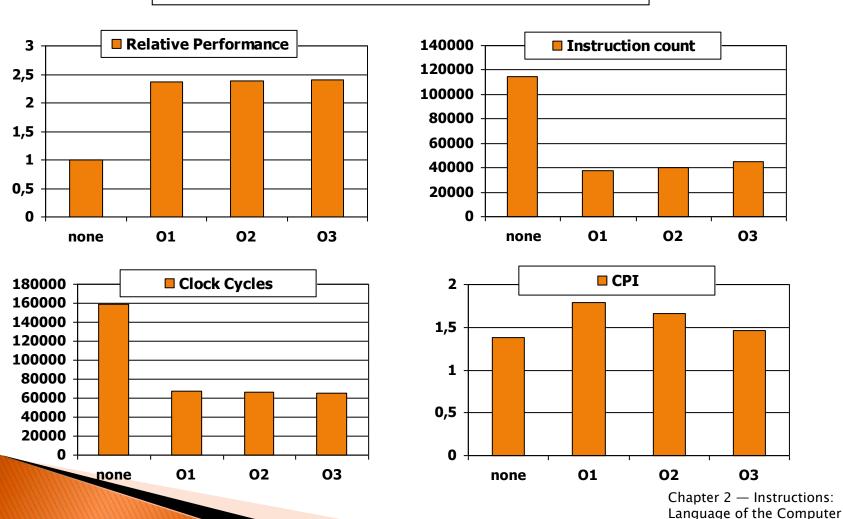

-40

## Lessons Learnt

- Instruction count and CPI are not good performance indicators in isolation
- Compiler optimizations are sensitive to the algorithm
- Java/JIT compiled code is significantly faster than JVM interpreted
  - Comparable to optimized C in some cases
- Nothing can fix a dumb algorithm!

## **ARM & MIPS Similarities**


- ARM: the most popular embedded core
- Similar basic set of instructions to MIPS

	ARM	MIPS
Date announced	1985	1985
Instruction size	32 bits	32 bits
Address space	32-bit flat	32-bit flat
Data alignment	Aligned	Aligned
Data addressing modes	9	3
Registers	15 × 32-bit	31 × 32-bit
Input/output	Memory mapped	Memory mapped

# Compare and Branch in ARM

- Uses condition codes for result of an arithmetic/logical instruction
  - Negative, zero, carry, overflow
  - Compare instructions to set condition codes without keeping the result
- Each instruction can be conditional
  - Top 4 bits of instruction word: condition value
  - Can avoid branches over single instructions

## Instruction Encoding

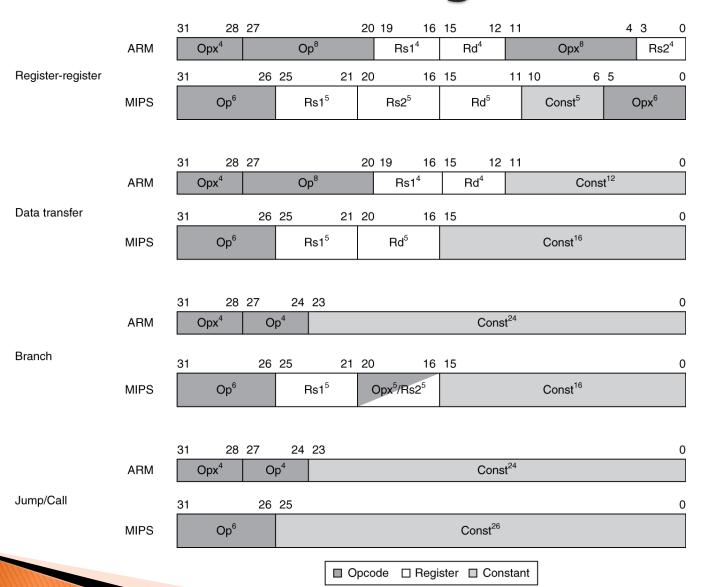

## **Fallacies**

- ▶ Powerful instruction ⇒ higher performance
  - Fewer instructions required
  - But complex instructions are hard to implement
    - · May slow down all instructions, including simple ones
  - Compilers are good at making fast code from simple instructions
- Use assembly code for high performance
  - But modern compilers are better at dealing with modern processors
  - More lines of code ⇒ more errors and less productivity

## **Fallacies**

- ▶ Backward compatibility ⇒ instruction set doesn't change
  - But they do accrete more instructions

