

Figures/aluminum-f

Easy-PCB Solder Reflow Oven

Ben Lorenzetti & Adam Meece

Features

- Insulated aluminum frame with 6”x6”x10” interior chamber
- 400 Watt nichrome heating element with door killswitch
- 120 VAC power supply with surge and short protection
- Forced convection fan driven by bipolar stepper motor
- Type K thermocouple for temperature feedback loop
- PIC18F14K50 based control
- Convenient 7-segment display and pushbutton user interface

Introduction

Easy-PCB is a small, desktop convection oven for DIY reflow soldering at home.

As integrated circuits continue to become smaller and faster, many μ Controllers, FPGAs, and other ICs are no longer available in DIP form for breadboard prototyping or iron soldering. Similar to the shift away from PC parallel ports in the early 2000s, the shift away from DIPs means modern electronics hobbyists need more complicated equipment than their predecessors.

Currently, commercial solder reflow stations are available for soldering fine pitch, SMD, and BGA components. More recently, several hackers have created open source designs for inexpensive reflow ovens, using converted kitchen toaster ovens.

Easy-PCB is better because it is a convection oven; controlled air flow prevents parts from being blown out of position and convection heating obviates the uneven

heat absorption seen in infrared radiation based systems. Furthermore, *Easy-PCB* was designed from the ground up for soldering, so the heating elements and oven frame were optimized alongside the temperature controller for a typical solder reflow profile.

Figures/control-system.pdf

The *Easy-PCB* Control System: not just a controller bolted onto a disjoint oven.


Easy-PCB allows hobbyists to produce reflow temperature profiles with a high degree of accuracy and repeatability. Alongside freely available PCB design programs like Eagle and low-quantity fabrication services like OSH Park, *Easy-PCB* makes modern integrated components, such as digital CMOS cameras, within the design space of hobbyists and hackers.

Figures/control-results.pdf


Faithful Temperature Profile Control

1 User Interface

Easy-PCB presents temperature and time information on a four digit LED display. After pressing the green ‘start’ button, the current temperature and process runtime are alternately displayed every second.

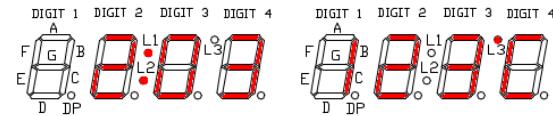

The red ‘stop’ button can be pressed at anytime to quit the current process or reset the microcontroller.

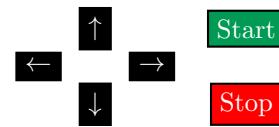

Pushbutton Interface

Contents

Features

Introduction

1 User Interface

2 Plant Design

2.1 Temperature Objectives	3
2.2 Thermodynamics Theory	3
2.3 Thermodynamic Design	4
2.4 Design Iteration & SPICE Modeling .	8
2.5 Transfer Model	9

3 User Interface Design

4 Temperature Feedback Design

4.1 Controller and Power Requirements .	12
---	----

5 Motor Driver Design

5.1 Power Requirements	12
----------------------------------	----

6 Power Circuit Design

6.1 PCB Trace Width	12
-------------------------------	----


7 Controller Design

A SPICE Netlists


A.1 Thermodynamic Model	12
-----------------------------------	----

Set point programming with the 4 nav keys is used to enter a time-temperature profile. Use the ‘left’ and ‘right’ keys to move between set points and the ‘up’ and ‘down’ keys to edit each set point value.

1

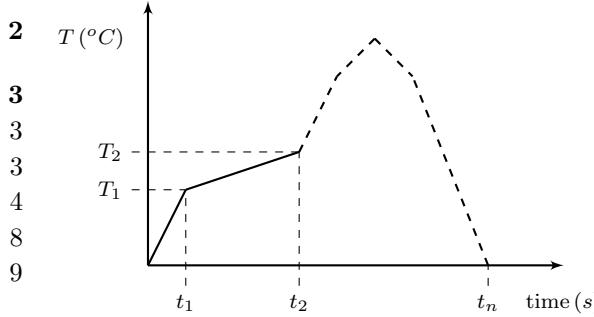

2

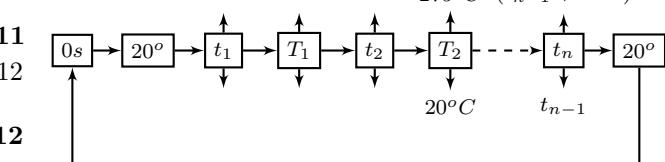

Set Point Programming

12

A total of 128 set points can be entered. The first set point is always $(0s, 20^{\circ}C)$, and the process will terminate at the next occurrence of 20° in a point. Temperatures can take any value in the range $20^{\circ}C < T < 275^{\circ}C = 527^{\circ}F$. The time between two points must be between $0 \leq t < 255$ seconds.

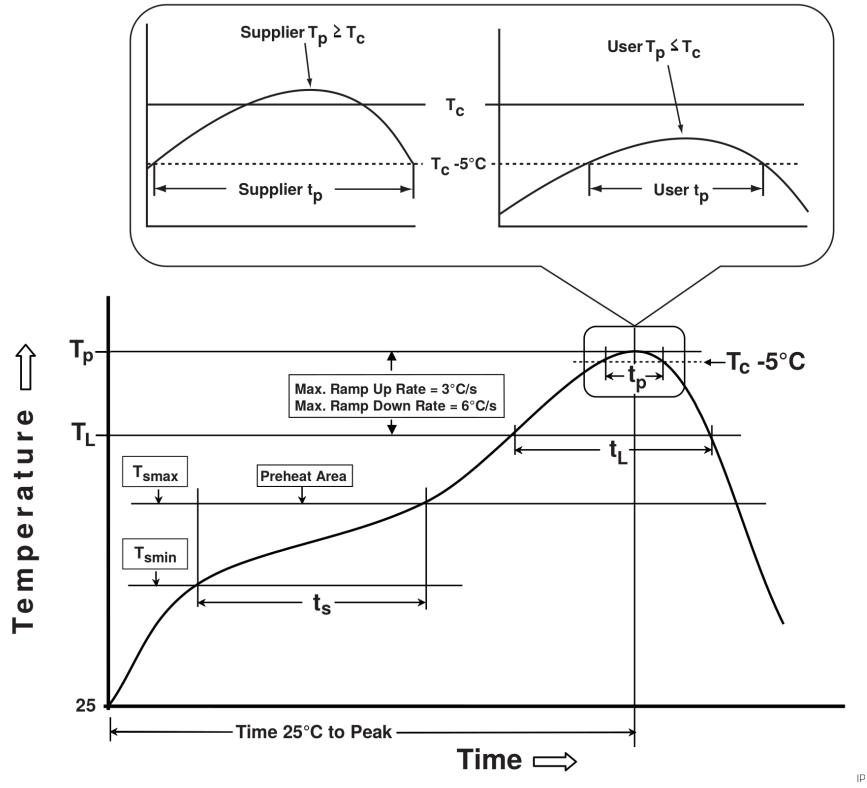


Figure 1: Standard Solder Reflow Profile, per IPC/JEDEC STD-1-020D.1

2 Plant Design

2.1 Temperature Objectives

A typical solder reflow profile is shown in figure 1. The optimal shape and peak temperature depend on the components and, more significantly, on the use of leaded solder.

$$T_p \approx T_c = \begin{cases} 220 - 235^\circ C & \text{Leaded solder} \\ 245 - 260^\circ C & \text{Pb-free} \end{cases}$$

$$t_p = \begin{cases} 20s & \text{Leaded solder} \\ 30s & \text{Pb-free} \end{cases}$$

Easy-PCB was designed from the ground up for faithfully producing these reflow profiles. This design process for the thermodynamic system is detailed below.

2.2 Thermodynamics Theory

Heat is everyone's least favorite form of energy because it tends to dissipate everywhere and is difficult to transform into useful work. Nevertheless, it is a form of energy so it is measured in joules.

$$Q := \text{Heat [Joules]}$$

From a microscopic view, heat is the kinetic energy of gas molecules or the vibrational energy of bonds in solids. In both cases, summed over every molecule, every bond, and every vibrational mode in the system.

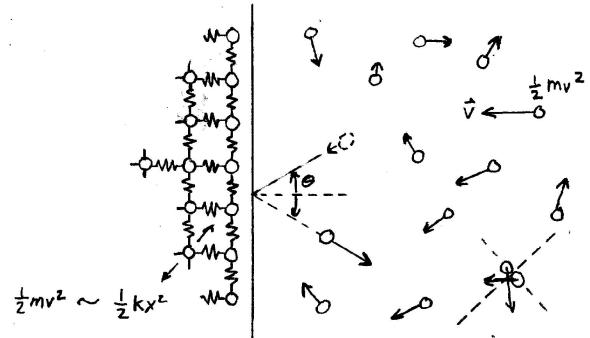


Figure 2: Heat Energy on a Molecular Scale

Temperature is a potential field that measures an objects tendency to give up or absorb heat. On average, heat always flows from regions of hotter temperature to lower temperature. Temperature is usually measured in Kelvin or Celsius, which are related by

$$T_{\text{Celsius}} = T_{\text{Kelvin}} + 273.16.$$

Another way to think of temperature is a measure of heat density that also incorporates the types of bonds (or lack thereof) in which heat energy is stored. For example, a glacier contains more heat than a pot of boiling water, but has a much lower heat density.

The relationship between temperature and heat stored in an object is given by

$$dQ = mc_p dT, \quad (1)$$

where c_p is the specific heat of the material with units $\left[\frac{kJ}{kg*K} \right]$.

So heat flows spontaneously to reduce temperature gradients, but how does heat flow and at what rate? There are three mechanisms of heat transfer: *conduction*, *convection*, and *radiation*.

Conduction of heat is caused by molecular interactions, such as the push–pull of nearby atomic bonds in solids or elastic collisions between molecules of air.

The empirical relation for conduction is Fourier's Law, which says the rate of heat transfer due to conduction is proportional to both the difference in temperature and the media:

$$\vec{q} = k \vec{\nabla} T$$

where \vec{q} is the rate of heat transfer per unit surface area and k is the thermal conductivity of the medium with units $\left[\frac{W}{m*K} \right]$.

In integral form, Fourier's Law is

$$\frac{\delta Q}{\delta t} = k \oint_S \vec{\nabla} T * d\vec{A}.$$

And, in the one dimensional case,

$$\frac{\delta Q}{\delta t} = -kA \frac{\delta T}{\delta x}. \quad (2)$$

Convection is the second mechanism of heat transfer, involving the bulk movement of particles driven by diffusion.

Every air molecule is moving in a random direction with random kinetic energy, but a region of air with higher average kinetic energy (temperature) will see more molecules leaving than entering on average, because those leaving are moving faster than those entering.

Note that in convection, no molecules gain or lose energy; molecules of different energy simply trade places.

If a fan is used to apply work to a gas, the rate of convection increases and then Newtons' Law of Cooling can predict the rate of convection in gas near a solid surface of different temperature.

$$\frac{dQ}{dt} = hA\Delta T \quad (3)$$

where h is the heat transfer coefficient with units $\left[\frac{W}{m^2*K} \right]$.

Radiation, the third mechanism of heat transfer, is more familiar to electrical engineers. In any material, electrons have discrete amounts of energy based on the wave patterns that can exist for the atomic geometry. When an electron spontaneously falls to a less energetic patten, that energy is emitted as a photon of light.

The classic, physics–history example is black body radiation, when a metal is heated to high temperature and glows. A more modern examle is the LED.

The empirical relation for radiation is the Stefan–Boltzmann Law, which says that the total energy radiated, over all wavelengths and per unit surface area, is proportional to the fourth power of the body's temperature.

$$j^* = \sigma T^4 \quad (4)$$

where σ is a proportionality constant derived from other constants of nature.

Mechanisms & Media Usually one mechanism of heat transfer is dominant in a particular medium, so much so that we can ignore the other two. Typically this means conduction in solids, convection in fluids or gas, and radiation in space. However, sometimes the picture is more complicated including two cases in an oven:

1. At the boundary of metal and air, where conduction and convection are both significant.
2. In a thermocouple loop, where thermal diffusion (convection) of electrons is useful despite conduction still being dominant.

2.3 Thermodynamic Design

Most microwaves draw between 600 and 1200 Watts of power. An IR toaster oven may draw 1500 Watts into its lamps. How much power does *Easy-PCB* need to produce the required temperature profiles?

Our approach for answering this question is to browse available parts on McMaster.com, imagine how they would be assembled into an oven, and then model their thermodynamic response using SPICE.

A first conceptual design of *Easy-PCB* is shown in figure 3.

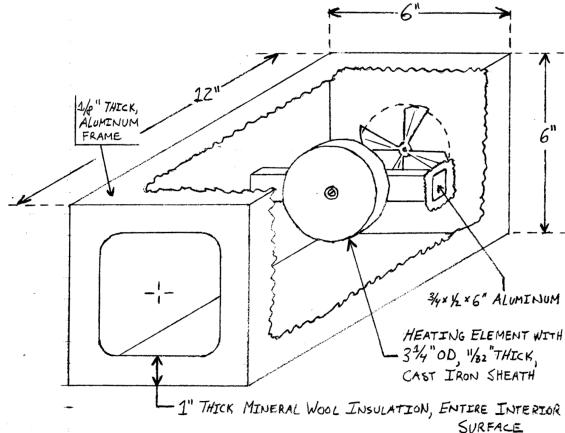


Table 1: Thermal Conductivity, Specific Heat, and Density of Selected Materials

Material	Linear Range ($^{\circ}C$)	$k \left(\frac{W}{m*K} \right)$	$c_p \left(\frac{kJ}{kg*K} \right)$	$\rho (kg/m^3)$
Type 6061 Aluminum	25	167	0.896	2700
Type 304 Stainless Steel	0–100	16.2	0.5	8000
Cast Iron	25	55.0	0.46	6800–7800
1.0 K-factor Insulation	-	0.1442	-	-
0.23 K-factor Insulation	-	0.0332	-	-
Nichrome NiCr C Alloy	-	0.450	0.135	8244
Steatite L5 Ceramic	-	2.9	0.92	2710

this region, both conduction and convection may be significant. To analyze this transition region, we will start at the surface where there is 100% conduction because that is the mechanism we have equations for.

From the first law of thermodynamics, the rate of heat being stored in a differential volume is equal to the rate of heat entering less the rate of heat leaving the volume element.

$$\frac{\delta Q_{\text{stored}}}{\delta t} = \frac{\delta Q_{\text{in}}}{\delta t} - \frac{\delta Q_{\text{out}}}{\delta t}$$

Looking back at figure 4, the differential volume element is a plane, so

$$\frac{\delta Q_{\text{stored}}}{\delta t} = \frac{\delta Q_x}{\delta t} - \frac{\delta Q_{x+\delta x}}{\delta t}.$$

Substituting in equation 1 for stored heat capacity and equation 2 for conduction through the element yields a transport equation.

$$mc_p \frac{\delta T}{\delta t} = kA \frac{\delta T}{\delta x} \quad (8)$$

This cannot be solved analytically unless space and time are independent. Sorry Albert.

$$T(x, t) = T_x(x) * T_t(t) \quad (9)$$

Applying the chain rule to equation 8

$$mc_p \frac{\delta T_t(t)}{\delta t} T_x(x) = kA \frac{\delta T_x(x)}{\delta x} T_t(t)$$

and separating variables gives

$$mc_p \frac{\delta T_t(t)}{\delta t} * \frac{1}{T_t(t)} = kA \frac{\delta T_x(x)}{\delta x} * \frac{1}{T_x(x)}.$$

The only way for the equality to be true for all space and time is if both sides are equal to a common constant.

$$\alpha = mc_p \frac{\delta T_t(t)}{\delta t} * \frac{1}{T_t(t)}$$

$$\alpha = kA \frac{\delta T_x(x)}{\delta x} * \frac{1}{T_x(x)}$$

Each of these can be solved by separation of variables.

$$\frac{\alpha}{kA} \delta x = \frac{\delta T_x(x)}{T_x(x)}$$

$$\frac{\alpha}{kA} \int \delta x = \int \frac{1}{T_x(x)} * \delta T_x(x)$$

$$\frac{\alpha x}{kA} = \ln(T_x(x)) + \beta_1$$

$$T_x(x) = \beta'_1 e^{\alpha x / kA}$$

Similarly for time,

$$T_t(t) = \beta'_2 e^{\alpha t / mc_p}.$$

Recombining the independent components gives

$$\Delta T(x, t) = \beta'_1 \beta'_2 e^{\alpha x / kA + \alpha t / mc_p}$$

The boundary conditions are that at $t = 0$ and $x = 0$, the temperature difference is the initial temperature difference, and at $t \rightarrow \infty$ and $x \rightarrow \infty$, the temperature difference dissipates to zero.

$$\Delta T(x, t) = \Delta T_0 e^{-\alpha x / kA - \alpha t / mc_p}$$

Now, for the sake of physical intuition we can write

$$\Delta T(x, t) = \Delta T_0 e^{-(x/\delta + t/\tau)}, \quad (10)$$

where δ is a ‘skin depth’ over which the spacial gradient decays to $1/e$ its initial value and τ is a time constant related to the skin depth by

$$\tau = \frac{mc_p}{kA} \delta. \quad (11)$$

Make some arguments and plot the temperature and heat transfer curves. Assume steady state and somehow that active cooling makes it all valid.

Applying Fourier’s law to the temperature profile found in equation 10, gives us the rate of heat transfer in the air due to conduction.

$$\frac{dQ}{dt} = -kA \frac{dT}{dx} = \frac{kA}{\delta} \Delta T_0 e^{-(x/\delta + t/\tau)}$$

Table 2: Typical Convective Heat Transfer Coefficients

Fluid	Conv.	$h_c \left[\frac{W}{m^2 * K} \right]$
Gases, & dry vapors	free	0.5 – 1000
	forced	10 – 1000
Water & liquids	free	50 – 3000
	forced	50 – 10000
Boiling Water	-	3 – 100
Condensing H_2O Vapor	-	5 – 100

Table 3: Thermal Properties of Air

$T [{}^\circ C]$	$\rho \left[\frac{kg}{m^3} \right]$	$c_p \left[\frac{kJ}{kg * K} \right]$	$k \left[\frac{W}{m * K} \right]$
20	1.205	1.005	0.0257
40	1.127	1.005	0.0271
60	1.067	1.009	0.0285
80	1.000	1.009	0.0299
100	0.946	1.009	0.0314
120	0.898	1.013	0.0328
140	0.854	1.013	0.0343
160	0.815	1.017	0.0358
180	0.779	1.022	0.0372
200	0.746	1.026	0.0386
250	0.675	1.034	0.0421
300	0.616	1.047	0.0454

Again assuming steady state, the rate of heat transfer at any distance from the wall is equal to the rate of conduction at the wall.

$$\frac{dQ}{dt} = \frac{kA}{\delta} \Delta T_0 = h_c A \Delta T_0 \quad (12)$$

This is the information we were after and, ironically, it turns out this is Newton's Law of Cooling (equation 3) where $h_c = k/\delta$. Since we do not have any way of predicting the skin depth except by experimentation, some common values for the convective heat transfer coefficient h_c are listed in table 2.

Equation 12 can be rewritten to look like Ohms' law for SPICE analysis.

$$\Delta T = R_c \frac{dQ}{dt}, \quad R_c = \frac{1}{h_c A} = \frac{\delta}{kA} \quad (13)$$

Heat Capacity of Chamber Air

The heat capacity of the air in the chamber cannot be analyzed with constant coefficient assumptions.

$$dQ = m(T)c_p(T)dT \quad (14)$$

From table 3, we can see that the specific heat of air does not vary much over the temperature range of the oven; less than 0.3% from $c_p(20^\circ C)$ over the range

20 – 300°C. However, the density and mass of air in the chamber may change significantly.

Assuming that the air in the chamber behaves like an ideal gas and is made up of the normal percentages of N_2 , O_2 , CO_2 , etc., then mass and temperature are related by

$$PV = \frac{m}{M} RT \Rightarrow m(T) = \frac{MPV}{R} T$$

where the ideal gas constant is

$$R = 5.00745 \left[\frac{\text{atm} * \text{in}^3}{\text{mol} * \text{K}} \right]$$

and the molar mass of air is

$$M = 28.97 \left[\frac{g}{\text{mol}} \right]$$

For the first oven concept in figure 3, the volume of the chamber is fixed in natural units of in^3 and there are likely small leaks that let the chamber pressure equilibrate to atmospheric pressure 1 atm.

Substituting $m(T)$ into equation 14, converting from absolute Kelvin scale to Celsius, and manipulating to look like a current–voltage relationship results in

$$\frac{dQ}{dt} = C_c(T) \frac{dT}{dt} \quad (15)$$

where

$$C_c(T) = \frac{c_p(20^\circ C) MPV}{R(T + 273.16^\circ C)}. \quad (16)$$

Equivalently,

$$C_c(T) = \frac{(5.8143 \left[\frac{J}{\text{in}^3} \right]) * V}{T + 273.16^\circ C}.$$

Variable Capacitor for Chamber Air

Unfortunately, SPICE does not have a primitive circuit element for a variable capacitor. Before simulating and iterating the oven design, we must build a SPICE subcircuit to model heat capacity of ideal gasses. The subcircuit black box must have two terminals with I–V relation

$$i_c = C(v_c) \frac{dv_c}{dt},$$

or, alternatively,

$$\int i_c dt = \int C(v_c) dv_c. \quad (17)$$

The left side of equation 17 is an integrator, which can be implemented with a buffer and a capacitor. For the SPICE circuit shown in figure 6, the integrated current is proportional to the voltage of the ‘int’ node.

$$\int i_c dt = C_{int} * v_{int}$$

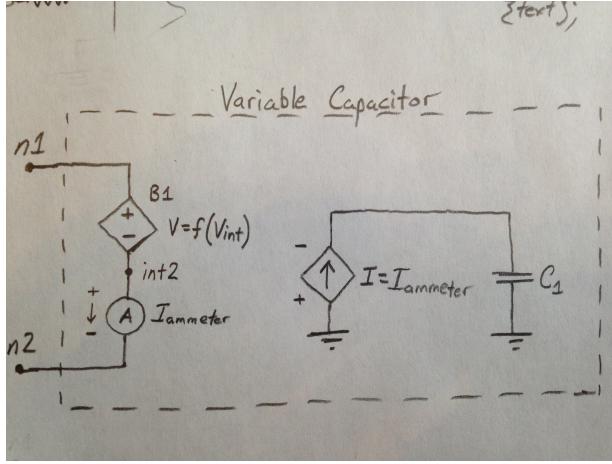


Figure 6: Voltage Variable Capacitor in SPICE

For the right side of equation 17, it can be solved for the variable heat capacitance of an ideal gas found in equation 16.

$$\begin{aligned} \int C(v_c)dv_c &= \frac{c_p MPV}{R} \int \frac{dv_c}{v_c + 273.16} \\ &= \frac{c_p MPV}{R} \ln(v_c + 273.16) + A \end{aligned}$$

Recombining the left and right halves gives

$$C_{int}v_{int} = \frac{c_p MPV}{R} \ln(v_c + 273.16) + A,$$

which can be solved to find a nonlinear expression for a dependent source v_c .

Solving...

$$\frac{RC_{int}}{c_p MPV} * v_{int} = \ln(v_c + 273.16) + A$$

$$v_c = A' e^{v_{int}/B} - 273.16$$

Finally, applying boundary conditions $v_c(0) = 0$ and $v_{int}(0) = 0$ gives

$$v_c = 273.16 \left(e^{v_{int}/B} - 1 \right) \quad (18)$$

where constant B is

$$\begin{aligned} B &= \frac{c_p MP}{R} * V * C_{int} \\ &= (5.8413 \left[\frac{J}{in^3} \right]) * V * C_{int} \end{aligned} \quad (19)$$

and V is the constant volume of air.

2.4 Design Iteration & SPICE Modeling

Many designs with different shapes, sizes, metals, insulators, heating elements, and wattage levels were

Table 4: Nichrome Wire Properties (NiCr C)

Composition	59.2%Ni	16%Cr	23.5%Fe	1.3%Si
Resistivity (ρ)	$675 * \pi$	$\left[\frac{\Omega \cdot \text{mil}^2}{ft} \right]$		
Melting Pt.	1350	$^{\circ}\text{C}$		
Temp. $^{\circ}\text{C}$	20	93	204	315
% ρ Increase	0	1.7	3.5	5.2

Figures/aluminum-frame-concept.pdf

Figure 7: Aluminum Frame Concept

modeled in SPICE for their thermodynamic response to a unit step signal from the power relay. Parameters of interest were the heating rate of the air in the chamber and wattage consumed.

The SPICE models were based on the equations from section 2.3; material properties from tables 1, 2, 3, and 4; and geometry of the design. Unitwise, 1 Volt = 1°C , 1 Ampere = 1 Watt, and 1 Coulomb = 1 Joule.

Eventually a design using 28 ft of 45 mil nichrome wire inside a 8" x 8" x 12" aluminum frame was selected.

The shape of the aluminum frame is shown in figure 7. The inside of the frame is lined with 1" thick mineral wool insulation, leaving an inside chamber with dimensions 6" x 6" x 10". The fan is mounted in the back.

Inside the frame, the nichrome wire is mounted using high temperature ceramic capacitors for electrical insulation. Structurally, the nichrome element is tensioned by two size 10 steel bolts spanning the width of the chamber, as shown in figure ref/heating-element-concept. Direct contact between the nichrome heating element and the chamber

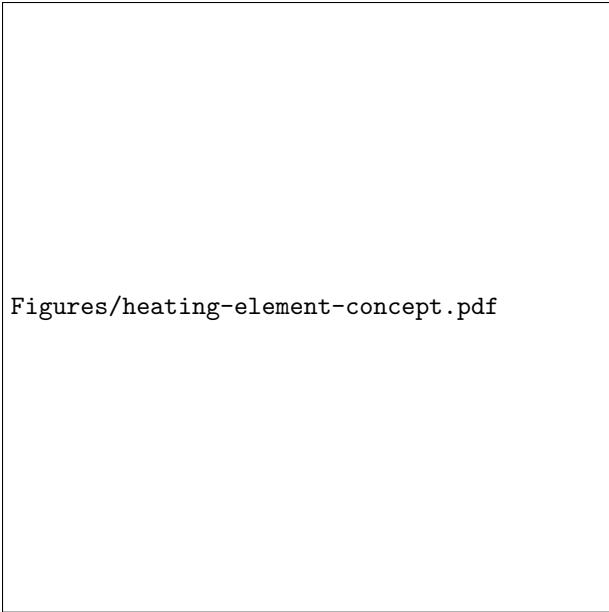


Figure 8: Heating Element Concept

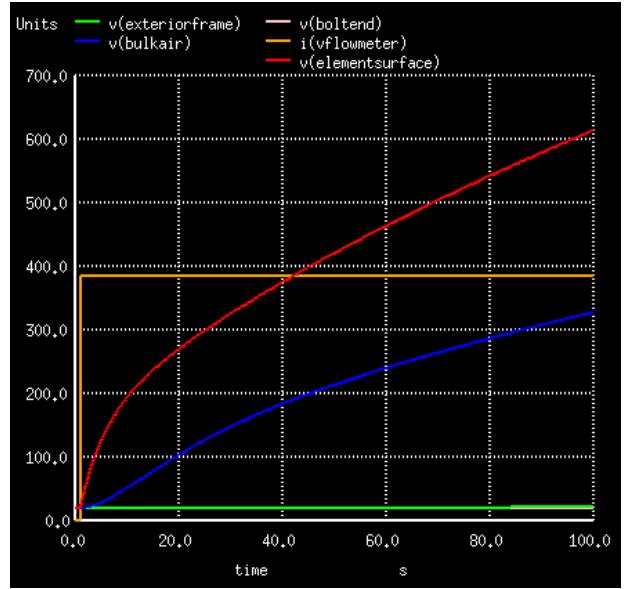


Figure 10: Simulated Temperature Response to a Unit Step

air is critical for fast heating rates.

The thermodynamic model is shown in figure 9.


DISCUSSION/MATH OF MODEL VALUES

The circuit netlist passed to SPICE is listed in section A.1. The circuit was modeled for its transient response if the heating element were connected to 120 VAC power for 100 second. The results are shown in figure 10.

2.5 Transfer Model

3 User Interface Design

The user interface is designed to be assembled on a separate PCB from the main controller board. This separation allows the high power components to be mounted on the back of the oven—far away from the user. The front facing user interface PCB mounted near the door and has no voltages greater than 5V for safety. Everything on this front facing PCB is shown in blue in *Easy-PCB* block diagram.

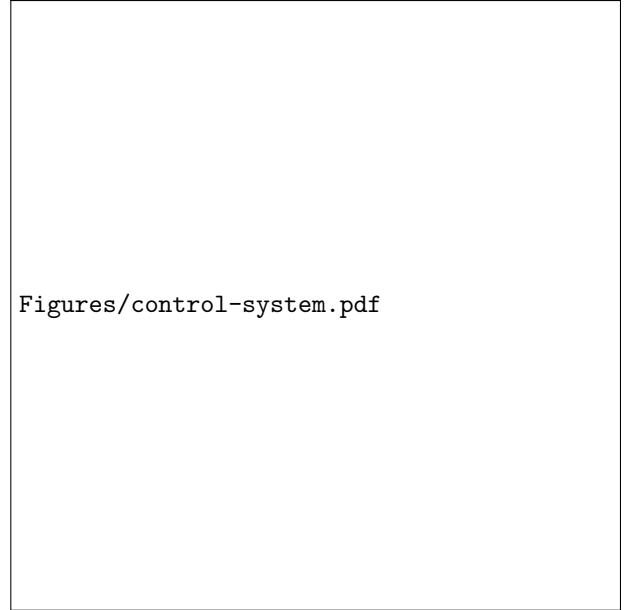

The *Easy-PCB* Control System: not just a controller bolted onto a disjoint oven.

The user interface board contains a 4-digit, 7-segment, common-cathode display and a matching common-cathode driver. The display driver is connected to the controller board via 4 wire serial peripheral interface (SPI). From the MAX7219 datasheet, the worst case current draw by the display driver is

$$I_{\text{LED Display}} < 200 \text{ mA.} \quad (20)$$

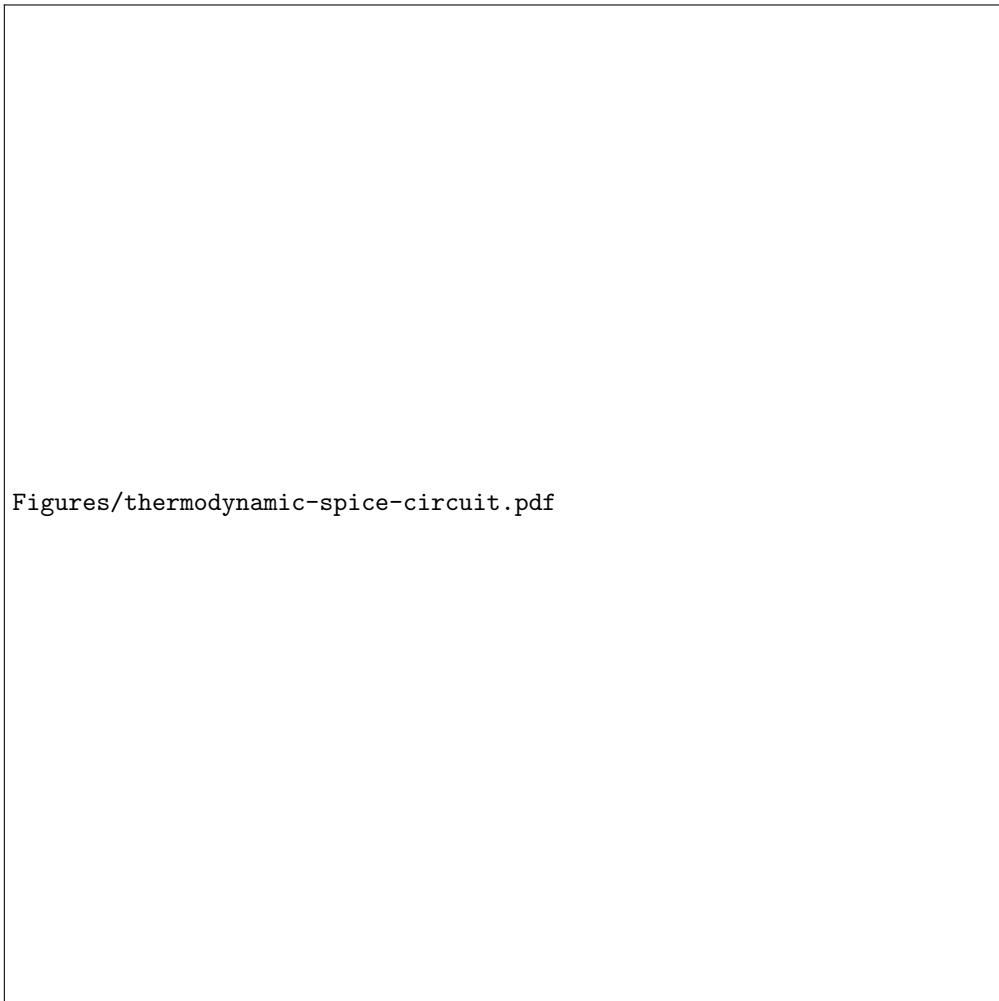


Figure 9: Thermodynamic SPICE Model Circuit Diagram

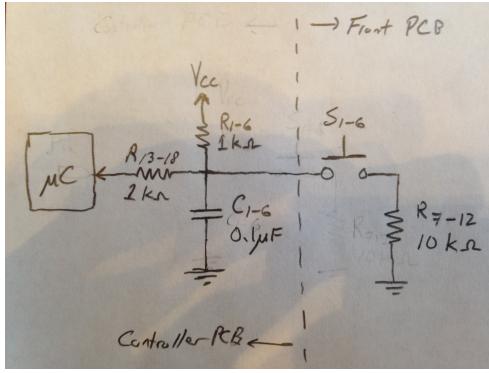


Figure 11: Hardware Debounced Pushbuttons

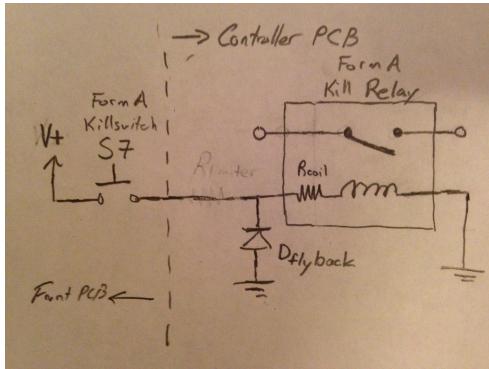


Figure 12: Kill Switch Safety Circuit

There are 6 active low pushbuttons on the front facing board and with 6 corresponding low pass filters on the controller board. The pushbutton circuit is shown in figure 11.

Finally, there is a form A (normal open; active closed) kill switch that is compressed when the door is closed. The current through this switch directly drives the form A (normally open) safety relay on the controller board. The kill switch circuit is shown in figure 12. The flyback diode should be rated for currents greater than the saturation current of the relay coil.

$$I_{\text{Diode Rating}} > I_{\text{Relay Sat.}} = \frac{V_{\text{DC Coil Rating}}}{R_{\text{coil}}} \quad (21)$$

For the Omron Safety G4W relays, the saturation current is

$$I_{\text{Relay Sat.}} = 66.7 \text{ mA} \quad \text{at } 12 \text{ V} \quad (22)$$

4 Temperature Feedback Design

The Seebeck voltage is the electromotive force that develops in a conductive loop made of two different metal alloys. It is described by

$$E_S = \int_{T_R}^T \alpha_{A,B} dT, \quad (23)$$

where T and T_R are the temperatures of the hot and cold junctions and $\alpha_{A,B}$ is the Seebeck coefficient between materials A and B .

A type-K thermocouple was selected because they are readily available and resist oxidation at temperatures up to 1260°C . From the ‘Manual on the use of Thermocouples in Temperature Measurement’ (STP 470A), the nominal Seebeck coefficients for type-K thermocouples is

$$\alpha_{KP,KN} = \begin{cases} 0^\circ\text{C} & 39.4 \mu\text{V}/^\circ\text{C} \\ 200^\circ\text{C} & 40.0 \mu\text{V}/^\circ\text{C} \\ 400^\circ\text{C} & 42.3 \mu\text{V}/^\circ\text{C} \end{cases}. \quad (24)$$

The positive wire KP is one of the following alloys: Chromel, Tophel, T-1, or ThermoKanthal KP. The negative wire KN is Alumel, Nial, T-2, or ThermoKanthal KN.

The thermoelectric potential in a K loop is very small; for a temperature difference of $T - T_R = 500^\circ\text{C}$, the voltage developed is only on the order of $E_S = 20 \text{ mV}$. Consequently, the signal needs to be amplified before it can be read by an ADC. The op amp circuit shown in figure 13 can be used.

Five volt μ controllers usually have ADC ranges of 0–3.3 V. To scale 20 mV to 3.3 V and 0 V to 0 V, the feedback resistors should be

$$\frac{V_{\text{ADC(max)}}}{V_{\text{K(max)}}} = \frac{R_2}{R_1} \quad (25)$$

$$\frac{3.3 \text{ mV}}{20 \text{ mV}} = 165$$

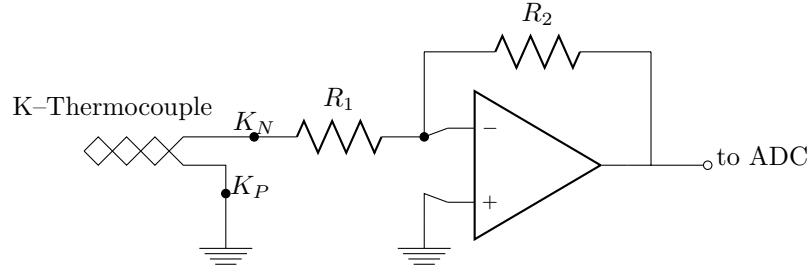


Figure 13: Thermocouple Amplifier

4.1 Controller and Power Requirements

5 Motor Driver Design

5.1 Power Requirements

6 Power Circuit Design

6.1 PCB Trace Width

The minimum width and clearance for high current, high voltage traces on a PCB can be calculated using

$$I = 0.048[A] * \left(\frac{\Delta T}{[{}^{\circ}C]} \right)^{0.44} * \left(\frac{A}{[mil^2]} \right)^{0.725} \quad (26)$$

and

$$\text{Clearance} = 0.023[in] + \frac{0.0002[in]}{[V]} * V_{\text{peak}} \quad (27)$$

from the design standard for PCB trace width ANSI/IPC-2221. Note that equation 26 is only for exterior traces.

For 10 A , 120 VAC power with a maximum temperature rise of 10°C and standard copper thickness $1\text{ oz} = 1.4\text{ mil}$, the minimum trace width is 0.278 in and minimum clearance is 0.057 in .

7 Controller Design

A SPICE Netlists

A.1 Thermodynamic Model

```

*** heat-model.cir ***
; Nodes:
; gnd, atm, bulkAir, interiorFrame, exteriorFrame, elementSurface,
; ceramicSurface, bulkBolt, boltRadiators
;
; Nichrome Wire Heating Element Parameters:
.param Diameter=45      ; [0.001 in]
.param Length=336        ; [in]
.param Relectric={225*Length/(Diameter*Diameter)}      ; [Ohms]
.param wattage={(120*120)/Relectric}                    ; [Joules]
.param Volume={(1.287e-11)*Diameter*Diameter*Length}   ; [m^3]
.param SurfaceArea={(2.027e-6)*Diameter*Length}         ; [m^2]
.param Celement={(1.113e6)*Volume}                      ; [J/K]
.param Relement={0.1/SurfaceArea}                        ; [K/W]
;
; Frame Parameters:
.param chamberVolume=360
.param Rinsulation=3.8
.param frameWidth=4.76mm
.param Rxframe=0.0181
.param Cxframe=798.3k
.param RexteriorFrame=6.06
;
; Ceramic Insulators and Bolt Mount Parameters:
.param Rparasitic={0.1*Relement}
.param ceramicThickness=2.35mm
.param Rxc=153.6
.param Cxc=5.598k
.param Cbolt=28.4
.param boltTlength=25.4mm
.param Rxb=843.7
.param Cxb=73.16
.param Rsink={RexteriorFrame/100}

Vroomtemp atm gnd DC 20
Ielement atm elementSurfacePrime PULSE(0 {wattage} 1s 1ns 1ns 100s 100s)
Vflowmeter elementSurfacePrime elementSurface DC 0
; (initial_value, pulsed_value, delay_time, rise_time, fall_time, pulse_width,
; period)

Cnichrome elementSurface atm {Celement}
Rnichrome elementSurface bulkAir {Relement}
Xairheatcapacity bulkAir atm varCap VOLUME={chamberVolume}
Rinsulate bulkAir interiorFrame {Rinsulation}

Ualuminumframe interiorFrame exteriorFrame gnd frameModel L={frameWidth}
.MODEL frameModel URC RPERL={Rxframe} CPERL={Cxframe}
Rframe exteriorFrame atm {RexteriorFrame}

Rparasitics elementSurface ceramicSurface {Rparasitic}
UceramicSpacers ceramicSurface bulkBolt gnd ceramicModel L={ceramicThickness}
.MODEL ceramicModel URC RPERL={Rxc} CPERL={Cxc}
CbulkBolt bulkBolt atm {Cbolt}

Ubolt bulkBolt boltEnd gnd boltTmodel L={boltTlength}
.MODEL boltTmodel URC RPERL={Rxb} CPERL={Cxc}
Rboltsink boltEnd atm {Rsink}

.subckt varCap n1 n2 VOLUME=360 ; inches squared
B1 n1 int2 V=273.16*(exp((v(int))/(5.8413*{VOLUME}))-1)
Vammeter int2 n2 0
F1 gnd int Vammeter 1
C1 int gnd 1
.ends varCap

```