

# PET restoration

E. Berozet

2 January 2020

## Introduction

I've owned my Commodore PET since 1978. For about the last 25 years, the PET hasn't worked due to one or more problems. In 2019, I diagnosed and fixed a problem with the power supply (faulty filter capacitor), but there are still other issues. This document is a record of my attempts to fix up the old PET.

## Symptom

The current symptom is that the screen is all scrambled. That is, instead of reporting "7167 BYTES FREE" as a healthy PET would, I get a scrambled screen as shown below in Figure 1.

To rectify this problem, I first tried moving RAM chips around. I have the 18 6550 RAM chips (16 for main memory and 2 for video memory) labelled as A through S (omitting "O" because it looks too much like a zero). It turns out that only 6 chips need to be installed in the machine for it to boot. The two video RAM chips and only 4 of the memory chips in locations I1, J1, I2 and J2. Initially, the chips were I1 = A, J1 = B, I2 = C, J2 = D, C3 = E, C4 = F. Changing to S,G,J,K,L,M produced a nearly identical display, suggesting that the problem lies elsewhere. I am starting to suspect ROMs.

## ROM diagnostics

I recall that when the PET boots normally, it turns off the cassette motor within about 1 second. That is still happening, so I am starting to wonder about perhaps the character ROM or other ROMs being bad. Figuring out which one will need a bit of sleuthing. I first tried to swap the character ROM (010) with H1 (011). As expected, the initial random screen no longer had any identifiable characters, suggesting that the character ROM is not completely bad. I next replaced char ROM (010) and removed H1 (011) and H2 (013) and the result was essentially the same as when they are present. While not definitive, this suggests that the problem may be in the higher ROMs. I next removed H6 and H5 and the problem was nearly identical. When I also removed H3, the cassette

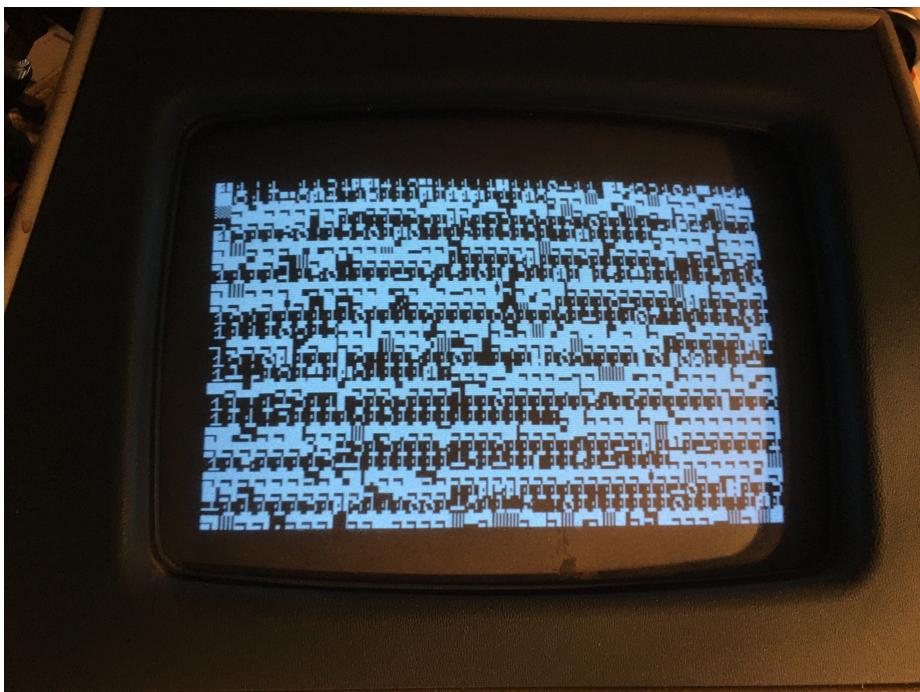


Figure 1: scrambled screen

motor no longer turns off but the display is nearly identical. Finally, I removed all ROMs and the display is about the same, but the cassette motor stays on. From left to right looking from the front of the PET, the ROMs are as shown in the table below. Note that the range of E800 to EFFF is “missing” because that range is mapped to IO. Specifically, PIA 1 is E810 to E81F, PIA 2 is E820 to E82F, the VIA is E840 to E84F and on models equipped with it (this one is not) the CRTC is mapped to E880 to E88F.

Pos	ROM	Start	End
H7	018	F800	FFFF
H6	014	D800	DFFF
H5	012	C800	CFFF
H4	016	F000	F7FF
H3	015	E000	E7FF
H2	013	D000	D7FF
H1	011	C000	C7FF

The 6540 ROM pinout is shown in Figure 2. To verify the ROMs, I will use an Arduino-compatible development board I have available (the Nucleo F207ZG from ST Microelectronics) and read the contents of the ROM and stream to a serial port. The sequence for addressing the ROM is as follows:

1. Set 02 low
2. Set Chip Select (CS1, CS2 to +5V, CS3, CS4, CS5 to GND)
3. Set Address lines (A0 through A10)
4. Allow at least 80ns to settle address lines
5. Set 02 high
6. Keep high for min 350ns (addr may change during this time)
7. Read D0-D7
8. Set 02 low

See the timing diagram in Figure 3.

### ROM tester

I’m using my Nucleo F207ZG board to do ROM testing. Due to the fact that not all pins are easy to get to, I’m going to use PortE 2-12 for the address lines A0-A10 and PortD 0-7 for the D0-D7 lines. All chip selects will be hardwired and the 02 (clock) line will be PB8. Since it’s a 300ns chip, I might need to add some delay. I will use a 1us delay, which should be more than enough to allow me to read the contents of the ROM. The ROM will be powered from +5VDC, but will be controlled via I/O at 3.3V, since that’s what’s used for the development board I’m using. This works because the old TTL stuff only needed +2.0V or greater for 1. All of the ports on my development board are 5V tolerant as long as the pull-up and pull-down resistors are disabled.

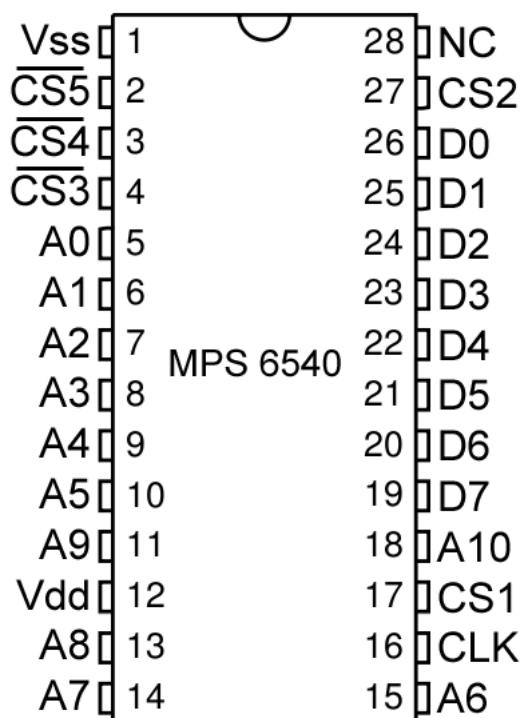


Figure 2: 6540 ROM pinout

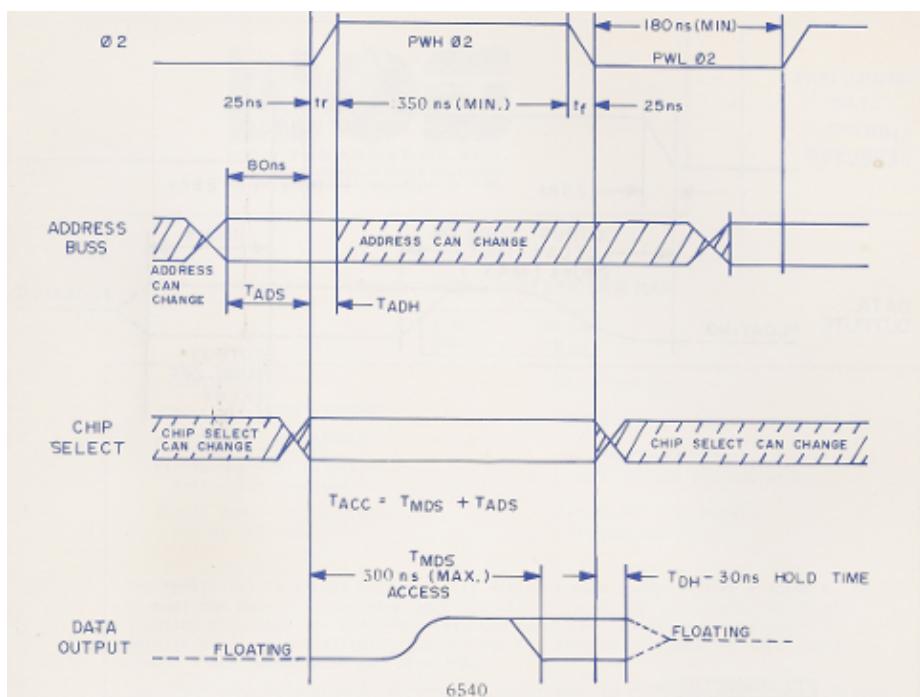


Figure 3: 6540 timing diagram

Nucleo board		6540 ROM		
CN	Pin	Desc	Desc	pin
—	—	—	—	—
9	14	PE2	A0	5
9	22	PE3	A1	6
9	16	PE4	A2	7
9	18	PE5	A3	8
9	20	PE6	A4	9
10	20	PE7	A5	10
10	18	PE8	A6	15
10	4	PE9	A7	14
10	24	PE10	A8	13
10	6	PE11	A9	11
10	26	PE12	A10	18
9	25	PD0	D0	26
9	27	PD1	D1	25
8	12	PD2	D2	24
9	10	PD3	D3	23
9	8	PD4	D4	22
9	6	PD5	D5	21
9	4	PD6	D6	20
9	2	PD7	D7	19
7	2	PB8	CLK	16
8	9	+5V	Vdd	12
8	9	+5V	CS1	17
8	9	+5V	CS2	27
8	13	GND	Vss	1
8	13	GND	#CS3	4
8	13	GND	#CS4	3
8	13	GND	#CS5	2

### ROM reading software for Nucleo board

```
#include "mbed.h"

//-----
// 115200 baud, 8-bit data, no parity
//-----

Serial pc(SERIAL_TX, SERIAL_RX, 115200);

DigitalOut myled(LED1);
DigitalOut blue(LED2);
DigitalIn button(BUTTON1);
DigitalOut clock02(PB_8);
```

```

// 0000 0000 1111 1111
PortIn data(PortD, 0x00ff); // PD7 to PDO

// 0001 1111 1111 1100
PortOut addr(PortE, 0x1ffc); // PE12 to PE2

int getROM(int address) {
    clock02 = 0;
    int val = address << 2;
    addr.write(val);
    // pause if needed
    wait_us(1);
    clock02 = 1;
    // pause if needed
    wait_us(1);
    int mydata = data.read();
    clock02 = 0;
    return mydata;
}

int main()
{
    const int linelen = 16;
    while (1) {
        if (button) {
            myled = 1;
            for (int myaddr = 0; myaddr < 2048; myaddr += linelen) {
                pc.printf("%4.4x:", myaddr);
                for (int i=0; i < linelen; ++i) {
                    int d = getROM(myaddr+i);
                    pc.printf(" %2.2x", d);
                }
                pc.printf("\n");
            }
            myled = 0;
        }
    }
}

```

The actual rig is shown in Figure 4 with one of the ROMs under test.

### **ROM testing results**

The ROM test showed problems with two ROMs. The 012 ROM (C800-CFFF) and the 010 ROM (character generator). The symptoms were slightly different

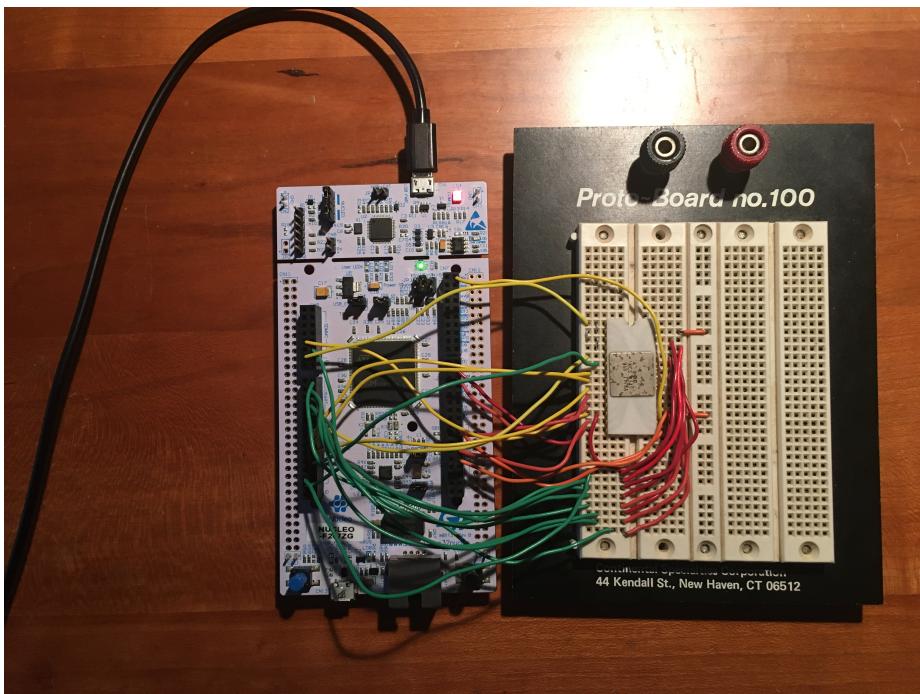


Figure 4: ROM test rig

for each. For the 012 ROM, most of the contents were intact but some of the bytes were 0xff. The bytes were always odd addresses starting at 0x41, 0x43, 0x45, 0x47, 0x49, 0x4b, 0x4d, 0x4f and 0x51 and then every 0x80 bytes after those. For the 010 ROM, the problem was that the high half of the ROM was a copy of the low half as though the A10 address line were stuck low. While this test discovered problems with 2 ROMs, there are a number of aspects not tested, including whether all of the CS lines actually work and whether the ROM is too slow (the Nucleo program inserts a 1us pause, while the real timing spec is 350ns). Still, this was fruitful and I may devise a means by which a more common part could be substituted.

## RAM testing

The 6550 SRAM chips are no longer made, but 2114 chips are still available. They're not quite pin compatible but it's possible to make an adapter and I might actually have some 2114 chips somewhere. The pinout is shown in Figure 5.

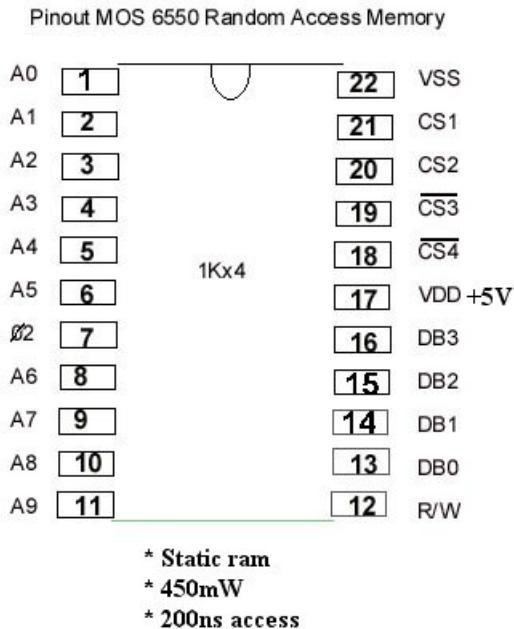


Figure 5: MOS 6550 Pinout

The table below is the circuit I'll use to test the RAM chips. The built circuit is shown below as Figure 6.

Nucleo board		6550 RAM		
CN	Pin	Desc	Desc	pin
—	—	—	—	—
9	14	PE2	A0	1
9	22	PE3	A1	2
9	16	PE4	A2	3
9	18	PE5	A3	4
9	20	PE6	A4	5
10	20	PE7	A5	6
7	2	PB8	CLK	7
10	18	PE8	A6	8
10	4	PE9	A7	9
10	24	PE10	A8	10
10	6	PE11	A9	11
7	4	PB9	R/W	12
9	25	PD0	DB0	13
9	27	PD1	DB1	14
8	12	PD2	DB2	15
9	10	PD3	DB3	16
8	9	+5V	Vdd	17
8	13	GND	#CS4	18
8	13	GND	#CS3	19
8	9	+5V	CS2	20
8	9	+5V	CS1	21
8	13	GND	Vss	22

### Test algorithm

There are a number of tests that could be used, but we can start with the obvious and quick ones and refine those later if needed. As with the ROM testing, I'm not planning on testing the CS lines or the timing, but only the most basic function of a static RAM – does it remember what it's asked to? To that end, I'll use a simple test regimen using the following patterns:

1. all zeroes
2. all ones
3. 0101 pattern
4. 1010 pattern

### RAM test program

```
#include "mbed.h"

//-----
// 115200 baud, 8-bit data, no parity
```

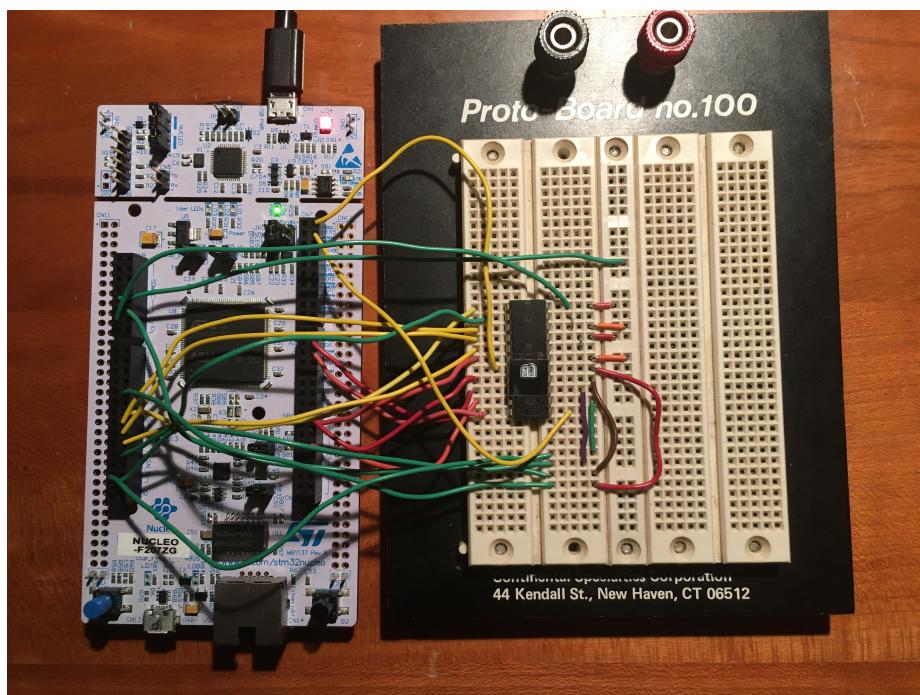


Figure 6: MOS 6550 test circuit

```

//-----

Serial pc(SERIAL_TX, SERIAL_RX, 115200);

DigitalOut myled(LED1);
DigitalOut blue(LED2);
DigitalOut red(LED3);
DigitalIn button(BUTTON1);
DigitalOut clock02(PB_8);
DigitalOut reader(PB_9);

// 0000 0000 0000 1111
PortInOut data(PortD, 0x000f); // PD3 to PD0

// 0000 1111 1111 1100
PortOut addr(PortE, 0x0fffc); // PE11 to PE2

int getRAM(int address) {
    clock02 = 0;
    reader = 1;
    data.input();
    int val = address << 2;
    addr.write(val);
    // pause if needed
    wait_us(1);
    clock02 = 1;
    // pause if needed
    wait_us(1);
    int mydata = data.read();
    clock02 = 0;
    return mydata;
}

void putRAM(int address, int nybble) {
    clock02 = 0;
    reader = 0;
    data.output();
    int val = address << 2;
    addr.write(val);
    data.write(nybble);
    // pause if needed
    wait_us(1);
    clock02 = 1;
    // pause if needed
    wait_us(1);
    clock02 = 0;
}

```

```

        data.input();
        reader = 1;
    }

    void fillRAM(int nybble) {
        for (int myaddr = 0; myaddr < 1024; ++myaddr) {
            putRAM(myaddr, nybble);
        }
    }

    int verifyRAM(int nybble) {
        int errors = 0;
        for (int myaddr = 0; myaddr < 1024; ++myaddr) {
            int got = getRAM(myaddr);
            if (got != nybble) {
                if (!errors) {
                    pc.printf("Error at %4.4x: wanted %2.2x got %2.2x\n", myaddr, nybble, got);
                }
                ++errors;
            }
        }
        return errors;
    }

    int checkRAM(int value)
    {
        int ok = 1;
        myled = 1;
        fillRAM(value);
        myled = 0;
        int errors = verifyRAM(value);
        if (!errors) {
            pc.printf("Verified %2.2x\n", value);
        } else {
            pc.printf("ERRORS (%d) with %2.2x\n", errors, value);
            ok = 0;
        }
        return ok;
    }

    int main()
    {
        data.mode(PullNone);
        while (1) {
            if (button) {
                blue = 0;

```

```

        red = 0;
        int ok = checkRAM(0x0);
        ok &= checkRAM(0xf);
        ok &= checkRAM(0x5);
        ok &= checkRAM(0xA);
        if (ok) {
            blue = 1;
            red = 0;
        } else {
            blue = 0;
            red = 1;
        }
    }
}

```

### RAM test results

As described above, I labeled the 6550 chips A through S (omitting the letter ‘O’ because it looks too much like a zero) and tested. Only the failing chips are detailed here:

#### B

```

Verified 00
Error at 0000: wanted 0f got 0b
ERRORS (1024) with 0f
Error at 0000: wanted 05 got 01
ERRORS (1024) with 05
Verified 0a

```

#### I

```

Error at 0001: wanted 00 got 0b
ERRORS (911) with 00
Error at 0001: wanted 0f got 0b
ERRORS (955) with 0f
Error at 0001: wanted 05 got 0b
ERRORS (966) with 05
Error at 0001: wanted 0a got 09
ERRORS (850) with 0a

```

#### S

```

Error at 0000: wanted 00 got 07
ERRORS (1024) with 00
Error at 0000: wanted 0f got 07

```

```

ERRORS (1024) with 0f
Error at 0000: wanted 05 got 07
ERRORS (1024) with 05
Error at 0000: wanted 0a got 07
ERRORS (1024) with 0a

```

Since these are 1K x 4 bit RAM, B and S clearly have some stuck bits. In particular, B seems to have DB2 stuck at 0 for all addresses, and S has all memory stuck at 0x7. Chip I apparently has something of a soft error in that it doesn't show all 1024 bytes bad, but the vast majority of them with 0xb or 0x9 as the content. It might be interesting at some point to decap these and see if it's possible to pinpoint (and maybe even fix?) the precise error on the die.

## Preliminary Results

I have ordered 4 new 6550 chips (new old stock) from a guy on Ebay and have also ordered a board that sits between the 6502 and the socket and effectively replaces the stock ROM and RAM with modern-ish replacements. I think I will probably wait until I receive that to complete the restoration.

### Character ROM replacement

The character ROM can't be supplemented with the board mentioned above, so other means will be necessary. I found some 2732s in my junk drawer and might also be able to find a 2716 or two, so either of those is a possible replacement. A table of pinout equivalents is shown below, and the 24-pin 2732 maps nicely to the 28-pin 6540 except for one issue - the sense of the clock is inverted. That is, while CLK (02) is high for a read of the 6540, #G must be low for a read of a 2732A so minimally, we'll need an inverter. The typical way to do this, however, is to use a 74LS138 (5-line to 8-line decoder) to decode all address lines. The simple way to do this is to connect CS1 to A, CS2 to B, #CS3 to C, #CS4 to G2A, #CS5 to G2B and then use the output Y3 to drive #G (pin 20) on the 2732.

2732A		6540		74LS138	
pin	name	pin	name	pin	name
12	Vss	1	Vss	8	GND
		2	#CS5	5	#G2B
		3	#CS4	4	#G2A
		4	#CS3	3	C
8	A0	5	A0		
7	A1	6	A1		
6	A2	7	A2		
5	A3	8	A3		
4	A4	9	A4		

	2732A		6540		74LS138
3	A5	10	A5		
22	A9	11	A9		
24	Vcc	12	Vdd		
23	A8	13	A8		
1	A7	14	A7		
2	A6	15	A6		
		16	CLK	6	G1
		17	CS1	1	A
19	A10	18	A10		
17	D7	19	D7		
16	D6	20	D6		
15	D5	21	D5		
14	D4	22	D4		
13	D3	23	D3		
11	D2	24	D2		
10	D1	25	D1		
9	D0	26	D0		
		27	CS2	2	B
		28	NC		
18	#E	1	Vss	8	GND
20	#G	1	Vss	8	GND
21	A11	1	Vss	8	GND

### Programming a 2764A

Since I was able to locate some 2764A chips, so I'll use that. Since it is a 8K x 8 device and the original 6540 is a 2K x 8 device, I'll have room for four copies. What I think I will do is program the US character set in the top half and the German character set in the bottom half so that I can switch by just changing a jumper that would go to the A12 line of the EEPROM. Pointless, sure, but *something* needs be put in there, so it may as well be something marginally useful. My old EEPROM programmer is a Jameco PC card that is currently installed in an old computer. Unfortunately, everything old enough to have a ISA slot is also too old to run any recent version of Linux, and I can't find the DOS-based software anyway, so I think the least effort path is simply creating a new circuit to do the job.

### The approach

Since I have a few 2764s, including at least one I know is not erased, I'll first modify the 6540 ROM reader above to create a 2764 reader. Next will be to apply an external +12.5V Vpp and program and verify the ROM.

Nucleo board		2764 ROM		
CN	Pin	Desc	Desc	pin
—	—	—	—	—
9	14	PE2	A0	10
9	22	PE3	A1	9
9	16	PE4	A2	8
9	18	PE5	A3	7
9	20	PE6	A4	6
10	20	PE7	A5	5
10	18	PE8	A6	4
10	4	PE9	A7	3
10	24	PE10	A8	25
10	6	PE11	A9	24
10	26	PE12	A10	21
10	10	PE13	A11	23
10	28	PE14	A12	2
9	25	PD0	D0	11
9	27	PD1	D1	12
8	12	PD2	D2	13
9	10	PD3	D3	15
9	8	PD4	D4	16
9	6	PD5	D5	17
9	4	PD6	D6	18
9	2	PD7	D7	19
8	9	+5V	Vcc	28
8	13	GND	Vss	14
7	2	PB8	#G	22
7	4	PB9	#E	20
7	3	PB15	#P	27

First, we'll write a program to dump the ROM contents. I might make this a bit smarter than the previous version and have a DDT-style interface to allow for a little better user interface. Also, in anticipation of needing to have the contents of the ROM entirely in the memory of the ARM processor before programming, I'll allocate an 8K buffer for it and use that.

### Commands

I think that the commands I want to implement should be as shown in the table below:

command	letter	arguments
compare	c	range addr
dump	d	range

command	letter	arguments
fill	f	range list
load	l	addr
move	m	range addr
search	s	range list
crc	x	range

Since there are actually two address ranges (buffer and ROM), I'll use an **r** prefix for any address or range to indicate the ROM. For the dump output format, the addresses will all be 6-digit hex followed by a colon and up to 16 pairs of hex digits to show the content. I may as well also put the ASCII equivalents to the right. So for example, the command:

```
d r1fe0 1ffe
```

Might result in this output:

```
001fe0: 30 0a 46 c1 a0 03 00 01 06 00 f2 d5 15 22 41 d3 0.F....."A.
001ff0: 1a e9 00 00 00 00 49 45 4e 44 ae 42 60 82 .....IEND.B`.
```

Note that a *range* is a pair of addresses and that if it's a ROM address range the **r** prefix need only appear for the first number in the range and is implicit in the second.

## Redesign

In making this code a little simpler, it seems that all that's actually needed is a subset of the commands listed above. Specifically the following commands are implemented:

command	letter	action
crc	c	calculate CRC of buffer
dump	d	dump buffer to stdout
file	f	load file into RAM
read	r	copy ROM to buffer
program	p	program ROM with buffer data
version	v	print version of ROMtool

I've simplified by eliminating the arguments and by relying on a buffer to do most operations. The CRC is the same algorithm as is used for the POSIX **cksum**, so it uses the polynomial

$$G(x) = x^{32} + x^{26} + x^{23} + x^{22} + x^{16} + x^{12} + x^{11} + x^{10} + x^8 + x^7 + x^5 + x^4 + x^2 + x + 1$$

and appends the length of the buffer, in little-endian format using the fewest possible bytes. That is, if the length is 0x00001234 bytes, then 0x34, 0x12 would

be appended to the buffer for CRC calculation. The seed value is 0 and the result is complemented.

For this circuit, I used an external +12.5V power supply connected to V<sub>pp</sub> (pin 1) to program the EPROMs. Some EPROMs need +21V, but the power supply I have handy only goes to +15V, but fortunately, I was able to find two Hitachi 2764 devices that only need +12.5V for programming.

## Result

Putting in most of the RAM except the three faulty ones (B, I, S) and a spare (R) and installing the replacement ROMs in adapters, the machine doesn't seem to boot at all. It has an initial random screen (which is normal) and then clears the screen (which is normal) but then proceeds no further. It should, instead, enumerate the RAM and show a message, but this does not happen. Today, my ROM/RAM replacement board should arrive and so I'll do further troubleshooting then.

After I received my board, I determined that I may have more bad RAM than I thought. In addition to B, I and S, it appears that A, C and possibly G are bad. The machine boots and runs with R, F in the video RAM and K, L, M, N, P, Q, H, J, D, E installed. It reports 4095 bytes free which is consistent with 5K installed. Since it reports 7167 bytes free with 8K installed we calculate  $8 * 1024 - 7167 = 1025$  and  $5 * 1024 - 4095 = 1025$ . Successful boot screen is shown below.

## Power supply

After the machine is on for a few seconds, I noticed a lot of "snow" on the screen and can hear the transformer buzzing. Further investigating, the J8 Molex power connector becomes quite hot on one side, so I took it apart and discovered that the pin 1 connection was both corroded and also had some of the stranded copper wire strands broken, both leading to high resistance. To fix that, I've ordered a replacement connector and pins, this time upgrading to gold plated connectors.

## Case

There are some rust spots on the case. Since I'm planning on doing some automotive painting of a white car soon anyway, I'll reserve a bit of paint and also repaint the white portions of the PET at the same time. Detail of some of the worst rust is shown in the picture below.

## Keyboard

The keyboard seems not to work at all.

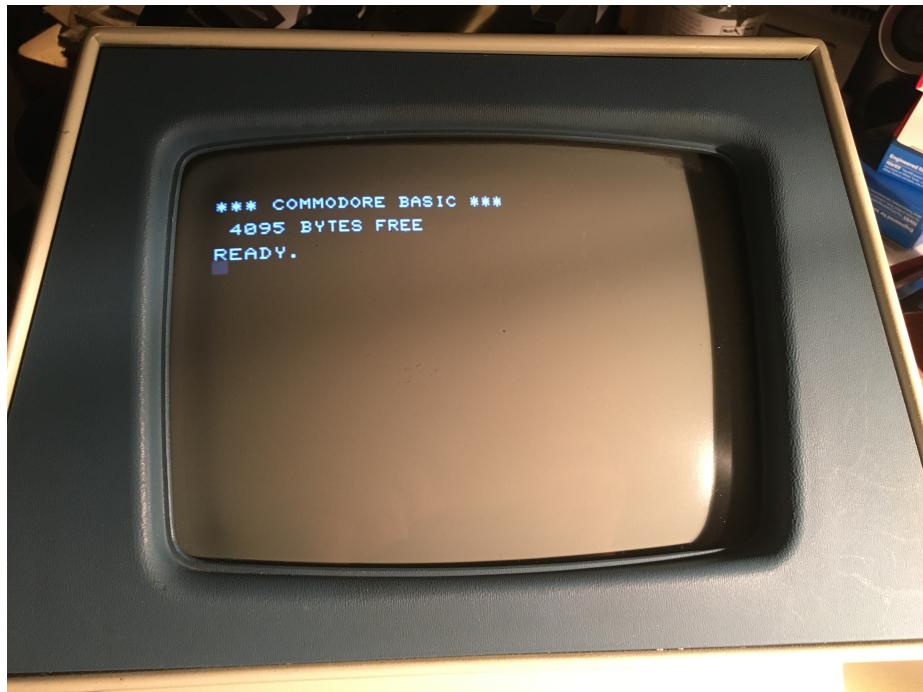


Figure 7: successful boot



Figure 8: Some rust

## **Tape drive**

The tape drive will need to be looked at, but it's very likely that the belt will need replacing and the head cleaned.