

Clebsch-Gordan Coefficients





Loss and DiVincenzo quantum computer

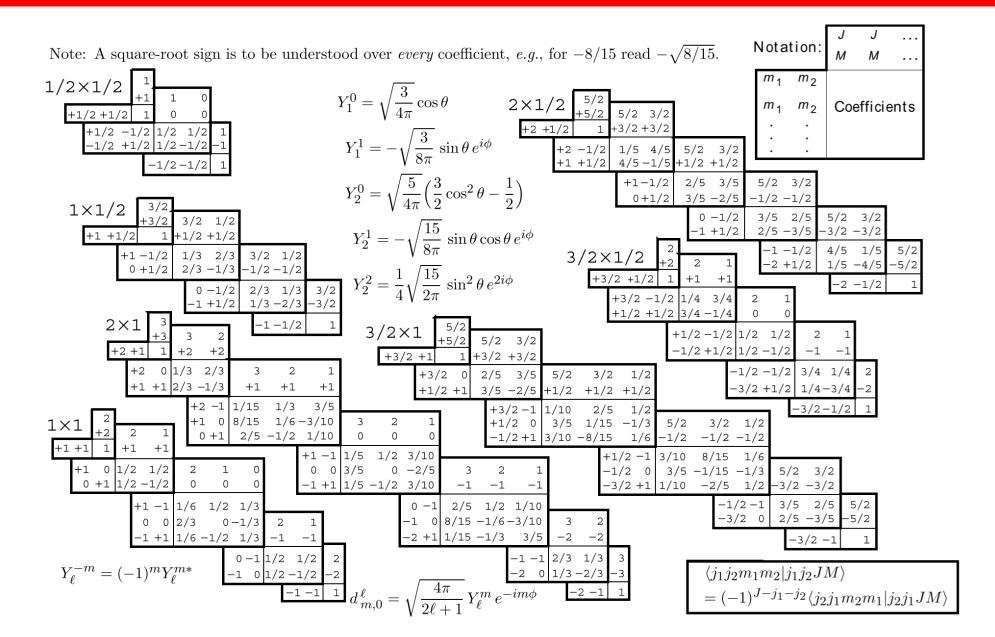

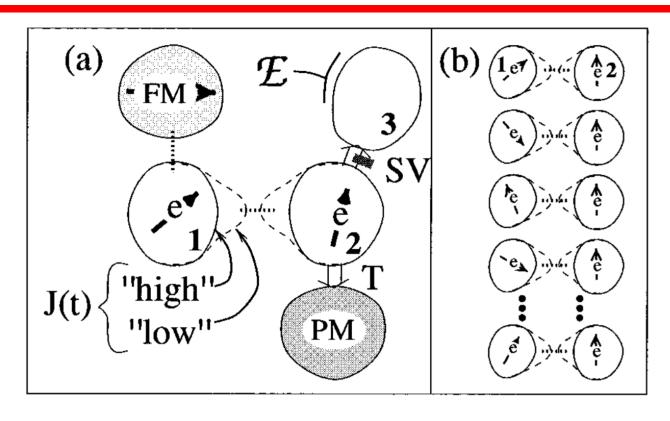

- The spins of the electron are the qubits
- Single qubit operations by forcing the electron to interact with the ferromagent (that doesn't work in practice)
- 2-qubit gates are provided by changing the tunnel barrier separating quantum dots to increase/decrease interactions

PHYSICAL REVIEW A VOLUME 57, NUMBER 1 JANUARY 1998

Quantum computation with quantum dots

Daniel Loss^{1,2,*} and David P. DiVincenzo^{1,3,†}


¹Institute for Theoretical Physics, University of California, Santa Barbara, Santa Barbara, California 93106-4030 ²Department of Physics and Astronomy, University of Basel, Klingelbergstrasse 82, 4056 Basel, Switzerland ³IBM Research Division, T.J. Watson Research Center, P.O. Box 218, Yorktown Heights, New York 10598 (Received 9 January 1997; revised manuscript received 22 July 1997)

ENGRD 2550


Gate defined quantum dots – double QD = 1 qubit




QD Transistor with 1 electron

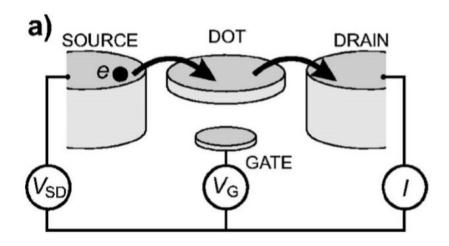

- Grow epitaxial 2D electron Gas (2DEG)
- Pattern metal gates on top
- Define the lateral confinement by electrostatic repulsion
- Can control the well depth by gate voltage.

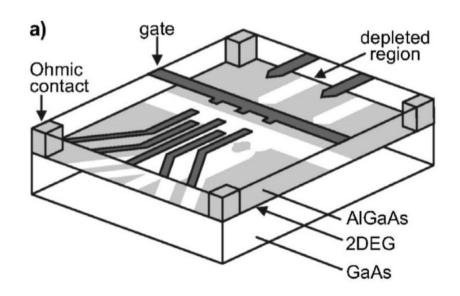

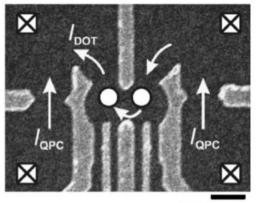


200 nm

Rev. of Mod. Phys. 79, 1217 (2007)


Gate-defined quantum dot fabrication



GaAs/AlGaAs heterostructure

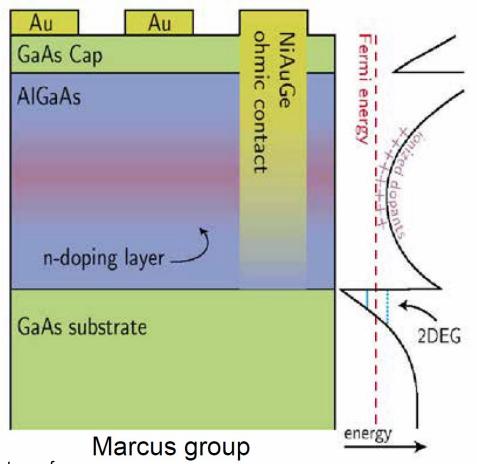


Quantum point contact

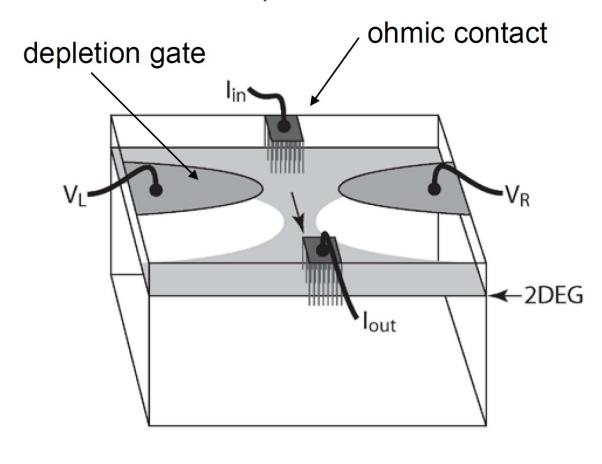



Slide Courtesy of Jason Petta, Princeton


Charge Detection




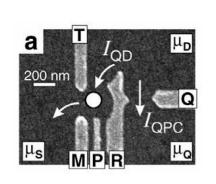


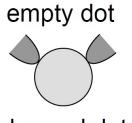







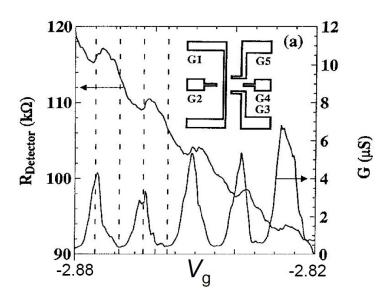

Field *et al.*, PRL **70**, 1311 (1993) Hanson *et al.*, PRL **91**, 196802 (2003)

- Current on the quantum point contact is larger if the dot is empty
- Gating from the electric field of the electron
- This is a charge state measurement

Gate defined quantum dots

GR

GL

Tail

200 nm


Nose



The possible spin states of 2 coupled electrons:

(0,2) charge state: only singlet spin state: $|S\rangle = (|\uparrow\downarrow\rangle - |\downarrow\uparrow\rangle)/\sqrt{2}$ All other spin states have much higher energy

(1,1) charge state:
$$|S\rangle = (|\uparrow\downarrow\rangle - |\downarrow\uparrow\rangle)/\sqrt{2}$$
 and $|T_{+}\rangle = |\uparrow\uparrow\rangle, |T_{0}\rangle = (|\uparrow\downarrow\rangle + |\downarrow\uparrow\rangle)/\sqrt{2}$, and $|T_{-}\rangle = |\downarrow\downarrow\rangle$

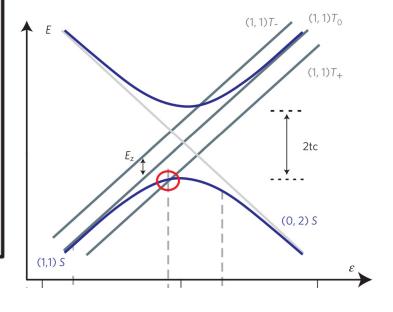


Petta et al., Science 2005 Foletti, et al., Nat. Phys. 2009

- Initialize: send (0,2) to (1,1): have |S>
- The qubit states are (1,1) $|S\rangle$ and $|T_0\rangle$
- Manipulate: becomes complicated...but involves lowering tunnel barrier between dots.
- Measurement via the QPC: Try to suddenly put both electrons in the same dot -- (0,2) charge state
 - |S⟩ will readily go to (0,2)
 - |T⟩ will be "spin" blocked (the energy is too high for that state)

Scalable architecture in Si/SiGe heterostructures



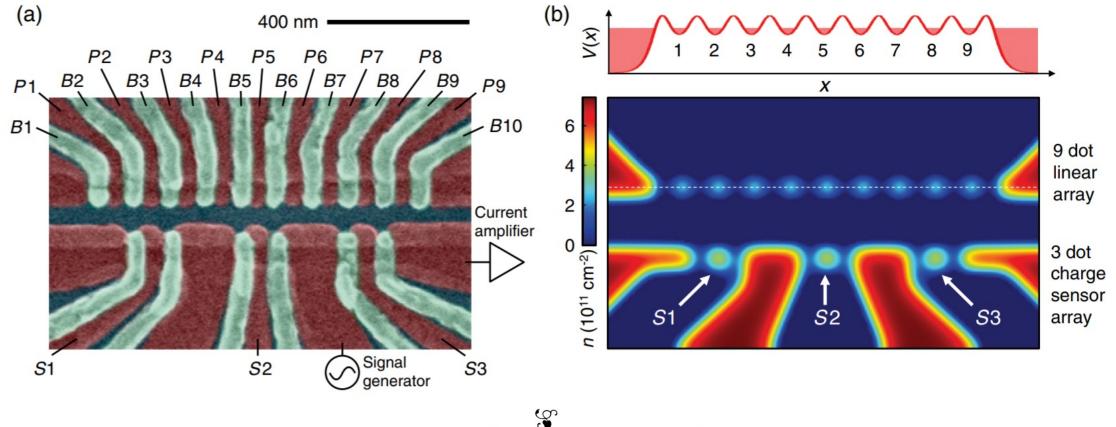

Scalable Gate Architecture for a One-Dimensional Array of Semiconductor Spin Qubits

D. M. Zajac, ¹ T. M. Hazard, ¹ X. Mi, ¹ E. Nielsen, ² and J. R. Petta ¹ Department of Physics, Princeton University, Princeton, New Jersey 08544, USA ² Sandia National Laboratories, Albuquerque, New Mexico 87185, USA (Received 13 July 2016; revised manuscript received 26 September 2016; published 28 November 2016)

ENGRD 2550