Developper manual of RasPy

Release 0.0.1

bibi21000

Contents

1	Insta	allation	1
	1.1	Raspbian	1
	1.2	Update packages	
	1.3	Download it	1
	1.4	Configure your system	1
	1.5	Installation	
	1.6	Run the tests	2
	1.7	Start it	2
	1.8	Read the doc	2
2 Develop		elop	3
	2.1	Phylosophy	3
	2.2	Documentation	
	2.3	Tests	3
	2.4	A new device	4
	2.5	A new server	4
3	rasp	y package	5
	3.1	Subpackages	5
	3.2	Module contents	21
Ру	thon]	Module Index	23
In	dex		25

Installation

1.1 Raspbian

Install official raspbian from here: http://www.raspbian.org/.

Newbies can install it from: http://www.raspberrypi.org/downloads/.

Developpers or others can also install it on standard distributions (Ubuntu, Debian, RedHat, ...).

1.2 Update packages

You can now update packages

```
sudo apt-get -y update
sudo apt-get -y dist-upgrade
```

We need to install some packages to download and build RasPy:

```
sudo apt-get -y install build-essential python-dev python-minimal python python2.7-dev python2.7-
```

Some packages need to be removed as new versions are available from eggs:

```
sudo apt-get remove python-zmq libzmq1 libzmq-dev python-nose pylint
```

1.3 Download it

You should now download RasPy using git. You should not download and install RasPy with root user. Idealy, you should create a special user for running RasPy or the pi user. Keep in mind root is baaaddddd.

```
git clone https://github.com/bibi21000/RasPy.git
```

1.4 Configure your system

- · access rights
- · sudo nopasswd
- ...

1.5 Installation

If you want to develop for RasPy, you need to install it in develop mode:

sudo make develop

Otherwise install it normaly

sudo make install

And be patient ... installation need to compile zmq ... It takes a while

1.6 Run the tests

You can now check that everything is fine running the tests:

make tests

If it fails ... run it again :) At last, copy / paste the full screen output and send it to the core team.

1.7 Start it

In the next monthes, you should be abble to start it:

make start

1.8 Read the doc

- docs/pdf
- docs/html

Develop

If you want to develop you surely need vim:

```
sudo apt-get -y install vim-nox vim-addon-manager
```

2.1 Phylosophy

Tests, tests, ... and tests:

- A bug -> a test -> a patch
- A new feature -> many test

And documentation

• A new feature -> documentation

2.2 Documentation

If you want to generate the documentation, you need to install some packages:

```
sudo apt-get -y install python-sphinx graphviz
```

And some eggs:

```
sudo pip install seqdiag sphinxcontrib-seqdiag
sudo pip install blockdiag sphinxcontrib-blockdiag
sudo pip install nwdiag sphinxcontrib-nwdiag
sudo pip install actdiag sphinxcontrib-actdiag
```

You can now generate the full documentation using:

```
make docs
```

You can also generate a part of it, for example:

```
cd docs
make html
```

2.3 Tests

Nosetests and pylint are used to test quality of code. There reports are here:

· Nosetests report

Developper manual of RasPy, Release 0.0.1

- Coverage report
- Pylint report

Coverage is not the goal but it's one: a module must have a coverage of 90% to be accepted by core team. Otherwise it will block the packaging process. Of course, a FAILED test will also.

You can run the developpers test running:

make devtests

If you're on a raspberry, you can run the full tests like this:

make tests

Running only one test module :

/usr/local/bin/nosetests --verbosity=2 --cover-package=raspy --with-coverage --cover-inclusive --

2.4 A new device

2.5 A new server

raspy package

3.1 Subpackages

3.1.1 raspy.common package

Subpackages

raspy.common.devices package

Submodules

```
raspy.common.devices.device module Devices.
```

```
{\bf class} \; {\tt raspy.common.devices.device.BaseDevice} \; ({\it json=None})
```

Bases: object

The base device object

What is a device:

- •a temperature sensor
- •a wind sensor
- •a camera
- •the clock RTC
- •a dimmer
- •a TV
- •...

What can we do with a device:

- •get value of a sensor
- •dim a dimmer
- •take a photo with camera
- •...

We shoud do auto-mapping:

- •python object <-> json
- •python object <-> html

We whould manage complex devices, ie a TV: it groups a channel selector (+, -, and direct access to a channel), a volume selector, ... In an ideal world we should not be obliged to create each sub-devices.

Naming convention of devices on the network : (MDP.routing_key(hostname, service)).{device_name}[.subdevice]

check (json=None)

Check that the JSON is a valid device

fullname (prefix)

The fullname of the device

json

Check that the JSON is a valid device

name

The name of the device Must be unique for the instance server.

new (json=None)

Create a new device and return it

oid = 'base'

The Object Identifier It should be given by the core team as it can break other devices. Need to define a naming convention: sensor, sensor, temperature, media.camera, ...

template

The template of the device

templates = {}

The templates dictionnary Every device must add an entry for its config Will be used to check the device

class raspy.common.devices.device.DeviceRegister

Bases: object

The device register

All devices must register to this register (in main module)

check (json=None)

Check that the JSON is a valid device

new (**kwargs)

Create a new device and return it

register (device_type)

Register a device_type under key

raspy.common.devices.media module Media devices

```
class raspy.common.devices.media.MediaCamera(**kwargs)
```

Bases: raspy.common.devices.media.MediaDevice

The camera device object

new(**kwargs)

Create a new device and return it

oid = 'media.camera'

The Object Identifier It should be given by the core team as it can break other devices. Need to define a naming convention: sensor, sensor, temperature, media.camera, ...

```
class raspy.common.devices.media.MediaDevice(**kwargs)
```

Bases: raspy.common.devices.device.BaseDevice

The sensor device object

```
check (json=None)
```

Check that the JSON is a valid device

oid = 'media'

The Object Identifier It should be given by the core team as it can break other devices. Need to define a naming convention: sensor, sensor, temperature, media.camera, ...

```
class raspy.common.devices.media.MediaTV(**kwargs)
```

```
Bases: raspy.common.devices.media.MediaDevice
```

The temperature sensor device object

```
new (**kwargs)
```

Create a new device and return it

oid = 'media.tv'

The Object Identifier It should be given by the core team as it can break other devices. Need to define a naming convention: sensor, sensor.temperature, media.camera, ...

raspy.common.devices.sensor module Sensors devices

```
class raspy.common.devices.sensor.SensorDevice(**kwargs)
```

```
Bases: raspy.common.devices.device.BaseDevice
```

The sensor device object

```
check (json=None)
```

Check that the JSON is a valid device

```
oid = 'sensor'
```

The Object Identifier It should be given by the core team as it can break other devices. Need to define a naming convention: sensor, sensor, temperature, media.camera, ...

```
class raspy.common.devices.sensor.SensorTemperature(**kwargs)
```

```
Bases: raspy.common.devices.sensor.SensorDevice
```

The temperature sensor device object

```
new(**kwargs)
```

Create a new device and return it

oid = 'sensor.temperature'

The Object Identifier It should be given by the core team as it can break other devices. Need to define a naming convention: sensor, sensor, temperature, media.camera, ...

```
class raspy.common.devices.sensor.SensorWind(**kwargs)
```

```
Bases: raspy.common.devices.sensor.SensorDevice
```

The wind sensor device object

```
new (**kwargs)
```

Create a new device and return it

oid = 'sensor.wind'

The Object Identifier It should be given by the core team as it can break other devices. Need to define a naming convention: sensor, sensor, temperature, media.camera, ...

Module contents

Submodules

raspy.common.MDP module

```
exception raspy.common.MDP.ClientError(value)
    Bases: raspy.common.MDP.GenericError
```

```
Client side exception
exception raspy.common.MDP.GenericError(value)
     Bases: exceptions. Exception
     Generic exception
exception raspy.common.MDP.ServerError(value)
     Bases: raspy.common.MDP.GenericError
     Server side exception
raspy.common.MDP.logger = <logging.Logger object at 0x2aab52b7ab90>
     Majordomo Protocol definitions
raspy.common.MDP.routing_key(hostname, service)
raspy.common.client module
class raspy.common.client.Client(hostname='localhost',
                                                                 service='worker',
                                                                                       bro-
                                       ker_ip='127.0.0.1', broker_port=5514, poll=1500, ttl=900)
     Bases: raspy.common.executive.Executive
     The generic worker
     From http://zguide.zeromq.org/py:all#header-48
     request (service=None, data=['mmi.echo'], callback=None, args=(), kwargs={})
         Request a job to a worker
     run()
         Run the client
     status (uuid)
          Request a job to a worker
raspy.common.dynamic module
raspy.common.dynamic.importCode (code, name, add_to_sys_modules=False)
raspy.common.executive module
class raspy.common.executive.Executive (hostname='localhost', service='executive', bro-
                                               ker_ip='127.0.0.1', broker_port=5514)
     Bases: object
     The Executive mother class for all workers
     todo:
            • bug : can't stop when jobs in queues
     destroy()
          Wait for threads and destroy contexts.
     get_instance_id()
          Return the instance of the exective
          ... todo: must be multihost and multithread.
     run()
         Run the executive
     shutdown()
         Shutdown executive.
```

9

```
Bases: multiprocessing.process.Process
     Process executing tasks from a given tasks queue
     run()
     shutdown()
          Method to deactivate the client connection completely.
          Will delete the stream and the underlying socket.
            Warning: The instance MUST not be used after shutdown () has been called.
              Return type None
raspy.common.kvcliapi module
kvsimple - simple key-value message class for example applications
Author: Min RK <benjaminrk@gmail.com>
From: http://zguide.zeromq.org/py:kvsimple
class raspy.common.kvcliapi.KvPublisherClient (hostname='localhost',
                                                                                            bro-
                                                           ker_ip='127.0.0.1', broker_port=5514)
     Bases: object
     KeyValue Protocol Client API, Python version.
     Implements the client defined at http://zguide.zeromq.org/page:all#Working-with-Subtrees
     From https://raw.githubusercontent.com/imatix/zguide/master/examples/Python/clonecli4.py
     destroy()
          Destroy object
     send (subtree='subtree', key='key', body='body')
          Send the update
class raspy.common.kvcliapi.KvSubscriberClient (hostname='localhost',
                                                            tree='subtree', broker_ip='127.0.0.1',
                                                            broker\_port=5514, speed=1.0)
     Bases: object
     KeyValue Protocol Client API, Python version.
     Implements the client defined at http://zguide.zeromq.org/page:all#Working-with-Subtrees From
     https://raw.githubusercontent.com/imatix/zguide/master/examples/Python/clonecli4.py
     destroy()
          Destroy object
     run()
          Run the poller
     shutdown()
          Shutdown the broker.
raspy.common.kvsimple module
```

class raspy.common.executive.ExecutiveProcess (executive, executive_name)

3.1. Subpackages

kvsimple - simple key-value message class for example applications

Author: Min RK <benjaminrk@gmail.com>
From: http://zguide.zeromq.org/py:kvsimple

```
class raspy.common.kvsimple.KVMsg (sequence, key=None, body=None)
     Bases: object
     Message is formatted on wire as 3 frames:
            • frame 0: key (0MQ string)
            • frame 1: sequence (8 bytes, network order)
            • frame 2: body (blob)
     body = None
     dump()
          Dump me to a string"
     key = None
     classmethod recv (socket)
          Reads key-value message from socket, returns new kvmsg instance.
     send(socket)
          Send key-value message to socket; any empty frames are sent as such.
     sequence = 0
     store(dikt)
          Store me in a dict if I have anything to store
raspy.common.mdcliapi module
Majordomo Protocol Client API, Python version.
Implements the MDP/Worker spec at http:#rfc.zeromq.org/spec:7.
Author: Min RK <benjaminrk@gmail.com> Based on Java example by Arkadiusz Orzechowski
class raspy.common.mdcliapi.MajorDomoClient (broker)
     Bases: object
     Majordomo Protocol Client API, Python version.
     Implements the MDP/Worker spec at http:#rfc.zeromq.org/spec:7.
     broker = None
     client = None
     ctx = None
     destroy()
          Destroy object
     poller = None
     reconnect_to_broker()
          Connect or reconnect to broker
     retries = 3
     send(service, request)
          Send request to broker and get reply by hook or crook.
          Takes ownership of request message and destroys it when sent. Returns the reply message or None if
          there was no reply.
     timeout = 2500
     verbose = False
```

raspy.common.mdwrkapi module

```
Majordomo Protocol Worker API, Python version
Implements the MDP/Worker spec at http:#rfc.zeromq.org/spec:7.
Author: Min RK <br/>
<br/>
Senjaminrk@gmail.com> Based on Java example by Arkadiusz Orzechowski
class raspy.common.mdwrkapi.MajorDomoWorker(broker, service)
     Bases: object
     Majordomo Protocol Worker API, Python version
     Implements the MDP/Worker spec at http:#rfc.zeromq.org/spec:7.
     HEARTBEAT_LIVENESS = 3
     broker = None
     ctx = None
     destroy()
          Destroy object
     expect_reply = False
     heartbeat = 2500
     heartbeat at = 0
     liveness = 0
     reconnect = 2500
     reconnect_to_broker()
          Connect or reconnect to broker
     recv (reply=None)
          Send reply, if any, to broker and wait for next request.
     reply_to = None
     send_to_broker (command, option=None, msg=None)
          Send message to broker.
          . If no msg is provided, creates one internally
     service = None
     shutdown()
          Shutdown executive.
     status = True
          The status of the worker. Should be update by callback in the future
     timeout = 2500
     verbose = False
     worker = None
```

raspy.common.runner module

The runner

Start a worker or a broker as a daemon.

Must be updated to work with multiple workers.

What do we need:

· the user ou userid

- the log file
- the error output
- · the standard output
- the pid file
- the working directory

Based on the runner of python-daemon:

- Copyright © 2009–2010 Ben Finney <ben+python@benfinney.id.au>
- Copyright © 2007–2008 Robert Niederreiter, Jens Klein
- Copyright © 2003 Clark Evans
- Copyright © 2002 Noah Spurrier

Bases: exceptions. Exception

Abstract base class for errors.

```
• Copyright © 2001 Jürgen Hermann
class raspy.common.runner.Runner (hostname=None, service='myrunnerinstance', user=None,
                                         log_dir='/var/log', conf_dir='/etc', run_dir='/var/run',
                                         context=None, endpoint_autoconf=None)
     Bases: object
     Controller for a callable running in a separate background process.
     The first command-line argument is the action to take:
         •'start': Become a daemon and call app.run().
         • 'stop': Exit the daemon process specified in the PID file.
         • 'restart': Stop, then start.
         • 'status': Show the status of the process.
     action_funcs = {'status': <function_status at 0x2aab553d0b90>, 'reload': <function_reload at 0x2aab553d0c80>
     app_reload()
          The reload process of the application
     app_run()
          The running process of the application
     app_shutdown()
          The shutdown process of the application
     do_action()
          Perform the requested action.
     parse_args (argv=None)
          Parse command-line arguments.
     sighup_handler (signal, frame)
     sigterm_handler (signal, frame)
     start_message = 'started with pid \%(pid)d'
     status_message_not_running = 'process is not running'
     status_message_running = 'process is running'
exception raspy.common.runner.RunnerError
```

```
exception raspy.common.runner.RunnerInvalidActionError
     Bases: exceptions.ValueError, raspy.common.runner.RunnerError
     Raised when specified action is invalid.
exception raspy.common.runner.RunnerStartFailureError
     Bases: exceptions.RuntimeError, raspy.common.runner.RunnerError
     Raised when failure starting.
exception raspy.common.runner.RunnerStopFailureError
     Bases: exceptions.RuntimeError, raspy.common.runner.RunnerError
     Raised when failure stopping.
raspy.common.runner.emit_message (message, stream=None)
     Emit a message to the specified stream (default sys.stderr).
raspy.common.runner.is_pidfile_stale(pidfile)
     Determine whether a PID file is stale.
     Return True ("stale") if the contents of the PID file are valid but do not match the PID of a currently-
     running process; otherwise return False.
raspy.common.runner.make_pidlockfile(path, acquire_timeout)
     Make a PIDLockFile instance with the given filesystem path.
raspy.common.server module
                                                                service='worker',
class raspy.common.server.Server(hostname='localhost',
                                                                                     hro-
                                      ker ip='127.0.0.1', broker port=5514)
     Bases: raspy.common.executive.Executive, raspy.common.statistics.Statistics
     The generic worker
     From http://zguide.zeromq.org/py:all#header-48
     worker mmi()
         Retrieve mmi informations of the worker
raspy.common.statistics module
class raspy.common.statistics.SNMP (oid='module.snmp.key', doc='A statistic integer value',
                                        initial=0)
     Bases: object
     Abstract statistic item
     set (value)
         Set a value to the snmp object
class raspy.common.statistics.SNMPCounter(oid='module.snmp.key',
                                                                         doc=A
                                                                                  statistic
                                                 counter value with overflow', initial=0,
                                                  overflow=4294967296)
     Bases: raspy.common.statistics.SNMP
     Long (32bits) with overflow
     set (value=1)
         Add value (default=1) to current value. Also manage overflow.
class raspy.common.statistics.SNMPFloat (oid='module.snmp.key', doc='A statistic float
                                               value', initial = 0.0)
     Bases: raspy.common.statistics.SNMP
     Float counter
```

```
class raspy.common.statistics.SNMPString(oid='module.snmp.key', doc='A statistic string
                                                    value', initial='')
     Bases: raspy.common.statistics.SNMP
     Float counter
class raspy.common.statistics.Statistics
     Bases: object
     The statistics manager
     add_statistic()
          Add a new statistic to the manager
     remove_statistic(oid)
          Remove a statistic from the manager
     update_statistic(oid='')
          Add a new statistic to the manager
     worker_statistics()
          Send statistics via mmi
raspy.common.supervisor module
class raspy.common.supervisor.Supervisor(runner=None)
     The worker supervisor
     Start executives in separate process see futures Each executive start multiples threads of workers
     todo:
            • bug : can't stop when jobs in queues
     get_instance_id()
          Return the instance of the worker: must be multihost and multithread.
     reload()
          Request the workers configuration against the configurator.
          Will unregister all workers, stop all timers and ignore all further messages.
            Warning: The instance MUST not be used after shutdown () has been called.
              Return type None
     run()
          Start the IOLoop instance
     shutdown()
          Shutdown supervisor.
          Will unregister all workers, stop all timers and ignore all further messages.
            Warning: The instance MUST not be used after shutdown () has been called.
              Return type None
```

raspy.common.zhelpers module

stop_executives()
Shutdown executives.

Helper module for example applications. Mimics ZeroMQ Guide's zhelpers.h.

```
Receives all message parts from socket, printing each frame neatly
```

raspy.common.zhelpers.set_id(zsocket)

Set simple random printable identity on socket

raspy.common.zhelpers.zpipe(ctx)
build inproc pipe for talking to threads
mimic pipe used in czmq zthread_fork.

Returns a pair of PAIRs connected via inproc

Module contents

3.1.2 raspy.servers package


Submodules

raspy.servers.broker module

Majordomo Protocol broker and key/value proxy.

Discovery process

Here is the way for a client to discover all devices on network

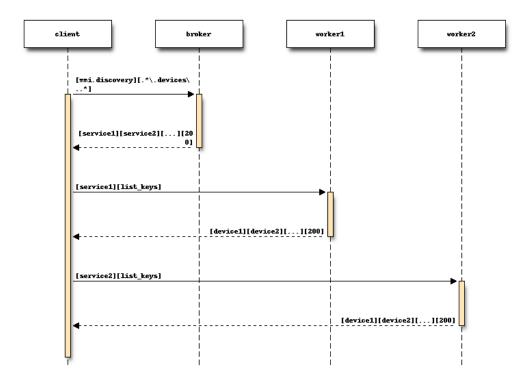

You can do the same for crons and scenarios

HEARTBEAT_EXPIRY = 7500 HEARTBEAT_INTERVAL = 2500

 $HEARTBEAT_LIVENESS = 3$

```
INTERNAL_SERVICE_PREFIX = 'mmi.'
     ctx = None
     delete_worker (worker, disconnect)
          Deletes worker from all data structures, and deletes worker.
     destroy()
          Disconnect all workers, destroy context.
     dispatch (service, msg)
          Dispatch requests to waiting workers as possible
     heartbeat at = None
     poller = None
     process_client (sender, msg)
          Process a request coming from a client.
     process_worker (sender, msg)
          Process message sent to us by a worker.
     purge_workers()
          Look for & kill expired workers.
          Workers are oldest to most recent, so we stop at the first alive worker.
     require service(name)
          Locates the service (creates if necessary).
     require_worker(address)
          Finds the worker (creates if necessary).
     run()
          Main broker work happens here
     send_heartbeats()
          Send heartbeats to idle workers if it's time
     send_to_worker (worker, command, option, msg=None)
          Send message to worker.
          . If message is provided, sends that message.
     service_internal(service, msg)
          Handle internal service according to 8/MMI specification
     services = None
     shutdown()
          Shutdown the broker.
     socket = None
     waiting = None
     worker_waiting(worker)
          This worker is now waiting for work.
     workers = None
class raspy.servers.broker.Proxy (hostname='localhost', service='broker', broker_ip='*',
                                         broker\_port=5514, speed=1.0)
     Bases: threading. Thread
     The publisher
     Tree:
            /event/
```

```
· /scenario/
            • /device/
     from: http://zguide.zeromq.org/page:all#Working-with-Subtrees
     run()
          Run the proxy
     send single (key, kvmsg, route)
          Send one state snapshot key-value pair to a socket
     shutdown()
          Shutdown the proxy.
class raspy.servers.broker.Route(socket, identity, subtree)
class raspy.servers.broker.Service(name)
     Bases: object
     a single Service
     name = None
     requests = None
     waiting = None
class raspy.servers.broker.Worker (identity, address, lifetime)
     Bases: object
     a Worker, idle or active
     address = None
     expiry = None
     identity = None
     service = None
raspy.servers.core module
class raspy.servers.core.Core (hostname='localhost', service='core', broker_ip='127.0.0.1',
                                    broker\_port=5514)
     Bases: raspy.common.server.Server
     The Core server
         •Cron
               - Generate events in the publisher
         Scenario
               - a scenario can run in background at startup (ie thermostat) or fired by an event (ie cron, sun
```

- is down, temperature is under 0°C)
- a scenario can be a loop so it must be launch in a separate thread : start filling, loop until water level is ok: need to call self._stopevent.isSet() in it so that the tread can shutdown.
- look for updates in entries list (cron, sensors, variables in the publisher): a list mapped in friendly user's names (using store)
- it can publish some values with publisher
- do some work using inline code python:
- send commands to devices, cron jobs, start other scenario, update some variables in publisher
- we can export/import scenarios : share with friends

```
•NTP / Sytem Time / RTC Sync
                - sync from ntp to rtc
                - sync from trc to system: using sudo with no password
     worker_cron()
          Create a worker to handle cron requests
     worker scenario()
          Create a worker to handle scenario's requests
     worker scenarios()
          Create a worker to handle scenarios requests (list keys, ...)
class raspy.servers.core.Cron
     Bases: object
     A cron job
     aps_job = None
class raspy.servers.core.CronManager
     Bases: object
     The manager of cron job
      jobs = \{\}
class raspy.servers.core.Scenario (name='scenarl', publisher=None)
     Bases: threading. Thread
     A scenario
     code = None
          The code we must exec
     conf = \{\}
          The configuration of the scenario
     entries = {}
          The entries we must look at for an event driven scenario
          Check if the scenario must be fired using entries and that is not already running. If so, call sself.run()
               Returns True if the thread must be launch (self.run()), False otherwise
               Return type boolean
     load(store)
          Load the scenario from titanic store
               Parameters store – the store to get info from
               Type titani_store
               Returns True if the scenario was loaded from store
               Return type boolean
     run()
          Run the scenario
     running = False
          Is the scenario running
      shutdown()
          Shutdown the scenario
      store (store)
          Store the scenario to titanic store
```

```
class raspy.servers.core.ScenarioManager(publisher=None)
            Bases: object
            The manager of scenarios
            http://etutorials.org/Programming/Python+tutorial/Part+III+Python+Library+and+Extension+Modules/Chapter+13.+Control
            http://lucumr.pocoo.org/2011/2/1/exec-in-python/http://late.am/post/2012/04/30/the-exec-statement-and-http://late.am/post/2012/04/30/the-exec-statement-and-http://late.am/post/2012/04/30/the-exec-statement-and-http://late.am/post/2012/04/30/the-exec-statement-and-http://late.am/post/2012/04/30/the-exec-statement-and-http://late.am/post/2012/04/30/the-exec-statement-and-http://late.am/post/2012/04/30/the-exec-statement-and-http://late.am/post/2012/04/30/the-exec-statement-and-http://late.am/post/2012/04/30/the-exec-statement-and-http://late.am/post/2012/04/30/the-exec-statement-and-http://late.am/post/2012/04/30/the-exec-statement-and-http://late.am/post/2012/04/30/the-exec-statement-and-http://late.am/post/2012/04/30/the-exec-statement-and-http://late.am/post/2012/04/30/the-exec-statement-and-http://late.am/post/2012/04/30/the-exec-statement-and-http://late.am/post/2012/04/30/the-exec-statement-and-http://late.am/post/2012/04/30/the-exec-statement-and-http://late.am/post/2012/04/30/the-exec-statement-and-http://late.am/post/2012/04/30/the-exec-statement-and-http://late.am/post/2012/04/30/the-exec-statement-and-http://late.am/post/2012/04/30/the-exec-statement-and-http://late.am/post/2012/04/30/the-exec-statement-and-http://late.am/post/2012/04/30/the-exec-statement-and-http://late.am/post/2012/04/30/the-exec-statement-and-http://late.am/post/2012/04/30/the-exec-statement-and-http://late.am/post/2012/04/30/the-exec-statement-and-http://late.am/post/2012/04/30/the-exec-statement-and-http://late.am/post/2012/04/30/the-exec-statement-and-http://late.am/post/2012/04/30/the-exec-statement-and-http://late.am/post/2012/04/30/the-exec-statement-and-http://late.am/post/2012/04/30/the-exec-statement-and-http://late.am/post/2012/04/30/the-exec-statement-and-http://late.am/post/2012/04/30/the-exec-statement-and-http://late.am/post/2012/04/30/the-exec-statement-and-http://late.am/post/2012/04/30/the-exec-statement-and-http://late.am/post/2012/04/30/the-exec-statement-and-http://late.am/post/2012/04/30/the-exec-statement-and-
            a-python-mystery
             add (name='scenarl', entries={}, code=None, conf={})
                        Add a scenario
             delete(name='scenar1')
                       Delete a scenario
             list()
                        Return all scenarios with conf, entries, ... as json dict
             list_keys()
                       Return all scenarios key (=name) ... as json list
             load(store)
                       Load the scenarios from titanic store
                       store keys:
                                      • scenario.main.conf : a json dict for configuration of scenario
                                     • scenario.main.keys: a json list of the scenario's names
                                      • scenario.key1.conf: a json dict for configuration of scenario key1
                                     • scenario.key1.entries: a json dict of entries of scenario key1
                                      • scenario.key1.code : a json string of code of scenario key1
             scenarios = \{\}
                       The scenarios
             shutdown()
                       Shutdown the scenario manager
                        Store the scenarios to titanic store
            update (name='scenar1', entries={}, code=None, conf={})
                        Update a scenario
raspy.servers.fake module
class raspy.servers.fake.Fake(hostname='localhost', service='fake', broker_ip='127.0.0.1',
                                                                                    broker\_port=5514)
            Bases: raspy.common.server.Server
             A fake server to test RasPy
                      •we must developp "real" fake device : ie a temperature sensors must not send random values
                      •a cyclic sensor: parameters: cycle length, min, max and unit. Will do cycle from min temp to max
                       temp (at cycle/2) and fall back tp min temp at end of if
                      •a linear sensor
            worker_devices()
                       Create a worker to handle devices requests
```

raspy.servers.onewire module

```
class raspy.servers.onewire.OneWire(hostname='localhost',
                                                                       service='onewire',
                                                                                             bro-
                                              ker_ip='127.0.0.1',
                                                                      broker_port=5514,
                                                                                              de-
                                              vices_dir='/sys/bus/w1/devices')
     Bases: raspy.common.server.Server
     The OneWire server
     From https://www.modmypi.com/blog/ds18b20-one-wire-digital-temperature-sensor-and-the-raspberry-pi
     worker_devices()
          Create a worker to handle devices requests
raspy.servers.titanic module
class raspy.servers.titanic.Titanic(hostname='localhost',
                                                                                 service='titanic',
                                              broker_ip='127.0.0.1',
                                                                               broker_port=5514,
                                              data dir='/tmp/raspy')
     Bases: raspy.common.executive.Executive
     The Titanic helper
     Also integrates a store for keys/values
     From http://zguide.zeromq.org/py:all#Disconnected-Reliability-Titanic-Pattern
          http://zguide.zeromq.org/py:all#Service-Oriented-Reliable-Queuing-Majordomo-Pattern
          https://github.com/imatix/zguide/tree/master/examples/Python
     reply_filename (uuid)
          Returns freshly allocated reply filename for given UUID
     request_filename(uuid)
          Returns freshly allocated request filename for given UUID
     run()
          Run the hub
     service_success(client, uuid)
          Attempt to process a single request, return True if successful
      store_filename (service)
          Returns store filename for given service
     titanic_close()
          Create a worker to handle titanic.close
          titanic.close: confirm that a reply has been stored and processed.
     titanic_reply()
          Create a worker to handle titanic.service
          titanic.reply: fetch a reply, if available, for a given request UUID.
     titanic_request (pipe)
          Create a worker to handle titanic.request
          titanic.request: store a request message, and return a UUID for the request.
```

titanic_store()

Create a worker to handle store services

Module contents

3.2 Module contents

3.2. Module contents 21

r raspy, 21 raspy.common, 15 raspy.common.client,8 raspy.common.devices, 7 raspy.common.devices.device, 5 raspy.common.devices.media,6 raspy.common.devices.sensor,7 raspy.common.dynamic, 8 raspy.common.executive, 8 raspy.common.kvcliapi,9 raspy.common.kvsimple,9 raspy.common.mdcliapi, 10 raspy.common.MDP, 7 raspy.common.mdwrkapi,11 raspy.common.runner, 11 raspy.common.server, 13 raspy.common.statistics, 13 raspy.common.supervisor, 14 raspy.common.zhelpers, 14 raspy.servers, 21 raspy.servers.broker, 15 raspy.servers.core, 17 raspy.servers.fake, 19 raspy.servers.onewire, 20 raspy.servers.titanic,20

A	ctx (raspy.servers.broker.Broker attribute), 16	
action_funcs (raspy.common.runner.Runner attribute), 12	D	
add() (raspy.servers.core.ScenarioManager method), 19 add_statistic() (raspy.common.statistics.Statistics	delete() (raspy.servers.core.ScenarioManager method), 19	
method), 14 address (raspy.servers.broker.Worker attribute), 17	delete_worker() (raspy.servers.broker.Broker method), 16	
app_reload() (raspy.common.runner.Runner method), 12	destroy() (raspy.common.executive.Executive method), 8	
app_run() (raspy.common.runner.Runner method), 12 app_shutdown() (raspy.common.runner.Runner	destroy() (raspy.common.kvcliapi.KvPublisherClient method), 9	
method), 12 aps_job (raspy.servers.core.Cron attribute), 18	destroy() (raspy.common.kvcliapi.KvSubscriberClient method), 9	
B	destroy() (raspy.common.mdcliapi.MajorDomoClient method), 10	
BaseDevice (class in raspy.common.devices.device), 5 body (raspy.common.kvsimple.KVMsg attribute), 10	destroy() (raspy.common.mdwrkapi.MajorDomoWorker method), 11	
Broker (class in raspy.servers.broker), 15 broker (raspy.common.mdcliapi.MajorDomoClient at- tribute), 10	destroy() (raspy.servers.broker.Broker method), 16 DeviceRegister (class in raspy.common.devices.device), 6	
broker (raspy.common.mdwrkapi.MajorDomoWorker attribute), 11	dispatch() (raspy.servers.broker.Broker method), 16 do_action() (raspy.common.runner.Runner method), 12	
C	dump() (in module raspy.common.zhelpers), 14 dump() (raspy.common.kvsimple.KVMsg method), 10	
check() (raspy.common.devices.device.BaseDevice method), 6	E	
check() (raspy.common.devices.device.DeviceRegister method), 6	emit_message() (in module raspy.common.runner), 13 entries (raspy.servers.core.Scenario attribute), 18	
check() (raspy.common.devices.media.MediaDevice method), 6	Executive (class in raspy.common.executive), 8 ExecutiveProcess (class in raspy.common.executive), 8	
check() (raspy.common.devices.sensor.SensorDevice method), 7	expect_reply (raspy.common.mdwrkapi.MajorDomoWorker attribute), 11	
Client (class in raspy.common.client), 8 client (raspy.common.mdcliapi.MajorDomoClient at-	expiry (raspy.servers.broker.Worker attribute), 17	
tribute), 10	F	
ClientError, 7	Fake (class in raspy.servers.fake), 19	
code (raspy.servers.core.Scenario attribute), 18	fire() (raspy.servers.core.Scenario method), 18	
conf (raspy.servers.core.Scenario attribute), 18 Core (class in raspy.servers.core), 17	fullname() (raspy.common.devices.device.BaseDevice	
Cron (class in raspy.servers.core), 17 Cron (class in raspy.servers.core), 18	method), 6	
CronManager (class in raspy.servers.core), 18	G	
ctx (raspy.common.mdcliapi.MajorDomoClient at- tribute), 10	GenericError, 8	
ctx (raspy.common.mdwrkapi.MajorDomoWorker attribute), 11	get_instance_id() (raspy.common.executive.Executive method), 8	

get_instance_id() (raspy.common.supervisor.Supervisor method), 14	make_pidlockfile() (in module raspy.common.runner), 13	
Н	MediaCamera (class in raspy.common.devices.media),	
heartbeat (raspy.common.mdwrkapi.MajorDomoWorker	MediaDevice (class in raspy.common.devices.media), 6 MediaTV (class in raspy.common.devices.media), 7	
heartbeat_at (raspy.common.mdwrkapi.MajorDomoWork attribute), 11	N .	
heartbeat_at (raspy.servers.broker.Broker attribute), 16 HEARTBEAT_EXPIRY (raspy.servers.broker.Broker	name (raspy.common.devices.device.BaseDevice attribute), 6	
attribute), 15 HEARTBEAT_INTERVAL (raspy.servers.broker.Broker attribute),	name (raspy.servers.broker.Service attribute), 17 new() (raspy.common.devices.device.BaseDevice method), 6	
15 HEARTBEAT_LIVENESS	new() (raspy.common.devices.device.DeviceRegister method), 6	
(raspy.common.mdwrkapi.MajorDomoWorker attribute), 11	new() (raspy.common.devices.media.MediaCamera method), 6	
HEARTBEAT_LIVENESS (raspy.servers.broker.Broker attribute),	new() (raspy.common.devices.media.MediaTV method), 7	
15	new() (raspy.common.devices.sensor.SensorTemperature method), 7	
identity (recover converse broken Werken ettribute) 17	new() (raspy.common.devices.sensor.SensorWind method), 7	
identity (raspy.servers.broker.Worker attribute), 17 importCode() (in module raspy.common.dynamic), 8 INTERNAL_SERVICE_PREFIX	O	
(raspy.servers.broker.Broker attribute), 15	oid (raspy.common.devices.device.BaseDevice attribute), 6	
is_pidfile_stale() (in module raspy.common.runner), 13	oid (raspy.common.devices.media.MediaCamera attribute), 6	
J	oid (raspy.common.devices.media.MediaDevice attribute), 7	
jobs (raspy.servers.core.CronManager attribute), 18 json (raspy.common.devices.device.BaseDevice at- tribute), 6	oid (raspy.common.devices.media.MediaTV attribute),	
K	oid (raspy.common.devices.sensor.SensorDevice	
key (raspy.common.kvsimple.KVMsg attribute), 10	attribute), 7 oid (raspy.common.devices.sensor.SensorTemperature attribute), 7	
KVMsg (class in raspy.common.kvsimple), 9 KvPublisherClient (class in raspy.common.kvcliapi), 9 KvSubscriberClient (class in raspy.common.kvcliapi),	oid (raspy.common.devices.sensor.SensorWind attribute), 7	
9	OneWire (class in raspy.servers.onewire), 20	
L	P	
list() (raspy.servers.core.ScenarioManager method), 19 list_keys() (raspy.servers.core.ScenarioManager	parse_args() (raspy.common.runner.Runner method), 12	
method), 19 liveness (raspy.common.mdwrkapi.MajorDomoWorker	poller (raspy.common.mdcliapi.MajorDomoClient attribute), 10	
attribute), 11 load() (raspy.servers.core.Scenario method), 18	poller (raspy.servers.broker.Broker attribute), 16 process_client() (raspy.servers.broker.Broker method),	
load() (raspy.servers.core.ScenarioManager method), 19	process_worker() (raspy.servers.broker.Broker	
logger (in module raspy.common.MDP), 8	method), 16 Proxy (class in raspy.servers.broker), 16	
M	purge_workers() (raspy.servers.broker.Broker method),	
MajorDomoClient (class in raspy.common.mdcliapi),	16	
10 MajorDomoWorker (class in	R	
raspy.common.mdwrkapi), 11	raspy (module), 21 raspy.common (module), 15	

26 Index

raspy.common.client (module), 8	method), 9
raspy.common.devices (module), 7	run() (raspy.common.kvcliapi.KvSubscriberClient
raspy.common.devices.device (module), 5	method), 9
raspy.common.devices.media (module), 6	run() (raspy.common.supervisor.Supervisor method),
raspy.common.devices.sensor (module), 7	14
raspy.common.dynamic (module), 8	run() (raspy.servers.broker.Broker method), 16
raspy.common.executive (module), 8	run() (raspy.servers.broker.Proxy method), 17
raspy.common.kvcliapi (module), 9	run() (raspy.servers.core.Scenario method), 18
raspy.common.kvsimple (module), 9	run() (raspy.servers.titanic.Titanic method), 20
raspy.common.mdcliapi (module), 10	Runner (class in raspy.common.runner), 12
raspy.common.MDP (module), 7	RunnerError, 12
raspy.common.mdwrkapi (module), 11	RunnerInvalidActionError, 12
raspy.common.runner (module), 11	RunnerStartFailureError, 13
raspy.common.server (module), 13	RunnerStopFailureError, 13
raspy.common.statistics (module), 13	running (raspy.servers.core.Scenario attribute), 18
	running (raspy.servers.core.scenario attribute), 18
raspy.common.supervisor (module), 14	S
raspy.common.zhelpers (module), 14	
raspy.servers (module), 21	Scenario (class in raspy.servers.core), 18
raspy.servers.broker (module), 15	ScenarioManager (class in raspy.servers.core), 18
raspy.servers.core (module), 17	scenarios (raspy.servers.core.ScenarioManager at-
raspy.servers.fake (module), 19	tribute), 19
raspy.servers.onewire (module), 20	send() (raspy.common.kvcliapi.KvPublisherClient
raspy.servers.titanic (module), 20	method), 9
reconnect (raspy.common.mdwrkapi.MajorDomoWorker	send() (raspy.common.kvsimple.KVMsg method), 10
attribute), 11	send() (raspy.common.mdcliapi.MajorDomoClient
reconnect_to_broker() (raspy.common.mdcliapi.MajorDo	omoClient method), 10
method), 10	send_heartbeats() (raspy.servers.broker.Broker
reconnect_to_broker() (raspy.common.mdwrkapi.MajorD	OomoWorkerhethod), 16
method), 11	send_single() (raspy.servers.broker.Proxy method), 17
recv() (raspy.common.kvsimple.KVMsg class method),	send_to_broker() (raspy.common.mdwrkapi.MajorDomoWorke
10	method), 11
recv() (raspy.common.mdwrkapi.MajorDomoWorker	send_to_worker() (raspy.servers.broker.Broker
method), 11	method), 16
register() (raspy.common.devices.device.DeviceRegister	SensorDevice (class in raspy.common.devices.sensor),
method), 6	7
reload() (raspy.common.supervisor.Supervisor	SensorTemperature (class in
method), 14	raspy.common.devices.sensor), 7
remove_statistic() (raspy.common.statistics.Statistics	SansorWind (class in raspy common devices sensor) 7
method), 14	sequence (raspy.common.kvsimple.KVMsg attribute),
reply_filename() (raspy.servers.titanic.Titanic method),	1()
20	Server (class in raspy.common.server), 13
reply_to (raspy.common.mdwrkapi.MajorDomoWorker	ServerError, 8
attribute), 11	
request() (raspy.common.client.Client method), 8	Service (class in raspy.servers.broker), 17
request_filename() (raspy.servers.titanic.Titanic	service (raspy.common.mdwrkapi.MajorDomoWorker
method), 20	attribute), 11
requests (raspy.servers.broker.Service attribute), 17	service (raspy.servers.broker.Worker attribute), 17
	service_internal() (raspy.servers.broker.Broker
require_service() (raspy.servers.broker.Broker method),	method), 16
16	service_success() (raspy.servers.titanic.Titanic
require_worker() (raspy.servers.broker.Broker method),	method), 20
16	services (raspy.servers.broker.Broker attribute), 16
retries (raspy.common.mdcliapi.MajorDomoClient at-	set() (raspy.common.statistics.SNMP method), 13
tribute), 10	set() (raspy.common.statistics.SNMPCounter method),
Route (class in raspy.servers.broker), 17	13
routing_key() (in module raspy.common.MDP), 8	set_id() (in module raspy.common.zhelpers), 15
run() (raspy.common.client.Client method), 8	shutdown() (raspy.common.executive.Executive
run() (raspy.common.executive.Executive method), 8	method), 8
run() (raspy.common.executive.ExecutiveProcess	

Index 27

run()

```
shutdown() (raspy.common.executive.ExecutiveProcess
                                                       titanic_request() (raspy.servers.titanic.Titanic method),
         method), 9
shutdown() (raspy.common.kvcliapi.KvSubscriberClient titanic_store() (raspy.servers.titanic.Titanic method), 20
         method), 9
shutdown() \ (raspy.common.mdwrkapi.MajorDomoWorker U
         method), 11
                                                       update() (raspy.servers.core.ScenarioManager method),
                (raspy.common.supervisor.Supervisor
shutdown()
         method), 14
                                                       update_statistic()
                                                                           (raspy.common.statistics.Statistics
shutdown() (raspy.servers.broker.Broker method), 16
                                                                 method), 14
shutdown() (raspy.servers.broker.Proxy method), 17
shutdown() (raspy.servers.core.Scenario method), 18
shutdown()
                 (raspy.servers.core.ScenarioManager
                                                       verbose (raspy.common.mdcliapi.MajorDomoClient at-
         method), 19
                                                                 tribute), 10
sighup_handler()
                       (raspy.common.runner.Runner
                                                       verbose (raspy.common.mdwrkapi.MajorDomoWorker
         method), 12
                                                                 attribute), 11
sigterm_handler()
                       (raspy.common.runner.Runner
         method), 12
                                                       W
SNMP (class in raspy.common.statistics), 13
                                                       waiting (raspy.servers.broker.Broker attribute), 16
SNMPCounter (class in raspy.common.statistics), 13
                                                       waiting (raspy.servers.broker.Service attribute), 17
SNMPFloat (class in raspy.common.statistics), 13
                                                       Worker (class in raspy.servers.broker), 17
SNMPString (class in raspy.common.statistics), 13
                                                       worker (raspy.common.mdwrkapi.MajorDomoWorker
socket (raspy.servers.broker.Broker attribute), 16
                                                                 attribute), 11
start_message (raspy.common.runner.Runner attribute),
                                                       worker cron() (raspy.servers.core.Core method), 18
                                                       worker devices() (raspy.servers.fake.Fake method), 19
Statistics (class in raspy.common.statistics), 14
                                                       worker devices()
                                                                              (raspy.servers.onewire.OneWire
        (raspy.common.mdwrkapi.MajorDomoWorker
status
                                                                 method), 20
         attribute), 11
                                                       worker_mmi() (raspy.common.server.Server method),
status() (raspy.common.client.Client method), 8
status_message_not_running
                                                       worker_scenario() (raspy.servers.core.Core method), 18
         (raspy.common.runner.Runner
                                            attribute),
                                                       worker_scenarios() (raspy.servers.core.Core method),
status_message_running (raspy.common.runner.Runner
                                                       worker_statistics() (raspy.common.statistics.Statistics
         attribute), 12
                                                                 method), 14
stop_executives() (raspy.common.supervisor.Supervisor
                                                       worker_waiting()
                                                                                  (raspy.servers.broker.Broker
         method), 14
                                                                 method), 16
store() (raspy.common.kvsimple.KVMsg method), 10
                                                       workers (raspy.servers.broker.Broker attribute), 16
store() (raspy.servers.core.Scenario method), 18
store() (raspy.servers.core.ScenarioManager method),
                                                       7
                                                       zpipe() (in module raspy.common.zhelpers), 15
store_filename() (raspy.servers.titanic.Titanic method),
Supervisor (class in raspy.common.supervisor), 14
Т
template (raspy.common.devices.device.BaseDevice at-
         tribute), 6
templates
           (raspy.common.devices.device.BaseDevice
         attribute), 6
timeout (raspy.common.mdcliapi.MajorDomoClient at-
         tribute), 10
timeout (raspy.common.mdwrkapi.MajorDomoWorker
         attribute), 11
Titanic (class in raspy.servers.titanic), 20
titanic_close() (raspy.servers.titanic.Titanic method),
         20
titanic_reply() (raspy.servers.titanic.Titanic method),
         20
```

28 Index