# **Project Description**

Friday, January 18, 2019 1:46 PM

# Carputer

The Carputer project came about from the need to have a simple backup car camera. Instead of buying an off-the-shelf solution I decided to build my own solution. Looking at different solutions; Intel NUC, OpenCV, JavaFX, Arduino, RaspberryPi the simplest solution appears to be to implement MotionEye on the Raspberry Pi for video streaming. The Raspberry Pi will also act as an access point which will allow and Android device to display the streaming video.

The decision was also made to utilize an Android tablet to display the streaming video from the Raspberry Pi's hosting MotionEye. The alternative was to use a similar size video monitor. The benefits of utilizing and Android device is the versatility. Another benefit of Android is to gain experience in creating applications for a mobile device. It has other applications and features that can used other than streaming video, such as music, maps, etc.. In addition, the Android device does not have to be left in the vehicle.

# The rollout plan is to:

- 1. PRIMARY GOAL -> Display streaming video from Raspberry PI running MotionEye.
- 2. SECONDARY GOAL -> Display of OBD-II/CANBUS data. Raspberry PI will connect to OBD-II/CANBUS.
- 3. STRETCH GOAL -> Play music.
- 4. STRETCH GOAL -> Location services. Maps.
- 5. STRETCH GOAL -> Sync data. Upload data to cloud.


Architecture
Wednesday, April 12, 2017 5:04 PM
, , , , , , , , , , , , , , , , , , ,
• Computer
RaspberryPi 3 Model B+
OS: Raspbian
■ Hostname: Carputer
Main computer
Acts as WiFI access point: PINET
■ Hosts MotionEye
Camera config for front camera
Camera config for rear camera
◆ Camera type is network
Raspberry Pi Zero W is host for rear camera
■ Host for Front Camera
□ USB camera
<ul> <li>Running phpSysInfo</li> </ul>
□ Just because we can
■ Mounting: TBD
Raspberry Pi Zero W
OS: Raspbian
■ Hostname: Carputer-Rear
■ Hosts MotionEye
■ WiFI connection to PINET
■ Host for Rear Camera
□ USB camera
or
□ Raspberry Pi Camera Pi v2 - 8 megapixel
Mounting: TBD
Display
O Android Tablet
Google Nexus 7 (post 2013)
Custom Android application
□ App name: Carputer
☐ GitHub: https://github.com/billdoerr/Android-Carputer
■ WiFi connection to PINET
Able to utilize other Android features; Location, Compass, Music, Maps, etc
Mounting: TBD
- Wiounting: TBD
Android Application
O App name: Carputer
GitHub: https://github.com/billdoerr/Android-Carputer
o Features
■ MJPEG View
□ Front camera view
◆ Ability to capture snapshot
□ Rear camera view
◆ Ability to capture snapshot

		□ Dual-	
		•	Front/Rear camera view, display horizontally
	_	Web View	
			owing MetionEve
			ewing MotionEye
			ewing phpSysInfo
		□ Abilit	y to take snapshot of screen
	-	lmage Arch	ive
			iew snapshots taken
			to delete snapshots
			o delete silapsilots
	<u> </u>	SSH	
		□ Com	plete hack!
			to power off RaspberryPi's
			ins un-editable list of commonly used/needed commands
			to manually execute a common via soft keyboard
	•	Settings	
		□ Came	ra config
		•	Ability to enable front or rear or both cameras
			♦ Front
			▶ On or Off
			♦ Rear
			▶ On or Off
			♦ Dual-view
			▶ On or Off
		•	Contains setting for camera streaming url's
			♦ http://IP:PORT
		□ Raspk	perryPi config
			Currently contains only configuration for Carputer
			Config for multiple RaspberryPi's not implemented yet
		•	Settings for MotionEye
		•	Settings for phpSysInfo
		•	Settings for SSH
			♦ IP
			♦ User
			♦ Pwd
<del>                                     </del>	Pouter		
•	Router	F. 5 - 5	
		erryPi 3 Mo	
	O WiFi A	ccess Point	only, no internet
		WiFi netwo	rk id: PINET
•	Camera		
	o Front		
	-	RaspberryP	i 3 Model B+
			B Camera (HD Pro Webcam C920)
	o Rear	78.13311 33	
		Dage la a company	1: 7- W
		Raspberry F	
	++++	Logitech US	B Camera (HD Pro Webcam C920)
		or	
		Raspberry F	ri Camera Pi v2 - 8 megapixel
	o Left		
	Leit		

Not deployed  Not deployed  Not deployed  Storage  OS  SanDisk 32GB Ultra microSDHC  MotionEye a rchive  SanDisk 64GB Cruzer Blade CZ50 USB 2.0 Flash Drive  One week retention of archived video  Power  Cigarette lighter adapter, Usb Power  No power when automobile is not engaged  Two units  Power for main computer  Power for rear camera  Output, shared  Sy DC  2.4A  1.0A  Input  12 - 24V DC  Cable  USB Type A - USB Micro Type B  Carputer Faear to cigarette lighter power adapter  USB Type A - USB Micro Type B  Carputer Rear to cigarette lighter power adapter  USB Type A - USB Micro Type B  Carputer Rear to cigarette lighter power adapter  USB Type A - USB Micro Type B  Carputer Rear to cigarette lighter power adapter  Android Tablet  Only needed if table power is low  USB Type A - USB Micro Type B  Carputer and to cigarette lighter power adapter  Android Tablet  Chyp repeature  Android Tablet  Chyp repeature  USB Type A - USB Micro Type B  Carputer and to cigarette lighter power adapter  Outpy repeature  Inside  Outside  OBD-II  Bluetooth  Music - implement at a later date	
Storage OS SanDisk 32GB Ultra microSDHC MotionEye archive SanDisk 64GB Cruzer Blade CZ50 USB 2.0 Flash Drive One week retention of archived video  Power Cigarette lighter adapter, Usb Power No power when automobile is not engaged Tivo units Power for main computer Power for rear camera Output, shared Sy DC Su 2.4 A Su 1.0 A Input Su 12 - 24V DC  Cable USB Type A - USB Micro Type B Carputer to digarette lighter power adapter Sist Type B Carputer to digarette lighter power adapter Sist Type B Carputer A - USB Micro Type B Carputer Rot Signer Stranger Sist Type B Carputer Sist Signer Sist Sist Sist Sist Sist Sist Sist Sist	100000000000000000000000000000000000000
Storage  O S  SanDisk 32GB Ultra microSDHC  MotionEye archive  SanDisk 64GB Cruzer Blade C250 USB 2.0 Flash Drive  One week retention of archived video  Power  Cigarette lighter adapter, Usb Power  No power when automobile is not engaged  Two units  Power for main computer  Power for rear camera  Output, shared  SYDC  2.4 A  1.0 A  Input  12 - 24V DC  Cable  USB Type A - USB Micro Type B  Carputer to Gigarette lighter power adapter  USB Type A - USB Micro Type B  Carputer to Gigarette lighter power adapter  Android Tablet  Only needed if table power is low  USB Type A - USB Micro Type B  Carputer Needed if table power is low  USB Type A - USB Micro Type B  Carputer Team to cigarette lighter power adapter  Sensors - implement at a later date  GPS  Accelerometer  Compass  Temperature  Inside  Outside  OBD-II  Bluetooth	
SanDisk 32GB Ultra microSDHC  MotionEye archive  SanDisk 64GB Cruzer Blade C250 USB 2.0 Flash Drive  One week retention of archived video  Power  Cigarette lighter adapter, Usb Power  No power when automobile is not engaged  Two units  Power for main computer  Power for rear camera  Output, shared  SV DC  2.4 A  1.0 A  Input  12 - 24V DC  Cable  USB Type A - USB Micro Type B  Carputer to cigarette lighter power adapter  USB Type A - USB Micro Type B  Carputer to cigarette lighter power adapter  USB Type A - USB Micro Type B  Carputer to USB Type A - USB Micro Type B  Carputer to USB Type A - USB Micro Type B  Carputer Type A - USB Micro Type B  Carputer Type B  Carputer Type A - USB Micro Type B  Sensors - implement at a later date  GPS  Accelerometer  Compass  Temperature  Inside  Outside  OBD-II  Bluetooth	■ Not deployed
SanDisk 32GB Ultra microSDHC  MotionEye archive  SanDisk 64GB Cruzer Blade CZ50 USB 2.0 Flash Drive One week retention of archived video  Power  Cigarette lighter adapter, Usb Power  No power when automobile is not engaged Two units Power for main computer Power for rear camera Output, shared SV DC 2.4A 1.0A Input 12 - 24V DC  Cable USB Type A - USB Micro Type B Carputer to cigarette lighter power adapter USB Type A - USB Micro Type B Carputer to cigarette lighter power adapter USB Type A - USB Micro Type B Carputer Rear to cigarette lighter power adapter USB Type A - USB Micro Type B Carputer Rear to Cigarette lighter power adapter USB Type A - USB Micro Type B Carputer Rear to Ligarette lighter power adapter USB Type A - USB Micro Type B Carputer Rear to Ligarette lighter power adapter Android Tablet USB Type A - USB Micro Type B Carputer Rear to Ligarette lighter power adapter Android Tablet USB Type A - USB Micro Type B Carputer Rear to Ligarette lighter power adapter Android Tablet Android Tablet Carputer Rear to Ligarette lighter power adapter Android Tablet Carputer Rear to Cigarette lighter power adapter Android Tablet Carputer Rear to Cigarette lighter power adapter Android Tablet Carputer Rear to Cigarette lighter power adapter Android Tablet Carputer Rear to Cigarette lighter power adapter Android Tablet Carputer Rear to Cigarette lighter power adapter Android Tablet Carputer Rear to Cigarette lighter power adapter Android Tablet Carputer Rear to Cigarette lighter power adapter Android Tablet Carputer Rear to Cigarette lighter power adapter Carputer Rear to Cigarette	
SanDisk 32GB Ultra microSDHC  MotionEye archive  SanDisk 64GB Cruzer Blade CZ50 USB 2.0 Flash Drive One week retention of archived video  Power  Cigarette lighter adapter, Usb Power  No power when automobile is not engaged Two units Power for main computer Power for rear camera Output, shared SV DC 2.4A 1.0A Input 12 - 24V DC  Cable USB Type A - USB Micro Type B Carputer to cigarette lighter power adapter USB Type A - USB Micro Type B Carputer to cigarette lighter power adapter USB Type A - USB Micro Type B Carputer Rear to cigarette lighter power adapter USB Type A - USB Micro Type B Carputer Rear to Cigarette lighter power adapter USB Type A - USB Micro Type B Carputer Rear to Ligarette lighter power adapter USB Type A - USB Micro Type B Carputer Rear to Ligarette lighter power adapter Android Tablet USB Type A - USB Micro Type B Carputer Rear to Ligarette lighter power adapter Android Tablet USB Type A - USB Micro Type B Carputer Rear to Ligarette lighter power adapter Android Tablet Android Tablet Carputer Rear to Ligarette lighter power adapter Android Tablet Carputer Rear to Cigarette lighter power adapter Android Tablet Carputer Rear to Cigarette lighter power adapter Android Tablet Carputer Rear to Cigarette lighter power adapter Android Tablet Carputer Rear to Cigarette lighter power adapter Android Tablet Carputer Rear to Cigarette lighter power adapter Android Tablet Carputer Rear to Cigarette lighter power adapter Android Tablet Carputer Rear to Cigarette lighter power adapter Android Tablet Carputer Rear to Cigarette lighter power adapter Carputer Rear to Cigarette	
SanDisk 326B Ultra microSDHC  MotionEye archive SonDisk 64GB Cruzer Blade CZ50 USB 2.0 Flash Drive One week retention of archived video  Power Clgarette lighter adapter, Usb Power Clgarette lighter adapter, Usb Power No power when automobile is not engaged Two units Power for main computer Power for rear camera Output, shared Sy DC 2.4A 1.0A Input 12 - 24V DC  Cable Carputer to cigarette lighter power adapter USB Type A - USB Micro Type B Carputer to cigarette lighter power adapter Ondroid Tablet Only needed if table power is low USB Type A - USB Micro Type B USB Type A - USB Micro Type B Carputer No Android Tablet USB Type A - USB Micro Type B Carputer No Carputer No Search Type B Carputer No Carputer No Search Type B Carputer No Carputer No Search Type B Carputer No Search Type B Carputer No Search Type B Search Type A - USB Micro Type B Searc	Storage
MotionEye archive SanDisk 64GB Cruzer Blade CZ50 USB 2.0 Flash Drive One week retention of archived video  Power  Cigarette lighter adapter, Usb Power No power when automobile is not engaged Two units Power for main computer Power for rear camera Output, shared SUDC SUB Type A - USB Micro Type B Capiter Outside Subs Micro Type B Carputer to cigarette lighter power adapter USB Type A - USB Micro Type B Carputer are to cigarette lighter power adapter USB Type A - USB Micro Type B Carputer Automobile is low USB Type A - USB Micro Type B Carputer Automobile is low USB Type A - USB Micro Type B Carputer Automobile is low USB Type A - USB Micro Type B Carputer Automobile is low USB Type A - USB Micro Type B Sensors - implement at a later date GPS Accelerometer Compass Temperature Inside Ustide OUSD-III	o OS
SanDisk 64GB Cruzer Blade CZ50 USB 2.0 Flash Drive One week retention of archived video  Power  Cigarette lighter adapter, Usb Power No power when automobile is not engaged Two units Power for main computer Power for rear camera Output, shared Sy DC Sy DC Su Su Su Su DC Su S	■ SanDisk 32GB Ultra microSDHC
Power  Cigarette lighter adapter, Usb Power  No power when automobile is not engaged  Two units  Power for main computer  Power for rear camera  Output, shared  Stype A - USB Micro Type B  Carputer to cigarette lighter power adapter  USB Type A - USB Micro Type B  Carputer-Rear to cigarette lighter power adapter  USB Type A - USB Micro Type B  Carputer To pwe Is we will be supposed to the power adapter  USB Type A - USB Micro Type B  Carputer To pwe Is we will be supposed to the power adapter  USB Type A - USB Micro Type B  Carputer Rear to cigarette lighter power adapter  Android Tablet  Only needed if table power is low  USB Type A - USB Micro Type B  Sensors - implement at a later date  GPS  Accelerometer  Compass  Temperature  Inside  Outside  Outside  OBD-II  Bluetooth	MotionEye archive
Power  Cigarette lighter adapter, Usb Power  No power when automobile is not engaged  Two units  Power for main computer  Power for rear camera  Output, shared  SY DC  2 2 4 A  1.0 A  Input  12 - 24V DC  Cable  USB Type A - USB Micro Type B  Carputer to cigarette lighter power adapter  USB Type A - USB Micro Type B  Carputer-Rear to cigarette lighter power adapter  Android Tablet  Only needed if table power is low  USB Type A - USB Micro Type B  Carputer to Carputer to Carputer low  USB Type A - USB Micro Type B  Carputer Rear to Cigarette lighter power adapter  Android Tablet  Only needed if table power is low  USB Type A - USB Micro Type B  Sensors - implement at a later date  GPS  Accelerometer  Compass  Temperature  Inside  Outside  OBD-II  Bluetooth	■ SanDisk 64GB Cruzer Blade CZ50 USB 2.0 Flash Drive
Cigarette lighter adapter, Usb Power  No power when automobile is not engaged  Two units  Power for main computer Power for rear camera  Output, shared SV DC P. 2.4 A P. 1.0 A Input P. 12 - 24V DC  Cable  USB Type A - USB Micro Type B Carputer to cigarette lighter power adapter USB Type A - USB Micro Type B Carputer at o cigarette lighter power adapter Android Tablet P. Only needed if table power is low USB Type A - USB Micro Type B Carputer be carputer to cigarette lighter power adapter Android Tablet P. Only needed if table power is low USB Type A - USB Micro Type B  Sensors - implement at a later date GPS Accelerometer Compass Temperature Inside Outside OBD-II Bluetooth	One week retention of archived video
Cigarette lighter adapter, Usb Power  No power when automobile is not engaged  Two units  Power for main computer Power for rear camera  Output, shared SV DC P. 2.4 A P. 1.0 A Input P. 12 - 24V DC  Cable  USB Type A - USB Micro Type B Carputer to cigarette lighter power adapter USB Type A - USB Micro Type B Carputer at o cigarette lighter power adapter Android Tablet P. Only needed if table power is low USB Type A - USB Micro Type B Carputer be carputer to cigarette lighter power adapter Android Tablet P. Only needed if table power is low USB Type A - USB Micro Type B  Sensors - implement at a later date GPS Accelerometer Compass Temperature Inside Outside OBD-II Bluetooth	
Cigarette lighter adapter, Usb Power  No power when automobile is not engaged  Two units  Power for main computer Power for rear camera  Output, shared SV DC P. 2.4 A P. 1.0 A Input P. 12 - 24V DC  Cable  USB Type A - USB Micro Type B Carputer to cigarette lighter power adapter USB Type A - USB Micro Type B Carputer at o cigarette lighter power adapter Android Tablet P. Only needed if table power is low USB Type A - USB Micro Type B Carputer be carputer to cigarette lighter power adapter Android Tablet P. Only needed if table power is low USB Type A - USB Micro Type B  Sensors - implement at a later date GPS Accelerometer Compass Temperature Inside Outside OBD-II Bluetooth	
No power when automobile is not engaged  Two units Power for main computer Power for rear camera Output, shared Sy DC 2.4 A 1.0 A 1.0 A Input VIZ - 24V DC  Cable USB Type A - USB Micro Type B Carputer to cigarette lighter power adapter USB Type A - USB Micro Type B Carputer-Rear to cigarette lighter power adapter Android Tablet Olys Type A - USB Micro Type B Carputer-Rear to cigarette lighter power adapter Android Tablet Only needed if table power is low USB Type A - USB Micro Type B  Sensors - implement at a later date GPS Accelerometer Compass Temperature Inside OUSD-II Sluetooth  Bluetooth	Power
No power when automobile is not engaged  Two units Power for main computer Power for rear camera Output, shared Sy DC 2.4 A 1.0 A 1.0 A Input VIZ - 24V DC  Cable USB Type A - USB Micro Type B Carputer to cigarette lighter power adapter USB Type A - USB Micro Type B Carputer-Rear to cigarette lighter power adapter Android Tablet Olys Type A - USB Micro Type B Carputer-Rear to cigarette lighter power adapter Android Tablet Only needed if table power is low USB Type A - USB Micro Type B  Sensors - implement at a later date GPS Accelerometer Compass Temperature Inside OUSD-II Sluetooth  Bluetooth	Cigarette lighter adapter, Usb Power
■ Two units ■ Power for main computer ■ Power for rear camera Output, shared ■ SV DC ■ 2.4 A ■ 1.0 A □ Input ■ 12 - 24V DC  ■ Cable □ USB Type A - USB Micro Type B ■ Carputer to cigarette lighter power adapter □ USB Type A - USB Micro Type B ■ Carputer Rear to cigarette lighter power adapter □ USB Type A - USB Micro Type B ■ USB Type A - USB Micro Type B ■ Carputer No cigarette lighter power adapter □ USB Type A - USB Micro Type B ■ Carputer No cigarette lighter power adapter □ Android Tablet ■ Only needed if table power is low ■ USB Type A - USB Micro Type B ■ Carputer No Compass ■ USB Type A - USB Micro Type B ■ Carputer No Compass □ Temperature ■ Inside ■ Outside ■ Outside ■ Outside ■ Outside ■ Outside ■ Outside	
Power for main computer Power for rear camera Output, shared SYDC 1.2.4 A 1.0 A Input 1.0 A Input Substituting the power adapter USB Type A - USB Micro Type B Carputer to cigarette lighter power adapter USB Type A - USB Micro Type B Carputer-Rear to cigarette lighter power adapter Android Tablet Only needed if table power is low USB Type A - USB Micro Type B Sensors - implement at a later date GPS Accelerometer Compass Temperature Inside Voutside OBD-II Bluetooth	
Power for rear camera  Output, shared  Sy DC  2.4 A  1.0 A  Input  12 - 24V DC  Cable  Carputer to cigarette lighter power adapter  USB Type A - USB Micro Type B  Carputer-Rear to cigarette lighter power adapter  Android Tablet  Only needed if table power is low  USB Type A - USB Micro Type B  Carputer-Rear to cigarette lighter power adapter  Android Tablet  Only needed if table power is low  USB Type A - USB Micro Type B  Sensors - implement at a later date  GPS  Accelerometer  Compass  Temperature  Inside  Outside  OBD-II  Bluetooth	
Output, shared  5 V DC  2.4 A  1.0 A  Input  12 - 24V DC  Cable  USB Type A - USB Micro Type B  Carputer to cigarette lighter power adapter  USB Type A - USB Micro Type B  Carputer-Rear to cigarette lighter power adapter  Android Tablet  Only needed if table power is low  USB Type A - USB Micro Type B  Sensors - implement at a later date  GPS  Accelerometer  Compass  Temperature  Inside  OUSB-II  Bluetooth	
Sensors - implement at a later date  Sensors - implement at a later date  GPS  Accelerometer  Compass  Temperature  Inside  OUSB Type  Inside  OUSB Type  OUSB Type A - USB Micro Type B  Carputer-Rear to cigarette lighter power adapter  Ousb Type A - USB Micro Type B  Carputer-Rear to cigarette lighter power adapter  Output Tablet  Output Tablet  Output Tablet  Output Tablet  Output Table Tuber Type B	
■ 2.4 A ■ 1.0 A ○ Input ■ 12 - 24V DC  ■ Cable ○ USB Type A - USB Micro Type B ■ Carputer to cigarette lighter power adapter ○ USB Type A - USB Micro Type B ■ Carputer-Rear to cigarette lighter power adapter ○ Android Tablet ■ Only needed if table power is low ■ USB Type A - USB Micro Type B ■ Carputer-Rear to cigarette lighter power adapter ○ Android Tablet ■ Only needed if table power is low ■ USB Type A - USB Micro Type B ■ Carputer-Rear to cigarette lighter power adapter ■ Only needed if table power is low ■ USB Type A - USB Micro Type B ■ USB Type A - USB Micro Type B ■ Outside ■ Outside ■ Outside ■ Outside ■ Outside ■ Outside ■ Bluetooth	
Input	
Cable      USB Type A - USB Micro Type B     Carputer to cigarette lighter power adapter     USB Type A - USB Micro Type B     Carputer-Rear to cigarette lighter power adapter     Android Tablet     Only needed if table power is low     USB Type A - USB Micro Type B      Sensors - implement at a later date     GPS     Accelerometer     Compass     Temperature     Inside     Outside     OBD-II     Bluetooth	
Cable  USB Type A - USB Micro Type B  Carputer to cigarette lighter power adapter  USB Type A - USB Micro Type B  Carputer-Rear to cigarette lighter power adapter  Android Tablet  Only needed if table power is low  USB Type A - USB Micro Type B  Sensors - implement at a later date  GPS  Accelerometer  Compass  Temperature  Inside  OBD-II  Bluetooth	
Cable  USB Type A - USB Micro Type B  Carputer to cigarette lighter power adapter  USB Type A - USB Micro Type B  Carputer-Rear to cigarette lighter power adapter  Android Tablet  Only needed if table power is low  USB Type A - USB Micro Type B  Sensors - implement at a later date  GPS  Accelerometer  Compass  Temperature  Inside  OBD-II  Bluetooth	
USB Type A - USB Micro Type B  Carputer to cigarette lighter power adapter  USB Type A - USB Micro Type B  Carputer-Rear to cigarette lighter power adapter  Android Tablet  Only needed if table power is low  USB Type A - USB Micro Type B  Sensors - implement at a later date  GPS  Accelerometer  Compass  Temperature  Inside  Outside  OBD-II  Bluetooth	12 24 DC
USB Type A - USB Micro Type B  Carputer to cigarette lighter power adapter  USB Type A - USB Micro Type B  Carputer-Rear to cigarette lighter power adapter  Android Tablet  Only needed if table power is low  USB Type A - USB Micro Type B  Sensors - implement at a later date  GPS  Accelerometer  Compass  Temperature  Inside  Outside  OBD-II  Bluetooth	
USB Type A - USB Micro Type B  Carputer to cigarette lighter power adapter  USB Type A - USB Micro Type B  Carputer-Rear to cigarette lighter power adapter  Android Tablet  Only needed if table power is low  USB Type A - USB Micro Type B  Sensors - implement at a later date  GPS  Accelerometer  Compass  Temperature  Inside  Outside  OBD-II  Bluetooth	a Cabla
■ Carputer to cigarette lighter power adapter  ○ USB Type A - USB Micro Type B  ■ Carputer-Rear to cigarette lighter power adapter  ○ Android Tablet  ■ Only needed if table power is low ■ USB Type A - USB Micro Type B  ■ Sensors - implement at a later date ○ GPS ○ Accelerometer ○ Compass ○ Temperature ■ Inside ■ Outside ● Outside ● OBD-II ■ Bluetooth	
<ul> <li>USB Type A - USB Micro Type B</li> <li>Carputer-Rear to cigarette lighter power adapter</li> <li>Android Tablet</li> <li>Only needed if table power is low</li> <li>USB Type A - USB Micro Type B</li> <li>Sensors - implement at a later date</li> <li>GPS</li> <li>Accelerometer</li> <li>Compass</li> <li>Temperature</li> <li>Inside</li> <li>Outside</li> <li>OBD-II</li> <li>Bluetooth</li> </ul>	
■ Carputer-Rear to cigarette lighter power adapter  Android Tablet ■ Only needed if table power is low ■ USB Type A - USB Micro Type B  Sensors - implement at a later date  GPS Accelerometer Compass Temperature ■ Inside ■ Outside OBD-II ■ Bluetooth ■ Bluetooth	
<ul> <li>Android Tablet         <ul> <li>Only needed if table power is low</li> <li>USB Type A - USB Micro Type B</li> </ul> </li> <li>Sensors - implement at a later date         <ul> <li>GPS</li> <li>Accelerometer</li> <li>Compass</li> <li>Temperature</li> <li>Inside</li> <li>Outside</li> <li>OBD-II</li> <li>Bluetooth</li> </ul> </li> </ul>	
<ul> <li>Only needed if table power is low</li> <li>USB Type A - USB Micro Type B</li> <li>Sensors - implement at a later date</li> <li>GPS</li> <li>Accelerometer</li> <li>Compass</li> <li>Temperature</li> <li>Inside</li> <li>OUtside</li> <li>OBD-II</li> <li>Bluetooth</li> </ul>	
■ USB Type A - USB Micro Type B  ■ Sensors - implement at a later date  ○ GPS ○ Accelerometer ○ Compass ○ Temperature ■ Inside ■ Outside ○ OBD-II ■ Bluetooth	
Sensors - implement at a later date  GPS Accelerometer Compass Temperature Inside Outside OBD-II Bluetooth  Bluetooth	
O GPS O Accelerometer O Compass O Temperature Inside O OBD-II Bluetooth	USB Type A - USB Micro Type B
O GPS O Accelerometer O Compass O Temperature Inside O OBD-II Bluetooth	
O GPS O Accelerometer O Compass O Temperature Inside O OBD-II Bluetooth	
O Accelerometer Compass I Temperature I Inside Outside OBD-II Bluetooth	
Compass Temperature Inside Outside OBD-II Bluetooth	
<ul> <li>Temperature</li> <li>Inside</li> <li>Outside</li> <li>OBD-II</li> <li>Bluetooth</li> </ul>	
■ Inside ■ Outside ○ OBD-II ■ Bluetooth	o Compass
Outside OBD-II Bluetooth	o Temperature
OBD-II Bluetooth	■ Inside
■ Bluetooth	■ Outside
	OBD-II
	■ Bluetooth
Music - implement at a later date	
Music - implement at a later date	
	Music - implement at a later date

Item	Qty	<b>Unit Price</b>	<b>Total Price</b>	Vendor	Link
Raspberry Pi 3 Model B+	1	39.95	39.95	SparkFun	https://www.sparkfun.com/products/14643
Raspberry Pi Zero W	1	10.00	10.00	SparkFun	https://www.sparkfun.com/products/14277
Raspberry Pi Camera Pi v2	1	29.95	29.95	SparkFun	https://www.sparkfun.com/products/14028
Pi Tin for the Raspberry Pi - Black	1	5.95	5.95	SparkFun	https://www.sparkfun.com/products/13102
Raspberry Pi Zero Case	1	5.95	5.95	SparkFun	https://www.sparkfun.com/products/14273
Real Time Clock Module - DS1307	1	15.95	15.95	SparkFun	https://www.sparkfun.com/products/12708
Juice4halt - J4H-5V-USB	1	70.00	70.00	Juice4halt	https://juice4halt.com/
				(Europe - Slovakia?)	
SanDisk 32GB Ultra microSDHC	2	7.69	15.38	Newegg	https://www.newegg.com/Product/Product.aspx?Item=9SIA12K65X1049&nm_mc=TEMC-RMA-
6 D. L. 646D. 6 D. L. 67FO. USD 3.0 FL. L. D. :	_	0.25	0.05		Approvel&cm mmc=TEMC-RMA-ApprovelContenttext
SanDisk 64GB Cruzer Blade CZ50 USB 2.0 Flash Drive	1	9.35	9.35	Newegg	https://www.newegg.com/Product/Product.aspx?item=9SIAET87A41486&nm_mc=TEMC-RMA-Approvel&cm_mmc=TEMC-RMA-ApprovelContenttext
Cigarette Lighter Power Adapter	2	12.00	24.00	QFC	Yes, the grocery store.
Logitech USB Camera (HD Pro Webcam C920)	1	0.00	0.00	N/A	Discontinued. Already in possession.
Google Nexus 7 (post 2013)	1	0.00	0.00	ASUS	Discontinued. Already in possession. I love this device. Too bad they are discontinued. Would have like an Nvidia
					Shield also.
USB Type A - USB Micro Type B	3	0.00	0.00	N/A	Doesn't everyone have like a dozen of these.
Total:		206.79	226.48		



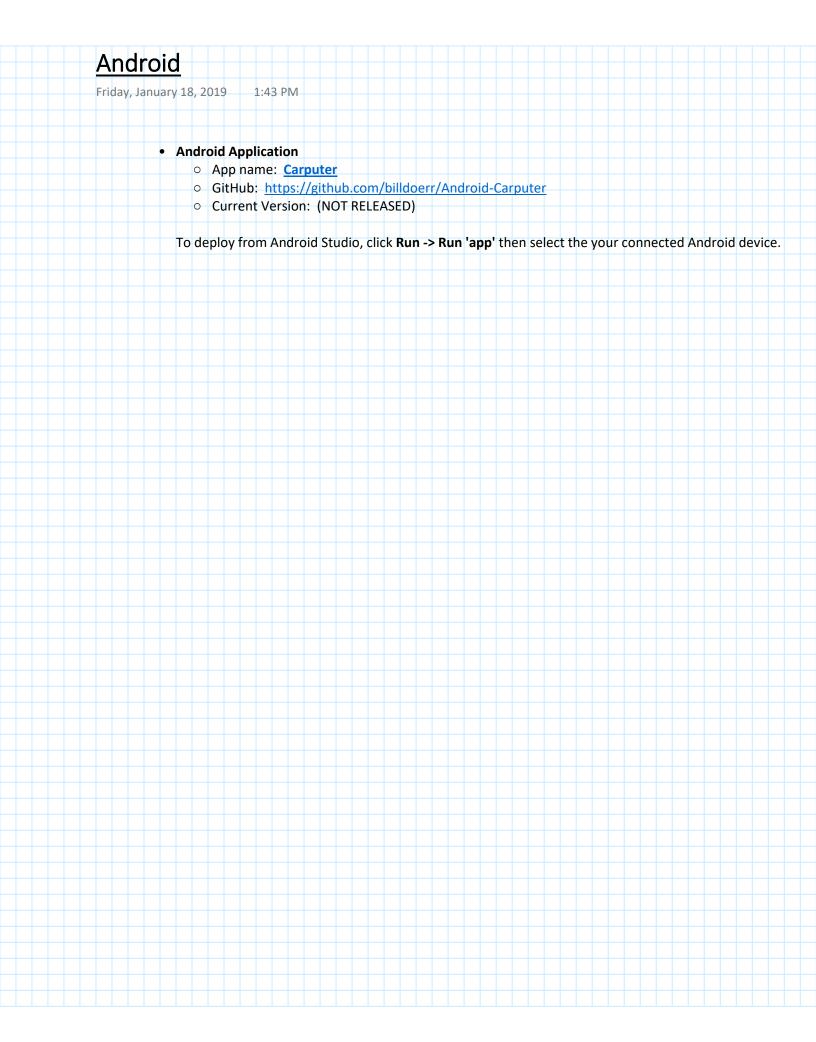

# **Settings**


Sunday, January 20, 2019 7:10 AM

#### **Carputer Settings**


To configure the Carputer application requires the following settings. This is accessed via the app's main navigation menu or via the navigation drawer.

**Note:** The Raspberry Pi image for both the front and rear cameras have static ip's. The default values for Url's contained in the app settings have default values that reflect these static ip's. The Raspberry Pi image also has the motionEye application pre-configured and the app settings also reflect this with default values.


# Navigation Drawer/Main Menu

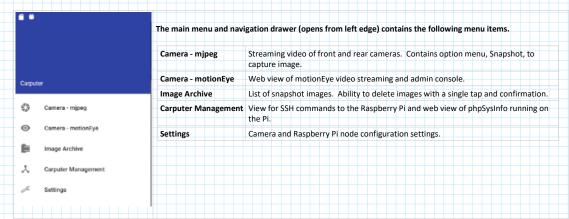


#### Settings

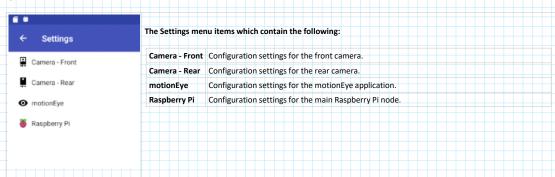

# Camera Front

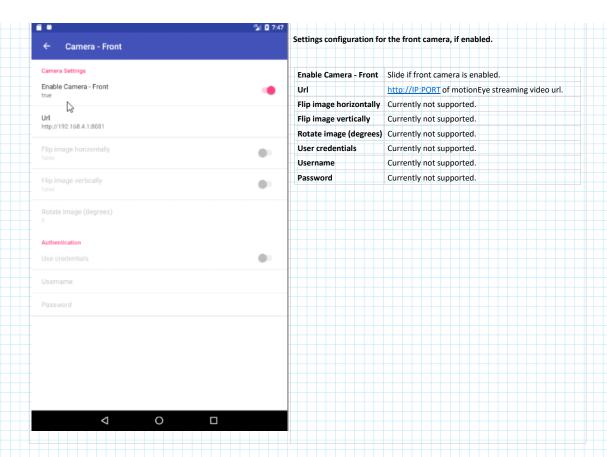

# Camera Rear

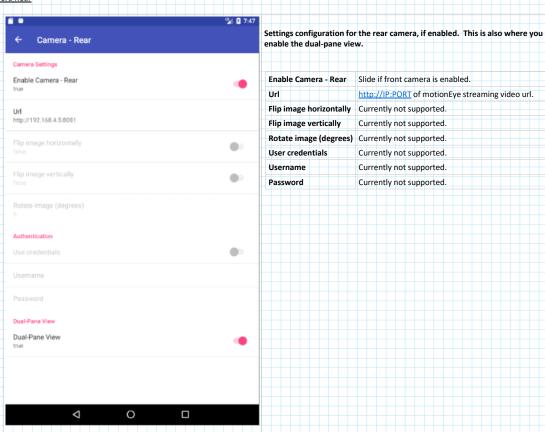

# <u>motionEye</u>



Configuration settings for the motionEye application running on the Raspberry Pi. Currently only supports one motionEye application which is assumed the one running on the main Carputer Raspberry Pi. As a work-around, the values can be change to connect to other Raspberry Pi's that are connected to the PINET network.


Url http://IP:PORT of motionEye admin console.

User credentials Currently not supported.

Username Currently not supported.

Password Currently not supported.

# Raspberry Pi

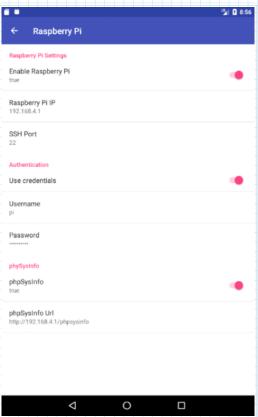

Raspberry Pi configuration settings. Currently only one node is supported and assumed these settings correspond to the main Carputer Raspberry Pi. As a work-around, the values can be change to connect to other Raspberry Pi's that are connected to the PINET network.

Enable Raspberry Pi	Slide to enable this configuration settings.
Raspberry Pi IP	IP of the main Raspberry Pi.
SSH Port	Port defined for SSH.
Use Credentials	Slide to enable the use of credentials for SSH.
Username	SSH user.
Password	SSH password.
phpSysInfo	Slide to enable the web view of the phpSysInfo monitoring web page.
phpSysInfo Url	URL of phpSysInfo monitoring web page.



# RaspberryPi - Carputer

Friday, January 18, 2019

# Raspberry Pi Image Creation for Carputer

Below outlines the steps needed to create the Raspberry Pi image for the main Carputer node.

#### 1. Download Image

a. From <a href="https://www.raspberrypi.org/downloads/raspbian/">https://www.raspberrypi.org/downloads/raspbian/</a>, download the 'Raspbian Stretch with desktop and recommended software' image dated 'November 2018'.

#### 2. Write to SD Card

 Follow these instructions to install the operating system to an SD card: <a href="https://www.raspberrypi.org/documentation/installation/installing-images/README.md">https://www.raspberrypi.org/documentation/installation/installing-images/README.md</a>.

# 3. Setup WiFi without keyboard or network access.

This step will allow you to connect your Raspberry Pi to your network then you can using a terminal emulator like 'PuTTy' to access the device.

- a. In the root of the SD card create a new file named wpa\_supplicant.
- b. In the file add:

```
country=US
ctrl_interface=DIR=/var/run/wpa_supplicant GROUP=netdev
update_config=1
network={
ssid="YourNetworkSSID"
psk="Your Network's Passphrase"
key_mgmt=WPA-PSK
}
```

- c. Note: Ensure you change the values for ssid and psk.
- d. Save the file using the Linux LF. In Notepad++ this is configured by going to Edit-> EOL Conversion Unix (LF).

# 4. Setup SSH Access

This step will setup SSH access so that you can connect to the Raspberry Pi from other computers on the same network.

- a. All that is need is to create a new empty file named ssh in the root of the SD card.
- **b.** Save the file using the Linux LF. In Notepad++ this is configured by going to Edit -> EOL Conversion Unix (LF).

### 5. Access the Raspberry Pi

- Using an application connect to the device. You may need to use a program like Advance Ip Scanner to determine the IP of the Raspberry device.
  - i. The default Raspbian user/password is: pi/raspberry
- b. Once authenticated change the default password. Enter passwd command and enter the new password scoobydoo.
- c. I then run the command sudo reboot. Once back on-line validate the password change.

#### 6. Updates/Upgrades

This step is to update and upgrade the packages.

- a. Enter the command: sudo apt-get update
- b. Enter the command: sudo apt-get upgrade

#### 7. Enable VNC

This is an optional step, but useful nonetheless. You will need a desktop program like **VNC Viewer**. For detail instructions reference: <a href="https://www.raspberrypi.org/documentation/remote-access/vnc/">https://www.raspberrypi.org/documentation/remote-access/vnc/</a>.

- a. sudo apt-get install realvnc-vnc-server realvnc-vnc-viewer
- b. sudo raspi-config. This will launch an ASCI UI.

Now, enable VNC Server by doing the following:

Navigate to Interfacing Options.

Scroll down and select VNC -> Yes

#### 8. raspi-config

This step is to change the hostname of the device.

- Using a program like VNC Viewer connect to the Raspberry Pi. The first time the device is accessed the raspi-config program should launch automatically. If not, click on the Raspberry Icon -> Preferences -> Raspberry Pi Configuration.
  - i. Ignore changing password.
  - ii. Change Hostname: carputer
  - iii. Change resolution: 1280 x 1024
  - iv. Change keyboard
  - v. Change localization
- b. Reboot

# 9. USB Flash Drive

Click the link for the steps to configure a USB flash drive that will be used for motionEye video archiving.

#### 10. phySysInfo

This step is completely optional. This will install the <a href="http://phpsysinfo.github.io/phpsysinfo">phpsysinfo.github.io/phpsysinfo.github.io/phpsysinfo/</a> monitoring tool on the Raspberry Pi. Reference: <a href="http://phpsysinfo.github.io/phpsysinfo/">http://phpsysinfo.github.io/phpsysinfo/</a>

- a. sudo apt-get install apache2 php5 libapache2-mod-php5 (if not already done) I get a bunch of errors.
- b. sudo apt-get install phpsysinfo
- c. sudo apt-get install php-mbstring
- d. sudo In -s /usr/share/phpsysinfo /var/www/html
- e. sudo reboot

Then enter into your browser: <a href="http://<your\_ip>/phpsysinfo">http://<your\_ip>/phpsysinfo</a>

#### 11. motionEye

Click the <u>link</u> for the steps to install <u>motionEye</u>.

# 12. Pause - Create Image

At this point I would recommend creating an image of the SD card. The next step involves setting the Raspberry Pi as an access point. If this fails you can easily write the saved image to the SD card rather than to manually redo the installation steps up to this point.

#### 13. Configure the Raspberry Pi as an Access Point

Follow this <u>link</u> for the steps to configure the Raspberry Pi as an access point.

Note: The /etc/hostapd/hostapd.conf will have the following values:

interface=wlan0
#driver=nl80211
ssid=PINET
hw\_mode=g
channel=7
wmm\_enabled=0
macaddr\_acl=0

<- Set to PINET

<- Comment out this line

macaddr\_acl=0 auth\_algs=1 ignore\_broadcast\_ssid=0

wpa=2 wpa\_passphrase=scoobydoo

<- Set to scoobydoo

wpa\_key\_mgmt=WPA-PSK wpa\_pairwise=TKIP rsn\_pairwise=CCMP

# 14. Validate you are now able to connect to PINET

- a. From another device with WIFI capabilities verify that the PINET access point is available.
- b. Make a connection to the PINET access point using the passphrase supplied in the hostapd.conf. Note: There will not be any internet connectivity.

#### 15. motionEye Camera Configuration

Click this <u>link</u> for the steps to configure the cameras that will be used for video streaming.

### 16. Real Time Clock (RTC)

Reference this <u>link</u> for steps to implement RTC. Device used is the Adafruit <u>DS1307</u>.

# DS1307 Wiring

- DS1307 Vin connects to RPi Pin 4
- DS1307 GND connects to RPi Pin 6
- DS1307 SDA connects to RPi Pin 3
  DS1307 SCL connects to RPi Pin 5

# Configure the Raspberry Pi for I2C

Enable then I2C interfaces and automatic loading of the I2C kernel module.

- sudo raspi-config
- If I2C interfaces was not enabled.
- sudo reboot
- sudo apt-get install python-smbus i2c-tools
- sudo i2cdetect -y 1
   You should see ID #68.

# Set up the Raspberry Pi RTC Time

sudo vi /boot/config.txt

Add the following to bottom of file.

- dtoverlay=i2c-rtc,ds1307
- sudo reboot
- sudo i2cdetect -y 1

You should see a wall of text appear, if UU appears instead of 68.

#### Remove fake hwclock

- sudo apt-get -v remove fake-hwclock
- sudo update-rc.d -f fake-hwclock remove

Now that we have disabled the fake-hwclock package we can proceed with getting the original hardware clock script that is included in Raspbian up and running again by commenting out a section of code.

Run the following command to begin editing the original RTC script.

sudo nano /lib/udev/hwclock-set

Find and comment out the following three lines by placing # in front of it as we have done below.

```
if [ -e /run/systemd/system ] ; then
  exit 0
fi
```

Replace With

```
#if [ -e /run/systemd/system ] ; then
# exit 0
#fi
```

- sudo date -s "5 Jun 2020 10:22:45"
- sudo hwclock -w
- sudo hwclock -r --debug

<u>Disable systemd-timesyncd</u> - systemd-timesyncd is a system service that may be used to synchronize the local system clock with a remote Network Time Protocol server.

- sudo systemctl stop systemd-timesyncd.service
- sudo systemcti disable systemd-timesyncd.service
- sudo reboot

#### Validate RTC has been correctly implemented

- date
- sudo i2cdetect -y 1
- sudo hwclock -r --debug

From <https://www.raspberrypi.org/forums/viewtopic.php?t=211308>

# 17. Power Off Push Button Wiring

Used in conjunction with the listen\_for\_shutdown.py script.

- BUTTON connects to board pin 37 (GPIO26)
- BUTTON connects to board pin 39 (GND)

# 18. Power Off Push Button LED (Yellow) Wiring

Used in conjunction with the listen\_for\_shutdown.py script.

- LED (Yellow) connects to board pin 33 (GPIO13)
- LED (Yellow) -> RESISTOR (330 ohm) connects to board pin 34 (GND)

# 19. Heartbeat LED (Red) Wiring

Used in conjunction with the heartbeat.py script.

- LED (Red) connects to Rpi pin 13 (GPIO27)
- LED (Red) -> RESISTOR (330 ohm) connects to Rpi pin 14 (GND)

# 20. Install Python Script - listen\_for\_shutdown.py

- sudo apt install python3-paramiko < install required ssh package
- cd /etc/init.d
- sudo vi listen\_for\_shutdown.sh
- sudo chmod +x listen\_for\_shutdown.sh
- sudo mkdir /var/log/carputer
- cd /usr/local/bin
- sudo vi listen\_for\_shutdown.py
- sudo chmod +x listen\_for\_shutdown.py
- sudo update-rc.d listen\_for\_shutdown.sh defaults
- sudo reboot
- cd /var/log/carputer/
- |5
- tail -f listen\_for\_shutdown.log

# 21. Install Python Script - heartbeat.py

- cd /etc/init.d
- · sudo vi heartbeat.sh

- sudo chmod +x heartbeat.sh
- sudo mkdir /var/log/carputer
- cd /usr/local/bin
- sudo vi heartbeat.py
- sudo chmod +x heartbeat.py
- sudo update-rc.d heartbeat.sh defaults
- sudo reboot
- cd /var/log/carputer/
- Is
- tail -f heartbeat.log

# 22. Setting up the Raspberry Pi for Juice4halt

Introduced in v1.6 with the addition of the Juice4halt UPS Pi HAT.

#### - Install Python Script - juice4halt.py

- cd /usr/local/bin
- sudo vi juice4halt.py

#### - Create Shell Script - shutdown\_script.sh

- mkdir -p /home/pi/juice4halt/bin/
- cd /home/pi/juice4halt/bin
- vi shutdown script.sh
- chmod 755 shutdown\_script.sh

# - Configure Call to Shutdown Script - /etc/rc.local file

/home/pi/juice4halt/bin/shutdown\_script.sh &

- sudo vi /etc/rc.local
- Add the following line before the exit 0 in the last line # Call the juice4halt shutdown script. This will shutdown slave nodes before master node.

#### 23. Image Archive

This step allows Apache to display directory index. Also creates a symbolic link to the motionEye video archives.

- a. cd /var/www/html
- b. sudo mv index.html index.bak
- c. In -s /mnt/motioneye image\_archive

# 24. Install firmware version script

- cd /bin
- sudo vi carputer
  - #! /bin/sh
  - cat /etc/carputer/version
- sudo chmod +x carputer

# 25. Update firmware version

- cd /etc
- sudo mkdir carputer
- cd carputer
- sudo vi version

Carputer master node

v1.6

Released xxApr2021

# 26. Create Image

Create an image of the SD card. This allows you to have a backup of the image used for the Carputer. This will allow you to have a development device that is exactly the same as deployed to your vehicle.

Put version number used in Step #25 in filename: 2018-11-13-raspbian-stretch-motioneye-pinet\_v1.6.img.

Note: Even number pins are the outside of the board
Odd number pins are toward the inside of the board.

d number pins	are toward the	inside of the bo
	Pi Model B/B+	
3V3 Power	1 2	5V Power
GPIO2 SDA1 I2C	3 4	5V Power
GPIO3 SCL1 I2C	5 6	Ground
GPIO4	7 8	GPIO14 UARTO_TXD
Ground	9 10	GPIO15 UARTO_RXD
GPIO17	11 12	GPIO18 PCM_CLK
GP1027	13 (14)	Ground
GPI022	15 16	GPI023
3V3 Power	17 18	GPIO24
GPIO10 SPI0_MOSI	19 20	Ground
GPIO9 SPIO_MISO	21 22	GP1025
GPIO11 SPI0_SCLK	23 24	GPIO8 SPIO_CEO_N
Ground	<b>25 26</b>	GPIO7 SPIO_CE1_N
ID_SD I2C ID EEPROM	27 (28)	ID_SC I2C ID EEPROM
GPI05	29 30	Ground
GPI06	31 32	GPIO12
GPIO13	33 34	Ground
GPIO19	35 36	GPIO16
GPIO26	37 (38)	GPIO20
Ground	39 (40)	GPIO21
	Pi Model B+	

severaphenepeapy.co.uk

# RaspberryPi - Carputer-Camera-Rear

Friday, January 18, 2019 1:42 PM

# Raspberry Pi Image Creation for the Carputer-CameraRear node

Below outlines the steps needed to create the Raspberry Pi image for the main Carputer-CameraRear node.

#### 1. Download Image

a. From https://www.raspberrypi.org/downloads/raspbian/, download the 'Raspbian Stretch with desktop and recommended software' image dated 'November 2018'.

#### 2. Write to SD Card

a. Follow these instructions to install the operating system to an SD card: <a href="https://www.raspberrypi.org/documentation/installa

#### 3. Setup WiFi without keyboard or network access.

This step will allow you to connect your Raspberry Pi to your network then you can using a terminal emulator like 'PuTTy' to access the device.

- a. In the root of the SD card create a new file named wpa\_supplicant.
- b. In the file add:

country=US
ctrl\_interface=DIR=/var/run/wpa\_supplicant GROUP=netdev
update\_config=1
network={
ssid="PINET"
psk="scoobydoo"
key\_mgmt=WPA-PSK
}

- c. Note: The values for ssid and psk should match the values configured in the hostapd.conf on the main Carputer node.
- d. Save the file using the Linux LF. In Notepad++ this is configured by going to Edit -> EOL Conversion Unix (LF).

#### 4. Setup SSH Access

This step will setup SSH access so that you can connect to the Raspberry Pi from other computers on the same network.

- a. All that is need is to create a new empty file named ssh in the root of the SD card.
- b. Save the file using the Linux LF. In Notepad++ this is configured by going to Edit -> EOL Conversion Unix (LF).

# 5. Access the Raspberry Pi

- a. Using an application connect to the device. You may need to use a program like Advance Ip Scanner to determine the IP of the Raspberry device.
  - i. The default Raspbian user/password is: pi/raspberry
- b. Once authenticated change the default password. Enter passwd command and enter the new password scoobydoo.
- c. I then run the command **sudo reboot**. Once back on-line validate the password change.

# 6. <u>Updates/Upgrades</u>

This step is to update and upgrade the packages.

- a. Enter the command: sudo apt-get update
- b. Enter the command: sudo apt-get upgrade

# 7. Enable VNC

This is an optional step, but useful nonetheless. You will need a desktop program like VNC Viewer. For detail instructions reference: <a href="https://www.raspberrypi.org/documentation/remote-access/vnc/">https://www.raspberrypi.org/documentation/remote-access/vnc/</a>.

- a. sudo apt-get install realvnc-vnc-server realvnc-vnc-viewer
- b. sudo raspi-config. This will launch an ASCI UI.

Now, enable VNC Server by doing the following:

Navigate to Interfacing Options.

Scroll down and select VNC -> Yes

#### 8. raspi-config

This step is to change the hostname of the device.

- a. Using a program like VNC Viewer connect to the Raspberry Pi. The first time the device is accessed the raspi-config program should launch automatically. If not, click on the Raspberry Icon -> Preferences -> Raspberry Pi Configuration.
  - i. Ignore changing password.
  - ii. Change Hostname: carputer-camera-rear
  - iii. Change resolution: 1280 x 1024
  - iv. Change keyboard
  - v. Change localization
- b. Reboot

#### 9. motionEye

Click the link for the steps to install motionEye.

#### 10. Configure Static IP

In this step you will configure the node to have a static Ip. This will give the node a static Ip of 192.168.4.5.

a. sudo nano /etc/dhcpcd.conf

interface eth0 static ip\_address=192.168.4.6/24 static routers=192.168.4.1 static domain\_name\_servers=192.168.4.1

interface wlan0 static ip\_address=192.168.4.5/24 static routers=192.168.4.1 static domain\_name\_servers=192.168.4.1

b. sudo reboot

#### 11. Validate you are now able to connect to PINET

- a. The access point will have a static IP of: 192.168.4.5
- b. From another device with WIFI capabilities verify that the PINET access point is available.
- c. Make a connection to the PINET access point using the passphrase supplied in the hostapd.conf. Note: There will not be any internet connectivity.
- d. List dhcp leases from the main Carputer (192.168.4.1) node.
  - sudo cat /var/lib/misc/dnsmasq.leases

#### 12. motionEye Camera Configuration

Click this link for the steps to configure the cameras that will be used for video streaming.

# 13. Install SSH self-signed certificates

This step installs an SSH certificated on the master node so that it can sync date/time with slave nodes. This activity is performed on the slave node but certification is copied to the master node.

#### Note: Do not perform as sudo.

- ssh-keygen -t rsa -b 2048
- ssh-copy-id -i ~/.ssh/id\_rsa pi@192.168.4.1

# 14. Install script for updating date/time

This step installs a script that will update the date/time with the master node after boot.

crontab -e

@reboot /bin/timesync.sh

• sudo vi /bin/timesync.sh

#! /bin/sh

# Need delay sleep 20

# Get date from master node and set date sudo date -s "`ssh pi@192.168.4.1 'date'`" >> /tmp/timesync.log

• sudo chmod 755 /bin/timesync.sh

# 15. Install firmware version script

- cd /bin
- sudo vi carputer
  - #! /bin/sh
  - cat /etc/carputer/version
- sudo chmod +x carputer

# 16. Update firmware version

- cd /etc
- sudo mkdir carputer
- cd carputer
- sudo vi version

Carputer slave node v1.3 Released 28Nov2019

# 17. Create Image

Create an image of the SD card. This allows you to have a backup of the image used for the Carputer. This will allow you to have a development device that is exactly the same as deployed to your vehicle.

Put version number used in Step #16 in filename: 2018-11-13-raspbian-stretch-motioneye-pinet-static-camera-rear\_v1.2.img.




#### motionEye Configuration - Carputer-Camera-Rear


uesday, January 22, 2019 10:27 AM


This section describes the camera configuration within the motionEye admin console. http://IP:8765

Note: First configure the carputer-camera-rear node then configure the carputer node. The carputer node configure will require the streaming URL of the carputer-camera-rear node.

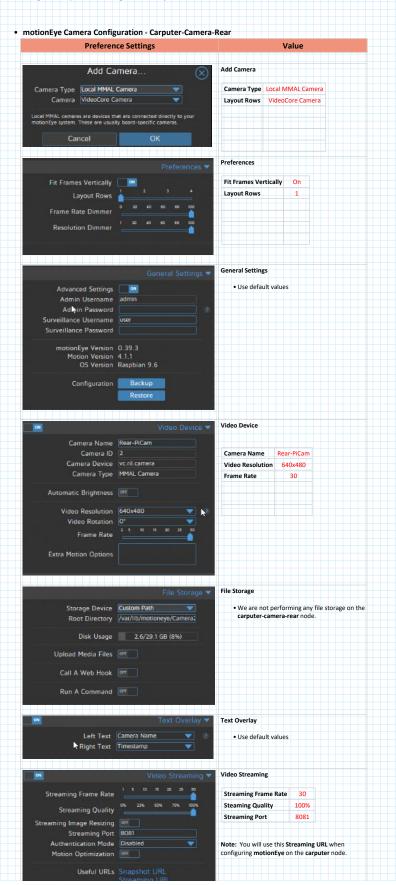



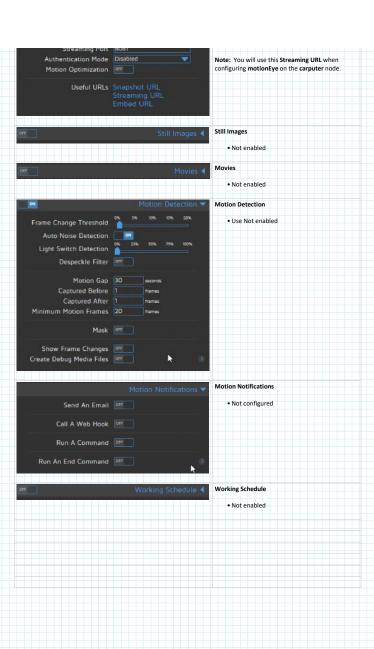

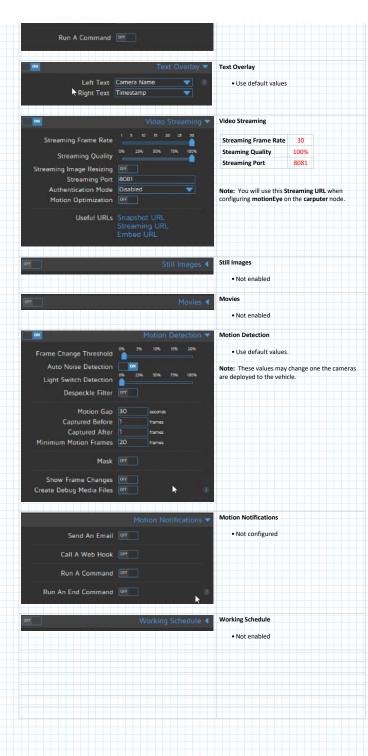

#### motionEye Configuration - Carputer


Tuesday, January 22, 2019 10:27 AM

This section describes the camera configuration within the motionEye admin console. http://IP:8765


User/Pwd: admin/<blank>


Note: First configure the carputer-camera-rear node then configure the carputer node. The carputer node configure will require the streaming URL of the carputer-camera-rear node.


• motionEye Front Camera Configuration

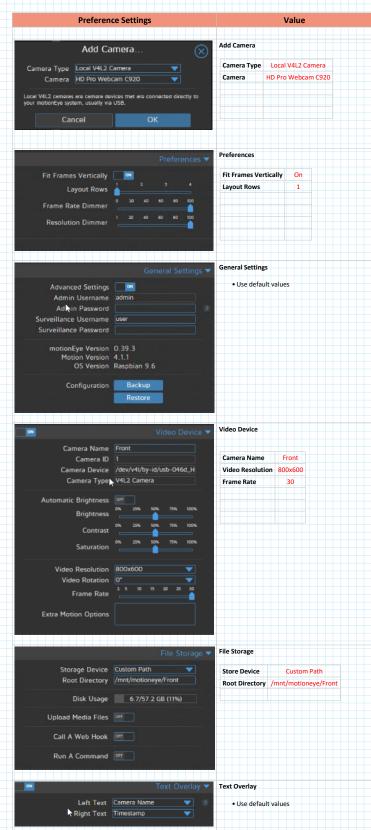

• motionEye Rear Camera Configuration

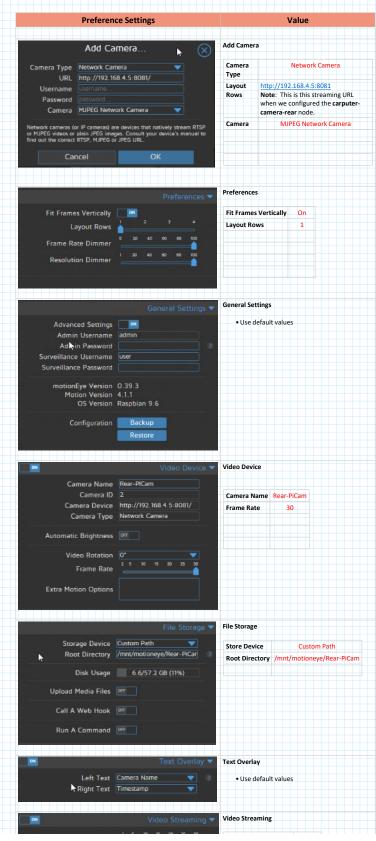

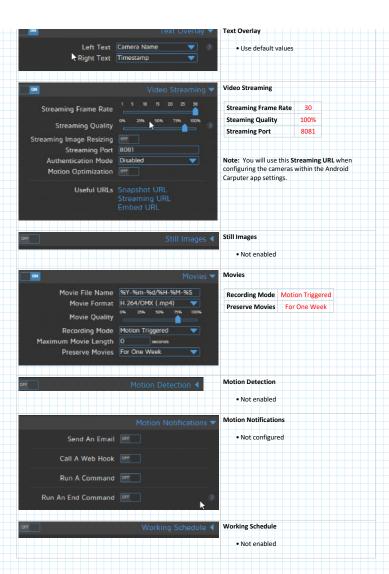

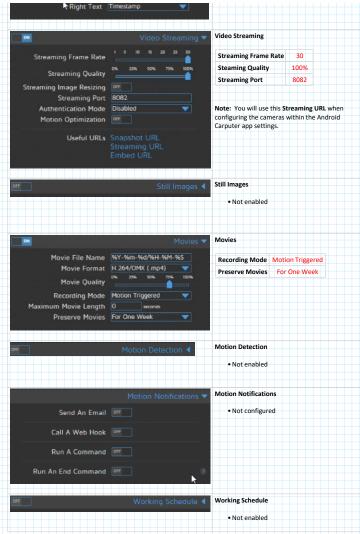


# **User Interface**

Sunday, January 20, 2019 7:53 AM

# **Carputer Settings**


The Carputer navigation is via the app's main navigation menu or via the navigation drawer.

#### Navigation Drawer/Main Menu

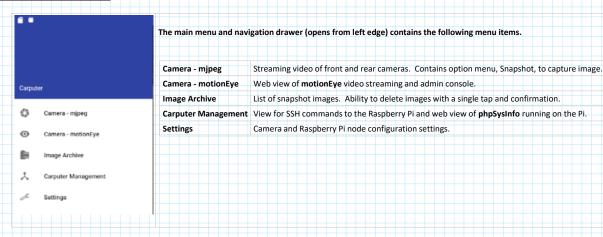

Front Camera

# Camera - mjpeg

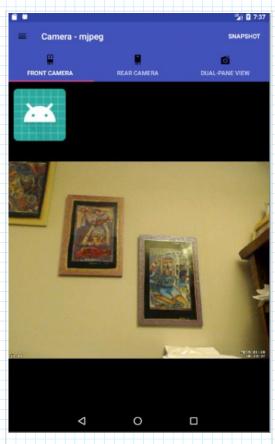


This view contains a tab layout that displays the mjpeg streaming url from motionEye. The view's and url's are configured via the settings menu item.

	frame and will display this in thumbnail view.
Rear Camera	Displays rear camera streaming video, if enabled. Has ability to capture <b>Snapshot</b> of current frame and will display this in thumbnail view.
Dual-Pane View	Displays both front and rear camera's streaming video in a vertical layout, if enabled. Does not support the <b>Snapshot</b> feature.
Snapshot	Options menu that when clicked will capture the frame currently being displayed. The dual- pane view does not currently support this <b>Snapshot</b> feature. This is due to poor performance with the mjpeg widget used to display the streaming video.

**Note:** With the Raspberry Pi image, motionEye is configured to capture still images and movie with the **Capture Mode** set to '**Motion Triggered**'. The **Preserve Pictures** setting is configured '**For One Week**'.

Displays front camera streaming video, if enabled. Has ability to capture **Snapshot** of current

Camera - motionEye

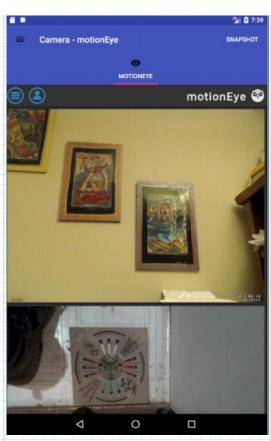

This view displays the motionEye admin console web page along with the streaming video of the configured cameras.

motionEye Default view that displays the configured camera's in a vertical layout. The URL is configured via Settings -> motionEye.


Snapshot Options menu that when clicked will capture the frame currently being displayed. The dual-pane view does not currently support this Snapshot feature. This is due to poor performance with the mjpeg widget used to display the streaming video.

Note: With the Raspberry Pi image, motionEye is configured to capture still images and movie with the Capture Mode set to 'Motion Triggered'. The Preserve Pictures setting is configured 'For One Week'.

Click on this icon to authenticate in the motionEye admin console.

motionEye admin console.

# **Image Archive**

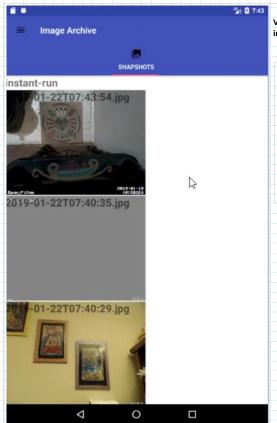

View that contains a vertical list of snapshots. Image contains timestamp of when the frame was captured. To delete image just tap and image and confirm delete.

 Snapshots
 View that contains a vertical list of snapshots. Image contains timestamp of when frame was captured.


 Confirm Delete
 To delete image just tap and image and confirm delete.

Confirm Delete...


Are you sure you want delete this file?

NO YES

Carputer Management

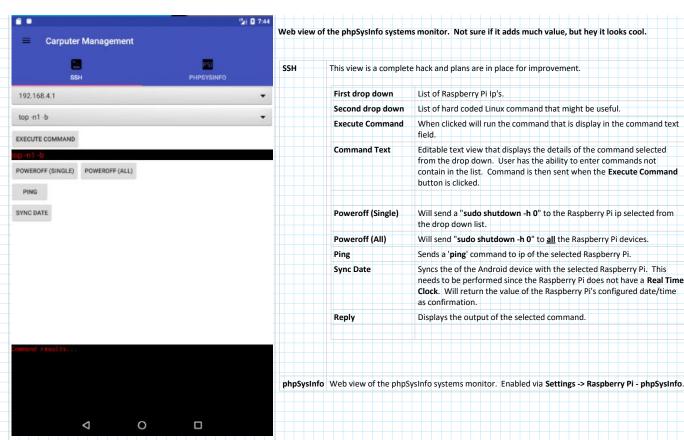


Web view of the phpSysInfo systems monitor. Not sure if it adds much value, but hey it looks cool. SSH This view is a complete hack and plans are in place for improvement. First drop down List of Raspberry Pi Ip's. Second drop down List of hard coded Linux command that might be useful. **Execute Command** When clicked will run the command that is display in the command text **Command Text** Editable text view that displays the details of the command selected from the drop down. User has the ability to enter commands not contain in the list. Command is then sent when the Execute Command button is clicked. Poweroff (Single) Will send a "sudo shutdown -h 0" to the Raspberry Pi ip selected from the drop down list. Poweroff (All) Will send "sudo shutdown -h 0" to all the Raspberry Pi devices. Ping Sends a 'ping' command to ip of the selected Raspberry Pi. Syncs the of the Android device with the selected Raspberry Pi. This Sync Date needs to be performed since the Raspberry Pi does not have a Real Time Clock. Will return the value of the Raspberry Pi's configured date/time as confirmation. Displays the output of the selected command. Reply

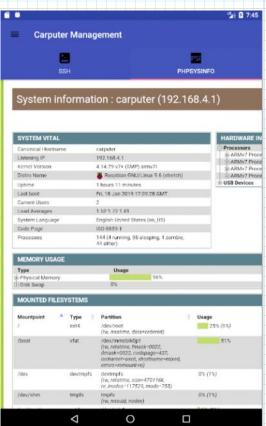


Web view that displays the phpSysInfo monitoring web page. The data is automatically refreshed.

phpSysInfo Web view that displays the phpSysInfo monitoring web page. The data is automatically refreshed.

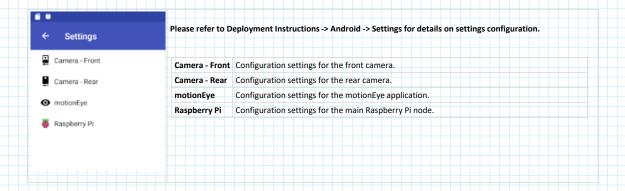

Version H	listory			
Thursday, May 9, 2				
	C	Maurica	Delegas Date	
	Component	version	Release Date	
	This document			
		1.6	18Apr2021	
		1.5	28Nov2019	
		1.4	4Jul2019	
		1.3	17May2019	
		1.2	25Apr2019	
		1.1	25Apr2019	
		1.0	28Jan2019	
1	Android			
		1.5.3	9Nov2019	
		1.5.2	25Apr2019	
		1.5.1	20Apr2019	
		1.5	8Apr2019	
		1.4.1	4Apr2019	
		1.4	31Mar2019	
		1.3.1	15Mar2019	
+++++		1.3	14Mar2019	
		1.2	12Mar2019	
		1.1	5Mar2019	
		1.0	28Jan2019	
	Hardware			
<del>                                     </del>				
	Waiting on parts	1.2	18Apr2021	
		1.1	25Apr2019	
		1.0	28Jan2019	
	Firmware – Master	1.0	2030112010	

	1.6	18Apr2021	
	1.5	28Nov2019	
	1.4	4Jul2019	
	1.3	17May2019	
	1.2	24Apr2019	
	1.1	24Apr2019	
	1.0	28Feb2019	
Firmware – Slave			
I IIII wale – Slave			
	1.2	28Nov2019	
	1.1	24Apr2019	
	1.0	28Feb2019	
Firmware – Python and Shell S	cripts		
	•		
juice4halt.py	1.0	18Apr2021	
shutdown_script.sh	1.2.1	18Apr2021	
heartbeat.py	1.0	28Jan2019	
near (Seat.)	1.0	2030112019	
listen_for_shutdown.py	1.1	4Jul2019	
	1.0	29Jan2019	
heartbeat.sh	1.0	28Jan2019	
listen_for_shutdown.sh	1.0	28Jan2019	

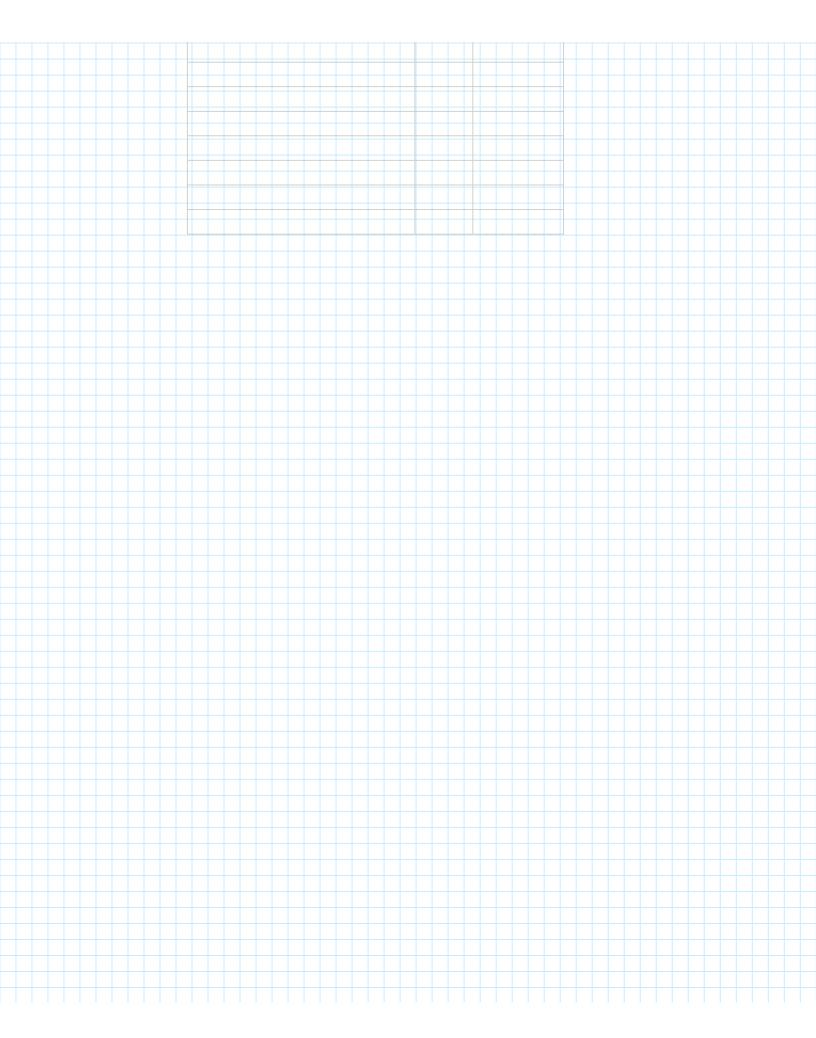



https://github.com/f1xpl/openauto
https://www.iotgadgets.com/2018/02/android-auto-comes-raspberry-pi-open-auto-project/
https://github.com/opencardev/crankshaft
https://blog.tremend.com/android-auto-car-infotainment-systems/
https://opensource.com/article/18/3/openauto-emulator-Raspberry-Pi
http://hackaday.com/2017/02/20/homemade-subaru-brz-head-unit-is-hidden-masterpiece/
https://www.autopi.io/
https://lembergsolutions.com/blog/how-guide-obdii-reader-app-development
Python timer: https://stackoverflow.com/questions/474528/what-is-the-best-way-to-repeatedly-execute-a-function-every-x-seconds-in-python  http://android-er.blogspot.com/2015/05/play-stream-video-from-raspberry-pi-on.html  http://helloraspberrypi.blogspot.com/2015/05/stream-raspberry-pi-camera-module-video.html

# Diagram

Thursday, May 9, 2019 7:37 PM

I like this case.

