USB CABLE CHECKER2 Manual

Table of content

- Features
- Explanation of each part
- Before Use / Precautions
- · How to use
- Explanation of OLED Display Indications
 - [Resistance]
 - [UP10K/SOURCE 3.0A]
 - [UP22K/SOURCE 1.5A]
 - [UP56K/SOURCE 0.5A]
 - [DOWN1K/E-MARKED]
 - [DOWN5.1K/SINK 0.5A]
 - [OTG ENABLE]
 - [SHELL-GND SHORT(SIDE)]
 - [SHIELD CONNECT]
- Weird cable mode
- Explanation of Wire Connection Confirmation LEDs
 - **-** [3.2]
 - CC
 - SBU
 - TX1/2 and RX1/2
 - **-** [2.0]
 - D
 - VBUS and GND
- Battery Replacement Method

Features

This product has the following features :			

• Check the wire connection status of USB cables

- Check the built-in resistance of a Type C plug (check for the presence of PD E-Marker)
- Check the resistance of the power line
- Check for ground fault in a plug shell

Explanation of each part

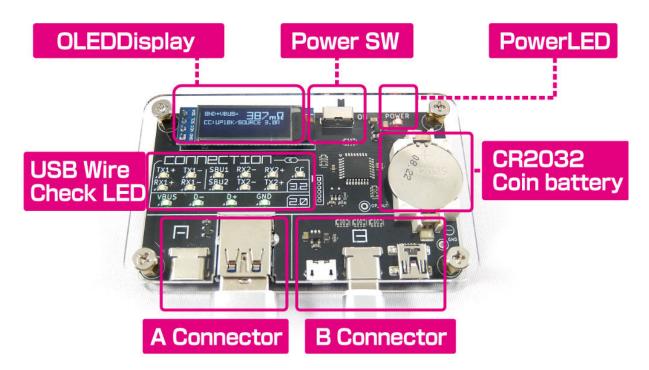


Figure 1: info

Before Use / Precautions

When purchased, the USBCableChecker2 comes with a battery installed for operational verification.

There is an insulating seal placed between the battery and the device; please remove it before use.

The circuit board is protected by acrylic, but as connectors and other components are exposed, please handle with care.

This product is a cable testing device only. Do not connect other USB devices to it as this may cause damage.

How to use

· Determining Plug Adapter Compatibility

After powering on the device, connect a conversion adapter to either the A-side or B-side connector.

If there is a built-in resistance connected to CC in the Type C plug adapter, the resistance value will be displayed on the OLED screen.

If the adapter has OTG (On-The-Go) functionality, "OTG ENABLE" will be displayed.

· Cable Determination

After turning on the device, connect the A-side and B-side connectors with a USB cable.

If the wires are properly connected, the corresponding LED will light up under "CONNECTION".

· OLED Display Section

If **both** VBUS and GND of the cable connected to the A and B sides are wired, the display will show the **total** resistance value of the VBUS and GND lines.

Connecting a Type C plug with an internal resistance will display the value of the pull-up/pull-down resistance connected to CC, as well as the maximum allowable current value notified to the connected device according to the resistance.

If a 10k pull-down resistance is detected, the cable is identified as MARKED.

Explanation of OLED Display Indications

[Resistance]

This is the total resistance of the GND and VBUS lines.

It includes the contact resistance between the USB plug and connector. The unit is milliohms (m Ω) with an accuracy of $\pm 15\%$.

The measurement limit is $1100m\Omega$, and values above this are displayed as "HIGH".

[UP10K/SOURCE 3.0A]

This indicates a $10k\Omega$ resistor connected between VBUS and CC within the Type C plug.

It signals to the USB device that the host can supply a current of up to 3A.

Cables with this resistance value built into the plug are non-standard according to USB specifications.

[UP22K/SOURCE 1.5A]

Indicates a $22k\Omega$ resistor connected between VBUS and CC within the Type C plug. It signals to the USB device that the host is capable of supplying a current of 1.5A.

Cables with this resistor value built into the plug are non-standard according to USB specifications.

[UP56K/SOURCE 0.5A]

Indicates a $56k\Omega$ resistor connected between VBUS and CC within the Type C plug. It signals to the USB device that the host is capable of supplying a current of 0.5A. This is the only connector-built-in pull-up resistor value permitted by USB specifications.

[DOWN1K/E-MARKED]

Indicates a $1k\Omega$ resistor connected between GND and VCONN within the Type C plug. This notifies the connected USB device that the cable contains an E-marker IC.

[DOWN5.1K/SINK 0.5A]

Indicates a $5.1k\Omega$ resistor connected between GND and CC within the Type C plug. This allows the connected USB device to act as a host if possible.

[OTG ENABLE]

Although not a resistor, it lights up when the GND-ID terminal between Mini-B, Micro-B connectors is short-circuited.

This allows the connected USB device to act as a host if possible.

[SHELL-GND SHORT(SIDE)]

Displayed when the plug shell is conductive with GND. The parentheses indicate which side's connector, A or B, is conductive.

If both connectors are conductive, it displays as A&B.

Note that for Type C-C cables, the standard specifies that the shell is connected to GND.

[SHIELD CONNECT]

Displayed when both ends' shells are connected with a wire independent of GND as "SHIELD CONNECT".

Typically, the shield wire of legacy USB cables is connected only to one plug, and there is no continuity between plugs.

Weird cable mode

Weird cableモードの表示例



Figure 2: img

When multiple CC pull-up or pull-down resistors are detected in the cable or plug, the display will switch to a mode that differs from the usual display mode.

In this display mode, resistance values are shown smaller, and the status of the shell or shield is not displayed. Instead, it lists the status of all CC terminals on both the A and B sides. This feature is useful for identifying non-standard Type-C cables, such as those that cannot differentiate between orientations.

Explanation of Wire Connection Confirmation LEDs

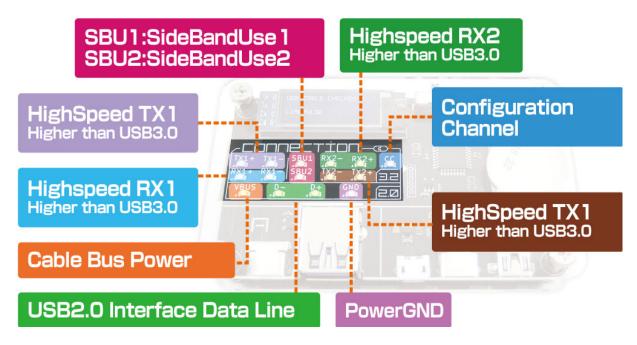


Figure 3: img

[3.2]

These wires are used for USB 3.2 connections. The names of the differential pairs correspond to the terminal names on the A-side connector.

CC

In Type C cables, this wire is primarily used for identifying hosts and devices and for USB PD (Power Delivery) communication.

Various functionalities are communicated between devices via this wire to determine their availability.

SBU

Stands for Side Band Use. These wires are used for transferring data other than USB data communication, such as audio or video.

They are mainly used in alternate mode.

TX1/2 and RX1/2

These wires are used for communication in USB 3.0 and later versions.

USB 3.0 uses two pairs of wires for data communication (SuperSpeed /SS), while USB 3.2 uses four pairs of wires for data communication (SuperSpeed+ / SS+).

[2.0]

These wires are used for USB 1.0 to USB 2.0 connections.

D

These wires are used for data communication up to USB 2.0 (LowSpeed / Full Speed and High Speed).

VBUS and GND

These wires are used for power management.

Battery Replacement Method

When "LOW BATTERY" is displayed on the OLED screen at startup, it is time to replace the battery.

As shown in the image above, insert the tip of a flathead screwdriver into the gap between the negative terminal and the battery, then leverage it out using the principle of a lever.

Afterward, install a new CR2032 battery with the positive side facing up.

Official page: http://bit-trade-one.co.jp/en/adusbcim

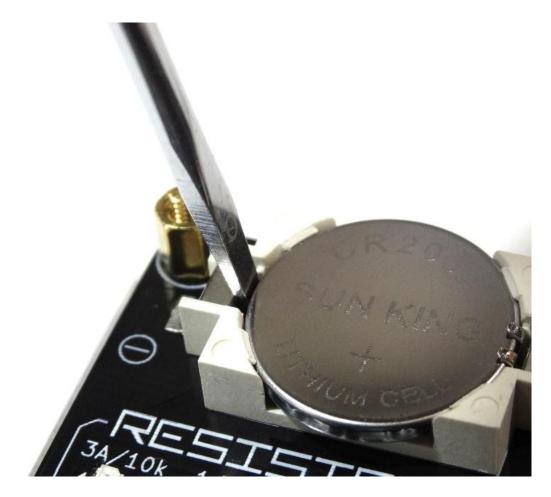


Figure 4: swap