### ARESIII Standard Operation Procedure Revision: 1.00

Doc. No:

Date: Oct. 23. 2014

Page: 9 Grade:

Rev.	Modified Chapters	Modification Description	Issued Dept.	Issued by	Revised Date
1.00		First Release(YV05E0-A01)	GTSD	El Li	Oct.23.2014

Authorize by Review by	Originator By El
------------------------	---------------------

Form No: T2-009-01 Rev.01

## ARESIII Standard Operation Procedure

Doc. No:
Date: Oct. 23. 2014

Rev.: 1.00 Page: 1

### 1.Objectives

Create test procedure.

2.Scope

Model: ARESIII PN: YV05E0(A01)

### 3.Test Item

- 3.1 Diagnostic test in Ubuntu 12.04 64-bit Linux system
- 3.2 3DMark11(contain HDMI test)
- 3.3 Temperature test
- 3.4 Fan test

### **4.Relevant Document**

None.

**5.Definition**: 1. If the model name contains P, please test HDCP function.

Ex: EAH\*\*\*/HTDP/512M/A

- 2. If you test HDMI already, it's unnecessary to test HDCP. The HDMI contains HDCP function.
- 3. System Memory: 1GB for a single GPU test station; please add an additional 512MB of system memory for each additional GPU used for the test configuration
- 4. ARESIII Test Program in Ubuntu 12.04 64-bit Linux system.

## ARESIII Standard Operation Procedure

Doc. No:

Date: Oct. 23. 2014 Rev.: 1.00 Page: 2

### **6. Operation Procedures:**

### 6.1 Attention

- 6.1.1 To avoid damaging devices or M/B, please turn off A/C power then unplug VGA card.
- 6.1.2 While unplugging the card, do it in upright direction to avoid damaging slot & golden finger.
- 6.1.3 If any problem happens, please inform test supervisor. Base on ATX power specification, +5V standby voltage is existed while AC power is connecting. For safety reason, please turn off main power during break time or idling test.
- 6.1.4 Some test items should be tested under Windows environment. (Please install windows test environment by yourself).

ARESIII
Standard Operation Procedure

Doc. No:

Date: Oct. 23. 2014 Rev.: 1.00 Page: 3

#### **6.2 Fixture connect**

6.2.1 Install Intel P7 CPU & CPU Fan.


- 6.2.2 Install DDR3 Memory to DIMM1~4. (a minimum memory of 2GB for Linux test)
- 6.2.3 Plug USB Mouse and PS/2 Keyboard into MB.
- 6.2.4 Plug VGA Card R9295X2 into PCIEX16 1.
- 6.2.5 If this card has 6 PIN or 8 PIN of Power supply, please connect power con of VGA card & Power supply via bundled power cable.

(6 PIN of Power supply to 6 PIN of VGA card)
(8 PIN of Power supply to 8 PIN of VGA card)

6.2.6 Connect SATA HDD & SATA con via SATA cable



- 6.2.7 Plug 4PIN 12V power(a minimum power of 1200W) cable into CON12V.
- 6.2.8 Plug ATX Power on Power(a minimum power of 1200W) Connector.

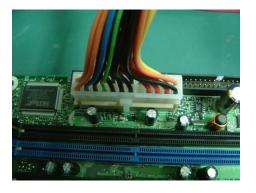

### ARESIII Standard Operation Procedure

Doc. No:

Date: Oct. 23. 2014 Rev.: 1.00 Page: 4

#### 6.3 Certain test.

### 6.3.1 Diagnostic test in Ubuntu 12.04 64-bit linux system.

6.3.1.1 Please connect LCD monitor & card's DVI CON via a DVI cable.



- 6.3.1.2 Press Power Switch then turn on power button.
- 6.3.1.3 Press "Del" to enter CMOS setup menu while boot screen is displaying.

EXIT -> Load Setup Defaults. Advanced Power Exit Options Exit system setup Exit & Save Changes Exit & Discard Changes after saving the changes. Discard Changes F10 key can be used Load Setup Defaults for this operation. Select Screen Select Item Enter Go to Sub-screen General Help Save and Exit

(C)Copyright 1985-2002, American Megatrends,

6.3.1.4 Run test program in Ubuntu 12.04 64-bit linux system.

Path:R9295X2B\yv06e0a0.sh

6.3.1.5 Memory test

If you want to test memory, please run

tserver -boardtest=memfa

Path: ARESIII\

6.3.1.6 BIOS Version

If you want to see the version of bios, please run ./biosinfo

Path: ARESIII\

6.3.1.7 BIOS flash

Please use the following command to flash bios and notice the size of character.

Path: ARESIII\

Command:./acom [adapter num][bios name]

Notice:

If you can not flash bios because of the bios locked, please use ./atiflash –unlockrom 0/1 to unlock bios. And then, please use ./atiflash –lockrom 0/1 to lock bios after updating latest bios.

6.3.1.8 FAN test

No fan test.

ARESIII
Standard Operation Procedure


Doc. No:

Date: Oct. 23. 2014 Rev.: 1.00 Page: 5

6.3.1.9 After finish Linux64 testing, please enter Windows environment to test 3DMark.


### 6.3.2 3DMark test(contain HDMI test)

- 6.3.2.1 Please install 3DMark program by yourself.
- 6.3.2.2 Please connect VGA card to LCD via HDMI cable.

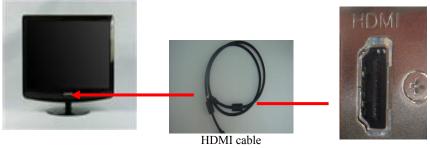

#### **HDMI CON**

- 6.3.2.3 Please install VGA card driver in Windows(You must use individual driver of this card).
- 6.3.2.4 Please run 3DMark06 base on this card (please test 1 cycle).
- 6.3.2.5 Press "Select" to enter Select test menu. You can choose "HDR1" for default setting.

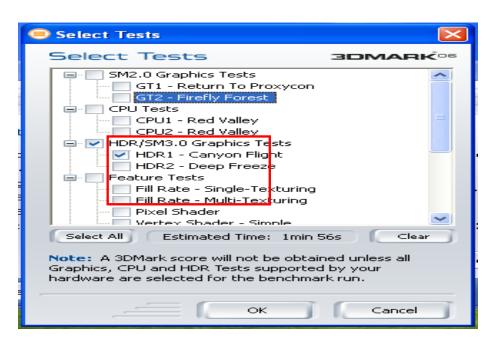


6.3.2.6 Press "Demo" to enter Demo menu. You can choose "Sounds" for default setting.

# ARESIII Standard Operation Procedure

Doc. No:

Date: Oct. 23. 2014 Rev.: 1.00 Page: 6

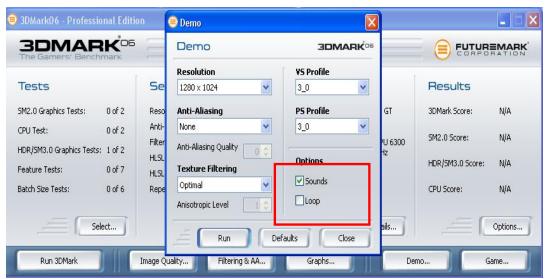

- 6.3.2.7 Please pay attention to check if there is flickering, discolor, crash and so on. If there's no problem, it can be judged OK!
  - 6.3.2.8 Please listen to voice carefully to check whether it outputs sounds. If not, HDMI test fail.



- 6. 3.2.9 If test OK, please test mini Display port.
- 6. 3.2.10 Please connect VGA card to LCD via mini displayport to HDMI cable (Please refer to step 6.3.2.4&6.3.2.5&6.3.2.6&6.3.2.7&6.3.2.8)




## ARESIII Standard Operation Procedure

Doc. No:


Date: Oct. 23. 2014 Rev.: 1.00 Page: 7

### **6.4** Temperature test

- 6.4.1 Please copy Thermaltool(1.0.05) to Windows by yourself.
- 6.4.2 Please run ThermalTest.exe.



6.4.3 If test ok, show pass.

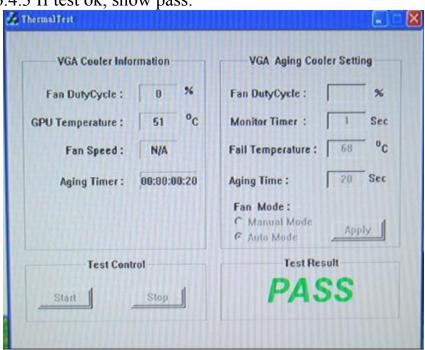

6.4.4 If test fail, show fail.



6.4.5 If test OK, please NTF test.

# ARESIII Standard Operation Procedure

Doc. No:

Date: Oct. 23. 2014 Rev.: 1.00 Page: 8

### 7.Appendix

NO#	Equipment Description	ASUS Part#	Supplier	Quantity	Remarks
1	Dell 30 inches (3008WFP) (Buying a local LCD by yourself)			1	E POLITICAL DE LA CONTRACTOR DE LA CONTR
2	USB MOUSE			1	
3	PS/2 KEYBOARD			1	
4	ATX POWER SUPPLY(a minimum power of 500W)			1	The second secon
5	Intel CPU Intel(R) Core(TM)2 CPU		local	1	61200
6	Heat sink + FAN	22-240000160		1	
7	DDR3 1333 2G	20-TT2605618	local	4	
8	TEST HDD			1	
9	SATA HDD Cable	14-000107070	ASUS	1	
10	PCIEX16 VGA CARD			1	
11	Dual link DVI cable (Buying a local DVI cable by yourself)			1	
12	HDMI extend cable (Buying a local HDMI cable by yourself)			1	O
13	P7H55-M/USB3 MB	80- MIBBKA-*		1	
14	Display port cable (Buying a local HDMI cable by yourself)			1	
15	mini displayport to HDMI cable (Buying a local cable by yourself)			1	