<b>ASUSTeK</b>	COMPUTER			
INC.				

# EAH6950(OUT Card) Standard Operation Procedure Revision: 1.00

Doc. No:

Date: Dec. 31, 2010

Page: 10 Grade:

Rev.	Modified Chapters	Modification Description	Issued Dept.	Issued by	Revised Date
1.00		First Release	GRMA	Ariel wang	Dec.31,2010

Authorize	Review	Originator	
by	by	By Ariel	

Form No: T2-009-01 Rev.01

### EAH6950(OUT Card) Standard Operation Procedure

Doc. No:

Date: Dec. 31, 2010 Rev.: 1.00 Page: 1

#### 1.Objectives

Create test procedure.

2.Scope

Model: EAH6950(OUT Card)

PN: C3CHD0 (A01)

3.Test Item

3.1 Diagnostic test in Linux 64

3.2 3DMark06(contain HDMI test)

3.3 Temperature test

3.4 Fan test

#### **4.Relevant Document**

None.

**5.Definition**: 1. If the model name contains P, please test HDCP function.

Ex: EAH\*\*\*/HTDP/512M/A

- 2. If you test HDMI already, it's unnecessary to test HDCP. The HDMI contains HDCP function.
- 3. System Memory: 1GB for a single GPU test station; please add an additional 512MB of system memory for each additional GPU used for the test configuration
- 4. EAH6950 Test Program in 64 bits Linux system.

### EAH6950(OUT Card) Standard Operation Procedure

Doc. No:

Date: Dec. 31, 2010 Rev.: 1.00 Page: 2

#### 6. Operation Procedures:

#### 6.1 Attention

- 6.1.1 To avoid damaging devices or M/B, please turn off A/C power then unplug VGA card.
- 6.1.2 While unplugging the card, do it in upright direction to avoid damaging slot & golden finger.
- 6.1.3 If any problem happens, please inform test supervisor. Base on ATX power specification, +5V standby voltage is existed while AC power is connecting. For safety reason, please turn off main power during break time or idling test.
- 6.1.4 Some test items should be tested under Windows environment. (Please install windows test environment by yourself).

EAH6950(OUT Card)
Standard Operation Procedure

Doc. No:

Date: Dec. 31, 2010 Rev.: 1.00 Page: 3

#### **6.2** Fixture connect

6.2.1 Install Intel P5 CPU & CPU Fan.

- 6.2.2 Install DDR2 1GB Memory to DIMM1~4. (a minimum memory of 2GB for Linux test)
- 6.2.3 Plug USB Mouse and PS/2 Keyboard into MB.
- 6.2.4 Plug VGA Card EAH6950 into PCIEX16 1.
- 6.2.5 If this card has 6 PIN or 8 PIN of Power supply, please connect power con of VGA card & Power supply via bundled power cable.

(6 PIN of Power supply to 6 PIN of VGA card)

(8 PIN of Power supply to 8 PIN of VGA card)

6.2.6 Connect SATA HDD & SATA con via SATA cable



- 6.2.7 Plug 4PIN 12V power(a minimum power of 1200W) cable into CON12V.
- 6.2.8 Plug ATX Power on Power(a minimum power of 1200W) Connector.



### EAH6950(OUT Card) Standard Operation Procedure

Doc. No:

Date: Dec. 31, 2010 Rev.: 1.00 Page: 4

#### 6.3 Certain test.

#### 6.3.1 Diagnostic test in LINUX64

6.3.1.1 Please connect LCD monitor & card's DVI CON via a DVI cable.



- 6.3.1.2 Press Power Switch then turn on power button.
- 6.3.1.3 Press "Del" to enter CMOS setup menu while boot screen is displaying.

EXIT -> Load Setup Defaults. Advanced Pouer Main Exit Options Exit system setup Exit & Save Changes Exit & Discard Changes after saving the changes. Discard Changes F10 key can be used for this operation. Load Setup Defaults Select Screen Select Item Go to Sub-screen General Help Save and Exit

6.3.1.4 Run test program in linux64.

Path:eah6950\c3chd0a0.sh

Please enter into the file of eah6950 enter the following command: cd ./eah6950 Then,please run ./c3chd0a0.sh

6.3.1.5 Memory test

If you want to test memory,please run ./tserver -test=memfa Path:eah6950\

6.3.1.6 BIOS Version

If you want to see the version of bios,please run ./atiflash.sh or ./atiflash –ai 0. Path:eah6950\

6.3.1.7 BIOS flash

Please use the following command to flash bios and notice the size of character. Path:eah6950\

Command:./atiflash -p -f 0 xxx.rom

Notice:

If you can not flash bios because of the bios locked, please use ./atiflash –unlockrom 0 to unlock bios. And then, please use ./atiflash –lockrom 0 to lock bios after updating latest bios.

6.3.1.8 FAN test

### EAH6950(OUT Card) Standard Operation Procedure

Doc. No:
Date: Dec. 31, 2010
Rev.: 1.00 Page: 5

If you want to test FAN, please run ./aft101 Path:eah6950/AFT64100


Notice:

./aft101 apply the following Part Number C3CHD0-A01

- 6.3.1.9 After finish Linux64 testing, please enter Windows environment to test 3DMark.
- 6.3.2 3DMark test(contain HDMI test)
  - 6.3.2.1 Please install 3DMark program by yourself.
  - 6.3.2.2 Please connect VGA card to LCD via HDMI cable.



- 6.3.2.3 Please install VGA card driver in Windows(You must use individual driver of this card).
- 6.3.2.4 Please run 3DMark06 base on this card (please test 1 cycle).
- 6.3.2.5 Press "Select" to enter Select test menu. You can choose "HDR1" for default setting.

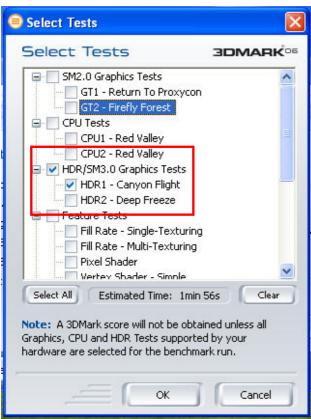


6.3.2.6 Press "Demo" to enter Demo menu. You can choose "Sounds" for default setting.

### EAH6950(OUT Card) Standard Operation Procedure

Doc. No:

Date: Dec. 31, 2010 Rev.: 1.00 Page: 6

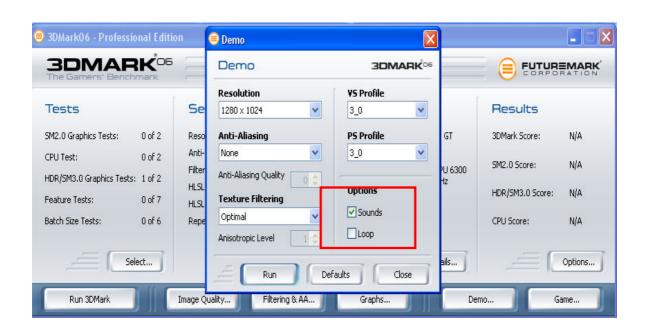

- 6.3.2.7 Please pay attention to check if there is flickering, discolor, crash and so on. If there's no problem, it can be judged OK!
- 6.3.2.8 Please listen to voice carefully to check whether it outputs sounds. If not, HDMI test fail.



EAH6950(OUT Card) Standard Operation Procedure Doc. No:

Date: Dec. 31, 2010 Rev.: 1.00 Page: 7

- 6. 3.2.9 If test OK, please test Display port.
- 6. 3.2.10 Connect VGA card to LCD via Display cable test HDMI function.

(Please refer to step 6.3.2.4&6.3.2.5&6.3.2.6&6.3.2.7&6.3.2.8)




**DISPLAY CON** 

#### **6.4** Temperature test

- 6.4.1 Please copy Thermaltool(1.0.05) to Windows by yourself.
- 6.4.2 Please run ThermalTest.exe.




6.4.3 If test ok, show pass.

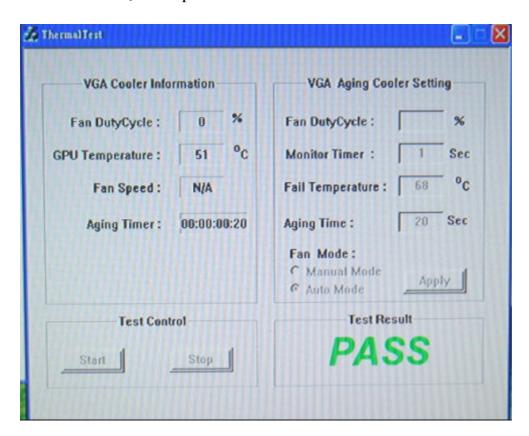

EAH6950(OUT Card) Standard Operation Procedure Doc. No:

Date: Dec. 31, 2010 Rev.: 1.00 Page: 8

6.4.4 If test fail, show fail.

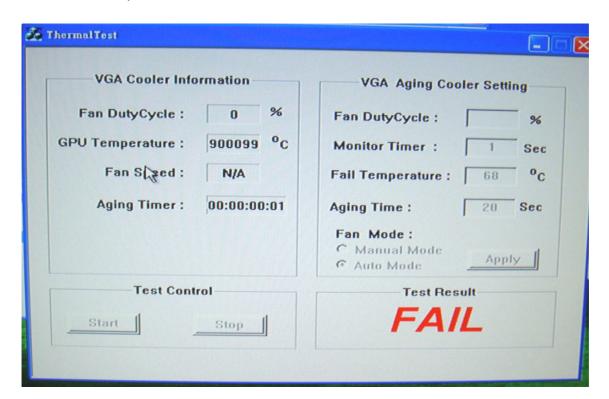

6.4.5 If test OK, please NTF test.

## EAH6950(OUT Card) Standard Operation Procedure

Doc. No:

Date: Dec. 31, 2010 Rev.: 1.00 Page: 9

# 7.Appendix

NO#	Equipment Description	ASUS Part#	Supplier	Quantity	Remarks
1	Dell 30 inches (3008WFP) (Buying a local LCD by yourself)			1	Pagintosonan
2	USB MOUSE			1	
3	PS/2 KEYBOARD			1	
4	ATX POWER SUPPLY(a minimum power of 500W)			1	The state of the s
5	INTEL Celeron E1200			1	E1100
6	Heat sink + FAN	22-240000160		1	
7	DDR2(667/800) 1G	04G0016169A9NE /22-T00642404		4	
8	TEST HDD			1	
9	SATA HDD Cable	14-000107070	ASUS	1	
10	PCIEX16 VGA CARD			1	
11	Dual link DVI cable (Buying a local DVI cable by yourself)			1	O'
12	HDMI extend cable (Buying a local HDMI cable by yourself)	00 1400-140		1	O
13 14	P5E MB Display port cable (Buying a local HDMI cable by yourself)	80- MBB7X0-*		1	P of a