# R7250X Standard Operation Procedure Revision: 1.07

Doc. No:

Date: Oct. 18. 2016

Page: 10 Grade:

Rev.	Modified Chapters	Modification Description	Issued Dept.	Issued by	Revised Date
1.00		First Release	GRMA	Jory_yuan	Feb.19.2014
1.01		Add new P/N(YV05V0-A01)	GRMA	Jory_yuan	Feb.19.2014
1.02		Add new P/N(YV05T0-A01)	GRMA	Jory_yuan	Feb.19.2014
1.03		Add new PCBA(YV05T0-A11)	GRMA	Jory_yuan	Feb.19.2014
1.04		Add new PCBA(YV05U0-A11)	GRMA	Jory_yuan	Feb.26.2014
1.05		Add new PCBA(YV05U0-A21)	GRMA	Jory_yuan	Apr.9.2014
1.06		Add new PCBA(YV05U0-A31)	GRMA	Jory_yuan	May.7.2014
1.07		Add new PCBA(YV05V0-Q04)	GRTD	Maico_zhang	Oct.18.2016

Authorize by	Review by	Originator By	Maico

Form No: T2-009-01 Rev.01

## R7250X Standard Operation Procedure

Doc. No:

Date: Oct. 18. 2016 Rev.: 1.07 Page: 1

## 1.Objectives

Create test procedure.

### 2.Scope

Model: R7250X

PN: YV05U0(A01&A11&A21&A31)YV05V0(A01) YV05T0(A01&A11)

YV05V0(Q04)

#### 3.Test Item

- 3.1 Diagnostic test in 12\_04\_64-bit Linux
- 3.2 3DMark06(contain HDMI test)
- 3.3 Temperature test
- 3.4 Fan Test

#### **4.**Relevant Document

None.

**5.Definition**:1. If the model name contains P, please test HDCP function.

Ex: EAH\*\*\*/HTDP/512M/A

- 2. If you test HDMI already, it's unnecessary to test HDCP. The HDMI contains HDCP function.
- 3. System Memory: 1GB for a single GPU test station; please add an additional 512MB of system memory for each additional GPU used for the test configuration
- 4. R7250X Test Program in 64-bit Linux system.

# $\begin{array}{c} {\rm R7250X} \\ {\rm Standard\ Operation\ Procedure} \end{array}$

Doc. No:
Date: Oct. 18. 2016

Rev.: 1.07 Page: 2

# 6. Operation Procedures:

#### **6.1 Attention**

- 6.1.1 To avoid damaging devices or M/B, please turn off A/C power then unplug VGA card.
- 6.1.2 While unplugging the card, do it in upright direction to avoid damaging slot & golden finger.
- 6.1.3 If any problem happens, please inform test supervisor. Base on ATX power specification, +5V standby voltage is existed while AC power is connecting. For safety reason, please turn off main power during break time or idling test.
- 6.1.4 Some test items should be tested under Windows environment. (Please install windows test environment by yourself).

## R7250X Standard Operation Procedure

Doc. No:

Date: Oct. 18. 2016 Rev.: 1. 07 Page: 3

#### **6.2** Fixture connect

- 6.2.1 Install Intel P7 CPU & CPU Fan.
- 6.2.2 Install DDR3 Memory to DIMM1~4. (a minimum memory of 2GB for Linux test)
- 6.2.3 Plug USB Mouse and PS/2 Keyboard into MB.
- 6.2.4 Plug VGA Card R7250X into PCIEX16\_1.
- 6.2.5 If this card has 6 PIN or 8 PIN of Power supply, please connect power con of VGA card & Power supply via bundled power cable.

(6 PIN of Power supply to 6 PIN of VGA card)

(8 PIN of Power supply to 8 PIN of VGA card)

#### 6.2.6 Connect SATA HDD & SATA con via SATA cable



- 6.2.7 Plug 4PIN 12V power(a minimum power of 1200W) cable into CON12V.
- 6.2.8 Plug ATX Power on Power(a minimum power of 1200W) Connector.



#### 6.3 Certain test.

## 6.3.1 Diagnostic test in 64-bit LINUX system

6.3.1.1 Please connect LCD monitor & card's DVI CON via a DVI cable.



# R7250X Standard Operation Procedure

Doc. No:

Date: Oct. 18. 2016 Rev.: 1. 07 Page: 4

Dual link DVI cable

- 6.3.1.2 Press Power Switch then turn on power button.
- 6.3.1.3 Press "Del" to enter CMOS setup menu while boot screen is displaying.

EXIT -> Load Setup Defaults.



6.3.1.4 Run test program in 64-bit linux system.

 $Path: R7250X \setminus yv05t0a0.sh \quad or \quad yv05t0a1.sh \quad or \quad yv05u0a0.sh \quad or \quad yv05u0a1.sh \quad or \quad yv05u0a2.sh \quad or \quad yv05u0a3.sh$ 

Path:R7250X1\yv05v0a0.sh or yv05v0q0.sh

6.3.1.5 Memory test

If you want to test memory, please run ./tserver -boardtest=memfa or ./memtest.sh Path:R7250X\

Path:R7250X1\

6.3.1.6 BIOS Version

If you want to see the version of bios, please run ./atiflash -ai 0 or ./biosinfo.

Path:R7250X\

6.3.1.7 BIOS flash

Please use the following command to flash bios and notice the size of character.

Path:R7250X\

Command: ./acom [adapter number] [bios name]

Notice:

If you can not flash bios because of the bios locked, please use ./atiflash –unlockrom 0 to unlock bios. And then, please use ./atiflash –lockrom 0 to lock bios after updating latest bios.

6.3.1.8 FAN Test

Please run ./aft.sh.

Path:R7250X1/AFT

6.3.1.9 After finishing 64-bit Linux testing, please enter Windows environment to test 3DMark.

R7250X Standard Operation Procedure Doc. No:


Date: Oct. 18. 2016 Rev.: 1.07 Page: 5

#### 6.3.2 3DMark test(contain HDMI test)

- 6.3.2.1 Please install 3DMark program by yourself.
- 6.3.2.2 Please connect VGA card to LCD via HDMI cable or MINI Display Port or Display Port to HDMI cable or Display Port cable or D-SUB cable.





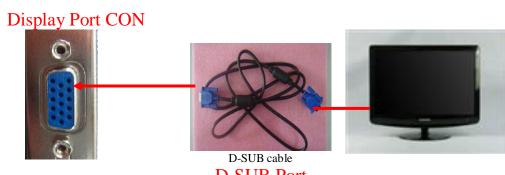


**D-SUB Port** 

- 6.3.2.3 Please install VGA card driver in Windows(You must use individual driver of this
- 6.3.2.4 Please run 3DMark06 base on this card (please test 1 cycle).
- 6.3.2.5 Press "Select" to enter Select test menu. You can choose "HDR1" for default setting.


# $\begin{array}{c} {\rm R7250X} \\ {\rm Standard\ Operation\ Procedure} \end{array}$

Doc. No:

Date: Oct. 18. 2016 Rev.: 1. 07 Page: 6

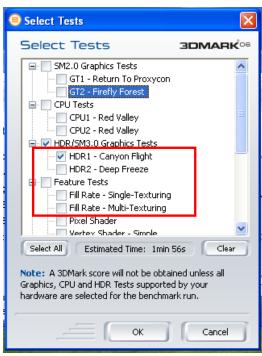

6.3.2.6 Press "Demo" to enter Demo menu. You can choose "Sounds" for default setting.

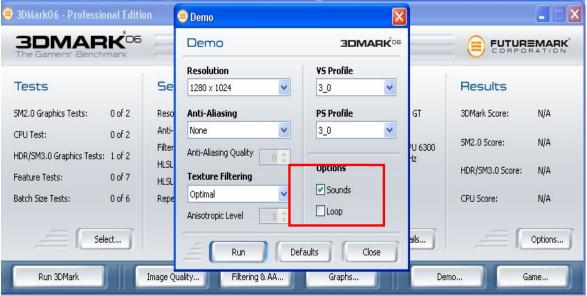

- 6.3.2.7 Please pay attention to check if there is flickering, discolor, crash and so on. If there's no problem, it can be judged OK!
- 6.3.2.8 Please listen to voice carefully to check whether it outputs sounds. If not, HDMI test fail.

# R7250X Standard Operation Procedure

Doc. No:

Date: Oct. 18. 2016 Rev.: 1.07 Page: 7




6. 3.2.9 If test OK, please test temperature test.

## R7250X Standard Operation Procedure


Doc. No:
Date: Oct. 18. 2016
Rev.: 1.07 Page: 8

### **6.4** Temperature test

- 6.4.1 Please copy Thermaltool(1.0.05) to Windows by yourself.
- 6.4.2 Please run ThermalTest.exe.



6.4.3 If test ok, show pass.

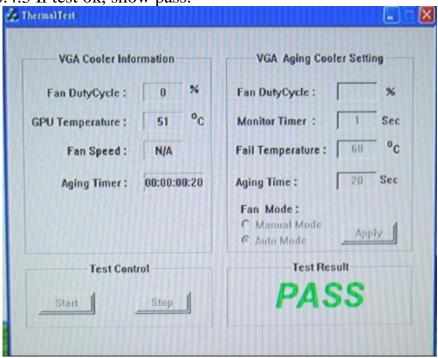

6.4.4 If test fail, show fail.



6.4.5 If test OK, please NTF test.

# R7250X Standard Operation Procedure

Doc. No:

Date: Oct. 18. 2016 Rev.: 1.07 Page: 9

# 7.Appendix

NO#	Equipment Description	ASUS Part#	Supplier	Quantity	Remarks
1	Dell 30 inches (3008WFP) (Buying a local LCD by yourself)			1	Dell Commen
2	USB MOUSE			1	
3	PS/2 KEYBOARD			1	
4	ATX POWER SUPPLY(a minimum power of 500W)			1	
5	Intel CPU Intel(R) Core(TM)2 CPU		local	1	E1100
6	Heat sink + FAN	22-240000160		1	
7	DDR3 1333 2G	20-TT2605618	local	4	
8	TEST HDD			1	
9	SATA HDD Cable	14-000107070	ASUS	1	
10	PCIEX16 VGA CARD			1	
11	Dual link DVI cable (Buying a local DVI cable by yourself)			1	
12	HDMI extend cable (Buying a local HDMI cable by yourself)			1	
13	P7H55-M/USB3 MB	80- MIBBKA-*		1	
14	Display port cable (Buying a local Display port cable by yourself)			1	ALLES AND
15	Mini Display port to HDMI cable (Buying a local Mini Display port to HDMI cable by yourself)			1	
16	D-SUB extend cable (Buying a local D-SUB cable by yourself)			1	