Assignment: 5

Title: Write a program using Arduino to control LED(One or more ON/OFF) or Blinking.

Objective: Connectivity and configuration of Raspberry-pi/ Beagal board/ Arduino circuit with basic peripherals like LEDS.

Hardware Requirement: Arduino, LED, 220 ohm resistor etc

Software Requirement: Arduino IDE

Theory:

This example shows the simplest thing you can do with an Arduino to see physical output: it blinks the on-board LED.

This example uses the built-in LED that most Arduino boards have. This LED is connected to a digital pin and its number may vary from board type to board type. To make your life easier, we have a constant that is specified in every board descriptor file. This constant is LED_BUILTIN and allows you to control the built-in LED easily. Here is the correspondence between the constant and the digital pin.


- D13 101
- D13 Due
- D1 Gemma
- D13 Intel Edison
- D13 Intel Galileo Gen2
- D13 Leonardo and Micro
- D13 LilyPad
- D13 LilyPad USB
- D13 MEGA2560
- D13 Mini
- D6 MKR1000
- D13 Nano
- D13 Pro
- D13 Pro Mini
- D13 UNO
- D13 Yún
- D13 Zero

If you want to lit an external LED with this sketch, you need to build this circuit, where you connect one end of the resistor to the digital pin correspondent to the LED_BUILTIN constant. Connect the long leg of the LED (the positive leg, called the anode) to the other end of the resistor. Connect the short leg of the LED (the negative leg, called the cathode) to the GND. In the diagram below we show an UNO board that has D13 as the LED BUILTIN value.


The value of the resistor in series with the LED may be of a different value than 220 ohm; the LED will lit up also with values up to 1K ohm.

Diagram:

Pin Diagram:

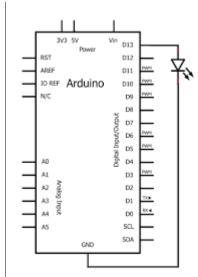

Schematic:



Apparatus: Arduino Uno board, Micro-IoT sensor actuator board, Power adaptor.

Interface:

LED	Arduino Pin
LED 1	0
LED 2	1
LED 3	2
LED 4	4

Procedure:

- **Step 1:** Connect the Arduino board to the Micro-IoT Sensor board using the FRC cable provided with the board.
- **Step 2:** Connect the Power supply adaptor and power on the circuit.
- Step 3: Open Arduino IDE and create a new sketch (program) for LED blinking using

the above pins.

- **Step 4:** In the Arduino IDE go to tools@Port and select the appropriate COM port.
- **Step 5:** In the Arduino IDE click on the upload button (to compile and download the code into the Arduino UNO. When successfully downloaded the code will start running and you can observe the LED's blinking on the board.

Code:

```
void setup() {
 // set the mode of the pins a s GPIO and direction as OUTPUT
pinMode(0, OUTPUT);
pinMode(1, OUTPUT);
pinMode(2, OUTPUT);
pinMode(4, OUTPUT);
void loop() {
 // put your main code here, to run repeatedly:
//Make LED ON
digitalWrite(0, HIGH);
delay(100);
digitalWrite(1, HIGH);
delay(100);
digitalWrite(2, HIGH);
 delay(100);
 digitalWrite(4, HIGH);
delay(200);
 //Make LED OFF
 digitalWrite(0, LOW);
delay(100);
digitalWrite(1, LOW);
delay(100);
digitalWrite(2, LOW);
delay(100);
digitalWrite(4, LOW);
delay(200);
```

Code:

After you build the circuit plug your Arduino board into your computer, start the Arduino Software (IDE) and enter the code below. You may also load it from the menu File/Examples/01.Basics/Blink . The first thing you do is to initialize LED_BUILTIN pin as an output pin with the line

pinMode(LED_BUILTIN, OUTPUT);

In the main loop, you turn the LED on with the line:

digitalWrite(LED BUILTIN, HIGH);

This supplies 5 volts to the LED anode. That creates a voltage difference across the pins of the LED, and lights it up. Then you turn it off with the line:

digitalWrite(LED BUILTIN, LOW);

That takes the LED_BUILTIN pin back to 0 volts, and turns the LED off. In between the on and the off, you want enough time for a person to see the change, so the **delay()** commands tell the board to do nothing for 1000 milliseconds, or one second. When you use the **delay()** command, nothing else happens for that amount of time. Once you've understood the basic examples, check out the BlinkWithoutDelay example to

learn how to create a delay while do	ing other things.	Once you've understood	I this example, check of	out the
DigitalReadSerial example to learn	how read a switc	ch connected to the board	l	

Observation:

You can observe the LED's turning ON and OFF. You can also change the delay and see the changes.

Conclusion:LED blinking is controlled by connectiong to Aurdino board