



Digitized Audio: Compression Benefit


- Digitized audio can be compressed
 - e.g., MP3s
 - A CD can hold about 20 songs uncompressed, but about 200 compressed
- Compression also done on digitized pictures (jpeg), movies (mpeg), and more
- Digitization has many other benefits too




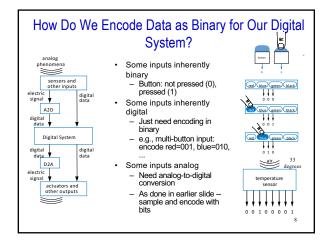



How to Encode Text: ASCII, Unicode Sample ASCII encodings ASCII: 7- (or 8-) bit encoding of 111 1001 111 1010 y z each letter, number, or symbol Unicode: Increasingly popular 16-bit encoding What does this ASCII bit sequence represent? Encodes 1010010 1000101 1010011 1010100 characters from various world languages REST

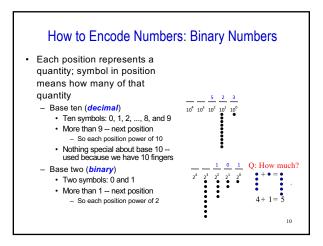


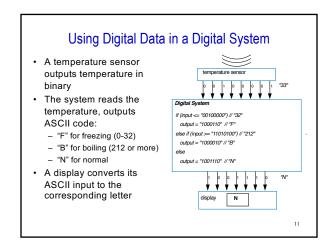


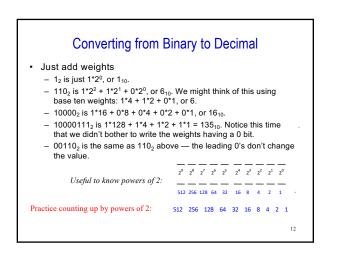


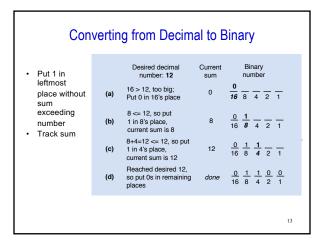


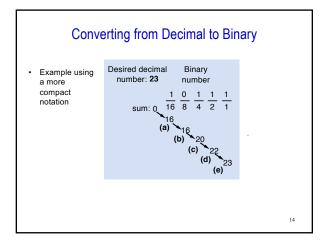

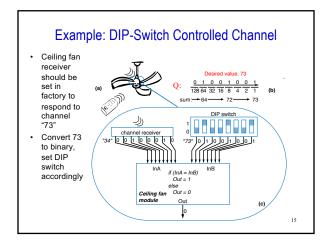


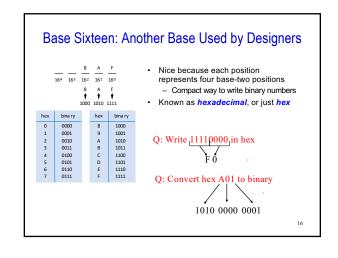


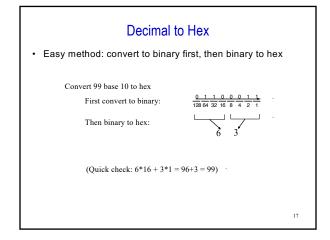

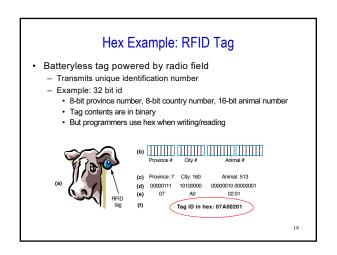

Converting To/From Binary by Hand: Summary

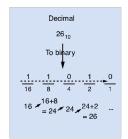


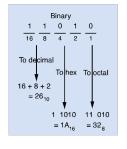

19

Divide-By-2 Method Common in Automatic Conversion


 Repeatedly divide decimal number by 2, place remainder in current binary digit (starting from 1s column)

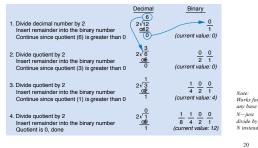

Bytes, Kilobytes, Megabytes, and More

- Byte: 8 bits
- · Common metric prefixes:
 - kilo (thousand, or $10^{\rm 3}),$ mega (million, or $10^{\rm 6}),$ giga (billion, or $10^{\rm 6}),$ and tera (trillion, or $10^{\rm 12}),$ e.g., kilobyte, or KByte
- · BUT, metric prefixes also commonly used inaccurately
 - 2¹⁶ = 65536 commonly written as "64 Kbyte"
 - Typical when describing memory sizes
- · Also watch out for "KB" for kilobyte vs. "Kb" for kilobit

21

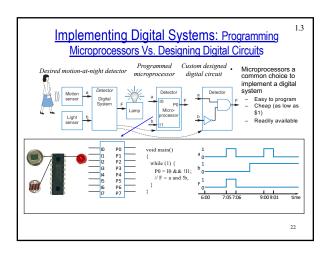

Digital Design: When Microprocessors Aren't Good Enough

- With microprocessors so easy, cheap, and available, why design a digital circuit?
 - Microprocessor may be too slow
 - Or too big, power hungry, or costly

Wing controller computation task:

- 50 ms on microprocessor
- 5 ms as custom digital circuit

If must execute 100 times per second:

- 100 * 50 ms = 5000 ms = 5 seconds
- 100 * 5 ms = 500 ms = 0.5 seconds

Microprocessor too slow, circuit OK.

Digital Design: When Microprocessors Aren't Good Enough Commonly, designers partition Q: How long for each a system among a microprocessor and custom implementation option digital circuits 5+8+1 =14 sec.1+.5+.8 Sample digital camera task execution times (in secon a microprocessor versus a digital circuit: =1.4 sec Digital Circuit Read 0.1 .1+.5+1 Compress 0.5 0.8 Good compromis 24

23

Summary

- Digital systems surround us
 - Inside computers
 - Inside many other electronic devices (embedded systems)
- · Digital systems use 0s and 1s
 - Encoding analog signals to digital can provide many benefits
 e.g., audio—higher-quality storage/transmission, compression, etc.
 - Encoding integers as 0s and 1s: Binary numbers
- Microprocessors (themselves digital) can implement many digital systems easily and inexpensively
 - But often not good enough—need custom digital circuits

25