

Raspberry PI Rotary Encoders

Tutorial



Bob Rathbone Computer Consultancy

www.bobrathbone.com

20th of April 2021

Contents

Introduction	3
Raspberry PI computer	3
Rotary encoder	4
The Rotary Class	6
Other rotary class calls	8
GPIO Hardware Notes	9
Appendix A The rotary encoder class	9
A.1 The rotary_class.py file	10
A.2 The test_rotary_class.py file	12
A.3 Example using two encoders	13
Appendix B Licences	14
Acknowledgements	
Glossary	
Tables	
Table 1 Rotary encoder sequence (Clockwise)	5
Table 2 Event interpretation using the delta between events	
Table 3 Wiring list for Rotary Encoders used in the PI internet radio	7
Figures	
Figure 1 Raspberry PI Model 3B Computer	
Figure 2 Rotary encoder wiring	
Figure 3 Typical incremental rotary encoder	
Figure 4 KY-040 Rotary Encoder	
Figure 6 Resphere Plinternet radio with Retary Freedors	
Figure 7 GPIO Numbers	/ م

Introduction

This tutorial has been designed to help students and constructors to understand how to use Rotary Encoders and to use them in their own Raspberry PI projects. The principle hardware required to build a project using Rotary Encoders consists of the following components:

- A Raspberry PI computer
- One or more rotary encoders with or without push button
- The rotary_class.py code and associated test programs.

Raspberry PI computer

The **Raspberry Pi** is a credit-card-sized single-board computer developed in the United Kingdom by the <u>Raspberry Pi Foundation</u> with the intention of promoting the teaching of basic computer science in schools.



Figure 1 Raspberry PI Model 3B Computer

More information on the Raspberry PI computer may be found here: http://en.wikipedia.org/wiki/Raspberry Pi

If you are new to the Raspberry PI try the following beginners guide at http://elinux.org/RPi Beginners

Rotary encoder

A good place to start is by taking a look at the following Wikipedia article: http://en.wikipedia.org/wiki/Rotary_encoder

There are several types of rotary encoder and encoding used. This tutorial is using the so called "Incremental Rotary Encoder". An incremental rotary encoder provides cyclical outputs (only) when the encoder is rotated.



Figure 2 Rotary encoder wiring

Rotary encoders have three inputs namely Ground, Pin A and B as shown in the diagram on the left. Wire the encoders according shown in Table 2 on page 10. If the encoder also has a push button knob then wire one side to ground and the other to the GPIO pin (Not shown in the diagram).



On the left is a typical hobbyist incremental rotary encoder. The one illustrated is the COM-09117 12-step rotary encoder from Sparkfun.com. It also has a select switch (Operated by pushing in on the knob in). This is the rotary encoder used in this tutorial.

Figure 3 Typical incremental rotary encoder


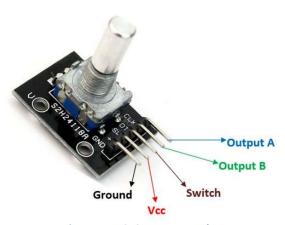


Figure 4 KY-040 Rotary Encoder

These cost-effective Rotary Encoders from Handson Technology are now being used more and more by constructors. The KY-040 Rotary Encoder specification shows that these are powered by +5V to the VCC pin.

However, the Raspberry Pi uses a +3.3V supply and cannot tolerate +5V on the GPIO's so the <u>advice</u> is to connect VCC to +3.3V. These encoders work fine with VCC as +3.3V with this project.

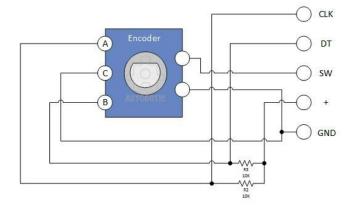

The specification shows the KY-040 rotary encoders are labelled CLK(Clock), DT(Data) and + (VCC) however it is more usual to label these A, B and C

The SW(Switch) connection is safe as it will pull the GPIO down to 0V.

Quadrature Output Table

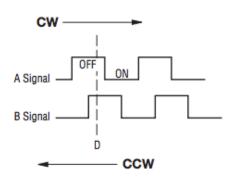


Figure 5 Quadrature output table

Table 1 Rotary encoder sequence (Clockwise)

Sequence	Α	В	A^B (C)	Value
0	0	0	0	0
1	1	0	1	5
2	1	1	0	6
3	0	1	1	3

The rotary encoder uses pins A and B as outputs. The A and B outputs to the GPIO inputs on the Raspberry PI will us the internal pull-up resistors, so that they read high when the contacts are open and low when closed. The inputs generate the sequence of values as shown on the left. As the inputs combined can have four states it is known as the quadrature sequence.

It is necessary to determine which direction the rotary encoder has been turned from these events.

The trick is to use the bitwise XOR value A^B to transform the input bits into an ordinal sequence number. There is no reason behind the XOR operation other than it to provide the bit sequence. For anticlocwise the sequence is reversed.

The next task is to determine what direction the rotary encoder has been turned. This is first done by determining the delta (change) between the previous state $(A + B + (A^{\wedge}))$ and the new state. The following code achieves this:

The %4 means give the remainder of a divide by 4 operation. The above code produces a value between 0 and 3 as shown in the following table:

Table 2 Event interpretation using the delta between events

Delta	Meaning
0	No change
1	One step clockwise
2	Two steps clockwise or counter-clockwise (Ignored)
3	One step counter-clockwise

The whole sequence of code (Python) is shown below:

```
# Get pin A state
if GPIO.input(pinA):
   rotary a = 1
else:
   rotary a = 0
# Get pin B state
if GPIO.input(pinB):
   self.rotary_b = 1
   self.rotary b = 0
# Create bit sequence
rotary_c = rotary_a ^ rotary_b
# Get the new rotary encoder state
new state = rotary a * 4 + rotary b * 2 + rotary c * 1
# Get the delta (difference) between the previous state and the new state
delta = (new state - last state) % 4
# Store the state for next time around
last_state = new_state
```

Why is **rotary_a** and **rotary_b** multiplied by 4 and 2 respectively? This is done to produce the value shown in the last column of Table 1 on page 5. The value of **rotary_c** will always be 0 or 1.

The Rotary Class

This tutorial uses the **rotary_class.py** Python class as shown in *Appendix A The rotary encoder class*. A class is like a blueprint for an object, in this case a rotary encoder. Why use a class? There are a lot of reasons but let's take a practical example.

I wished to use rotary encoders in a project for building and Internet Radio using the Raspberry PI. I want to define two rotary encoders. Using a rotary class, I can instantiate two or more rotary encoder definitions, for example: **leftknob** and **rightknob**, using the same rotary class code.

For details of this project See:

https://bobrathbone.com/raspberrypi/pi internet radio.html



Figure 6 Raspberry PI internet radio with Rotary Encoders

In this project I wish to use one rotary encoder for the volume control and mute functions and the other for the tuner and menu functions. The following table shows how the rotary encoders are wired. Of course other GPIO inputs may be used instead in your own project.

Table 3 Wiring list for Rotary Encoders used in the PI internet radio

GPIO Pin	Description	Function	Rotary Encoder 1 (Tuner)	Rotary Encoder 2 (Volume)
6	GND	Zero volts	Common	Common
7	GPIO 4	Mute volume		Knob Switch
8	GPIO 14	Volume down		Output A
9	Reserved			
10	GPIO 15	Volume up		Output B
11	GPIO 17	Channel Up	Output B	
12	GPIO 18	Channel Down	Output A	
22	GPIO 25	Menu Switch	Knob Switch	

To use the rotary class it must first be imported into the program that wishes to use it.

from rotary_class import RotaryEncoder

The general call for the rotary_class is:

```
knob = RotaryEncoder(PIN_A, PIN_B, BUTTON, event_handler)
```

Where PIN_A is the rotary encoder A output, PIN_B is the rotary encoder B output, BUTTON is the push button and event_handler is the routine (callback) which will handle the events. The new switch object is called knob.

So to define a volume control this would become:

```
VOLUME_UP = 15  # GPIO pin 10

VOLUME_DOWN = 14  # GPIO pin 8

MUTE_SWITCH = 4  # GPIO pin 7

volumeknob = RotaryEncoder(VOLUME_UP, VOLUME_DOWN, MUTE_SWITCH, volume_event)
```

We also need to define a routine called **volume_event** to handle the rotary encoder and push button events.

Events are defined in the rotary_class.py file.

```
CLOCKWISE=1
ANTICLOCKWISE=2
BUTTONDOWN=3
BUTTONUP=4
```

The event handler looks something like below:

In the same way we can define the tuner knob using a separate Rotary Class definition

```
CHANNEL_UP = 18  # GPIO pin 12
CHANNEL_DOWN = 17  # GPIO pin 11
MENU_SWITCH = 25  # GPIO pin 25
tunerknob = RotaryEncoder(CHANNEL_UP, CHANNEL_DOWN, MENU_SWITCH, tuner_event)
```

Note that a different routine **tuner_event** is defined for the tuner event. Now it can be seen that a single class can be used to define more than one object. In this case the **volume_knob** and **tuner_knob** objects.

Other rotary class calls

The state of the rotary encoder push switch can be read with the **getSwitchState** function.

```
MutePressed = tunerknob.getSwitchState(MENU_SWITCH)
```

GPIO Hardware Notes

The following shows the pin outs for the GPIO pins on revision 1 and 2 boards. For more information see: http://elinux.org/RPi Low-level peripherals.

GPIO Numbers

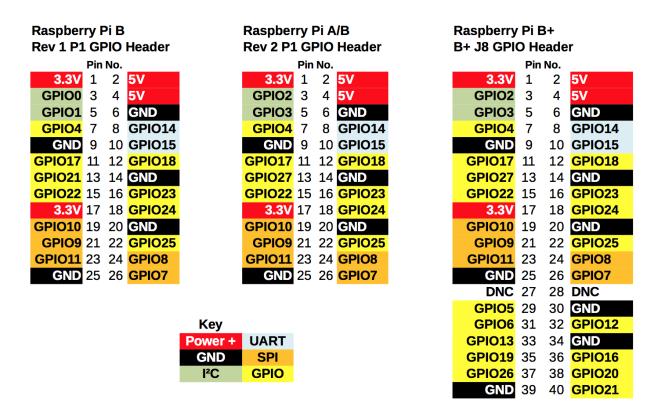


Figure 7 GPIO Numbers



Note: The B+, 2B, 3B and 4B have the same pin-outs.

Appendix A The rotary encoder class

The software is stored on GitHub at https://github.com/bobrathbone/pirotary

Install Git on the Raspberry Pi first

```
sudo apt-get install git
```

Clone the **pirotary** project in the user pi home directory

```
cd
git clone https://github.com/bobrathbone/pirotary
```

Make the software executable.

```
cd pirotary/
chmod +x *.py
```

Test the rotary class with the test program.

```
./test_rotary_class.py
Clockwise
Clockwise
Clockwise
Anticlockwise
Anticlockwise
Anticlockwise
Button down
Button up
```

A.1 The rotary_class.py file

```
#!/usr/bin/env python
# Raspberry Pi Rotary Encoder Class
# $Id: rotary class.py, v 1.3 2021/04/20 12:23:04 bob Exp $
# Author : Bob Rathbone
# Site
         : http://www.bobrathbone.com
# This class uses standard rotary encoder with push switch
import RPi.GPIO as GPIO
class RotaryEncoder:
         CLOCKWISE=1
         ANTICLOCKWISE=2
         BUTTONDOWN=3
        BUTTONUP=4
        rotary_a = 0
        rotary_b = 0
         rotary c = 0
         last state = 0
         direction = 0
         # Initialise rotary encoder object
         def __init__(self,pinA,pinB,button,callback):
                 se\overline{lf}.pinA = pinA
                 self.pinB = pinB
                 self.button = button
                 self.callback = callback
                 GPIO.setmode (GPIO.BCM)
                 # The following lines enable the internal pull-up resistors
                 # on version 2 (latest) boards
                 GPIO.setwarnings(False)
                 GPIO.setup(self.pinA, GPIO.IN, pull_up_down=GPIO.PUD_UP)
GPIO.setup(self.pinB, GPIO.IN, pull_up_down=GPIO.PUD_UP)
                 GPIO.setup(self.button, GPIO.IN, pull_up_down=GPIO.PUD_UP)
```

```
# For version 1 (old) boards comment out the above four
lines
                # and un-comment the following 3 lines
                #GPIO.setup(self.pinA, GPIO.IN)
                #GPIO.setup(self.pinB, GPIO.IN)
                #GPIO.setup(self.button, GPIO.IN)
                # Add event detection to the GPIO inputs
                GPIO.add_event_detect(self.pinA, GPIO.BOTH,
callback=self.switch event)
                GPIO.add_event_detect(self.pinB, GPIO.BOTH,
callback=self.switch event)
               GPIO.add event detect(self.button, GPIO.BOTH,
callback=self.button_event, bouncetime=200)
               return
        # Call back routine called by switch events
       def switch event(self, switch):
                if GPIO.input(self.pinA):
                       self.rotary a = 1
                else:
                       self.rotary a = 0
                if GPIO.input(self.pinB):
                       self.rotary_b = 1
                else:
                       self.rotary b = 0
                self.rotary_c = self.rotary_a ^ self.rotary_b
                new state = self.rotary a * 4 + self.rotary b * 2 +
self.rotary_c * 1
                delta = (new state - self.last state) % 4
                self.last_state = new_state
                event = 0
                if delta == 1:
                        if self.direction == self.CLOCKWISE:
                                # print "Clockwise"
                               event = self.direction
                       else:
                               self.direction = self.CLOCKWISE
                elif delta == 3:
                        if self.direction == self.ANTICLOCKWISE:
                                # print "Anticlockwise"
                               event = self.direction
                       else:
                               self.direction = self.ANTICLOCKWISE
                if event > 0:
                        self.callback(event)
                return
        # Push button up event
       event = self.BUTTONUP
                       event = self.BUTTONDOWN
                self.callback(event)
                return
        # Get a switch state
       def getSwitchState(self, switch):
                return GPIO.input(switch)
# End of RotaryEncoder class
```

A.2 The test_rotary_class.py file

This example uses GPIO pins 7, 8 and 10.

```
#!/usr/bin/env python
# Raspberry Pi Rotary Test Encoder Class
# Author : Bob Rathbone
# Site : http://www.bobrathbone.com
# This class uses a standard rotary encoder with push switch
import sys
import time
from rotary_class import RotaryEncoder
# Define GPIO inputs
PIN_A = 14  # Pin 8
PIN_B = 15  # Pin 10
BUTTON = 4
               # Pin 7
# This is the event callback routine to handle events
def switch event(event):
        if event == RotaryEncoder.CLOCKWISE:
               print "Clockwise"
        elif event == RotaryEncoder.ANTICLOCKWISE:
               print "Anticlockwise"
        elif event == RotaryEncoder.BUTTONDOWN:
               print "Button down"
        elif event == RotaryEncoder.BUTTONUP:
               print "Button up"
        return
# Define the switch
rswitch = RotaryEncoder(PIN A, PIN B, BUTTON, switch event)
while True:
        time.sleep(0.5)
```

A.3 Example using two encoders

This example (test_rotary_switches.py) shows how to handle two or more switches.

```
#!/usr/bin/env python
# Raspberry Pi Rotary Test Encoder Class
# $Id: test rotary switches.py, v 1.3 2014/01/31 13:57:28 bob Exp $
# Author : Bob Rathbone
# Site : http://www.bobrathbone.com
# This class uses standard rotary encoder with push switch
import sys
import time
from rotary class import RotaryEncoder
# Switch definitions
RIGHT BUTTON = 25
LEFT_A = 14

LEFT_B = 15
RIGHT A = 17
RIGHT B = 18
LEFT \overline{B}UTTON = 4
# This is the event callback routine to handle left knob events
def left knob event(event):
        handle_event(event,"Left knob")
        return
# This is the event callback routine to handle right knob events
def right knob event(event):
        handle event (event, "Right knob")
        return
# This is the event callback routine to handle events
def handle event(event, name):
        if event == RotaryEncoder.CLOCKWISE:
               print name, "Clockwise event =", RotaryEncoder.CLOCKWISE
        elif event == RotaryEncoder.ANTICLOCKWISE:
                print name, "Anticlockwise event =",
RotaryEncoder.BUTTONDOWN
        elif event == RotaryEncoder.BUTTONDOWN:
               print name, "Button down event =", RotaryEncoder.BUTTONDOWN
        elif event == RotaryEncoder.BUTTONUP:
               print name, "Button up event =", RotaryEncoder.BUTTONUP
        return
# Define the left and right knobs
leftknob = RotaryEncoder(LEFT A, LEFT B, LEFT BUTTON, left knob event)
rightknob = RotaryEncoder(RIGHT A, RIGHT B, RIGHT BUTTON, right knob event)
# Wait for events
while True:
        time.sleep(0.5)
```

Appendix B Licences

The software and documentation for this project is released under the GNU General Public Licence.

The GNU General Public License (GNU GPL or GPL) is the most widely used free software license, which guarantees end users (individuals, organizations, companies) the freedoms to use, study, share (copy), and modify the software. Software that ensures that these rights are retained is called free software. The license was originally written by Richard Stallman of the Free Software Foundation (FSF) for the GNU project.

The GPL grants the recipients of a computer program the rights of the Free Software Definition and uses *copyleft* to ensure the freedoms are preserved whenever the work is distributed, even when the work is changed or added to. The GPL is a *copyleft* license, which means that derived works can only be distributed under the same license terms. This is in distinction to permissive free software licenses, of which the BSD licenses are the standard examples. GPL was the first *copyleft* license for general use.

See http://www.gnu.org/licenses/#GPL for further information on the GNU General Public License.

The licences for the source and documentation for this project are:

GNU General Public License.

GNU AFFERO General Public License.

GNU Free Documentation License.

See http://www.gnu.org/licenses/gpl.html

See http://www.gnu.org/licenses/gpl.html

See http://www.gnu.org/licenses/gpl.html

Acknowledgements

Much of the information in this tutorial comes from an excellent article by <u>Guy Carpenter</u>. See: http://guy.carpenter.id.au/gaugette/2013/01/14/rotary-encoder-library-for-the-raspberry-pi/

My thanks to **Jim Smith** in Montenegro for his work on correcting edge-detection of the rotary encoder pins.

Glossary

GPIO General Purpose IO (On the Raspberry PI)