## Structural Matrices in MDOF Systems

Giacomo Boffi

Dipartimento di Ingegneria Strutturale, Politecnico di Milano

May 3, 2011

#### Structural Matrices

Giacomo Boffi

Introductory Remarks

Structural Matrices

Evaluation of Structural Matrices

Choice of Property Formulation

## Outline

### Introductory Remarks

#### Structural Matrices

Orthogonality Relationships Additional Orthogonality Relationships

### **Evaluation of Structural Matrices**

Flexibility Matrix

Example

Stiffness Matrix

Mass Matrix

Geometric Stiffness

Damping Matrix

External Loading

### Choice of Property Formulation

Static Condensation

Example

#### Structural Matrices

#### Giacomo Boffi

Introductory Remarks

Structural Matrices

Evaluation of Structural Matrices

## Introductory Remarks

Structural Matrices

Giacomo Boffi

Introductory Remarks

Structural Matrices

Evaluation of Structural Matrices

Choice of Property Formulation

Today we will study the properties of structural matrices, that is the operators that relate the vector of system coordinates x and its time derivatives  $\dot{x}$  and  $\ddot{x}$  to the forces acting on the system nodes,  $f_S$ ,  $f_D$  and  $f_I$ , respectively.

In the end, we will see again the solution of a *MDOF* problem by superposition, and in general today we will revisit many of the subjects of our previous class, but you know that a bit of reiteration is really good for developing minds.

### Structural Matrices

We already met the mass and the stiffness matrix, M and K, and tangentially we introduced also the dampig matrix C. We have seen that these matrices express the linear relation that holds between the vector of system coordinates x and its time derivatives  $\dot{x}$  and  $\ddot{x}$  to the forces acting on the system nodes,  $f_S$ ,  $f_D$  and  $f_I$ , elastic, damping and inertial force vectors.

$$M\ddot{x} + C\dot{x} + Kx = p(t)$$
$$f_I + f_D + f_S = p(t)$$

Also, we know that M and K are symmetric and definite positive, and that it is possible to uncouple the equation of motion expressing the system coordinates in terms of the eigenvectors,  $\mathbf{x}(t) = \sum q_i \psi_i$ , where the  $q_i$  are the modal coordinates and the eigenvectors  $\psi_i$  are the non-trivial solutions to the characteristic equation,

$$\left(\mathbf{K} - \omega^2 \mathbf{M}\right) \mathbf{\psi} = 0$$

#### Structural Matrices

Giacomo Boffi

Introductory Remarks

Structural Matrices

Orthogonality Relationships Additional Orthogonality Relationships

Evaluation of Structural Matrices

### Free Vibrations

From the homogeneous, undamped problem

$$\mathbf{M}\ddot{\mathbf{x}} + \mathbf{K}\mathbf{x} = 0$$

introducing separation of variables

$$\mathbf{x}(t) = \mathbf{\psi} (A \sin \omega t + B \cos \omega t)$$

we wrote the homogeneous linear system

$$\left(K - \omega^2 M\right) \psi = 0$$

whose non-trivial solutions  $\psi_i$  for  $\omega_i^2$  such that  $\|\mathbf{K} - \omega_i^2 \mathbf{M}\| = 0$  are the eigenvectors. It was demonstrated that, for each pair of distint *eigenvalues*  $\omega_r^2$  and  $\omega_s^2$ , the corresponding eigenvectors obey the ortogonality condition,

$$\psi_s^\mathsf{T} \mathbf{M} \psi_r = \delta_{rs} M_r, \quad \psi_s^\mathsf{T} \mathbf{K} \psi_r = \delta_{rs} \omega_r^2 M_r.$$

#### Structural Matrices

Giacomo Boffi

Introductory Remarks

Structural Matrices

Orthogonality Relationships Additional Orthogonality Relationships

Evaluation of Structural Matrices

Choice of Property Formulation

## Additional Orthogonality Relationships

From

$$\mathbf{K}\mathbf{\psi}_{s} = \omega_{s}^{2}\mathbf{M}\mathbf{\psi}_{s}$$

premultiplying by  $\psi_r^\mathsf{T} K M^{-1}$  we have

$$\mathbf{\psi}_{r}^{\mathsf{T}}\mathbf{K}\mathbf{M}^{-1}\mathbf{K}\mathbf{\psi}_{s} = \mathbf{\omega}_{s}^{2}\mathbf{\psi}_{r}^{\mathsf{T}}\mathbf{K}\mathbf{\psi}_{s} = \delta_{rs}\mathbf{\omega}_{r}^{4}\mathbf{M}_{r}$$

premultiplying the first equation by  $\psi_r^\mathsf{T} K M^{-1} K M^{-1}$ 

$$\boldsymbol{\psi}_{r}^{\mathsf{T}}\mathbf{K}\mathbf{M}^{-1}\mathbf{K}\mathbf{M}^{-1}\mathbf{K}\boldsymbol{\psi}_{s} = \boldsymbol{\omega}_{s}^{2}\boldsymbol{\psi}_{r}^{\mathsf{T}}\mathbf{K}\mathbf{M}^{-1}\mathbf{K}\boldsymbol{\psi}_{s} = \boldsymbol{\delta}_{rs}\boldsymbol{\omega}_{r}^{6}\mathbf{M}_{r}$$

and, generalizing,

$$\psi_{r}^{T}\left(KM^{-1}\right)^{b}K\psi_{s}=\delta_{rs}\left(\omega_{r}^{2}\right)^{b+1}M_{r}.$$

#### Structural Matrices

Giacomo Boffi

Introductory Remarks

Structural Matrices

Orthogonality Relationships

Additional Orthogonality Relationships

Evaluation of Structural Matrices

## Additional Relationships, 2

From

$$\mathbf{M} \mathbf{\psi}_s = \mathbf{\omega}_s^{-2} \mathbf{K} \mathbf{\psi}_s$$

premultiplying by  $\psi_r^\mathsf{T} M K^{-1}$  we have

$$\boldsymbol{\psi}_r^\mathsf{T} \boldsymbol{M} \boldsymbol{K}^{-1} \boldsymbol{M} \, \boldsymbol{\psi}_s = \boldsymbol{\omega}_s^{-2} \boldsymbol{\psi}_r^\mathsf{T} \boldsymbol{M} \, \boldsymbol{\psi}_s = \delta_{rs} \frac{M_s}{\omega_s^2}$$

premultiplying the first eq. by  $\psi_r^\mathsf{T} \left( M K^{-1} \right)^2$  we have

$$\psi_{r}^{\mathsf{T}}\left(MK^{-1}\right)^{2}M\psi_{s}=\omega_{s}^{-2}\psi_{r}^{\mathsf{T}}MK^{-1}M\psi_{s}=\delta_{rs}\frac{M_{s}}{\omega_{s}^{4}}$$

and, generalizing,

$$\psi_{r}^{\mathsf{T}}\left(MK^{-1}\right)^{b}M\,\psi_{s}=\delta_{rs}\frac{M_{s}}{\omega_{s}^{2}{}^{b}}$$

#### Structural Matrices

Giacomo Boffi

Introductory Remarks

Structural Matrices

Orthogonality Relationships Additional

Additional Orthogonality Relationships

Evaluation of Structural Matrices

Choice of Property Formulation

## Additional Relationships, 3

Defining  $X_{rs}(k) = \psi_r^T M (M^{-1}K)^k \psi_s$  we have

$$\begin{cases} X_{rs}(0) = \boldsymbol{\psi}_r^\mathsf{T} \boldsymbol{M} \boldsymbol{\psi}_s &= \delta_{rs} \left( \boldsymbol{\omega}_s^2 \right)^0 \boldsymbol{M}_s \\ X_{rs}(1) = \boldsymbol{\psi}_r^\mathsf{T} \boldsymbol{K} \boldsymbol{\psi}_s &= \delta_{rs} \left( \boldsymbol{\omega}_s^2 \right)^1 \boldsymbol{M}_s \\ X_{rs}(2) = \boldsymbol{\psi}_r^\mathsf{T} \left( \boldsymbol{K} \boldsymbol{M}^{-1} \right)^1 \boldsymbol{K} \boldsymbol{\psi}_s &= \delta_{rs} \left( \boldsymbol{\omega}_s^2 \right)^2 \boldsymbol{M}_s \\ \dots \\ X_{rs}(n) = \boldsymbol{\psi}_r^\mathsf{T} \left( \boldsymbol{K} \boldsymbol{M}^{-1} \right)^{n-1} \boldsymbol{K} \boldsymbol{\psi}_s &= \delta_{rs} \left( \boldsymbol{\omega}_s^2 \right)^n \boldsymbol{M}_s \end{cases}$$

Observing that  $\left(\mathbf{M}^{-1}\mathbf{K}\right)^{-1}=\left(\mathbf{K}^{-1}\mathbf{M}\right)^{1}$ 

$$\begin{cases} X_{rs}(-1) = \psi_r^T \left( M K^{-1} \right)^1 M \psi_s &= \delta_{rs} \left( \omega_s^2 \right)^{-1} M_s \\ \dots \\ X_{rs}(-n) = \psi_r^T \left( M K^{-1} \right)^n M \psi_s &= \delta_{rs} \left( \omega_s^2 \right)^{-n} M_s \end{cases}$$

finally

$$X_{rs}(k) = \delta_{rs} \omega_s^{2k} M_s \quad \text{for } k = -\infty, \dots, \infty.$$

#### Structural Matrices

Giacomo Boffi

Introductory Remarks

Structural Matrices

Orthogonality Relationships

Additional Orthogonality

Evaluation of Structural Matrices

## **Flexibility**

Given a system whose state is determined by the generalized displacements  $x_j$  of a set of nodes, we define the flexibility  $f_{jk}$  as the deflection, in direction of  $x_j$ , due to the application of a unit force in correspondance of the displacement  $x_k$ . The matrix  $\mathbf{F} = \lceil f_{jk} \rceil$  is the *flexibility matrix*.

The definition of flexibility put in clear that the degrees of freedom correspond to the points where there is  $\alpha$ ) application of external forces and/or b) presence of inertial forces.

Given a load vector  $\mathbf{p} = \{p_k\}$ , the displacementent  $x_j$  is

$$x_j = \sum f_{jk} p_k$$

or, in vector notation,

$$x = Fp$$

#### Structural Matrices

Giacomo Boffi

Introductory Remarks

Structural Matrices

Evaluation of Structural Matrices

Flexibility Matrix Example

Stiffness Matrix Strain Energy Symmetry

Direct Assemblage Example


Mass Matrix Consistent Mass Matrix

Discussion Geometric Stiffness


Damping Matrix Example External Loading


Choice of Property Formulation

## Example




The dynamical system

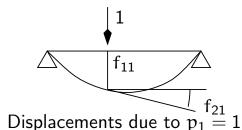



The degrees of freedom



and due to  $p_2 = 1$ .

#### Structural Matrices

Giacomo Boffi

Introductory Remarks

Structural Matrices

Evaluation of Structural Matrices

Flexibility Matrix

Example
Stiffness Matrix
Strain Energy
Symmetry
Direct
Assemblage
Example
Mass Matrix
Consistent Mass
Matrix
Discussion

Geometric Stiffness Damping Matrix Example External Loading

### Elastic Forces

Momentarily disregarding inertial effects, each node shall be in equilibrium under the action of the external forces and the elastic forces, hence taking into accounts all the nodes, all the external forces and all the elastic forces it is possible to write the vector equation of equilibrium

$$p = f_S$$

and, substituting in the previos vector expression of the displacements

$$x = F f_S$$

#### Structural Matrices

Giacomo Boffi

Introductory Remarks

Structural Matrices

Evaluation of Structural Matrices

Flexibility Matrix

Example
Stiffness Matrix
Strain Energy
Symmetry
Direct
Assemblage
Example
Mass Matrix
Consistent Mass
Matrix

Geometric Stiffness Damping Matrix Example

**External Loading** 

Discussion

Choice of Property Formulation

### Stiffness Matrix

The *stiffness matrix* K can be simply defined as the inverse of the flexibility matrix F,

$$K = F^{-1}$$
.

Alternatively the single coefficient  $k_{ij}$  can be defined as the external force (equal and opposite to the corresponding elastic force) applied to the DOF number i that gives place to a displacement vector  $\mathbf{x}^{(j)} = \left\{ \mathbf{x_n} \right\} = \left\{ \delta_{nj} \right\}$ , where all the components are equal to zero, except for  $\mathbf{x}_j^{(j)} = 1$ . Collecting all the  $\mathbf{x}^{(j)}$  in a matrix  $\mathbf{X}$ , it is  $\mathbf{X} = \mathbf{I}$  and we have, writing all the equations at once,

$$X = I = F [k_{ij}], \Rightarrow [k_{ij}] = K = F^{-1}.$$

Finally,

$$p = f_S = Kx$$
.

#### Structural Matrices

Giacomo Boffi

Introductory Remarks

Structural Matrices

Evaluation of Structural Matrices

Flexibility Matrix Example

Stiffness Matrix
Strain Energy
Symmetry
Direct
Assemblage
Example
Mass Matrix

Consistent Mass Matrix Discussion Geometric Stiffness

Damping Matrix
Example
External Loading

## Strain Energy

The elastic strain energy V can be written in terms of displacements and external forces,

$$V = \frac{1}{2} \mathbf{p}^{\mathsf{T}} \mathbf{x} = \frac{1}{2} \begin{cases} \mathbf{p}^{\mathsf{T}} \underbrace{\mathbf{F} \mathbf{p}}_{\mathbf{x}}, \\ \underbrace{\mathbf{x}^{\mathsf{T}} \mathbf{K}}_{\mathbf{p}^{\mathsf{T}}} \mathbf{x}. \end{cases}$$

Because the elastic strain energy of a stable system is always greater than zero, K is a positive definite matrix. On the other hand, for an unstable system, think of a compressed beam, there are displacement patterns that are associated to zero strain energy.

#### Structural Matrices

Giacomo Boffi

Introductory Remarks

Structural Matrices

Evaluation of Structural Matrices

Flexibility Matrix Example Stiffness Matrix

Strain Energy
Symmetry
Direct
Assemblage

Assemblage
Example
Mass Matrix
Consistent Mass

Matrix Discussion Geometric Stiffness Damping Matrix Example

**External Loading** 

Choice of Property Formulation

### **Symmetry**

Two sets of loads  $p^A$  and  $p^B$  are applied, one after the other, to an elastic system; the work done is

$$V_{AB} = \frac{1}{2} \mathbf{p}^{AT} \mathbf{x}^{A} + \mathbf{p}^{AT} \mathbf{x}^{B} + \frac{1}{2} \mathbf{p}^{BT} \mathbf{x}^{B}.$$

If we revert the order of application the work is

$$V_{BA} = \frac{1}{2} p^{B}^{T} x^{B} + p^{B}^{T} x^{A} + \frac{1}{2} p^{A}^{T} x^{A}.$$

The total work being independent of the order of loading,

$$\mathbf{p}^{\mathbf{A}^{\mathsf{T}}}\mathbf{x}^{\mathbf{B}} = \mathbf{p}^{\mathbf{B}^{\mathsf{T}}}\mathbf{x}^{\mathbf{A}}.$$

#### Structural Matrices

#### Giacomo Boffi

Introductory Remarks

Structural Matrices

Evaluation of Structural Matrices

Flexibility Matrix Example Stiffness Matrix Strain Energy

Symmetry

Direct
Assemblage
Example
Mass Matrix
Consistent Mass
Matrix
Discussion
Geometric
Stiffness
Damping Matrix
Example
External Loading

## Symmetry, 2

Structural Matrices

Giacomo Boffi

Expressing the displacements in terms of F,

Introductory Remarks

Structural Matrices

Evaluation of Structural Matrices

Flexibility Matrix Example Stiffness Matrix

Strain Energy
Symmetry
Direct

Assemblage
Example
Mass Matrix
Consistent Mass

Matrix Discussion Geometric Stiffness Damping Matrix Example

**External Loading** 

Choice of Property Formulation

$$\mathbf{p}^{\mathbf{A}^{\mathsf{T}}} \mathbf{F} \mathbf{p}^{\mathbf{B}} = \mathbf{p}^{\mathbf{B}^{\mathsf{T}}} \mathbf{F} \mathbf{p}^{\mathbf{A}},$$

both terms are scalars so we can write

$$\mathbf{p}^{A^\mathsf{T}}\mathbf{F}\,\mathbf{p}^B = \left(\mathbf{p}^{B^\mathsf{T}}\mathbf{F}\mathbf{p}^A\right)^\mathsf{T} = \mathbf{p}^{A^\mathsf{T}}\mathbf{F}^\mathsf{T}\,\mathbf{p}^B.$$

Because this equation holds for every p, we conclude that

$$\mathbf{F} = \mathbf{F}^{\mathsf{T}}$$
.

The inverse of a symmetric matrix is symmetric, hence

$$K = K^{T}$$
.

## Exceptions or not

For the kind of *structures* we mostly deal with in our examples, problems, exercises and assignments, that is *simple structures*, it is usually convenient to compute the flexibility matrix applying the Principle of Virtual Displacements (we have seen an example last week) and inverting the flexibilty to obtain the stiffness matrix,  $\mathbf{K} = \mathbf{F}^{-1}$ .

For general structures, large and/or complex, the PVD approach cannot work in practice, as the number of degrees of freedom necessary to model the structural behaviour exceed our ability to do pencil and paper computations... Different methods are required to construct the stiffness matrix for such large, complex structures.

Enters the Finite Elemente Method.

Structural Matrices

Giacomo Boffi

Introductory Remarks

Structural Matrices

Evaluation of Structural Matrices

Flexibility Matrix Example Stiffness Matrix Strain Energy

Symmetry
Direct
Assemblage
Example
Mass Matrix
Consistent Mass

Matrix

Discussion Geometric Stiffness Damping Matrix Example

External Loading

Structural Matrices

Giacomo Boffi

The most common procedure to construct the matrices that describe the behaviour of a complex system is the Finite Element Method, or FEM. The procedure can be sketched in the following terms:

- Introductory Remarks
- ▶ the structure is subdivided in non-overlapping portions, the *finite* elements, bounded by nodes, connected by the same nodes,
- Structural Matrices
- $\blacktriangleright$  the state of the structure can be described in terms of a vector xof generalized *nodal displacements*,
- Evaluation of Structural Matrices
- ▶ there is a mapping between element and structure DOF's,  $i_{el} \mapsto r$ ,
- Flexibility Matrix Example Stiffness Matrix Strain Energy
- ▶ the *element stiffness matrix*, K<sub>el</sub> establishes a linear relation between an element nodal displacements and forces,
- Symmetry Direct Assemblage
- $\blacktriangleright$  for each FE, all local  $k_{ij}$ 's are contributed to the global stiffness  $k_{rs}$ 's, with  $i \mapsto r$  and  $j \mapsto s$ , taking in due consideration differences between local and global systems of reference.
- Example Mass Matrix Consistent Mass Matrix Discussion Geometric Stiffness

**Damping Matrix** Example **External Loading** 

Note that in the r-th global equation of equilibrium we have internal forces caused by the nodal displacements of the FE that have nodes  $i_{el}$ such that  $i_{el} \mapsto r$ , thus implying that global K is a banded matrix.

Choice of **Property** Formulation

## Example

Structural Matrices

Consider a 2-D inextensible beam element, that has 4 DOF. namely two transverse end displacements  $x_1$ ,  $x_2$  and two end rotations,  $x_3$ ,  $x_4$ . The element stiffness is computed using 4 shape functions  $\psi_i$ , the transverse displacement being $v(s) = \sum_i \psi_i(s) x_i$ , the different  $\psi_i$  are such all end displacements or rotation are zero, except the one corresponding to index i.

Giacomo Boffi

Introductory Remarks

Structural **Matrices** 

Evaluation of Structural Matrices

Flexibility Matrix Example Stiffness Matrix Strain Energy Symmetry Direct

Assemblage

Example Mass Matrix Consistent Mass Matrix Discussion Geometric **Damping Matrix** Example External Loading

Choice of **Property** Formulation

The shape functions for a beam are

$$\begin{split} \psi_1(s) &= 1 - 3 \Big(\frac{s}{L}\Big)^2 + 2 \Big(\frac{s}{L}\Big)^3, \quad \psi_2(s) = 3 \Big(\frac{s}{L}\Big)^2 - 2 \Big(\frac{s}{L}\Big)^3, \\ \psi_3(s) &= s \left(1 - \Big(\frac{s}{L}\Big)^2\right), \qquad \quad \psi_4(s) = s \left(\Big(\frac{s}{L}\Big)^2 - \Big(\frac{s}{L}\Big)\right). \end{split}$$

### Example, 2

The element stiffness coefficients can be computed using, what else, the PVD: we compute the external virtual work done by a variation  $\delta x_i$  by the force due to a unit displacement  $x_j$ , that is  $k_{ij}$ ,

$$\delta W_{\rm ext} = \delta x_{\rm i} k_{\rm ij}$$
,

the virtual internal work is the work done by the variation of the curvature,  $\delta x_i \psi_i''(s)$  by the bending moment associated with a unit  $x_j$ ,  $\psi_i''(s) EJ(s)$ ,

$$\delta W_{\text{int}} = \int_0^L \delta x_i \psi_i''(s) \psi_j''(s) EJ(s) \, ds.$$

Structural Matrices

Giacomo Boffi

Introductory Remarks

Structural Matrices

Evaluation of Structural Matrices

Flexibility Matrix Example Stiffness Matrix Strain Energy Symmetry Direct

Assemblage Example

Example
Mass Matrix
Consistent Mass
Matrix
Discussion
Geometric
Stiffness
Damping Matrix
Example
External Loading

Choice of Property Formulation

## Example, 3

The equilibrium condition is the equivalence of the internal and external virtual works, so that simplifying  $\delta x_i$  we have

$$k_{ij} = \int_0^L \psi_i''(s)\psi_j''(s)EJ(s) ds.$$

For EJ = const,

$$\mathbf{f}_{S} = \frac{2EJ}{L^{3}} \begin{bmatrix} 6 & 6 & 3L & 3L \\ 6 & 6 & -3L & -3L \\ 3L & -3L & 2L^{2} & L^{2} \\ 3L & -3L & L^{2} & 2L^{2} \end{bmatrix} \mathbf{x}$$

#### Structural Matrices

Giacomo Boffi

Introductory Remarks

Structural Matrices

Evaluation of Structural Matrices

Flexibility Matrix Example Stiffness Matrix Strain Energy Symmetry

Direct Assemblage

Example
Mass Matrix
Consistent Mass
Matrix
Discussion

Geometric Stiffness Damping Matrix Example External Loading

### Blackboard Time!

Structural Matrices

Giacomo Boffi

Introductory Remarks

Structural Matrices

Evaluation of Structural Matrices

Flexibility Matrix Example Stiffness Matrix

Strain Energy Symmetry Direct


Assemblage Example

Mass Matrix Consistent Mass Matrix

Discussion
Geometric
Stiffness
Damping Matrix

Example
External Loading

Choice of Property Formulation

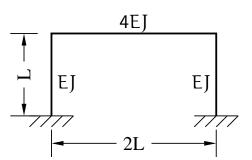

### Mass Matrix

The mass matrix maps the nodal accelerations to nodal inertial forces, and the most common assumption is to concentrate all masses in nodal point masses, without rotational inertia, computed *lumping* a fraction of each element mass (or a fraction of the supported mass) on all its bounding nodes.

This procedure leads to a so called *lumped* mass matrix, a diagonal matrix with diagonal elements greater than zero for all the translational degrees of freedom, and diagonal elements equal to zero for angular degrees of freedom.

The mass matrix is definite positive *only* if all the structure *DOF*'s are translational degrees of freedom, otherwise M is semi-definite positive and the eigenvalue procedure is not directly applicable. This problem can be overcome either by using a *consistent* mass matrix or using the *static* condensation procedure.

#### Structural Matrices

Giacomo Boffi

Introductory Remarks

Structural Matrices

Evaluation of Structural Matrices

Flexibility Matrix Example Stiffness Matrix Strain Energy Symmetry Direct

Assemblage Example

Mass Matrix
Consistent Mass
Matrix
Discussion
Geometric
Stiffness
Damping Matrix
Example

**External Loading** 

### Consistent Mass Matrix

A consistent mass matrix is built using the rigorous *FEM* procedure, computing the nodal reactions that equilibrate the distributed inertial forces that develop in the element due to a linear combination of inertial forces.

Using our beam example as a reference, consider the inertial forces associated with a single nodal acceleration  $\ddot{x}_j$ ,  $f_{l,j}(s) = m(s)\psi_j(s)\ddot{x}_j$  and denote with  $m_{ij}\ddot{x}_j$  the reaction associated with the i-nth degree of freedom of the element, by the PVD

$$\delta\,x_i m_{ij} \ddot{x}_j = \int \delta\,x_i \psi_i(s) m(s) \psi_j(s) \, \text{d} s \, \ddot{x}_j$$

simplifying

$$m_{ij} = \int m(s)\psi_i(s)\psi_j(s) \, ds.$$

For  $m(s) = \overline{m} = const.$ 

$$\mathbf{f_I} = \frac{\overline{m}L}{420} \begin{bmatrix} 156 & 54 & 22L & -13L \\ 54 & 156 & 13L & -22L \\ 22L & 13L & 4L^2 & -3L^2 \\ -13L & -22L & -3L^2 & 4L^2 \end{bmatrix} \ddot{\mathbf{x}}$$

#### Structural Matrices

Giacomo Boffi

Introductory Remarks

Structural Matrices

Evaluation of Structural Matrices

Flexibility Matrix
Example
Stiffness Matrix
Strain Energy
Symmetry
Direct
Assemblage
Example

Mass Matrix Consistent Mass Matrix

Discussion
Geometric
Stiffness
Damping Matrix
Example
External Loading

Choice of Property Formulation

### Consistent Mass Matrix, 2

#### Pro

- ▶ some convergence theorem of *FEM* theory holds only if the mass matrix is consistent,
- sligtly more accurate results,
- ▶ no need for static condensation.

### Contra

- ► M is no more diagonal, heavy computational aggravation,
- static condensation is computationally beneficial, inasmuch it *reduces* the global number of degrees of freedom.

Structural Matrices

Giacomo Boffi

Introductory Remarks

Structural Matrices

Evaluation of Structural Matrices

Flexibility Matrix
Example
Stiffness Matrix
Strain Energy
Symmetry
Direct
Assemblage
Example
Mass Matrix
Consistent Mass
Matrix

Discussion
Geometric
Stiffness
Damping Matrix
Example
External Loading

### Geometric Stiffness

A common assumption is based on a linear approximation, for a beam element

It is possible to compute the geometrical stiffness matrix using *FEM*, shape functions and PVD,

$$k_{G,ij} = \int N(s)\psi_i'(s)\psi_j'(s) ds,$$

for constant N

$$K_G = \frac{N}{30L} \begin{bmatrix} 36 & -36 & 3L & 3L \\ -36 & 36 & -3L & -3L \\ 3L & -3L & 4L^2 & -L^2 \\ 3L & -3L & -L^2 & 4L^2 \end{bmatrix}$$

#### Structural Matrices

Giacomo Boffi

Introductory Remarks

Structural Matrices

Evaluation of Structural Matrices

Flexibility Matrix
Example
Stiffness Matrix
Strain Energy
Symmetry
Direct
Assemblage
Example

Mass Matrix Consistent Mass Matrix

Discussion

Geometric Stiffness Damping Matrix Example

External Loading
Choice of
Property

Formulation

## Damping Matrix

From FEM,  $c_{ij}=\int c(s)\psi_i(s)\psi_j(s)\,ds$ . However, we want uncoupled equations, so we want to write directly the global damping matrix as

$$C = \sum_{b} \mathfrak{c}_{b} M \left( M^{-1} K \right)^{b}$$

so that, assuming normalized eigenvectors, we can write the  $\textit{modal damping } C_i$  as

$$C_{j} = \sum_{b} c_{b} \omega^{2b}$$

in obedience to the additional orthogonality relations that we have seen previously.

#### Structural Matrices

Giacomo Boffi

Introductory Remarks

Structural Matrices

Evaluation of Structural Matrices

Flexibility Matrix
Example
Stiffness Matrix
Strain Energy
Symmetry
Direct
Assemblage
Example
Mass Matrix
Consistent Mass
Matrix
Discussion
Geometric
Stiffness

Damping Matrix
Example
External Loading

### Example

We want a fixed, 5% damping ratio for the first three modes, taking note that the modal equation of motion is

$$\ddot{q}_i + 2\zeta_i\omega_i\dot{q}?i + \omega_i^2q_i = p_i^*$$

Using

$$C=\mathfrak{c}_0M+\mathfrak{c}_1K+\mathfrak{c}_2KM^{-1}K$$

we have

$$2 \times 0.05 \begin{Bmatrix} \omega_1 \\ \omega_2 \\ \omega_3 \end{Bmatrix} = \begin{bmatrix} 1 & \omega_1^2 & \omega_1^4 \\ 1 & \omega_2^2 & \omega_2^4 \\ 1 & \omega_3^2 & \omega_3^4 \end{bmatrix} \begin{Bmatrix} \mathfrak{c}_0 \\ \mathfrak{c}_1 \\ \mathfrak{c}_2 \end{Bmatrix}$$

Solving for the  $\mathfrak{c}$ 's and substituting above, the resulting damping matrix is orthogonal to every eigenvector of the system, for the first thee modes, leads to a modal damping ratio that is equal to 5%

#### Structural Matrices

Giacomo Boffi

Introductory Remarks

Structural Matrices

Evaluation of Structural Matrices

Flexibility Matrix Example Stiffness Matrix Strain Energy Symmetry

Direct Assemblage Example Mass Matrix

Consistent Mass Matrix Discussion Geometric


Damping Matrix
Example

External Loading

Choice of Property Formulation

### Example

Computing the coefficients  $\mathfrak{c}_0$ ,  $\mathfrak{c}_1$  and  $\mathfrak{c}_2$  to have a 5% damping at frequencies  $\omega_1=2$ ,  $\omega_2=5$  and  $\omega_3=8$  we have  $\mathfrak{c}_0=0.13187$ ,  $\mathfrak{c}_1=0.017473$  and  $\mathfrak{c}_2=-0.00010989$ . Writing  $\zeta(\omega)=\frac{1}{2}\left(\frac{\mathfrak{c}_0}{\omega}+\mathfrak{c}_1\omega+\mathfrak{c}_2\omega^3\right)$  we can plot the above function, along with its two term equivalent.

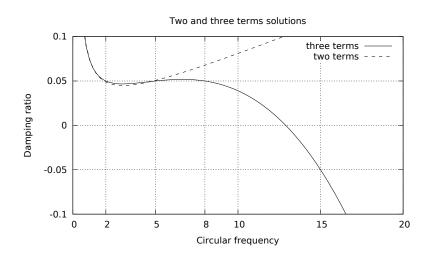

Negative damping? No, thank you: use only an even number of terms.

#### Structural Matrices

Giacomo Boffi

Introductory Remarks

Structural Matrices

Evaluation of Structural Matrices

Flexibility Matrix
Example
Stiffness Matrix
Strain Energy
Symmetry
Direct
Assemblage
Example
Mass Matrix
Consistent Mass
Matrix
Discussion
Geometric
Stiffness
Damping Matrix

Example
External Loading

## **External Loadings**

Structural Matrices

Giacomo Boffi

Introductory Remarks

Structural Matrices

Evaluation of Structural Matrices Flexibility Matrix

Stiffness Matrix Strain Energy Symmetry Direct Assemblage Example

Consistent Mass Matrix Discussion Geometric Stiffness Damping Matrix

Mass Matrix

Example
External Loading

Choice of Property Formulation

Following the same line of reasoning that we applied to find nodal inertial forces, by the PVD and the use of shape functions we have

# $p_{\textbf{i}}(t) = \int p(s,t) \psi_{\textbf{i}}(s) \, \text{d}s.$

For a constant, uniform load  $p(s,t) = \overline{p} = \text{const}$ , applied on a beam element,

$$\mathbf{p} = \overline{p} \mathbf{L} \begin{pmatrix} \frac{1}{2} & \frac{1}{2} & \frac{L}{12} & -\frac{L}{12} \end{pmatrix}^{\mathsf{T}}$$

### Choice of Property Formulation

### Simplified Approach

Some structural parameter is approximated, only translational *DOF*'s are retained in dynamic analysis.

### Consistent Approach

All structural parameters are computed according to the *FEM*, and all *DOF*'s are retained in dynamic analysis.

If we choose a simplified approach, we must use a procedure to remove unneeded structural *DOF*'s from the model that we use for the dynamic analysis.

Enter the Static Condensation Method.

#### Structural Matrices

Giacomo Boffi

Introductory Remarks

Structural Matrices

Evaluation of Structural Matrices

Choice of Property Formulation

Static Condensation Example

### Static Condensation

Structural Matrices

Giacomo Boffi

Introductory Remarks

Structural Matrices

Evaluation of Structural Matrices

Choice of Property Formulation

Static Condensation Example

We have, from a *FEM* analysis, a stiffnes matrix that uses all nodal *DOF*'s, and from the lumped mass procedure a mass matrix were only translational (and maybe a few rotational) *DOF*'s are blessed with a non zero diagonal term. In this

case, we can always rearrange and partition the displacement vector  $\mathbf{x}$  in two subvectors:  $\mathbf{a}$ )  $\mathbf{x}_A$ , all the DOF's that are associated with inertial forces and  $\mathbf{b}$ )  $\mathbf{x}_B$ , all the remaining DOF's not associated with inertial forces.

$$\mathbf{x} = \begin{bmatrix} \mathbf{x}_A & \mathbf{x}_B \end{bmatrix}^\mathsf{T}$$

### Static Condensation, 2

After rearranging the *DOF*'s, we must rearrange also the rows (equations) and the columns (force contributions) in the structural matrices, and eventually partition the matrices so that

$$\begin{cases} \mathbf{f}_{\mathrm{I}} \\ \mathbf{0} \end{cases} = \begin{bmatrix} \mathbf{M}_{\mathrm{AA}} & \mathbf{M}_{\mathrm{AB}} \\ \mathbf{M}_{\mathrm{BA}} & \mathbf{M}_{\mathrm{BB}} \end{bmatrix} \begin{pmatrix} \ddot{\mathbf{x}}_{\mathrm{A}} \\ \ddot{\mathbf{x}}_{\mathrm{B}} \end{pmatrix}$$

$$\mathbf{f}_{\mathrm{S}} = \begin{bmatrix} \mathbf{K}_{\mathrm{AA}} & \mathbf{K}_{\mathrm{AB}} \\ \mathbf{K}_{\mathrm{BA}} & \mathbf{K}_{\mathrm{BB}} \end{bmatrix} \begin{pmatrix} \mathbf{x}_{\mathrm{A}} \\ \mathbf{x}_{\mathrm{B}} \end{pmatrix}$$

with

$$\mathbf{M}_{\mathrm{BA}} = \mathbf{M}_{\mathrm{AB}}^{\mathsf{T}} = \mathsf{0}$$
,  $\mathbf{M}_{\mathrm{BB}} = \mathsf{0}$ ,  $\mathbf{K}_{\mathrm{BA}} = \mathbf{K}_{\mathrm{AB}}^{\mathsf{T}}$ 

Finally we rearrange the loadings vector and write...

#### Structural Matrices

Giacomo Boffi

Introductory Remarks

Structural Matrices

Evaluation of Structural Matrices

Choice of Property Formulation

Static Condensation Example

## Static Condensation, 3

Structural Matrices

Giacomo Boffi

... the equation of dynamic equilibrium,

Introductory

Remarks Structural

Matrices Evaluation of

Structural Matrices

Choice of **Property** Formulation

Static Condensation Example

$$p_A = M_{AA}\ddot{x}_A + M_{AB}\ddot{x}_B + K_{AA}x_A + K_{AB}x_B$$
$$p_B = M_{BA}\ddot{x}_A + M_{BB}\ddot{x}_B + K_{BA}x_A + K_{BB}x_B$$

The terms in red are zero, so we can simplify

$$M_{AA}\ddot{x}_A + K_{AA}x_A + K_{AB}x_B = p_A$$
$$K_{BA}x_A + K_{BB}x_B = p_B$$

solving for  $x_B$  in the 2nd equation and substituting

$$egin{aligned} x_{
m B} &= {\sf K}_{
m BB}^{-1} {\sf p}_{
m B} - {\sf K}_{
m BB}^{-1} {\sf K}_{
m BA} x_{
m A} \ p_{
m A} &- {\sf K}_{
m BB}^{-1} {\sf p}_{
m B} = M_{
m AA} \ddot{x}_{
m A} + \left( {\sf K}_{
m AA} - {\sf K}_{
m AB} {\sf K}_{
m BB}^{-1} {\sf K}_{
m BA} 
ight) x_{
m A} \end{aligned}$$

## Static Condensation, 4

Structural Matrices

Giacomo Boffi

Introductory Remarks

Structural Matrices

Evaluation of Structural Matrices

Choice of Property Formulation

Static Condensation Example

Going back to the homogeneous problem, with obvious positions we can write

$$(\overline{\mathbf{K}} - \omega^2 \overline{\mathbf{M}}) \, \psi_A = 0$$

but the  $\psi_A$  are only part of the structural eigenvectors, because in essentially every application we must consider also the other DOF's, so we write

$$\psi_{\mathfrak{i}} = \left\{\begin{matrix} \psi_{A,\mathfrak{i}} \\ \psi_{A,\mathfrak{i}} \end{matrix}\right\} \text{, with } \psi_{B,\mathfrak{i}} = K_{BB}^{-1} K_{BA} \psi_{A,\mathfrak{i}}$$

## Example

### Structural Matrices

Giacomo Boffi

Introductory Remarks

Structural Matrices

Evaluation of Structural Matrices

Choice of Property Formulation

Static Condensation Example

$$\mathbf{K} = \frac{2EJ}{L^3} \begin{bmatrix} 12 & 3L & 3L \\ 3L & 6L^2 & 2L^2 \\ 3L & 2L^2 & 6L^2 \end{bmatrix}$$

Disregarding the factor  $2EJ/L^3$ ,

$$\mathbf{K}_{\mathrm{BB}} = \mathrm{L}^2 \begin{bmatrix} 6 & 2 \\ 2 & 6 \end{bmatrix}$$
,  $\mathbf{K}_{\mathrm{BB}}^{-1} = \frac{1}{32\mathrm{L}^2} \begin{bmatrix} 6 & -2 \\ -2 & 6 \end{bmatrix}$ ,  $\mathbf{K}_{\mathrm{AB}} = \begin{bmatrix} 3\mathrm{L} & 3\mathrm{L} \end{bmatrix}$ 

The matrix  $\overline{K}$  is

$$\overline{\mathbf{K}} = \frac{2EJ}{L^3} \left( 12 - \mathbf{K}_{AB} \mathbf{K}_{BB}^{-1} \mathbf{K}_{AB}^\mathsf{T} \right) = \frac{39EJ}{2L^3}$$