

LSAPI SERVICE INTERFACE

By ARCA Technologies s.r.l. Via Statale 17 10012 BOLLENGO (TO)

tel. ++390125235611 fax. ++390125235623 web site: www.arca.com e-mail: techsupp.it@arca.com

Last revision: May 21, 2019



Contents

Overview	6
Interface Functions Description	7
LsApi.ini Description	9
Basic functions	22
LSConnect	23
LSConnectWithNetworkName	
LSConnectWithIPAddress	
LSDisconnect	
LSSetNetworkName	
LSSetIPAddress	29
LSGetVersion	30
LSUnitConfiguration	31
LSUnitReserve	34
LSUnitRelease	35
LSDocHandle	36
LSReadCodeline	41
LSReadImage	43
LSReadImageEx	45
LSReadImageMH	48
LSDocHandleAndReadImage	50
LSSetThresholdClearBlack	55
LSLoadString	56
LSLoadStringWithCounterEx	58
LSLoadMixedString	
LSLoadMultiStrings	
LSReset	
LSConfigDoubleLeafingAndDocLength	
LSSetUnitSpeed	
LSUnitStatus	
LSPeripheralStatus	
LSSetSorterCriteria	
LSSetOpticalWindows	
LSDisableWaitDocument	
LSChangeStampPosition	
LSUnitHistory	
Advanced document handling functions	87
LSAutoDocHandle	88
LSAutoDocHandleVB	
LS800AutoDocHandle	
LS800AutoDocHandleVB	105
LS800AutoDocHandleWithAllCallback	109
LSGetDocData	
LSGetDocDataMH	119



LSGetDocDataEx	122
LSStopAutoDocHandle	126
Magnetic stripe reader functions	127
LSReadBadge	128
LSReadBadgeWithTimeout	
Software Read Codelines functions	
LSCodelineReadFromBitmap	132
LSReadBarcodeFromBitmap	
LSGetNextBarcode	
LSReadMicroHolesCodelines	
LSReadBarcodeDriverLicense	
Image manipulation functions	144
LSSaveJPEG	145
LSSaveTIFFEx	146
LSSavePNG	148
LSSaveDIB	149
LSConvertToJPEG	150
LSConvertToTIFF	151
LSConvertImageToBW	153
LSConvertImageToBWWithReport	155
LSSetBinarizationParameters	157
LSConvertImageResolution	159
LSConvertImageColorTo256Gray	
LSConvertImage256To16Gray	
LSEnableImageCorrection	
LSFreeImage	
LSRotateImage	
LSImageBrightness	
LSImageContrast	
LSCutImage	
LSDisplayImage	
LSUpdateImage	
Ultra Violet Image functions	
LSModifyPWMUltraViolet	
LSMergeImageGrayAndUV	
LSMergeImageColorAndUV	
LSConvertUVtoBWEx	
Miscellaneous functions	178
LSSetLightIntensity	179
LSLED	180
LSBeep	181
IQA document functions	182
CtsIQA.ini File Configuration Description	183
Test and subsection Description	
Undersize Image	184
Folder or Torn Document Corner	185
Folder or Torn Document Corner	186



Document Framming Error	187
Excessive Document Skew	188
Oversize Image	189
Piggyback Documents	190
Image Too Light	
Image Too Dark	
Horizontal Streaks in the Image	
Below Minimum Compressed Image Size	
Above Minimum Compressed Image Size	
Excessive "Spot Noise" in Image	
Front Rear Image Dimension Mismatch	
Carbon Strip Detected	
Image "Out of Focus"	
ARCA Image Quality Assurance	
LSIQACheckImage	
LSIQACheckImageMemory	
LSIQAGetTestsError	
LSIQAgetLoadIniError	
LSIQALibraryVersion	
PDF/A document functions	
·	
LSPDFASetMetadata	
LSPDFADeleteMetadata	
LSPDFASaveDoc	
Digital Print functions	212
LSDigitalPrint	213
LSLoadDigitalStringWithCounter	
Security functions	
-	
LSSetSignatureKey	
CTSCheckImageSignature	
CTSCheckSignature	
LSWriteCertificate	
LSReadCertificate	
Debug and Download functions	223
LSViewOCRRectangle	224
LSDownloadFirmware	
Application Program Guideline	
••	
Sample code	228
Sample code in C language for the LS515 extracted from LSW5 demo code	228
DoSingleDocHandle()	228
DoAutoDocHandle()	240
Sample code in C language for the LS800 extracted from LSW8 demo code	250
DoAutoDocHandle()	
Define and Declare for Visual Basic	274
Sample code in C# (for .NET)	291
Sample code in VB (for .NET)	317
Reply codes	344





Overview

This document describes the C-Language compatible application programming interface (API) of the LS service functions for the Win32 subsystem of the Windows operating system, for LS40, LS100, LS150, LS500, LS505, LS510, LS515 and LS800 check scanner models.

The API is independent from the physical connection technology, whether it be SCSI, RS232, USB or Ethernet used to connect the check scanners to the host system.

The reader must have a background knowledge of Win32 environment architecture and programming techniques.

A further little tip for programmers...

this documentation should always be up-to-date, however during the development process, it is advisable to mainly refer to the include file Isapi.h supplied in the last version of the SDK, in order to get all the current and correct interface data (defines, structures, function prototypes...)

The LsApi.dll library extract same library for support, this library are placed in the same folder as where LsApi.dll is located, the folder can be also selected to by setting the following registry key,

HKEY_LOCAL_MACHINE\SOFTWARE\ARCA Technologies\LsApiPath With the complete folder path.



Interface Functions Description

All functions exported by the LS service are implemented in LsApi.DLL.

To build an application program written in "C"-Language that makes use of these interface functions it is necessary to include the file named **LsApi.H** and link **LsApi.LIB** library. To start an application program that uses this service it is necessary to install in the application directory the files listed below:

LsApi.DLL

LS service contains the following modules :

- LsApi.DLL
- LsApi.H
- LsApi.LIB
- IMG UTIL.DLL
- LFBMP13N.DLL
- LFCMP13N.DLL
- LFFAX13N.DLL
- LFTIF13N.DLL
- LTDIS13N.DLL
- LTDLG13N.DLL
- LTEFX13N.DLL
- LTFIL13N.DLL
- LTIMG13N.DLL
- LTKRN13N.DLL
- CtsDecod.DLL
- MicrDecodelib.DLL
- CtsPdf.DLL (optional)
- BarDecode.DLL (optional)
- CtsDataMatrix.DLL (optional)
- CtsQRCode.DLL (optional)
- CtsTopImage.DLL (optional)
- cv210.dll
- cxcore210.dll
- highgui210.dll
- CtsClearPIX.DLL (optional)
- CtsImagePro.DLL (optional)
- CtsPdfDriverLicense.DLL (optional)
- CtsIQA.DLL (optional)
- CtsMetrix.DLL (optional)
- CtsBarcodeLocate.DLL (optional)
- CtsRS.DLL (optional)
- Img2PdfAPI (optional)

All functions work in **suspensive** (synchronous) mode.

With the Ethernet connection, the images are exchanged over the network with a SSL secure protocol.

This is true is the following libraries are present in the same folder as where LsApi.dll is located on the computer side:

LIBEAY32.DLL



SSLEAY32.DLL LIBSSL32.DLL

This libraries mentioned above are downloadable from the link www.openssl.org.



LsApi.ini Description

All exported functions can be supported from an external file configuration called LsApi.ini.

This file must be copied in the same folder where is installed LsApi.dll.

It's composed of two different sections, one specific for the unit model, another specific for the single functions (this parser must be implemented).

It's not necessary that all section be present in the ini file, only the sections present will be handled.

Note that it is possible to activate emulations via LsApi.ini file. Only one emulation can be activated at the same time.

Hereafter it's explained the flow adopted to connect a LSConnect:

- 1. Is FLAG Ls150_USB_as_Ls150_IpBox = TRUE goto 2
- 2. Logical name... If not found goto 3.....if found connect to it...
- 3. IP address set in ini file If not found goto 4....if found connect to it
- 4. Default IP address 172.16.1.109....if not found the ERROR, if found connect to it...

If an empty entry of [IPBOX] in the ini file will always try to connect to the default IP Address 172.16.1.109.

Sections description and their possible parameters :

;	
; [Global] -	Section to configure global parameters
;	
; CheckCa	rtridge= Enables or disables the automatic check on the cartridge level
;	Legal values : TRUE, FALSE, POPUP.
;	Default : FALSE



; ThresholdInkDropsCartridge = this parameter defines the number of spots to be used as a maximum for determining that the cartridge level is low. Advised: 112000000 [Global] CheckCartridge = true ThresholdInkDropsCartridge = 106000000 • ; [Logging] - Section to configure trace parameters ; Enable = Enable disable the logging Legal values : true or false ; BatchMode = Enable disable the batch logging Legal values : true or false ; LogDir = Logging Folder es. C:\Windows\Temp if missing then directory is CtsTrace of Isapi directory ; MaxSize = Max size file logging (per file in batch mode) in bytes. (min value accepted 1 Mb.) [Logging] Enable = false BatchMode = true LogDir = C:\Windows\Temp MaxSize = 4194304



```
; [LsSharing] - Section to configure a shared connection.
; PC_IPAddress = IP address of the PC with the LS unit
; Computer_Name = Network Computer Name
._____
[LsSharing]
PC_IPAddress = 172.16.1.197
;Computer_Name = PC_NAME
; [LS40] - Section to configure the LS40 model
; Deskew=
             Enables or disables the automatic image deskew
       Legal values : TRUE, FALSE.
       Advised : TRUE
; Mocr = Enables or disables MICR+OCR
       Legal values : E13B, CMC7, FALSE
         Advised: E13B or CMC7 depending on the check type used in your market
; Ls40_as_Ls100 = If TRUE a LS40 connected works as a LS100
         Legal values : TRUE, FALSE.
; Ls40_USB_as_Ls40_IpBox = If TRUE a LS40IPBOX connected works as a LS40-USB
```



```
Legal values: TRUE, FALSE.
; Ls40_Stamp = If this parameter is present it must be set to FRONT_STAMP to force the
          stamp when the LS40 is connected in LS100 emulation mode.
; Ls100_Model = String returned by the LSIdentify API when a LS40 is connected as LS100.
          The string is the version of the Firmware expected by the application.
; BitonalMethod = This parameter defines the default method to be used for the bitonal
conversion.
          Legal values:
          4 ALGORITHM_CTS
                                     (Threshold Dinamyc)
          6 ALGORITHM_CTS_3
                                             (Threshold Fixed)
          7 ALGORITHM_TOP_IMAGE
                                             (Threshold Dinamyc)
                                             (Threshold Dinamyc)
          8 ALGORITHM_IMAGE_PRO
          9 ALGORITHM_CLEAR_PIX (Threshold Dinamyc)
          Advised: 4
; BitonalThreshold = This parameter defines the default threshold to be used for the bitonal
conversion.
          Legal values:
          for method ALGORITHM_CTS (4) from 50 to 600. Advised 290
          for method ALGORITHM_CTS_3 (6) from 0 to 15. Advised 9
          for method ALGORITHM_TOP_IMAGE (7) from 50 to 600. Advised 290
          for method ALGORITHM_CLEAR_PIX (9) from 50 to 600. Advised 290
; ThresholdBackground = Value used as threshold for clear the document.
          Legal values: 0 to 255 (default 68)
```

; BlankInCodeline = This parameter defines the number of blank insert in codeline.



;	Legal values :			
;	NO_BLANK			
;	ONE_BLANK			
;				
; LightInter	nsity = This parameter allows to in	crease the light intensity for the ls40		
;	Legal Values:			
;	from 0 to 30			
;				
[LS40]				
Deskew =	TRUE			
Mocr = E1	3B			
BitonalMet	thod = 4			
BitonalThr	eshold = 290			
Ls40_as_l	Ls40_as_Ls100 = TRUE ; if True a LS40 connected works as a LS100			
Ls40_USB_as_Ls40_lpBox = FALSE		; if TRUE a Ls40 connected to IPBox work as LS40 USB		
		; Is the Model returned by the LSIdentify when a LS40 is connected as LS100		
BlankInCo	deline = ONE_BLANK			
Threshold	BackGround = 68			
LightIntens	sity = 0			
;				
; [LS100] - Section to configure the LS100 model				
;				
; DoubleLeafingValue = It sets the default double leafing sensitivity for each document.				
; Legal values: percentage from 1 to 100 from the default device setting.				
;	Advised : 40			



```
; DoubleLeafingMinLength= minimum document length in millimeter that can be processed
; DoubleLeafingMaxLength= maximum document length in millimeter that can be processed
; Deskew=
              Enables or disables the automatic image deskew
          Legal values: TRUE, FALSE.
          Advised: TRUE
: Mocr = Enables or disables MICR+OCR
         Legal values: E13B, CMC7, FALSE
          Advised: E13B or CMC7 depending on the check type used in your market
; Ls100_USB_as_Ls100_lpBox= If TRUE a LS100IPBOX connected works as a LS100-USB
          Legal values: TRUE, FALSE.
; Ls100 IpBox as Ls100 Ip= If TRUE a LS100IPBOX connected works as a LS100IP
          Legal values: TRUE, FALSE.
; Ls100_Model = String returned by the LSIdentify API when a LS100 is connected in
emulation mode.
          The string is the version of the Firmware expected by the application.
; BitonalMethod = This parameter defines the default method to be used for the bitonal
conversion.
         Legal values:
          4 ALGORITHM_CTS
                                    (Threshold Dinamyc)
          6 ALGORITHM_CTS_3
                                           (Threshold Fixed)
                                           (Threshold Dinamyc)
         7 ALGORITHM_TOP_IMAGE
         8 ALGORITHM_IMAGE_PRO
                                           (Threshold Dinamyc)
          9 ALGORITHM_CLEAR_PIX (Threshold Dinamyc)
```



```
Advised: 4
; BitonalThreshold = This parameter defines the default threshold to be used for the bitonal
conversion.
         Legal values:
          for method ALGORITHM_CTS (4) from 50 to 600. Advised 290
          for method ALGORITHM_CTS3 (6) from 0 to 15. Advised 9
          for method ALGORITHM_TOP_IMAGE (7) from 50 to 600. Advised 290
          for method ALGORITHM_CLEAR_PIX (9) from 50 to 600. Advised 290
; ThresholdBackground = Value used as threshold for clear the document.
          Legal values: 0 to 255 (default 68)
[LS100]
DoubleLeafingValue = 40
DoubleLeafingMinLength = 150
DoubleLeafingMaxLength = 216
Deskew = TRUE
Mocr = E13B
BitonalMethod = 4
BitonalThreshold = 290
Ls100_USB_as_Ls100_lpBox = FALSE
Ls100_lpBox_as_Ls100_lp = FALSE
Ls100_Model = LS100/7_09
Ls100_USB_as_Ls100_lpBox = TRUE
                                        ; if TRUE a Ls100 connected to IPBox work as
                                        LS100 USB
Ls100_lpBox_as_Ls100_lp = FALSE
                                        ; if TRUE a Ls100 IPBox work as LS100 IP
ThresholdBackGround = 68
```



```
; [LS150] - Section to configure the LS150 model
; DoubleLeafingValue = It sets the default double leafing sensitivity for each document.
          Legal values: percentage from 1 to 100 from the default device setting.
          Advised: 33
; DoubleLeafingMinLength= minimum document length in millimeter that can be processed
; DoubleLeafingMaxLength= maximum document length in millimeter that can be processed
; Deskew = Enables or disables the automatic image deskew
          Legal values : TRUE, FALSE.
          Advised: E13B or CMC7 depending on the check type used in your market
; Mocr = Enables or disables MICR+OCR
     Legal values : E13B, CMC7, FALSE
          Advised: E13B
; Ls150_as_Ls100 = If TRUE a LS150 connected works as a LS100
          Legal values : TRUE, FALSE.
; Ls150_USB_as_Ls150_lpBox = If TRUE a LS150IPBOX connected works as a LS150 USB
          Legal values: TRUE, FALSE.
; Ls150_Stamp = If this parameter is present it must be set to FRONT_STAMP to force the
          stamp when the LS150 is connected in LS100 emulation mode.
```



; Ls100 Model = String returned by the LSIdentify API when a LS150 is connected as LS100. The string is the version of the Firmware expected by the application. ; BitonalMethod = This parameter defines the default method to be used for the bitonal conversion. Legal values: 4 ALGORITHM_CTS (Threshold Dinamyc) 6 ALGORITHM_CTS_3 (Threshold Fixed) 7 ALGORITHM_TOP_IMAGE (Threshold Dinamyc) 8 ALGORITHM_IMAGE_PRO (Threshold Dinamyc) 9 ALGORITHM_CLEAR_PIX (Threshold Dinamyc) Advised: 4 ; BitonalThreshold = This parameter defines the default threshold to be used for the bitonal conversion. Legal values: for method ALGORITHM_CTS (4) from 50 to 600. Advised 290 for method ALGORITHM_CTS3 (6) from 0 to 15. Advised 9 for method ALGORITHM_TOP_IMAGE (7) from 50 to 600. Advised 290 for method ALGORITHM_CLEAR_PIX (9) from 50 to 600. Advised 290 ; ThresholdBackground = Value used as threshold for clear the document. Legal values: 0 to 255 (default 68) ; LightIntensity = This parameter allows to increase the light intensity for the ls150 Legal Values: from 0 to 30 ; Endorsement_Amount_In_Bold = Enable the Bold font ONLY for the amount (the number

that follows the \$; sign, in the string can be present max 2 \$ sign.



; LenDocMinAccepted = Length minimun document accepted from device, 0 for Fw default value. ; ScanMode = The value defined in the file LsApi.h for the parameter ScanMode of the function LSAutoDocHandle() and LSDocHandle(). [LS150] DoubleLeafingValue = 33 DoubleLeafingMinLength = 150 DoubleLeafingMaxLength = 225 Deskew = TRUE Mocr = E13B BitonalMethod = 4BitonalThreshold = 290 Ls150_as_Ls100 = TRUE ; if True a LS150 connected works as a LS100 Ls150_USB_as_Ls150_lpBox = FALSE ; if TRUE a Ls150 connected to IPBox work as LS150 USB Ls150_Stamp = FRONT_STAMP ; Force the stamp when a LS150 is connected as LS100 Ls100_Model = LS100/3_52 ; Is the Model returned by the LSIdentify when a LS150 is connected as LS100 ThresholdBackGround = 68 LightIntensity = 0Endorsement_Amount_In_Bold = TRUE LenDocMinAccepted = 100 ScanMode = 21·-----; [LS515] - Section to configure the LS515 model



```
Enables or disables the automatic image deskew
; Deskew=
          Legal values: TRUE, FALSE.
          Advised: TRUE
: Mocr = Enables or disables MICR+OCR
          Legal values: E13B, CMC7, FALSE
          Advised: E13B or CMC7 depending on the check type used in your market
; Ls515_USB_as_Ls515_lpBox = If TRUE a LS515IPBOX connected works as a LS515-USB
          Legal values: TRUE, FALSE.
; BitonalMethod = This parameter defines the default method to be used for the bitonal
conversion.
          Legal values:
                                    (Threshold Dinamyc)
         4 ALGORITHM_CTS
          6 ALGORITHM CTS 3
                                           (Threshold Fixed)
          7 ALGORITHM_TOP_IMAGE
                                           (Threshold Dinamyc)
          8 ALGORITHM_IMAGE_PRO
                                           (Threshold Dinamyc)
          9 ALGORITHM_CLEAR_PIX (Threshold Dinamyc)
          Advised: 4
; BitonalThreshold = This parameter defines the default threshold to be used for the bitonal
conversion.
          Legal values:
          for method ALGORITHM_CTS (4) from 50 to 600. Advised 290
          for method ALGORITHM_CTS3 (6) from 0 to 15. Advised 9
          for method ALGORITHM_TOP_IMAGE (7) from 50 to 600. Advised 290
          for method ALGORITHM_CLEAR_PIX (9) from 50 to 600. Advised 290
; ThresholdBackground = Value used as threshold for clear the document.
          Legal values: 0 to 255 (default 68)
```



```
[LS515]
Deskew= TRUE
Mocr = E13B
BitonalMethod = 4
BitonalThreshold = 290
Ls515 USB as Ls515 IpBox = FALSE
;ThresholdBackGround = 68
.
; [LS800] - Section to configure the LS800 model
; Deskew=
             Enables or disables the automatic image deskew
         Legal values: TRUE, FALSE.
         Advised: TRUE
; BitonalMethod = This parameter defines the default method to be used for the bitonal
                                     conversion.
         Legal values:
         4 ALGORITHM_CTS
                                        (Threshold Dinamyc)
         6 ALGORITHM_CTS_3
                                        (Threshold Fixed)
         7 ALGORITHM_TOP_IMAGE
                                        (Threshold Dinamyc)
         8 ALGORITHM_IMAGE_PRO
                                        (Threshold Dinamyc)
         9 ALGORITHM_CLEAR_PIX (Threshold Dinamyc)
         Advised: 4
; BitonalThreshold = This parameter defines the default threshold to be used for the bitonal
                                     conversion.
```



;	Legal values :				
;	for method ALGORITHM_CTS (4) from 50 to 600. Advised 290				
;	for method ALGORITHM_CTS3 (6) from 0 to 15. Advised 9				
;	for method ALGORITHM_TOP_IMAGE (7) from 50 to 600. Advised 290				
;	for method ALGORITHM_CLEAR	R_PIX (9) from 50 to 600. Advised 290			
;					
;					
[LS800]					
Deskew =	TRUE				
BitonalMet	thod = 4				
BitonalThr	eshold = 290				
;					
; [IPBox] -	Section to configure a IPBox conn	ection.			
;					
; IPBox_A	ddress = IP address of the device	(used only in emulation modes)			
;					
; BW_OnB	Baord = false the conversion will do	one on PC (more speed)			
; = true the conversion will done on the LSConnect (less network traffic)					
;					
;					
[lpBox]					
IPBox_Ne	tworkName = LSconnect	; Network logical name			
IPBox_Add	dress = 172.16.1.190	; The IP Address set on the LSConnect			
BW_OnBoard = false					



Basic functions

This section describes the function calls available with the base service. A function that one specific peripheral doesn't support, returns the LS_OKAY reply.

Some functions are also supported in such a way that the parameters are obtained from a configuration file LsApi.ini that must be present in the same folder where LsApi.dll is located.

Please refer to the section 3 for the details of this configuration file.



LSConnect

#include "LSApi.h"

Result API LSConnect (HWND hWnd,

HANDLE hInst,
SHORT LsUnit,
SHORT *hConnect);

Description

Open a connection between the application and the LS service.

The function returns a connection handle.

When the parameter *LsUnit* is set to **LS_515_USB**, the function before returning the reply LS_PERIPHERAL_NOT_FOUND tries to connect also the **LS520** unit.

Parameters

hWnd

Handle of the application windows which will receive the notification messages (Reserved for future use).

hInst

Hinstance of the application window (Reserved for future use).

LsUnit

Specifies the device that must be connected, the accepted values are :

- LS_40_LSCONNECT
- LS 40 USB
- LS_100_LSCONNECT
- LS_100_USB
- LS_100_ETH
- LS_100_RS232
- LS_150_LSCONNECT
- LS_150_USB
- LS_200_USB
- LS 5xx SCSI
- LS_515_LSCONNECT
- LS_515_USB
- LS_520_USB
- LS_800_USB
- LS_UNIT_SHARED

hConnect

Connection handle returned by the service, this value shall be used in the most of the other functions that talk to the device.

Return Value

LS_OKAY if successful

LS_TRY_TO_RESET if the peripheral is in error state otherwise standard reply code.

LS_PERIPHERAL_NOT_FOUND

Comments

This function call must be invoked to establish the communication link with the



specific LS device.

With the Ethernet models (*LSUnit* parameter set to LS_40_LSCONNECT or LS_100_LSCONNECT or LS_150_LSCONNECT or LS_515_LSCONNECT) the application **must call** the LSSetIPAddress () function prior to the *LSConnect(*).

Backwards compatibility for LS100 applications using now LS150:

To substitute a LS100 with a LS150 without the need to make any changes to the existing application, the library needs the support of the file LsApi.ini. This file must be present in the same folder as the Lsapi.dll.

Please refer to the section 3 for the details of this configuration file. (Parameter Ls150_as_Ls100)

Backwards compatibility for LS100 applications using now LS40:

To substitute a LS100 with a LS40 without the need to make any changes to the existing application, the library needs the support of the file LsApi.ini. This file must be present in the same folder as the Lsapi.dll.

Please refer to the section 3 for the details of this configuration file. (Parameter Ls40_as_Ls100)



LSConnectWithNetworkName

#include "LSApi.h"

Result API LSConnectWithNetworkName(HWND hWnd,

HANDLE hInst,
short LsUnit,
char * IpBoxName,
unsigned short NetPort,
short *hConnect);

Description

Open a connection between the application and the LS service.

The function returns a connection handle.

For use this function on the LSConnect MUST be installed the Samba service.

Parameters

hWnd

Handle of the application windows which will receive the notification messages (Reserved for future use).

hInst

Hinstance of the application window (Reserved for future use).

LsUnit

Specifies the device that must be connected, the accepted values are :

- LS_40_LSCONNECT
- LS 100 LSCONNECT
- LS_100_ETH
- LS_150_LSCONNECT
- LS_515_LSCONNECT
- LS_UNIT_SHARED

IpBoxName

IP Adddress of the peripheral to connect.

NetPort

Port to connect (fix to 4000 for the moment).

hConnect

Connection handle returned by the service, this value shall be used in the most of the other functions that talk to the device.

Return Value

LS_OKAY if successful

LS_TRY_TO_RESET if the peripheral is in error state otherwise standard reply code.

LS_PERIPHERAL_NOT_FOUND

Comments

This function is used to connect the Ethernet models without the need to call the LSSetIPAddress() function.



LSConnectWithIPAddress

#include "LSApi.h"

Result API LSConnectWithIPAddress (HWND hWnd,

HANDLE hInst,
short LsUnit,
char * IpAddress,
unsigned short NetPort,
short *hConnect);

Description

Open a connection between the application and the LS service.

The function returns a connection handle.

Parameters

hWnd

Handle of the application windows which will receive the notification messages (Reserved for future use).

hInst

Hinstance of the application window (Reserved for future use).

LsUnit

Specifies the device that must be connected, the accepted values are :

- LS_40_LSCONNECT
- LS_100_LSCONNECT
- LS_100_ETH
- LS_150_LSCONNECT
- LS_515_LSCONNECT
- LS_UNIT_SHARED

IpAddress

IP Adddress of the peripheral to connect.

NetPort

Port to connect (fix to 4000 for the moment).

hConnect

Connection handle returned by the service, this value shall be used in the most of the other functions that talk to the device.

Return Value

LS_OKAY if successful

LS_TRY_TO_RESET if the peripheral is in error state otherwise standard reply code.

LS_PERIPHERAL_NOT_FOUND

Comments

This function is used to connect the Ethernet models without the need to call the LSSetIPAddress() function.



LSDisconnect

#include "LSApi.h"

Result API LSDisconnect (SHORT hConnect, HWND hWnd);

Description

Close a connection between a client application and LS service.

Parameters

hConnect 1

Handle returned by LSConnect

hWnd

Handle of the application windows which will receive the notification messages (Reserved for future use).

Return Value

LS_OKAY if successful, otherwise standard reply code LS_PERIPHERAL_NOT_FOUND



LSSetNetworkName

#include "LSApi.h"

Result API LSSetNetworkName(short LsUnit,

char * New_Node_Name, unsigned short New_Net_Port);

Description

Set the network logical name of the LSConnect to connect.

For use this function on the LSConnect MUST be installed the Samba service.

Parameters

LsUnit

Specifies the device that must be connected, the accepted values are :

- LS_40_LSCONNECT
- LS_100_LSCONNECT
- LS_100_ETH
- LS_150_LSCONNECT
- LS 515 LSCONNECT
- LS_UNIT_SHARED

New_Eth_IpAddress

Network node logical name.

New_Net_Port

Port to connect (fix to 4000 at the moment).

Return Value

LS_OKAY

LS_PERIPHERAL_NOT_FOUND



LSSetIPAddress

#include "LSApi.h"

Result API LSSetIPAddress (short LsUnit,

char * New_Eth_IpAddress, unsigned short New_Net_Port);

Description

Set the IP Address of the LSConnect unit to connect.

Parameters

LsUnit

Specifies the device that must be connected, the accepted values are :

- LS_40_LSCONNECT
- LS_100_LSCONNECT
- LS_100_ETH
- LS_150_LSCONNECT
- LS_515_LSCONNECT
- LS_UNIT_SHARED

New_Eth_IpAddress

IP Adddress of the LSConnect unit to connect.

New_Net_Port

Port to connect (fix to 4000 at the moment).

Return Value

LS_OKAY

LS_PERIPHERAL_NOT_FOUND



LSGetVersion

#include "LSApi.h"

Result API LSGetVersion(CHAR * VersionLibrary, SHORT LengthStr);

Description

Return the version of the library.

Parameters

VersionLibrary

This string contains the release of the driver library. The length of this string is 64 bytes maximum.

LengthStr

Length of the string returned in VersionLibrary.

Return Value

LS_OKAY if successful. LS_STRING_TRUNCATED



LSUnitConfiguration

#include "LSApi.h"

Result API LSUnitConfiguration(short	hConnect,
	HWND	hWnd,

LPSTR pReserved, **UNITCONFIGURATION** *DeviceFeatures, **LPSTR** LsModel, **LPSTR** Fw_Version, Fw_Date, **LPSTR LPSTR** PeripheralID, BoardVersion, **LPSTR LPSTR** DecoderExpVersion, **LPSTR** InkJetVersion. FeederVersion. **LPSTR** SorterVersion, **LPSTR LPSTR** MotorVersion, Reserved1, LPSTR **LPSTR** Reserved2);

Description

Returns specific information about hardware configuration and capabilities of the LS device connected to the service.

The *Size* field of the struct UNITSTRUCTCONFIGURATION give as pointer must be compiled with the size of function from the caller application.

Parameters

hConnect

Handle returned by LSConnect

hWnd

Handle of the application windows which will receive the notification messages (Reserved for future use).

pReserved

Reserved, must be set to NULL.

DeviceFeatures

Pointer to a struct the return the features of the unit connected. The structure is described in the comments section.

LsModel

Pointer to a string that will contain the peripheral model, 15 bytes long, maximum.

FW_Version

Pointer to a string that will contain the firmware revision of the peripheral, 10 bytes long, maximum.

FW_Date

Pointer to a string that will contain the firmware date of the peripheral, 10 bytes long, maximum.

PeripheralID



Pointer to a string that will contain the internal peripheral serial number, 12 bytes long, maximum.

BoardVersion

Pointer to a string that will contain the internal board version, 4 bytes long, maximum.

Board Release : %x00, BoardVersion[0] FPGA Release : %c, BoardVersion[1]

DecoderExpVersion

Pointer to a string that will contain the firmware revision of the decoder board expansion, 10 bytes long, maximum.

InkJetVersion

Pointer to a string that will contain the firmware revision of the inkjet board expansion, 10 bytes long, maximum.

FeederVersion

LS800 model - Pointer to a string that will contain the firmware revision of the feeder connected, 10 bytes long maximum.

SorterVersion

LS40 model - Pointer to a string that will contain the firmware revision of the MyTeller drawer connected, 64 bytes long maximum.

LS800 model - Pointer to a string that will contain the firmware revision of the sorter/s connected, 10 bytes long maximum, all the sorters connected must have the same firmware.

MotorVersion

LS800 model - Pointer to a string that will contain the firmware revision of the motor, 10 bytes long maximum.

Reserved1

Reserved for future use, must be set to NULL.

Reserved2

Reserved for future use, must be set to NULL.

Return Value

LS_OKAY
LS_SYSTEM_ERROR
LS_USB_ERROR
LS_PERIPHERAL_NOT_FOUND
LS_HARDWARE_ERROR
LS_RESERVED_ERROR

Comments

This function can be used only after a successful LSConnect command.

The application must compile the Size fileld with the size of the structure.

UNITCONFIGURATION.Size = sizeof(UNITCONFIGURATION);

Description UNITSTATUS structure :



tv	typedef struct _UNITCONFIGURATION					
(y						
١	int	Size;	// Size	e of th	ne stri	ıcture
	BOOL Ls800	MICR_Reader;	//Ls40	Ls100	Ls150	Ls515
	BOOL Ls800	CMC7_Reader_only;	//	Ls100	Ls150	Ls515
	BOOL Ls800	E13B_Reader_only;	//	Ls100	Ls150	Ls515
	BOOL Ls800	Scanner_Front;	//Ls40	Ls100	Ls150	Ls515
	BOOL Ls800	Scanner_Rear;	//Ls40	Ls100	Ls150	Ls515
	BOOL Ls800	<pre>InkJet_Printer;</pre>	//Ls40	Ls100	Ls150	Ls515
	BOOL Ls800	<pre>InkJet_HD_Printer_4_lines</pre>	;//		Ls15() Ls515
	BOOL BOOL BOOL BOOL BOOL BOOL BOOL int Ls800	Voiding_Rear_Stamp; No_Blanks; Badge_Track123; Badge_Track12; Badge_Track23; OCR_Reader; Sorters_Nr;	//Ls40 // //Ls40 // //	Ls100 Ls100 Ls100	Ls150 Ls150 Ls150	
	BOOL Ls800	Module_Encoder;	//			
	BOOL BOOL BOOL BOOL BOOL BOOL	Process_Card; Capacitor; Scanner_UltraViolet; Scanner_Color; Hight_Speed; Feeder_Motorized; Feeder Electromagnet;	//Ls40 //Ls40 //Ls40 //Ls40 //		Ls150 Ls150 Ls150 Ls150 Ls150	Ls515
	BOOL BOOL BOOL BOOL BOOL BOOL BOOL	ID_Card_Color; License_ClearPIX; License_2D_Barcode; License_IQA; License_Micro_Hole; Ink_Detector; SensorCartridge;	// //Ls40 //Ls40 //Ls40 //Ls40 //Ls40	Ls100 Ls100 Ls100	Ls150 Ls150 Ls150 Ls150	Ls515 Ls515

} UNITCONFIGURATION, *PUNITCONFIGURATION;



LSUnitReserve

#include "LSApi.h"

Result API LSUnitReserve (short hConnect,

HWND hWnd, long Timeout);

Description

Reserve the device for the calling application.

This function must be called when an LS device, connected via USB to the PC, can be used from more than one application.

This function can also be used when the device is shared among different PCs.

Parameters

hConnect

Handle returned by LSConnect

hWnd

Handle of the application windows which will receive the notification messages (Reserved for future use).

Timeout

Timeout value expressed in milliseconds, only with USB connections for –1 the function wait indefinitely.

Return Value

LS_OKAY

LS_SYSTEM_ERROR

LS_USB_ERROR

LS PERIPHERAL NOT FOUND

LS_INVALID_TIMEOUT

LS_PERIPHERAL_RESERVED

Comments

An application must call this function to reserve the device before issuing the following commands:

LSIdentify(), LSReset() or LSDocHandle() plus LSReadImage() or

LSAutoDocHandle() plus LSGetDocData().

When those operations are finished, the application must call the *LSUnitRelease()* to allow another application to use the device.

It is important that the application reserve the device before feeding the checks and releases it when the boundle of checks is finished.



LSUnitRelease

#include "LSApi.h"

Result API LSUnitRelease (short hConnect, HWND hWnd);

Description

The calling application release the peripheral when the current operation is finished.

Parameters

hConnect

Handle returned by LSConnect

hWnd

Handle of the application windows which will receive the notification messages (Reserved for future use).

Return Value

LS_OKAY LS_SYSTEM_ERROR LS_USB_ERROR LS_PERIPHERAL_NOT_FOUND LS_ILLEGAL_REQUEST



LSDocHandle

#include "LSApi.h"

Result API LSDocHandle (short hConnect,

HWND hWnd. short Stamp. short Validate. CodeLine. short Side. char short ScanMode. Feeder. short Sorter. short short WaitTimeout. Beep. short unsigned long *NrDoc. short ScanDocType, **LPVOID** Reserved2);

Description

The behavior of this command will be dependent on the model of LS device employed. It will set the LS device in a waiting-for-document-introduction state, for models where documents are manually fed one at a time. It will activate the automatic feeding from an input feeder, for models where documents are processed in a bundle. After being drawn in the document is processed. The document processing will be done according to the options specified in the input parameters. The device will store in its internal memory the scanned images and MICR codeline of the last processed document (when the relevant parameters in the command are set for document scanning and/or MICR codeline reading). In order to retrieve the MICR codeline data call the function LSReadCodeline, and after call the function LSReadImage to receive the image(s) of the processed document.

Please also refer to the LSConfigDoubleLeafingAndDocLength() function to configure the paper sensibility in the correct way to handle the double leafing functionality.

Parameters

hConnect

Handle returned by LSConnect

hWnd

Handle of the application windows which will receive the notification messages (Reserved for future use).

Stamp

NO_STAMP = do not stamp document

FRONT_STAMP = stamp front side of document REAR STAMP = stamp rear side of document

FRONT_AND_REAR_STAMP = stamp both front and rear sides of document (this option is possible only with LS5xx models)

Validate

NO_PRINT_VALIDATE = do not print validation string
PRINT_VALIDATE = print validation string (the text of the validation string
must be loaded using the *LSLoadString* command before
invoking this command). The LS device must be equipped
with the optional validation printer.



PRINT_DIGITAL_VALIDATE = print digital validation string (the text of the validation string must be loaded using the LSLoadDigitalStringWithCounter command before invoking this command).

Codeline

NO_READ_CODELINE = do not read codeline.

READ_CODELINE_MICR = read magnetic codeline CMC7 or E13B. The LS device must be equipped with a magnetic character reader.

READ_CODELINE_CMC7 = read magnetic codeline CMC7. The LS device must be equipped with a magnetic character reader. (only LS40)

READ_CODELINE_E13B = read magnetic codeline E13B. The LS device must be equipped with a magnetic character reader. (only LS40)

READ_CODELINE_E13B_MICR_AND_OCR = read a codeline E13B in magnetic / optic mode

READ_CODELINE_CMC7_MICR_AND_OCR = read a codeline CMC7 in magnetic / optic mode

READ_CODELINE_MICRO_HOLES = read a MicroHoles codeline present on the document. **IMPORTANT** if this define is set in order to obtain Micro codelines, then the application must call the function *LSReadImageMH()* instead of *LSReadImage()*.

READ_CODELINE_MICR_AND_MICRO_HOLES = read a codeline CMC7 or E13B and the MicroHoles codeline present on the document. IMPORTANT if this define is set in order to obtain Micro codelines, then the application must call the function LSReadImageMH() instead of LSReadImage().

READ_CODELINE_CMC7_MOCR_AND_MICRO_HOLES = read a codeline CMC7 in magnetic / optic mode and the MicroHoles codeline present on the document. IMPORTANT if this define is set in order to obtain Micro codelines, then the application must call the function LSReadImageMH() instead of LSReadImage().

The following values are applicable when the LS device is equipped with an optional barcode reader or optical reader:

READ_BARCODE_HW = read a 2 of 5 barcode (LS510 model only)

Side

It specifies which side(s) of the document to scan

SIDE FRONT IMAGE = Scan Front side

SIDE BACK IMAGE = Scan Rear side

SIDE_ALL_IMAGE = Scan Both sides

SIDE NONE IMAGE = Do not scan document

ScanMode

This parameter sets the resolution applied when scanning the document. Accepted values are :

SCAN_MODE_BW = black and white at 200 dpi

SCAN_MODE_16GR100 = 16 grey scale at 100 dpi

SCAN_MODE_16GR120 = 16 grey scale at 120 dpi

SCAN_MODE_16GR200 = 16 grey scale at 200 dpi

SCAN_MODE_16GR240 = 16 grey scale at 240 dpi

SCAN_MODE_16GR300 = 16 grey scale at 300 dpi

SCAN_MODE_256GR100 = 256 grey scale at 100 dpi

SCAN_MODE_256GR120 = 256 grey scale at 120 dpi **SCAN_MODE_256GR200** = 256 grey scale at 200 dpi

SCAN_MODE_256GR240 = 256 grey scale at 240 dpi



SCAN_MODE_256GR300 = 256 grey scale at 300 dpi

SCAN_MODE_256GR100_AND_UV = 256 gray scale at 100 dpi and Ultra Violet images

SCAN_MODE_256GR200_AND_UV = 256 gray scale at 200 dpi and Ultra Violet images

SCAN_MODE_256GR300_AND_UV = 256 gray scale at 300 dpi and Ultra Violet images

SCAN_MODE_COLOR_100 = Color 24 bit 100 dpi

SCAN_MODE_COLOR_200 = Color 24 bit 200 dpi

SCAN_MODE_COLOR_300 = Color 24 bit 300 dpi

SCAN_MODE_COLOR_100_AND_UV = 256 gray scale at 100 dpi and Ultra Violet images

SCAN_MODE_COLOR_200_AND_UV = 256 gray scale at 200 dpi and Ultra Violet images

SCAN_MODE_COLOR_300_AND_UV = 256 gray scale at 300 dpi and Ultra Violet images

SCAN_MODE_256GR100BN = 256 gray scale at 100 dpi Brutto and Netto images (LS515 model only)

SCAN_MODE_256GR200BN = 256 gray scale at 200 dpi Brutto and Netto images (LS515 model only)

SCAN_MODE_COLOR_AND_RED_100 = Color 24 bit at 100 dpi and Netto images (LS100 and LS515 model)

SCAN_MODE_COLOR_AND_RED_200 = Color 24 bit at 200 dpi and Netto images (LS100 and LS515 model)

SCAN_MODE_256GR100_ONLY_RED = 256 gray scale at 100 dpi Red images

SCAN_MODE_256GR200_ONLY_RED = 256 gray scale at 200 dpi Red images

SCAN_MODE_256GR300_ONLY_RED = 256 gray scale at 300 dpi Red images

Feeder

It specifies the source of the document

AUTO_FEED = document from feeder.

PATH_FEED = document from path. This value should be used when the document processing requires two or more passes. It requires that in the previous pass the value set for *Sorter* parameter is HOLD_DOCUMENT. Used also for Linear Entry on LS5xx series.

Sorter

It specifies the destination of the processed document. The applicable values depend on the model of LS device being used :

HOLD_DOCUMENT = hold document. In the next pass the parameter Feeder must take the value PATH_FEED

SORTER_BAY1 = document is stacked in sorting pocket 1.

SORTER_BAY2 = document is stacked in sorting pocket 2

SORTER_AUTOMATIC = send the document to the destination set by a previous LSSetSorterCriteria command (on LS510, LS515 models).

SORTER_SWITCH_1_TO_2 = documents are sorted in Pocket 1, until it becomes full at which point sorting continues to Pocket 2. When Pocket 2 becomes full the service will return a LS_SORTERS_BOTH_FULL error code.

EJECT_DOCUMENT = the document is returned to the input feeding slot. (LS40 and LS100 models)

WaitTimeout



This parameter sets the behavior of the device when there are no more documents to process.

WAIT_YES = the device waits for approximately 7 seconds for a new document to process, when this internal timer expires and there is not a new document to process the command completes with return code LS_FEEDER_EMPTY.

WAIT_NO = if no document is present, or after the last document in the feeder has been processed, the service will immediately complete with return code LS_FEEDER_EMPTY.

Beep

Specifies whether the internal beeper should emit an acoustical sound when an error occurs.

Accepted values are:

NO_BEEP: do not activate beeper.

BEEP: activate beeper.

NrDoc

Required ONLY for LS100 Models otherwise can be set to NULL.

This is an <u>output</u> parameter that will be set when the command processing completes.

It returns the number of processed documents. The numbers in the range 1 to NrDoc must be used as ID's to point to a given document's data when retrieving the scanned image(s) (by means of LSReadImage).

ScanDocType

Specifies the type of document to processed.

Accepted values are:

SCAN_PAPER_DOCUMENT: for paper.

SCAN_CARD: for card.

SCAN_LONG_DOCUMENT: for receipt, sales check.

SCAN_A4_DOCUMENT: for scan document A4 (only for LS150 G).

Reserved2

Reserved for future use, must be set to NULL.

LS40 and LS100 with Ink Detector option enabled

In case of sensor presence on the unit, in this parameter is returned whenewer ink is detected or not. TRUE means ink detected.

Return Value

LS OKAY

LS SYSTEM ERROR

LS_USB_ERROR

LS_PERIPHERAL_NOT_FOUND

LS_HARDWARE_ERROR

LS_PAPER_JAM

LS_COMMAND_IN_EXECUTION_YET

LS_DOUBLE_LEAFING_ERROR

LS_DOUBLE_LEAFING_WARNING

LS_REPLACE_CARTRIDGE

Comments

Note

In case the application request to read MicroHole codeline, the function will force the resolution at 300 dpi. The image returned, however, will be the one requested by the application.



This function is not available on the LS800.



LSReadCodeline

#include "LSApi.h"

Result API LSReadCodeline (short hConnect,

HWND hWnd, LPSTR Codeline,

SHORT *Length_Codeline,

LPSTR Barcode,

SHORT *Length_Barcode,

LPSTR Optic,

SHORT *Length_Optic);

Description

This function should be used to retrieve the codeline data read from a document previously processed by **LSDocHandle** command. It applies only to LS device models equipped with the relevant hardware (MICR reader, Barcode reader, OCR reader) for codeline reading (check LS device capabilities).

NOTE: This function must be called before the LSReadImage or LSReadImageMH.

Parameters

hConnect

Handle returned by LSConnect

hWnd

Handle of the application windows which will receive the notification messages (Reserved for future use).

Codeline

Pointer to the user buffer where the magnetic codeline data will be transferred by the service. This buffer will be filled also in case Magnetic and Optical is requested.

Length Codeline

Pointer to a variable of input/output, in input it specifies the size of the buffer pointed by *Codeline* parameter, in output it will return the actual length of the codeline data transferred by the service.

Barcode

Pointer to the user buffer where the barcode codeline data will be transferred by the service.

Length_Barcode

Pointer to a variable of input/output, in input it specifies the size of the buffer pointed by *Barcode* parameter, in output it will return the actual length of the codeline data transferred by the service.

Optic

Pointer to the user buffer where the optical codeline data will be transferred by the service.

Length Optic

Pointer to a variable of input/output, in input it specifies the size of the buffer pointed by *Optic* parameter, in output it will return the actual length of the codeline data transferred by the service.



Return Value

LS_OKAY

LS_SYSTEM_ERROR

LS_USB_ERROR

LS_PERIPHERAL_NOT_FOUND

LS_HARDWARE_ERROR

LS_DATA_TRUNCATED

LS_DATA_LOST

Comments

When the service returns more than one codeline there will be a NULL character as separator between one codeline data and the next.

This function is not available on the LS800 model.



LSReadImage

#include "LSApi.h"

Result API LSReadImage (short hConnect,

HWND hWnd. short ClearBlack. **CHAR** Side. short ReadMode, unsigned long NrDoc. LPHANDLE Frontlmage, LPHANDLE Backlmage, LPHANDLE Frontlmage2, **LPHANDLE** BackImage2);

Description

This function should be used to retrieve the images of the front and/or back side of a document previously processed and scanned by **LSDocHandle** command.

Parameters

hConnect

Handle returned by LSConnect.

hWnd

Handle of the application windows which will receive the notification messages (Reserved for future use).

ClearBlack

Specifies whether or not to apply the filter for cleaning the black area around the image(s).

NO_CLEAR_BLACK = no image cleaning, the black area is not removed.

CLEAR_ALL_BLACK = clean the document's image removing all the black around the image according to the level of filter specified by LSSetThresholdClearBlack command.

CLEAR_AND_ALIGN_IMAGE = removing all the black around the image and align the document's image. (deskew)

Side

Specifies which of the document's scanned sides to return.

SIDE_FRONT_IMAGE = Front side image SIDE_BACK_IMAGE = Rear side image SIDE_ALL_IMAGE = Both Front and Rear side images

ReadMode

Fixed to **READMODE_BRUTTO.**

NrDoc

Required ONLY for LS100 models, otherwise can be set to 0.

This is a value that must be grater than zero and less than or equal to the *NrDoc* value returned by **LSDocHandle** command. It specifies the sequence number for multiple documents processed by **LSDocHandle**.

Frontlmage

Pointer to a handle where will be returned the handle of memory buffer containing the front side image of the requested document, in DIB format.



Backlmage

Pointer to a handle where will be returned the handle of memory buffer containing the rear side image of the requested document, in DIB format.

Frontlmage2

Pointer to a handle where will be returned the handle of memory buffer containing the **Ultra Violet** front side image of the requested document, in DIB format.

BackImage2

Reserved for future improvement, must be set to NULL.

Return Value

LS OKAY

LS_SYSTEM_ERROR

LS_USB_ERROR

LS_PERIPHERAL_NOT_FOUND

LS_HARDWARE_ERROR

LS_OPEN_NOT_DONE

LS_COMMAND_SEQUENCE_ERROR

LS_INVALID_TYPE_COMMAND

LS_INVALID_CLEARBLACK

LS_INVALID_SIDE

Comments

The image handle retrieved by this function must be released by the application.

This function is not available on the LS800 model.



LSReadImageEx

#include "LSApi.h"

Result API LSReadImageEx (s

shorthConnect,HWNDhWnd,shortClearBlack,CHARSide,

ImageFormat, int Quality, short Method. short Treshold, short unsigned long NrDoc, **LPHANDLE** Frontlmage, *SizeFront. int **LPHANDLE** Rearlmage. int *SizeRear, **LPHANDLE** Frontlmage2, *SizeFront2, int **LPHANDLE** Rearlmage2, *SizeRear2); int

Description

This function should be used to retrieve the images of the front and/or back side of a document previously processed and scanned by **LSDocHandle** command in format JPEG, TIFF or DIB.

Parameters

hConnect

Handle returned by LSConnect.

hWnd

Handle of the application windows which will receive the notification messages (Reserved for future use).

ClearBlack

Specifies whether or not to apply the filter for cleaning the black area around the image(s).

NO_CLEAR_BLACK = no image cleaning, the black area is not removed.

CLEAR_ALL_BLACK = clean the document's image removing all the black around the image according to the level of filter specified by LSSetThresholdClearBlack command.

CLEAR_AND_ALIGN_IMAGE = removing all the black around the image and align the document's image. (deskew)

Side

Specifies which of the document's scanned sides to return.

SIDE_FRONT_IMAGE = Front side image SIDE_BACK_IMAGE = Rear side image SIDE_ALL_IMAGE = Both Front and Rear side images

ImageFormat

This parameter specifies the file format used when storing the document's images.

The valid values are:



SAVE_JPEG: save the image in a JPEG format file. **SAVE_BMP**: save the image in a DIB format file.

FILE_TIF: save the image in a Tagged Image File Format file.

FILE_CCITT_GROUP4: save the image in a CCITT Group4 two dimensions file

Quality

Integer from 2 to 255 that indicates the relationship between quality and compression:

2 = maximum quality.

255 = maximum compression.

Method

Specify the conversion algorithm to apply:

ALGORITHM_CTS: Use a proprietary ARCA algorithm. **ALGORITHM_CTS_2**: Use a proprietary ARCA algorithm. **ALGORITHM_CTS_3**: Use a proprietary ARCA algorithm.

ALGORITHM_CTS_TOP_IMAGE: Use a proprietary ARCA algorithm, need CtsTopImage.dll library.

ALGORITHM_CTS_IMAGE_PRO: Use a proprietary ARCA algorithm, need CtsImagePro.dll library.

ALGORITHM_CTS_CLEAR_PIX: Use a proprietary ARCA algorithm, need CtsCLearPIX.dll library.

Threshold

Reserved for future improvement, must be set to 0.

NrDoc

Required ONLY for LS100 models, otherwise can be set to 0.

This is a value that must be grater than zero and less than or equal to the *NrDoc* value returned by **LSDocHandle** command. It specifies the sequence number for multiple documents processed by **LSDocHandle**.

Frontlmage

Pointer to a handle where will be returned the handle of memory buffer containing the front side image of the requested document, in the required format.

*SizeFront

Pointer to an integer where will be returned the size of the Front image.

Rearlmage

Pointer to a handle where will be returned the handle of memory buffer containing the rear side image of the requested document, in the required format.

*SizeRear

Pointer to an integer where will be returned the size of the Rear image.

Frontlmage2

Pointer to a handle where will be returned the handle of memory buffer containing the **Ultra Violet** front side image of the requested document, in the required format.

*SizeFront2

Pointer to an integer where will be returned the size of the Front2 image.

Rearlmage2



Reserved for future improvement, must be set to NULL.

*SizeRear2

Pointer to an integer where will be returned the size of the Rear2 image.

Return Value

LS_OKAY

LS_SYSTEM_ERROR

LS_USB_ERROR

LS_PERIPHERAL_NOT_FOUND

LS_HARDWARE_ERROR

LS_OPEN_NOT_DONE

LS_COMMAND_SEQUENCE_ERROR

LS_INVALID_TYPE_COMMAND

LS_INVALID_CLEARBLACK

LS_INVALID_SIDE

Comments

The image handle retrieved by this function must be released by the application.

This function is not available on the LS800 model.



LSReadImageMH

#include "LSApi.h"

Result API LSReadImageMH (short hConnect,

HWND hWnd.

short ClearBlack,

CHAR Side,

ReadMode. short unsigned long NrDoc. **LPHANDLE** Frontlmage, **LPHANDLE** BackImage, **LPHANDLE** Frontlmage2, **LPHANDLE** BackImage2. **BOOL** VerifyHole, short UnitMeasure. short nrRegions,

MICROHOLE_STRUCT stMicroHole);

Description

This function should be used to retrieve the images of the front and/or back side of a document previously processed and scanned by **LSDocHandle()** function, but return also the MicroHole codelines, if the parameter *Codeline* is set to

READ_CODELINE_MICR_AND_MICRO_HOLES or READ_CODELINE_CMC7_MOCR_AND_MICRO_HOLES.

Parameters

hConnect

Handle returned by LSConnect.

hWnd

Handle of the application windows which will receive the notification messages (Reserved for future use).

ClearBlack

Specifies whether or not to apply the filter for cleaning the black area around the image(s).

NO_CLEAR_BLACK = no image cleaning, the black area is not removed.

CLEAR_ALL_BLACK = clean the document's image removing all the black around the image according to the level of filter specified by LSSetThresholdClearBlack command.

CLEAR_AND_ALIGN_IMAGE = removing all the black around the image and align the document's image. (deskew)

Side

Specifies which of the document's scanned sides to return.

SIDE_FRONT_IMAGE = Front side image **SIDE_BACK_IMAGE** = Rear side image

SIDE_ALL_IMAGE = Both Front and Rear side images

ReadMode

Fixed to **READMODE_BRUTTO.**

NrDoc

Required ONLY for LS100 models, otherwise can be set to 0.



This is a value that must be grater than zero and less than or equal to the *NrDoc* value returned by **LSDocHandle** command. It specifies the sequence number for multiple documents processed by **LSDocHandle**.

Frontlmage

Pointer to a handle where will be returned the handle of memory buffer containing the front side image of the requested document, in DIB format.

BackImage

Pointer to a handle where will be returned the handle of memory buffer containing the rear side image of the requested document, in DIB format.

Frontlmage2

Pointer to a handle where will be returned the handle of memory buffer containing the **Ultra Violet** front side image of the requested document, in DIB format

BackImage2

Reserved for future improvement, must be set to NULL.

VerifyHole

Specify if verification of micro perforation of the paper is required.

UnitMeasure

Specify whether the *Start_X*, *Start_Y*, *SizeW* and *SizeH* measures are expressed in millimeters or in inches.

The possible values are either **UNIT_MM** or **UNIT_INCH**.

nrRegions

Number of codeline to decode.

stMicroHole

Array of structure with parameters per each region, described in **Comments** section of the function *LSReadMicroHolesCodelines()*.

Return Value

LS OKAY

LS_SYSTEM_ERROR

LS_USB_ERROR

LS_PERIPHERAL_NOT_FOUND

LS_HARDWARE_ERROR

LS_OPEN_NOT_DONE

LS_COMMAND_SEQUENCE_ERROR

LS_INVALID_TYPE_COMMAND

LS_INVALID_CLEARBLACK

LS_INVALID_SIDE

Comments

The image handle retrieved by this function must be released by the application.



LSDocHandleAndReadImage

#include "LSApi.h"

Result API LSDocHandleAndReadImage (short hConnect,

HWND hWnd. short Stamp, short Validate. CodeLine, short char Side. short ScanMode. Feeder. short Sorter. short WaitTimeout. short short Beep.

shortScanDocType,longReserved2,shortClearBlack,LPHANDLEFrontImage,LPHANDLEBackImage,LPHANDLEFrontImage2,LPHANDLEBackImage2);

Description

This command MUST be called after a command of **LSDocHandle**, in place of a **LSReadImage**, but after a **LSReadCodeline**, if the MICR codeline if required. The behavior of this command it's alike to do a **LSReadImage** with a **LSDocHandle**,

but optimize the performance of the device, because before to read the image of the previous handled document it to start another one.

Remark, when the function return with a reply different from LS_OKAY, the application **must** call one time the function **LSReadImage** for keep the images of the last document scanned.

Parameters

hConnect

Handle returned by LSConnect

hWnd

Handle of the application windows which will receive the notification messages (Reserved for future use).

Stamp

NO_STAMP = do not stamp document

FRONT_STAMP = stamp front side of document REAR STAMP = stamp rear side of document

FRONT_AND_REAR_STAMP = stamp both front and rear sides of document (this option is possible only with LS5xx models)

Validate

NO_PRINT_VALIDATE = do not print validation string

PRINT_VALIDATE = print validation string (the text of the validation string must be loaded using the *LSLoadString* command before invoking this command). The LS device must be equipped with the optional validation printer.



PRINT_DIGITAL_VALIDATE = print digital validation string (the text of the validation string must be loaded using the LSLoadDigitalStringWithCounter command before invoking this command).

Codeline

NO READ CODELINE = do not read codeline.

READ_CODELINE_MICR = read magnetic codeline CMC7 or E13B. The LS device must be equipped with a magnetic character reader.

READ_CODELINE_E13B_MICR_AND_OCR = read a codeline E13B in magnetic / optic models (LS40 LS100/7 LS150)

The following values are applicable when the LS device is equipped with an optional barcode reader or optical reader:

READ_BARCODE_HW = read a 2 of 5 barcode (LS510 model only)

Side

It specifies which side(s) of the document to scan

SIDE_FRONT_IMAGE = Scan Front side

SIDE BACK IMAGE = Scan Rear side

SIDE ALL IMAGE = Scan Both sides

SIDE NONE IMAGE = Do not scan document

ScanMode

This parameter sets the resolution applied when scanning the document. Accepted values are :

SCAN_MODE_BW = black and white at 200 dpi

SCAN_MODE_16GR100 = 16 grey scale at 100 dpi

SCAN_MODE_16GR120 = 16 grey scale at 120 dpi

SCAN_MODE_16GR200 = 16 grey scale at 200 dpi

SCAN_MODE_16GR240 = 16 grey scale at 240 dpi

SCAN_MODE_16GR300 = 16 grey scale at 300 dpi (LS40, LS150 and LS520 model)

SCAN_MODE_256GR100BN = 256 gray scale at 100 dpi Brutto and Netto images (LS515 model only)

SCAN_MODE_256GR200BN = 256 gray scale at 200 dpi Brutto and Netto images (LS515 model only)

SCAN_MODE_256GR100 = 256 grey scale at 100 dpi

SCAN_MODE_256GR120 = 256 grey scale at 120 dpi

SCAN_MODE_256GR200 = 256 grey scale at 200 dpi

SCAN_MODE_256GR240 = 256 grey scale at 240 dpi

SCAN_MODE_256GR300 = 256 grey scale at 300 dpi (LS40, LS150 and LS520 model)

SCAN_MODE_256GR100_AND_UV = 256 gray scale at 100 dpi and Ultra Violet images (LS150 model)

SCAN_MODE_256GR200_AND_UV = 256 gray scale at 200 dpi and Ultra Violet images (LS150 model)

SCAN_MODE_COLOR_100 = Color 24 bit 100 dpi

SCAN_MODE_COLOR_200 = Color 24 bit 200 dpi

SCAN_MODE_COLOR_300 = Color 24 bit 300 dpi (LS150 and LS520 model)

SCAN_MODE_COLOR_AND_RED_100 = Color 24 bit at 100 dpi and Netto images (LS100 and LS515 model)

SCAN_MODE_COLOR_AND_RED_200 = Color 24 bit at 200 dpi and Netto images (LS100 and LS515 model)

SCAN_MODE_256GR100_ONLY_RED = 256 gray scale at 100 dpi Red images

SCAN_MODE_256GR200_ONLY_RED = 256 gray scale at 200 dpi Red images



SCAN_MODE_256GR300_ONLY_RED = 256 gray scale at 300 dpi Red images

Feeder

It specifies the source of the document

AUTO FEED = document from feeder.

PATH_FEED = document from path. This value should be used when the

document processing requires two or more passes. It requires that in the previous pass the value set for *Sorter* parameter is HOLD_DOCUMENT. Used also for Linear Entry

on LS5xx series.

Sorter

It specifies the destination of the processed document. The applicable values depend on the model of LS device being used :

HOLD_DOCUMENT = hold document. In the next pass the parameter Feeder must take the value PATH_FEED

SORTER_BAY1 = document is stacked in sorting pocket 1.

SORTER BAY2 = document is stacked in sorting pocket 2

SORTER_SWITCH_1_TO_2 = documents are sorted in Pocket 1, until it becomes full at which point sorting continues to Pocket 2. When Pocket 2 becomes full the service will return a LS_SORTERS_BOTH_FULL error code.

WaitTimeout

This parameter sets the behavior of the device when there are no more documents to process.

WAIT_YES = the device waits for approximately 7 seconds for a new document to process, when this internal timer expires and there is not a new document to process the command completes with return code LS_FEEDER_EMPTY.

WAIT_NO = if no document is present, or after the last document in the feeder has been processed, the service will immediately complete with return code LS_FEEDER_EMPTY.

Beep

Specifies whether the internal beeper should emit an acoustical sound when an error occurs.

Accepted values are:

NO_BEEP: do not activate beeper

BEEP: activate beeper

ScanDocType

Specifies the type of document to processed.

Accepted values are:

SCAN_PAPER_DOCUMENT: for paper

SCAN_CARD: for card

SCAN_LONG_DOCUMENT: for receipt, sales check

Reserved2

Reserved for future use, must be set to NULL.

ClearBlack

Specifies whether or not to apply the filter for cleaning the black area around the image(s).

NO_CLEAR_BLACK = no image cleaning, the black area is not removed.

CLEAR_ALL_BLACK = clean the document's image removing all the black around the image according to the level of filter specified by LSSetThresholdClearBlack command.



CLEAR_AND_ALIGN_IMAGE = removing all the black around the image and align the document's image. (deskew)

Frontlmage

Pointer to a handle where will be returned the handle of memory buffer containing the front side image of the requested document, in DIB format.

BackImage

Pointer to a handle where will be returned the handle of memory buffer containing the rear side image of the requested document, in DIB format.

Frontlmage2

Pointer to a handle where will be returned the handle of memory buffer containing the **Ultra Violet** front side image of the requested document, in DIB format.

BackImage2

Reserved for future improvement, must be set to NULL.

Return Value

```
LS_OKAY
LS_SYSTEM_ERROR
LS_USB_ERROR
LS_PERIPHERAL_NOT_FOUND
LS_HARDWARE_ERROR
LS_PAPER_JAM
LS_COMMAND_IN_EXECUTION_YET
LS_DOUBLE_LEAFING_ERROR
LS_DOUBLE_LEAFING_WARNING
```

Comments

A little piece of "C" code for illustrate the behavior of the function.

&len codeline,

```
NrDoc = 0;
Reply = LSDocHandle(hLS, hDlg,
                    NO_STAMP,
                    NO_PRINT_VALIDATE,
                    READ_CODELINE_MICR,
                    SIDE_ALL_IMAGE,
                    SCAN_MODE_BW,
                    AUTO_FEED,
                    SORTER_BAY1,
                    WAIT_YES,
                    NO BEEP,
                    NULL,
                    0,
                    0);
while( Reply == LS150_OKAY )
      len_codeline = CODE_LINE_LENGTH;
      Reply = LSReadCodeline(hLS,
                            hDlg,
                            BufCodelineHW,
```



```
NULL,
                              NULL,
                              NULL.
                              NULL);
// Here you can stop the loop if the codeline is invalid!
// Here call the LSLoadSringh if you need to print different strings
       Reply = LSDocHandleAndReadImage(hLS, hDlg,
                                           NO_STAMP,
                                           NO_PRINT_VALIDATE,
                                           READ_CODELINE_MICR,
                                           SIDE_ALL_IMAGE,
                                    SCAN_MODE_BW,
                                           AUTO_FEED,
                                           SORTER_BAY1,
                                           WAIT_YES,
                                           NO_BEEP,
                                           0,
                                    CLEAR_ALL_BLACK,
                                           &BufFrontImage,
                                           &BufBackImage,
                                           NULL,
                                           NULL);
if( Reply == LS_OKAY || Reply == LS_FEEDER_EMPTY )
              NrDoc ++;
              // Show the codeline and images read
       ShowCodelineAndImage(LS_OKAY,
                                           //Reply,
                                    NrDoc,
                                     (unsigned char *)BufFrontImage,
                                     (unsigned char *)BufBackImage,
                                    NULL, NULL,
                                    NULL,
                                    BufCodelineHW,
                                    NULL,
                                    NULL);
       LSFreeImage(hDlg, &BufFrontImage);
              LSFreeImage(hDlg, &BufBackImage);
}
// When you finish the while read the last image for reply Ok or not
Reply = LSReadImage(hLS, hDlg,
              CLEAR_ALL_BLACK,
              SIDE_FRONT_IMAGE,
              0, 0,
              (LPHANDLE)&BufFrontImage,
              (LPHANDLE)&BufBackImage,
              NULL,
              NULL);
```



LSSetThresholdClearBlack

#include "LSApi.h"

Result API LSSetThresholdClearBlack (short hWnd. hWnd.

unsigned char Threshold);

Description

This function is used to set the desired threshold value for cleaning the black coloring that may result around the scanned image of the document. This value will be used by the **LSReadImage** command to apply the appropriate level of filter in cleaning the black area before returning the scanned image to the application.

Parameters

hConnect

Handle returned by LSConnect

hWnd

Handle of the application windows which will receive the notification messages (Reserved for future use).

Threshold

Value of black used as threshold for cleaning the image, range 0 (black) to 255 (white), the default value is **DEFAULT_BLACK_THRESHOLD**.

Return Value

LS_OKAY LS_COMMAND_IN_EXECUTION_YET LS_COMMAND_SEQUENCE_ERROR LS_OPEN_NOT_DONE

Comments



LSLoadString

#include "LSApi.h"

Result API LSLoadString(short hConnect,

HWNDhWnd,charFormat,shortLength,

LPSTR String);

Description

Loads the text of invalidation string, which may be printed onto the **BACK** side of the document with the ink-jet printer.

Parameters

hConnect

Handle returned by LSConnect

hWnd

Handle of the application windows which will receive the notification messages (Reserved for future use).

Format

Set the character style for the invalidation string,

PRINT_FORMAT_NORMAL = Normal font, low position.

PRINT_FORMAT_BOLD = Bold font, low position.

PRINT_FORMAT_NORMAL_15_CHAR = Normal 15 char for Inch font, low position.

PRINT_UP_FORMAT_NORMAL = Normal font , high position. (LS100, LS150 models)

PRINT_UP_FORMAT_BOLD = Bold font , high position. (LS100, LS150 models)

PRINT_UP_FORMAT_NORMAL_15_CHAR = Normal 15 char for Inch font , high position. (LS100, LS150 models)

Length

Length of the invalidation string

String

Invalidation string

Return Value

LS_OKAY

LS_COMMAND_IN_EXECUTION_YET

LS_COMMAND_SEQUENCE_ERROR

LS_OPEN_NOT_DONE

LS_SYSTEM_ERROR

LS_USB_ERROR

LS_PERIPHERAL_NOT_FOUND

LS_HARDWARE_ERROR

LS INVALID FORMAT

Comments

Supported only by the peripheral LS models equipped with a backside invalidation



printer.



LSLoadStringWithCounterEx

#include "LSApi.h"

Result API LSLoadStringWithCounterEx(short

short hConnect,
HWND hWnd,
char Format,
LPSTR String,
short Length,
unsigned long StartNumber,

short Step);

Description

Loads the invalidation string, which may be printed onto the back side of the document with the ink-jet printer.. It differs from **LSLoadString** in that it is possible to specify a starting number that will be automatically incremented or decremented for each new document.

Parameters

hConnect

Handle returned by LSConnect

hWnd

Handle of the application windows which will receive the notification messages (Reserved for future use).

Format

Set the character style for the invalidation string,

PRINT_FORMAT_NORMAL = Normal font, low position.

PRINT_FORMAT_BOLD = Bold font, low position.

PRINT_FORMAT_NORMAL_15_CHAR = Normal 15 char for Inch font, low position.

PRINT_UP_FORMAT_NORMAL = Normal font , high position. (LS100, LS150 models)

PRINT_UP_FORMAT_BOLD = Bold font , high position. (LS100, LS150 models)

PRINT_UP_FORMAT_NORMAL_15_CHAR = Normal 15 char for Inch font , high position. (LS100, LS150 models)

String

Invalidation string having the same syntax of the C-language PRINTF function.

Length

Length of the string give in the String parameter.

StartNumber

Starting number used in the invalidation print numeration.

Step

When greater than zero it sets the increment step applied to *StartNumber* . When less than zero it sets the decrement step applied to *StartNumber* .

Return Value

LS_OKAY



LS_COMMAND_IN_EXECUTION_YET
LS_COMMAND_SEQUENCE_ERROR
LS_OPEN_NOT_DONE
LS_SYSTEM_ERROR
LS_USB_ERROR
LS_PERIPHERAL_NOT_FOUND
LS_HARDWARE_ERROR
LS_INVALID_FORMAT

Comments

Supported only by the peripheral LS models equipped with a backside invalidation printer.



LSLoadMixedString

#include "LSApi.h"

Result API LSLoadMixedString(short hConnect,

HWND hWnd, unsigned short Reserved1, short Reserved2,

char Font1,
LPSTR String1,
short Length1);
char Font2,
LPSTR String2,
short Length2);

char Font3,
LPSTR String3,
short Length3);
char Font4,
LPSTR String4,

short Length4);

Description

Loads the text of invalidation string, which may be printed onto the **BACK** side of the document with the ink-jet printer. It different from *LSLoadString()* that is possible print a string with some word in normal font mixed with some word in bold font.

Available only on LS150 model with Firmware 1.38 or higher.

Parameters

hConnect

Handle returned by LSConnect

hWnd

Handle of the application windows which will receive the notification messages (Reserved for future use).

Reserved1

Reserved for future use. Must be set to 0.

Reserved2

Reserved for future use. Must be set to 0.

Font1

Set the character style for the invalidation string,

PRINT_FORMAT_NORMAL = Normal font, low position.

PRINT_FORMAT_BOLD = Bold font, low position.

PRINT_UP_FORMAT_NORMAL = Normal font , high position. (LS100, LS150 models)

PRINT_UP_FORMAT_BOLD = Bold font , high position. (LS100, LS150 models)

String1

First part of the invalidation string.

Length1

Length of the first part of the invalidation string.



Font2

Set the character style for the invalidation string,

PRINT_FORMAT_NORMAL = Normal font, low position.

PRINT_FORMAT_BOLD = Bold font, low position.

PRINT_UP_FORMAT_NORMAL = Normal font , high position. (LS100,

LS150 models)

PRINT_UP_FORMAT_BOLD = Bold font , high position. (LS100, LS150 models)

String2

First part of the invalidation string.

Length2

Length of the first part of the invalidation string.

Font3

Set the character style for the invalidation string,

PRINT_FORMAT_NORMAL = Normal font, low position.

PRINT FORMAT BOLD = Bold font, low position.

PRINT_UP_FORMAT_NORMAL = Normal font , high position. (LS100,

LS150 models)

PRINT_UP_FORMAT_BOLD = Bold font , high position. (LS100, LS150 models)

String3

First part of the invalidation string.

Length3

Length of the first part of the invalidation string.

Font4

Set the character style for the invalidation string,

PRINT FORMAT NORMAL = Normal font, low position.

PRINT_FORMAT_BOLD = Bold font, low position.

PRINT_UP_FORMAT_NORMAL = Normal font , high position. (LS100, LS150 models)

PRINT_UP_FORMAT_BOLD = Bold font , high position. (LS100, LS150 models)

String4

First part of the invalidation string.

Length4

Length of the first part of the invalidation string.

Return Value

LS OKAY

LS_COMMAND_IN_EXECUTION_YET

LS_COMMAND_SEQUENCE_ERROR

LS_OPEN_NOT_DONE

LS_SYSTEM_ERROR

LS_USB_ERROR

LS_PERIPHERAL_NOT_FOUND

LS_HARDWARE_ERROR

LS_INVALID_FORMAT

Comments



Supported only by the peripheral LS models equipped with a backside invalidation printer.

For the part of string not needed set it to NULL, i.e. if my string is done of a part of normal and the other of bold, the parameters *Font3, String3, Length3, Font4, String4* and *Length4,* must be set to NULL.



LSLoadMultiStrings

#include "LSApi.h"

Result API LSLoadMultiStrings(short hConnect. HWND hWnd. char Font1, **LPSTR** String1, short Length 1); char Font2. **LPSTR** String2, short Length2); char Font3, **LPSTR** String3, short Length3); char Font4, **LPSTR** String4, short Length4);

Description

Loads up to 4 text lines of invalidation string, which may be printed onto the **BACK** side of the document with the ink-jet printer.

Available only on LS150 and LS515 model with the print header of 4 lines.

Parameters

hConnect

Handle returned by LSConnect

hWnd

Handle of the application windows which will receive the notification messages (Reserved for future use).

Font1

Set the character style for the invalidation string,

PRINT_FORMAT_NORMAL = Normal font.

PRINT_FORMAT_BOLD = Bold font.

PRINT_FORMAT_NORMAL_15_CHAR = Normal 15 char for Inch font.

PRINT_FORMAT_DOUBLE_HIGH = Font double high uses two line space.

String1

First part of the invalidation string.

Length1

Length of the first part of the invalidation string.

Font2

Set the character style for the invalidation string,

PRINT_FORMAT_NORMAL = Normal font.

PRINT_FORMAT_BOLD = Bold font.

PRINT_FORMAT_NORMAL_15_CHAR = Normal 15 char for Inch font.

PRINT_FORMAT_DOUBLE_HIGH = Font double high uses two line space.

String2

Second part of the invalidation string.

Length2



Length of the second part of the invalidation string.

Font3

Set the character style for the invalidation string,

PRINT_FORMAT_NORMAL = Normal font.

PRINT_FORMAT_BOLD = Bold font.

PRINT_FORMAT_NORMAL_15_CHAR = Normal 15 char for Inch font.

PRINT_FORMAT_DOUBLE_HIGH = Font double high uses two line space.

String3

Third part of the invalidation string.

Length3

Length of the third part of the invalidation string.

Font4

Set the character style for the invalidation string,

PRINT_FORMAT_NORMAL = Normal font.

PRINT_FORMAT_BOLD = Bold font.

PRINT_FORMAT_NORMAL_15_CHAR = Normal 15 char for Inch font.

PRINT_FORMAT_DOUBLE_HIGH = Font double high uses two line space.

String4

Forth part of the invalidation string.

Length4

Length of the forth part of the invalidation string.

Return Value

LS_OKAY

LS_COMMAND_IN_EXECUTION_YET

LS_COMMAND_SEQUENCE_ERROR

LS_OPEN_NOT_DONE

LS_SYSTEM_ERROR

LS_USB_ERROR

LS_PERIPHERAL_NOT_FOUND

LS_HARDWARE_ERROR

LS INVALID FORMAT

Comments

Supported only by the peripheral LS models equipped with a backside 4 lines invalidation printer.

Each string provided in String1 String2 String3 String4 parameters can also not be NULL terminated. Each line can have a different font .

If a line must not be printed, set the corresponding string to NULL.



LSReset

#include "LSApi.h"

Result API LSReset (short hConnect,

HWND hWnd,
char ResetType);

Description

Tests whether the cause of the error of the previous command has been removed and resets the unit.

The function is also used for cleaning the belt of the unit.

Parameters

hConnect

Handle returned by LSConnect

hWnd

Handle of the application windows which will receive the notification messages (Reserved for future use).

ResetType

Type of reset done:

RESET_ERROR – Reset software of the equipment.

RESET_FREE_PATH – Reset with turn on of the motors.

RESET_BELT_CLEANING – Turn on of the motors for cleaning the belt.

RESET_COUNTER_CARTRIDGE – Reset the counter of the dot printed.

RESET_UNIT_RESERVE – Reset the reservation of the unit.

Return Value

LS OKAY

LS_SYSTEM_ERROR

LS_USB_ERROR

LS_PERIPHERAL_NOT_FOUND

LS_HARDWARE_ERROR

LS_PAPER_JAM

LS_INVALID_RESET_TYPE

Comments

The RESET_COUNTER_CARTRIDGE will be called when a cartridge is replaced.



LSConfigDoubleLeafingAndDocLength

#include "LSApi.h"

Result API LSConfigDoubleLeafingAndDocLength(short hConnect,

HWND hWnd,
long Type,
short Value,
long DocMin,
long DocMax);

Description

Configures the device in case of Double Leafing (when two documents are picked together instead of one). It is possible to set the type of behavior, disabled or enabled, when enabled the unit will return a warning and continue to read the documents, or it will return a blocking error and stop the document processing loop with the document in the path. It is also possible to change the sensibility level and the length of the overlapped area before returning the error/warning. The setting done via this function will be valid until a power off-on of the device or a next double leafing setting command.

Parameters

hConnect

Handle returned by LSConnect

hWnd

Handle of the application windows which will receive the notification messages.

Type

The value accepted are the follows:

DOUBLE_LEAFING_ERROR – Error on Double leafing (default). **DOUBLE_LEAFING_WARNING** – Warning on Double leafing. **DOUBLE_LEAFING_DISABLE** – Double Leafing sensor disabled.

Value

The range of value accepted are from 0 to 100, the default is 50.

DocMin

Length in millimeter of the minimun doc handled:

Possible values for LS100: grater than 100 Possible values for LS150: grater than 80 Possible values for LS515: grater than 150 Possible values for LS800: grater than 130

DocMax

Length in millimeter of the maximun doc handled :

Possible values for LS100: less than 216 Possible values for LS150: less than 320 Possible values for LS515: less than 216 Possible values for LS800: less than 216

Return Value

LS OKAY

LS_PERIPHERAL_NOT_FOUND



LS_HARDWARE_ERROR LS_PAPER_JAM LS_INVALID_TYPE LS_INVALID_VALUE

Comments

This function, replaces the functions LSConfigDoubleLeafingEx() and LSDoubleLeafingSensibility().

With the LS40 this function return always LS_OKAY for compatibility reason because it doesn't have the Double Leafing sensor.



LSSetUnitSpeed

#include "LSApi.h"

Result API LSSetUnitSpeed (short hConnect,

HWND hWnd, char UnitSpeed);

Description

Available only for LS150 model.

Changes in a volatile mode the Unit speed. (does not write in the flash memory of the device) The Unit can accept 2 types of speed, 75 doc per minute and 150 doc per minute.

Parameters

hConnect

Handle returned by LSConnect

hWnd

Handle of the application windows which will receive the notification messages (Reserved for future use).

UnitSpeed

Value accepted:

SPEED_NORMAL – Set the default Unit speed. (150DPM) **SPEED_STAMP** – Set for all type of ScanMode the stamp Unit speed. (75 DPM)

Return Value

LS OKAY

LS_SYSTEM_ERROR

LS_USB_ERROR

LS_PERIPHERAL_NOT_FOUND

LS_HARDWARE_ERROR

LS_INVALID_UNIT_SPEED

Comments



LSUnitStatus

#include "LSApi.h"

Result API LSUnitStatus (short hConnect, HWND hWnd, UNITSTATUS *IpStatus);

Description

This function can be used by the application to obtain detailed information about the LS device sensors status.

Parameters

hConnect

Handle returned by LSConnect

hWnd

Handle of the application windows which will receive the notification messages (Reserved for future use).

LpStatus

Pointer to a structure **UNITSTATUS** that describe the status and the photo of the unit. The structure is described in the comments section.

The field Size of the structure must be compiled from the application.

Return Value

```
LS_OKAY
LS_SYSTEM_ERROR
LS_USB_ERROR
LS_PERIPHERAL_NOT_FOUND
LS_HARDWARE_ERROR
LS_PAPER_JAM
LS_COMMAND_SEQUENCE_ERROR
```

Comments

Description UNITSTATUS structure:

```
typedef struct _UNITSTATUS
```

```
// Size of the structure
int
             Size;
int
            UnitStatus;
                                                             // Ls40 Ls100 Ls150
                                                                  Ls5xx Ls800
                                                             // Ls40 Ls100 Ls150
BOOL
         Photo Feeder;
                                                                   Ls5xx Ls800
BOOL
             Photo Sorter;
                                                             //
                                                                         Ls100
BOOL Photo MICR;
                                                             //
                                                                         Ls100 Ls150
                                                                   Ls5xx
BOOL Photo_Path_Ls100; // Ls100
BOOL Photo_Scanners; // Ls100
BOOL Unit_Just_ON; // Ls40 Ls100 Ls150
BOOL Photo_Double_Leafing_Down; // Ls100 Ls150
BOOL Photo_Double_Leafing_Middle;// Ls100 Ls150
BOOL Photo_Double_Leafing_Up; // Ls100 Ls150
```



```
//
                                                     Ls150
BOOL
        Photo Card;
BOOL
        Pockets All Full;
                                                     Ls150
                                         Ls5xx
BOOL
        Photo Stamp;
                                         Ls5xx
        Photo Exit;
BOOL
                                         Ls5xx
        Pocket 1 Full;
BOOL
                                         Ls5xx
        Pocket 2 Full;
BOOL
                                         Ls5xx
BOOL
        Photo Path Feeder;
                                         Ls800
        Photo Path Module Begin;
BOOL
                                         Ls800
        Photo Path Binary Rigth;
BOOL
                                         Ls800
BOOL
        Photo Path Binary Left;
                                      //
                                         Ls800
BOOL
        Photo Path Module End;
                                      //
                                         Ls800
BOOL
        Sorter 1 input pocket 1;
                                      //
                                         Ls800
                                      //
BOOL
        Sorter 1 pocket 1 full;
                                         Ls800
                                      //
BOOL
        Sorter 1 input pocket 2;
                                         Ls800
        Sorter 1 pocket 2 full;
                                      11
BOOL
                                         Ls800
                                      //
BOOL
        Sorter 1 input pocket 3;
                                         Ls800
BOOL
        Sorter 1 pocket 3 full;
                                      //
                                         Ls800
                                      //
BOOL
        Sorter 2 input pocket 1;
                                         Ls800
                                      11
BOOL
        Sorter 2 pocket 1 full;
                                         Ls800
BOOL
        Sorter 2 input pocket 2;
                                         Ls800
                                      //
BOOL
        Sorter 2 pocket 2 full;
                                         Ls800
        Sorter_2_input_pocket_3;
BOOL
                                         Ls800
        Sorter_2_pocket_3_full;
BOOL
                                         Ls800
                                      //
BOOL
        Sorter 3 input pocket 1;
                                         Ls800
                                      //
BOOL
        Sorter 3 pocket 1 full;
                                         Ls800
BOOL
        Sorter 3 input pocket 2;
                                      //
                                         Ls800
        Sorter 3 pocket 2 full;
                                      //
BOOL
                                         Ls800
        Sorter 3 input pocket 3;
                                      //
BOOL
                                         Ls800
        Sorter 3 pocket 3 full;
                                      11
BOOL
                                         Ls800
        Sorter 4 input pocket 1;
BOOL
                                      //
                                         Ls800
```



```
Sorter 4 pocket 1 full;
                                      //
BOOL
                                         Ls800
BOOL
        Sorter 4 input pocket 2;
                                      //
                                         Ls800
BOOL
        Sorter 4 pocket 2 full;
                                      //
                                         Ls800
        Sorter 4 input pocket 3;
BOOL
                                         Ls800
        Sorter 4 pocket 3 full;
                                      //
BOOL
                                         Ls800
BOOL
        Sorter 5 input pocket 1;
                                         Ls800
BOOL
        Sorter 5 pocket 1 full;
                                         Ls800
BOOL
        Sorter 5 input pocket 2;
                                         Ls800
BOOL
        Sorter_5_pocket_2_full;
                                         Ls800
BOOL
        Sorter 5 input pocket 3;
                                      //
                                         Ls800
BOOL
        Sorter 5 pocket 3 full;
                                      //
                                         Ls800
BOOL
        Sorter 6 input pocket 1;
                                      //
                                         Ls800
                                      //
BOOL
        Sorter 6 pocket 1 full;
                                         Ls800
                                      //
BOOL
        Sorter 6 input pocket 2;
                                         Ls800
        Sorter 6 pocket 2 full;
                                      //
BOOL
                                         Ls800
BOOL
        Sorter 6 input pocket 3;
                                      //
                                         Ls800
BOOL
        Sorter 6 pocket 3 full;
                                      //
                                         Ls800
BOOL
        Sorter 7 input pocket_1;
                                      //
                                         Ls800
                                      11
BOOL
        Sorter 7 pocket 1 full;
                                         Ls800
                                      //
BOOL
        Sorter 7 input pocket 2;
                                         Ls800
                                      //
BOOL
        Sorter 7 pocket 2 full;
                                         Ls800
        Sorter_7_input_pocket_3;
                                      //
BOOL
                                         Ls800
        Sorter_7_pocket_3_full;
                                      //
BOOL
                                         Ls800
BOOT
        Photo Trigger;
                                      // Ls40
                                      // Ls40
BOOT
       Document Retained;
BOOL
        Photo Print Cartridge;
                                      //
                                                    Ls150
       Photo MT DocAlign;
                                      // Ls40
BOOL
        Photo MT Pinch;
                                      // Ls40
BOOL
        Photo MT Restart;
                                      // Ls40
BOOL
        Photo MT US DocInFeeder;
                                     // Ls40
BOOL
        Photo MT US DL InFeeder;
                                      // Ls40
BOOL
```

} UNITSTATUS, *PUNITSTATUS;



Note:

The sensor status is equal to TRUE, then the sensor is covered otherwise is equal to FALSE then the sensor is uncovered.

Possible value assuming from the field *UnitStatus*:

- 0 H No sense
- 2 H Unit busy
- 3 H Paper jam
- 4 H Hardware error
- 5 H Illegal request
- 6 H Document not present
- 9 H Double Leafing error
- B H Aborted command
- 40 H Jam at MICR photo
- 41 H Jam Document to long
- 42 H Jam at scanner photo



LSPeripheralStatus

#include "LSApi.h"

Result API LSPeripheralStatus (short hConnect, HWND hWnd,

unsigned char *SenseKey, unsigned char *SensorStatus);

Description

This function can be used by the application to obtain detailed information about the LS device sensors status.

Parameters

hConnect

Handle returned by LSConnect

hWnd

Handle of the application windows which will receive the notification messages (Reserved for future use).

SenseKey

Pointer to a byte variable that will contain the sense key status.

Possible values are:

Hex	Description
0 H	No sense
2 H	Unit busy
3 H	Paper jam
4 H	Hardware error
5 H	Illegal request
6 H	Document not present
9 H	Invalid command
40 H	Jam at MICR photo
41 H	Jam Document to long
42 H	Jam at scanner photo
43 h	Jam on sort after retained. (only LS40 MT2)
44 H	Doc not aligned. (only LS40 MT2)
45 H	Jam during align. (only LS40 MT2)
46 H	Doc not aligned. (only LS40 MT2)
47 H	Doc not ejected. (only LS40 MT2)
48 H	Max motor step. (only LS40 MT2)
49 H	Jam in scanner during eject. (only LS40 MT2)
4A H	Jam at trigger photo during eject. (only LS40 MT2)
4B H	Trigger photo stop MICR. (only LS40 MT2)
4C H	Doc too long after stamp. (only LS40 MT2)
4D H	Jam in trigger photo. (only LS40 MT2)
4E H	Jam at feeder photo. (only LS40 MT2)
4F H	Jam before feeder phot. (only LS40 MT2)
50 H	Photo feeder not covered. (only LS40 MT2)
51 H	Jam align backward movement. (only LS40 MT2)
52 H	Jam align forward movement. (only LS40 MT2)
53 H	Doc too long after retained. (only LS40 MT2)

SensorStatus



Pointer to a 16 bytes variable that will contain the sensor status.

The information returned takes on different meanings for different LS models.

The bits must be interpreted in this order:

bit7 bit6 bit5 bit4 bit3 bit2 bit1 bit0

For example if the sensor bit has a value of 0x0E the following bits will be set:

Bit0 = 0

Bit1 = 1

Bit2 = 1

Bit3 = 1

Bit4 = 0

Bit5 = 0

Bit6 = 0

Bit7 = 0

The meaning of each bit is described underneath.

For LS40 models

SensorStatus[byte 0]

Bit	Description
0	Document present in the leafer
1	Photo head MICR covered
2	n.u.
3	n.u.
4	n.u.
5	n.u.
6	Document Retained
7	Unit just ON

SensorStatus[byte 1]

Bit	Description
0	Align 2 sensor (MyTeller 2 version)
1	Pinch roller sensor (MyTeller 2 version)
2	Restart sensor (MyTeller 2 version)
3	n.u.
4	Ultrasonic sensor state bit 1 (MyTeller 2 version)
5	Ultrasonic sensor state bit 2 (MyTeller 2 version)
6	n.u.
7	n.u.

For LS100 models

SensorStatus[byte 0]

Bit	Description
0	Document present in the leafer
1	bit = 0 the value of the previous bit is not valid, bit = 1 yes
2	Document present in the bin
3	bit = 0 the value of the previous bit is not valid, bit = 1 yes
4	Photo head MICR covered
5	n.u.
6	n.u.
7	Unit just ON

For LS150 models

SensorStatus[byte 0]

Bit Description

0 Document present in the leafer



- 1 Photo head MICR covered2 Photo card covered
- 3 Photo scanner covered
- 4 BIN full
- 5 n.u.
- 6 n.u.
- 7 Unit just ON

SensorStatus[byte 1]

Bit	Description
0	Photo 1 Double leafing covered
1	Photo 2 Double leafing covered
2	Photo 3 Double leafing covered
3	n.u.
4	n.u.
5	n.u.
6	n.u.
7	n.u.

For LS200 models

SensorStatus[byte 0]

Bit	Description
0	Document present in the leafer
1	Photo scanner covered
2	Photo head MICR covered
3	Photo BIN covered
4	Photo stamp covered
5	n.u.
6	n.u.
7	Unit just ON

SensorStatus[byte 1] Bit Description

DIL	Description
0	n.u.
1	Photo 0 double leafing covered
2	Photo 1 double leafing covered
3	Photo 2 double leafing covered
4	n.u.
5	n.u.
6	n.u.
7	n.u.

For LS5xx series models

SensorStatus[byte 0]

Bit	Description
0	Document present in the leafer
1	Photo head MICR covered
2	Photo stamp covered
3	Photo scanner covered
4	Document retained
5	not used
6	not used
7	Unit just ON

SensorStatus[byte 1]

Bit	-	Description
0		not used



First BIN full
Second BIN full
Double leafing occurred
not used
not used
not used
not used
not used
not used

For LS800 series model

The bytes from 11 to 15 are reserved for future enhancements.

SensorStatus[byte 0]

Bit	Description
0	Sorter 1 - photo input pocket 1 covered
1	Sorter 1 - pocket 1 full
2	Sorter 1 - photo input pocket 2 covered
3	Sorter 1 - pocket 2 full
4	Sorter 1 - photo input pocket 3 covered
5	Sorter 1 - pocket 3 full
6	n.u.
7	n.u.

SensorStatus[byte 1]

Bit	Description
0	Sorter 2 - photo input pocket 1 covered
1	Sorter 2 - pocket 1 full
2	Sorter 2 - photo input pocket 2 covered
3	Sorter 2 - pocket 2 full
4	Sorter 2 - photo input pocket 3 covered
5	Sorter 2 - pocket 3 full
6	n.u.
7	n.u.

SensorStatus[byte 2] Rit Description

BIT	Description
0	Sorter 3 - photo input pocket 1 covered
1	Sorter 3 - pocket 1 full
2	Sorter 3 - photo input pocket 2 covered
3	Sorter 3 - pocket 2 full
4	Sorter 3 - photo input pocket 3 covered
5	Sorter 3 - pocket 3 full
6	n.u.
7	n.u.

SensorStatus[byte 3] Rit Description

BIT	Description
0	Sorter 4 - photo input pocket 1 covered
1	Sorter 4 - pocket 1 full
2	Sorter 4 - photo input pocket 2 covered
3	Sorter 4 - pocket 2 full
4	Sorter 4 - photo input pocket 3 covered
5	Sorter 4 - pocket 3 full
6	n.u.
7	n.u.

SensorStatus[byte 4]

Bit Description



```
Sorter 5 - photo input pocket 1 covered
Sorter 5 - pocket 1 full
Sorter 5 - photo input pocket 2 covered
Sorter 5 - pocket 2 full
Sorter 5 - photo input pocket 3 covered
Sorter 5 - pocket 3 full
n.u.
n.u.
```

SensorStatus[byte 5] **Bit Description**

Bit	Description
0	n.u.
1	n.u.
2	n.u.
3	n.u.
4	n.u.
5	n.u.
6	n.u.
7	n.u.

SensorStatus[byte 6]

Bit	Description
0	n.u.
1	n.u.
2	n.u.
3	Photo Double Leafing 1 covered
4	Photo Double Leafing 2 covered
5	Photo Double Leafing 3 covered
6	n.u.
7	n II

SensorStatus[byte 7] Rit Description

Bit	Description
0	if 0 - Documents present in the feeder. if 1 - Feeder empty
1	Photo at begin path base module covered
2	Photo path binary 1 covered
3	Photo path binary 2covered
4	Photo at end path base module covered
5	n.u.
6	n.u.
7	n.u.

SensorStatus[byte 8]

Reserved

SensorStatus[byte 9]

Bit	Description
0	Sorter 6 - photo input pocket 1 covered
1	Sorter 6 - pocket 1 full
2	Sorter 6 - photo input pocket 2 covered
3	Sorter 6 - pocket 2 full
4	Sorter 6 - photo input pocket 3 covered
5	Sorter 6 - pocket 3 full
6	n.u.
7	n.u.

SensorStatus[byte 10]

Bit Description

O Sorter 7 - photo input pocket 1 covered



- 1 Sorter 7 pocket 1 full
- 2 Sorter 7 photo input pocket 2 covered
- 3 Sorter 7 pocket 2 full
- 4 Sorter 7 photo input pocket 3 covered
- 5 Sorter 7 pocket 3 full
- 6 n.u.
- 7 n.u.

Return Value

LS_OKAY

LS_SYSTEM_ERROR

LS_USB_ERROR

LS_PERIPHERAL_NOT_FOUND

LS_HARDWARE_ERROR

LS_PAPER_JAM

LS_COMMAND_SEQUENCE_ERROR

LS_FEEDER_EMPTY

Comments

More information about the sensor status may be found in the specific LS device manuals.



LSSetSorterCriteria

#include "LSApi.h"

Result API LSSetSorterCriteria (short hConnect,

HWND hwnd,
PDATASORTERSELECT *pCriteria,
SHORT NrCriteria);

Description

Set the criteria to apply in sorting documents, it is possible to set a maximum of MAX_CRITERIA selection criteria. This command is available on LS510, LS515 models

Parameters

hConnect

Handle returned by LSConnect

hwnd

Handle of the application windows which will receive the notification messages (Reserved for future use).

pCriteria

Pointer to a DATASORTERSELECT structure (see Comments section below) that specifies the criteria to apply for sorting the documents and deciding the destination storage bin.

NrCriteria

Number of criteria structures in pCriteria. This value cannot be greater than MAX_CRITERIA

Return Value

LS_OKAY
LS_COMMAND_IN_EXECUTION_YET
LS_COMMAND_SEQUENCE_ERROR
LS_SYSTEM_ERROR
LS_PERIPHERAL_NOT_FOUND
LS_HARDWARE_ERROR

Comments

In case more than one sorting criteria is provided, make sure that the structures are all contiguous, one after the other.

The DATASORTERSELECT structure is organized as follows:



Description:

TypeCriteria

Specify the selection criteria. Valid values are:

0x00 No Criteria.

0x01 Error in the codeline.

0x02 Codeline equal to string1.

0x03 Codeline different from string1.

0x04 Codeline greater than string1.

0x05 Codeline less than string1.

0x06 Codeline greater than string1 and less than string2.

0x07 Codeline minor string1 or greater string2.

0x08 Codeline equal string1 or equal string2.

0x09 Codeline different from string1 and string2.

CharToStart

Initial character in the codeline used as starting character of the codeline comparison string.

NrCharCheck

Number of characters to include in the comparison string.

String1

First reference string compared to the codeline comparison string.

String2

Second reference string compared to the codeline comparison string.

Bin

Destination Bin for documents that meet TypeCriteria



LSSetOpticalWindows

#include "LSApi.h"

Result API LSSetOpticalWindows (short hConnect, HWND hWnd.

PDATAOPTICALWINDOW pDimWindows, SHORT pDimWindows);

Description

Set the dimensions and character set to use by the decoding algorithm applied to the section of documents that will be processed.

This function must be invoked before **LSDocHandle**.

It works on the LS100 units which have the DSP option installed.

Parameters

hConnect

Handle returned by LSConnect

hWnd

Handle of the application windows which will receive the notification messages (Reserved for future use).

pDimWindows

Pointer to a DATAOPTICALWINDOW structure that specifies the dimensions of the portions of document that must be read and the type of the character that must be read.

NrWindos

Number of windows that must be read. This value cannot be grater 1 for LS100 series.

Return Value

```
LS_OKAY
```

LS_COMMAND_IN_EXECUTION_YET

LS_COMMAND_SEQUENCE_ERROR

LS_SYSTEM_ERROR

LS_PERIPHERAL_NOT_FOUND

LS_HARDWARE_ERROR

Comments

```
The DATAOPTICALWINDOW structure is as follows:
```

Description:



TypeRead

Type of reading operation, this member can have the follows values: READ_CODELINE_HW_OCRA for decoding OCRA characters. READ_CODELINE_HW_OCRB_NUM for decoding OCRB number

characters.

READ_CODELINE_HW_OCRB_ALFANUM for decoding OCRB Alpha-Numeric characters.

READ_CODELINE_HW_OCRB_ITALY for decoding a subset of OCRB Alpha-Numeric characters.

READ_CODELINE_HW_E13B for decoding E13B Optical characters.

READ_CODELINE_HW_E13B_X_OCRB start to decoding E13B Optical and X char switch OCRB characters.

Reserved

Must be set to 0.

XRightBottom

X coordinate in millimetre from the right bottom corner of the document.

YRightBottom

Y coordinate in millimetre from the right bottom corner of the document

XLeftTop


X coordinate in millimetre from the right bottom corner of the document.

YLeftTop

Y coordinate in millimetre from the right bottom corner of the document (this parameter accept only the value YRightBottom + 10).

The coordinate millimetres pair 0,0 refers to the bottom right hand corner of the document.

Example:

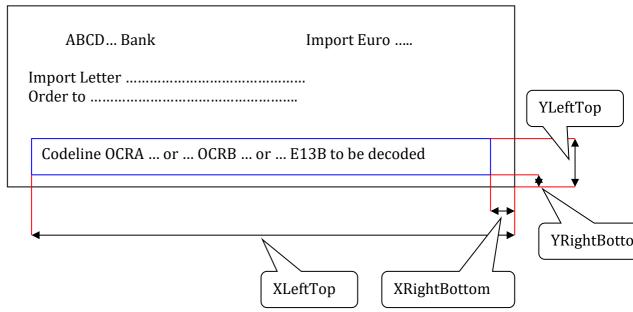



LSDisableWaitDocument

#include "LsApi.h"

Result API LSDisableWaitDocument (short hConnect,

HWND hWnd, BOOL Value);

Description

The function disable or enable the peripheral timeout on insert documents, by default the timeout is **enabled**.

Function available only with the LS100, LS150 and LS51x model.

Parameters

hConnect

Handle returned by LSConnect

hWnd

Handle of the application windows which will receive the notification messages (Reserved for future use).

Value

TRUE disable the timeout. **FALSE** enable the timeout.

Return Value

LS_OKAY LS_PERIPHERAL_NOT_FOUND LS_HARDWARE_ERROR LS_OPEN_NOT_DONE

Comments

This performance on LS510 is available only from the firmware version 2.23 or later.



LSChangeStampPosition

#include "LSApi.h"

Result API LSChangeStampPosition(short hConnect,

HWND hwnd, short Step, char Reserved);

Description

Function available only with the LS51x and LS150 models.

Change the position of the stamps placed on the front of the processed document.

Parameters

hConnect

Handle returned by LSConnect

hwnd

Handle of the application windows which will receive the notification messages (Reserved for future use).

Step

This parameter specifies the advancement of the motor, in number of steps, before starting to stamp.

LS150 valid range is 0 to 75, each step unit corresponds to 1 mm.

0 – The stamping is done at the default position on the document.

75 – The stamping is done at the left of the document in length.

LS515 valid range is 0 to 25, each step unit corresponds to 2.5 mm.

0 – The stamping is done at the beginning of the document (default value).

25 – The stamping is done at the end of the document of 216 mm in length.

Reserved

This parameter must be set to 0.

Return Value

LS OKAY

LS_PERIPHERAL_NOT_FOUND

LS_PAPER_JAM

LS_OPEN_NOT_DONE

LS_COMMAND_NOT_SUPPORTED

LS_COMMAND_SEQUENCE_ERROR

LS_INVALID_TYPE_COMMAND

LS INVALID FORMAT

Comments

This function is not applicable to LS100, LS5xx series.



LSUnitHistory

#include "LSApi.h"

Result API LSUnitHistory(short hConnect, HWND hWnd, UNITHISTORY *sHistory);

Description

Retrieve the historical data stored inside the LS device non volatile memory.

Parameters

hConnect

Handle returned by LSConnect

hWnd

Handle of the application windows which will receive the notification messages (Reserved for future use).

sHistory

Structure containing the historical data returned by the device. The field **Size** of the structure **must** be set with the size of the gived structure.

Return Value

LS_OKAY
LS_SYSTEM_ERROR
LS_USB_ERROR
LS_PERIPHERAL_NOT_FOUND
LS_COMMAND_SEQUENCE_ERROR

Comments

Description of the *UnitHistory* structure:

```
typedef struct _UNITHISTORY
                                               // Size of the structure
      int
                       Size;
      unsigned long
                       doc_sorted;
                                               // Document sortered
      unsigned long
                       doc retained;
                                               // Nr. of document retained
      unsigned long
                       doc_retained_micr;
                                               // Nr. documents retained after MICR
header
      unsigned long
                                               // Nr. documents retained after front
                       doc_retained_scan;
scanning
      unsigned long
                       doc_ink_jet;
                                               // Nr. of document printed
      unsigned long
                                               // Nr. of document stamped
                       doc_stamped;
      unsigned long
                       tot_paper_jams;
                                               // Totally of Paper jam
      unsigned long
                       jams in feeder;
                                               // Nr. jam in the feeder
                                               // Nr. jam during the MICR reading
      unsigned long
                       jams in micr;
      unsigned long
                       jams_scanner;
                                               // Nr. jam between scanners
      unsigned long
                                               // Nr. jam at stamp document
                       jams_stamp;
      unsigned long
                                               // Nr. jam after the film
                       jams_on_exit;
      unsigned long
                                               // Nr. jam in the card entry
                       jams_card;
```



```
unsigned long
                       nr_double_leafing;
                                               // Nr. double leafing occurs Ls800
only
      unsigned long
                       tot_doc_MICR_err;
                                               // Totally MICR document, read with
error
      unsigned long
                                               // Nr. of document CMC7, read with
                       doc_cmc7_err;
error
      unsigned long
                                               // Nr. of document E13B, read with
                       doc_e13b_err;
error
      unsigned long
                       doc_hw_barcode_err;
                                               // Nr. of document Barcode, read
from LS with error
                                               // Nr. of document OCR, read from LS
      unsigned long
                       doc_hw_optic_err;
with error
      unsigned long
                       num_turn_on;
                                               // Nr. of power ON
      unsigned long
                       time_peripheral_on;
                                               // Minutes peripheral time life
      // Section compiled only from Ls800
      unsigned long
                                               // Jam in scanner front
                       jam_front_scanner;
      unsigned long
                                               // Jam in the left track
                       jam_track_left;
                                               // Jam in the right track
      unsigned long
                       jam_track_right;
      unsigned long
                       jam_back_scanner;
                                               // Jam in scanner back
                                               // Jam in sorters track
      unsigned long
                       jam in the sorters;
      // Section compiled only from Ls800
      unsigned long
                       nr_drops_printed;
                                               // Nr. of drops printed
} UNITHISTORY, *PUNITHISTORY;
```



Advanced document handling functions

The functions described in this section allow documents handling in a cycle. For each document in the cycle it is possible to choose the resolution, to read the front or back image and/or the codeline, to print a validation string and to save the image to a file or to memory.

For the LS800 it is advisable that you use these functions, in order to achieve the maximum speed of the unit.

The same applies to all the LS family scanners models, if you use these functions multiple documents will be in the path at the same time, thus obtaining the maximum throughput out of the unit.

The speed of the machine will be completely independend of the application speed.



LSAutoDocHandle

#include "LSApi.h"

Result API LSAutoDocHandle(short hConnect,

HWND hWnd,
short Stamp,
short Validate,
short CodeLine,
short ScanMode,
short Feeder,
short Sorter.

short NumDocument, short ClearBlack,

char Side,

shortScanDocType,shortSaveImage,char*DirectoryFile,char*BaseFilename,

 $\begin{array}{lll} \textbf{float} & pos_x, \\ \textbf{float} & pos_y, \\ \textbf{float} & sizeW, \\ \textbf{float} & sizeH, \\ \end{array}$

shortOriginMeasureDoc,shortOcrlmageSide,shortFileFormat,intQuality,intSaveMode,intPageNumber,shortWaitTimeout,

short Beep,

int (*userfunc)(S_CODELINE_INFO

*CodelineInfo),

LPVOID Reserved2, LPVOID Reserved3);

Description

Handle documents in a cycle according to the options specified by the various parameters.

This function can be used to automatically handle documents on the LS40, LS100, LS150, LS515 and LS510S models. It must be called before the **LSGetDocData()** loop. To disable the wait timeout after the last document the

LSDisableWaitDocument() function must be called prior to the LSAutoDocHandle(). Please also refer to the LSConfigDoubleLeafingAndDocLenght() function to configure the paper sensibility in the correct way to handle the double leafing functionality.

Parameters

hConnect

Handle returned by LSConnect

hWnd

Handle of the application windows which will receive the notification messages (Reserved for future use).



Stamp

NO_STAMP = do not stamp document FRONT_STAMP = stamp front side of document REAR_STAMP = stamp rear side of document

FRONT_AND_REAR_STAMP = stamp both front and rear sides of document (this option is possible only with LS5xx models)

Validate

NO_PRINT_VALIDATE = do not print validation string
PRINT_VALIDATE = print validation string (the text of the validation string
must be loaded using the *LSLoadString* command before
invoking this command). The LS device must be equipped

with the optional validation printer.

PRINT_DIGITAL_VALIDATE = print digital validation string on the image (the text of the validation string must be loaded using the LSLoadDigitalStringWithCounter command before invoking this command)

Codeline

Specify the type of codeline to read.

NO_READ_CODELINE = do not read codeline.

READ_CODELINE_MICR = read magnetic codeline, either CMC7 or E13B. **READ_CODELINE_E13B_MICR_AND_OCR** = read a codeline E13B in magnetic / optic mode.

READ_CODELINE_CMC7_MICR_AND_OCR = read a codeline CMC7 in magnetic / optic mode.

READ_CODELINE_MICRO_HOLES = read a MicroHoles codeline present on the document. **IMPORTANT** if this define is set in order to obtain Micro codelines, then the application must call the function *LSGetDocDataMH()* instead of *LSGetDocData()*.

READ_CODELINE_MICR_AND_MICRO_HOLES = read a codeline CMC7 or E13B and the MicroHoles codeline present on the document. IMPORTANT if this define is set in order to obtain Micro codelines, then the application must call the function LSGetDocDataMH() instead of LSGetDocData().

READ_CODELINE_CMC7_MOCR_AND_MICRO_HOLES = read a codeline CMC7 in magnetic / optic mode and the MicroHoles codeline present on the document. IMPORTANT if this define is set in order to obtain Micro codelines, then the application must call the function LSGetDocDataMH() instead of LSGetDocData().

READ_CODELINE_SW_OCRA = read codeline from the position specified by X, Y and Size parameters. *The co-ordinate start from bottom right corner of the document.*

READ_CODELINE_SW_OCRB_NUM = read codeline from the position specified by X, Y and Size parameters. *The co-ordinate start from bottom right corner of the document.*

READ_CODELINE_SW_OCRB_ALFANUM = read codeline from the position specified by X, Y and Size parameters. *The co-ordinate start from bottom right corner of the document.*

READ_CODELINE_SW_OCRB_ITALY = read codeline from the position specified by X, Y and Size parameters. This font is a subset of the alfa-numeric font without the character '&' and same separator.

READ_CODELINE_SW_OCRB_ARABIC = read codeline from the position specified by X, Y and Size parameters. This font is a numeric font plus the character '-' with body 10 and 12.

READ_CODELINE_SW_E13B = read codeline from the position specified by



X, Y and Size parameters. The co-ordinate start from bottom right corner of the document.

READ CODELINE SW CMC7 = read codeline from the position specified by X, Y and Size parameters. The co-ordinate start from bottom right corner of the document.

READ_CODELINE_SW_ E13B_X_OCRB = read codeline from the position specified by X, Y and Size parameters. The co-ordinates start from the bottom right hand corner of the document.

READ_BARCODE_2_OF_5 = read in optical mode a 2_OF_ 5 barcode. **READ_BARCODE_CODE39** = the software decoding of a CODE39 barcode. **READ_BARCODE_CODE128** = the software decoding of a CODE128 barcode.

READ BARCODE EAN13 = the software decoding of a EAN 13 barcode. **READ_2D_BARCODE_PDF417** = read in optical mode a PDF417 barcode. READ_BARCODE_UCCEAN128 = Added barcode UCC/EAN-128 (ASCII code 247 represents FNC1 on returned decoded data).

ScanMode

This parameter set the resolution for the image to read Accepted values are :

SCAN_MODE_BW = black and white at 200 dpi

SCAN MODE 16GR100 = 16 shades of grey, at 100 dpi

SCAN_MODE_16GR120 = 16 grey scale at 120 dpi SCAN_MODE_16GR200 = 16 shades of grey, at 200 dpi

SCAN_MODE_16GR240 = 16 grey scale at 240 dpi

SCAN_MODE_16GR300 = 16 grey scale at 300 dpi

SCAN_MODE_256GR100 = 256 grey scale at 100 dpi

SCAN_MODE_256GR120 = 256 grey scale at 120 dpi

SCAN_MODE_256GR200 = 256 grey scale at 200 dpi

SCAN_MODE_256GR240 = 256 grey scale at 240 dpi

SCAN_MODE_256GR300 = 256 grey scale at 300 dpi

SCAN_MODE_256GR100_AND_UV = 256 gray scale at 100 dpi and Ultra Violet images

SCAN_MODE_256GR200_AND_UV = 256 gray scale at 200 dpi and Ultra Violet images

SCAN_MODE_256GR300_AND_UV = 256 gray scale at 300 dpi and Ultra Violet images

SCAN_MODE_COLOR_100 = Color 24 bit 100 dpi

SCAN_MODE_COLOR_200 = Color 24 bit 200 dpi

SCAN MODE COLOR 300 = Color 24 bit 300 dpi

SCAN_MODE_COLOR_100_AND_UV = 256 gray scale at 100 dpi and Ultra Violet images

SCAN MODE COLOR 200 AND UV = 256 gray scale at 200 dpi and Ultra Violet images

SCAN MODE_COLOR_300_AND_UV = 256 gray scale at 300 dpi and Ultra Violet images

SCAN_MODE_256GR100BN = 256 gray scale at 100 dpi Brutto and Netto images (LS515 model only)

SCAN_MODE_256GR200BN = 256 gray scale at 200 dpi Brutto and Netto images (LS515 model only)

SCAN_MODE_COLOR_AND_RED_100 = Color 24 bit at 100 dpi and Netto images (LS100 and LS515 model)

SCAN_MODE_COLOR_AND_RED_200 = Color 24 bit at 200 dpi and Netto images (LS100 and LS515 model)

SCAN_MODE_256GR100_ONLY_RED = 256 gray scale at 100 dpi Red images

SCAN MODE 256GR200 ONLY RED = 256 gray scale at 200 dpi Red images

SCAN_MODE_256GR300_ONLY_RED = 256 gray scale at 300 dpi Red



images

Feeder

It specifies the source of the document

AUTO FEED = document from feeder.

PATH_FEED = document from path. This value should be used when the document processing requires two or more passes. It requires that in the previous pass the value set for *Sorter* parameter is HOLD_DOCUMENT

Sorter

It specifies the destination of the processed document. The applicable values depend on the model of LS device being used :

HOLD_DOCUMENT = hold document. In the next pass the parameter Feeder must take the value PATHFEED

SORTER_BAY1 = document is stacked in sorting pocket 1.

SORTER_BAY2 = document is stacked in sorting pocket 2

SORTER_AUTOMATIC = send the document to the destination set by a previous LSSetSorterCriteria command.

SORTER_SWITCH_1_TO_2 = documents are stacked in Pocket 1, until it becomes full at which point stacking continues to Pocket 2. When Pocket 2 becomes full the service will return a LS_SORTERS_BOTH_FULL error code.

SORTER_ON_CODELINE_CALLBACK_WITH_PRINT = the application decides the destination pocket after reading the MICR codeline in a call-back function and the print of the stringa start always at the same point from the edge of the documents (LS515-HS models only).

NumDocument

This parameter set the maximum number of documents to read.

0 = read all documents present in the feeder at intervals of 6 seconds one from the other.

ClearBlack

This sets the option for either cleaning or keeping the black area that may be present around the scanned image

NO_CLEAR_BLACK = no image cleaning, the black area is not removed.

CLEAR_ALL_BLACK = clean the document's image removing all the black around the image according to the level of filter specified by LSSetThresholdClearBlack command.

CLEAR_AND_ALIGN_IMAGE = removing all the black around the image and align the document's image. (deskew)

Side

It specifies which side(s) of the document to scan

SIDE_FRONT_IMAGE = Scan Front side.

SIDE_BACK_IMAGE = Scan Rear side.

SIDE_ALL_IMAGE = Scan Both sides.

SIDE_NONE_IMAGE = Do not scan document.

ScanDocType

Specifies the type of document to processed.

Accepted values are:

SCAN_PAPER_DOCUMENT: for paper.

SCAN_A4_DOCUMENT: for scan document A4 (only for LS150 G).

Savelmage

Specifies where to store the scanned image(s)



IMAGE_SAVE_ON_FILE = save the image on file
IMAGE_SAVE_HANDLE = save the image in memory
IMAGE_SAVE_BOTH = save the image in memory and on file
IMAGE_SAVE_NONE = do not save on file nor in memory.

DirectoryFile

Path of the Directory where to save the image(s), without file name.

BaseFilename

Root of the file name given to all stored images. For example, if this parameter is set to be equal to **AA** and the chosen File Format is JPEG, the first file created will be named **AA**0FF.jpg, with the FF postfix for front images and the BB postfix for rear images.

pos_X

Specify the x co-ordinates of the codeline. Reference point and unit of measure as of *OriginMeasureDoc* parameter.

pos_Y

Specify the y co-ordinates of the codeline, from the bottom margin of the document. Unit of measure as of *OriginMeasureDoc* parameter.

SizeW

Specify the size of the window that contained codeline in the image. Unit of measure as of *OriginMeasureDoc* parameter.

SizeH

Specify the height of the codeline.

For the moment accept only the values:

OCR_VALUE_IN_MM in case of measures in millimeters.

OCR_VALUE_IN_INCH in case of measures in inches.

OriginMeasureDoc

Specifies the reference point and unit of measure of the document from which measurements start. It can take the following values:

BOTTOM_LEFT_PIXEL = Start from bottom left hand corner. Measures expressed in pixels.

BOTTOM_RIGHT_MM = Start from bottom right hand corner. Measures expressed in millimeters.

BOTTOM_RIGHT_INCH = Start from bottom right hand corner. Measures expressed in inches.

OCR Image Side

This parameter specifies the document side to use to read the codeline

OCR_FRONT_IMAGE: use the front side image **OCR_BACK_IMAGE**: use the back side image

FileFormat

This parameter specifies the file format used when storing the document's images.

The valid values are:

SAVE_JPEG: save the image in a JPEG format file.

SAVE_BMP: save the image in a DIB format file.

FILE_TIF: save the image in a Tagged Image File Format file.

SAVE_TIF_JPEG = Image TIFF saved in JPEG format.

FILE_CCITT: save the image in a TIFF CCITT file.

FILE_CCITT_GROUP3_1DIM: save the image in a CCITT Group3 one dimension file.

FILE_CCITT_GROUP3_2DIM: save the image in a CCITT Group3 two



dimensions file.

FILE_CCITT_GROUP4: save the image in a CCITT Group4 two dimensions file.

Quality

Integer from 2 to 255 that indicates the relationship between quality and compression:

2 = maximum quality.

255 = maximum compression.

SaveMode

SAVE_OVERWRITE = Overwrite the file. Applicable to all supported values of parameter *FileFormat*

SAVE_APPEND = Append the image in a multipage file images. Not applicable to JPEG and DIB file formats

SAVE_REPLACE = Replace a image in a multipage file images. Not applicable to JPEG and DIB file formats

SAVE_INSERT = Insert the image in a multipage file images. Not applicable to JPEG and DIB file formats

WaitTimeout

This parameter sets the behavior of the device when there are no more documents to process.

WAIT_YES = the device waits for approximately 7 seconds for a new document to process, when this internal timer expires and there is not a new document to process the command completes with return code LS_FEEDER_EMPTY.

WAIT_NO = if no document is present, or after the last document in the feeder has been processed, the service will immediately complete with return code LS_FEEDER_EMPTY.

This parameter allow to wait the peripheral timeout after the last document in the leafer.

Beep

Specifies whether the internal beeper should emit an acoustical sound when an error occurs.

Accepted values are:

NO_BEEP: do not activate beeper

BEEP: activate beeper

PageNumber

An integer indicating the position inside a multipage file.

userfunc

Call-back function called from the library when the codeline is available. If this function is not provided (NULL) the application will retrieve the codeline string upon the LSGetDocData function call only. If the userfunc parameter is provided, the application will retrieve the codeline string as a parameter on the userfunc call and when calling the LSGetDocData function, as well. The output pocket is decided by the application by providing a valid sorter number during the callback function call. Refer to the structure described hereafter. This function is available only with the ls515.

Reserved2

Reserved for future use. Must be set to NULL.

Reserved3

Reserved for future use. Must be set to NULL.



Return Value

```
LS_OKAY
LS_SYSTEM_ERROR
LS_USB_ERROR
LS_PERIPHERAL_NOT_FOUND
LS_HARDWARE_ERROR
LS_RESERVED_ERROR
LS_PAPER_JAM
LS_COMMAND_IN_EXECUTION_YET
LS_JPEG_ERROR
```

Comments

Note

If the application is requesting to read MicroHole codeline, the function will force the resolution at 300 dpi. The image returned, however, will be the one requested by the application.

When the SaveImage parameter is set to IMAGE_SAVE_HANDLE or IMAGE_SAVE_BOTH, this function will allocate a memory image buffer for each document. After this function processing completes the application must call the LSGetDocData to retrieve the image handles, display the images and then free the memory buffer.

Description Codeline structure :

```
typedef struct _S_CODELINE_INFO
{
       // Parameter compiled by LsApi.dll
       short
                       Size:
                                                             // Size of the struct
       unsigned long
                      NrDoc;
                                                             // Progessive document
       number
       char
                       CodelineRead[CODE_LINE_LENGTH]; // Codeline returned
                                                             // Length of the codeline
       short
                       NrBytes;
       unsigned long Reserved;
                                                             // Reserved for future use
       // Parameter compiled by Application
       short
                       Sorter:
                                                      // Sorter where put the document
       char
                       FormatString;
                                                      // Set from application NORMAL or
       BOLD
                       StringToPrint[80];
                                                     // String to print rear of the document
} S_CODELINE_INFO, *LPS_CODELINE_INFO;
```



LSAutoDocHandleVB

#include "LSApi.h"

Result API LSAutoDocHandleVB(short hConnect,

HWND hWnd,
short Stamp,
short Validate,
short CodeLine,
short ScanMode,
short Feeder,
short Sorter,

shortNumDocument,shortClearBlack,

char Side,

shortScanDocType,shortSaveImage,char*DirectoryFile,char*BaseFilename,

 $\begin{array}{ll} \textbf{float} & pos_x, \\ \textbf{float} & pos_y, \\ \textbf{float} & sizeW, \\ \textbf{float} & sizeH, \\ \end{array}$

shortOriginMeasureDoc,shortOcrlmageSide,shortFileFormat,intQuality,intSaveMode,intPageNumber,shortWaitTimeout,

short Beep,

int (*userfunc)(S_CODELINE_INFO_VB

*CodelineInfo),

LPVOID Reserved2, LPVOID Reserved3);

Description

Handle documents in a cycle according to the options specified by the various parameters.

This function was expecially developed for Visual Basic programming where callback functions must be defined as Standard Call.

Refer to LsAutoDocHandle for parameters and description.

Parameters

See the LSAutoDocHandle() function.

Return Value

See the LSAutoDocHandle() function.

Comments

When the SaveImage parameter is set to IMAGE_SAVE_HANDLE or IMAGE_SAVE_BOTH, this function will allocate a memory image buffer for each document. After this function processing completes the application must call the



 ${\tt LSGetDocData}\ to\ retrieve\ the\ image\ handles,\ display\ the\ images\ and\ then\ free\ the\ memory\ buffer.$



Description Codeline structure: typedef struct _S_CODELINE_INFO_VB // Parameter compiled from LsApi.dll Size; // Size of the struct short unsigned long NrDoc; // Progessive document number **WCHAR** CodelineRead[CODE_LINE_LENGTH]; // Codeline returned NrBytes; // Length of the codeline short unsigned long Reserved; // Reserved for future use // Parameter compiled from Application short Sorter; // Sorter where put the document short FormatString; // Set from application NORMAL or **BOLD WCHAR** StringToPrint[80]; // String to print rear of the document } S_CODELINE_INFO_VB, *LPS_CODELINE_INFO_VB;



LS800AutoDocHandle

#include "LsApi.h"

Result API LS800AutoDocHandle(short hConnect,

HWND hWnd, char Validate, short CodeLine, char Side,

short ScanModeFront, short ScanModeBack, short ClearBlack. short NumDocument, short Savelmage. char *DirectoryFile, char *BaseFilename. short UnitMeasure,

float pos_x, float pos_y, float sizeW, float sizeH,

short OCR_Image_Side,

shortFileFormat,intQuality,intSaveMode,intPageNumber,

short Beep,

int (*userfunc1)(S_CODELINE_INFO_LS800

*CodelineInfo),

int (*userfunc2)(S_IMAGE_INFO_LS800

*ImageInfo),

int (*userfunc3)(S_IMAGE_INFO_LS800

*ImageInfo),

LPVOID Reserved1, LPVOID Reserved2, LPVOID Reserved3);

Description

This function handles documents in a cycle according to the options specified by the various parameters.

The sorting and the ink-jet of the documents are decided by the application in the post-routine. This can be done or after having read the codeline in the associated call-back function, or after having read the front image in the associated call-back function.

The Post-Routine must be a very short piece of code that must decide the pocket according to the MICR codeline returned by the peripheral or some information retrieved from the image. This information can be for example a OCR line, obtained with the function *LSCodelineReadFromBitmap()*.

Note that all the information of each single document are returned all together in a second time on the *LSGetDocData()* function call.

Only one call-back function address can be provided at the same time.

Please refer to the LSConfigDoubleLeafingEx() function to configure the paper sensibility in the correct way to handle the double leafing functionality.

Parameters



hConnect

Handle returned by LSConnect

hWnd

Handle of the application windows which will receive the notification messages (Reserved for future use).

Validate

NO_PRINT_VALIDATE = do not print validation string.

PRINT_VALIDATE = print validation string (the text of the validation string must be loaded using the *LSLoadString* command before invoking this command). The LS device must be equipped with the optional validation printer.

Codeline

Specify the type of codeline to read.

NO_READ_CODELINE = do not read codeline.

READ_CODELINE_MICR = read magnetic codeline, either CMC7 or E13B.

Software read:

READ_BARCODE_PDF417 = read in optical mode a PDF417 barcode.

READ_BARCODE_2_OF_5 = read in optical mode a 2_OF_ 5 barcode.

READ_BARCODE_CODE39 = read in optical mode a CODE 39 barcode.

READ_BARCODE_CODE128 = read in optical mode a CODE 128 barcode.

READ_CODELINE_SW_OCRA = read codeline from the position specified by X, Y and Size parameters. *The co-ordinate start from bottom right corner of the document.*

READ_CODELINE_SW_OCRB_NUM = read codeline from the position specified by X, Y and Size parameters. *The co-ordinate start from bottom right corner of the document.*

READ_CODELINE_SW_OCRB_ALFANUM = read codeline from the position specified by X, Y and Size parameters. *The co-ordinate start from bottom right corner of the document.*

READ_CODELINE_SW_OCRB_ITALY = read codeline from the position specified by X, Y and Size parameters. This font is a subset of the alfa-numeric font without the character '&' and same separator. The co-ordinate start from bottom right corner of the document.

READ_CODELINE_SW_E13B = read codeline from the position specified by X, Y and Size parameters. *The co-ordinate start from bottom right corner of the document.*

READ_CODELINE_SW_CMC7 = read codeline from the position specified by X, Y and Size parameters. *The co-ordinate start from bottom right corner of the document.*

READ_CODELINE_SW_E13B_X_OCRB = read codeline from the position specified by X, Y and Size parameters. *The co-ordinate start from bottom right corner of the document.*

Side

It specifies which side(s) of the document to scan

SIDE_FRONT_IMAGE = Scan Front side

SIDE_BACK_IMAGE = Scan Rear side

SIDE_ALL_IMAGE = Scan Both sides

SIDE_NONE_IMAGE = Do not scan document

ScanModeFront

This parameter set the resolution for the image to read. Accepted values are :

SCAN_MODE_BW = black and white at 200 dpi

SCAN_MODE_16GR100 = 16 shades of grey, at 100 dpi



```
SCAN_MODE_16GR200 = 16 shades of grey, at 200 dpi

SCAN_MODE_256GR100 = 256 shades of grey, at 100 dpi

SCAN_MODE_256GR200 = 256 shades of grey, at 200 dpi

SCAN_MODE_COLOR_100 = colour at 100 dpi

SCAN_MODE_COLOR_200 = colour at 200 dpi
```

ScanModeBack

This parameter set the resolution for the image to read Accepted values are :

```
SCAN_MODE_BW = black and white at 200 dpi

SCAN_MODE_16GR100 = 16 shades of grey, at 100 dpi

SCAN_MODE_16GR200 = 16 shades of grey, at 200 dpi

SCAN_MODE_256GR100 = 256 shades of grey, at 100 dpi

SCAN_MODE_256GR200 = 256 shades of grey, at 200 dpi

SCAN_MODE_COLOR_100 = Color 24 bit 100 dpi

SCAN_MODE_COLOR_200 = Color 24 bit 200 dpi
```

ClearBlack

This sets the option for either cleaning or keeping the black area that may be present around the scanned image

NO_CLEAR_BLACK = no image cleaning, the black area is not removed.

CLEAR_ALL_BLACK = clean the document's image removing all the black around the image according to the level of filter specified by LSSetThresholdClearBlack command.

CLEAR_AND_ALIGN_IMAGE = removing all the black around the image and align the document's image.

NumDocument

This parameter set the maximum number of documents to read.

0 = read all documents present in the feeder at intervals of 6 seconds one from the other.

Savelmage

Specifies where to store the scanned image(s)

```
IMAGE_SAVE_HANDLE = save the image in memory.

IMAGE_SAVE_ON_FILE = save the image on file.

IMAGE_SAVE_BOTH = save the image in memory and on file.

IMAGE_SAVE_NONE = do not save on memory nor on file.
```

DirectoryFile

Path of the Directory where to save the image(s), without file name.

BaseFilename

Root of the file name given to all stored images. For example, if this parameter is set to be equal to **AA** and the chosen File Format is JPEG, the first file created will be named **AA**0FF.jpg, with the FF postfix for front images and the BB postfix for rear images.

UnitMeasure

Specify whether the *Start_X*, *Start_Y* and *SizeW* measures are expressed in millimeters or in inches.

The possible values are either **UNIT_MM** or **UNIT_INCH**.

Start X

Specify the x co-ordinate from right hand margin of the document. The value must be consistent with the *UnitMeasure*.

Start Y

Specify the y co-ordinate from bottom margin of the document. The value must be consistent with the *UnitMeasure*.



SizeW

Specify the width of the window on the image bitmap that will be processed by the decoding software. The value must be consistent with the *UnitMeasure*.

SizeH

Specify the height of the window on the image bitmap that will be processed by the decoding software.

Valid values are:

OCR_VALUE_IN_MM for measures expressed in millimeters.
OCR_VALUE_IN_INCH for measures expressed in inches.

OCR_Image_Side

This parameter specifies the document side to use to read the codeline

OCR_FRONT_IMAGE: use the front side image **OCR_BACK_IMAGE**: use the back side image

FileFormat

This parameter specifies the file format used when storing the document's images.

The valid values are:

SAVE_JPEG: save the image in a JPEG format file. **SAVE_BMP**: save the image in a DIB format file.

FILE_TIF: save the image in a Tagged Image File Format file.

SAVE_TIF_JPEG = Image TIFF saved in JPEG format. **FILE_CCITT** : save the image in a TIFF CCITT file.

FILE_CCITT_GROUP3_1DIM: save the image in a CCITT Group3 one dimension file.

FILE_CCITT_GROUP3_2DIM: save the image in a CCITT Group3 two dimensions file.

FILE_CCITT_GROUP4: save the image in a CCITT Group4 two dimensions file

Quality

Integer from 2 to 255 that indicates the relationship between quality and compression:

2 = maximum quality.

255 = maximum compression.

SaveMode

SAVE_OVERWRITE = Overwrite the file. Applicable to all supported values of parameter *FileFormat*.

SAVE_APPEND = Append the image in a multi-page file images. Not applicable to JPEG and DIB file formats.

SAVE_REPLACE = Replace a image in a multi-page file images. Not applicable to JPEG and DIB file formats.

SAVE_INSERT = Insert the image in a multi-page file images. Not applicable to JPEG and DIB file formats.

PageNumber

An integer indicating the position inside a multi-page file.

Beep

Specifies whether the internal beeper should emit an acoustical sound when an error occurs.

Accepted values are:

BEEP_NO: do not activate beeper. **BEEP_YES**: activate beeper.



userfunc1

Call-back function called from the library then the codeline is available.

userfunc2

Call-back function called from the library then the front image is available.

userfunc3

Call-back function called from the library then the back image is available (not available at this moment).

Reserved1

Reserved for future use. Must be set to NULL.

Reserved2

Reserved for future use. Must be set to NULL.

Reserved3

Reserved for future use. Must be set to NULL.

Return Value

```
LS800_OKAY
LS800_SYSTEM_ERROR
LS800_USB_ERROR
LS800_PERIPHERAL_NOT_FOUND
LS800_HARDWARE_ERROR
LS800_PAPER_JAM
LS800_INVALID_COMMAND
LS800_COMMAND_IN_EXECUTION_YET
```

Comments

When the SaveImage parameter is set to IMAGE_SAVE_HANDLE or IMAGE_SAVE_BOTH, this function will allocate a memory image buffer for each document. After this function processing completes the application must call the LS800_GetDocData to retrieve the image handles, process the images and then free the memory buffer.

The images buffers must be released by the application with the function *LS800_FreeImage()*.

Description of the structures returned as parameter in the call-back functions.

Description Codeline structure :

```
typedef struct _S_CODELINE_INFO_LS800
   // Parameter filled by LsApi
   short
                   Size;
                                                             // Size of the struct
   unsigned long NrDoc;
                                                             // Progessive
document number
   char
                   CodelineRead[CODE_LINE_LENGTH];
                                                             // Codeline returned
   short
                   NrBytes;
                                                             // Length of the
codeline
   unsigned long Reserved;
                                                             // Reserved for
future use
```

// Parameter compiled from Application



short char NORMAL 15 or	Sorter; FormatString1;	// Sorter where put the document // Set from application NORMAL,
char document	StringToPrint1[80];	// BOLD // String line 1 to print rear of the
char NORMAL 15 or	FormatString2;	// Set from application NORMAL,
char	StringToPrint2[80];	// BOLD // String line 2 to print rear of the
document char	FormatString3;	// Set from application NORMAL,
NORMAL 15 or	-	// BOLD
char document	StringToPrint3[80];	// String line 3 to print rear of the
char NORMAL 15 or	FormatString4;	// Set from application NORMAL,
char document	StringToPrint4[80];	// BOLD // String line 4 to print rear of the

[}] S_CODELINE_INFO_LS800, *LPS_CODELINE_INFO_LS800;



```
Description Image structure:
typedef struct _S_IMAGE_INFO_LS800
   // Parameter filled by LsApi
                                                               // Size of the struct
   short
                    Size;
   unsigned long
                   NrDoc;
                                                               // Progressive
document number
   HANDLE
                                                               // Image handle
                    hlmage;
                                                               // Image size bytes
   int
                    ImageSize;
                                                               // Image width
   int
                    Width;
   int
                    Height;
                                                               // Image height
   int
                    Resolution;
                                                               // Image resolution
   int
                    BitCount;
                                                               // Image bit count
(level of grey)
                    CodelineRead[CODE_LINE_LENGTH];
                                                               // Codeline OCR or
    char
MICR returned
                    NrBytes;
                                                               // Length of the
   short
codeline
                                                               // Reserved for
    unsigned long
                   Reserved;
future use
   // Parameter compiled from Application
   short
                    Sorter:
                                               // Sorter where put the document
   char
                    FormatString1;
                                               // Set from application NORMAL,
NORMAL 15 or
                                               // BOLD
                    StringToPrint1[80];
                                               // String line 1 to print rear of the
   char
document
                    FormatString2;
                                               // Set from application NORMAL,
   char
NORMAL 15 or
                                               // BOLD
   char
                    StringToPrint2[80];
                                               // String line 2 to print rear of the
document
                                               // Set from application NORMAL,
   char
                    FormatString3;
NORMAL 15 or
                                               // BOLD
                    StringToPrint3[80];
    char
                                               // String line 3 to print rear of the
document
                    FormatString4;
                                               // Set from application NORMAL,
    char
NORMAL 15 or
    char
                    StringToPrint4[80];
                                               // String line 4 to print rear of the
document
} S_IMAGE_INFO_LS800, *LPS_IMAGE_INFO_LS800;
```



LS800AutoDocHandleVB

#include "LSApi.h"

Result API LS800AutoDocHandleVB(short hConnect,

HWND hWnd, char Validate, short CodeLine, char Side,

ScanModeFront, short ScanModeBack, short ClearBlack, short NumDocument, short short Savelmage. char *DirectoryFile, *BaseFilename. char UnitMeasure. short

 $\begin{array}{lll} \textbf{float} & \textit{pos_x,} \\ \textbf{float} & \textit{pos_y,} \\ \textbf{float} & \textit{sizeW,} \\ \textbf{float} & \textit{sizeH,} \\ \end{array}$

shortOCR_Image_Side,shortFileFormat,intQuality,intSaveMode,intPageNumber,

short Beep,

int (*userfunc1)(S_CODELINE_INFO_VB_LS800
*CodelineInfo),

int (*userfunc2)(S_IMAGE_INFO_VB_LS800

*ImageInfo), int (*userfunc3)(S_IMAGE_INFO_VB_LS800

*ImageInfo),

LPVOID Reserved1, LPVOID Reserved2, LPVOID Reserved3);

Description

This function is similar to the *LS800_AutoDocHandle()* function but is expecially developed for Visual Basic programming Language.

The main differences are the structures given as parameter on the callback functions. In these structures some fields are defined as type UNICODE instead of ASCII.

Parameters

See the LS800_AutoDocHandle() function.

Return Value

See the LS800_AutoDocHandle() function.

Comments

Description of the structures provided as parameter in the call-back functions.



```
Description Codeline structure:
typedef struct _S_CODELINE_INFO_VB_LS800
   // Parameter filled by LsApi
                   Size;
                                                              // Size of the struct
   short
                   NrDoc;
                                                              // Progressive
   unsigned long
document number
   WCHAR
                   CodelineRead[CODE_LINE_LENGTH];
                                                              // Codeline returned
                                                              // Length of the
    short
                   NrBytes;
codeline
    unsigned long Reserved;
                                                              // Reserved for
future use
   // Parameter compiled from Application
                   Sorter;
                                              // Sorter where put the document
   short
                                              // Set from application NORMAL,
   short
                   FormatString1;
NORMAL 15 or
                                              // BOLD
   WCHAR
                   StringToPrint1[80];
                                              // String line 1 to print rear of the
document
    short
                   FormatString2;
                                              // Set from application NORMAL,
NORMAL 15 or
                                              // BOLD
   WCHAR
                   StringToPrint2[80];
                                              // String line 2 to print rear of the
document
                   FormatString3;
                                              // Set from application NORMAL,
   short
NORMAL 15 or
                                              // BOLD
   WCHAR
                   StringToPrint3[80];
                                              // String line 3 to print rear of the
document
    short
                   FormatString4;
                                              // Set from application NORMAL,
NORMAL 15 or
                                              // BOLD
    WCHAR
                   StringToPrint4[80];
                                              // String line 4 to print rear of the
document
} S_CODELINE_INFO_VB_LS800, *LPS_CODELINE_INFO_VB_LS800;
Description Image structure:
typedef struct _S_IMAGE_INFO_VB_LS800
   // Parameter filled by LsApi
                   Size:
                                                              // Size of the struct
   short
    unsigned long
                   NrDoc;
                                                              // Progressive
document number
   HANDLE
                   hlmage;
                                                              // Image handle
   int
                   ImageSize;
                                                              // Image size bytes
   int
                   Width;
                                                              // Image width
   int
                   Height;
                                                              // Image height
   int
                   Resolution;
                                                              // Image resolution
   int
                   BitCount;
                                                              // Image bit count
(level of grey)
   WCHAR
                   CodelineRead[CODE LINE LENGTH];
                                                              // Codeline OCR or
MICR returned
   short
                   NrBytes;
                                                              // Length of the
codeline
```



NrDoc As Long

```
// Reserved for
    unsigned long Reserved;
future use
   // Parameter compiled from Application
                    Sorter:
    short
                                               // Sorter where put the document
    short
                    FormatString1;
                                               // Set from application NORMAL,
NORMAL 15 or
                                               // BOLD
    WCHAR
                    StringToPrint1[80];
                                               // String line 1 to print rear of the
document
    short
                    FormatString2;
                                               // Set from application NORMAL,
NORMAL 15 or
    WCHAR
                    StringToPrint2[80];
                                               // String line 2 to print rear of the
document
                                               // Set from application NORMAL,
    short
                    FormatString3;
NORMAL 15 or
                                               // BOLD
   WCHAR
                    StringToPrint3[80];
                                               // String line 3 to print rear of the
document
                    FormatString4;
                                               // Set from application NORMAL,
    short
NORMAL 15 or
    WCHAR
                    StringToPrint4[80];
                                               // String line 4 to print rear of the
document
} S_IMAGE_INFO_VB_LS800, *LPS_IMAGE_INFO_VB_LS800;
Visual basic structure definition example :
Public Type TCODELINE_INFO
  '// Parameter filled by LsApi
  Size As Integer
                                    '// Size of the struct
  NrDoc As Long
                                    '// Progessive document number
  CodelineRead As String * CODE_LINE_LENGTH
                                                      '// Codeline returned
  NrBytes As Integer
                                    '// Length of the codeline
  Reserved As Long
                                    '// Reserved for future use
  '// Parameter filled by Application
  Sorter As Integer
                                    '// Sorter where put the document
  FormatString1 As Byte
                                    '// Set from application NORMAL, NORMAL 15
or BOLD
  StringToPrint1 As String * 80
                                    '// String line 1 to print rear of the document
  FormatString2 As Byte
                                    '// Set from application NORMAL, NORMAL 15
or BOLD
  StringToPrint2 As String * 80
                                    '// String line 2 to print rear of the document
  FormatString3 As Byte
                                    '// Set from application NORMAL, NORMAL 15
or BOLD
  StringToPrint3 As String * 80
                                    '// String line 3 to print rear of the document
  FormatString4 As Byte
                                    '// Set from application NORMAL, NORMAL 15
or BOLD
  StringToPrint4 As String * 80
                                    '// String line 4 to print rear of the document
End Type
Public Type TIMAGE INFO
  '// Parameter filled by LsApi
  Size As Integer
                                    '// Size of the struct
```

'// Progessive document number



'// Image handle hlmage As Long ImageSize As Long '// Image size bytes Width As Long '// Image width Height As Long '// Image height Resolution As Long '// Image resolution BitCount As Long '// Image bit count (level of grey) CodelineRead As String * CODE_LINE_LENGTH '// Codeline OCR or MICR returned NrBytes As Integer '// Length of the codeline Reserved As Long '// Reserved for future use '// Parameter filled by Application Sorter As Integer '// Sorter where put the document FormatString1 As Integer '// Set from application NORMAL, NORMAL 15 or BOLD StringToPrint1 As String * 80 '// String line 1 to print rear of the document FormatString2 As Integer '// Set from application NORMAL, NORMAL 15 or BOLD StringToPrint2 As String * 80 '// String line 2 to print rear of the document '// Set from application NORMAL, NORMAL 15 FormatString3 As Integer or BOLD StringToPrint3 As String * 80 '// String line 3 to print rear of the document FormatString4 As Integer '// Set from application NORMAL, NORMAL 15 or BOLD StringToPrint4 As String * 80 '// String line 4 to print rear of the document **End Type**



LS800AutoDocHandleWithAllCallback

#include "LsApi.h"

Result API LS800AutoDocHandleWithAllCallback (short hConnect,

HWND hWnd, char Validate, short CodeLine, char Side,

short ScanModeFront, short ScanModeBack. ClearBlack. short short NumDocument, short Savelmage, char *DirectoryFile, *BaseFilename. char short UnitMeasure.

float pos_x, float pos_y, float sizeW, float sizeH,

short OCR_Image_Side,

shortFileFormat,intQuality,intSaveMode,intPageNumber,

short Beep,

short SortOnChoice.

int (*userfunc1)(S_CODELINE_INFO_LS800

*CodelineInfo),

int (*userfunc2)(S_IMAGE_INFO_LS800
*ImageInfo),

int (*userfunc3)(S_IMAGE_INFO_LS800

*ImageInfo),

LPVOID Reserved1, LPVOID Reserved2, LPVOID Reserved3):

Description

This function handles documents in a cycle according to the options specified by the various parameters.

The sorting and the ink-jet of the documents are decided by the application in the post-routine. This can be done or after having read the codeline in the associated call-back function, or after having read the front image in the associated call-back function.

The Post-Routine must be a very short piece of code that must decide the pocket according to the MICR codeline returned by the peripheral or some information retrieved from the image. This information can be for example a OCR line, obtained with the function *LSCodelineReadFromBitmap()*.

Note that all the information of each single document are returned all together in a second time on the *LSGetDocData()* function call.

Only one call-back function address can be provided at the same time.

Parameters

hConnect

Handle returned by LSConnect



hWnd

Handle of the application windows which will receive the notification messages (Reserved for future use).

Validate

NO_PRINT_VALIDATE = do not print validation string
PRINT_VALIDATE = print validation string (the text of the validation string
must be loaded using the *LSLoadString* command before
invoking this command). The LS device must be equipped
with the optional validation printer.

Codeline

Specify the type of codeline to read.

NO READ CODELINE = do not read codeline.

READ_CODELINE_MICR = read magnetic codeline, either CMC7 or E13B.

Software read:

READ BARCODE PDF417 = read in optical mode a PDF417 barcode.

READ_BARCODE_2_OF_5 = read in optical mode a 2_OF_ 5 barcode.

READ_BARCODE_CODE39 = read in optical mode a CODE 39 barcode.

READ_BARCODE_CODE128 = read in optical mode a CODE 128 barcode.

READ_CODELINE_SW_OCRA = read codeline from the position specified by X, Y and Size parameters. *The co-ordinate start from bottom right corner of the document.*

READ_CODELINE_SW_OCRB_NUM = read codeline from the position specified by X, Y and Size parameters. *The co-ordinate start from bottom right corner of the document.*

READ_CODELINE_SW_OCRB_ALFANUM = read codeline from the position specified by X, Y and Size parameters. *The co-ordinate start from bottom right corner of the document.*

READ_CODELINE_SW_OCRB_ITALY = read codeline from the position specified by X, Y and Size parameters. This font is a subset of the alfa-numeric font without the character '&' and same separator. The co-ordinate start from bottom right corner of the document.

READ_CODELINE_SW_E13B = read codeline from the position specified by X, Y and Size parameters. *The co-ordinate start from bottom right corner of the document.*

READ_CODELINE_SW_E13B_X_OCRB = read codeline from the position specified by X, Y and Size parameters. *The co-ordinate start from bottom right corner of the document.*

Side

It specifies which side(s) of the document to scan

SIDE_FRONT_IMAGE = Scan Front side

SIDE_BACK_IMAGE = Scan Rear side

SIDE_ALL_IMAGE = Scan Both sides

SIDE_NONE_IMAGE = Do not scan document

ScanModeFront

This parameter set the resolution for the image to read. Accepted values are :

SCAN_MODE_BW = black and white at 200 dpi

SCAN_MODE_16GR100 = 16 shades of grey, at 100 dpi

SCAN_MODE_16GR200 = 16 shades of grey, at 200 dpi

SCAN_MODE_256GR100 = 256 shades of grey, at 100 dpi

SCAN MODE 256GR200 = 256 shades of grey, at 200 dpi

SCAN_MODE_COLOR_100 = colour at 100 dpi

SCAN_MODE_COLOR_200 = colour at 200 dpi



ScanModeBack

This parameter set the resolution for the image to read Accepted values are :

SCAN_MODE_BW = black and white at 200 dpi

SCAN_MODE_16GR100 = 16 shades of grey, at 100 dpi

SCAN_MODE_16GR200 = 16 shades of grey, at 200 dpi

SCAN_MODE_256GR100 = 256 shades of grey, at 100 dpi

SCAN_MODE_256GR200 = 256 shades of grey, at 200 dpi

SCAN_MODE_COLOR_100 = Color 24 bit 100 dpi

SCAN_MODE_COLOR_200 = Color 24 bit 200 dpi

ClearBlack

This sets the option for either cleaning or keeping the black area that may be present around the scanned image

NO_CLEAR_BLACK = no image cleaning, the black area is not removed.

CLEAR_ALL_BLACK = clean the document's image removing all the black around the image according to the level of filter specified by LSSetThresholdClearBlack command.

CLEAR_AND_ALIGN_IMAGE = removing all the black around the image and align the document's image.

NumDocument

This parameter set the maximum number of documents to read.

0 = read all documents present in the feeder at intervals of 6 seconds one from the other.

Savelmage

Specifies where to store the scanned image(s)

IMAGE_SAVE_HANDLE = save the image in memory.

IMAGE_SAVE_ON_FILE = save the image on file.

IMAGE_SAVE_BOTH = save the image in memory and on file.

IMAGE_SAVE_NONE = do not save on memory nor on file.

DirectoryFile

Path of the Directory where to save the image(s), without file name.

BaseFilename

Root of the file name given to all stored images. For example, if this parameter is set to be equal to **AA** and the chosen File Format is JPEG, the first file created will be named **AA**0FF.jpg, with the FF postfix for front images and the BB postfix for rear images.

UnitMeasure

Specify whether the *Start_X*, *Start_Y* and *SizeW* measures are expressed in millimeters or in inches.

The possible values are either **UNIT_MM** or **UNIT_INCH**.

Start X

Specify the x co-ordinate from right hand margin of the document. The value must be consistent with the *UnitMeasure*.

Start Y

Specify the y co-ordinate from bottom margin of the document. The value must be consistent with the *UnitMeasure*.

SizeW

Specify the width of the window on the image bitmap that will be processed by the decoding software. The value must be consistent with the *UnitMeasure*.



SizeH

Specify the height of the window on the image bitmap that will be processed by the decoding software.

Valid values are:

OCR_VALUE_IN_MM for measures expressed in millimeters. OCR_VALUE_IN_INCH for measures expressed in inches.

OCR_Image_Side

This parameter specifies the document side to use to read the codeline

OCR_FRONT_IMAGE: use the front side image **OCR_BACK_IMAGE**: use the back side image

FileFormat

This parameter specifies the file format used when storing the document's images.

The valid values are:

SAVE_JPEG: save the image in a JPEG format file. **SAVE_BMP**: save the image in a DIB format file.

FILE_TIF: save the image in a Tagged Image File Format file.

FILE CCITT: save the image in a TIFF CCITT file.

FILE_CCITT_GROUP3_1DIM: save the image in a CCITT Group3 one dimension file.

FILE_CCITT_GROUP3_2DIM: save the image in a CCITT Group3 two dimensions file.

FILE_CCITT_GROUP4: save the image in a CCITT Group4 two dimensions file

Quality

Integer from 2 to 255 that indicates the relationship between quality and compression:

2 = maximum quality.

255 = maximum compression.

SaveMode

SAVE_OVERWRITE = Overwrite the file. Applicable to all supported values of parameter *FileFormat*.

SAVE_APPEND = Append the image in a multi-page file images. Not applicable to JPEG and DIB file formats.

SAVE_REPLACE = Replace a image in a multi-page file images. Not applicable to JPEG and DIB file formats.

SAVE_INSERT = Insert the image in a multi-page file images. Not applicable to JPEG and DIB file formats.

PageNumber

An integer indicating the position inside a multi-page file.

Beep

Specifies whether the internal beeper should emit an acoustical sound when an error occurs.

Accepted values are:

BEEP_NO: do not activate beeper. **BEEP_YES**: activate beeper.

SortOnChoice

Specifies which is call-back function valid to select the pocket.

Accepted values are:

SORT_ON_MICR: Sort selection on MICR call-back function.

SORT_ON_FRONT_IMAGE: Sort selection on Front image call-back



function.

userfunc1

Call-back function called from the library then the codeline is available.

userfunc2

Call-back function called from the library then the front image is available.

userfunc3

Call-back function called from the library then the back image is available.

Reserved1

Reserved for future use. Must be set to NULL.

Reserved2

Reserved for future use. Must be set to NULL.

Reserved3

Reserved for future use. Must be set to NULL.

Return Value

```
LS800_OKAY
LS800_SYSTEM_ERROR
LS800_USB_ERROR
LS800_PERIPHERAL_NOT_FOUND
LS800_HARDWARE_ERROR
LS800_PAPER_JAM
LS800_INVALID_COMMAND
LS800_COMMAND_IN_EXECUTION_YET
```

Comments

When the SaveImage parameter is set to IMAGE_SAVE_HANDLE or IMAGE_SAVE_BOTH, this function will allocate a memory image buffer for each document. After this function processing completes the application must call the LS800_GetDocData to retrieve the image handles, process the images and then free the memory buffer.

The images buffers must be released by the application with the function *LS800_FreeImage()*.

Description of the structures returned as parameter in the call-back functions.

Description Codeline structure:

```
typedef struct _S_CODELINE_INFO_LS800
   // Parameter filled by LsApi
   short
                   Size;
                                                             // Size of the struct
   unsigned long NrDoc;
                                                             // Progessive
document number
   char
                   CodelineRead[CODE_LINE_LENGTH];
                                                             // Codeline returned
   short
                   NrBytes;
                                                             // Length of the
codeline
   unsigned long Reserved;
                                                             // Reserved for
future use
```

// Parameter compiled from Application



```
// Sorter where put the document
    short
                    Sorter:
    char
                    FormatString1;
                                               // Set from application NORMAL,
NORMAL 15 or
                                               // BOLD
    char
                    StringToPrint1[80];
                                               // String line 1 to print rear of the
document
                                               // Set from application NORMAL,
   char
                    FormatString2;
NORMAL 15 or
                                               // BOLD
                                               // String line 2 to print rear of the
    char
                    StringToPrint2[80];
document
    char
                    FormatString3;
                                               // Set from application NORMAL,
NORMAL 15 or
                                               // BOLD
   char
                    StringToPrint3[80];
                                               // String line 3 to print rear of the
document
                    FormatString4;
                                               // Set from application NORMAL,
   char
NORMAL 15 or
                                               // BOLD
    char
                    StringToPrint4[80];
                                               // String line 4 to print rear of the
document
} S_CODELINE_INFO_LS800, *LPS_CODELINE_INFO_LS800;
Description Image structure:
typedef struct _S_IMAGE_INFO_LS800
   // Parameter filled by LsApi
    short
                    Size;
                                                               // Size of the struct
    unsigned long
                   NrDoc;
                                                               // Progressive
document number
   HANDLE
                                                               // Image handle
                    hlmage;
                    ImageSize;
   int
                                                               // Image size bytes
   int
                    Width;
                                                               // Image width
                                                               // Image height
   int
                    Height;
                                                               // Image resolution
   int
                    Resolution;
   int
                    BitCount;
                                                               // Image bit count
(level of grey)
                    CodelineRead[CODE_LINE_LENGTH];
                                                               // Codeline OCR or
    char
MICR returned
    short
                    NrBytes;
                                                               // Length of the
codeline
    unsigned long Reserved;
                                                               // Reserved for
future use
   // Parameter compiled from Application
                                               // Sorter where put the document
   short
                    Sorter;
    char
                    FormatString1;
                                               // Set from application NORMAL,
NORMAL 15 or
    char
                    StringToPrint1[80];
                                               // String line 1 to print rear of the
document
    char
                    FormatString2;
                                               // Set from application NORMAL,
NORMAL 15 or
                                               // BOLD
                    StringToPrint2[80];
                                               // String line 2 to print rear of the
   char
document
```



FormatString3; // Set from application NORMAL, char NORMAL 15 or StringToPrint3[80]; // String line 3 to print rear of the char document FormatString4; // Set from application NORMAL, char NORMAL 15 or // BOLD StringToPrint4[80]; // String line 4 to print rear of the char document

} S_IMAGE_INFO_LS800, *LPS_IMAGE_INFO_LS800;



LSGetDocData

#include "LSApi.h"

Result API LSGetDocData (

 $\begin{array}{ll} \textbf{short} & \textit{hConnect,} \\ \textbf{HWND} & \textit{hWnd,} \\ \textbf{unsigned long} & *\textit{NrDoc,} \\ \end{array}$

LPSTR FilenameFront. **LPSTR** FilenameBack. **LPSTR** Reserved1. **LPSTR** Reserved2, *FrontImage, **LPHANDLE** *Rearlmage, **LPHANDLE** *FrontImage2, **LPHANDLE** LPHANDLE *Rearlmage2. **LPSTR** CodelineSW. CodelineHW. LPSTR LPSTR Barcode.

LPVOID CodelinesOptical,
SHORT *DocToRead,
LONG *NrPrinted,
LPVOID Reserved5,
LPVOID Reserved6);

Description

This function should be used to retrieve the information about the documents processed by LSAutoDocHandle. If no document has been processed the function returns a LS_FEEDER_EMPTY completion code.

If the LsAutoDocHandle is called with NumDocument parameter set to 0, the application must call the LSGetDocData function in a loop until LS_FEEDER_EMPTY completion code or an error code is returned.

When the function return a warning of destination sorter full, the application must continue call the function until return LS NO OTHER DOCUMENT.

Note that if a double leafing occurs, this error code is returned by the LSGetDocData function itself, it is very important that the application handles this situation in the correct way.

Parameters

hConnect

Handle returned by LSConnect

hWnd

Handle of the application windows which will receive the notification messages (Reserved for future use).

NrDoc

Progressive sequence number identifying the document whose data is retrieved by this function.

FilenameFront

Full pathname of the file where the front image is stored. (max 128)

FilenameBack

Full pathname of the file where the back image is stored. (max 128)

Reserved1



Reserved for future use. Must be set to NULL.

Reserved2

Reserved for future use. Must be set to NULL.

*FrontImage

Pointer to a handle where will be returned the handle of memory buffer containing the front side image of the requested document, in DIB format.

*Rearlmage

Pointer to a handle where will be returned the handle of memory buffer containing the rear side image of the requested document, in DIB format.

*FrontImage2

Pointer to a handle where will be returned the handle of memory buffer containing the **Ultra Violet** front side image of the requested document, in DIB format.

*Rearlmage2

Reserved for future use. Must be set to NULL.

CodelineSW

This field will return the codeline data read using the software interpretation algorithm

CodelineHW

This field will return the codeline data read using the MICR reader . This buffer will be filled also in case Magnetic and Optical is requested.

Barcode

This field will return the barcode codeline data, either PDF417 or 2_OF_5, read using the barcode reader.

CodelinesOptical

This field will return the OCR codeline data read using the OCR reader.

*DocToRead

Not used.

*NrPrinted

Variable where it will be returned the progressive count number physically endorsed on the documents. A previous *LSLoadStringWithCounterEx()* call has to be done.

*Reserved5

Reserved for future use. Must be set to NULL. **LS40 and LS100** with **Ink Detector** option enabled

In case of sensor presence on the unit in this parameter is return

In case of sensor presence on the unit, in this parameter is returned whenewer ink is detected or not. TRUE means ink detected.

*Reserved6

Reserved for future use. Must be set to NULL.

Return Value

LS_OKAY LS_SYSTEM_ERROR LS_USB_ERROR LS_PERIPHERAL_NOT_FOUND



LS_HARDWARE_ERROR

LS_PAPER_JAM

LS_INVALID_COMMAND

LS_FEEDER_EMPTY

LS_DOUBLE_LEAFING_WARNING

LS_DOUBLE_LEAFING_ERROR

LS_LOOP_INTERRUPTED

LS_REPLACE_CARTRIDGE

Comments

The image handle retrieved by this function must be released by the application. In case more than one Optic Codeline is returned they are separated by a space character.



LSGetDocDataMH

#include "LSApi.h"

Result API LSGetDocDataMH (short hConnect,

HWND hWnd, unsigned long *NrDoc,

LPSTR FilenameFront. **LPSTR** FilenameBack. **LPSTR** Reserved1. **LPSTR** Reserved2, *FrontImage, **LPHANDLE LPHANDLE** *Rearlmage, *FrontImage2, **LPHANDLE LPHANDLE** *Rearlmage2. **LPSTR** CodelineSW. CodelineHW. LPSTR LPSTR Barcode.

LPVOID CodelinesOptical,
SHORT *DocToRead,
LONG *NrPrinted,
BOOL VerifyHole,
short UnitMeasure,
short nrRegions,
MICROHOLE STRUCT stMicroHole);

Description

This function is same to *LSGetDocData()* function, but return also the Micro codelines if the parameter Codeline of the function LSAutoDocHandle() is set to

READ_CODELINE_MICR_AND_MICRO_HOLES or READ_CODELINE_CMC7_MOCR_AND_MICRO_HOLES.

Parameters

hConnect

Handle returned by LSConnect

hWnd

Handle of the application windows which will receive the notification messages (Reserved for future use).

NrDoc

Progressive sequence number identifying the document whose data is retrieved by this function.

FilenameFront

Full pathname of the file where the front image is stored. (max 128)

FilenameBack

Full pathname of the file where the back image is stored. (max 128)

Reserved1

Reserved for future use. Must be set to NULL.

Reserved2

Reserved for future use. Must be set to NULL.



*FrontImage

Pointer to a handle where will be returned the handle of memory buffer containing the front side image of the requested document, in DIB format.

*RearImage

Pointer to a handle where will be returned the handle of memory buffer containing the rear side image of the requested document, in DIB format.

*FrontImage2

Pointer to a handle where will be returned the handle of memory buffer containing the **Ultra Violet** front side image of the requested document, in DIB format.

*Rearlmage2

Reserved for future use. Must be set to NULL.

CodelineSW

This field will return the codeline data read using the software interpretation algorithm

CodelineHW

This field will return the codeline data read using the MICR reader . This buffer will be filled also in case Magnetic and Optical is requested.

Barcode

This field will return the barcode codeline data, either PDF417 or 2_OF_5, read using the barcode reader.

CodelinesOptical

This field will return the OCR codeline data read using the OCR reader.

*DocToRead

Not used.

*NrPrinted

Variable where it will be returned the progressive count number physically endorsed on the documents. A previous *LSLoadStringWithCounterEx()* call has to be done.

VerifyHole

Specify to verify if the hole of the codeline are micro perforated.

UnitMeasure

Specify whether the *Start_X*, *Start_Y*, *SizeW* and *SizeH* measures are expressed in millimeters or in inches.

The possible values are either **UNIT_MM** or **UNIT_INCH**.

nrRegions

Number of codeline to decode.

stMicroHole

Array of struct of parameter of each region, described in **Comments** section of the function *LSReadMicroHolesCodelines()*.

Return Value

LS_OKAY LS_SYSTEM_ERROR



LS USB ERROR

LS_PERIPHERAL_NOT_FOUND

LS_HARDWARE_ERROR

LS_PAPER_JAM

LS_INVALID_COMMAND

LS_FEEDER_EMPTY

LS_DOUBLE_LEAFING_WARNING

LS_DOUBLE_LEAFING_ERROR

LS_LOOP_INTERRUPTED

LS_REPLACE_CARTRIDGE

Comments

The image handle retrieved by this function must be released by the application. In case more than one Optic Codeline is returned they are separated by a space character.



LSGetDocDataEx

#include "LSApi.h"

Result API LSGetDocDataEx(short hConnect,

HWND hWnd,

int CompressionPlace,

unsigned long *NrDoc,

DpilmagesJPEG, short *FrontImageJPEG, **HANDLE** *SizeFrontImageJPEG, int **HANDLE** *RearlmageJPEG, *SizeRearImageJPEG, int short DpilmagesTIFF. **HANDLE** *FrontImageTIFF, *SizeFrontImageTIFF, int *RearlmageTIFF, **HANDLE** int *SizeRearImageTIFF, DpilmagesBMP, short **HANDLE** *FrontImageBMP, *RearlmageBMP, HANDLE CodelineSW, LPSTR CodelineHW, LPSTR **LPSTR** Barcode, **LONG** *NrPrinted. TypeImageUV, int **HANDLE** *FrontImageUV, int *SizeFrontImageUV):

Description

This function should be used to retrieve the information about the documents processed by LSAutoDocHandle. If no document has been processed the function returns a LS_FEEDER_EMPTY completion code.

If the LsAutoDocHandle is called with NumDocument parameter set to 0, the application must call the LSGetDocData function in a loop until LS_FEEDER_EMPTY completion code or an error code is returned.

When the function returns a warning of destination sorter full, the application must continue call the function until return LS_NO_OTHER_DOCUMENT.

Note that if a double leafing occurs, this error code is returned by the LSGetDocData function itself, it is very important that the application handles this situation in the correct way.

Parameters

hConnect

Handle returned by LSConnect

hWnd

Handle of the application windows which will receive the notification messages (Reserved for future use).

CompressionPlace

Valid parameter ONLY in case of LSConnect connection.

Place where the compression will be done, the value accepted are :

COMPRESSION_ON_PC: the image will be sent from the LSConnect to PC in RAW mode and the relative conversion will be done on the PC (fast way).



COMPRESSION_ON_LSCONNECT: the compression will be done on board on the LSConnect and after the images will be sent to the PC (slow way).

NrDoc

Progressive sequence number identifying the document whose data is retrieved by this function.

DpilmagesJPEG

Specified the DPI resolution of the JPEG images returned, the value accepted are :

IMAGES_RESOLUTION_100_DPI: Images at 100 dpi. IMAGES_RESOLUTION_200_DPI: Images at 200 dpi. IMAGES_RESOLUTION_300_DPI: Images at 300 dpi.

*FrontImageJPEG

Pointer to a handle where will be returned the handle of memory buffer containing the front side image of the requested document, in JPEG format. If this parameter is set to NULL the images will not returned.

*SizeFrontImageJPEG

Pointer to an integer where will be returned the size of the Front image in JPEG format.

*pRearImageJPEG

Pointer to a handle where will be returned the handle of memory buffer containing the rear side image of the requested document, in JPEG format. If this parameter is set to NULL the images will not returned.

*SizeRearImageJPEG

Pointer to an integer where will be returned the size of the Rear image in JPEG format.

DpilmagesTIFF

Specified the DPI resolution of the TIFF images returned, the value accepted are:

IMAGES_RESOLUTION_100_DPI: Images at 100 dpi. IMAGES_RESOLUTION_200_DPI: Images at 200 dpi. IMAGES_RESOLUTION_300_DPI: Images at 300 dpi.

*FrontImageTIFF

Pointer to a handle where will be returned the handle of memory buffer containing the front side image of the requested document, in TIFF format. If this parameter is set to NULL the images will not returned.

*SizeFrontImageTIFF

Pointer to an integer where will be returned the size of the Front image in TIFF format.

*pRearImageTIFF

Pointer to a handle where will be returned the handle of memory buffer containing the rear side image of the requested document, in TIFF format. If this parameter is set to NULL the images will not returned.

*SizeRearImageTIFF

Pointer to an integer where will be returned the size of the Rear image in TIFF format.



DpilmagesBMP

Specified the DPI resolution of the BMP images returned, the value accepted are :

IMAGES_RESOLUTION_100_DPI: Images at 100 dpi. IMAGES_RESOLUTION_200_DPI: Images at 200 dpi. IMAGES_RESOLUTION_300_DPI: Images at 300 dpi.

*FrontImageBMP

Pointer to a handle where will be returned the handle of memory buffer containing the front side image of the requested document, in DIB format. If this parameter is set to NULL the images will not returned.

*RearImageBMP

Pointer to a handle where will be returned the handle of memory buffer containing the rear side image of the requested document, in DIB format. If this parameter is set to NULL the images will not returned.

CodelineSW

This field will return the codeline data read using the software interpretation algorithm.

CodelineHW

This field will return the codeline data read using the MICR reader . This buffer will be filled also in case Magnetic and Optical is requested.

Barcode

This field will return the barcode codeline data, either PDF417 or 2_OF_5, read using the barcode reader.

*NrPrinted

Variable where it will be returned the progressive count number physically endorsed on the documents. A previous *LSLoadStringWithCounterEx()* call has to be done.

TypeImageUV

Specified the DPI resolution and file format of the UV image returned, the values accepted are :

IMAGEUV_BMP_GRAY_100: Grey scale 100 dpi UV image requested.
IMAGEUV_BMP_GRAY_200: Grey scale 200 dpi UV image requested.
IMAGEUV_BMP_GRAY_300: Grey scale 300 dpi UV image requested.
IMAGEUV_JPG_100: Grey scale 100 dpi UV image requested JPG format.
IMAGEUV_JPG_200: Grey scale 200 dpi UV image requested JPG format.
IMAGEUV_JPG_300: Grey scale 300 dpi UV image requested JPG format.
IMAGEUV_BMP_BW_100: Bitonal 100 dpi UV image requested BMP

IMAGEUV_BMP_BW_200 : Bitonal 200 dpi UV image requested BMP

format.

IMAGEUV_BMP_BW_300: Bitonal 300 dpi UV image requested BMP format.

IMAGEUV_BMP_BW_REVERSE_100: Bitonal reverse 100 dpi UV image requested BMP format.

IMAGEUV_BMP_BW_REVERSE_200: Bitonal reverse 200 dpi UV image requested BMP format.

IMAGEUV_BMP_BW_REVERSE_300: Bitonal reverse 300 dpi UV image requested BMP format.

IMAGEUV_CCITTGR4_100: Bitonal 100 dpi UV image requested CCITTGR4 format.

IMAGEUV_CCITTGR4_200: Bitonal 200 dpi UV image requested CCITTGR4 format.



IMAGEUV_CCITTGR4_300: Bitonal 300 dpi UV image requested CCITTGR4 format.

IMAGEUV_CCITTGR4_REVERSE_100 : Bitonal reverse 100 dpi UV image requested CCITTGR4 format.

IMAGEUV_CCITTGR4_REVERSE_200 : Bitonal reverse 200 dpi UV image requested CCITTGR4 format.

IMAGEUV_CCITTGR4_REVERSE_300 : Bitonal reverse 300 dpi UV image requested CCITTGR4 format.

*FrontImageUV

Pointer to a handle where will be returned the handle of memory buffer containing the UV image of the requested document, in the requested format. If this parameter is set to NULL the image will not be returned.

* SizeFrontImageUV

Pointer to an integer where will be returned the UV image size.

Return Value

LS OKAY

LS SYSTEM ERROR

LS USB ERROR

LS PERIPHERAL NOT FOUND

LS HARDWARE ERROR

LS_PAPER_JAM

LS_INVALID_COMMAND

LS_FEEDER_EMPTY

LS_DOUBLE_LEAFING_WARNING

LS_DOUBLE_LEAFING_ERROR

LS_LOOP_INTERRUPTED

LS_REPLACE_CARTRIDGE

Comments

The type of compression for the JPEG format is taken from the *Quality* parameter set with the *LSAutoDocHandle()* call.

The function doesn't return a resolution higher than the resolution provided in the *ScanMode* parameter set with the *LSAutoDocHandle()* call.

The TIFF images are returned in TIFF Gr. 4 format ONLY.

The images handles retrieved by this function must be released by the application.



LSStopAutoDocHandle

#include "LSApi.h"

Result API LSStopAutoDocHandle(short hWnd); hConnect, hWnd);

Description

Stop the loop of automatic documents handling started with the *LSAutoDocHandle()*. If you had started a loop of LSAutoDocHandle and you want to stop it, you must accept that some documents still need to be processed before the stop is performed. The more the application is slow in reading images and codelines, the more documents will pass before the stop is done.

Even with a very fast application which reads images as they are available, it is always possible that in the meantime a new document is fed before the LSStopAutoDocHandle is called.

This means that the stop is not istantaneous.

The documents already present in the path at the time of the LSSTopAutoDocHandle() are moved up to the sorter.

So the application should do the following:

LSAutoDochandle ()

Loop of LSGetDocData() until Feeder is empty or error (like paper jam). When reply code is equal to LS_LOOP_INTERRUPTED it means that no further items will be fed but still items in the path have to be handled.

Application must continue the loop of LSGetDocData until reply code is different from : LS_FEEDER_EMPTY or LS_NO_OTHER_DOCUMENT

Parameters

hConnect

Handle returned by LSConnect

hWnd

Handle of the application windows which will receive the notification messages (Reserved for future use).

Return Value

LS_OKAY LS_OPEN_NOT_DONE

Comments

Remember to call the function *LSGetDocData()* until the reply is different from *LS_OKAY*, otherwise the unit remain in a pending state.



Magnetic stripe reader functions

The following API return the magnetic tracks encoded in a card in the form of three different strings, provided that the device has this option installed.

There are two different ways of working . The first one is to issue the read command and wait indefinitely for the card insertion.

The second one is to send a read command with a given timeout, so either the command completes with the resulting strings or with a timeout error.

Make sure to work with the magnetic stripe commands only if no other commands are outstanding to the device. No more than one outstanding command can be issued to the device at the same time.

If you issued a magnetic stripe reading command and you want to cancel it, you can call a *LSResetEx()* function with the ResetType parameter set to **RESET_ERROR** from a parallel thread.



LSReadBadge

#include "LSApi.h"

Result API LSReadBadge (short hConnect,

HWND hWnd,
CHAR Format,
SHORT MaxLength,
LPSTR String,
SHORT *Length);

Description

This command may be used with LS devices equipped with a magnetic stripe card reader.

The function terminate when one of the following events occur:

A badge is read or the function LSReset() is called.

Parameters

hConnect

Handle returned by LSConnect

hWnd

Handle of the application windows which will receive the notification messages (Reserved for future use).

Format

Specifies which track(s) to read. Accepted values are :

FORMAT_IATA = IATA, usually associated to track 1
FORMAT_ABA = ABA, usually associated to track 2
FORMAT_MINTS = MINTS, usually associated to track 3
FORMAT_IATA_ABA = IATA + ABA, both tracks 1 and 2
FORMAT_ABA_MINTS = ABA + MINTS, both tracks 2 and 3
FORMAT_IATA_ABA_MINTS = IATA + ABA + MINTS, tracks 1, 2 and 3

MaxLength

Length of the buffer where data read from the card will be returned.

String

Buffer where data read from the card will be returned.

Length

Length of the data returned in string.

Return Value

LS_OKAY
LS_SYSTEM_ERROR
LS_USB_ERROR
LS_PERIPHERAL_NOT_FOUND
LS_HARDWARE_ERROR
LS_DATA_TRUNCATED

Comments

The start of data of each of the card tracks read will be identified by a leading ASCII character 't' .



LSReadBadgeWithTimeout

#include "LsApi.h"

Result API LSReadBadgeWithTimeout(short hConnect,

HWND hWnd,
char Format,
short MaxLength,
LPSTR String,
short *Length,
long Timeout);

Description

This command may be used with LS devices equipped with a magnetic stripe card reader.

Reads badge traces, the difference with the LSReadBadge() is the timeout associated.

The function terminate when one of the following events occur:

A badge is read or the timeout is expired or the function *LSReset()* is called.

Parameters

hConnect

Handle returned by LSConnect

hWnd

Handle of the application windows which will receive the notification messages (Reserved for future use).

Format

FORMAT_IATA = IATA
FORMAT_ABA = ABA
FORMAT_MINTS = MINTS
FORMAT_IATA_ABA = IATA + ABA
FORMAT_ABA_MINTS = ABA + MINTS
FORMAT_IATA_ABA_MINTS = IATA + ABA + MINTS

MaxLength

Length of buffer where data read from badge will be returned.

String

Buffer where data read from badge will be returned.

Length

Length of data read from badge.

Timeout

Timeout value expressed in milliseconds, this parameter accept as minimum value **MIN_TIMEOUT** (500 ms).

Return Value

LS OKAY

LS_SERVERSYSERR

LS USBERR

LS_PERIFNOTFOUND

LS_HARDERR



LS_PERIFOFFON
LS_INVALID_TYPE_CMD
LS_INVALID_BADGE_TRACK
LS_INVALID_BADGE_TIMEOUT
LS_DATATRUNC

Comments

The traces string returned start with the character 't'. In order to cancel a *LSReadBadgeWithTimeout()* function execution, call the *LSReset() function*.



Software Read Codelines functions

The following functions retrieve the codeline printed on the document with the aid of the image.

The image provided to the functions must be in BMP format.

In some cases the function requires the user to provide the window coordinates for the decoding. In other cases (like for instance with the barcode) the engine itself is able to locate the correct window and decode it.

The following support libraries are needed in case you want the availability of the Software Read Codelines functions:

CtsDecod.dll
BarDecode.dll
CtsPDF.dll
CtsPdfDriverLicenze.dll
CtsDataMatrix.dll
CtsQRCode.dll
CtsMicroHole.dll

CtsBarcodeLocate.dll CtsRS.dll RotateImagelib.dll



LSCodelineReadFromBitmap

#include "LSApi.h"

Result API LSCodelineReadFromBitmap(HWND hWnd, HANDLE hImage,

char *CodelineType, short UnitMeasure,

 float
 x,

 float
 y,

 float
 sizeW,

 float
 sizeH,

 READOPTIONS
 *Option,

 LPSTR
 Codeline,

 UINT
 *Length);

Description

This function should be used to read the codeline data by means of software decoding. In this case the codeline may be located anywhere in the document. At present the decoding engine works only on bitmaps of 100, 200 or 300 dpi.

Parameters

hWnd

Handle of the application windows which will receive the notification messages (Reserved for future use).

hlmage

Handle of the scanned image, in DIB format, from which to read the codeline.

CodelineType

Specify the type of codeline font to read and decode. The coordinates' starting point is the bottom right margin of the document.

READ_CODELINE_SW_OCRA = read codeline from the position specified by X, Y and Size parameters.

READ_CODELINE_SW_OCRB_NUM = read codeline from the position specified by X, Y and Size parameters.

READ_CODELINE_SW_OCRB_ALFANUM = read codeline from the position specified by X, Y and Size parameters.

READ_CODELINE_SW_OCRB_ITALY = read codeline from the position specified by X, Y and Size parameters. This font is a subset of the alfa-numeric font without the character '&' and same separator.

READ_CODELINE_SW_OCRB_ARABIC = read codeline from the position specified by X, Y and Size parameters. This font is a numeric font plus the character '-' with body 10 and 12.

READ_CODELINE_SW_E13B = read codeline from the position specified by X, Y and Size parameters.

READ_CODELINE_SW_CMC7 = read codeline from the position specified by X, Y and Size parameters. The coordinate start from bottom right corner of the document.

UnitMeasure

Specify whether the Start_X, Start_Y, SizeW and SizeH measures are



expressed in millimeters or in inches.

The possible values are either **UNIT_MM** or **UNIT_INCH**.

Start X

Specify the x co-ordinate from right hand margin of the document. The value must be consistent with the *UnitMeasure*.

Start_Y

Specify the y co-ordinate from bottom margin of the document. The value must be consistent with the *UnitMeasure*.

SizeW

Specify the width of the window on the image bitmap that will be processed by the decoding software. The value must be consistent with the *UnitMeasure*.

SizeH

Specify the height of the window on the image bitmap that will be processed by the decoding software.

CodelineOpt

Pointer to a structure of type READOPTIONS (refer to **Comments**) that contains further options for codeline decoding.

Codeline

Pointer to the user buffer where the decoded codeline data will be copied. If the parameter *CodelineType* is set to **READ_CODELINE_SW_OCRA** the data will start with a leading ASCII character 'A'.

If the parameter CodelineType is set to either

READ_CODELINE_SW_OCRB_NUM,

READ CODELINE SW OCRB ALFANUM or

READ_CODELINE_SW_OCRB_ITALY the data will start with a leading ASCII character 'B'.

If the parameter *CodelineType* is set to either **READ_CODELINE_SW_E13B** or is returned a codeline E13BxOCRB the data will start with a leading ASCII character 'E'.

If the parameter *CodelineType* is set to **READ_CODELINE_SW_CMC7** the data will start with a leading ASCII character 'H'.

Length

Pointer to a variable that in input specifies the size of the buffer supplied by the application and pointed by *Codeline* parameter, and in output will specify the actual number of returned characters.

Return Value

LS OKAY

LS_NO_LIBRARY_LOAD

LS_COMMAND_IN_EXECUTION_YET

LS COMMAND SEQUENCE ERROR

LS_INVALID_CODELINE_TYPE

LS UNIT

LS MISSING IMAGE

LS_INVALID_SIZEH_VALUE

LS_OPEN_NOT_DONE



```
LS_DECODE_FONT_NOT_PRESENT
LS_DECODE_INVALID_COORDINATE
LS_DECODE_INVALID_OPTION
LS_DECODE_INVALID_CODELINE_TYPE
LS_DECODE_SYSTEM_ERROR
LS_DECODE_DATA_TRUNC
LS_DECODE_INVALID_BITMAP
LS_DECODE_ILLEGAL_USE
```

Comments

PutBanks

When equal to TRUE causes the addition of a space character between different parts of codeline data. When equal to FALSE no space character is added.

TypeRead

```
To decode only one type of font the parameter must be set to READ_ONE_CODELINE_TYPE.


To decode a codeline E13B x OCRB the parameter must be to set READ_CODELINE_SW_E13B_X_OCRB and the parameter CodelineType of the function must be set to:

CodelineType[0] = READ_CODELINE_SW_E13B

CodelineType[1] = READ_CODELINE_SW_OCRB_NUM

CodelineType[2] = '\0'
```

Example for take the coordinate to give at the function :

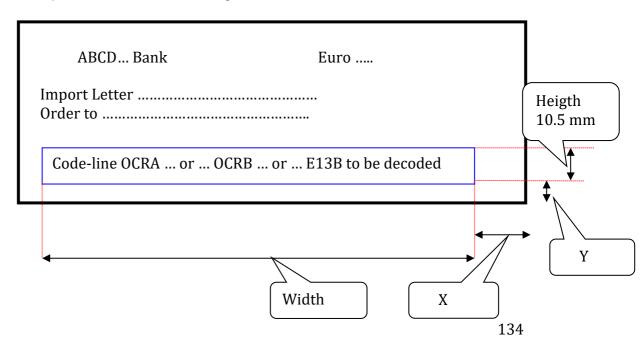





LSReadBarcodeFromBitmap

#include "LSApi.h"

Result API LSReadBarcodeFromBitmap(

HWND hWnd, HANDLE hlmage, char TypeBarcode, int pos_x, int pos y, int sizeW. sizeH, int LPSTR Codeline. UINT *Length);

Description

This function should be used to read barcodes 1 and 2D, by means of software decoding. In this case the barcode may be located anywhere in the document. For decoding barcodes 1D this function work only if Bardecode.dll is available. For decoding barcode PDF417 this function work only if CTSPdf.dll is available. For decoding barcode DATAMATRIX this function work only if CtsDataMatrix.dll is available.

For decoding barcode QRCODE this function work only if CtsQRCode.dll is available. There's also the possibility to locate the barcode in automatic mode on the given image, if the parameters for the coordinate are all set to 0 (zero). If on the document are present more then one barcode the function return only one barcode, in order to get the other call the function *LSGetNextBarcode()*.

Parameters

hWnd

Handle of the application windows which will receive the notification messages (Reserved for future use).

hlmage

Handle of the 16 or 256 shades grey or color bitmap that contains the data to read.

PDF417 decode only on bitmap at **16 or 256 shades of grey, at 200 or 300 dpi** types.

TypeBarcode

Type of barcode supported:

READ_BARCODE_2_OF_5 = the library decoding a 2_OF_5 barcode.

READ_BARCODE_CODE39 = the library decoding a CODE39 barcode.

READ_BARCODE_CODE128 = the library decoding a CODE128 barcode.

READ_BARCODE_EAN13 = the software decoding of a EAN 13 barcode.

READ_2D_BARCODE_PDF417 = the library decoding a PDF417 barcode.

READ_2D_BARCODE_DATAMATRIX = the library decoding a

DATAMATRIX barcode.

READ_2D_BARCODE_QRCODE = the library decoding a QRCode barcode.

READ_BARCODE_UCCEAN128 = Added barcode UCC/EAN-128 (ASCII code 247 represents FNC1 on returned decoded data).

pos X

Specify the co-ordinate (in millimeters) from right margin of the document.

pos_Y

Specify the y position (in millimeters) from bottom margin of the document.



SizeW

Specify the width (in millimeters) of the window on the image bitmap that will be processed by the decoding software to search for and decode the barcode.

SizeH

Specify the height (in millimeters) of the window on the image bitmap that will be processed by the decoding software to search for and decode the barcode.

Codeline

Pointer to the application buffer where the interpreted barcode data will be

Length

Pointer to a variable that in input specifies the size of the application buffer pointed by Codeline parameter, and in output will specify the actual number of returned characters.

Return Value

- LS OKAY
- LS_NO_LIBRARY_LOAD
- LS_COMMAND_IN_EXECUTION_YET
- LS_COMMAND_SEQUENCE_ERROR
- LS_MISSING_IMAGE
- LS_INVALID_BARCODE_TYPE
- LS_INVALID_COORDINATE
- LS_OPEN_NOT_DONE
- LS_BARCODE_GENERIC_ERROR
- LS BARCODE NOT DECODABLE
- LS_BARCODE_OPENFILE_ERROR
- LS_BARCODE_READBMP_ERROR
- LS_BARCODE_MEMORY_ERROR
- LS_BARCODE_START_NOTFOUND
- LS_BARCODE_STOP_NOTFOUND
- LS_PDF_NOT_DECODABLE
- LS_PDF_READBMP_ERROR
- LS_PDF_BITMAP_FORMAT_ERROR
- LS_PDF_MEMORY_ERROR LS_PDF_START_NOTFOUND
- LS_PDF_STOP_NOTFOUND
- LS_PDF_LEFTIND_ERROR
- LS_PDF_RIGHTIND_ERROR LS_PDF_OPENFILE_ERROR
- **Comments**



LSGetNextBarcode

#include "LSApi.h"

Result API LSGetNextBarcode(HWND hWnd, LPSTR Codeline,

long *Length);

Description

This function should be used to get the next barcode present on the document, re-call the function until return the reply LS_NO_MORE_DATA.

Parameters

hWnd

Handle of the application windows which will receive the notification messages (Reserved for future use).

Codeline

Pointer to the application buffer where the interpreted barcode data will be copied.

Length

Pointer to a variable that in input specifies the size of the application buffer pointed by *Codeline* parameter, and in output will specify the actual number of returned characters.

Return Value

LS_OKAY LS_NO_LIBRARY_LOAD LS_NO_MORE_DATA LS_OPEN_NOT_DONE

Comments



LSReadMicroHolesCodelines

#include "LSApi.h"

Result API LSReadMicroHolesCodelines(HWND hWnd,

HANDLE hImageFront,
HANDLE hImageRear,
BOOL Reserved,
short UnitMeasure,
short nrRegions,
MICROHOLE_STRUCT stMicroHole);

Description

Used to read Micro Holes codelines present on the front and/or rear of the document, by means of software decoding.

At the moment this function doesn't verify the true hole.

Parameters

hWnd

Handle of the application windows which will receive the notification messages (Reserved for future use).

hlmageFront

Handle of the scanned front image, in DIB format, that contains the data to read.

hlmageRear

Handle of the scanned rear image, in DIB format, that contains the data to read.

If not available set to NULL

Reserved

Not used, set to FALSE.

UnitMeasure

Specify whether the *Start_X*, *Start_Y*, *SizeW* and *SizeH* measures are expressed in millimeters or in inches.

The possible values are either **UNIT_MM** or **UNIT_INCH**.

nrRegions

Number of codeline to decode.

stMicroHole

Array of struct of parameter of each region, described in **Comments** section.

Return Value

LS OKAY

LS_NO_LIBRARY_LOAD

LS_COMMAND_IN_EXECUTION_YET

LS_COMMAND_SEQUENCE_ERROR

LS MISSING IMAGE

LS_INVALID_COORDINATE

LS_OPEN_NOT_DONE



Comments

```
The MICROHOLE_STRUCT structure is organized as follows: typedef struct _MicroHoleStruct
```

```
float
              Х;
       float
              у;
       float
              width;
              height,
       float
       BOOL TrueHole;
       char
              *strFront;
       short
              dimStrFront,
       char
              *strRear,
       short dimStrRear,
} MICROHOLE_STRUCT, *PMICROHOLE_SCRUCT;
```

Description:

X

Specify the co-ordinate from left margin of the document.

У

Specify the co-ordinate from left margin of the document.

width

Specify the width of the window on the image bitmap that will be processed by the decoding software.

height

Specify the height of the window on the image bitmap that will be processed by the decoding software.

TrueHole

Return TRUE o FALSE if the holes are verified or no.

strFront

String decoded on the front image.

dimStrFront

Specify the dimension in byte of the *strFront* parameter.

strRea

String decoded on the rear image.

dimStrRear

Specify the dimension in byte of the strRear parameter.



LSReadBarcodeDriverLicense

#include "LSApi.h"

Result API LSReadBarcodesDriverLicense (

HWND hWnd, HANDLE hlmage, short encodeBase, **LPSTR** Codeline_2D, *Length 2D, int *ErrorRate. short TypeBarcode_1D, int **LPSTR** Codeline 1D, int *Length 1D, int Reserved1. Reserved2. int int Reserved3. int Reserved4):

Description

This function allows to read US Driver licenses. In those cards the following symbols can be present: PDF417 (2D barcode) and/or mono-dimensional barcodes (like code 128)

Those symbols can be present in the document in all position of this.

This function is available only if the following DLLs are present:

CtdPDFDriverLicense.dll and bardecode.dll.

It is also necessary that the devices are sold with the DL option enabled.

At present the function works only on bitmaps of 300 dpi.

The output of the function will be composed of two separate strings (one for 1D and another for 2D barcodes) . Those results can be provided as normal strings or strings coded in 64 base .

The function will also be able to provide the following information:

- Whether the card was passed in the correct direction
- Whether the card was passed upside down
- Whether the card was passed correctly but the barcodes cannot be decoded
- Whether no barcodes were found in the image provided.

Parameters

hWnd

Handle of the application windows which will receive the notification messages (Reserved for future use).

hlmage

Handle of the **16** shades of grey, **300** dpi bitmap that contains the data to be read. (not advised)

Handle of the **256** shades of grey, **300** dpi bitmap that contain the data to be read.

Handle of color, 300 dpi bitmap that contain the data to be read.

encodeBase

Possible values:

ENCODE_NO ENCODE_BASE_64

Codeline 2D

Pointer to the user buffer where the decoded 2D barcode data will be copied.



Length_2D

Pointer to a variable that in input specifies the size of the buffer supplied by the application and pointed by *Codeline_2D* parameter, and in output will specify the actual number of returned characters. In case the card does not include 2D barcodes, the Length value returned is 0.

ErrorRate

It returns the number of characters corrected by the decoding algorithm.

TypeBarcode_1D

It specifies the type of 1D barcode to be read. Possible values:

READ_BARCODE_2_OF_5
READ_BARCODE_CODE39
READ_BARCODE_CODE128 (default)

Codeline 1D

Pointer to the user buffer where the decoded 1D barcode data will be copied.

Length_1D

Pointer to a variable that in input specifies the size of the buffer supplied by the application and pointed by *Codeline_1D* parameter, and in output will specify the actual number of returned characters. In case the card does not include 1D barcodes, the Length value returned is 0.

Reserved1

Reserved for future improvement, must be set to NULL.

Reserved2

Reserved for future improvement, must be set to NULL.

Reserved3

Reserved for future improvement, must be set to NULL.

Reserved4

Reserved for future improvement, must be set to NULL.

Return Value

- LS OKAY
- LS NO LIBRARY LOAD
- LS_COMMAND_IN_EXECUTION_YET
- LS_COMMAND_SEQUENCE_ERROR
- LS_MISSING_IMAGE
- LS_OPEN_NOT_DONE
- LS_PDF_NOT_DECODABLE
- LS_PDF_READBMP_ERROR
- LS_PDF_BITMAP_FORMAT_ERROR
- LS_PDF_MEMORY_ERROR
- LS_PDF_START_NOTFOUND
- LS PDF STOP NOTFOUND
- LS_PDF_LEFTIND_ERROR
- LS_PDF_RIGHTIND_ERROR
- LS_PDF_OPENFILE_ERROR
- LS_PDF_LOCALIZATION_ERROR
- LS_PDF_TOO_MANY_ERROR



Comments

Output of the function will be if the barcode:

- **LS_OKAY**: in this case the image passed to the function includes the barcodes (rear side). The application can use front image to show it on the screen. Depending on the type of DL, it is possible that not all of the barcodes are present in the image. The application can check *Length_2D* and *Length_1D*.
- LS_PDF417_UPSIDE_DOWN: a warning message indicating that barcode was detected from the image but the card is upside down. The application must rotate the front image 180° before showing it on the screen.
- **LS_PDF417_NOT_DECODABLE**: this means that the 2D barcode can be located in the image but it is not decodable. In this case the application can show the front image on the screen as it is. (this function is under development)
- **LS_PDF417_NOT_DECODABLE_UPSIDE_DOWN**: this means that the 2D barcode can be located in the image but it is not decodable and the card is passed upsidedown. IN this case the application can show the front image on the screen rotating it 180°.

(this function is under development)

LS_BARCODE_NOT_PRESENT: this means that on the image neither the 2D barcode nor the 1D barcode are present, it is possible that the card is passed in the wrong direction. The application must call the function again passing the front image handle, then rely on the next reply code.



Image manipulation functions

The functions described in this section provide additional image processing capabilities to the application.

The following functions are available for image processing.

LSSaveJPEG

LSSaveDIB

LSSaveTIFFEx

LSDisplayImage

LSUpdateImage

LSConvertImageToBW

LSConvertToJPEG

LSConvertToTIFF

LSEnableImageCorrection

LSFreeImage

LSRotateImage

LSConvertImage200To100dpi

LSImageBrightness

LSImageContrast

LSCutImage

NOTE: although Windows allows users to create pathnames longer than this, there is the limitation that the pathname of the file to be saved with ARCA Image manipulation functions cannot exceed 128 bytes.



LSSaveJPEG

#include "LSApi.h"

Result API LSSaveJPEG(HWND hWnd,

HANDLE hImage, int Quality, LPSTR filename);

Description

This function allows to save the scanned image in JPEG format.

Parameters

hWnd

Handle of the application windows which will receive the notification messages (Reserved for future use).

hlmage

Handle of the image to save in **JPEG** format.

Quality

Indicates the relationship between quality and compression range 2 to 255 that :

2 = max quality.

255 = max compression.

Filename

Full pathname of the file where the image will be saved. (max 128)

Return Value

LS OKAY

LS_OPEN_NOT_DONE

LS_NO_LIBRARY_LOAD

LS_INVALID_QUALITY

LS_MISSING_IMAGE

LS_JPEG_ERROR



LSSaveTIFFEx

#include "LSApi.h"

Result API LSSaveTIFFEx(HWND hWnd, HANDLE hImage, LPSTR filename, int Type,

int Type,
int Quality,
int SaveMode,
int PageNumber);

Description

This function allows to save the scanned image in TIF format (included TIFF_JPEG).

Parameters

hWnd

Handle of the application windows which will receive the notification messages (Reserved for future use).

hlmage

Handle of the image to save in TIF format.

Filename

Name of the file where the image will be saved. (max 128)

Туре

Specify the TIF format:

FILE_TIF = Tagged Image File Format.

SAVE_TIF_JPEG = Image TIFF saved in JPEG format.

FILE_CCITT = TIFF CCITT, only b/w image.

FILE_CCITT_GROUP3_1DIM = CCITT Group3 one dimension, only b/w image.

FILE_CCITT_GROUP3_2DIM = CCITT Group3 two dimensions, only b/w image.

FILE_CCITT_GROUP4 = CCITT Group4 two dimensions, only b/w image.

Quality

Valid only with the parameter Type set to **SAVE_TIF_JPEG**, indicates the relationship between quality and compression range 2 to 255 that:

2 = max quality.

255 = max compression.

SaveMode

SAVE_OVERWRITE = Overwrite the file.

SAVE_APPEND = Append the image in a multi-page image file.

SAVE_REPLACE = Replace a image in a multi-page image file.

SAVE_INSERT = Insert the image in a multi-page image file.

PageNumber

Number indicating the position in a multi-page file.

Return Value

LS OKAY

LS_OPEN_NOT_DONE



LS_MISSING_IMAGE LS_INVALID_TYPE LS_INVALID_QUALITY LS_INVALID_SAVEMODE LS_INVALID_PAGE_NUMBER LS_TIFF_ERROR



LSSavePNG

#include "LSApi.h"

Result API LSSavePNG(HWND hWnd,

HANDLE hImage,
int Quality,
int SaveMode,
int PageNumber,
LPSTR filename);

Description

This function allows to save the scanned image in PNG format.

Parameters

hWnd

Handle of the application windows which will receive the notification messages (Reserved for future use).

hlmage

Handle of the image to save in PNG format.

Quality

Indicates the relationship between quality and compression range 0 to 9 that :

0 = max quality.

9 = max compression.

Filename

Full pathname of the file where the image will be saved. (max 128)

Return Value

LS_OKAY

LS_OPEN_NOT_DONE

LS_NO_LIBRARY_LOAD

LS_INVALID_QUALITY

LS_INVALID_SAVEMODE

LS_INVALID_PAGE_NUMBER

LS_MISSING_IMAGE

LS_PNG_ERROR



LSSaveDIB

#include "LSApi.h"

Result API LSSaveDIB(HWND hWnd,

HANDLE hlmage, LPSTR filename);

Description

This function allows to save the scanned image in Bitmap format.

Parameters

hWnd

Handle of the application windows which will receive the notification messages (Reserved for future use).

hlmage

Handle of the image to save in BMP format.

Filename

Name of the file where the image will be saved. (max 128)

Return Value

LS_OKAY LS_OPEN_NOT_DONE LS_BMP_ERROR



LSConvertToJPEG

#include "LSApi.h"

Result API LSConvertToJPEG(HWND hWnd,

HANDLE hImage,
int Quality,
HANDLE *JpegImage,
long *ImageSize);

Description

This function allows to convert the scanned image in JPEG format in a memory buffer.

Parameters

hWnd

Handle of the application windows which will receive the notification messages (Reserved for future use).

hlmage

Handle of the BMP image to convert in **JPEG** format.

Quality

Indicates the relationship between quality and compression range 2 to 255 that :

2 = max quality.

255 = max compression.

JpegImage

Pointer to a handle where will be returned the handle of a memory buffer containing the converted image in JPEG format.

ImageSize

Pointer to a variable where will be returned the size of the converted image.

Return Value

LS OKAY

LS_OPEN_NOT_DONE

LS_NO_LIBRARY_LOAD

LS_INVALID_QUALITY

LS_MISSING_IMAGE

LS_JPEG_ERROR

Comments

The image (in BMP format) to be converted must be supplied by the application. **The JPEG image returned by this function must be released by the application** using the **LSFreeImage** function.



LSConvertToTIFF

#include "LSApi.h"

Result API LSConvertToTIFF(HWND hWnd, HANDLE hImage,

int Type,
int Quality,
int SaveMode,
int PageNumber
HANDLE *TiffImage,
long *ImageSize);

Description

This function allows to convert the scanned image in TIF format in a memory buffer.

Parameters

hWnd

Handle of the application windows which will receive the notification messages (Reserved for future use).

hlmage

Handle of the image to be converted in TIF format.

Type

Specify the TIF format:

FILE_TIF = Tagged Image File Format.

SAVE_TIF_JPEG = Image TIFF saved in JPEG format.

FILE_CCITT = TIFF CCITT, only b/w image.

FILE_CCITT_GROUP3_1DIM = CCITT Group3 one dimension, only b/w image.

FILE_CCITT_GROUP3_2DIM = CCITT Group3 two dimensions, only b/w image.

FILE_CCITT_GROUP4 = CCITT Group4 two dimensions, only b/w image.

Quality

Valid only with the parameter Type set to **SAVE_TIF_JPEG**, indicates the relationship between quality and compression range 2 to 255 that:

2 = max quality. 255 = max compression.

SaveMode

SAVE_OVERWRITE = Overwrite the file.

SAVE_APPEND = Append the image in a multi-page image file.

SAVE_REPLACE = Replace a image in a multi-page image file.

SAVE INSERT = Insert the image in a multi-page image file.

PageNumber

Number indicating the position in a multi-page file.

TiffImage

Pointer to a handle where will be returned the handle of a memory buffer containing the converted image in TIFF format.

ImageSize

Pointer to a variable where will be returned the size of the converted image.



Return Value

LS_OKAY

LS_OPEN_NOT_DONE

LS_MISSING_IMAGE

LS_INVALID_TYPE

LS_INVALID_QUALITY

LS_INVALID_SAVEMODE

LS_INVALID_PAGE_NUMBER

LS_TIFF_ERROR

Comments

The image (in BMP format) to be converted must be supplied by the application. *The TIFF image returned by this function must be released by the application* using the *LSFreeImage* function.



LSConvertImageToBW

#include "LSApi.h"

Result API LSConvertImageToBW(HWND hWnd,

SHORT Method,
HANDLE GrayImage,
LPHANDLE BwImage,
short Parameter1,
float Threshold);

Description

This function can be used by client application to convert an image from 16 or 256 shades of grey to black and white, the resolution of the image BW returned is the same of the grey image give in input.

Parameters

hWnd

Handle of the application windows which will receive the notification messages (Reserved for future use).

Method

Specify the conversion algorithm to apply:

ALGORITHM_CTS: Use a proprietary ARCA algorithm.

ALGORITHM_CTS_2: Use a proprietary ARCA algorithm.

ALGORITHM_CTS_3: Use a proprietary ARCA algorithm.

ALGORITHM_CTS_TOP_IMAGE: Use a proprietary ARCA algorithm, need CtsTopImage.dll library.

ALGORITHM_CTS_IMAGE_PRO: Use a proprietary ARCA algorithm, need CtsImagePro.dll library.

ALGORITHM_CTS_CLEAR_PIX: Use a proprietary ARCA algorithm, need CtsCLearPIX.dll library.

ALGORITHM_NODITHERING: Use nearest color matching.

ALGORITHM_FLOYDSTEINDITHERING: Use Floyd-Steinberg dithering.

ALGORITHM_STUCKIDITHERING: Use Stucki dithering. **ALGORITHM_BURKESDITHERING**: Use Burkes dithering. **ALGORITHM_SIERRADITHERING**: Use Sierra dithering.

ALGORITHM_STEVENSONARCEDITHERING: Use Stevenson Arce dithering.

ALGORITHM_JARVISDITHERING: Use Jarvis dithering.

GrayImage

Handle of memory buffer containing an image, in DIB format, supplied by the application for conversion. The handle of the converted image will be returned into BwImage.

Bwlmage

Pointer to a handle where will be returned the handle of a memory buffer containing the converted b/w image of the document, in DIB format.

Parameter1

This parameter is related to the *Method* parameter.

When Method is equal to:

ALGORITHM_CTS The valid range is from 50 to 600, the default is 450



(**DEFAULT_POLO_FILTER**). For documents with a clear background the value must be in the low range (50..450), for documents with a darkened background the value must be in the higher range (450..600).

ALGORITHM_CTS_3 The valid range is from 0 to 15, the default is 8 (**DEFAULT_CTS_3_TRHESHOLD**).

Threshold

This parameter is meaningful only if *ALGORITHM_CTS* is chosen as *Method*. The valid range is from 0.50 to 1.

The default value when this parameter is set to 0 is 0.90.

Return Value

LS_OKAY
LS_OPEN_NOT_DONE
LS_COMMAND_IN_EXECUTION_YET
LS_COMMAND_SEQUENCE_ERROR
LS_NO_LIBRARY_LOAD
LS_INVALID_METHOD

LS_INVALID_POLO_FILTER

Comments

The grey scale image (in DIB format) to be converted must be supplied by the application. *The BW image returned by this function must be released by the application* using the *LSFreeImage* function. This function can be used only after a successful **LSConnect**.



LSConvertImageToBWWithReport

#include "LSApi.h"

Result API LSConvertImageToBWWithReport(HWND hWnd,

SHORT Method. HANDLE GrayImage, LPHANDLE Bwlmage, Parameter1, short float Threshold. *histogram, int *Noise, int *WhitePixel, int int *BlackPixel);

Description

This function can be used by client application to convert an image from 16 or 256 shades of grey to black and white. In output the function return some parameters which can be used by the application to evaluate the characteristics of the resulting bitonal image.

Parameters

hWnd

Handle of the application windows which will receive the notification messages (Reserved for future use).

Method

Specify the conversion algorithm to apply:

ALGORITHM_CTS: Use a proprietary ARCA algorithm. **ALGORITHM_CTS_2**: Use a proprietary ARCA algorithm. **ALGORITHM_CTS_3**: Use a proprietary ARCA algorithm.

ALGORITHM_CTS_TOP_IMAGE: Use a proprietary ARCA algorithm, need CtsTopImage.dll library.

ALGORITHM_CTS_IMAGE_PRO: Use a proprietary ARCA algorithm, need CtsImagePro.dll library.

ALGORITHM_CTS_CLEAR_PIX: Use a proprietary ARCA algorithm, need CtsClearPIX.dll library.

ALGORITHM_NODITHERING: Use nearest color matching.

ALGORITHM_FLOYDSTEINDITHERING: Use Floyd-Steinberg dithering.

ALGORITHM_STUCKIDITHERING: Use Stucki dithering. **ALGORITHM_BURKESDITHERING**: Use Burkes dithering. **ALGORITHM_SIERRADITHERING**: Use Sierra dithering.

ALGORITHM_STEVENSONARCEDITHERING: Use Stevenson Arce dithering.

ALGORITHM_JARVISDITHERING: Use Jarvis dithering.

GrayImage

Handle of memory buffer containing an image, in DIB format, supplied by the application for conversion. The handle of the converted image will be returned into BwImage.

Bwlmage

Pointer to a handle where will be returned the handle of a memory buffer containing the converted b/w image of the document, in DIB format.



Parameter1

This parameter is related to the *Method* parameter.

When Method is equal to:

ALGORITHM_CTS The valid range is from 50 to 600, the default is 450 (**DEFAULT_POLO_FILTER**). For documents with a clear background the value must be in the low range (50..450), for documents with a darkened background the value must be in the higher range (450..600).

ALGORITHM_CTS_3 The valid range is from 0 to 15, the default is 8 (**DEFAULT_CTS_3_TRHESHOLD**).

Threshold

This parameter is meaningful only if *ALGORITHM_CTS* is chosen as *Method*. The valid range is from 0.50 to 1.

The default value when this parameter is set to 0 is 0.90.

histogram

Pointer to an array of 16 or 256 intergers values where it will be returned the number of pixels found for each gray level.

Noise

Pointer to an integer where it will be returned the number of spots 2x2 found after the convertion.

WhitePixel

Pointer to an integer where it will be returned the total number of white pixels present in the bitmap after the convertion.

BlackPixel

Pointer to an integer where it will be returned the total number of black pixels present in the bitmap after the convertion.

Return Value

LS OKAY

LS_OPEN_NOT_DONE

LS_COMMAND_IN_EXECUTION_YET

LS_COMMAND_SEQUENCE_ERROR

LS_NO_LIBRARY_LOAD

LS_INVALID_METHOD

LS_INVALID_POLO_FILTER

Comments

The grey scale image (in DIB format) to be converted must be supplied by the application. *The BW image returned by this function must be released by the application* using the *LSFreeImage* function. This function can be used only after a successful **LSConnect**.



LSSetBinarizationParameters

#include "LSApi.h"

Result API LSSetBinarizationParameters (short hConnect,

HWNDhWnd,ShortMethod,shortThreshold,floatReserved);

Description

The function set the Method and the threshold used to convert the images to BW from the functions *LSAutoDocHandle()* and *LSDocHandle()* when the parameter ScanMode is set to SCAN_MODE_BW. The method and threshold value is used in the ARCA Black and White convertion algorithm which is used by default. If this function is not explicity called from the application the BW convertion is done with *method* = ALGORITHM CTS and *Threshold* = 450.

ATTENTION: if this function is called the parameter for the binarizition included in the file LsApi.ini will NOT be considered.

Parameters

hConnect

Handle returned by LSConnect

hWnd

Handle of the application windows which will receive the notification messages (Reserved for future use).

Method

The valid value are:

ALGORITHM_CTS: Use a proprietary ARCA algorithm. (Set by **default**)

ALGORITHM_CTS_3: Use a proprietary ARCA algorithm.

ALGORITHM_CTS_TOP_IMAGE: Use a proprietary ARCA algorithm, need CtsTopImage.dll library.

ALGORITHM_CTS_IMAGE_PRO: Use a proprietary ARCA algorithm, need CtsImagePro.dll library.

ALGORITHM_CTS_CLEAR_PIX: Use a proprietary ARCA algorithm, need CtsClearPIX.dll library.

Threshold

This parameter is related to the *Method* parameter.

When Method is equal to:

ALGORITHM_CTS The valid range is from 50 to 600, the default is 450 (**DEFAULT_POLO_FILTER**). For documents with a clear

background the value must be in the low range (50..450), for documents with a darkened background the value must be in the higher range (450..600).

ALGORITHM_CTS_3 The valid range is from 0 to 15, the default is 8.

Reserved

Reserved for future improvement, must be set to NULL.

Return Value

LS OKAY



LS_COMMAND_SEQUENCE_ERROR LS_OPEN_NOT_DONE LS_INVALID_THRESHOLD



LSConvertImageResolution

#include "LSApi.h"

Result API LSConvertImageResolutioni(HWND hWnd,

HANDLE hlmage,

int NewResolution, HANDLE *plmage);

Description

Convert a BW, grey or color image from 100, 200 or 300 dpi to another requested resolution.

Parameters

hWnd

Handle of the application windows which will receive the notification messages. (Reserved for future use)

hlmage

Handle of memory buffer containing an image, in DIB format, supplied by client for conversion. The handle of the converted image will be returned into plmage.

NewResolution

Resolution required.

plmage

Pointer to a handle where will be returned the handle of memory buffer containing the converted image of the document in DIB format.

Return Value

LS_OKAY

LS_SYSTEM_ERROR

LS_COMMAND_IN_EXECUTION_YET

LS_COMMAND_SEQUENCE_ERROR

LS_OPEN_NOT_DONE

LS_MISSING_IMAGE

LS_RESIZE_ERROR

Comments

The image returned from this function must be released by the application with LsFreeImage() function.



LSConvertImageColorTo256Gray

#include "LSApi.h"

Result API LSConvertImageColorTo256Grayi(HWND hWnd,

HANDLE hlmage, *plmage);

Description

Convert a color image to 256 gray.

Parameters

hWnd

Handle of the application windows which will receive the notification messages. (Reserved for future use)

hlmage

Handle of memory buffer containing an image, in DIB format, supplied by client for conversion. The handle of the converted image will be returned into plmage.

plmage

Pointer to a handle where will be returned the handle of memory buffer containing the converted image of the document in DIB format.

Return Value

LS OKAY

LS_SYSTEM_ERROR

LS_COMMAND_IN_EXECUTION_YET

LS_COMMAND_SEQUENCE_ERROR

LS OPEN NOT DONE

LS_MISSING_IMAGE

Comments

This function can be used by client application to convert a *color* image to gray image. The color scale image (in DIB format) to be converted must be supplied by the application. The image returned from this function must be released by the application with LsFreeImage() function.



LSConvertImage256To16Gray

#include "LSApi.h"

Result API LSConvertImage256To16Grayi(HWND hWnd, HANDLE hImage, HANDLE *pImage);

Description

Convert a image of 256 gray to 16 gray scale.

Parameters

hWnd

Handle of the application windows which will receive the notification messages. (Reserved for future use)

hlmage

Handle of memory buffer containing an image, in DIB format, supplied by client for conversion. The handle of the converted image will be returned into plmage.

plmage

Pointer to a handle where will be returned the handle of memory buffer containing the converted image of the document in DIB format.

Return Value

LS OKAY

LS_SYSTEM_ERROR

LS_COMMAND_IN_EXECUTION_YET

LS_COMMAND_SEQUENCE_ERROR

LS OPEN NOT DONE

LS_MISSING_IMAGE

Comments

This function can be used by client application to convert a 256 gray image to 16 gray image. The 256 gray scale image (in DIB format) to be converted must be supplied by the application. The image returned from this function must be released by the application with LsFreeImage() function.



LSEnableImageCorrection

#include "LSApi.h"

Result API LSEnableImageCorrection(HWND hWnd, BOOL fDo);

Description

This function either enables or disables a software filter used to give a lighter rendering of the scanned image.

Parameters

hWnd

Handle of the application windows which will receive the notification messages.

fDo

TRUE enable the filter FALSE disable the filter.

Return Value

LS_OKAY

LS_OPEN_NOT_DONE

Comments

The filter is disabled by default.



LSFreeImage

#include "LSApi.h"

Result API LSFreeImage (HWND hWnd, LPHANDLE hImage);

Description

Free memory allocated by LSReadImage(), LS_ReadImagePiece(), LSGetDocData(), LSConvertImageToBW(),LSConvertImage200To100dpi, LSRotateImage, LSImageBrightness, LSImageContrast, LSCutImage functions.

Parameters

hWnd

Handle of the application windows which will receive the notification messages (Reserved for future use).

hlmage

Pointer to handle of image to be released.

Return Value

LS_OKAY LS_INVALID_HANDLE LS_NO_LIBRARY_LOAD

Comments

Use this function also to release all image memory returned from the APIs function.



LSRotateImage

#include "LSApi.h"

Result API LSRotateImage(HWND hWnd,

HANDLE hImage,
int degree,
HANDLE *pImage);

Description

The function returns a copy of the image passed in input rotated by the specified number of degrees. The application must free (release) the memory areas allocated for both input and output images. Freeing one image area does not affect the other.

Parameters

hWnd

Handle of the application windows which will receive the notification messages.

hlmage

Handle of the image returned by LSReadImage().

degree

Number of degrees to rotate (+/-). This can be a number from 1 to 360. A positive value will rotate the image in a clockwise rotation, while a negative value will rotate the image in a counter-clockwise rotation.

plmage

Pointer to a handle where will be returned the handle of the memory buffer containing the rotated image, in DIB (BMP) format.

Return Value

LS OKAY

LS_NO_LIBRARY_LOAD

LS_INVALID_TYPE_COMMAND

LS_EXECCMD

LS_CMDSEQUENCEERROR

LS_INVALID_DEGREE

LS_MISSING_IMAGE

LS_OPEN_NOT_DONE

Comments

The memory areas allocated for both images must be released with the function *LSFreeImage()*.



LSImageBrightness

#include "LSApi.h"

Result API LSImageBrightness(HWND hWnd,

HANDLE hlmage, int nChange, HANDLE *hNewImage);

Description

The function changes the intensity (brightness) of the image in a bitmap, it returns a copy of the given image.

Parameters

hWnd

Handle of the application windows which will receive the notification messages.

hlmage

Handle of the image returned from LSReadImage().

nChange

Amount to change the intensity. The intensity ranges from -1000 to 1000. A positive value increases (or lightens) the brightness of the bitmap image. A negative values decreases (or darkens) the brightness of the bitmap image.

hNewImage

Pointer to a handle where will be returned the handle of the memory buffer containing the image modified in DIB format.

Return Value

LS_OKAY

LS_NO_LIBRARY_LOAD

LS_INVALID_TYPE_COMMAND

LS_EXECCMD

LS_CMDSEQUENCEERROR

LS_INVALID_NCHANGE

LS_MISSING_IMAGE

LS_OPEN_NOT_DONE

LS_BRIGHTNESS_ERROR

Comments

The images must be free with the function LSFreeImage().



LSImageContrast

#include "LSApi.h"

Result API LSImageContrast(HWND hWnd,

HANDLE hlmage,
int nChange,
HANDLE *hNewImage);

Description

The function increases or decreases the contrast of the image in a bitmap, it return a copy of the given image.

Parameters

hWnd

Handle of the application windows which will receive the notification messages.

hlmage

Handle of the image returned from LSReadImage().

nChange

Amount of contrast change. The contrast ranges from -1000 to 1000. A positive value increases the contrast of the bitmap image. A negative values decreases the contrast of the bitmap image.

hNewImage

Pointer to a handle where will be returned the handle of the memory buffer containing the image modified in DIB format.

Return Value

LS_OKAY

LS_NO_LIBRARY_LOAD

LS_INVALID_TYPE_COMMAND

LS_EXECCMD

LS_CMDSEQUENCEERROR

LS_INVALID_NCHANGE

LS_MISSING_IMAGE

LS_OPEN_NOT_DONE

LS_CONTRAST_ERROR

Comments

The images must be released with the function LSFreeImage().



LSCutImage

#include "LSApi.h"

Result API LSCutImage(HWND hWnd,

HANDLE hImage, short UnitMeasure, float Start_x, float Start_y, float sizeW, float sizeH.

HANDLE *hNewImage);

Description

The function return a portion of the given image according to the rectangle provided.

Parameters

hWnd

Handle of the application windows which will receive the notification messages.

hlmage

Handle of the image returned from LSReadImage().

UnitMeasure

Specify if the *Start_X*, *Start_Y* and *SizeW* measures are give in millimeter or in inch.

The values are **UNIT_MM** and **UNIT_INCH**.

Start_X

Specify the x co-ordinate from right margin of the document.

Start_Y

Specify the y co-ordinate from bottom margin of the document.

SizeW

Specify the width of the window to be cut in the document bitmap.

SizeH

Specify the height of the window to be cut in the document bitmap.

hNewImage

Pointer to a handle where will be returned the handle of the memory buffer containing the portion of the image in DIB format.

Return Value

LS OKAY

LS_NO_LIBRARY_LOAD

LS_INVALID_TYPE_COMMAND

LS_EXECCMD

LS CMDSEQUENCEERROR

LS_UNIT_PARAM

LS MISSING IMAGE

LS_INVALID_COORDINATE

LS_OPEN_NOT_DONE



Comments

The images must be released with the function LSFreeImage().



LSDisplayImage

#include "LSApi.h"

Result API LSDisplayImage (HWND

HANDLE Hinstance
CHAR *FilenameFront,
CHAR *FilenameBack,

hWnd,

INT Xfront, Yfront, INT XBack, INT YBack, INT FrontWidth, INT FrontHeight, INT INT BackWidth, BackHeight, INT HWND *RetHwndFront, HWND *RetHwndBack);

Description

This function should be used to display front and back images read from a file.

Parameters

hWnd

Handle of the application windows which will receive the notification messages (Reserved for future use).

HInstance

Handle of the application instance.

FilenameFront

Pathname of the file containing the front image to display.

FilenameBack

Pathname of the file containing the rear image to display.

Xfront

The *x* parameter is the initial x co-ordinate of the window's upper-left corner, in screen co-ordinates, of the front image.

Yfront

The Y parameter is the initial Y co-ordinate of the window's upper-left corner, in screen co-ordinates of the front image.

Xback

The *x* parameter is the initial x co-ordinate of the window's upper-left corner, in screen co-ordinates of the back image.

Yback

The Y parameter is the initial Y co-ordinate of the window's upper-left corner, in screen co-ordinates of the back image.

FrontWidth

Width of front image.

FrontHeight



Height of front image.

BackWidth

Width of back image.

BackHeight

Height of back image.

RetHwndFront

Handle of the new window that contain the front image.

RetHwndBack

Handle of the new window that contain the back image.

Return Value

LS_OKAY LS_SYSTEM_ERROR LS_INVALID_COMMAND LS_NO_LIBRARY_LOAD

LS_INVALID_HANDLE



LSUpdateImage

#include "LSApi.h"

Result API LSUpdateImage (HWND hWnd,

CHAR *FilenameFront,
CHAR *FilenameBack,
HWND *RetHwndFront,
HWND *RetHwndBack);

Description

This function displays front and back images read from file. It must be used after a LSDisplayImage command.

Parameters

hWnd

Handle of the application windows which will receive the notification messages (Reserved for future use).

FilenameFront

Pathname of the front image to display.

FilenameBack

Pathname of the back image to display.

RetHwndFront

Handle of the window that contain the new front image.

RetHwndBack

Handle of the window that contain the new back image.

Return Value

LS OKAY

LS_SYSTEM_ERROR

LS_INVALID_COMMAND

LS_NO_LIBRARY_LOAD

LS_INVALID_HANDLE



Ultra Violet Image functions

These functions are available for the LS150-UV version.

The documents must be handled with the usual functions described in the **Basic functions** and in the **Advanced Documents handling** sections of this manual.

In both cases the *Scanmode* parameter must be set to **SCAN_MODE_256GR100_AND_UV** or **SCAN_MODE_256GR200_AND_UV**.

The device returns per each scanned document two different images:

- 1. a normal grey scale image
- 2. an UV image

The application can also request a third image which is the combination of the grey scale image + the UV image. This is done via API with the **LSMergelmageGrayAndUV()** function.

Before feeding the documents, the application can set some parameters for the UV. This is done with the **LSModifyPWMUltraViolet()** function where it is possible to change the following:

- increase or decrease the UV intensity light from the standard calibration of the device (in percentage). This is particularly useful in checks that for example have a very low intensity in the UV ink.
- 2. set the device in such a way that it gives a lower contrast mantaining part of the background of the check. In alternative it can be set in such a way that the background is completely removed, only the UV ink is captured and the resulting image has only two values: light pixels values for the UV and black pixels where there is not presence of UV ink. In this way of working the application can make use of the LSMergelmageGrayAndUV() function to get a combination of grey scale + UV image to get an image which can be displayed or visually analyzed.

The UV image obtained by the scanner can also be converted in bitonal vi athe function **LSConvertUVtoBWEx**()

This function allows you to specify whether the UV patterns have to be represented in the bitmap in white or in black color.



LSModifyPWMUltraViolet

#include "LSApi.h"

Result API LSModifyPWMUltraViolet (short hConnect,

HWND hWnd,
short PWMValue,
BOOL HighContrast,
short Reserved);

Description

Modify the default PWM value optained with the scanner Ultra Violet calibration.

When the unit is powered off and on the PWM value is set to the original value set with the calibration procedure of the scanner.

This function can be used to increase or decrease the UV intensity light and also to set two different way of working: one returns the UV image with a high contrast, while the other option gives a lower contrast keeping part of the background of the check.

Parameters

hConnect

Handle returned by LSConnect

hWnd

Handle of the application windows which will receive the notification messages (Reserved for future use).

PWMValue

Modify the value of PWM in percentage, the range acceptable is from 1 to 200, the value of 100 set the value obtained with the calibration.

HighContrast

Exalt the contrast between the normal and the ultra violet ink.

Reserved

Reserved for future use, must be set to NULL.

Return Value

LS_OKAY
LS_SYSTEM_ERROR
LS_USB_ERROR
LS_PERIPHERAL_NOT_FOUND
LS_HARDWARE_ERROR
LS_INVALID_PWM_VALUE



LSMergelmageGrayAndUV

#include "LSApi.h"

Result API LSMergelmageGrayAndUV(HWND hWnd,

HANDLE hImageGray, HANDLE hImageUV, float Reserved1, float Reserved2, HANDLE *pImage);

Description

Merge the two image given in input.

Parameters

hWnd

Handle of the application windows which will receive the notification messages. (Reserved for future use)

hlmageGray

Handle of memory buffer containing a gray scale image at 256 colors returned from the device to be merged with the UV image.

hlmageUV

Handle of memory buffer containing a Ultra Violet image at 256 colors returned from the device for merged.

Reserved1

Reserved for future use. Must be set to NULL.

Reserved2

Reserved for future use. Must be set to NULL.

plmage

Pointer to a handle where will be returned the handle of memory buffer containing the merged image of the document in DIB format.

Return Value

LS OKAY

LS_SYSTEM_ERROR

LS_COMMAND_SEQUENCE_ERROR

LS_OPEN_NOT_DONE

LS_MISSING_IMAGE

LS_IMAGE_NOT_256_COLOR

Comments

This function can be used by client application to merge a *Gray* image with to *Ultra Violet* image. The gray and the Ultra Violet images (in DIB format) to be mergered must be supplied by the application. *The image returned from this function must be released by the application with LsFree function.*



LSMergelmageColorAndUV

#include "LSApi.h"

Result API LSMergelmageColorAndUV(HWND hWnd,

HANDLE hImageColor, HANDLE hImageUV, float Reserved1, float Reserved2, HANDLE *pImage);

Description

Merge the two image given in input.

Parameters

hWnd

Handle of the application windows which will receive the notification messages. (Reserved for future use)

hlmageColor

Handle of memory buffer containing a color scale image returned from the device to be merged with the UV image.

hlmageUV

Handle of memory buffer containing a Ultra Violet image at 256 colors returned from the device for merged.

Reserved1

Reserved for future use. Must be set to NULL.

Reserved2

Reserved for future use. Must be set to NULL.

plmage

Pointer to a handle where will be returned the handle of memory buffer containing the merged image of the document in DIB format.

Return Value

LS OKAY

LS_SYSTEM_ERROR

LS_COMMAND_SEQUENCE_ERROR

LS_OPEN_NOT_DONE

LS_MISSING_IMAGE

LS_INVALID_BIT_DEPTH

Comments

This function can be used by client application to merge a *Corol* image with to *Ultra Violet* image. The color and the Ultra Violet images (in DIB format) to be mergered must be supplied by the application. *The image returned from this function must be released by the application with LsFree function.*



LSConvertUVtoBWEx

#include "LSApi.h"

Result API LSConvertUVtoBWEx(HWND hWnd,

HANDLE hImageGray,
hImageUV,
float Reserved1,
float Reserved2,
int UVImageType
HANDLE *pImage);

Description

Convert the image UV in bitonal.

Parameters

hWnd

Handle of the application windows which will receive the notification messages. (Reserved for future use)

hlmageGray

Not used set to NULL.

Future enanchement - Handle of memory buffer containing a gray scale image at 256 colors returned from the device.

hlmageUV

Handle of memory buffer containing a Ultra Violet image at 256 color, returned from the device.

Reserved1

Reserved for future use. Must be set to NULL.

Reserved2

Reserved for future use. Must be set to NULL.

UVImageType

The accepted values are:

UV_IMAGE_NORMAL : Return the image with UV in white on a black background. (default)

UV_IMAGE_REVERSE: Return the image with UV in black on a white background.

plmage

Pointer to a handle where will be returned the handle of memory buffer containing the image binarizated in DIB format.

Return Value

LS OKAY

LS_SYSTEM_ERROR

LS_COMMAND_SEQUENCE_ERROR

LS OPEN NOT DONE

LS_MISSING_IMAGE

LS_IMAGE_NOT_256_COLOR



Comments

The image returned from this function must be released by the application with LsFree function.



Miscellaneous functions

A collection of functions used for minor set towards the unit.



LSSetLightIntensity

#include "LSApi.h"

Result API LSSetLightIntensity (short hConnect,

HWND hWnd, short Value);

Description

Available only for LS40 and LS150 model.

Changes in a volatile mode the intensity scanner light, when the device is powered Off the value is lost, and the original default value will be set.

Parameters

hConnect

Handle returned by LSConnect

hWnd

Handle of the application windows which will receive the notification messages (Reserved for future use).

Value

The Range of Value accepted is from 0 to 30.

Return Value

LS_OKAY

LS_SYSTEM_ERROR

LS_USB_ERROR

LS_PERIPHERAL_NOT_FOUND

LS HARDWARE ERROR

LS_INVALID_VALUE



LSLED

#include "LSApi.h"

Result API LSLED (short hConnect,

HWND hWnd,
short LEDcolor,
unigned short TimeOn,
unigned short TimeOff);

Description

Available only for LS40 and LS150 model.

Permit to handle the LED of the unit.

Parameters

hConnect

Handle returned by LSConnect

hWnd

Handle of the application windows which will receive the notification messages (Reserved for future use).

LEDcolor

The accepted values are:

LED_COLOR_DEFAULT: The LED blinking in default state.

LED_COLOR_GREEN: The LED ON green color.
LED_COLOR_RED: The LED ON in red color.
LED_COLOR_AMBER: The LED ON in amber color.

TimeOn

Time interval of LED ON.

TimeOff

Time interval of LED OFF.

Return Value

LS_OKAY LS_USB_ERROR LS_PERIPHERAL_NOT_FOUND LS_INVALID_LED_COLOR

Comments

For set the LED in OFF state set TimeOn = 0x0000 and TimeOff = 0xffff. For set the LED always ON set TimeOn = 0xffff and TimeOff = 0x0000.



LSBeep

#include "LSApi.h"

Result API LSBeep(short hConnect,

HWND hWnd, short NrBeep, unigned short TimeOn, unigned short TimeOff);

Description

Available only for LS40 and LS150 model.

Permit to handle the beeper of the unit.

Parameters

hConnect

Handle returned by LSConnect

hWnd

Handle of the application windows which will receive the notification messages (Reserved for future use).

NrBeep

Number of beep to execute.

TimeOn

Time interval of beep ON.

TimeOff

Time interval of beep OFF.

Return Value

LS OKAY

LS_USB_ERROR

LS_PERIPHERAL_NOT_FOUND

LS_INVALID_VALUE

Comments

For set the beeper always ON set TimeOn = 0xffff and TimeOff = 0x00000.



IQA document functions

LsApi export the possibility to do the IQA on the images.

This section contains the specification of the CtsIQA.dll library interface functions for the Win32 subsystem of the Windows operating system.

The goal is to provide specific information about CtsIQA and about development of application programs that make use of it; the reader must have a background known of Win32 environment architecture and programming technique.

All the CtsIQA functions are available through the standard API interface of the device (LsApi.dll).

The ARCA IQA package is composed of the following files:

Filename	Description
CtsIqa.dll	Main IQA engine
Document_type.dll	Support library
Rimage.dll	Support library
CtsIqa.ini	Configuration file
CtsIqaConfig.exe	Tool which allows you to configure the ini file
CtsIqaDemo.exe	Demo program which scans a document and performs the
	IQA on the image returned.

Pre-requisite for the demo programs: .net 3.5



CtsIQA.ini File Configuration Description

This file contains the customer parameter range for the tests. It is possible to configure all or only some tests, the tests not configured will not be executed and the Flag_Reply will be set to CONDITION_FLAG_NO_TESTED.

In the configuration file it is possible to configure more then one type of document separated from the index of start section [Document_Type], followed by the value, description and unit field as shown here after :

[Document_Type]
value:1
description: personal check
unit: mm or Tenths of inch
Margin Size to ignore: value
Side: Used from configuration tool
Color: Used from configuration tool

A document section ends at the bottom of the file unless another [Document_Type] label is found, each section define a type of image, bi-tonal (keyword: BW) or 256 gray levels.



Test and subsection Description

Undersize Image

Description

Check if the width or height image are below of the minimum image size base configured.

Sub section

The parameters configured in the CtsIQA.ini file are the following:

[Undersize_image]

// Configuration for bi-tonal image Undersize_image_Height_front_BW: 80 Undersize_image_Width_front_BW: 1190 Undersize_image_Height_rear_BW: 80 Undersize_image_Width_rear_BW: 1190

// Configuration for gray images Undersize_image_Height_front_Gray: 80 Undersize_image_Width_front_Gray: 1160 Undersize_image_Height_rear_Gray: 80 Undersize_image_Width_rear_Gray: 1160



Folder or Torn Document Corner

Description

Check in the given image, if one or more corners in the source document are missing or folded.

Sub section

The parameters configured in the CtsIQA.ini file are the following:

[Corner]

// Configuration for bi-tonal image Corner Height UpperLeft front BW: 20 Corner_Width_UpperLeft_front_BW: 24 Corner_Height_UpperRight_front_BW: 30 Corner Width UpperRight front BW: 36 Corner_Height_LowerLeft_front_BW: 20 Corner_Width_LowerLeft_front_BW: 16 Corner Height LowerRight front BW: 20 Corner Width LowerRight front BW: 18 Corner_Height_UpperLeft_rear_BW: 20 Corner Width UpperLeft rear BW: 24 Corner_Height_UpperRight_rear BW: 30 Corner_Width_UpperRight_rear_BW: 38 Corner_Height_LowerLeft_rear_BW: 20 Corner_Width_LowerLeft_rear_BW: 16 Corner_Height_LowerRight_rear_BW: 20 Corner_Width_LowerRight_rear_BW: 18

// Configuration for gray images Threshold to ignor Margin: 64 Corner Height UpperLeft front Grav: 20 Corner_Width_UpperLeft_front_Gray: 24 Corner Height UpperRight front Gray: 30 Corner_Width_UpperRight_front_Gray: 36 Corner_Height_LowerLeft_front_Gray: 20 Corner Width LowerLeft front Gray: 16 Corner_Height_LowerRight_front_Gray: 20 Corner_Width_LowerRight_front_Gray: 18 Corner Height UpperLeft rear Gray: 20 Corner Width UpperLeft rear Gray: 24 Corner_Height_UpperRight_rear_Gray: 30 Corner Width UpperRight rear Gray: 38 Corner_Height_LowerLeft_rear_Gray: 20 Corner_Width_LowerLeft_rear_Gray: 16 Corner_Height_LowerRight_rear_Gray: 20 Corner_Width_LowerRight_rear_Gray: 18



Folder or Torn Document Corner

Description

Check in the given image, if the edge are missing or folded.

Sub section

The parameters configured in the CtsIQA.ini file are the following:

[Edges]

// Configuration for bi-tonal image Top edge Height front BW: 8 Top_edge_Width_front_BW: 20 Bottom_edge_Height_front_BW: 6 Bottom_edge_Width_front_BW: 16 Left_edge_Height_front_BW: 40 Left_edge_Width_front_BW: 8 Right_edge_Height_front_BW: 20 Right edge Width front BW: 8 Top edge Height rear BW: 8 Top_edge_Width_rear_BW: 20 Bottom edge Height rear BW: 8 Bottom_edge_Width_rear_BW: 20 Left_edge_Height_rear_BW: 40 Left_edge_Width_rear_BW: 8 Right_edge_Height_rear_BW: 20 Right_edge_Width_rear_BW: 8

// Configuration for gray images Treshold_to_ignor_Margin: 64 Top edge Height front Gray: 20 Top_edge_Width_front_Gray: 120 Bottom_edge_Height_front_Gray: 6 Bottom_edge_Width_front_Gray: 90 Left_edge_Height_front_Gray: 80 Left_edge_Width_front_Gray: 40 Right_edge_Height_front_Gray: 96 Right_edge_Width_front_Gray: 20 Top_edge_Height_rear_Gray: 35 Top edge Width rear Gray: 530 Bottom edge Height rear Gray: 26 Bottom_edge_Width_rear_Gray: 230 Left_edge_Height_rear_Gray: 200 Left_edge_Width_rear_Gray: 90 Right_edge_Height_rear_Gray: 80 Right_edge_Width_rear_Gray: 20



Document Framming Error

Description

Check in the given image, if there are additional vertical and/or horizontal scan line, within the document image.

Sub section

The parameters configured in the CtsIQA.ini file are the following:

[Framing Error]

// Configuration for bi-tonal image
Left_edge_over_threschold_front_BW: 4
Right_edge_over_threschold_front_BW: 4
Top_edge_over_threschold_front_BW: 8
Bottom_edge_over_threschold_front_BW: 2
Left_edge_over_threschold_rear_BW: 6
Right_edge_over_threschold_rear_BW: 6
Top_edge_over_threschold_rear_BW: 10
Bottom_edge_over_threschold_rear_BW: 8

// Configuration for gray images
Treschold_to_ignor_Margin: 64
Left_edge_over_threschold_front_Gray: 9
Right_edge_over_threschold_front_Gray: 8
Top_edge_over_threschold_front_Gray: 9
Bottom_edge_over_threschold_front_Gray: 10
Left_edge_over_threschold_rear_Gray: 13
Right_edge_over_threschold_rear_Gray: 14
Top_edge_over_threschold_rear_Gray: 15
Bottom_edge_over_threschold_rear_Gray: 16



Excessive Document Skew

Description

Check if the image is aligned with the camera scanner sensor.

Sub section

The parameters configured in the $CtsIQA.ini\ file$ are the following :

[Skew]

// Configuration for bi-tonal image Skew_angle_NegativeDegrees_front_BW: 1 Skew_angle_PositiveDegrees_front_BW: 1 Skew_angle_NegativeDegrees_rear_BW: 3 Skew_angle_PositiveDegrees_rear_BW: 3

// Configuration for gray images
Treschold_to_ignor_Margin: 64
Skew_angle_NegativeDegrees_front_Gray: 1
Skew_angle_PositiveDegrees_front_Gray: 1
Skew_angle_NegativeDegrees_rear_Gray: 3
Skew_angle_PositiveDegrees_rear_Gray: 3



Oversize Image

Description

Check if the width or height of the image are above the maximum image size based on a maximum check size associated with the image capture platform.

Sub section

The parameters configured in the CtsIQA.ini file are the following:

[Oversize_image]

// Configuration for bi-tonal image Oversize_image_Height_front_BW: 8 Oversize_image_Width_front_BW: 2 Oversize_image_Height_rear_BW: 6 Oversize_image_Width_rear_BW: 6

// Configuration for gray images
Oversize_image_Height_front_Gray: 8
Oversize_image_Width_front_Gray: 2
Oversize_image_Height_rear_Gray: 6
Oversize_image_Width_rear_Gray: 6



Piggyback Documents

Description

Check if two or more documents are present and overlapped within the document image.

Sub section

The parameters configured in the CtsIQA.ini file are the following:

Test *not* implemented. (Inside the unit it's present a double leafing sensor)



Image Too Light

Description

For a bi-tonal image, check if the image having a sufficient number of black pixel, for a gray image, check if the image having sufficient contrast but insufficient brightness.

Sub section

The parameters configured in the CtsIQA.ini file are the following:

[Light]

// Configuration for bi-tonal image Image_light_Minimum_Black_Percentage_front: 10 Image_light_Minimum_Black_Percentage_rear: 10

// Configuration for gray images
Treschold_to_ignor_Margin: 64
Image_light_greyscale_front_Brightness: 240
Image_light_greyscale_front_Contrast: 360
Image_light_greyscale_rear_Brightness: 200
Image_light_greyscale_rear_Contrast: 180



Image Too Dark

Description

For a bi-tonal image, check if the image having a too many number of black pixel, for a gray image, check if the image having sufficient brightness.

Sub section

The parameters configured in the CtsIQA.ini file are the following:

[Dark]

// Configuration for bi-tonal image Image_Dark_Maximum_Black_Percentage_front: 30 Image_Dark_Maximum_Black_Percentage_rear: 20

// Configuration for gray images
Treschold_to_ignor_Margin: 64
Image_dark_greyscale_front_Brightness: 782
Image_dark_greyscale_rear_Brightness: 654



Horizontal Streaks in the Image

Description

Check if the image contains one or more dark or light horizontal streaks that extend horizontally across of the majority the entire document image.

Sub section

The parameters configured in the CtsIQA.ini file are the following:

[Streaks]

// Configuration for bi-tonal image Maximum_Height_to_Detected_BW: 10 Number_horizontalstreaks_front_BW: 2 Number_horizontalstreaks_rear_BW: 6

// Configuration for gray images Contrast_Threshold_Gray: 64 Maximum_Height_to_Detected_Gray: 10

Number_horizontalstreaks_front_Gray: 10 Number_horizontalstreaks_rear_Gray: 5



Below Minimum Compressed Image Size

Description

Check if the compressed image is too low.

Sub section

The parameters configured in the CtsIQA.ini file are the following:

[Compressed_below]

Compression_size_below_BW_front: 6000 Compression_size_below_BW_rear: 4000

// Configuration for gray images Compression_size_below_greyscale_front_Gray: 22000

Compression_size_below_greyscale_rear_Gray: 18000



Above Minimum Compressed Image Size

Description

Check if the compressed image is too big.

Sub section

The parameters configured in the CtsIQA.ini file are the following:

[Compressed_above]

// Configuration for bi-tonal image Compression_size_above_BW_front: 10000 Compression_size_above_BW_rear: 8000

// Configuration for gray images Compression_size_above_greyscale_front_Gray: 30000 Compression_size_above_greyscale_rear_Gray: 24000



Excessive "Spot Noise" in Image

Description

ONLY for bi-tonal images, check if the image containing excessive occurrence of spot noise in the image document, Spot noise is defined as a isolate small group of connected black pixels surrounded on all side by white pixel.

Sub section

The parameters configured in the CtsIQA.ini file are the following:

[Noise]

// Configuration for bi-tonal image
Maximum_Spot_noise_Count_Treschold_front_BW: 4
Maximum_Spot_noise_Count_Treschold_rear_BW: 6



Front Rear Image Dimension Mismatch

Description

Check if the width and/or height mismatch between the front and rear images of the source document.

Sub section

The parameters configured in the CtsIQA.ini file are the following:

[Front-Rear_Image]

// Configuration for bi-tonal image Max_Image_Width_Difference_BW: 24 Max_Image_Height_Difference_BW: 8

// Configuration for gray images
Max_Image_Width_Difference_Gray: 22
Max_Image_Height_Difference_Gray: 8



Carbon Strip Detected

Description

Check the presence of a carbonize band from the left to the right of the rear image document.

Sub section

The parameters configured in the CtsIQA.ini file are the following:

[Carbon_Strip]

// Configuration for bi-tonal image Minimum_Carbon_Strip_Height_BW: 3

// Configuration for gray images Carbon_Strip_Threshold: 64 Minimum_Carbon_Strip_Height_Gray: 3



Image "Out of Focus"

Description

ONLY for gray scale images, check if the image subsystem camera returning a blurred image of the document.

Sub section

The parameters configured in the CtsIQA.ini file are the following:

[Focus]

// Configuration for gray images Out_of_focus_front_Gray: 16 Out_of_focus_rear_Gray: 2



ARCA Image Quality Assurance

The functions described in this section give the possibility to check if the image captured respect the Image Quality Assurance (IQA) configured from the customer.

The LsApi.dll library uses the support library CtsIQA.dll, if not present, then the application will receive an error code LS_NO_LIBRARY_LOAD upon calling the function LSIQACheckImage() or LSIQACheckImageMemory().

In the file CtsIQA.ini it is possible to configure more then one type of document, and the function execute the test of only the sections configured for a specific document.



LSIQACheckImage

#include "LsApi.h"

Result API LSIQACheckImage(HWND hWnd,

char *pFilename Front Compressed,
char *pFilenameRearCompressed);

Description

Tests whether the given document is compliant with IQA specifications.

Parameters

hWnd

Handle of the application windows which will receive the notification messages (Reserved for future use).

DocType

Number type of a document configured in the CtsIQA.ini file.

plmageFront

Pointer to Front document image in DIB format.

plmageRear

Pointer to Rear document image in DIB format.

pFilenameFrontCompressed

String containing the Front image full pathname, it can be in TIFF or JPEG format.

pFilenameRearCompressed

String containing the Rear image full pathname, it can be in TIFF or JPEG format.

Return Value



LSIQACheckImageMemory

#include "LsApi.h"

Result API LSIQACheckImageMemory(HWND hWnd,

int DocType,
HANDLE *pImageFront,
*pImageRear,

Description

Tests whether the given document is compliant with IQA specifications.

Parameters

hWnd

Handle of the application windows which will receive the notification messages (Reserved for future use).

DocType

Number type of a document configured in the CtsIQA.ini file.

plmageFront

Pointer to Front document image in DIB format.

plmageRear

Pointer to Rear document image in DIB format.

pFrontCompressed

Pointer at the Front image, it can be in TIFF or JPEG format, returned from the relative **LSConvertToTIFF**() or **LSConvertToJPEG()** functions.

DimFrontCompressed

Size of the Front image, returned from the relative **LSConvertToTIFF**() or **LSConvertToJPEG()** functions.

pRearCompressed

Pointer at the Rear image, it can be in TIFF or JPEG format, returned from the relative **LSConvertToTIFF**() or **LSConvertToJPEG()** functions.

DimRearCompressed

Size of the Rear image, returned from the relative ${\bf LSConvertToTIFF}()$ or ${\bf LSConvertToJPEG()}$ functions.

Return Value



LSIQAGetTestsError

#include "LsApi.h"

Result API LSIQAGetTestsErrors (HWND hWnd,

CTSIQA_Tests_Errors *stTestErrorsFront, CTSIQA_Tests_Errors *stTestErrorsRear);

Description

Compile a structure with the errors occurred for each single kind of test configured. The application must compile the field *Size of the structure*.

Parameters

hWnd

Handle of the application windows which will receive the notification messages (Reserved for future use).

stTestErrorsFront

Pointer to a structure which will return the errors occurred during the tests of the front image provided to the *CTSIQACheckImageIQA* function.

stTestErrorsRear

Pointer to a structure which will return the errors occurred during the tests of the rear image provided to the CTSIQACheckImageIQA function.

Return Value

Comments

The application must compile the Size field of the structures.

Function_Parameter_Error field will be set with a general document error.

Each test compile from three to five fields, depending on type of test:

TestName_flag is a tri-state flag that indicates if the condition was tested and returns the result of the test.

TestName_error will return the error occurred, in case of more than one error the first found will be return.

TestName_Width will report the width of the item found where present.

TestName **Height** will report the height of the item found where present.

TestName_value will report the value found where present.

Description of the CTSIQA_Tests_Errors:

```
// IQA struct function reply
typedef struct IqaTestError
     long
              Size;
     long
              Function_Paramiter_Error;
     long
              Undersize_Image_flag;
     long
              Undersize_Image_error;
     long
              Undersize_Image_Width;
     long
              Undersize_Image_Height;
     long
              Document_Corners_flag;
     long
              Document Corners error;
     long
              Document Corners width;
```



```
Document Corners height;
     long
              Document_Edges_flag;
     long
     long
              Document_Edges_error;
     long
              Document_Edges_width;
     long
              Document Edges height;
     long
              Document Framing flag;
     long
              Document Framing error;
     long
              Document_Framing_left;
     long
              Document_Framing_right;
     long
              Document_Framing_top;
     long
              Document_Framing_bottom;
     long
              Document Skew flag;
     long
              Document Skew error;
              Document Skew value;
     long
     long
              Oversize_Image_flag;
     long
              Oversize Image error;
              Oversize Image Width;
     long
              Oversize Image Height;
     long
     long
              Image too Light flag;
     long
              Image_too_Light_error;
     long
              Image_too_Light_AvgBrightness;
     long
              Image_too_Light_AvgContrast;
     long
              Image_too_Light_PercentBlackPixel;
     long
              Image too Dark flag;
     long
              Image too Dark error;
     long
              Image_too_Dark_AvgBrightness;
     long
              Image_too_Dark_PercentBlackPixel;
     long
              Horizontal_Streaks_flag;
     long
              Horizontal_Streaks_error;
     long
              Horizontal_Streaks_value;
     long
              Below_Compressed_Size_flag;
              Below_Compressed_Size_error;
     long
              Below_Compressed_Size_value;
     long
              Above_Compressed_Size_flag;
     long
              Above_Compressed_Size_error;
     long
              Above_Compressed_Size_value;
     long
     long
              Spot_Noise_flag;
     long
              Spot_Noise_error;
              Spot_Noise_value;
     long
     long
              Front_Rear_Dimension_Mismatch_flag;
     long
              Front_Rear_Dimension_Mismatch_error;
     long
              Front_Rear_Dimension_Mismatch_widthdiff;
     long
              Front_Rear_Dimension_Mismatch_heightdiff;
     long
              Carbon_Strip_flag;
     long
              Carbon_Strip_error;
     long
              Out_of_Focus_flag;
     long
              Out_of_Focus_error;
              Out_of_Focus_value;
     long
} CTSIQA_TESTS_ERRORS;
```



LSIQAgetLoadIniError

#include "LsApi.h"

Result API LSIQAgetLoadIniError(HWND hWnd,

char *DetailError, long | llString);

Description

Return the error occurred during the load of the CtslQA.ini configuration file.

Parameters

hWnd

Handle of the application windows which will receive the notification messages (Reserved for future use).

DetailError

Pointer to string will contain the description of the error occurred.

IIString

Size of the string DetailError.

Return Value

CTSIQA_OKAY
CTSIQA_ERROR_TO_OPEN_FILE
CTSIQA_ERROR_ON_SYNTAX_LINE
CTSIQA_ERROR_MISSING_DOCTYPE_VALUE
CTSIQA_ERROR_ON_SYNTAX_SECTION

Comments

If more than one configuration section is wrong it will return the first error occurred.



LSIQALibraryVersion

#include "LsApi.h"

Result API LSIQALibraryVersion(char short *VersionLibrary, LengthStr);

Description

Return the library's version.

Parameters

VersionLibrary

This is a string that contain the release of the library (128 bytes long).

LengthStr

Length of the string in input.

Return Value

CTSIQA_OKAY CTSIQA_STRING_TRUNCATED



PDF/A document functions

LsApi export the possibility to save the image inside a document in PDF/A format.



LSPDFASetMetadata

#include "LSApi.h"

Result API LSPDFASetMetadata(HWND hWnd,

char *szKey, char *szValue);

Description

Store the Metadata that will be inserted in the PDF/A document.

The Metadata set are valid for all the successive documents created, is not need recall the function if not need change the metadata.

For change the value of an Metadata recall the function with the new value.

Parameters

hWnd

Handle of the application windows which will receive the notification messages (Reserved for future use).

szKey

Metadata Key string.

szValue

Value string associated at the Key.

Return Value

LS_OKAY

LS_OPEN_NOT_DONE

LS_NO_LIBRARY_LOAD

LS_SYSTEM_ERROR



LSPDFADeleteMetadata

#include "LSApi.h"

Result API LSPDFADeleteMetadata(HWND hWnd, char *szKey);

Description

Delete a stored Metadata from the memory.

Parameters

hWnd

Handle of the application windows which will receive the notification messages (Reserved for future use).

szKey

Metadata Key string.

If this parameter is set with the define PDFA_DELETE_METADATA all keys are deleted.

Return Value

LS_OKAY LS_OPEN_NOT_DONE LS_NO_LIBRARY_LOAD LS_SYSTEM_ERROR



LSPDFASaveDoc

#include "LSApi.h"

Result API LSPDFASaveDoc(short hConnect, HWND hWnd.

char *DocFilename, short TypeDocPDF, HANDLE plmageFront, long sizeImageFront, HANDLE plmageRear, long sizeImageRear);

Description

Save the PDF/S document in the path specified.

The images can be saved in the document in three different format type, JPEG, TIFF and BMP.

For save the images in JPEG or TIFF format before convert the images in the specific format calling the functions *LSConvertToJPEG()* or *LSCanvertToTIFF()*.

Parameters

hConnect

Handle returned by LSConnect

hWnd

Handle of the application windows which will receive the notification messages (Reserved for future use).

DocFilename

Path and filename string where save the document.

TypeDocPDF

Set 0, reserved for future enhancements.

plmageFront

Pointer at the front image to save in the document.

sizeImageFront

Size in bytes of the front image, set 0 if the image is in BMP format.

plmageRear

Pointer at the rear image to save in the document.

sizelmageRear

Size in bytes of the rear image, set 0 if the image is in BMP format.

Return Value

LS OKAY

LS_OPEN_NOT_DONE

LS_NO_LIBRARY_LOAD

LS SW NOT LICENSED

LS_SYSTEM_ERROR





Digital Print functions

In case where the ink-jet option is not present on the device and the image needs to be endorsed, then the digital Print functions can be used.

These functions can use any kind of Windows font and print in any place of the image an invalidation string. This invalidation string is inserted electronically in the image and can be saved afterwards in the file for archiving.



LSDigitalPrint

#include "LSApi.h"

Result API LSDigitalPrint(HWND hWnd, HANDLE hImage,

char *String, short Length, *fontName, char fontSize, int **BOOL** bold, BOOL italic, **BOOL** underline, long TextColor. short UnitMeasure,

float pos_x, float pos_y);

Description

Prints a digital invalidation string, in a given image (in BMP format)

Parameters

hWnd

Handle of the application windows which will receive the notification messages (Reserved for future use).

hlmage

Handle of the scanned image, in DIB format, where to print the invalidation *String*.

String

Invalidation string.

Length

Length of the string give in the String parameter.

fontName

Name of the window font selected.

fontSize

Size of the character font.

bold

Set character Bold stile.

TRUE = Stile selected.

FALSE = Stile unselected

italic

Set character Italic stile.

TRUE = Stile selected.

FALSE = Stile unselected

underline

Set character Underline stile.

TRUE = Stile selected.

FALSE = Stile unselected



TextColor

Gray tone of the character printed, the range value is from 0 (black) to 255

UnitMeasure

Specify whether the *pos_x*, and *pos_y* measures are expressed in millimeters or in inches.

The possible values are either **UNIT_MM** or **UNIT_INCH**.

pos_x

Specify the x co-ordinate from left margin of the document. The value must be consistent with the *UnitMeasure*.

pos_y

Specify the y co-ordinate from top margin of the document. The value must be consistent with the *UnitMeasure*.

Return Value

LS OKAY

LS_COMMAND_IN_EXECUTION_YET

LS_COMMAND_SEQUENCE_ERROR LS_OPEN_NOT_DONE

LS_SYSTEM_ERROR

LS_INVALID_UNIT



LSLoadDigitalStringWithCounter

#include "LSApi.h"

Result API LSLoadDigitalStringWithCounter(short hConnect,

HWND hWnd. char Side. char *String, short Length, unsigned long StartNumber, short Step. *fontName, char fontSize, int **BOOL** bold. BOOL italic, BOOL underline. long TextColor. short UnitMeasure, float pos_x, float pos_y);

Description

Loads the digital invalidation string, which may be printed onto the front and/or rear side of the document. It is possible to specify a starting number that will be automatically incremented or decremented for each new document. At the moment avalible only for LS150 model

Parameters

hConnect

Handle returned by LSConnect

hWnd

Handle of the application windows which will receive the notification messages (Reserved for future use).

Side

Specifies which of the document's printed sides.

SIDE_FRONT_IMAGE = Front side image **SIDE_BACK_IMAGE** = Rear side image

SIDE_ALL_IMAGE = Both Front and Rear side images

String

Invalidation string having the same syntax of the C-language PRINTF function, if in the string it is not specified the %d or %ld number, the parameter *StartNumber* and *Step* are meaningless.

Length

Length of the string given in the String parameter.

StartNumber

Starting number used in the invalidation print numeration.

Step

When greater than zero it sets the increment step applied to *StartNumber* . When less than zero it sets the decrement step applied to *StartNumber* .



fontName

Name of the window font selected.

fontSize

Size of the character font.

bold

Set character Bold stile. **TRUE** = Stile selected. **FALSE** = Stile unselected

italic

Set character Italic stile.

TRUE = Stile selected.

FALSE = Stile unselected

underline

Set character Underline stile.

TRUE = Stile selected. **FALSE** = Stile unselected

TextColor

Gray tone of the character printed, the range value is from 0 (black) to 255 (white).

UnitMeasure

Specify whether the *pos_x*, and *pos_y* measures are expressed in millimeters or in inches.

The possible values are either **UNIT_MM** or **UNIT_INCH**.

pos_x

Specify the x co-ordinate from left margin of the document. The value must be consistent with the *UnitMeasure*.

pos_y

Specify the y co-ordinate from top margin of the document. The value must be consistent with the *UnitMeasure*.

Return Value

LS_OKAY

LS_COMMAND_IN_EXECUTION_YET

LS_COMMAND_SEQUENCE_ERROR

LS_OPEN_NOT_DONE

LS_SYSTEM_ERROR

LS_INVALID_SIDE

LS_INVALID_UNIT



Security functions

These functions are made available in order to implement data integrity and be sure that the image returned by the scanner has not been altered after capture.

This is achieved with encrypted HASH codes which are inserted inside the image. The image in any case can be visible with normal imaging tools.

At the moment the signature is done only in JPEG and TIFF Gr.4 images.

The integrity can be checked by the function CTSCheckSignature().



LSSetSignatureKey

#include "LSApi.h"

Result API LSSetSignatureKey (short hConnect,

HWND hWnd,
unsigned char *Key,
short lenKey,
BOOL fUseSerialID);

Description

Set a User Key to protect the images returned from the unit from alterations.

Parameters

hConnect

Handle returned by LSConnect

hWnd

Handle of the application windows which will receive the notification messages (Reserved for future use).

Key

A sequence of hexadecimal bytes.

If the first 3 bytes are set to zero, the key and the check are disabled.

Max Key length is **LEN_SIGNATURE_KEY**.

lenKey

Length in bit of the Key, value accepted:

KEY_LENGHT_128 KEY_LENGHT_256 KEY_LENGHT_512

fUseSeriaIID

Use the internal serial ID to digitally sign the image.

TRUE – Use the Serial ID.

FALSE – Not use the Serial ID.

Return Value

LS_OKAY

LS_SYSTEM_ERROR

LS_USB_ERROR

LS PERIPHERAL NOT FOUND

LS_INVALID_KEY_LENGTH



CTSCheckImageSignature

#include "LsApi.h"

Result API CTSCheckImageSignature(unsigned char

unsigned char

*ImageFilename, *Key, lenKey, LsSerialID);

unsigned char

Description

Check the images integrity from alterations.

Parameters

ImageFilename

Pointer at the image path filename to be checked.

Key

A sequence of hexadecimal bytes. This is the same *Key* used to sign the image.

lenKey

Length in bit of the Key, value accepted:

KEY_LENGHT_128 KEY_LENGHT_256 KEY_LENGHT_512

LsSerialID

Pointer to the internal serial ID of the unit that have filmed the image or NULL if the flag fUseSerialID was set to FALSE when function LSSetSignatureKey() was called.

Return Value

LS_OKAY LS_INVALID_KEY_LENGTH LS_IMAGE_CORRUPTED LS_IMAGE_NOT_SIGNED



CTSCheckSignature

#include "LsApi.h"

Result API CTSCheckSignature(unsigned char *plmage,

long unsigned char short unsigned char lenImage, *Key, lenKey, LsSeriaIID);

Description

Check the images integrity from alterations.

Parameters

plmage

Pointer at the image to be checked.

lenImage

Dimension in bytes of the image.

Key

A sequence of hexadecimal bytes. This is the same *Key* used to sign the image.

lenKey

Length in bit of the Key, value accepted:

KEY_LENGHT_128 KEY_LENGHT_256 KEY_LENGHT_512

LsSerialID

Pointer to the internal serial ID of the unit that have filmed the image or NULL if the flag fUseSerialID was set to FALSE when function LSSetSignatureKey() was called.

Return Value

LS_OKAY LS_INVALID_KEY_LENGTH LS_IMAGE_CORRUPTED LS_IMAGE_NOT_SIGNED



LSWriteCertificate

#include "LsApi.h"

Result API LSWriteCertificate(short hConnect,

HWND hWnd, unsigned char long *pCertificate, nrBytesCert);

Description

Store a certificate p12 in the unit flash.

For now available only for the LS40 and LS100 model.

Parameters

hConnect

Handle returned by LSConnect

hWnd

Handle of the application windows which will receive the notification messages (Reserved for future use).

pCertificate

Pointer at the certificate.

nrBytesCert

Dimension in bytes of the certificate.

Return Value

LS_OKAY

LS_INVALID_PARAMETER



LSReadCertificate

#include "LsApi.h"

Result API LSReadCertificate(short hConnect,

HWND hWnd, unsigned char rpCertificate, nrBytesCert);

Description

Get a certificate p12 stored in the unit flash.

For now available only for the LS40 and LS100 model.

Parameters

hConnect

Handle returned by LSConnect

hWnd

Handle of the application windows which will receive the notification messages (Reserved for future use).

pCertificate

Pointer at the buffer where will be returned the certificate.

nrBytesCert

Dimension in bytes of the certificate.

Return Value

LS_OKAY

LS_INVALID_PARAMETER



Debug and Download functions

The functions described in this section have the purpose of helping the application developer in the debugging stages of application development. They should be used in the development phase only and afterwards removed from the production application code.

The standard DLL delivered in the base package can trace into a file if a folder named **CtsTrace** is created.

This folder must be created in the same folder as where the LsApi and the program are, and must have write rights for the user.

LsApi, when loaded, write a file when the folder is present named LsApiTrace.txt

The log files reach a maximum 4Mb bytes of size. When this happens the current file is saved with old extension and a new file is created.

Thence you must have 32M bytes of free disk space.

Latest LsApi versions (from 1.1.0.4 on) are also able to create tracefiles per transaction if the folder **CtsTrace_batch** is created.

Files named LsApiTrace_xxxxxxxxxxx.txt (where xxxxxxxxxx is a timing reference) will be created

ATTENTION: in this mode you must make sure to delete the files or remove the CtsTrace_batch folder otherwise your hard disk will become full.

Trace files include useful information during application debug phase .

This file is usually requested by ARCA technical support group should an issue occur during the application development.

It is possible to create a tracefile in a path which is defined by the user in LsApi.ini file in Logging section.

This logs modality work as the batch trace.

It is possible set the folder trace in the registry.

for 32 bit system set the following registry key,

HKEY_LOCAL_MACHINE\SOFTWARE\ARCA Technologies\

for 64 bit system set the following registry key,

HKEY_LOCAL_MACHINE\SOFTWARE\ Wow6432Node\ARCA Technologies\

And set the two keys as show,

TraceEnabled = 1

TracePath = The complete folder path.



LSViewOCRRectangle

#include "LSApi.h"

Result API LSViewOCRRectangle(HWND hwnd, BOOL fView);

Description

This function causes the drawing of a red rectangle around the document area that will be OCR decoded with the function *LSCodelineReadFromBitmap()*.

Parameters

hwnd

Handle of the application windows which will receive the notification messages (Reserved for future use).

fView

TRUE = enable the drawing of the rectangle. **FLASE** = disable the drawing of the rectangle.

Return Value

LS_OKAY



LSDownloadFirmware

#include "LSApi.h"

Result API LSDownloadFirmware(short hConnect,

HWND hwnd, char *FileFw,

int (*userfunc1)(char *Item));

Description

The function send the new firmware at the peripheral, one item for time.

Parameters

hConnect

Handle returned by LSConnect

Hwnd

Handle of the application windows which will receive the notification messages (Reserved for future use).

FileFw

Full pathname of the file that contains the firmware to download.

(*userfunc1)(char *Item)

Address of an application defined call-back function that will get in *Item* the same string of firmware code sent to the device. This mechanism is provided for download monitoring purpose from the application.

This parameter can be also set to NULL.

Return Value

LS_OKAY

LS_COMMAND_IN_EXECUTION_YET

LS_COMMAND_SEQUENCE_ERROR

LS_MISSING_FILENAME

LS_OPEN_NOT_DONE

LS_OPEN_FILE_ERROR_OR_NOT_FOUND



Application Program Guideline

This is a brief description on how to use LS functions to develop an application program. The logical flow of the commands should be structured as in the following three examples:

1. Manual document handling (LS40, LS100, LS150, LS5xx):

LSConnect /* Logical connection to the device */

LSIdentify /* Device identification */

LSReadBadge /* Badge read */

LSLoadString /* Load invalidation string */

LSConfigDoubleLeafingAndDocLength /* Set double leafing parameters */

LSDocHandle /* Execute physical document handling */

LSReadCodeline /* Read document codeline data */

/* Read document image */ LSReadImage LSFreeImage /* Free memory buffers */ /* Disconnect from device */ LSDisconnect

2. Advanced document handling (LS40, LS100, LS150, LS5xx):

LSConnect /* Logical connection to the device*/

LSIdentify /* Device identification */

. LSReadBadge /* Badge read */

/* Load invalidation string */ LSLoadString

LSConfigDoubleLeafingAndDocLength /* Set double leafing parameters */ LSAutoDocHandle /* Execute automatic document handling */

LSGetDocData /* Retrieve the documents information */

LSDisconnect /* Disconnect from device */

3. Manual document handling for retained document (LS40, LS100):

/* Logical connection to the devicel */ LSConnect

/* Device identification */ LSIdentify

/* Badge read */ LSReadBadge

/* Load invalidation string */ LSLoadString

LSConfigDoubleLeafingAndDocLength /* Set double leafing parameters */ LSDocHandle /* Execute physical document handling with retain

parameter */

LSReadCodeline /* Read document codeline data if needed */

LSReadImage /* Read document image if needed */ /* Free memory buffers if needed */ LSFreeImage

LSDocHandle /* Execute physical document handling with sorter

parameter */

LSReadImage /* Read document image if needed */ /* Free memory buffers if needed */ LSFreeImage

/* Disconnect from device */ LSDisconnect

4. Advanced document handling (LS800):



LSConnect /* Logical connection to the device*/

LSIdentify /* Device identification */

.

LSConfigDoubleLeafingAndDocLength /* Set double leafing parameters */ LS800AutoDocHandle /* Execute automatic document handling */

Decide ENDORSEMENT and pocket on callback function

LSGetDocData /* Retrieve the documents information */

LSDisconnect /* Disconnect from device */

Note:

- **LSIdentify** allows the application to get specific information about device configuration and capabilities.
- Document handling functions must be used only inside a document handling session.
- To release the image memory allocated by the service use LSFreeImage.
- LSConvertImageToBW can be used only for manual document handling.
- To use LSSaveJpeg, LSDisplayImage, LSUpdateImage it is necessary to install the complete software distribution kit.

ATTENTION:

When the application calls LSConnect, the LS service tries to load the additional module IMG UTIL.DLL.

If this module is not present the service disables the use of the additional functions. If IMG_UTIL.DLL is found then the following additional DLL's are also required :

LFBMP13N.DLL

LFCMP13N.DLL

LFFAX13N.DLL

LTDIS13N.DLL

LTDLG13N.DLL

LTFIL13N.DLL

LTIMG13N.DLL

LTKRN13N.DLL

LTEFX13N.DLL

otherwise the system will display a "Unable to locate DLL" message box.



Sample code

Sample code in C language for the LS515 extracted from LSW5 demo code.

There are two different functions, the first one is for the manual handling of documents, the second one for the automatic one.

DoSingleDocHandle()

```
int DoSingleDocHandle(HWND hWnd)
               Reply, ReplyDH;
       int
               X, Y, Size;
       short
               dirBase[_MAX_DIR];
       char
               Filename[_MAX_FNAME];
       char
       char BufCodelineHW[CODE_LINE_LENGTH];
       char BufBarcode[CODE_LINE_LENGTH];
       char BufCodelineSW[CODE_LINE_LENGTH];
       short llCodeline:
       short len_barcode;
               CodelineType;
       char
       short
               Sorter;
       short StopAfterCodeline;
       READOPTIONS ro;
       unsigned char SenseKey;
       unsigned char StatusByte[4];
       char SideToFilm;
       NrCheque ++;
       //-----LoadString------
       if((stParDocHandle.Validate == PRINT_VALIDATE) &&
(strlen(stParDocHandle.szValidateText)))
               if( strstr(stParDocHandle.szValidateText, "%d") )
                      Reply = LSLoadStringWithCounter(hLS,
                                      hWnd,
                                      (char)(stParDocHandle.PrintBold?FORMAT_BOLD:
FORMAT_NORMAL),
                                      stParDocHandle.szValidateText,
                                      8,
                                      3);
               else
                      Reply = LSLoadString(hLS,
                                      hWnd,
                                      (char)(stParDocHandle.PrintBold?FORMAT_BOLD:
FORMAT_NORMAL),
                                      (short)strlen(stParDocHandle.szValidateText),
                                      stParDocHandle.szValidateText);
               if (Reply != LS_OKAY)
```



```
if (CheckReply(hWnd, Reply, "LSLoadString"))
                       {
                               return Reply;
                       }
               }
       }
       // Send the command of draw red rectangle
       LSViewOCRRectangle(hWnd, fViewOCRRectangle);
        // Send the command for handle the image
       LSEnableImageCorrection(hLS, hWnd, fImageCorrection);
       if( TypeLS == TYPE_LS510S || TypeLS == TYPE_LS510D ||
               TypeLS == TYPE_LS515S || TypeLS == TYPE_LS515D )
       {
                //----- Set sorter criteria, if required
               if( stParDocHandle.Sorter == SORTER_AUTOMATIC )
                       Reply = LSSetSorterCriteria(hLS,
                                               stParDocHandle.DataSorter,
                                               MAX_CRITERIA);
                       if( Reply != LS_OKAY )
                               if(CheckReply(hWnd, Reply, "LSSetSorterCriteria"))
                                       return 0;
                       }
               }
                //----- Set double leafing sensibility -----
               Reply = LSDoubleLeafingSensibility(hLS, hWnd, 0,
stParDocHandle.DoubleLeafingLevel);
               if (Reply != LS_OKAY)
                       if (CheckReply(hWnd, Reply, "LSDuobleLeafingSensibility"))
                       {
                               return 0;
                       }
               }
                //----- Set Block Document if double leafing -----
               Reply = LSConfigDoubleLeafing(hLS, hWnd,
                                       (short)(stParDocHandle.DoubleLeafingBlock?
                               DOUBLE_LEAFING_ERROR : DOUBLE_LEAFING_WARNING));
               if (Reply != LS_OKAY)
                       if( CheckReply(hWnd, Reply, "LSConfigDoubleLeafing"))
                               return 0;
               }
       }
```



```
// set fixed params for the LS500_DocHandle
       sprintf(dirBase, "%s%s", PathAppl, SAVE_DIRECTORY_IMAGE);
       strcpy(Filename, NAME_IMAGE);
       if( (stParDocHandle.CodelineType == READ_CODELINE_SW_OCRA) ||
               (stParDocHandle.CodelineType == READ_CODELINE_SW_OCRB_NUM) )
               CodelineType = NO_READ_CODELINE;
              X = 16;
               Y = 16;
               Size = -1;
              if( stParDocHandle.ScanMode == SCAN_MODE_16GR200 )
               {
                      X *= 2;
                      Y *= 2;
              }
       }
       else
               CodelineType = stParDocHandle.CodelineType;
       // in case of CheckCodeline I force the film of the image
       if((stParDocHandle.DoCheckCodeline) &&
               (stParDocHandle.Side == SIDE_NONE_IMAGE))
               SideToFilm = SIDE_FRONT_IMAGE;
       else
               SideToFilm = stParDocHandle.Side;
       //-----DocHandle-----
       ReplyDH = LSDocHandle(hLS,
                                              hWnd,
                                              stParDocHandle.Stamp,
                                              stParDocHandle.Validate,
                                              CodelineType,
                                              SideToFilm,
                                              stParDocHandle.ScanMode,
                                              (short)(stParDocHandle.LinearEntry ==
TRUE ? PATH_FEED : AUTO_FEED),
                                              stParDocHandle.Sorter.
                                              stParDocHandle.WaitTimeout,
                                              stParDocHandle.BeepOnError,
                                              NULL,
                                              0,
                                              0);
       if( ReplyDH != LS_OKAY && ReplyDH != LS_KEEP_DOC_ON_CODELINE_ERROR )
               if( ReplyDH != LS_DOUBLE_LEAFING_WARNING )
                      if( CheckReply(hWnd, ReplyDH, "LSDocHandle"))
                      {
                              return ReplyDH;
                      }
       }
```



```
// Read image and codeline
// free bitmaps
if( BufBackNettoImage )
       GlobalFree( BufBackNettoImage );
       BufBackNettoImage = 0;
if(BufBackImage)
       GlobalFree( BufBackImage );
       BufBackImage = 0;
if( BufFrontNettoImage )
       GlobalFree( BufFrontNettoImage );
       BufFrontNettoImage = 0;
if(BufFrontImage)
       GlobalFree(BufFrontImage);
       BufFrontImage = 0;
}
memset((char *)BufCodelineHW, 0, sizeof(BufCodelineHW));
memset((char *)BufBarcode,
                                      0, sizeof(BufBarcode));
memset((char *)BufCodelineSW, 0, sizeof(BufCodelineSW));
llCodeline = CODE_LINE_LENGTH;
len_barcode = CODE_LINE_LENGTH;
//-----Read Codeline hardware-----
if((!stParDocHandle.LinearEntry) &&
       (stParDocHandle.CodelineType == READ_CODELINE_MICR ||
       stParDocHandle.CodelineType == READ_BARCODE_HW ||
        stParDocHandle.CodelineType == READ_MICR_AND_BARCODE_HW) )
{
       Reply = LSReadCodeline(hLS,
                                               hWnd.
                                               BufCodelineHW,
                                               &llCodeline.
                                               BufBarcode,
                                               &len_barcode,
                                               NULL,
                                               NULL);
       if( Reply != LS_OKAY)
               if( CheckReply(hWnd, Reply, "LSReadCodeline"))
                       return Reply;
               }
       }
}
StopAfterCodeline = FALSE;
```



// Read images only if DocHandle is OK

```
if(((ReplyDH == LS_OKAY) || (ReplyDH == LS_DOUBLE_LEAFING_WARNING)) &&
               (Reply == LS_OKAY))
               //-----ReadImage-----
               if( SideToFilm != SIDE_NONE_IMAGE )
               {
                      Reply = LSReadImage(hLS,
                                      hWnd,
                                      stParDocHandle.ClearBlack,
                                      SideToFilm,
                                      stParDocHandle.ReadMode,
                                      &BufFrontImage,
                                      &BufBackImage,
                                      &BufFrontNettoImage,
                                      &BufBackNettoImage);
                      if (Reply != LS_OKAY)
                              if((Reply == LS_IMAGE_NOT_PRESENT ) &&
                                      (stParDocHandle.Sorter == SORTER_AUTOMATIC))
                              {
                                      StopAfterCodeline = TRUE;
                              }
                              else
                              {
                                      if( CheckReply(hWnd, Reply, "LSReadImage"))
                                             return Reply;
                                      }
                              }
                      }
                      if( stParDocHandle.TypeOfDecod & DECODE_BARCODE )
                      {
                              Reply = LSReadBarcodeFromBitmap(hWnd,
                                                            BufFrontImage,
       stParDocHandle.Barcodetype,
       (int)stParDocHandle.Barcode_Sw_x,
       (int)stParDocHandle.Barcode_Sw_y,
       (int)stParDocHandle.Barcode_Sw_w,
       (int)stParDocHandle.Barcode_Sw_h,
                                                             BufBarcode,
                                                             (UINT *)&len_barcode);
                              if (Reply != LS_OKAY)
                                      CheckReply(hWnd, Reply,
"LS500_ReadBarcodeFromBitmap");
                      }
```



```
}
               if( (StopAfterCodeline == FALSE) &&
                       ((stParDocHandle.Side == SIDE_ALL_IMAGE) ||
                       (stParDocHandle.Side == SIDE_FRONT_IMAGE)) )
               {
                       if( ((stParDocHandle.CodelineType == READ_CODELINE_SW_OCRA) ||
                               (stParDocHandle.CodelineType ==
READ_CODELINE_SW_OCRB_NUM))
                               && (hOCRLibrary))
                       {
                               ro.PutBlanks = TRUE;
                               ro.TypeRead = 'N';
                               Reply = LSReadCodelineFromBitmap(hWnd,
                                                              BufFrontImage,
                                                              (char
*)&stParDocHandle.CodelineType,
                                                              X,
                                                              Y,
                                                              Size,
                                                              MAX_PIXEL_HEIGHT,
                                                              &ro,
                                                              BufCodelineSW,
                                                              (UINT *)&llCodeline);
                               if (Reply != LS_OKAY)
                                      if( CheckReply(hWnd, Reply,
"LSReadCodelineFromBitmapEx"))
                                      {
                                              return Reply;
                                      }
                              }
                       }
               }
               if(!StopAfterCodeline)
                       if(!stParDocHandle.ViewOnlyLastImage)
                               if( (fOptionViewImage == TRUE) &&
(!stParDocHandle.DoCheckCodeline))
                                       ShowCodelineAndImage(ReplyDH,
                                                              NrCheque,
                                                              stParDocHandle.Side,
                                                              (unsigned char
*)BufFrontImage,
                                                              (unsigned char
*)BufBackImage,
                                                              (unsigned char
*)BufFrontNettoImage,
                                                              (unsigned char
*)BufBackNettoImage,
                                                              BufCodelineSW,
                                                              BufCodelineHW,
                                                              BufBarcode.
```



```
""):
                               } // if fOptionViewImage
                       } // if(!stParDocHandle.ViewOnlyLastImage)
               }
               if(stParDocHandle.SaveImage == IMAGE_SAVE_BOTH)
               {
                       // richiesto salvataggio file
                       switch(stParDocHandle.SaveFormat)
                       case SAVE_JPEG:
                               if(BufBackImage)
                                       // build filename
                                       sprintf(SaveFile, "%s\\%s%dBB.jpg",
SAVE_DIRECTORY_IMAGE, NAME_IMAGE, NrFileJPEG);
                                       Reply = LSSaveJPEG(hWnd, BufBackImage,
stParDocHandle.Qual, SaveFile );
                               if( BufFrontImage )
                               {
                                       // build filename
                                       sprintf(SaveFile, "%s\\%s%dFF.jpg",
SAVE_DIRECTORY_IMAGE, NAME_IMAGE, NrFileJPEG);
                                       Reply = LSSaveJPEG(hWnd, BufFrontImage,
stParDocHandle.Qual, SaveFile );
                               NrFileJPEG ++;
                               break;
                       case SAVE_BMP:
                               if(BufBackImage)
                               {
                                       // build filename
                                       sprintf(SaveFile, "\%s \backslash \ \%s\%dBB.bmp",
SAVE_DIRECTORY_IMAGE, NAME_IMAGE, NrFileBMP);
                                       Reply = LSSaveDIB(hWnd, BufBackImage, SaveFile );
                               }
                               if( BufFrontImage )
                                       // build filename
                                       sprintf(SaveFile, "%s\\%s%dFF.bmp",
SAVE_DIRECTORY_IMAGE, NAME_IMAGE, NrFileBMP);
                                       Reply = LSSaveDIB(hWnd, BufFrontImage, SaveFile );
                               }
                               NrFileBMP ++;
                               break;
                       case FILE_TIF:
                       case FILE_CCITT:
                       case FILE_CCITT_GROUP3_1DIM:
                       case FILE_CCITT_GROUP3_2DIM:
                       case FILE_CCITT_GROUP4:
```



```
if(BufBackImage)
                                       // build filename
                                       sprintf(SaveFile, "%s\\%s%dBB.tiff",
SAVE_DIRECTORY_IMAGE, NAME_IMAGE, NrFileTIFF);
                                       Reply = LSSaveTIFF(hWnd, BufBackImage, SaveFile,
stParDocHandle.SaveFormat,SAVE_OVERWRITE,1);
                               if(BufFrontImage)
                                       // build filename
                                       sprintf(SaveFile, "%s\\%s%dFF.tiff",
SAVE_DIRECTORY_IMAGE, NAME_IMAGE, NrFileTIFF);
                                       Reply = LSSaveTIFF(hWnd, BufFrontImage, SaveFile,
stParDocHandle.SaveFormat,SAVE_OVERWRITE, 1);
                               NrFileTIFF ++;
                               break:
                       }
               }
               //save images
               if( Save_BufBackNettoImage )
                       GlobalFree( Save_BufBackNettoImage );
               Save_BufBackNettoImage = BufBackNettoImage;
               BufBackNettoImage = 0;
               if( Save_BufBackImage )
                       GlobalFree( Save_BufBackImage );
               Save_BufBackImage = BufBackImage;
               BufBackImage = 0;
               if( Save_BufFrontNettoImage )
                       GlobalFree( Save_BufFrontNettoImage );
               Save_BufFrontNettoImage = BufFrontNettoImage;
               BufFrontNettoImage = 0;
               if( Save_BufFrontImage )
                       GlobalFree( Save_BufFrontImage );
               Save_BufFrontImage = BufFrontImage;
               BufFrontImage = 0;
               //save codelines
               memcpy(Save_BufCodelineSW, BufCodelineSW, sizeof(Save_BufCodelineSW));
               memcpy(Save_BufCodelineHW, BufCodelineHW, sizeof(Save_BufCodelineHW));
               memcpy(Save_BufBarcode, BufBarcode, sizeof(Save_BufBarcode));
       }
       memset(CodelineRead, 0, sizeof(CodelineRead));
       if( BufCodelineHW[0] )
               strcpy(CodelineRead, BufCodelineHW);
       else if( BufBarcode[0] )
               strcpy(CodelineRead, BufBarcode);
```



```
else if( BufCodelineSW[0] )
               strcpy(CodelineRead, BufCodelineSW);
       if((stParDocHandle.DoCheckCodeline) &&
                      (stParDocHandle.CodelineType != NO_READ_CODELINE) )
               {
                      CheckCodeline(hWnd, CodelineRead, TRUE, (char *)BufFrontImage);
              }
       if( (stParDocHandle.Sorter == HOLD_DOCUMENT) ||
               (fDocRetained && (ReplyDH == LS_KEEP_DOC_ON_CODELINE_ERROR)) ||
               (StopAfterCodeline))
       {
               Sorter = (short)DialogBox(hInst, MAKEINTRESOURCE(IDD_SORTER), hWnd,
SorterDlgProc);
               //-----LoadString-----
               if( (stParDocHandle.SorterValidate == PRINT_VALIDATE) &&
(strlen(stParDocHandle.SorterszValidateText)) )
                      Reply = LSLoadString(hLS,
                                             hWnd,
                                             (char)(stParDocHandle.SorterPrintBold?
FORMAT_BOLD: FORMAT_NORMAL),
(short)strlen(stParDocHandle.SorterszValidateText),
                                             stParDocHandle.SorterszValidateText);
                      if( Reply != LS_OKAY) //&& (Reply !=
LS_KEEP_DOC_ON_CODELINE_ERROR))
                              if (CheckReply(hWnd, Reply, "LSLoadString"))
                                     return Reply;
                              }
                      }
              }
               //-----DocHandle-----
               Reply = LSDocHandle(hLS,
                                                    stParDocHandle.SorterStamp,
                                                    stParDocHandle.SorterValidate,
                                                    NO_READ_CODELINE,
                                                    stParDocHandle.SorterSide,
                                                    stParDocHandle.ScanMode,
                                                    PATH_FEED,
                                                    Sorter,
                                                    stParDocHandle.WaitTimeout,
                                                    stParDocHandle.BeepOnError,
                                                    NULL,
                                                    0,
                                                    0);
              if( Reply != LS_OKAY )
                      if( CheckReply(hWnd, Reply, "LSDocHandle") )
                              return Reply;
```



```
}
       }
       // read image and codeline
       if( BufBackNettoImage )
               GlobalFree(BufBackNettoImage);
               BufBackNettoImage = 0;
       if( BufBackImage )
       {
               GlobalFree( BufBackImage );
               BufBackImage = 0;
       if( BufFrontNettoImage )
               GlobalFree( BufFrontNettoImage );
               BufFrontNettoImage = 0;
       if( BufFrontImage )
               GlobalFree(BufFrontImage);
               BufFrontImage = 0;
       }
       if( Reply == LS_OKAY )
               //-----ReadImage-----
               if( stParDocHandle.SorterSide != SIDE_NONE_IMAGE )
               {
                      Reply = LSReadImage(hLS,
                                                             hWnd,
stParDocHandle.ClearBlack,
stParDocHandle.SorterSide,
stParDocHandle.ReadMode,
                                                             &BufFrontImage,
                                                             &BufBackImage,
&BufFrontNettoImage,
&BufBackNettoImage);
                      if (Reply != LS_OKAY)
                              if( CheckReply(hWnd, Reply, "LSReadImage"))
                                      return Reply;
                              }
                      }
               }
```



```
if( (stParDocHandle.SorterSide == SIDE_ALL_IMAGE) ||
                               (stParDocHandle.SorterSide == SIDE_FRONT_IMAGE))
                       {
                               if( ((stParDocHandle.CodelineType ==
READ_CODELINE_SW_OCRA) ||
                                       (stParDocHandle.CodelineType ==
READ_CODELINE_SW_OCRB_NUM))
                                       && (hOCRLibrary))
                               {
                                       ro.PutBlanks = TRUE;
                                       ro.TypeRead = 'N';
                                       LSReadCodelineFromBitmap(hWnd,
                                                              BufFrontImage,
                                                              (char
*)&stParDocHandle.CodelineType,
                                                               X,
                                                               Y,
                                                               Size,
                                                               MAX_PIXEL_HEIGHT,
                                                               BufCodelineSW,
                                                               (UINT *)&llCodeline);
                                       if (Reply != LS_OKAY)
                                              if( CheckReply(hWnd, Reply,
"LSReadCodelineFromBitmapEx"))
                                              {
                                                      return Reply;
                                              }
                                      }
                               }
                       }
                       if( fOptionViewImage == TRUE )
                               ShowCodelineAndImage(Reply,
                                                      NrCheque,
                                                      stParDocHandle.SorterSide,
                                                      (unsigned char *)BufFrontImage,
                                                      (unsigned char *)BufBackImage,
                                                      (unsigned char
*)BufFrontNettoImage,
                                                      (unsigned char *)BufBackNettoImage,
                                                      BufCodelineSW,
                                                      BufCodelineHW,
                                                      BufBarcode,
                                                      "");
                       } // if fOptionViewImage
                       if(stParDocHandle.SaveImage == IMAGE_SAVE_BOTH)
                               // richiesto salvataggio file
                               switch(stParDocHandle.SaveFormat)
                               case SAVE_JPEG:
```



```
if(BufBackImage)
                                      {
                                              // build filename
                                              sprintf(SaveFile, "%s\\%s%dBB.jpg",
SAVE_DIRECTORY_IMAGE, NAME_IMAGE, NrFileJPEG);
                                              Reply = LSSaveJPEG(hWnd, BufBackImage,
stParDocHandle.Qual, SaveFile );
                                      }
                                      if(BufFrontImage)
                                              // build filename
                                              sprintf(SaveFile, "%s\\%s%dFF.jpg",
SAVE_DIRECTORY_IMAGE, NAME_IMAGE, NrFileJPEG);
                                              Reply = LSSaveJPEG(hWnd, BufFrontImage,
stParDocHandle.Qual, SaveFile);
                                      }
                                      NrFileJPEG ++;
                                      break;
                               case SAVE_BMP:
                                      if(BufBackImage)
                                      {
                                              // build filename
                                              sprintf(SaveFile, "%s\\%s%dBB.bmp",
SAVE_DIRECTORY_IMAGE, NAME_IMAGE, NrFileBMP);
                                              Reply = LSSaveDIB(hWnd, BufBackImage,
SaveFile );
                                      }
                                      if(BufFrontImage)
                                              // Costruisco nome file completo
                                              sprintf(SaveFile, "%s\\%s%dFF.bmp",
SAVE_DIRECTORY_IMAGE, NAME_IMAGE, NrFileBMP);
                                              Reply = LSSaveDIB(hWnd, BufFrontImage,
SaveFile );
                                      }
                                      NrFileBMP ++:
                                      break;
                              case FILE_TIF:
                               case FILE_CCITT:
                               case FILE_CCITT_GROUP3_1DIM:
                               case FILE_CCITT_GROUP3_2DIM:
                              case FILE_CCITT_GROUP4:
                                      if(BufBackImage)
                                              // build filename
                                              sprintf(SaveFile, "%s\\%s%dBB.tiff",
SAVE_DIRECTORY_IMAGE, NAME_IMAGE, NrFileTIFF);
                                              Reply = LSSaveTIFF(hWnd, BufBackImage,
SaveFile, stParDocHandle.SaveFormat,SAVE_OVERWRITE,1);
                                      }
```



```
if(BufFrontImage)
                                       {
                                               // build filename
                                               sprintf(SaveFile, "%s\\%s%dFF.tiff",
SAVE_DIRECTORY_IMAGE, NAME_IMAGE, NrFileTIFF);
                                               Reply = LSSaveTIFF(hWnd, BufFrontImage,
SaveFile, stParDocHandle.SaveFormat,SAVE_OVERWRITE, 1);
                                       NrFileTIFF ++;
                                       break;
                               }
               } // if( Reply == LS_OKAY )
       }
       // more docs?
       if( Reply == LS_OKAY )
               if( LSPeripheralStatus(hLS, hWnd, &SenseKey, StatusByte) == LS_OKAY )
               {
                       if(!(StatusByte[0] & FEEDER_EMPTY))
                               Reply = LS_FEEDER_EMPTY;
               }
       }
       return Reply;
} // End DoSingleDocHandle
```

DoAutoDocHandle()

```
int DoAutoDocHandle(HWND hWnd)
{
       int
                      Reply;
       char
               dirBase[_MAX_DIR];
       char
               Filename[_MAX_FNAME];
       char
               BufFrontFile[_MAX_PATH];
       char
               BufFrontNettoFile[_MAX_PATH];
               BufBackFile[_MAX_PATH];
       char
               BufBackNettoFile[_MAX_PATH];
       char
               BufCodelineSW[CODE_LINE_LENGTH];
       char
       char
               BufCodelineHW[CODE_LINE_LENGTH];
               BufBarcode[CODE_LINE_LENGTH];
       char
       READOPTIONS ro;
       short len_codeline, len_barcode = CODE_LINE_LENGTH;
               WaitCom:
       char
       MSG
       short
               NumDocRemain;
       short
               NrDocToProcess;
                      ReplyFunz = 0;
       int
       short
               CodelineType;
               SideToFilm;
       char
```



```
char TypeOfDecod;
       char
               nOutGrade;
       FILE
               *fhCodeline = NULL;
       float C_x,C_y,C_w,C_h;
       if( stParDocHandle.NumDoc )
               NrDocToProcess = stParDocHandle.NumDoc;
       else
               NrDocToProcess = -1;
       if(( stParDocHandle.TypeOfDecod & DECODE_OCR )&& (stParDocHandle.Side ==
SIDE_NONE_IMAGE ))
               SideToFilm = SIDE_FRONT_IMAGE;
       //-----LoadString-----
       if( (stParDocHandle.Validate == PRINT_VALIDATE) &&
(strlen(stParDocHandle.szValidateText)))
               if( strstr(stParDocHandle.szValidateText, "%d") )
                      Reply = LSLoadStringWithCounter(hLS,
       hWnd,
       (char)(stParDocHandle.PrintBold?FORMAT_BOLD:FORMAT_NORMAL),
       stParDocHandle.szValidateText,
                                                                                   8,
                                                                                   3);
               else
                      Reply = LSLoadString(hLS,
                                      hWnd,
                                      (char)(stParDocHandle.PrintBold?FORMAT_BOLD:
FORMAT_NORMAL),
                                      (short)strlen(stParDocHandle.szValidateText),
                                      stParDocHandle.szValidateText);
               if (Reply != LS_OKAY)
                      if (CheckReply(hWnd, Reply, "LSLoadString"))
                              return 0:
                      }
               }
       }
       // Send the command of draw red rectangle
       LSViewOCRRectangle(hWnd, fViewOCRRectangle);
       // Send the command for handle the image
       LSEnableImageCorrection(hLS, hWnd, fImageCorrection);
       if( TypeLS == TYPE_LS505 || TypeLS == TYPE_LS510S || TypeLS == TYPE_LS510D ||
               TypeLS == TYPE_LS515S || TypeLS == TYPE_LS515D )
               //----- Change stamp position -----
```



```
Reply = LSChangeStampPosition(hLS, hWnd, stParDocHandle.StampPosition, 0);
       }
       if( TypeLS == TYPE_LS510S || TypeLS == TYPE_LS510D ||
               TypeLS == TYPE_LS515S || TypeLS == TYPE_LS515D )
               Reply = LSDoubleLeafingSensibility(hLS, hWnd, 0,
stParDocHandle.DoubleLeafingLevel);
               if (Reply != LS_OKAY)
                       if (CheckReply(hWnd, Reply, "LSDoubleLeafingSensibility"))
                               return 0;
                       }
               }
               //----- Set Block Document if double leafing -----
               Reply = LSConfigDoubleLeafing(hLS, hWnd,
(short)(stParDocHandle.DoubleLeafingBlock? DOUBLE_LEAFING_ERROR:
DOUBLE_LEAFING_WARNING));
               if (Reply != LS_OKAY)
                       if( CheckReply(hWnd, Reply, "LSConfigDoubleLeafing"))
                               return 0;
                       }
               }
               //----- Set sorter criteria if needed
               if( stParDocHandle.Sorter == SORTER_AUTOMATIC )
               {
                       Reply = LSSetSorterCriteria(hLS,
                                              hWnd,
                                              stParDocHandle.DataSorter,
                                              MAX_CRITERIA);
                       if( Reply != LS_OKAY )
                               if( CheckReply(hWnd, Reply, "LSSetSorterCriteria") )
                                       return 0;
                               }
                       }
               }
       }
       sprintf(dirBase, "%s%s", PathAppl, SAVE_DIRECTORY_IMAGE);
       strcpy(Filename, NAME_IMAGE);
       TypeOfDecod = stParDocHandle.TypeOfDecod;
       CodelineType = NO_READ_CODELINE;
       if( stParDocHandle.TypeOfDecod & DECODE_MICR )
       {
               CodelineType = READ_CODELINE_MICR;
               TypeOfDecod -= DECODE_MICR;
       else if( stParDocHandle.TypeOfDecod & DECODE_OCR )
```



```
C_x = stParDocHandle.Codeline_Sw_x;
               C_y = stParDocHandle.Codeline_Sw_y;
               C_w = stParDocHandle.Codeline_Sw_w;
               C_h = stParDocHandle.Codeline_Sw_h;
               TypeOfDecod -= DECODE_OCR;
       else if( stParDocHandle.TypeOfDecod & DECODE_BARCODE )
               CodelineType = NO_READ_CODELINE;
               C_x = stParDocHandle.Barcode_Sw_x;
               C_y = stParDocHandle.Barcode_Sw_y;
               C_w = stParDocHandle.Barcode_Sw_w;
               C_h = stParDocHandle.Barcode_Sw_h;
              TypeOfDecod -= DECODE_BARCODE;
       else if( stParDocHandle.TypeOfDecod & DECODE_PDF417 )
               CodelineType = NO_READ_CODELINE;
               TypeOfDecod -= DECODE_PDF417;
       }
       if( fStopLoopOnError )
               BuilderParam.StopLoopOnErrorInCodeline = TRUE;
       else
               BuilderParam.StopLoopOnErrorInCodeline = FALSE;
       if((stParDocHandle.DoCheckCodeline) &&
               (stParDocHandle.Side == SIDE_NONE_IMAGE) )
               SideToFilm = SIDE_FRONT_IMAGE;
       else
               SideToFilm = stParDocHandle.Side;
       //-----AutoDocHandle-----
       BuilderParam.Beep = TRUE;
                                     //FALSE;
       LSBuilderSetting(hWnd, (void *)&BuilderParam);
       Reply = LSAutoDocHandle(hLS,
                              hWnd,
                              stParDocHandle.Stamp,
                              stParDocHandle.Validate,
                              CodelineType,
                              stParDocHandle.ScanMode,
                              AUTO_FEED,
                                             //(short)(stParDocHandle.LinearEntry ==
TRUE ? SCAN_FEED : AUTO_FEED),
                              stParDocHandle.Sorter,
                              stParDocHandle.NumDoc,
                              stParDocHandle.ClearBlack,
                              SideToFilm,
                              stParDocHandle.ReadMode,
                              stParDocHandle.SaveImage,
                              dirBase.
                              Filename,
```

CodelineType = NO_READ_CODELINE;



```
(float)stParDocHandle.Codeline_Sw_x,
                               (float)stParDocHandle.Codeline_Sw_y,
                               (float)stParDocHandle.Codeline_Sw_w,
                               0,
                               OCR_FRONT_IMAGE,
                               stParDocHandle.SaveFormat,
                               stParDocHandle.Qual,
                               SAVE_OVERWRITE,
                                                       // 0,
                                       // 0,
                               stParDocHandle.WaitTimeout,
                               stParDocHandle.BeepOnError,
                               NULL,
                               NULL,
                               NULL);
       if (Reply != LS_OKAY)
               if( (Reply != LS_FEEDER_EMPTY) && (Reply !=
LS_DOUBLE_LEAFING_WARNING))
                       if (CheckReply(hWnd, Reply, "LSExtAutoDocHandle"))
                       {
                               return 0;
                       }
               }
                else
                       Reply = LS_OKAY;
                                                               }
       if( stParDocHandle.SaveCodeline )
               strcpy(FullFName, PathAppl);
               strcat(FullFName, FILE_CODELINE);
               if( stParDocHandle.ResetFileCodeline )
                       fhCodeline = fopen(FullFName, "w+t");
               else
                       fhCodeline = fopen(FullFName, "a+t");
       }
       if( Save_BufBackNettoImage )
                GlobalFree( Save_BufBackNettoImage );
               Save_BufBackNettoImage = 0;
       if( Save_BufBackImage )
                GlobalFree( Save_BufBackImage );
                Save_BufBackImage = 0;
       }
       if( Save_BufFrontNettoImage )
                GlobalFree( Save_BufFrontNettoImage );
                Save_BufFrontNettoImage = 0;
```



```
}
     if( Save_BufFrontImage )
             GlobalFree( Save_BufFrontImage );
             Save_BufFrontImage = 0;
     }
     memset(Save_BufCodelineSW,
                                    0, sizeof(Save_BufCodelineSW));
     memset(Save_BufCodelineHW,
                                    0, sizeof(Save_BufCodelineHW));
     memset(Save_BufBarcode,
                                            0, sizeof(Save_BufBarcode));
     //-----GetDocData-----
if( (fOptionViewImage == TRUE) && (Reply == LS_OKAY) )
             while( NrCheque != NrDocToProcess )
                     WaitCom = WAIT_YES;
                                             0, sizeof(BufFrontFile));
                     memset(BufFrontFile,
                     memset(BufFrontNettoFile, 0, sizeof(BufFrontNettoFile));
                     memset(BufBackFile,
                                                     0, sizeof(BufBackFile));
                     memset(BufBackNettoFile, 0, sizeof(BufBackNettoFile));
                     // free bitmaps
                     if( BufBackNettoImage )
                     {
                             GlobalFree(BufBackNettoImage);
                             BufBackNettoImage = 0;
                     if(BufBackImage)
                             GlobalFree(BufBackImage);
                             BufBackImage = 0;
                     if( BufFrontNettoImage )
                             GlobalFree( BufFrontNettoImage );
                             BufFrontNettoImage = 0;
                     if(BufFrontImage)
                             GlobalFree(BufFrontImage);
                             BufFrontImage = 0;
                     }
                     memset(BufCodelineSW, 0, sizeof(BufCodelineSW));
                     memset(BufCodelineHW,0, sizeof(BufCodelineHW));
                     memset(BufBarcode,
                                                    0, sizeof(BufBarcode));
                     Reply = LSGetDocData(hLS,
                                                            hWnd,
                                                            NULL,
                                                            BufFrontFile,
                                                            BufBackFile,
                                                            BufFrontNettoFile.
```



BufBackNettoFile, &(LPHANDLE)BufFrontImage, &(LPHANDLE)BufBackImage, &(LPHANDLE)BufFrontNettoImage, &(LPHANDLE)BufBackNettoImage, BufCodelineSW, BufCodelineHW, BufBarcode, NULL, &NumDocRemain, 0, NULL, NULL); if((Reply != LS_OKAY) && (Reply != LS_DOUBLE_LEAFING_WARNING) && (Reply != LS_LOOP_INTERRUPTED) && (Reply != LS_SORTER1_FULL) && (Reply != LS_SORTER2_FULL) && (Reply != LS_SORTERS_BOTH_FULL)) { if(CheckReply(hWnd, Reply, "LSGetDocData")) { break; } } NrCheque ++; if(stParDocHandle.TypeOfDecod & DECODE_OCR) { ro.PutBlanks = TRUE; ro.TypeRead = 'N'; Reply = LSCodelineReadFromBitmap(hWnd, (HANDLE)BufFrontImage, &stParDocHandle.CodelineOptType, stParDocHandle.Unit_measure, stParDocHandle.Codeline_Sw_x, stParDocHandle.Codeline_Sw_y, stParDocHandle.Codeline_Sw_w, stParDocHandle.Codeline_Sw_h, &ro, BufCodelineSW, (UINT *)&len_codeline);

if (Reply != LS_OKAY)



```
{
                                       CheckReply(hWnd, Reply,
"LSCodelineReadFromBitmap");
                       if( stParDocHandle.TypeOfDecod & DECODE_BARCODE )
                               Reply = LSReadBarcodeFromBitmap(hWnd,
                                                              BufFrontImage,
       stParDocHandle.Barcodetype,
       (int)stParDocHandle.Barcode_Sw_x,
       (int)stParDocHandle.Barcode_Sw_y,
       (int)stParDocHandle.Barcode_Sw_w,
       (int)stParDocHandle.Barcode_Sw_h,
                                                              BufBarcode,
                                                              (UINT *)&len_barcode);
                               if (Reply != LS_OKAY)
                                       CheckReply(hWnd, Reply,
"LS500_ReadBarcodeFromBitmap");
                       }
                       if( stParDocHandle.TypeOfDecod & DECODE_PDF417 )
                               Reply = LSReadPdf417FromBitmap(hWnd,
                                                              BufFrontImage,
                                                               BufBarcode,
                                                               (UINT *)&len_codeline,
                                                               &nOutGrade,
                                                                0, 0, 0, 0);
                               if (Reply != LS_OKAY)
                                       CheckReply(hWnd, Reply,
"LS500_ReadPdf417FromBitmap");
                       }
                       // Salvo la codeline letta
                       if( BufCodelineSW[0] )
                               strcpy(CodelineRead, BufCodelineSW);
                       else if( BufCodelineHW[0] )
                               strcpy(CodelineRead, BufCodelineHW);
                       else if( BufBarcode[0] )
                               strcpy(CodelineRead, BufBarcode);
                       // Controllo se richiesta di check Codeline
                       if((stParDocHandle.DoCheckCodeline) &&
                               (stParDocHandle.CodelineType != NO_READ_CODELINE) )
```



```
{
                                CheckCodeline(hWnd, CodelineRead, TRUE, (char
*)BufFrontImage);
                        }
                        if(!stParDocHandle.ViewOnlyLastImage)
                                ShowCodelineAndImage(Reply,
                                                                         NrCheque,
stParDocHandle.Side,
                                                                         (unsigned char
*)BufFrontImage,
                                                                         (unsigned char
*)BufBackImage,
                                                                         (unsigned char
*)BufFrontNettoImage,
                                                                         (unsigned char
*)BufBackNettoImage,
                                                                         BufCodelineSW,
                                                                         BufCodelineHW,
                                                                         BufBarcode,
                                                                         "");
                        } // if !stParDocHandle.ViewOnlyLastImage
                        // Salvo codeline su file
                        if(stParDocHandle.SaveCodeline)
                        {
                                if( BufCodelineHW[0] != '\0')
                                        strcat(BufCodelineHW, "\n");
                                        fputs(BufCodelineHW, fhCodeline);
                                if( BufBarcode[0] != '\0')
                                        strcat(BufBarcode, "\n");
                                        fputs(BufBarcode, fhCodeline);
                                }
                                if( BufCodelineSW[0] != '\0' )
                                        strcat(BufCodelineSW, "\n");
                                        fputs(BufCodelineSW, fhCodeline);
                                }
                        }
                        // free bitmaps
                        if( Save_BufBackNettoImage )
                                GlobalFree( Save_BufBackNettoImage );
                        Save_BufBackNettoImage = BufBackNettoImage;
                        BufBackNettoImage = 0;
                        if( Save_BufBackImage )
                                GlobalFree( Save_BufBackImage );
```



```
Save_BufBackImage = BufBackImage;
                        BufBackImage = 0;
                        if( Save_BufFrontNettoImage )
                               GlobalFree( Save_BufFrontNettoImage );
                        Save_BufFrontNettoImage = BufFrontNettoImage;
                        BufFrontNettoImage = 0;
                        if( Save_BufFrontImage )
                               GlobalFree( Save_BufFrontImage );
                        Save_BufFrontImage = BufFrontImage;
                        BufFrontImage = 0;
                        memcpy(Save_BufCodelineSW, BufCodelineSW,
sizeof(Save_BufCodelineSW));
                        memcpy(Save_BufCodelineHW, BufCodelineHW,
sizeof(Save_BufCodelineHW));
                        memcpy(Save_BufBarcode, BufBarcode, sizeof(Save_BufBarcode));
                       while( PeekMessage(&msg, NULL, 0, 0, PM_REMOVE) )
                        {
                               TranslateMessage( &msg );
                               DispatchMessage(&msg);
                       }
                        if( ((Reply != LS_OKAY) && (Reply !=
LS_DOUBLE_LEAFING_WARNING)) &&
                               (Reply > LS_DECODE_FONT_NOT_PRESENT))
                        {
                               CheckReply(hWnd, Reply, "LSGetDocData");
                               break;
                       }
                        if( BuilderParam.StopLoopOnErrorInCodeline )
                               if( strchr(BufCodelineHW, '!') )
                                       break;
                               if( strchr(BufBarcode, '!') )
                               if( strchr(BufCodelineSW, '!') )
                                       break;
               } // End while(1)
        }
        if( stParDocHandle.SaveCodeline )
               fclose(fhCodeline);
        return ReplyFunz;
} // End DoAutoDocHandle
```



Sample code in C language for the LS800 extracted from LSW8 demo code.

DoAutoDocHandle()

```
int DoAutoDocHandle(HWND hWnd)
{
               Reply, Warning;
       BOOL
               fExitLoop;
       char
               dirBase[_MAX_DIR];
               Filename[_MAX_FNAME];
       char
       static char BufFrontFile[_MAX_PATH];
       static char BufBackFile[_MAX_PATH];
       static LPHANDLE BufFrontImage;
       static LPHANDLE BufBackImage;
       char CodelineType;
       short NumDocRemain;
       static char BufCodelineSW[CODE_LINE_LENGTH];
       static char BufCodelineHW[CODE_LINE_LENGTH];
       short len_codeline;
       MSG
                       msg;
               DocToProcess;
       long
       unsigned short NrCheque = 1;
               SideToFilm;
       long
               Lenghts[2];
       HANDLE hBWImage;
       READOPTIONS ro;
       FILE *fhCodeline = NULL;
       fExitLoop = FALSE;
       CurrentBin = 0;
       if((stParDocHandle.Sorter & DOC_SEQUENCE_SORTER) == DOC_SEQUENCE_SORTER)
               CurrentBin = 1;
       if((stParDocHandle.Sorter & DOC_ALL_IN_BIN) == DOC_ALL_IN_BIN)
               CurrentBin = stParDocHandle.Sorter_AllDocInBin;
       fCurrentBin = TRUE;
       SorterFull = 0;
       Reply = LSDoubleLeafingSensibility(hLS, hWnd, 0, (unsigned
char)stParDocHandle.DoubleLeafingLevel);
       if (Reply != LS_OKAY)
       {
               if (CheckReply(hWnd, Reply, "LSDoubleLeafingSensibility"))
                 return Reply;
               }
       }
```



```
sprintf(dirBase, "%s%s", PathAppl, SAVE_DIRECTORY_IMAGE);
       strcpy(Filename, NAME_IMAGE);
       SideToFilm = stParDocHandle.Side;
       // if I want to read OCRA or OCRB I force the image to be taken
       if( (stParDocHandle.TypeOfDecode & DECODE_OCR) &&
               ((stParDocHandle.CodelineOptType == READ_CODELINE_SW_OCRA) ||
               (stParDocHandle.CodelineOptType == READ_CODELINE_SW_OCRB_NUM) ||
               (stParDocHandle.CodelineOptType == READ_CODELINE_SW_OCRB_ALFANUM)
Ш
               (stParDocHandle.CodelineOptType == READ_CODELINE_SW_OCRB_ITALY) ||
               (stParDocHandle.CodelineOptType == READ_CODELINE_SW_E13B) ||
               (stParDocHandle.CodelineOptType == READ CODELINE SW E13B X OCRB))
&&
               (stParDocHandle.Side == SIDE_NONE_IMAGE))
               SideToFilm = stParDocHandle.Side = SIDE_FRONT_IMAGE;
       if( stParDocHandle.TypeOfDecode & DECODE_MICR )
               CodelineType = READ_CODELINE_MICR;
       else
               CodelineType = NO_READ_CODELINE;
       Reply = LS800AutoDocHandle(hLS,
                              hWnd,
                              stParDocHandle.Validate,
                              CodelineType,
                              SideToFilm,
                              stParDocHandle.ScanModeFront.
                              stParDocHandle.ScanModeBack.
                              stParDocHandle.ClearBlack.
                              stParDocHandle.NumDoc,
                              stParDocHandle.SaveImage,
                              dirBase,
                              Filename.
                              UNIT_MM,
                              stParDocHandle.Codeline_Sw_x,
                              stParDocHandle.Codeline_Sw_y,
                              stParDocHandle.Codeline_Sw_w,
                              stParDocHandle.Codeline Sw h.
                              OCR FRONT IMAGE,
                              stParDocHandle.FileFormat,
                              stParDocHandle.Quality,
                              SAVE OVERWRITE,
                                                            // SaveMode
                                                                    // PageNumber
                              stParDocHandle.BeepOnError,
                              (CodelineType == READ_CODELINE_MICR ? OnCodelineRead :
0),
                              (CodelineType == NO_READ_CODELINE ? OnImageFrontReady
:0),
                              NULL,//OnImageBackReady,
                              0,
                                                    // Reserved1
                              0,
                                                    // Reserved2
                              NULL);
                                             // Reserved3
       if (Reply != LS_OKAY)
               if( Reply != LS_FEEDER_EMPTY )
```



```
{
               if (CheckReply(hWnd, Reply, "LS800AutoDocHandle"))
                       Reply = LSDisconnect(hLS, hWnd);
                       return 0;
               }
       }
}
if( stParDocHandle.SaveCodeline )
        strcpy(FullFName, PathAppl);
       strcat(FullFName, FILE_CODELINE);
       if( stParDocHandle.ResetFileCodeline )
               fhCodeline = fopen(FullFName, "w+t");
        else
               fhCodeline = fopen(FullFName, "a+t");
}
if( stParDocHandle.NumDoc )
        DocToProcess = stParDocHandle.NumDoc;
else
       DocToProcess = 1000000L;
//-----GetDocData-----
       while( Reply == LS_OKAY )
               memset((char *)BufFrontFile,
                                             0, sizeof(BufFrontFile));
               memset((char *)BufBackFile,
                                             0, sizeof(BufBackFile));
               BufFrontImage = 0;
               BufBackImage = 0;
               memset((char *)BufCodelineSW, 0, sizeof(BufCodelineSW));
               memset((char *)BufCodelineHW, 0, sizeof(BufCodelineHW));
               Reply = LSGetDocData(hLS,
                                                      hWnd,
                                                      NULL,
                                                      BufFrontFile,
                                                      BufBackFile,
                                                      NULL,
                                                      NULL,
                                                      &BufFrontImage,
                                                      &BufBackImage,
                                                      NULL,
                                                      NULL,
                                                      BufCodelineSW,
                                                      BufCodelineHW,
                                                      NULL,
                                                      NULL,
                                                      &NumDocRemain,
                                                      Lenghts,
                                                      NULL,
                                                      NULL);
               if( Reply != LS_OKAY )
```



case LS_SORTER_1_POCKET_2_FULL:
 SorterFull |= MASK_POCKET_2_FULL;
 break;

case LS_SORTER_1_POCKET_3_FULL:
 SorterFull |= MASK_POCKET_3_FULL;
 break;

case LS_SORTER_2_POCKET_3_FULL:
 SorterFull |= MASK_POCKET_6_FULL;
 break;

case LS_SORTER_3_POCKET_1_FULL:
 SorterFull |= MASK_POCKET_7_FULL;
 break;

case LS_SORTER_3_POCKET_3_FULL:
 SorterFull |= MASK_POCKET_9_FULL;
 break;

case LS_SORTER_4_POCKET_3_FULL:
 SorterFull |= MASK_POCKET_12_FULL;
 break;

case LS_SORTER_5_POCKET_1_FULL:
 SorterFull |= MASK_POCKET_13_FULL;
 break;



```
case LS SORTER 5 POCKET 3 FULL:
                                     SorterFull |= MASK_POCKET_15_FULL;
                                     break;
                              default:
                                     CheckReply(hWnd, Reply, "LSGetDocData");
                                     if( Reply == LS_PAPER_JAM )
                                            Reply = LSReset(hLS, hWnd,
RESET_FREE_PATH);
                                            CheckReply(hWnd, Reply, "LSReset");
                                     fExitLoop = TRUE;
                                     break;
                             }
                             if(fExitLoop)
                                     break:
                      }
                      if( (SideToFilm == SIDE_ALL_IMAGE) ||
                             (SideToFilm == SIDE_FRONT_IMAGE))
                      {
                              //-----ReadCodeline software -----
                             if( (stParDocHandle.TypeOfDecode & DECODE_OCR) &&
                                     (stParDocHandle.CodelineOptType ==
READ_CODELINE_SW_OCRA ||
                                     stParDocHandle.CodelineOptType ==
READ_CODELINE_SW_OCRB_NUM ||
                                     stParDocHandle.CodelineOptType ==
READ_CODELINE_SW_OCRB_ALFANUM ||
                                     stParDocHandle.CodelineOptType ==
READ_CODELINE_SW_OCRB_ITALY ||
                                     stParDocHandle.CodelineOptType ==
READ_CODELINE_SW_E13B))
                             {
                                     ro.PutBlanks = TRUE;
                                     ro.TypeRead = 'N';
                                     Warning = LSCodelineReadFromBitmap(hWnd,
                                                                   BufFrontImage,
       &stParDocHandle.CodelineOptType,
       stParDocHandle.Unit_measure,
       stParDocHandle.Codeline_Sw_x,
       stParDocHandle.Codeline_Sw_y,
       stParDocHandle.Codeline_Sw_w,
       stParDocHandle.Codeline_Sw_h,
                                                                   &ro,
                                                                   BufCodelineSW,
                                                                   (UINT
*)&len_codeline);
```



```
}
                       }
                       if( BufCodelineSW[0] )
                               strcpy(CodelineRead, BufCodelineSW);
                       else if( BufCodelineHW[0] )
                               strcpy(CodelineRead, BufCodelineHW);
                       if( (stParDocHandle.DoCheckCodeline ) &&
(stParDocHandle.TypeOfDecode) )
                               CheckCodeline(hWnd, CodelineRead, TRUE);
                       }
                       if (fOptionViewImage == TRUE)
                               ShowCodelineAndImage(Reply,
                                                                       NrCheque,
                                                                       (unsigned char
*)BufFrontImage,
                                                                       (unsigned char
*)BufBackImage,
                                                                       BufCodelineSW,
                                                                       BufCodelineHW,
                                                                       NULL,
                                                                       NULL);
                       } // end if fOptionViewImage
                       if(stParDocHandle.SaveImage == IMAGE_SAVE_BOTH)
                               //Save the image in JPEG
                               if( stParDocHandle.FileFormat == SAVE_JPEG )
                                       if( ((stParDocHandle.Side == SIDE_FRONT_IMAGE) ||
(stParDocHandle.Side == SIDE_ALL_IMAGE)) &&
                                              (BufFrontImage))
                                       {
                                              // build filename
                                              sprintf(SaveFile, "%s%s\\f%s%03d.jpg",
PathAppl, SAVE_DIRECTORY_IMAGE, NAME_IMAGE, NrFileJPG);
                                              LSSaveJPEG(hWnd, BufFrontImage,
stParDocHandle.Quality, SaveFile);
                                       }
                                       if( ((stParDocHandle.Side == SIDE_BACK_IMAGE) ||
(stParDocHandle.Side == SIDE_ALL_IMAGE)) &&
                                               (BufBackImage))
                                       {
                                              // build filename
                                              sprintf(SaveFile, "%s%s\\b%s%03d.jpg",
PathAppl, SAVE_DIRECTORY_IMAGE, NAME_IMAGE, NrFileJPG);
                                              LSSaveJPEG(hWnd, BufBackImage,
stParDocHandle.Quality, SaveFile);
                                       NrFileJPG ++;
                               }
```



```
if( stParDocHandle.FileFormat == SAVE BMP )
                              {
                                      if( ((stParDocHandle.Side == SIDE_BACK_IMAGE) ||
(stParDocHandle.Side == SIDE_ALL_IMAGE)) &&
                                              (BufBackImage))
                                      {
                                             // build filename
                                             sprintf(SaveFile, "%s%s\\b%s%03d.bmp",
PathAppl, SAVE_DIRECTORY_IMAGE, NAME_IMAGE, NrFileBMP);
                                             LSSaveDIB(hWnd, (BITMAPINFOHEADER
*)BufBackImage, SaveFile);
                                      }
                                      if( ((stParDocHandle.Side == SIDE_FRONT_IMAGE) ||
(stParDocHandle.Side == SIDE_ALL_IMAGE)) &&
                                             (BufFrontImage))
                                      {
                                             // build filename
                                             sprintf(SaveFile, "%s%s\\f%s%03d.bmp",
PathAppl, SAVE_DIRECTORY_IMAGE, NAME_IMAGE, NrFileBMP);
                                              LSSaveDIB(hWnd, (BITMAPINFOHEADER
*)BufFrontImage, SaveFile);
                                      NrFileBMP ++;
                              }
                              //Save the image in TIFF
                              if( stParDocHandle.FileFormat == FILE_TIF ||
                                      stParDocHandle.FileFormat == FILE_CCITT ||
                                      stParDocHandle.FileFormat ==
FILE_CCITT_GROUP3_1DIM ||
                                      stParDocHandle.FileFormat ==
FILE_CCITT_GROUP3_2DIM ||
                                      stParDocHandle.FileFormat == FILE_CCITT_GROUP4)
                              {
                                      if( ((stParDocHandle.Side == SIDE_BACK_IMAGE) ||
(stParDocHandle.Side == SIDE_ALL_IMAGE)) &&
                                             (BufBackImage))
                                              Reply = LSConvertImageToBW(hWnd,
ALGORITHM_CTS, BufBackImage, &hBWImage, DEFAULT_POLO_FILTER, 0);
                                             if(Reply == LS_OKAY)
                                                     // build filename
                                                     sprintf(SaveFile,
"%s%s\\f%s%03d.tif", PathAppl, SAVE_DIRECTORY_IMAGE, NAME_IMAGE, NrFileTIFF);
                                                     LSSaveTIFF(hWnd, hBWImage,
SaveFile, stParDocHandle.FileFormat, SAVE_OVERWRITE, 1);
                                                     GlobalFree( hBWImage );
                                             }
                                      }
                                      if( ((stParDocHandle.Side == SIDE_FRONT_IMAGE) ||
(stParDocHandle.Side == SIDE_ALL_IMAGE)) &&
```



```
(BufFrontImage))
                                       {
                                               Reply = LSConvertImageToBW(hWnd,
ALGORITHM_CTS, BufFrontImage, &hBWImage, DEFAULT_POLO_FILTER, 0);
                                               if( Reply == LS_OKAY )
                                                       // build filename
                                       sprintf(SaveFile, "%s%s\\f%s%03d.tif", PathAppl,
SAVE_DIRECTORY_IMAGE, NAME_IMAGE, NrFileTIFF);
                                                       LSSaveTIFF(hWnd, hBWImage,
SaveFile, stParDocHandle.FileFormat, SAVE_OVERWRITE, 1);
                                                       GlobalFree( hBWImage );
                                               }
                                       NrFileTIFF ++;
                               }
                       }
                       if( stParDocHandle.SaveCodeline )
                               if( BufCodelineHW[0] != '\0')
                                       strcat(BufCodelineHW, "\n");
                                       fputs(BufCodelineHW, fhCodeline);
                               }
                               if( BufCodelineSW[0] != '\0')
                               {
                                       strcat(BufCodelineSW, "\n");
                                       fputs(BufCodelineSW, fhCodeline);
                               }
                       }
                       if(BufBackImage)
                       {
                               GlobalFree(BufBackImage);
                               BufBackImage = 0;
                       if(BufFrontImage)
                               GlobalFree( BufFrontImage );
                               BufFrontImage = 0;
                       }
                       while(PeekMessage(&msg, NULL, 0, 0, PM_REMOVE))
                       {
                               TranslateMessage( &msg );
                               DispatchMessage( &msg );
                       }
                       if( (-- DocToProcess) == 0 )
                               break;
                       NrCheque ++;
```



```
if( (stParDocHandle.Sorter & DOC_SEQUENCE_SORTER) ==
DOC_SEQUENCE_SORTER)
                               switch( CurrentBin )
                               case 1:
                                       if( Reply == LS_SORTER_1_POCKET_1_FULL )
                                               if( (CurrentBin + 1) >= NrPocketPresent )
                                                       Reply = LSStopAutoDocHandle(hLS,
hWnd);
                                               else
                                                       CurrentBin ++;
                                       break;
                               case 2:
                                       if( Reply == LS_SORTER_1_POCKET_2_FULL )
                                               if( (CurrentBin + 1) >= NrPocketPresent )
                                                       Reply = LSStopAutoDocHandle(hLS,
hWnd);
                                               else
                                                       CurrentBin ++;
                                       break;
                               case 3:
                                       if( Reply == LS_SORTER_1_POCKET_3_FULL )
                                       {
                                               if( (CurrentBin + 1) >= NrPocketPresent )
                                                       Reply = LSStopAutoDocHandle(hLS,
hWnd);
                                               else
                                                       CurrentBin ++;
                                       break;
                               case 4:
                                       if( Reply == LS_SORTER_2_POCKET_1_FULL )
                                       {
                                               if( (CurrentBin + 1) >= NrPocketPresent )
                                                       Reply = LSStopAutoDocHandle(hLS,
hWnd);
                                               else
                                                       CurrentBin ++;
                                       break;
                               case 5:
                                       if( Reply == LS_SORTER_2_POCKET_2_FULL )
                                               if( (CurrentBin + 1) >= NrPocketPresent )
                                                       Reply = LSStopAutoDocHandle(hLS,
hWnd);
                                               else
                                                       CurrentBin ++;
                                       }
                                       break;
                               case 6:
                                       if( Reply == LS_SORTER_2_POCKET_3_FULL )
                                       {
```



```
if( (CurrentBin + 1) >= NrPocketPresent )
                                                        Reply = LSStopAutoDocHandle(hLS,
hWnd);
                                                else
                                                        CurrentBin ++;
                                        break;
                                case 7:
                                        if( Reply == LS_SORTER_3_POCKET_1_FULL )
                                                if( (CurrentBin + 1) >= NrPocketPresent )
                                                        Reply = LSStopAutoDocHandle(hLS,
hWnd);
                                                else
                                                        CurrentBin ++;
                                        break;
                                case 8:
                                        if( Reply == LS_SORTER_3_POCKET_2_FULL )
                                                if( (CurrentBin + 1) >= NrPocketPresent )
                                                        Reply = LSStopAutoDocHandle(hLS,
hWnd);
                                                else
                                                        CurrentBin ++;
                                        break;
                                case 9:
                                        if( Reply == LS_SORTER_3_POCKET_3_FULL )
                                        {
                                                if( (CurrentBin + 1) >= NrPocketPresent )
                                                        Reply = LSStopAutoDocHandle(hLS,
hWnd);
                                                else
                                                        CurrentBin ++;
                                        break;
                                case 10:
                                        if( Reply == LS_SORTER_4_POCKET_1_FULL )
                                        {
                                                if( (CurrentBin + 1) >= NrPocketPresent )
                                                        Reply = LSStopAutoDocHandle(hLS,
hWnd);
                                                else
                                                        CurrentBin ++;
                                        break;
                                case 11:
                                        if( Reply == LS_SORTER_4_POCKET_2_FULL )
                                                if( (CurrentBin + 1) >= NrPocketPresent )
                                                        Reply = LSStopAutoDocHandle(hLS,
hWnd);
                                                else
                                                        CurrentBin ++;
                                        break;
                                case 12:
```



```
if( Reply == LS_SORTER_4_POCKET_3_FULL )
                                       {
                                               if( (CurrentBin + 1) >= NrPocketPresent )
                                                       Reply = LSStopAutoDocHandle(hLS,
hWnd);
                                               else
                                                       CurrentBin ++;
                                       }
                                       break;
                               case 13:
                                       if( Reply == LS_SORTER_5_POCKET_1_FULL )
                                               if( (CurrentBin + 1) >= NrPocketPresent )
                                                       Reply = LSStopAutoDocHandle(hLS,
hWnd);
                                               else
                                                       CurrentBin ++;
                                       break;
                               case 14:
                                       if( Reply == LS_SORTER_5_POCKET_2_FULL )
                                               if( (CurrentBin + 1) >= NrPocketPresent )
                                                       Reply = LSStopAutoDocHandle(hLS,
hWnd);
                                               else
                                                       CurrentBin ++;
                                       break;
                               case 15:
                                       if( Reply == LS_SORTER_5_POCKET_3_FULL )
                                               if( (CurrentBin + 1) >= NrPocketPresent )
                                                       Reply = LSStopAutoDocHandle(hLS,
hWnd);
                                               else
                                                       CurrentBin ++;
                                       break;
                               }
                       if((stParDocHandle.Sorter & DOC_ALL_IN_BIN) == DOC_ALL_IN_BIN)
                               switch(CurrentBin)
                               {
                               case 1:
                                       if( Reply == LS_SORTER_1_POCKET_1_FULL )
                                               Reply = LSStopAutoDocHandle(hLS, hWnd);
                                       break;
                               case 2:
                                       if( Reply == LS_SORTER_1_POCKET_2_FULL )
                                               Reply = LSStopAutoDocHandle(hLS, hWnd);
                                       break;
                               case 3:
                                       if( Reply == LS_SORTER_1_POCKET_3_FULL )
                                               Reply = LSStopAutoDocHandle(hLS, hWnd);
                                       break;
                               case 4:
```

if(Reply == LS_SORTER_2_POCKET_1_FULL)



```
Reply = LSStopAutoDocHandle(hLS, hWnd);
                               break;
                       case 5:
                               if( Reply == LS_SORTER_2_POCKET_2_FULL )
                                       Reply = LSStopAutoDocHandle(hLS, hWnd);
                               break;
                       case 6:
                               if( Reply == LS_SORTER_2_POCKET_3_FULL )
                                       Reply = LSStopAutoDocHandle(hLS, hWnd);
                               break;
                       case 7:
                               if( Reply == LS_SORTER_3_POCKET_1_FULL )
                                       Reply = LSStopAutoDocHandle(hLS, hWnd);
                               break;
                       case 8:
                               if( Reply == LS_SORTER_3_POCKET_2_FULL )
                                       Reply = LSStopAutoDocHandle(hLS, hWnd);
                               break:
                       case 9:
                               if( Reply == LS_SORTER_3_POCKET_3_FULL )
                                       Reply = LSStopAutoDocHandle(hLS, hWnd);
                               break;
                       case 10:
                               if( Reply == LS_SORTER_4_POCKET_1_FULL )
                                       Reply = LSStopAutoDocHandle(hLS, hWnd);
                               break;
                       case 11:
                               if( Reply == LS_SORTER_4_POCKET_2_FULL )
                                       Reply = LSStopAutoDocHandle(hLS, hWnd);
                               break;
                       case 12:
                               if( Reply == LS_SORTER_4_POCKET_3_FULL )
                                       Reply = LSStopAutoDocHandle(hLS, hWnd);
                               break;
                       case 13:
                               if( Reply == LS_SORTER_5_POCKET_1_FULL )
                                       Reply = LSStopAutoDocHandle(hLS, hWnd);
                               break;
                       case 14:
                               if( Reply == LS_SORTER_5_POCKET_2_FULL )
                                       Reply = LSStopAutoDocHandle(hLS, hWnd);
                               break;
                       case 15:
                               if( Reply == LS_SORTER_5_POCKET_3_FULL )
                                       Reply = LSStopAutoDocHandle(hLS, hWnd);
                               break;
                       }
               }
               if( (Reply >= LS_SORTER_1_POCKET_1_FULL) &&
                       (Reply <= LS_SORTER_5_POCKET_3_FULL))
                       Reply = LS_OKAY;
               // Fine while( TRUE )
if( stParDocHandle.SaveCodeline )
       fclose( fhCodeline );
```



```
return Reply;
} // End DoAutoDocHandle
```

Callback functions:

```
int OnCodelineRead(S_CODELINE_INFO_LS800 *CodelineInfo)
{
        short ii;
        if(\ (stParDocHandle.Sorter\ \&\ DOC\_CIRCULAR\_SORTER) == DOC\_CIRCULAR\_SORTER\ )
        {
                 // Set next sorter ...
                 if( fCurrentBin )
                 {
                          CodelineInfo->Sorter = CurrentBin ++;
                          if( CurrentBin > NrPocketPresent )
                          {
                                  if( NrPocketPresent > 1)
                                  {
                                           fCurrentBin = !fCurrentBin;
                                           CurrentBin -= 2;
                                           CodelineInfo->Sorter = 0;
                                  }
                                  else
                                           CurrentBin = 0;
                                                            // Only pocket zero
                         }
```



```
}
        else
        {
                 CodelineInfo->Sorter = CurrentBin --;
                 if( CurrentBin <= 0 )
                         fCurrentBin = !fCurrentBin;
        }
        // ... and the string
        if( stParDocHandle.Sorter_Validate[DATI_CIRCULAR] )
        {
                 CodelineInfo->FormatString1 = FORMAT_NORMAL;
                 if( stParDocHandle.Sorter_PrintBold[DATI_CIRCULAR] )
                         CodelineInfo->FormatString1 = FORMAT_BOLD;
                 strcpy(CodelineInfo->StringToPrint1,
                      stParDocHandle.Sorter_szValidateText[DATI_CIRCULAR]);
        }
}
else if( (stParDocHandle.Sorter & DOC_SEQUENCE_SORTER) == DOC_SEQUENCE_SORTER )
{
        // Set the sorter ...
        CodelineInfo->Sorter = CurrentBin;
        // ... and the string
        if( stParDocHandle.Sorter_Validate[DATI_SEQUENCE] )
        {
                 CodelineInfo->FormatString1 = FORMAT_NORMAL;
                 if( stParDocHandle.Sorter_PrintBold[DATI_SEQUENCE] )
```



CodelineInfo->FormatString1 = FORMAT BOLD; strcpy(CodelineInfo->StringToPrint1, stParDocHandle.Sorter_szValidateText[DATI_SEQUENCE]); } } else if((stParDocHandle.Sorter & DOC_ALL_IN_BIN) == DOC_ALL_IN_BIN) { // Set the sorter ... CodelineInfo->Sorter = CurrentBin; // ... and the string $if (\ stParDocHandle.Sorter_Validate[DATI_ALL_DOC]\)$ { CodelineInfo->FormatString1 = FORMAT_NORMAL; if(stParDocHandle.Sorter_PrintBold[DATI_ALL_DOC]) CodelineInfo->FormatString1 = FORMAT_BOLD; strcpy(CodelineInfo->StringToPrint1, stParDocHandle.Sorter_szValidateText[DATI_ALL_DOC]); } } else // Search the criteria associated at the codeline read for(ii = 0; ii < NrPocketPresent; ii ++) { switch(stParDocHandle.DocOption[ii].TypeChoice) { case 0:



```
// Do nothing
                                   break;
                          case 1:
                                   // Check for error in codeline
                                   if( strchr(CodelineInfo->CodelineRead, '!') )
                                   {
                                            // Set of the sorter ...
                                            CodelineInfo->Sorter = ii;
                                            //\ldots and the string to print if present
                                            if( stParDocHandle.DocOption[ii].fDoPrint )
                                            {
                                                     if( stParDocHandle.DocOption[ii].fPrintBold )
                                                              CodelineInfo->FormatString1 =
FORMAT_BOLD;
                                                     else
                                                              CodelineInfo->FormatString1 =
FORMAT_NORMAL;
                                                     strcpy(CodelineInfo->StringToPrint1,
                                                    stParDocHandle.DocOption[ii].StringToPrint);
                                            }
                                            // Set ii = NrPocketPresent for terminate the for
                                            ii = NrPocketPresent + 2;
                                   }
                                   break;
```



case 2:

```
// Check if the right codeline
                                   if(!strncmp(&CodelineInfo-
>CodelineRead[stParDocHandle.DocOption[ii].StartChar - 1],
stParDocHandle.DocOption[ii].StringCheck,
strlen(stParDocHandle.DocOption[ii].StringCheck)) )
                                   {
                                           // Set of the sorter ...
                                           CodelineInfo->Sorter = ii;
                                           // ... and the string to print if present
                                           if( stParDocHandle.DocOption[ii].fDoPrint )
                                           {
                                                    if( stParDocHandle.DocOption[ii].fPrintBold )
                                                             CodelineInfo->FormatString1 =
FORMAT_BOLD;
                                                    else
                                                             CodelineInfo->FormatString1 =
FORMAT_NORMAL;
                                                    strcpy(CodelineInfo->StringToPrint1,
                                                   stParDocHandle.DocOption[ii].StringToPrint);
                                           }
                                           // Set ii = NrPocketPresent for terminate the for
                                           ii = NrPocketPresent + 2;
                                   }
                          }
```



```
}
        }
        // test if a sorter is associated was found
        if( ii == NrPocketPresent )
                 // Set a sorter of default
                 CodelineInfo->Sorter = SORTER_0_SELECTED;
        return 0;
}// OnCodelineRead
int OnlmageFrontReady(S_IMAGE_INFO_LS800 *ImgInfo)
{
        int Warning;
        short len_codeline;
        short ii;
        char CodelineRead[CODE_LINE_LENGTH];
        READOPTIONS ro;
        if( (stParDocHandle.Sorter & DOC_CIRCULAR_SORTER) == DOC_CIRCULAR_SORTER )
        {
                 // Set next sorter ...
                 if( fCurrentBin )
                 {
                         ImgInfo->Sorter = CurrentBin ++;
                         if( CurrentBin > NrPocketPresent )
```



}

```
{
                 if( NrPocketPresent > 1 )
                 {
                          fCurrentBin = !fCurrentBin;
                          CurrentBin -= 2;
                          ImgInfo->Sorter = 0;
                 }
                 else
                          CurrentBin = 0;
                                                    // Only pocket zero
        }
}
else
{
        ImgInfo->Sorter = CurrentBin --;
        if( CurrentBin <= 0 )</pre>
                 fCurrentBin = !fCurrentBin;
}
// ... and the string
if( stParDocHandle.Sorter_Validate[DATI_CIRCULAR] )
{
        ImgInfo->FormatString1 = FORMAT_NORMAL;
        if (\ stParDocHandle.Sorter\_PrintBold[DATI\_CIRCULAR]\ )
                 ImgInfo->FormatString1 = FORMAT_BOLD;
        strcpy(ImgInfo->StringToPrint1,
              stParDocHandle.Sorter_szValidateText[DATI_CIRCULAR]);
}
```



```
else if( (stParDocHandle.Sorter & DOC SEQUENCE SORTER) == DOC SEQUENCE SORTER )
        // Set the sorter ...
        ImgInfo->Sorter = CurrentBin;
        // ... and the string
        if( stParDocHandle.Sorter_Validate[DATI_SEQUENCE] )
        {
                ImgInfo->FormatString1 = FORMAT_NORMAL;
                if( stParDocHandle.Sorter_PrintBold[DATI_SEQUENCE] )
                         ImgInfo->FormatString1 = FORMAT_BOLD;
                strcpy(ImgInfo->StringToPrint1,
                      stParDocHandle.Sorter_szValidateText[DATI_SEQUENCE]);
        }
}
else if( (stParDocHandle.Sorter & DOC_ALL_IN_BIN) == DOC_ALL_IN_BIN )
{
        // Set the sorter ...
        ImgInfo->Sorter = CurrentBin;
        // ... and the string
        if( stParDocHandle.Sorter_Validate[DATI_ALL_DOC] )
        {
                ImgInfo->FormatString1 = FORMAT_NORMAL;
                if( stParDocHandle.Sorter_PrintBold[DATI_ALL_DOC] )
                         ImgInfo->FormatString1 = FORMAT_BOLD;
                strcpy(ImgInfo->StringToPrint1,
                      stParDocHandle.Sorter_szValidateText[DATI_ALL_DOC]);
```



```
}
       }
       else
               // Undecode the codeline OCR
               if( (stParDocHandle.TypeOfDecode & DECODE_OCR) &&
                       (stParDocHandle.CodelineOptType == READ_CODELINE_SW_OCRA ||
                        stParDocHandle.CodelineOptType == READ_CODELINE_SW_OCRB_NUM
| |
                        stParDocHandle.CodelineOptType ==
READ_CODELINE_SW_OCRB_ALFANUM ||
                        stParDocHandle.CodelineOptType == READ_CODELINE_SW_OCRB_ITALY
| |
                        stParDocHandle.CodelineOptType == READ_CODELINE_SW_E13B))
               {
                       ro.PutBlanks = TRUE;
                       ro.TypeRead = 'N';
                       Warning = LSCodelineReadFromBitmap(0,
                                                       ImgInfo->hImage,
                                                       &stParDocHandle.CodelineOptType,
                                                       stParDocHandle. Unit\_measure,
                                                      stParDocHandle.Codeline_Sw_x,
stParDocHandle.Codeline_Sw_y,
                                                       stParDocHandle.Codeline_Sw_w,
                                                       stParDocHandle.Codeline_Sw_h,
                                                       &ro,
                                                       CodelineRead,
                                                       (UINT *)&len_codeline);
```



```
if( Warning != LS_OKAY )
         {
                  // On error set sorter ... zero
                  ImgInfo->Sorter = 0;
                  return 0;
         }
}
// Search the criteria associated at the codeline read
for( ii = 0; ii < NrPocketPresent; ii ++)
{
         switch( stParDocHandle.DocOption[ii].TypeChoice )
         {
         case 0:
                  // Do nothing
                  break;
         case 1:
                  // Check for error in codeline
                  if( strchr(CodelineRead, '!') )
                  {
                           // Set of the sorter ...
                            ImgInfo->Sorter = ii;
                           //\ldots and the string to print if present
                            if( stParDocHandle.DocOption[ii].fDoPrint )
                            {
                                     if (\ stParDocHandle.DocOption[ii].fPrintBold\ )\\
```



```
ImgInfo->FormatString1 =
FORMAT_BOLD;
                                                     else
                                                              ImgInfo->FormatString1 =
FORMAT_NORMAL;
                                                     strcpy(ImgInfo->StringToPrint1,
                                            stParDocHandle.DocOption[ii].StringToPrint);
                                            }
                                            // Set ii = NrPocketPresent for terminate the for
                                            ii = NrPocketPresent + 2;
                                   }
                                   break;
                           case 2:
                                   // Check if the right codeline
                                   if(!
strncmp (\& Codeline Read[stParDocHandle.DocOption[ii].StartChar-1],\\
stParDocHandle.DocOption [ii]. String Check,\\
strlen(stParDocHandle.DocOption[ii].StringCheck)) )
                                   {
                                            // Set of the sorter \dots
                                            ImgInfo->Sorter = ii;
                                            //\ldots and the string to print if present
                                            if( stParDocHandle.DocOption[ii].fDoPrint )
                                            {
```



```
if( stParDocHandle.DocOption[ii].fPrintBold )
                                                            ImgInfo->FormatString1 =
FORMAT_BOLD;
                                                    else
                                                            ImgInfo->FormatString1 =
FORMAT_NORMAL;
                                                    strcpy(ImgInfo->StringToPrint1,
                                                           stParDocHandle.DocOption [ii]. String ToPr\\
                                                   int);
                                           }
                                           // Set ii = NrPocketPresent for terminate the for
                                           ii = NrPocketPresent + 2;
                                  }
                          }
                 }
        }
        // test if a sorter is associated was found
        if( ii == NrPocketPresent )
                 // Set a sorter of default
                 ImgInfo->Sorter = SORTER_0_SELECTED;
        return 0;
}// OnImageFrontReady
```



Define and Declare for Visual Basic

Add a module in your VB program with the following definitions:

```
'// Parameter Type peripheral
Public Const LS 100 USB = 100
Public Const LS 100 RS232 = 101 '(not yet supported)
Public Const LS_215_USB = 201
Public Const LS_5xx_SCSI = 500
Public Const LS_510_TCPIP = 501 '(not yet supported)
Public Const LS_515_USB = 502
Public Const LS 800 USB = 801
'// Parameter Type com
Public Const SUSPENSIVE MODE = &H53
                                                'T'
Public Const NOT SUSPENSIVE MODE = &H54
'// Parameter FrontStamp
Public Const NO_STAMP = 0
Public Const FRONT_STAMP = 1
Public Const BACK_STAMP = 2
Public Const FRONT AND BACK STAMP = 3
'// Parameter Validate
Public Const NO PRINT VALIDATE = 0
Public Const PRINT_VALIDATE = 1
'// Parameter Feed
Public Const AUTO_FEED = 0
Public Const PATH FEED = 1
'// Parameter Sorter
Public Const HOLD DOCUMENT = 0
Public Const SORTER BAY1 = 1
Public Const SORTER_BAY2 = 2
Public Const SORTER AUTOMATIC = 3
Public Const SORTER_SWITCH_1_TO_2 = 4
Public Const EJECT_DOCUMENT = 5
Public Const SORTER_ON_CODELINE_CALLBACK = 6
'// Parameter Codeline
Public Const NO READ CODELINE = 0
Public Const READ CODELINE MICR = 1
Public Const READ BARCODE PDF417 = 2
Public Const READ BARCODE HW = 6
Public Const READ MICR AND BARCODE HW = 7
Public Const READ_CODELINE_OPTIC = 21
Public Const READ MICR AND OPTIC = 22
Public Const READ_OPTIC_AND_PDF417 = 23
Public Const READ_BARCODE_2_OF_5 = 50
Public Const READ_BARCODE_CODE39 = 51
Public Const READ_BARCODE_CODE128 = 52
Public Const READ_BARCODE_EAN13 = 53
Public Const READ_CODELINE_HW_OCRA = &H41
Public Const READ_CODELINE_HW_OCRB_NUM = &H42
```



```
Public Const READ CODELINE HW OCRB ALFANUM = &H43 '//'C'
Public Const READ_CODELINE_HW_E13B = &H45
Public Const READ_CODELINE_HW_E13B_X_OCRB = &H58
                                                       '//'X'
Public Const READ CODELINE HW MULTI READ = &H4D
                                                       '//'M'
Public Const READ_CODELINE_SW_OCRA = &H41
                                                   '//'A'
Public Const READ_CODELINE_SW_OCRB_NUM = &H42
                                                      '//'B'
Public Const READ_CODELINE_SW_OCRB_ALFANUM = &H43 '//'C'
Public Const READ_CODELINE_SW_OCRB_ITALY = &H46
                                                      '//'F'
Public Const READ_CODELINE_SW_E13B = &H45
                                                  '//'E'
Public Const READ_CODELINE_SW_E13B_X_OCRB = &H58
                                                       '//'X'
Public Const READ CODELINE SW MULTI READ = &H4D
                                                      '//'M'
Public Const READ_ONE_CODELINE_TYPE = &H4E
                                                   '//'N'
'// Parameter OriginMeasureDoc
Public Const BOTTOM_LEFT_PIXEL = 0
Public Const BOTTOM RIGHT MM = 10
Public Const BOTTOM_RIGHT_INCH = 20
'// Parameter Unit
Public Const UNIT_MM = 0
Public Const UNIT INCH = 1
'// Value of height to decode a software Codeline
Public Const MAX_PIXEL_HEIGHT = 42
Public Const OCR_VALUE_IN_MM = 10.5
Public Const OCR_VALUE_IN_INCH = 0.41
'// Parameter OCR_Image_Side
Public Const OCR_FRONT_IMAGE = 0
Public Const OCR BACK IMAGE = 1
'// Parameter ScanMode
Public Const SCAN_MODE_BW = 1
Public Const SCAN_MODE_16GR100 = 2
Public Const SCAN_MODE_16GR200 = 3
Public Const SCAN MODE 256GR100 = 4
Public Const SCAN_MODE_256GR200 = 5
Public Const SCAN_MODE_COLOR_100 = 10
Public Const SCAN_MODE_COLOR_200 = 11
'// Parameter ReadMode
Public Const READMODE_BRUTTO = 0
Public Const READMODE NETTO = 1
Public Const READMODE_ALL = 2
'// Parameter ClearBlack
Public Const NO_CLEAR_BLACK = 0
Public Const CLEAR_ALL_BLACK = 1
'// Parameter Side
Public Const SIDE NONE IMAGE = &H4E
                                         'N'
                                         'F'
Public Const SIDE FRONT IMAGE = &H46
                                        'B'
Public Const SIDE BACK IMAGE = &H42
Public Const SIDE ALL IMAGE = &H58
Public Const SIDE FRONT BLUE IMAGE = &H47 'G'
```



```
Public Const SIDE BACK BLUE IMAGE = &H43
Public Const SIDE_ALL_BLUE_IMAGE = &H59
Public Const SIDE_FRONT_GREEN_IMAGE = &H48 'H'
Public Const SIDE_BACK_GREEN_IMAGE = &H44 'D'
Public Const SIDE_ALL_GREEN_IMAGE = &H57
Public Const SIDE_FRONT_RED_IMAGE = &H49
Public Const SIDE_BACK_RED_IMAGE = &H45
                                           'E'
Public Const SIDE_ALL_RED_IMAGE = &H5A
'// Parameter Image Coordinate
Public Const IMAGE_MAX_WIDTH = 1720
Public Const IMAGE MAX HEIGHT = 848
'// Parameter Method
Public Const ALGORITHM CTS = 4
Public Const ALGORITHM_NODITHERING = &H10
Public Const ALGORITHM_FLOYDSTEINDITHERING = &H11
Public Const ALGORITHM STUCKIDITHERING = &H12
Public Const ALGORITHM BURKESDITHERING = &H13
Public Const ALGORITHM_SIERRADITHERING = &H14
Public Const ALGORITHM STEVENSONARCEDITHERING = &H15
Public Const ALGORITHM JARVISDITHERING = &H16
Public Const DEFAULT POLO FILTER = 450
'// Parameter Format
Public Const FORMAT_NORMAL = &H4E
                                         'N'
Public Const FORMAT_BOLD = &H42
Public Const FORMAT_NORMAL_15 = &H41
                                             'A'
Public Const PRINT_UP_FORMAT_NORMAL = &H6E
                                                 'n'
Public Const PRINT_UP_FORMAT_BOLD = &H62
                                               'b'
Public Const PRINT_UP_ NORMAL_15_CHAR = &H61
Public Const FORMAT IATA = &H20
                                      '// Badge Track 1
Public Const FORMAT_ABA = &H40
                                      '// Badge Track 2
Public Const FORMAT MINTS = &H80
                                       '// Badge Track 3
                                         '// Badge Track 1 and 2
Public Const FORMAT_IATA_ABA = &H60
Public Const FORMAT_ABA_MINTS = &HC0
                                          1// Badge Track 2 and 3
'// Parameter Wait_com
Public Const WAIT_NO = &H47
                                    'G'
                                    '\\\'
Public Const WAIT YES = &H57
'//Parameter Beep
Public Const NO BEEP = 0
Public Const YES BEEP = 1
'//Parameter SaveOnFile
Public Const IMAGE_SAVE_ON_FILE = 4
Public Const IMAGE_SAVE_HANDLE = 5
Public Const IMAGE_SAVE_BOTH = 6
Public Const IMAGE_SAVE_NONE = 7
'//Parameter FileFormat
Public Const SAVE JPEG = 10
Public Const SAVE BMP = 11
'// Parameter: Tiff type
Public Const FILE_TIF = 3
                                      '// Tagged Image File Format
```



```
Public Const FILE CCITT = 25
                                        "// TIFF CCITT
Public Const FILE_CCITT_GROUP3_1DIM = 27
                                                '// CCITT Group3 one dimension
Public Const FILE_CCITT_GROUP3_2DIM = 28
                                                '// CCITT Group3 two dimensions
                                             '// CCITT Group4 two dimensions
Public Const FILE_CCITT_GROUP4 = 29
'// Parameter: uSaveMulti
Public Const SAVE_OVERWRITE = 0
Public Const SAVE_APPEND = 1
Public Const SAVE_REPLACE = 2
Public Const SAVE_INSERT = 3
'// Scanner choise
Public Const SCANNER BACK = 0
Public Const SCANNER_FRONT = 1
'// Printer choise
Public Const PRINTER_FRONT = 0
Public Const PRINTER BACK = 1
Public Const CODE_LINE_LENGTH = 256
                                              '// Max length of returned codeline
                                                '// Nr. window * 5 bytes per window
Public Const MAX_OPTICAL_WINDOWS = 5
Public Const MAX CRITERIA = 5
                                          '// Nr. max of selection criteria
Public Const MAX_CHAR_CHECK = 10
                                             '// Nr. max of check char
'// Parameter Sorter Criteria only for LS515
Public Const CRITERIA NO = &H0
Public Const CRITERIA_ERROR_IN_CODELINE = &H1
Public Const CRITERIA_CODELINE_EQUAL_STR1 = &H2
Public Const CRITERIA_CODELINE_DIFF_STR1 = &H3
Public Const CRITERIA_CODELINE_GREAT_STR1 = &H4
Public Const CRITERIA_CODELINE_MIN_STR1 = &H5
Public Const CRITERIA CODELINE INTO STR1 STR2 = &H6
Public Const CRITERIA_CODELINE_OUT_STR1_STR2 = &H7
Public Const CRITERIA_CODELINE_EQUAL_STR1_OR_STR2 = &H8
Public Const CRITERIA_CODELINE_DIFF_STR1_AND_STR2 = &H9
'// Parameter Double Leafing only for LS515
Public Const DOUBLE LEAFING WARNING = 0
Public Const DOUBLE_LEAFING_ERROR = 1
Public Const DOUBLE LEAFING STORAGE = 10
Public Const DOUBLE_LEAFING_VOLATILE = 11
Public Const DOUBLE_LEAFING_LEVEL1 = &H1
Public Const DOUBLE_LEAFING_LEVEL2 = &H2
Public Const DOUBLE_LEAFING_LEVEL3 = &H3
Public Const DOUBLE_LEAFING_DEFAULT = &H4
Public Const DOUBLE_LEAFING_LEVEL4 = &H5
Public Const DOUBLE_LEAFING_LEVEL5 = &H6
Public Const DOUBLE_LEAFING_DISABLE = &H7
'// Parameter History
Public Const CMD READ HISTORY = 1
Public Const CMD_ERASE_HISTORY = 2
```

Public Const PERIPHERAL_LS100_SIZE_MEMORY = 36864 '36 * 1024 '//Total memory of the peripheral



"// String for identify the periferal connected Public Const MODEL_LS100_1 = "LS100USB"

Public Const PERIPHERAL_LS5xx_SIZE_MEMORY = 65536 '64 * 1024 '//Total memory of the peripheral

```
Public Const MODEL_LS100_2 = "LS100RS_"
Public Const MODEL_LS100_3 = "LS100/3_
Public Const MODEL_LS100_4 = "LS100/4_
Public Const MODEL_LS100_5 = "LS100/5_"
Public Const MODEL LS200 USB = "LS200USB"
Public Const MODEL LS200 2 = "C.T.S. LS200/2"
Public Const MODEL_LS800_1 = "LS8/1"
Public Const MODEL_LS800_2 = "LS8/2"
Public Const MODEL_LS500 = "C.T.S. LS500"
Public Const MODEL LS505 = "C.T.S. LS505"
Public Const MODEL LS510S = "C.T.S. LS510S"
Public Const MODEL LS510D = "C.T.S. LS510D"
Public Const MODEL LS515S = "C.T.S. LS515S"
Public Const MODEL LS515D = "C.T.S. LS515D"
Public Const MODEL_LS5151 = "C.T.S. LS515/1"
Public Const MODEL_LS5152 = "C.T.S. LS515/2"
Public Const MODEL_LS5153 = "C.T.S. LS515/3"
Public Const MODEL_LS5155 = "C.T.S. LS515/5"
Public Const MODEL LS5156 = "C.T.S. LS515/6"
        REPLY-CODE
Public Const LS_OKAY = 0
    ERRORS
Public Const LS_SYSTEM_ERROR = -1
Public Const LS_USB_ERROR = -2
Public Const LS PERIPHERAL NOT FOUND = -3
Public Const LS_HARDWARE_ERROR = -4
Public Const LS PERIPHERAL OFF ON = -5
Public Const LS_RESERVED_ERROR = -6
Public Const LS_PAPER_JAM = -7
Public Const LS_TARGET_BUSY = -8
Public Const LS_INVALID_COMMAND = -9
Public Const LS_DATA_LOST = -10
Public Const LS_COMMAND_IN_EXECUTION_YET = -11
Public Const LS_JPEG_ERROR = -12
Public Const LS_COMMAND_SEQUENCE_ERROR = -13
Public Const LS_NOT_USED = -14
Public Const LS IMAGE OVERWRITE = -15
Public Const LS_INVALID_HANDLE = -16
Public Const LS NO LIBRARY LOAD = -17
Public Const LS_BMP_ERROR = -18
Public Const LS TIFF ERROR = -19
Public Const LS_IMAGE_NO_MORE_AVAILABLE = -20
```



Public Const LS IMAGE NO FILMED = -21 Public Const LS IMAGE NOT PRESENT = -22 Public Const LS_FUNCTION_NOT_AVAILABLE = -23 Public Const LS_DOCUMENT_NOT_SUPPORTED = -24 Public Const LS_BARCODE_ERROR = -25 Public Const LS_INVALID_LIBRARY = -26 Public Const LS_INVALID_IMAGE = -27 Public Const LS_INVALID_IMAGE_FORMAT = -28 Public Const LS_INVALID_BARCODE_TYPE = -29 Public Const LS_OPEN_NOT_DONE = -30 Public Const LS_INVALID_TYPE_COMMAND = -31 Public Const LS INVALID CLEARBLACK = -32 Public Const LS INVALID SIDE = -33 Public Const LS_MISSING_IMAGE = -34 Public Const LS INVALID TYPE = -35 Public Const LS_INVALID_SAVEMODE = -36 Public Const LS_INVALID_PAGE_NUMBER = -37 Public Const LS INVALID NRIMAGE = -38 Public Const LS_INVALID_STAMP = -39 Public Const LS_INVALID_WAITTIMEOUT = -40 Public Const LS INVALID VALIDATE = -41 Public Const LS_INVALID_CODELINE_TYPE = -42 Public Const LS_MISSING_NRIMAGE = -43 Public Const LS_INVALID_SCANMODE = -44 Public Const LS_INVALID_BEEP = -45 Public Const LS_INVALID_FEEDER = -46 Public Const LS_INVALID_SORTER = -47 Public Const LS_INVALID_BADGE_TRACK = -48 Public Const LS_MISSING_FILENAME = -49 Public Const LS_INVALID_QUALITY = -50 Public Const LS_INVALID_FILEFORMAT = -51 Public Const LS_INVALID_COORDINATE = -52 Public Const LS MISSING HANDLE VARIABLE = -53 Public Const LS INVALID POLO FILTER = -54 Public Const LS_INVALID_ORIGIN_MEASURES = -55 Public Const LS_INVALID_SIZEH_VALUE = -56 Public Const LS_INVALID_FORMAT = -57 Public Const LS_STRINGS_TOO_LONGS = -58 Public Const LS READ IMAGE FAILED = -59 Public Const LS_INVALID_CMD_HISTORY = -60 Public Const LS_MISSING_BUFFER_HISTORY = -61 Public Const LS INVALID ANSWER = -62 Public Const LS OPEN FILE ERROR OR NOT FOUND = -63 Public Const LS_READ_TIMEOUT_EXPIRED = -64 Public Const LS_INVALID_METHOD = -65 Public Const LS_CALIBRATION_FAILED = -66 Public Const LS_INVALID_SAVEIMAGE = -67 Public Const LS_UNIT = -68 Public Const LS_INVALID_NRWINDOWS = -71 Public Const LS_INVALID_VALUE = -72 Public Const LS_ILLEGAL_REQUEST = -73 Public Const LS_INVALID_NR_CRITERIA = -74 Public Const LS_MISSING_CRITERIA_STRUCTURE = -75 Public Const LS INVALID MOVEMENT = -76 Public Const LS INVALID DEGREE = -77 Public Const LS R0TATE ERROR = -78

Public Const LS SCAN NETTO IMAGE NOT SUPPORTED = -521

Public Const LS_256_GRAY_NOT_SUPPORTED = -522



```
Public Const LS INVALID PATH = -523
Public Const LS MISSING CALLBACK FUNCTION = -526
Public Const LS_INVALID_OCR_IMAGE_SIDE = -558
Public Const LS PERIPHERAL NOT ANSWER = -599
Public Const LS INVALID CONNECTION HANDLE = -1000
Public Const LS_INVALID_CONNECT_PERIPHERAL = -1001
Public Const LS_PERIPHERAL_NOT_YET_INTEGRATE = -1002
Public Const LS UNKNOW PERIPHERAL REPLY = -1003
Public Const LS_DECODE_FONT_NOT_PRESENT = -1101
Public Const LS DECODE INVALID COORDINATE = -1102
Public Const LS DECODE INVALID OPTION = -1103
Public Const LS_DECODE_INVALID_CODELINE_TYPE = -1104
Public Const LS_DECODE_SYSTEM_ERROR = -1105
Public Const LS_DECODE_DATA_TRUNC = -1106
Public Const LS_DECODE_INVALID_BITMAP = -1107
Public Const LS DECODE ILLEGAL USE = -1108
Public Const LS_BARCODE_GENERIC_ERROR = -1201
Public Const LS BARCODE NOT DECODABLE = -1202
Public Const LS_BARCODE_OPENFILE_ERROR = -1203
Public Const LS_BARCODE_READBMP_ERROR = -1204
Public Const LS_BARCODE_MEMORY_ERROR = -1205
Public Const LS_BARCODE_START_NOTFOUND = -1206
Public Const LS_BARCODE_STOP_NOTFOUND = -1207
Public Const LS_PDF_NOT_DECODABLE = -1301
Public Const LS_PDF_READBMP_ERROR = -1302
Public Const LS_PDF_BITMAP_FORMAT_ERROR = -1303
Public Const LS_PDF_MEMORY_ERROR = -1304
Public Const LS_PDF_START_NOTFOUND = -1305
Public Const LS PDF STOP NOTFOUND = -1306
Public Const LS PDF LEFTIND ERROR = -1307
Public Const LS_PDF_RIGHTIND_ERROR = -1308
Public Const LS PDF OPENFILE ERROR = -1309
     WARNINGS
'// -----
Public Const LS FEEDER EMPTY = 1
Public Const LS_DATA_TRUNCATED = 2
Public Const LS_DOC_PRESENT = 3
Public Const LS_BADGE_TIMEOUT = 4
Public Const LS_ALREADY_OPEN = 5
Public Const LS_PERIF_BUSY = 6
Public Const LS_DOUBLE_LEAFING_WARNING = 7
Public Const LS_COMMAND_NOT_ENDED = 8
Public Const LS_RETRY = 9
Public Const LS_NO_OTHER_DOCUMENT = 10
Public Const LS_QUEUE_FULL = 11
Public Const LS_NO_SENSE = 12
Public Const LS TRY TO RESET = 14
Public Const LS_STRING_TRUNCATED = 15
Public Const LS COMMAND NOT SUPPORTED = 19
Public Const LS DOUBLE LEAFING ERROR = 38
Public Const LS KEEP DOC ON CODELINE ERROR = 39
Public Const LS_LOOP_INTERRUPTED = 40
```



```
Public Const LS SORTER1 FULL = 35
Public Const LS_SORTER2_FULL = 36
Public Const LS_SORTERS_BOTH_FULL = 37
Public Const LS_SORTER_1_POCKET_1_FULL = 51
Public Const LS_SORTER_1_POCKET_2_FULL = 52
Public Const LS_SORTER_1_POCKET_3_FULL = 53
Public Const LS_SORTER_2_POCKET_1_FULL = 54
Public Const LS_SORTER_2_POCKET_2_FULL = 55
Public Const LS_SORTER_2_POCKET_3_FULL = 56
Public Const LS_SORTER_3_POCKET_1_FULL = 57
Public Const LS_SORTER_3_POCKET_2_FULL = 58
Public Const LS SORTER 3 POCKET 3 FULL = 59
Public Const LS SORTER 4 POCKET 1 FULL = 60
Public Const LS_SORTER_4_POCKET_2_FULL = 61
Public Const LS_SORTER_4_POCKET_3_FULL = 62
Public Const LS_SORTER_5_POCKET_1_FULL = 63
Public Const LS_SORTER_5_POCKET_2_FULL = 64
Public Const LS SORTER 5 POCKET 3 FULL = 65
         DEFINES STRUTTURES
Public Type TReadOption
  PutBlanks As Long
  TypeRead As Byte
End Type 'READOPTIONS, *LPREADOPTIONS;
Public Type TDATAOPTICALWINDOW
  TypeRead As Byte '// Type of read choise Reserved As Byte '// Reserved
  XRightBottom As Integer '// X1 coordinates
  YRightBottom As Integer '// Y1 coordinates
  Size As Integer
                    '// size
  Height As Integer
                      '// height
End Type 'DATAOPTICALWINDOW, *PDATAOPTICALWINDOW;
Public Type TDATASORTERSELECT
  Type Criteria As Byte /// Type of criteria choise
  CharToStart As Byte
                               '// Char to start check in the codeline
  NrCharCheck As Byte
                                '// Lenght string 1 and/or string 2
  String1(1 To MAX_CHAR_CHECK) As Byte '// String 1
  String2(1 To MAX_CHAR_CHECK) As Byte '// String 2
  bin As Byte
                           '// Bin where put the document
End Type 'DATASORTERSELECT, *PDATASORTERSELECT;
Public Type LS_DATASORTERSELECT
  ' struct defined in this way to make it contiguous
  TypeCriteria1 As Byte
  CharToStart1 As Byte
  NrCharCheck1 As Byte
  FristString1 As String * 10
  SecondString1 As String * 10
  Bin1 As Byte
```



```
TypeCriteria2 As Byte
  CharToStart2 As Byte
  NrCharCheck2 As Byte
  FristString2 As String * 10
  SecondString2 As String * 10
  Bin2 As Byte
  TypeCriteria3 As Byte
  CharToStart3 As Byte
  NrCharCheck3 As Byte
  FristString3 As String * 10
  SecondString3 As String * 10
  Bin3 As Byte
  TypeCriteria4 As Byte
  CharToStart4 As Byte
  NrCharCheck4 As Byte
  FristString4 As String * 10
  SecondString4 As String * 10
  Bin4 As Byte
  TypeCriteria5 As Byte
  CharToStart5 As Byte
  NrCharCheck5 As Byte
  FristString5 As String * 10
  SecondString5 As String * 10
  Bin5 As Byte
End Type
'// structure for read usefull information about the just stored image
Public Type THistory
  Size As Integer
                           '// Size of the struct
  doc_sorted As Long
                              '// Document sortered
                                '// Jam in the feeder
  bourrage_feeder As Long
                               '// Jam during the MICR reading
  bourrage_micr As Long
  doc retain As Long
                             '// Nr. of document retained
                               '// Jam after the film
  bourrage_exit As Long
                               '// Nr. of document CMC7, read with error
  doc_cmc7_err As Long
  doc_e13b_err As Long
                               '// Nr. of document E13B, read with error
                                 '// Peripheral time life
  time_peripheral_on As Long
                               '// Nr. of power on
  num_turn_on As Long
  doc ink jet As Long
                              '// Nr. of document printed
                              '// Nr. of document stamped
  doc_stamp As Long
End Type 'S HISTORY, *LPS HISTORY;
'// structures for LS800 call backs
Public Type TCODELINE_INFO
  '// Parameter filled by LsApi
  Size As Integer
                                '// Size of the struct
                                  '// Progessive document number
  NrDoc As Long
  CodelineRead As String * CODE_LINE_LENGTH '// Codeline returned
  NrBytes As Integer
                                  '// Length of the codeline
  Reserved As Long
                                   '// Reserved for future use
  '// Parameter filled by Application
  Sorter As Integer
                                 '// Sorter where put the document
  FormatString1 As Byte
                                    '// Set from application NORMAL or BOLD
  StringToPrint1 As String * 80
                                     '// String line 1 to print rear of the document
  FormatString2 As Byte
                                    '// Set from application NORMAL or BOLD
  StringToPrint2 As String * 80
                                     '// String line 2 to print rear of the document
  FormatString3 As Byte
                                    '// Set from application NORMAL or BOLD
```



```
StringToPrint3 As String * 80
                                    '// String line 3 to print rear of the document
  FormatString4 As Byte
                                   '// Set from application NORMAL or BOLD
  StringToPrint4 As String * 80
                                    '// String line 4 to print rear of the document
End Type
Public Type TIMAGE_INFO
  Size As Integer
                                '// Size of the struct
  NrDoc As Long
                                 '// Progessive document number
  hlmage As Long
                                 '// Image handle
                                  '// Image size bytes
  ImageSize As Long
                                '// Image width
  Width As Long
  Height As Long
                                '// Image height
  Resolution As Long
                                  '// Image resolution
  BitCount As Long
                                 '// Image bit count (level of grey)
  CodelineRead As String * CODE_LINE_LENGTH '// Codeline returned
  NrBytes As Integer
                                 '// Length of the codeline
  Reserved As Long
                                  '// Reserved for future use
  '// Parameter filled by Application
  Sorter As Integer
                              '// Sorter where put the document
                                   '// Set from application NORMAL or BOLD
  FormatString1 As Integer
  StringToPrint1 As String * 80
                                  '// String line 1 to print rear of the document
  FormatString2 As Integer
                                   '// Set from application NORMAL or BOLD
  StringToPrint2 As String * 80
                                  '// String line 2 to print rear of the document
  FormatString3 As Integer
                                   '// Set from application NORMAL or BOLD
  StringToPrint3 As String * 80
                                  '// String line 3 to print rear of the document
  FormatString4 As Integer
                                   '// Set from application NORMAL or BOLD
  StringToPrint4 As String * 80
                                  '// String line 4 to print rear of the document
End Type
Public Type TLS500CODELINE_INFO
  '// Parameter compiled by LsApi.dll
  Size As Integer
                             '// Size of the struct
  NrDoc As Long
                              '// Progessive document number
  CodelineRead As String * CODE_LINE_LENGTH '// Codeline returned
  NrBytes As Integer
                                 '// Length of the codeline
  Reserved As Long
                                  '// Reserved for future use
  '// Parameter compiled by Application
  Sorter As Integer
                                '// Sorter where put the document
  FormatString As Integer
                                   '// Set from application NORMAL or BOLD
  StringToPrint As String * 80
                                    '// String line 1 to print rear of the document
End Type
            EXPORT FUNCTIONS
'// -----
Public Declare Function LSConnect Lib "LsApi.dll" ( _
  ByVal HWND As Long, _
  ByVal hInst As Long, _
  ByVal iPeripheral As Integer, _
  ByRef lphConnect As Integer) As Long
```



```
Public Declare Function LSDisconnect Lib "LsApi.dll" ( _
  ByVal hConnect As Integer, _
  ByVal HWND As Long) As Long
Public Declare Function LSIdentify Lib "LsApi.dll" (_
  ByVal hConnect As Integer, _
  ByVal HWND As Long, _
  ByRef bldent As Byte, _
  ByVal sVendorModel As String, _
  ByVal sProductVersion As String, _
  ByVal sDecoderExpVersion As String, _
  ByVal sInkJetVersion As String, _
  ByVal reserved1 As String, _
  ByVal reserved2 As String) As Long
Public Declare Function LSDocHandle Lib "LsApi.dll" (_
  ByVal hConnect As Integer, _
  ByVal HWND As Long, _
  ByVal iStamp As Integer, _
  ByVal iValidate As Integer, _
  ByVal iCodeline As Integer, _
  ByVal bSide As Byte, _
  ByVal iScanMode As Integer, _
  ByVal iFeeder As Integer, _
  ByVal iSorter As Integer, _
  ByVal iWaitTimeout As Integer, _
  ByVal iBeep As Integer, _
  ByRef IpNrDoc As Long, _
  ByVal iReserved1 As Integer, _
  ByVal IReserved2 As Long) As Long
Public Declare Function LSSetSorterCriteria Lib "LsApi.dll" (_
  ByVal hConnect As Integer, _
  ByVal HWND As Long, _
  ByRef pCriteria As LS_DATASORTERSELECT, _
  ByVal NrCriteria As Integer) As Long
Public Declare Function LSReadImage Lib "LsApi.dll" ( _
  ByVal hConnect As Integer, _
  ByVal HWND As Long, _
```



```
ByVal iClearBlack As Integer,
  ByVal bSide As Byte, _
  ByVal iReadMode As Integer, _
  ByVal INrDoc As Long, _
  ByRef lphFrontImage As Long, _
  ByRef lphBackImage As Long, _
  ByRef lphReserved1 As Long, _
  ByRef lphReserved2 As Long) As Long
Public Declare Function LSSaveDIB Lib "LsApi.dll" ( _
  ByVal HWND As Long, _
  ByVal hImage As Long, _
  ByVal sFilename As String) As Long
Public Declare Function LSSetOpticalWindows Lib "LsApi.dll" (_
  ByVal hConnect As Integer, _
  ByVal HWND As Long, _
  ByRef pDimWindows As TDATAOPTICALWINDOW, _
  ByVal NrWindows As Integer) As Long
Public Declare Function LSReadCodeline Lib "LsApi.dll" (_
  ByVal hConnect As Integer, _
  ByVal HWND As Long, _
  ByVal sCodeline As String, _
  ByRef IpiLength_Codeline As Integer, _
  ByVal sBarcode As String, _
  ByRef lpiLength_Barcode As Integer, _
  ByVal sOptic As String, _
  ByRef IpiLength_Optic As Integer) As Long
Public Declare Function LSCodelineReadFromBitmap Lib "LsApi.dll" (_
  ByVal HWND As Long, _
  ByVal hImage As Long, _
  ByRef lpbCodelineType As Byte, _
  ByVal iUnitMeasure As Integer, _
  ByVal x As Single, _
  ByVal y As Single, _
  ByVal sizeW As Single, _
  ByVal sizeH As Single, _
  ByRef IpOption As TReadOption, _
  ByVal sCodeline As String, _
```



ByRef IpLength As Long) As Long

```
Public Declare Function LSReadPdf417FromBitmap Lib "LsApi.dll" (_
  ByVal HWND As Long, _
  ByVal hImage As Long, _
  ByVal sCodeline As String, _
  ByRef lpLength As Long, _
  ByRef lpbErrorRate As Byte, _
  ByVal IReserved1 As Long, _
  ByVal IReserved2 As Long, _
  ByVal IReserved3 As Long, _
  ByVal IReserved4 As Long) As Long
Public Declare Function LSReadBarcodeFromBitmap Lib "LsApi.dll" (_
  ByVal HWND As Long, _
  ByVal hImage As Long, _
  ByVal bTypeBarcode As Byte, _
  ByVal IPos_x As Long, _
  ByVal IPos_y As Long, _
  ByVal ISizeW As Long, _
  ByVal ISizeH As Long, _
  ByVal sCodeline As String, _
  ByRef IpLength As Long) As Long
Public Declare Function LSConvertImageToBW Lib "LsApi.dll" (_
  ByVal HWND As Long, _
  ByVal iMethod As Integer, _
  ByVal hGrayImage As Long, _
  ByRef lphBWImage As Long, _
  ByVal iPoloFilter As Integer, _
  ByVal sngReserved As Single) As Long
Public Declare Function LSFreeImage Lib "LsApi.dll" (__
  ByVal HWND As Long, _
  ByRef IphImage As Long) As Long
Public Declare Function LSLoadString Lib "LsApi.dll" (_
  ByVal hConnect As Integer, _
  ByVal HWND As Long, _
  ByVal bFormat As Byte, _
  ByVal iLength As Integer, _
```



ByVal sString As String) As Long

```
Public Declare Function LSReset Lib "LsApi.dll" (
  ByVal hConnect As Integer, _
  ByVal HWND As Long, _
  ByVal bReserved As Byte) As Long
Public Declare Function LSAutoDocHandle Lib "LsApi.dll" (ByVal hConnect As Integer, ByVal
HWND As Long, _
  ByVal iStamp As Integer, _
  ByVal iValidate As Integer, _
  ByVal iCodeline As Integer, _
  ByVal iScanMode As Integer, _
  ByVal iFeeder As Integer, _
  ByVal iSorter As Integer, _
  ByVal iNumDocument As Integer, _
  ByVal iClearBlack As Integer, _
  ByVal bSide As Byte, _
  ByVal iReadMode As Integer, _
  ByVal iSaveImage As Integer, _
  ByVal sDirectoryFile As String, _
  ByVal sBaseFilename As String, _
  ByVal pos_x As Single, ByVal pos_y As Single, _
  ByVal sizeW As Single, ByVal sizeH As Single, _
  ByVal iOriginMeasureDoc As Integer, _
  ByVal iOcrlmageSide As Integer, _
  ByVal iFileFormat As Integer, _
  ByVal IQuality As Long, _
  ByVal ISaveMode As Long, _
  ByVal IPageNumber As Long, _
  ByVal iWaitTimeout As Integer, _
  ByVal iBeep As Integer, _
  ByVal Ipfunc1 As Long, ByVal IReserved2 As Long, _
  ByVal IReserved3 As Long) As Long
Public Declare Function LSAutoDocHandleVB Lib "LsApi.dll" (ByVal hConnect As Integer,
  ByVal HWND As Long, _
  ByVal iStamp As Integer,
  ByVal iValidate As Integer, _
  ByVal iCodeline As Integer,
  ByVal iScanMode As Integer, _
  ByVal iFeeder As Integer, _
```



```
ByVal iSorter As Integer,
  ByVal iNumDocument As Integer, _
  ByVal iClearBlack As Integer,
  ByVal bSide As Byte, _
  ByVal iReadMode As Integer,
  ByVal iSaveImage As Integer, _
  ByVal sDirectoryFile As String, _
  ByVal sBaseFilename As String, _
  ByVal pos_x As Single, ByVal pos_y As Single, _
  ByVal sizeW As Single, ByVal sizeH As Single, _
  ByVal iOriginMeasureDoc As Integer, _
  ByVal iOcrImageSide As Integer, _
  ByVal iFileFormat As Integer, _
  ByVal IQuality As Long, _
  ByVal ISaveMode As Long, _
  ByVal IPageNumber As Long, _
  ByVal iWaitTimeout As Integer, _
  ByVal iBeep As Integer, _
  ByVal Ipfunc1 As Long, ByVal IReserved2 As Long, _
  ByVal IReserved3 As Long) As Long
Public Declare Function LS800AutoDocHandleVB Lib "LsApi.dll" (ByVal hConnect As Integer,
  ByVal HWND As Long, ByVal iValidate As Byte, _
  ByVal iCodeline As Integer, ByVal bSide As Byte, _
  ByVal iScanModeFront As Integer, ByVal iScanModeBack As Integer, _
  ByVal iClearBlack As Integer, _
  ByVal iNumDocument As Integer, _
  ByVal iSaveImage As Integer, _
  ByVal sDirectoryFile As String, _
  ByVal sBaseFilename As String, _
  ByVal unit As Integer, _
  ByVal pos_x As Single, ByVal pos_y As Single, _
  ByVal sizeW As Single, ByVal sizeH As Single, _
  ByVal iOcrlmageSide As Integer, _
  ByVal iFileFormat As Integer, _
  ByVal IQuality As Long, _
  ByVal ISaveMode As Long, _
  ByVal IPageNumber As Long, _
  ByVal iBeep As Integer, _
  ByVal lpfunc1 As Long, ByVal lpfunc2 As Long, ByVal lpfunc3 As Long, _
```



ByVal IReserved3 As Long) As Long Public Declare Function LSGetDocData Lib "LsApi.dll" (_ ByVal hConnect As Integer, _ ByVal HWND As Long, _ ByRef IpNrDoc As Long, _ ByVal sFilenameFront As String, _ ByVal sFilenameBack As String, ByVal IReserved1 As Long, _ ByVal IReserved2 As Long, _ ByRef lpFrontImage As Long, _ ByRef lpBackImage As Long, _ ByVal IReserved3 As Long, _ ByVal IReserved4 As Long, _ ByVal sCodelineSW As String, _ ByVal sCodelineHw As String, _ ByVal sBarcode As String, _ ByVal sCodelineOptical As String, _ ByRef lpiDocToRead As Integer, _ ByRef lpErrorType As Long, _ ByVal IReserved5 As Long, _ ByVal IReserved6 As Long) As Long Public Declare Function LSPeripheralStatus Lib "LsApi.dll" (_ ByVal hConnect As Integer, _ ByVal HWND As Long, _ ByRef lpbSenseKey As Byte, _ ByRef lpbStatusByte As Byte) As Long Public Declare Function LSDoubleLeafingSensibility Lib "LsApi.dll" (_ ByVal hConnect As Integer, _ ByVal HWND As Long, _ ByVal myType As Integer, _ ByVal Value As Byte) As Long Public Declare Function LSViewOCRRectangle Lib "LsApi.dll" (_ ByVal HWND As Long, _ ByVal fView As Long) As Long

Public Declare Function LSRS232Configuration Lib "LsApi.dll" (_

ByVal IReserved1 As Integer, ByVal IReserved2 As Long, _



ByVal hConnect As Integer, _

```
ByVal HWND As Long, _
ByVal Port As String, _
ByVal BaudeRate As Long, _
ByVal Parity As Byte, _
ByVal ByteSize As Byte, _
ByVal BitsStop As Byte) As Long

Public Declare Function LSConvertImage200To100dpi Lib "LsApi.dll" ( _
ByVal HWND As Long, _
ByVal h As Long, _
ByRef h1 As Long) As Long
```



Sample code in C# (for .NET)

The source is available on demand:

CtsLsClass.cs

```
using System;
using System.Runtime.InteropServices;
namespace Ls Test
    class CtsLs
        [DllImport("LsApi.dll")]
        public static extern int LSConnect(int hWnd, int hInst, short
Peripheral, ref short hConnect);
        [DllImport("LsApi.dll")]
        public static extern int LSDisconnect(short hConnect, int
        [DllImport("LsApi.dll")]
        public static extern int LSUnitIdentify(short hConnect, int
hWnd, byte[] pLsCfg, IntPtr LsModel, IntPtr FwVersion, IntPtr FwDate, IntPtr PeripheralID, IntPtr BoardVersion, IntPtr DecoderExpVersion,
IntPtr InkJetVersion, IntPtr FeederVersion, IntPtr SorterVersion,
IntPtr MotorVersion, IntPtr Reserved1, IntPtr Reserved2);
        [DllImport("LsApi.dll")]
        public static extern int LSUnitStatus(short hConnect, int
hWnd, ref UNITSTATUS lpStatus);
        [DllImport("LsApi.dll")]
        public static extern int LSReset(short hConnect, int hWnd,
short ResetType);
        [DllImport("LsApi.dll")]
        public static extern int LSLoadStringWithCounterEx(short
hConnect, int hWnd, short PrintType, IntPtr strEndorse, short
LenEndorse, UInt32 StartNumber, short Step);
        [DllImport("LsApi.dll")]
        public static extern int LSLoadString(short hConnect, int
hWnd, short PrintType, short LenEndorse, IntPtr strEndorse);
        [DllImport("LsApi.dll")]
        public static extern int
LSConfigDoubleLeafingAndDocLength(short hConnect, int hWnd, Int32
Type, short Value, Int32 DocMin, Int32 DocMax);
        [DllImport("LsApi.dll")]
        public static extern int LSChangeStampPosition(short
hConnect, int hWnd, short Step, byte Reserved);
        [DllImport("LsApi.dll")]
        public static extern int LSDisableWaitDocument(short
hConnect, int hWnd, bool fWait);
        [DllImport("LsApi.dll")]
        public static extern int LSSetUnitSpeed(short hConnect, int
hWnd, short UnitSpeed);
        [DllImport("LsApi.dll")]
        public static extern int LSSetLightIntensity(short hConnect,
int hWnd, short UnitSpeed);
        [DllImport("LsApi.dll")]
```



```
public static extern int LSModifyPWMUltraViolet(short
hConnect, int hWnd, short UnitSpeed, bool HighContrast, short
Reserved);
        [DllImport("LsApi.dll")]
        public static extern int LSAutoDocHandle(short hConnect, int
hWnd, short Stamp, short Validate, short CodeLine, short ScanMode,
short Feeder, short Sorter, short NumDocument, short ClearBlack, char
Side, short ReadMode, short SaveImage, IntPtr DirectoryFile, IntPtr
BaseFilename, Single pos x, Single pos y, Single sizeW, Single sizeH,
short OriginMeasureDoc, short OcrImageSide, short FileFormat, int
Quality, int SaveMode, int PageNumber, short WaitTimeout, short Beep,
int Reserved1, IntPtr Reserved2, IntPtr Reserved3);
        [DllImport("LsApi.dll")]
       public static extern int LSGetDocData(short hConnect, int
hWnd, ref UInt32 NrDoc, IntPtr FilenameFront, IntPtr FilenameBack,
IntPtr Reserved1, IntPtr Reserved2, ref IntPtr FrontImage, ref IntPtr
Backmage, ref IntPtr Reserved3, ref IntPtr Reserved4, IntPtr
CodelineSW, IntPtr CodelineHW, IntPtr Barcode, IntPtr
CodelinesOptical, ref short DocToRead, ref Int32 NrPrinted, IntPtr
Reserved5, IntPtr Reserved6);
        [DllImport("LsApi.dll")]
        public static extern int LSDocHandle(short hConnect, int
hWnd, short Stamp, short Validate, short CodeLine, char Side, short
ScanMode, short Feeder, short Sorter, short WaitTimeout, short Beep,
ref UInt32 NrDoc, Int16 ScanDocType, Int32 Reserved);
        [DllImport("LsApi.dll")]
       public static extern int LSReadCodeline(short hConnect, int
hWnd, IntPtr CodelineHW, ref short LenCodelineHW, IntPtr Barcode, ref
short LenBarcode, IntPtr CodelinesOptical, ref short LenOptic);
        [DllImport("LsApi.dll")]
       public static extern int LSReadImage(short hConnect, int
hWnd, short ClearBlack, char Side, short ReadMode, UInt32 NrDoc, ref
IntPtr FrontImage, ref IntPtr RearImage, ref IntPtr Reserved1, IntPtr
Reserved2);
        [DllImport("LsApi.dll")]
       public static extern int LSCodelineReadFromBitmap(int hWnd,
IntPtr hImage, byte[] CodelineType, short UintMeasure, float Pos x,
float Pos y, float Width, float Height, ref READOPTIONS ro, IntPtr
Codeline, ref int Length Codeline);
        [DllImport("LsApi.dll")]
       public static extern int LSReadBarcodeFromBitmap(int hWnd,
IntPtr hImage, byte BarcodeType, float Pos_x, float Pos_y, float
Width, float Height, IntPtr Codeline, ref int Length Codeline);
       [DllImport("LsApi.dll")]
       public static extern int LSReadPdf417FromBitmap(int hWnd,
IntPtr hImage, IntPtr Codeline, ref int Length Codeline, byte
Reserved, float Pos x, float Pos y, float Width, float Height);
        [DllImport("LsApi.dll")]
       public static extern int LSMergeImageGrayAndUV(int hWnd,
IntPtr hFrontGrayImage, IntPtr hFrontUVImage, float Reserved, float
Reserved2, ref IntPtr hGrayUVImage);
        [DllImport("LsApi.dll")]
       public static extern int LSFreeImage(int hWnd, ref IntPtr
hImage);
       public struct BITMAPINFOHEADER
            public UInt32 biSize;
            public Int32 biWidth;
            public Int32 biHeight;
```



```
public Int16 biPlanes;
            public Int16 biBitCount;
            public UInt32 biCompression;
            public UInt32 biSizeImage;
            public Int32 biXPelsPerMeter;
            public Int32 biYPelsPerMeter;
            public UInt32 biClrUsed;
            public UInt32 biClrImportant;
        } ;
        public struct UNITSTATUS
            public int Size;
                                                       // Size of the
structure
            public int UnitStatus;
                                                // Ls40 Ls100 Ls150
Ls5xx Ls800
            public bool Photo Feeder;
                                                // Ls40 Ls100 Ls150
Ls5xx Ls800
            public bool Photo Sorter;
                                                         Ls100
            public bool Photo MICR;
                                                //
                                                         Ls100 Ls150
Ls5xx
                                                 //
            public bool Photo Path Ls100;
                                                         Ls100
            public bool Photo Scanners;
                                                //
                                                        Ls100
                                                // Ls40 Ls100 Ls150
            public bool Unit Just ON;
            public bool Photo Double Leafing Down;// Ls100 Ls150
                                                              Ls150
            public bool Photo Double Leafing Middle;//
                                                        Ls100 Ls150
            public bool Photo Double Leafing Up;//
                                                              Ls150
            public bool Photo Card;
                                                //
            public bool Pockets All Full;
                                                //
                                                               Ls150
Ls5xx
            public bool Photo Stamp;
                                                 //
Ls5xx
            public bool Photo Exit;
                                                 //
Ls5xx
            public bool Pocket 1 Full;
                                                 //
Ls5xx
            public bool Pocket 2 Full;
                                                 //
Ls5xx
            public bool Photo Path Feeder;
Ls800
            public bool Photo Path Module Begin;//
Ls800
            public bool Photo_Path_Binary_Rigth;//
Ls800
            public bool Photo Path Binary Left; //
Ls800
            public bool Photo Path Module End; //
Ls800
            public bool Sorter 1 input pocket 1;//
Ls800
            public bool Sorter 1 pocket 1 full; //
Ls800
            public bool Sorter 1 input pocket 2;//
Ls800
            public bool Sorter 1 pocket 2 full; //
Ls800
```



```
public bool Sorter 1 input pocket 3;//
Ls800
            public bool Sorter 1 pocket 3 full; //
Ls800
            public bool Sorter 2 input pocket 1;//
Ls800
            public bool Sorter 2 pocket 1 full; //
Ls800
            public bool Sorter 2 input pocket 2;//
Ls800
            public bool Sorter 2 pocket 2 full; //
Ls800
            public bool Sorter 2 input pocket 3;//
Ls800
            public bool Sorter 2 pocket 3 full; //
Ls800
            public bool Sorter_3_input_pocket_1;//
Ls800
            public bool Sorter 3 pocket 1 full; //
Ls800
            public bool Sorter 3 input pocket 2;//
Ls800
            public bool Sorter 3 pocket 2 full; //
Ls800
            public bool Sorter 3 input pocket 3;//
Ls800
            public bool Sorter 3 pocket 3 full; //
Ls800
            public bool Sorter 4 input pocket 1;//
Ls800
            public bool Sorter 4 pocket 1 full; //
Tis800
            public bool Sorter 4 input pocket 2;//
Ls800
            public bool Sorter 4 pocket 2 full; //
Ls800
            public bool Sorter 4 input pocket 3;//
Ls800
            public bool Sorter 4 pocket 3 full; //
Ls800
            public bool Sorter 5 input pocket 1;//
Ls800
            public bool Sorter_5_pocket_1_full; //
Ls800
            public bool Sorter_5_input_pocket_2;//
Ls800
            public bool Sorter 5 pocket 2 full; //
Ls800
            public bool Sorter 5 input pocket 3;//
Ls800
            public bool Sorter 5 pocket 3 full; //
Ls800
            public bool Sorter 6 input pocket 1;//
Ls800
            public bool Sorter 6 pocket 1 full; //
Ls800
            public bool Sorter 6 input pocket 2;//
Ls800
            public bool Sorter 6 pocket 2 full; //
Ls800
```



```
public bool Sorter 6 input pocket 3;//
Ls800
            public bool Sorter 6 pocket 3 full; //
Ls800
            public bool Sorter 7 input pocket 1;//
Ls800
            public bool Sorter 7 pocket 1 full; //
Ls800
            public bool Sorter 7 input pocket 2;//
Ls800
            public bool Sorter 7 pocket 2 full; //
Ls800
            public bool Sorter 7 input pocket 3;//
Ls800
            public bool Sorter_7_pocket_3_full; //
Ls800
            public bool Photo_Trigger;
                                                // Ls40
            public bool Document Retained;
                                              // Ls40
        };
        public struct READOPTIONS
           public int PutBlanks; // 0 = CodeLIne whitout blans,
1 = CodeLine with 1 blanks
           'X' for CodeLine E13B switch OCRB
        };
        // Parameter Peripheral Type
        public enum LsUnitType : short
            LS 40 LSCONNECT = 39,
            LS 40 USB = 40,
            LS 100 LSCONNECT = 109,
           LS 100 \text{ USB} = 100,
           LS 100 RS232 = 101,
           LS 100 \text{ ETH} = 110,
           LS 150 LSCONNECT = 149,
           LS 150 \text{ USB} = 150,
           LS 200 USB = 201,
            LS 5xx SCSI = 500,
            LS 515 LSCONNECT = 501,
            LS_{515}USB = 502,
            LS 520 \text{ USB} = 520,
            LS 800 \text{ USB} = 801,
        };
        public enum Stamp : short
           {
                  STAMP NO = 0,
                                                      // No stamp is
done
                                                // Stamp on front
                  STAMP FRONT = 1,
document
                  STAMP BACK = 2,
                                                      // Stamp on
rear document
                  STAMP FRONT AND BACK = 3, // Stamp front and
rear document
           };
```



```
public enum PrintValidate : short
                  NO PRINT VALIDATE = 0,
                                           // No print is
done
                  PRINT VALIDATE = 1,
                                                          // Print
done
            PRINT LOGO = 4,
                                           // Print a logo only
                  PRINT VALIDATE WITH LOGO = 5, // Print logo and
lines
            };
        public enum Feeder : short
                                                      // Start
                  FEED AUTO = 0,
Document from Feeder
                                                      // Start
                 FEED FROM PATH = 1,
Document from Unit Path
          };
        public enum Sorter : short
                  SORTER DOC HOLDED = 0,
                  SORTER POCKET 1 = 1,
                  SORTER POCKET 2 = 2,
                  SORTER_AUTOMATIC = 3,
                  SORTER SWICTH 1 TO 2 = 4,
                  SORTER_DOC EJECTED = 5,
                  SORTER ON CODELINE CALLBACK = 6,
                  // For Ls800 unit
                  SORTER CIRCULAR = 48,
                  SORTER SEQUENTIAL = 49,
                  SORTER POCKET 0 SELECTED = 50,
                  SORTER POCKET 1 SELECTED = 51,
                  SORTER POCKET 2 SELECTED = 52,
                  SORTER POCKET 3 SELECTED = 53,
                  SORTER POCKET 4 SELECTED = 54,
                  SORTER POCKET 5 SELECTED = 55,
                  SORTER POCKET 6 SELECTED = 56,
                  SORTER POCKET 7 SELECTED = 57,
                  SORTER POCKET 8 SELECTED = 58,
                  SORTER POCKET 9 SELECTED = 59,
                  SORTER POCKET 10 SELECTED = 60,
                  SORTER POCKET 11 SELECTED = 61,
                  SORTER POCKET 12 SELECTED = 62,
                  SORTER POCKET 13 SELECTED = 63,
                  SORTER POCKET 14 SELECTED = 64,
                  SORTER POCKET 15 SELECTED = 65,
                  SORTER POCKET 16 SELECTED = 66,
                  SORTER POCKET 17 SELECTED = 67,
                  SORTER POCKET 18 SELECTED = 68,
                  SORTER POCKET 19 SELECTED = 69,
                  SORTER POCKET 20 SELECTED = 70,
                  SORTER POCKET 21 SELECTED = 71,
            };
        public enum CodeLineType : byte
                  NO READ CODELINE = 0,
```



```
READ CODELINE HW MICR = 1,
           READ CODELINE E13B MICR WITH OCR = 15,
           READ CODELINE SW OCRA = 65, //'A',
          READ CODELINE SW OCRB NUM = 66, //'B',
          READ CODELINE SW OCRB ALFANUM = 67, //'C',
          READ_CODELINE_SW_OCRB_ITALY = 70, //'F', READ_CODELINE_SW_E13B = 69, //'E',
          READ CODELINE SW E13B X OCRB = 88, //'X',
          READ_BARCODE_2_OF_5 = 50,
          READ_BARCODE_CODE39 = 51,
           READ_BARCODE_CODE128 = 52,
           READ BARCODE EAN13 = 53,
    MAX CODE LINE LENGTH = 254,
public enum Unit : short
    {
          UNIT MM = 0,
          UNIT INCH = 1,
    };
    public class OcrHeight
        public const double OCR MAX HEIGHT IN MM = 10.5;
    public const double OCR MAX HEIGHT IN INCH = 0.41;
    public enum BlankInCodeline : short
           BLANK IN CODELINE NO = 0,
           BLANK IN CODELINE YES = 1,
    };
    public enum OriginOCR : short
           ORIGIN BOTTOM RIGHT MM = 10,
           ORIGIN BOTTOM RIGHT INCH = 20,
    };
    public enum ScanMode : short
          SCAN MODE BW = 1,
          SCAN MODE 16 GRAY 100 = 2,
          SCAN MODE 16 GRAY 200 = 3,
          SCAN MODE 256 GRAY 100 = 4,
          SCAN MODE 256 \text{ GRAY } 200 = 5,
          SCAN MODE COLOR 100 = 10,
          SCAN MODE COLOR 200 = 11,
          SCAN MODE 16 GRAY 300 = 20,
          SCAN MODE 256 GRAY 300 = 21,
                                 = 22,
          SCAN MODE COLOR 300
          SCAN_MODE_256GR100_AND_UV = 40,
SCAN_MODE_256GR200_AND_UV = 41,
           SCAN MODE 256GR300 AND UV = 42,
    };
    public enum ScanDocType : short
```



```
{
      SCAN PAPER DOCUMENT = 0,
      SCAN^{-}CARD = 1 ,
};
public enum Side : short
      SIDE NONE IMAGE = 78, //'N',
      SIDE\_FRONT\_IMAGE = 70, //'F',
      SIDE_BACK_IMAGE = 66, //'B',
      SIDE ALL IMAGE = 88, //'X',
      SIDE FRONT UV = 85, //'U',
      SIDE FRONT MERGED = 77, //'M',
};
public enum Wait : short
      WAIT NO = 71, //'G',
      WAIT YES = 87, //'W',
};
public enum Beep : short
      BEEP NO = 0,
      BEEP YES = 1,
} ;
public enum ClearBlack : short
      CLEAR BLACK NO = 0,
      CLEAR BLACK YES = 1,
      CLEAR AND ALIGN IMAGE = 2,
};
public enum PrintFont : byte
      PRINT FORMAT NORMAL = 78, //'N',
      PRINT FORMAT BOLD = 66, //'B',
      PRINT FORMAT NORMAL 15 = 65, //'A',
      PRINT FORMAT DOUBLE HIGH = 68, //'D',
      PRINT UP FORMAT NORMAL = 110, //'n',
      PRINT UP FORMAT BOLD = 98, //'b',
      PRINT_UP_FORMAT_NORMAL_15_CHAR = 97, //'a',
};
public enum DoubleLeafing : short
      DOUBLE LEAFING WARNING = 0 ,
      DOUBLE LEAFING_ERROR = 1 ,
      //DOUBLE LEAFING LEVEL1 = 1, non lo uso piu'
      DOUBLE LEAFING LEVEL2 = 2,
      DOUBLE LEAFING LEVEL3 = 3,
      DOUBLE LEAFING DEFAULT = 4,
      DOUBLE LEAFING LEVEL4 = 5,
      DOUBLE LEAFING LEVEL5 = 6,
      DOUBLE LEAFING DISABLE = 7,
};
```



public enum Reset : short

```
RESET ERROR = 48, //'0',
          RESET_PATH = 49, //'1',
RESET_BELT_CLEANING = 50, //'2',
    };
    public enum ImageSave : short
          IMAGE SAVE ON FILE = 4,
          IMAGE\_SAVE\_HANDLE = 5,
          IMAGE\_SAVE\_BOTH = 6,
          IMAGE SAVE NONE = 7,
    };
    public enum FileType : short
         FILE_JPEG = 10,
         FILE BMP = 11,
         FILE TIF = 3,
         FILE CCITT = 25,
         FILE CCITT GROUP3 1DIM = 27,
         FILE CCITT_GROUP3_2DIM = 28,
          FILE CCITT GROUP4 = 29,
    } ;
    public enum FileAttribute : short
          SAVE OVERWRITE = 0,
          SAVE APPEND = 1,
          SAVE REPLACE = 2,
          SAVE INSERT = 3,
    };
    public enum Badge : short
          BADGE READ TRACK 1 = 0 \times 20,
          BADGE READ TRACK 2 = 0x40,
          BADGE READ TRACK 3 = 0 \times 80,
          BADGE READ TRACKS 1 2 = 0 \times 60,
          BADGE READ TRACKS 2 3 = 0xc0,
          BADGE_READ_TRACKS_1_2_3 = 0xe0,
    } ;
public class LsReply
                               REPLY-CODE
    public const int LS OKAY = 0;
    // -----
                       ERRORS
    public const int LS SYSTEM ERROR = -1;
```



```
public const int LS USB ERROR = -2;
public const int LS PERIPHERAL NOT FOUND = -3;
public const int LS HARDWARE ERROR = -4;
public const int LS PERIPHERAL OFF ON = -5;
public const int LS RESERVED ERROR = -6;
public const int LS PAPER JAM = -7;
public const int LS_TARGET_BUSY = -8;
public const int LS_INVALID_COMMAND = -9;
public const int LS_DATA_LOST = -10;
public const int LS_COMMAND_IN_EXECUTION_YET = -11;
public const int LS_JPEG_ERROR = -12;
public const int LS_COMMAND_SEQUENCE_ERROR = -13;
public const int LS_PC_HW_ERROR = -14;
public const int LS_IMAGE_OVERWRITE = -15;
public const int LS_INVALID_HANDLE = -16;
public const int LS_NO_LIBRARY_LOAD = -17;
public const int LS_BMP_ERROR = -18;
public const int LS_TIFF_ERROR = -19;
public const int LS IMAGE NO MORE AVAILABLE = -20;
public const int LS_IMAGE_NO_FILMED = -21;
public const int LS IMAGE NOT PRESENT = -22;
public const int LS FUNCTION NOT AVAILABLE = -23;
public const int LS DOCUMENT NOT SUPPORTED = -24;
public const int LS BARCODE ERROR = -25;
public const int LS INVALID LIBRARY = -26;
public const int LS_INVALID_IMAGE = -27;
public const int LS INVALID IMAGE FORMAT = -28;
public const int LS INVALID BARCODE TYPE = -29;
public const int LS OPEN NOT DONE = -30;
public const int LS INVALID TYPE COMMAND = -31;
public const int LS INVALID CLEARBLACK = -32;
public const int LS INVALID SIDE = -33;
public const int LS MISSING IMAGE = -34;
public const int LS INVALID TYPE = -35;
public const int LS INVALID SAVEMODE = -36;
public const int LS INVALID PAGE NUMBER = -37;
public const int LS INVALID NRIMAGE = -38;
public const int LS INVALID STAMP = -39;
public const int LS INVALID WAITTIMEOUT = -40;
public const int LS INVALID VALIDATE = -41;
public const int LS INVALID CODELINE TYPE = -42;
public const int LS MISSING NRIMAGE = -43;
public const int LS INVALID SCANMODE = -44;
public const int LS INVALID BEEP = -45;
public const int LS INVALID FEEDER = -46;
public const int LS INVALID SORTER = -47;
public const int LS INVALID BADGE TRACK = -48;
public const int LS MISSING FILENAME = -49;
public const int LS INVALID QUALITY = -50;
public const int LS INVALID FILEFORMAT = -51;
public const int LS INVALID COORDINATE = -52;
public const int LS MISSING HANDLE VARIABLE = -53;
public const int LS INVALID POLO FILTER = -54;
public const int LS INVALID ORIGIN MEASURES = -55;
public const int LS INVALID SIZEH VALUE = -56;
public const int LS INVALID FORMAT = -57;
public const int LS STRINGS TOO LONGS = -58;
public const int LS READ IMAGE FAILED = -59;
public const int LS INVALID CMD HISTORY = -60;
public const int LS MISSING BUFFER HISTORY = -61;
```



```
public const int LS INVALID ANSWER = -62;
            public const int LS OPEN FILE ERROR OR NOT FOUND = -63;
            public const int LS READ TIMEOUT EXPIRED = -64;
            public const int LS INVALID METHOD = -65;
            public const int LS CALIBRATION FAILED = -66;
            public const int LS INVALID SAVEIMAGE = -67;
            public const int LS_INVALID_SAVEIMAGE = -07;

public const int LS_INVALID_UNIT = -68;

public const int LS_INVALID_NRWINDOWS = -71;

public const int LS_INVALID_VALUE = -72;

public const int LS_ILLEGAL_REQUEST = -73;
             public const int LS_INVALID_NR_CRITERIA = -74;
            public const int LS_MISSING_CRITERIA_STRUCTURE = -75;
            public const int LS_INVALID_MOVEMENT = -76;
            public const int LS_INVALID_DEGREE = -77;
            public const int LS_ROTATE_ERROR = -78;
            public const int LS_MICR_VALUE_OUT_OF RANGE = -79;
            public const int LS_PERIPHERAL_RESERVED = -80;
            public const int LS_INVALID_NCHANGE = -81;
            public const int LS BRIGHTNESS ERROR = -82;
            public const int LS CONTRAST ERROR = -83;
            public const int LS INVALID SIDETOPRINT = -84;
            public const int LS DOUBLE LEAFING ERROR = -85;
            public const int LS INVALID BADGE TIMEOUT = -86;
            public const int LS INVALID RESET TYPE = -87;
            public const int LS MISSING SET CALLBACK = -88;
            public const int LS_IMAGE_NOT 200 DPI = -89;
            public const int LS DOWNLOAD ERROR = -90;
            public const int LS_INVALID_SORT ON CHOICE = -91;
            public const int LS INVALID FONT = -92;
            public const int LS INVALID UNIT SPEED = -93;
            public const int LS INVALID LENGTH = -94;
            public const int LS SHORT PAPER = -95;
            public const int LS INVALID DOC LENGTH = -96;
            public const int LS INVALID DOCSLONG = -97;
            public const int LS IMAGE NOT 256 COLOR = -98;
            public const int LS BATTERY NOT CHARGED = -99;
            public const int LS INVALID SCAN DOC TYPE = -100;
            public const int LS ILLEGAL SCAN CARD SPEED = -101;
            public const int LS INVALID PWM VALUE = -102;
            public const int LS INVALID KEY LENGTH = -103;
            public const int LS INVALID PASSWORD = -104;
            public const int LS UNIT LOCKED = -105;
            public const int LS INVALID IMAGEFORMAT = -106;
            public const int LS INVALID THRESHOLD = -107;
            public const int LS NO START FOR SORTER FULL = -108;
            public const int LS IPBOX ADDRESS NOT FOUNDED = -109;
            public const int LS INVALID LED COMMAND = -110;
            public const int LS INVALID COLOR PARAMETER = -111;
            public const int LS JAM AT MICR PHOTO = -201;
            public const int LS JAM DOC TOO LONG = -202;
            public const int LS JAM AT SCANNER PHOTO = -203;
            public const int LS SCAN NETTO IMAGE NOT SUPPORTED = -
521;
            public const int LS 256 GRAY NOT SUPPORTED = -522;
            public const int LS INVALID PATH = -523;
            public const int LS MISSING CALLBACK FUNCTION = -526;
            public const int LS_INVALID OCR IMAGE SIDE = -558;
            public const int LS PERIPHERAL NOT ANSWER = -599;
```



```
public const int LS INVALID CONNECTION HANDLE = -1000;
public const int LS INVALID CONNECT PERIPHERAL = -1001;
public const int LS PERIPHERAL NOT YET INTEGRATE = -1002;
public const int LS UNKNOW PERIPHERAL REPLY = -1003;
public const int LS CODELINE ALREADY DEFINED = -1004;
public const int LS INVALID NUMBER OF DOC = -1005;
public const int LS DECODE FONT NOT PRESENT = -1101;
public const int LS_DECODE_INVALID_COORDINATE = -1102;
public const int LS_DECODE_INVALID_OPTION = -1103;
public const int LS_DECODE_INVALID_CODELINE_TYPE = -1104;
public const int LS_DECODE_SYSTEM_ERROR = -1105;
public const int LS_DECODE_DATA_TRUNC = -1106;
public const int LS_DECODE_INVALID_BITMAP = -1107;
public const int LS DECODE ILLEGAL USE = -1108;
public const int LS_BARCODE_GENERIC_ERROR = -1201;
public const int LS BARCODE NOT DECODABLE = -1202;
public const int LS BARCODE OPENFILE ERROR = -1203;
public const int LS BARCODE READBMP ERROR = -1204;
public const int LS BARCODE MEMORY ERROR = -1205;
public const int LS BARCODE START NOTFOUND = -1206;
public const int LS BARCODE STOP NOTFOUND = -1207;
public const int LS PDF NOT DECODABLE = -1301;
public const int LS PDF READBMP ERROR = -1302;
public const int LS PDF BITMAP FORMAT ERROR = -1303;
public const int LS PDF MEMORY ERROR = -1304;
public const int LS PDF START NOTFOUND = -1305;
public const int LS PDF STOP NOTFOUND = -1306;
public const int LS PDF LEFTIND ERROR = -1307;
public const int LS PDF RIGHTIND ERROR = -1308;
public const int LS PDF OPENFILE ERROR = -1309;
// -----
                  WARNINGS
// -----
public const int LS FEEDER EMPTY = 1;
public const int LS DATA TRUNCATED = 2;
public const int LS DOC PRESENT = 3;
public const int LS BADGE TIMEOUT = 4;
public const int LS ALREADY OPEN = 5;
public const int LS PERIPHERAL BUSY = 6;
public const int LS DOUBLE LEAFING WARNING = 7;
public const int LS COMMAND NOT ENDED = 8;
public const int LS RETRY = 9;
public const int LS NO OTHER DOCUMENT = 10;
public const int LS QUEUE FULL = 11;
public const int LS NO SENSE = 12;
public const int LS TRY TO RESET = 14;
public const int LS STRING TRUNCATED = 15;
public const int LS COMMAND NOT SUPPORTED = 19;
public const int LS SORTER1 FULL = 35;
public const int LS SORTER2 FULL = 36;
public const int LS SORTERS BOTH FULL = 37;
public const int LS KEEP DOC ON CODELINE ERROR = 39;
```



```
public const int LS LOOP INTERRUPTED = 40;
               public const int LS SORTER 1 POCKET 1 FULL = 51;
               public const int LS SORTER 1 POCKET 2 FULL = 52;
               public const int LS SORTER 1 POCKET 3 FULL = 53;
               public const int LS_SORTER_2_POCKET_1 FULL = 54;
               public const int LS_SORTER_2 POCKET_1 FULL = 54;
public const int LS_SORTER_2 POCKET_2 FULL = 55;
public const int LS_SORTER_2 POCKET_3 FULL = 56;
public const int LS_SORTER_3 POCKET_1 FULL = 57;
public const int LS_SORTER_3 POCKET_2 FULL = 58;
public const int LS_SORTER_3 POCKET_3 FULL = 59;
public const int LS_SORTER_4 POCKET_1 FULL = 60;
public const int LS_SORTER_4 POCKET_2 FULL = 61;
public const int LS_SORTER_4 POCKET_3 FULL = 62;
public const int LS_SORTER_5 POCKET_1 FULL = 63;
               public const int LS_SORTER_5_POCKET_1_FULL = 63;
               public const int LS_SORTER_5_POCKET_2_FULL = 64;
               public const int LS_SORTER_5_POCKET_3_FULL = 65;
               public const int LS_SORTER_6_POCKET_1_FULL = 66;
               public const int LS SORTER 6 POCKET 2 FULL = 67;
               public const int LS_SORTER_6_POCKET_3_FULL = 68;
               public const int LS_SORTER_7_POCKET_1_FULL = 69;
               public const int LS_SORTER_7_POCKET_2_FULL = 70;
               public const int LS SORTER 7 POCKET 3 FULL = 71;
          } ;
     }
}
private void identify(short model)
        byte[] UnitCfg = new byte[4];
        IntPtr strLsModel = Marshal.AllocHGlobal(20);
        IntPtr strFwVersion = Marshal.AllocHGlobal(20);
        IntPtr Date Fw = Marshal.AllocHGlobal(20);
        IntPtr strUnitID = Marshal.AllocHGlobal(20);
        IntPtr strInkJetVersion = Marshal.AllocHGlobal(20);
        IntPtr DecoderExpVersion = Marshal.AllocHGlobal(20);
        string i, i1;
        byte a, b;
        ident.Text = "";
        Reply = LSConnect(0, 0, model, ref hConnect);
        if (Reply == CtsLs.LsReply.LS OKAY)
              String strIdentify;
              string blankOpt = "
               ReplyCode.Text = "OK"; ReplyCode.Visible = true;
                Reply = CtsLs.LSUnitIdentify(hConnect, 0,
                                                       UnitCfg,
                                                       strLsModel,
                                                       strFwVersion,
                                                       Date Fw,
                                                       strUnitID,
                                                       IntPtr.Zero, // BoardVersion
```



```
DecoderExpVersion,
                                          strInkJetVersion,
                                          IntPtr.Zero,
//FeederVersion,
                                          IntPtr.Zero,
//SorterVersion,
                                          IntPtr.Zero, //Motorversion,
                                          IntPtr.Zero, //Reserved1,
                                          IntPtr.Zero);//Reserved2
            if (Reply == LS OKAY)
                switch (model)
                case LS_100_USB:
   strIdentify = "FW version: " + Marshal.PtrToStringAnsi(strLsModel)
+ "\n"
               + "FW Date: " + Marshal.PtrToStringAnsi(strFwVersion)
+ "\n"
               + "Serial #: " +
Marshal.PtrToStringAnsi(strSerialNumber) + "\n";
                     i1 = "OPTIONS:\n";
                     b = 0x1;
                     a = (byte) (LpldPnt[1] & b);
                     if (a == 0x1)
                         i1 = i1 + "Micr ";
                     b = 0x8;
                     a = (byte) (LpldPnt[1] & b);
                     if (a == 0x8)
                           i1 = i1 + "Ink-jet ";
                           inkJetPresent = true;
                      }
                     b = 0x10;
                     a = (byte)(LpldPnt[1] \& b);
                     if (a == 0x10)
                          i1 = i1 + "Feeder ";
                     b = 0x20;
                     a = (byte)(LpldPnt[1] \& b);
                     if (a == 0x20)
                           i1 = i1 + "Stamp ";
                      a = (byte) (LpldPnt[2] & 0x04);
                      if (a != 0)
                                                 // Badge present
                      {
                          a = (byte)(LpldPnt[2] & 0x10);
                         if (a != 0)
                              i1 = i1 + "Badge123";
                          a = (byte) (LpldPnt[2] & 0x08);
                          if (a != 0)
                               i1 = i1 + "Badge12";
                          else
                               i1 = i1 + "Badge23";
                      strLsModel += i1 ;
                     break;
                case LS 150 USB:
        strIdentify = "Model : " +
Marshal.PtrToStringAnsi(strLsModel) + "\n" +
```



```
"FW version : " +
Marshal.PtrToStringAnsi(strFwVersion) + "\n" +
                      "FW date : " + Marshal.PtrToStringAnsi(Date Fw)
+ "\n\n" +
                    "Serial #: " + Marshal.PtrToStringAnsi(strUnitID)
+ "\n\n" +
                     "Options :\n";
                    if ((UnitCfg[0] \& 0x01) == 0x01)
                        strIdentify += blankOpt + "MICR reader\n";
                    if ((UnitCfg[0] & 0x02) == 0x02)
                        strIdentify += blankOpt + "Unit set in Normal
Speed\n";
                    else
                        strIdentify += blankOpt + "Unit set in High
Speed\n";
                    if ((UnitCfg[0] & 0x04) == 0x04)
                        strIdentify += blankOpt + "Feeder
Motorized\n":
                    if ((UnitCfg[0] \& 0x08) == 0x08)
                        if ((UnitCfg[2] & 0x08) == 0x08)
                            strIdentify += blankOpt + "High
Definition Ink-jet printer\n";
                        else
                            strIdentify += blankOpt + "Endorsement
Ink-jet printer\n";
                    if ((UnitCfg[0] & 0x10) == 0x10)
                        strIdentify += blankOpt + "Feeder with
Electromagnet 50 Doc.\n";
                    if ((UnitCfg[0] & 0x20) == 0x20)
                        strIdentify += blankOpt + "Voiding front
stamp\n";
                    if ((UnitCfg[1] \& 0x04) == 0x04)
                        strIdentify += blankOpt + "Scanner FRONT with
Ultra Violet\n";
                    else if ((UnitCfq[1] \& 0x01) == 0x01)
                        strIdentify += blankOpt + "Scanner FRONT\n";
                    if ((UnitCfg[1] & 0x02) == 0x02)
                        strIdentify += blankOpt + "Scanner REAR\n";
                    if ((UnitCfg[1] & 0x20) == 0x20)
                        strIdentify += blankOpt + "COLOR version\n";
                    if ((UnitCfg[1] & 0x08) == 0x08)
                        if ((UnitCfg[1] \& 0x10) == 0x10)
                            strIdentify += blankOpt + "Badge reader
with tracks 1/2/3\n";
                        else
                            strIdentify += blankOpt + "Badge reader
with tracks 2/3\n";
                    else if ((UnitCfg[1] \& 0x10) == 0x10)
                        strIdentify += blankOpt + "Badge reader with
tracks 1/2\n";
                            break;
                case LS 515 USB:
      strIdentify = "FW version: " +
Marshal.PtrToStringAnsi(strLsModel) + "\n"
```



```
+ "FW Date: " +
Marshal.PtrToStringAnsi(strFwVersion) + "\n"
               + "Serial #: " +
Marshal.PtrToStringAnsi(strSerialNumber) + "\n";
                        i1 = "OPTIONS:\n";
                       b = 0x1;
                        a = (byte)(LpldPnt[1] \& b);
                        if (a == 0x1)
                             i1 = i1 + "CMC7";
                        b = 0x2;
                        a = (byte) (LpldPnt[1] & b);
                        if (a == 0x2)
                            i1 = i1 + "E13B";
                        b = 0x8;
                        a = (byte)(LpldPnt[1] \& b);
                        if (a == 0x8)
                        {
                            i1 = i1 + "Ink-jet ";
                            inkJetPresent = true;
                       b = 0x10;
                        a = (byte) (LpldPnt[1] & b);
                        if (a == 0x10)
                           i1 = i1 + "BackStamp ";
                       b = 0x20;
                        a = (byte)(LpldPnt[1] & b);
                        if (a == 0x20)
                           i1 = i1 + "FrontStamp ";
                        a = (byte)(LpldPnt[2] & 0x10);
                                                        // Badge
                        if (a == 0x10)
present
                            i1 = i1 + "Badge";
                        strIdentify += i1;
                       break;
                }
            }
            else
            {
                strIdentify = "Connect not possible: error " +
                                    ErrorCode.ToString());
            }
            MessageBox.Show(strIdentify, TITLE_POPUP);
            LSDisconnect(hConnect, 0);
        } // ok the Connect
        else
            MessageBox.Show("Connect not possible: error",
TITLE POPUP);
  }
}
```



```
public int DocumentHandle(short operation)
                Reply;
          string FileOut;
     IntPtr BufFrontFile = Marshal.AllocHGlobal(1024);
     IntPtr BufRearFile = Marshal.AllocHGlobal(1024);
     IntPtr BufFrontImage;
     IntPtr BufRearImage;
     IntPtr BufFrontUVImage;
     IntPtr BufFrontGrayUVImage;
     IntPtr NoImage;
     IntPtr BufCodelineSW =
Marshal.AllocHGlobal((int)CtsLs.CodeLineType.MAX CODE LINE LENGTH);
     IntPtr BufCodelineHW =
Marshal.AllocHGlobal((int)CtsLs.CodeLineType.MAX CODE LINE LENGTH);
     IntPtr BufBarcode =
Marshal.AllocHGlobal((int)CtsLs.CodeLineType.MAX_CODE_LINE_LENGTH);
     CtsLs.CodeLineType CodelineType;
     float C_x;
     float C_y;
     float C w;
     float C h;
     Reply = LSConnect(0, 0, CURRENT MODEL, ref hConnect);
     if (Reply != LS OKAY)
          // Error Handling
          MessageBox.Show("Open not done: error " +
Reply.ToString());
          return Reply;
      }
     PrintValidate = CtsLs.PrintValidate.PRINT VALIDATE;
      //-----LoadString------
     if (stParAppl.PrintValidate ==
CtsLs.PrintValidate.PRINT VALIDATE ||
         stParAppl.PrintValidate ==
(CtsLs.PrintValidate) CtsLs.PrintFont.PRINT FORMAT NORMAL 15)
     {
           IntPtr strEndorse = Marshal.AllocHGlobal(160); ;
           if (stParAppl.PrintValidate ==
(CtsLs.PrintValidate)CtsLs.PrintFont.PRINT_FORMAT_NORMAL 15)
              PrintType = CtsLs.PrintFont.PRINT_FORMAT_NORMAL_15;
            else if( stParAppl.PrintBold )
              PrintType = CtsLs.PrintFont.PRINT FORMAT BOLD;
           else
              PrintType = CtsLs.PrintFont.PRINT FORMAT NORMAL;
           if( stParAppl.PrintHigh == 0 )
               PrintType += 0x20;
            // Copy the Secure string to unmanaged memory (and
decrypt it).
           strEndorse =
Marshal.StringToHGlobalAnsi(stParAppl.Endorse str);
            if( stParAppl.Endorse str.Contains("%d") )
```



```
Reply = CtsLs.LSLoadStringWithCounterEx(hConnect, 0,
                                      (short) PrintType,
                                      strEndorse,
(short) stParAppl.Endorse str.Length,
                                     8, 3);
           else
                 Reply = CtsLs.LSLoadString(hConnect, 0,
                                         (short) PrintType,
(short) stParAppl.Endorse str.Length,
                                         strEndorse);
           if (Reply != CtsLs.LsReply.LS OKAY)
                if (CheckReply(Reply, "LSLoadString"))
                    return Reply;
                }
           }
           // Set variable for print
           PrintValidate = CtsLs.PrintValidate.PRINT VALIDATE;
      //-----Print Logo-----
     else if( stParAppl.PrintLogo )
           PrintValidate = CtsLs.PrintValidate.PRINT LOGO;
      }
     //---- Set Sensibilità foto doppia sfogliatura -----
     Reply = CtsLs.LSConfigDoubleLeafingAndDocLength (hConnect, 0,
stParAppl.DL Type,
stParAppl.DL Value,
stParAppl.DL MinDoc,
                                             stParAppl.DL MaxDoc);
     if (Reply != CtsLs.LsReply.LS OKAY)
          if( CheckReply(Reply,
"LSConfigDoubleLeafingAndDocLength"))
             return Reply;
     }
     //---- Change stamp position -----
     //Reply = CtsLs.LSChangeStampPosition(hConnect, 0,
                                  stParAppl.StampPosition, 0);
     //if (Reply != CtsLs.LsReply.LS_OKAY)
     //{
     //
           if (CheckReply(Reply, "LSChangeStampPosition"))
     //
     //
              return Reply;
     //
```



```
//}
     //---- Set attesa introduzione documento -----
     Reply = CtsLs.LSDisableWaitDocument(hConnect, 0,
stParAppl.WaitTimeout);
     if (Reply != CtsLs.LsReply.LS OKAY)
          if (CheckReply(Reply, "LSDisableWaitDocument"))
             return Reply;
      }
      //---- Set speed document -----
     Reply = CtsLs.LSSetUnitSpeed(hConnect, 0, stParAppl.LowSpeed);
     if (Reply != CtsLs.LsReply.LS OKAY)
          if (CheckReply(Reply, "LSSetSpeedUnit"))
             return Reply;
      }
      //---- Set Light Intensity -----
     Reply = CtsLs.LSSetLightIntensity(hConnect, 0,
stParAppl.LightIntensity);
     if (Reply != CtsLs.LsReply.LS OKAY)
          if (CheckReply(Reply, "LSSetLightIntensity"))
                  return Reply;
           }
      }
     //---- Only for Ultra Violet type -----
     if( (UnitCfg[1] & MASK SCANNER UV) == MASK SCANNER UV )
         Reply = CtsLs.LSModifyPWMUltraViolet(hConnect, 0,
                            stParAppl.PercentPWM UV,
                            stParAppl.Contrast UV,
                            stParAppl.Threshold UV);
         if (Reply != CtsLs.LsReply.LS OKAY)
             if (CheckReply(Reply, "LSModifyPWMUltraViolet"))
                   return Reply;
         }
     }
      // Settaggio dei parametri fissi per LS AutoDocHandle
     dirBase = Marshal.StringToHGlobalAnsi(PathAppl +
SAVE DIRECTORY IMAGE);
     Filename = Marshal.StringToHGlobalAnsi(NAME IMAGE);
```



```
CodelineType = CtsLs.CodeLineType.NO_READ CODELINE;
      TypeOfDecod = stParAppl.TypeOfDecod;
      C_x = C_y = C_w = C_h = 0;
      if( stParAppl.CodelineMICR !=
CtsLs.CodeLineType.NO READ CODELINE )
           CodelineType = stParAppl.CodelineMICR;
      else if( stParAppl.CodelineOCR !=
CtsLs.CodeLineType.NO READ CODELINE )
           CodelineType = stParAppl.CodelineOCR;
           C_x = stParAppl.Codeline_Sw_x;
           C_y = stParAppl.Codeline_Sw_y;
           C_w = stParAppl.Codeline_Sw_w;
           C_h = stParAppl.Codeline_Sw_h;
           TypeOfDecod -= DECODE OCR;
      }
      else if( stParAppl.BarcodeType !=
CtsLs.CodeLineType.NO READ CODELINE )
      {
           CodelineType = stParAppl.BarcodeType;
           C x = stParAppl.Barcode Sw x;
           C y = stParAppl.Barcode Sw y;
           C w = stParAppl.Barcode Sw w;
           C h = stParAppl.Barcode Sw h;
           TypeOfDecod -= DECODE OCR;
      }
      Reply = CtsLs.LSAutoDocHandle(hConnect, 0,
                                      stParAppl.FrontStamp,
                                      (short) PrintValidate,
                                      (short) Codeline Type,
                                       stParAppl.ScanMode,
                                      (short) CtsLs.Feeder.FEED AUTO,
(short) CtsLs.Sorter.SORTER POCKET 1,
                                       stParAppl.NumDoc,
                                       stParAppl.ClearAlignImage,
                                       stParAppl.Side,
                                       stParAppl.SaveImage,
                                       dirBase,
                                       Filename,
                                       C_x, C_y, C_w, C_h,
                                       (short)CtsLs.Unit.UNIT_MM,
                                        stParAppl.FileFormat,
                                        stParAppl.Qual,
(short) CtsLs.FileAttribute.SAVE OVERWRITE,
                                        (short) (stParAppl.WaitTimeout
? CtsLs.Wait.WAIT YES : CtsLs.Wait.WAIT NO),
                                        (short) stParAppl.BeepOnError,
                                        IntPtr.Zero,
                                        IntPtr.Zero);
      if (Reply != CtsLs.LsReply.LS OKAY)
```



```
return Reply;
      }
      // Salvo il nr. di documenti da processare
      if( stParAppl.NumDoc != 0 )
          DocToProcess = stParAppl.NumDoc;
          DocToProcess = 1000000;
     if (Save FrontImage != IntPtr.Zero)
          CtsLs.LSFreeImage(0, ref Save_FrontImage);
          Save FrontImage = IntPtr.Zero;
      }
     if (Save RearImage != IntPtr.Zero)
          CtsLs.LSFreeImage(0, ref Save RearImage);
          Save RearImage = IntPtr.Zero;
      }
      //-----GetDocData-----
     Bitmap pBitmap = null;
          if( Reply == LS OKAY )
      //
     //
                 while( TRUE )
     //
     while (Reply == CtsLs.LsReply.LS OKAY)
          Marshal.WriteByte(BufFrontFile, 0);
          Marshal.WriteByte(BufRearFile, 0);
          BufFrontImage = IntPtr.Zero;
          BufRearImage = IntPtr.Zero;
          BufFrontUVImage = BufFrontGrayUVImage = IntPtr.Zero;
          NoImage = IntPtr.Zero;
          NrDoc = 0;
          DocToRead = 0;
          NrPrinted = 0;
          Marshal.WriteByte(BufCodelineSW, 0);
          Marshal.WriteByte(BufCodelineHW, 0);
          Marshal.WriteByte(BufBarcode, 0);
          Reply = CtsLs.LSGetDocData(hConnect, 0,
                                        ref NrDoc,
                                        BufFrontFile,
                                        BufRearFile,
                                        IntPtr.Zero,
//BufFrontNettoFile,
                                       IntPtr.Zero,
//BufBackNettoFile,
                                        ref BufFrontImage,
                                        ref BufRearImage,
                                        ref BufFrontUVImage,
                                        ref NoImage,
     //BufbackNettoImage,
```

if (CheckReply(Reply, "LSAutoDocHandle"))



```
BufCodelineSW,
                                          BufCodelineHW,
                                         BufBarcode,
                                          IntPtr.Zero,
                                          ref DocToRead,
                                          ref NrPrinted,
                                          IntPtr.Zero,
                                          IntPtr.Zero);
            // Se e` doppia sfogliatura non termino
            if (((Reply != CtsLs.LsReply.LS OKAY) &&
                  (Reply != CtsLs.LsReply.LS SORTER1 FULL) &&
                   (Reply !=
CtsLs.LsReply.LS_DOUBLE_LEAFING_WARNING)))
                if( Reply != CtsLs.LsReply.LS_FEEDER_EMPTY )
                    CheckReply(Reply, "LS GetDocData");
                break;
            }
            //metto il test per le altre codeline
            if ((TypeOfDecod & DECODE OCR) == DECODE OCR )
                 CtsLs.READOPTIONS ro;
                 byte[] CodelineOpt = new byte[4];
                 int len codeline;
                 ro.PutBlanks = 1;
                 ro.TypeRead = 'N';
  if( stParAppl.CodelineOCR ==
CtsLs.CodeLineType.READ CODELINE SW E13B X OCRB )
                       ro.TypeRead = 'X';
                CodelineOpt[0] =
(byte) CtsLs.CodeLineType.READ CODELINE SW E13B;
          CodelineOpt[1] =
(byte) CtsLs.CodeLineType.READ CODELINE SW OCRB ITALY;
                      CodelineOpt[2] = (byte)'\0';
                 }
                 else
                  {
                        CodelineOpt[0] = (byte) stParAppl.CodelineOCR;
                        CodelineOpt[2] = (byte)' \setminus 0';
                  len codeline =
(int)CtsLs.CodeLineType.MAX CODE LINE LENGTH;
                  Reply = CtsLs.LSCodelineReadFromBitmap(0,
BufFrontImage,
                                                          CodelineOpt,
stParAppl.Unit measure,
stParAppl.Codeline Sw x,
stParAppl.Codeline Sw y,
```



```
stParAppl.Codeline Sw w,
stParAppl.Codeline Sw h,
                                                       ref ro,
BufCodelineSW,
                                                       ref
len codeline);
                 if( Reply != CtsLs.LsReply. LS OKAY )
                       CheckReply(Reply,
"LSCodelineReadFromBitmap");
                       for not exit from the loop
                 }
            }
            if ((TypeOfDecod & DECODE BARCODE) == DECODE BARCODE )
                int len barcode =
(int)CtsLs.CodeLineType.MAX CODE LINE LENGTH;
                Reply = CtsLs.LSReadBarcodeFromBitmap(0,
                                                  BufFrontImage,
(byte) stParAppl.BarcodeType,
(int)stParAppl.Barcode Sw x,
(int) stParAppl.Barcode Sw y,
(int) stParAppl.Barcode Sw w,
(int) stParAppl.Barcode Sw h,
                                                   BufBarcode,
                                                   ref len barcode);
                if (Reply != CtsLs.LsReply. LS OKAY)
                   CheckReply(Reply, "LSReadBarcodeFromBitmap");
                   Reply = CtsLs.LsReply.LS OKAY;
                                                          // Set Ok
for not exit from the loop
            }
            if ((TypeOfDecod & DECODE PDF417) == DECODE PDF417 )
                int len barcode =
(int)CtsLs.CodeLineType.MAX CODE LINE LENGTH;
                Reply = CtsLs.LSReadPdf417FromBitmap(0,
                                                      BufFrontImage,
                                                      BufBarcode,
                                                      ref
len barcode,
                                                      0, 0, 0, 0,
0);
                if (Reply != CtsLs.LsReply. LS OKAY)
                      CheckReply(Reply, "LSReadPdf417FromBitmap");
                     Reply = CtsLs.LsReply.LS OKAY;  // Set Ok
for not exit from the loop
```



```
}
             }
    if (stParAppl.ScanMode ==
(short)CtsLs.ScanMode.SCAN MODE 256GR100 AND UV ||
        stParAppl.ScanMode ==
(short)CtsLs.ScanMode.SCAN MODE 256GR200 AND UV ||
        stParAppl.ScanMode ==
(short)CtsLs.ScanMode.SCAN MODE 256GR300 AND UV)
                  // Build the mergered gray UV image
                  if (BufFrontUVImage != IntPtr.Zero)
                  {
                         CtsLs.LSMergeImageGrayAndUV(0,
                                                    BufFrontImage,
                                                    BufFrontUVImage,
                                                    0,
//stParAppl.Threshold UV,
                                              Ο,
                                                    ref
BufFrontGrayUVImage);
            //if( stParAppl.SaveImage == IMAGE SAVE ON FILE ||
                  stParAppl.SaveImage == IMAGE SAVE BOTH )
            //{
            //
                 // Check if I must save the image
            //
                 if( stParAppl.FileFormat ==
(short)CtsLs.FileType.FILE JPEG )
           // {
                     FullFName, "%s\\%s%04dGUV.jpg", dirBase,
            //
Filename, (NrDoc - 1));
                     Reply = LSSaveJPEG(hWnd, BufFrontGrayUVImage,
stParAppl.Qual, FullFName);
            //
                 else if( stParAppl.FileFormat ==
(short)CtsLs.FileType.FILE BMP )
           // {
            //
                      sprintf(FullFName, "%s\\%s%04dGUV.bmp",
dirBase, Filename, (NrDoc - 1));
                      Reply = LSSaveDIB(hWnd, BufFrontGrayUVImage,
FullFName);
            11
            //
                else if( stParAppl.FileFormat ==
(short)CtsLs.FileType.FILE_CCITT_GROUP4 )
           //
            //
                     sprintf(FullFName, "%s\\%s%04dGUV.tif",
dirBase, Filename, (NrDoc - 1));
                     Reply = LSSaveTIFF(hWnd, BufFrontGrayUVImage,
           //
FullFName, FILE TIF, SAVE OVERWRITE, 1);
           //
                }
            //}
                  }
            // Show Codeline
           if (Marshal.ReadByte(BufCodelineHW) != 0)
               tbCodeline.Text =
Marshal.PtrToStringAnsi(BufCodelineHW);
           else
```



```
tbCodeline.Text = "";
          //// Show the immage
          CtsLs.BITMAPINFOHEADER pBmp =
                 (CtsLs.BITMAPINFOHEADER) Marshal.PtrToStructure (BufFr
                 ontImage, typeof(CtsLs.BITMAPINFOHEADER));
          pBitmap = new Bitmap (pBmp.biWidth, pBmp.biHeight,
          PixelFormat.Format24bppRqb);
                  BitmapData bmpData = pBitmap.LockBits(new
Rectangle(0, 0, pBitmap.Width, pBitmap.Height),
ImageLockMode.WriteOnly, pBitmap.PixelFormat);
          int xx, yy;
          Int32 diff, WidthBytes = pBmp.biWidth;
          if( (diff = WidthBytes % 4) != 0 )
               WidthBytes += (4 - diff);
          Int32 row, col;
          row = pBmp.biHeight - 1;
          col = pBmp.biWidth - 1;
          for (yy = 0; yy < pBmp.biHeight; yy++)</pre>
              for (xx = 0; xx < pBmp.biWidth; xx++)</pre>
                  byte Pixel =
Marshal.ReadByte((IntPtr)((int)BufFrontImage + 1064 + ((yy *
WidthBytes) + xx)));
                  Color Pixel24;
                  Pixel24 = Color.FromArgb((Pixel * 256 * 256) +
(Pixel * 256) + Pixel);
                  pBitmap.SetPixel(xx, (row - yy), Pixel24);
                  //Marshal.WriteByte((IntPtr)((int)bmpData.Scan0 +
(xx * yy)), Pixel);
                  //Marshal.WriteByte((IntPtr)((int)bmpData.Scan0 +
(xx * yy) + 1), Pixel);
                  //Marshal.WriteByte((IntPtr)((int)bmpData.Scan0 +
(xx * yy) + 2), Pixel);
        CopyMemory(bmpData.Scan0, (IntPtr)((int)BufFrontImage +
1064), pBmp.biSizeImage);
       pBitmap.UnlockBits(bmpData);
          if (pbImage.Image != null)
               pbImage.Image.Dispose();
                    //pbImage.Image = null;
          pbImage.Image = pBitmap;
          // Refresh the form
          Application.DoEvents();
          // Abilito il bottone visualizzazione retro
          btRear.Enabled = true;
          // Free the previous image memory and save the current
          if (Save FrontImage != IntPtr.Zero)
               CtsLs.LSFreeImage(0, ref Save FrontImage);
```



```
if (BufFrontGrayUVImage != IntPtr.Zero)
                Save FrontImage = BufFrontGrayUVImage;
               CtsLs.LSFreeImage(0, ref BufFrontImage);
CtsLs.LSFreeImage(0, ref BufFrontUVImage);
          else if (BufFrontImage != IntPtr.Zero)
                Save_FrontImage = BufFrontImage;
          if (Save RearImage != IntPtr.Zero)
          {
                CtsLs.LSFreeImage(0, ref Save_RearImage);
          Save_RearImage = BufRearImage;
          NrCheque ++;
      }
           // Fine while( TRUE )
     // Free of local variable
     Marshal.FreeHGlobal(Filename);
     Marshal.FreeHGlobal(dirBase);
     Marshal.FreeHGlobal(BufBarcode);
     Marshal.FreeHGlobal(BufCodelineHW);
     Marshal.FreeHGlobal(BufCodelineSW);
     Marshal.FreeHGlobal(BufRearFile);
     Marshal.FreeHGlobal(BufFrontFile);
}
```



Sample code in VB (for .NET)

The source is available on demand:

CtsLsClass.vb

```
Imports System.Runtime.InteropServices
Public Class CtsLs
    <DllImport("LsApi.dll")>
    Public Shared Function LSConnect(ByVal hWnd As Integer, ByVal
hInst As Integer, ByVal Peripheral As Short, ByRef hConnect As Short)
As Integer
    End Function
    <DllImport("LsApi.dll")>
    Public Shared Function LSDisconnect (ByVal hConnect As Short,
ByVal hWnd As Integer) As Integer
    End Function
    <DllImport("LsApi.dll")>
    Public Shared Function LSUnitIdentify (ByVal hConnect As Short,
ByVal hWnd As Integer, ByVal pLsCfg As Byte(), ByVal LsModel As
IntPtr, ByVal FwVersion As IntPtr, ByVal FwDate As IntPtr,
     ByVal PeripheralID As IntPtr, ByVal BoardVersion As IntPtr,
ByVal DecoderExpVersion As IntPtr, ByVal InkJetVersion As IntPtr,
ByVal FeederVersion As IntPtr, ByVal SorterVersion As IntPtr,
     ByVal MotorVersion As IntPtr, ByVal Reserved1 As IntPtr, ByVal
Reserved2 As IntPtr) As Integer
    End Function
    <DllImport("LsApi.dll")>
    Public Shared Function LSUnitStatus (ByVal hConnect As Short,
ByVal hWnd As Integer, ByRef lpStatus As UNITSTATUS) As Integer
    End Function
    <DllImport("LsApi.dll")>
    Public Shared Function LSReset(ByVal hConnect As Short, ByVal
hWnd As Integer, ByVal ResetType As Short) As Integer
   End Function
    <DllImport("LsApi.dll")>
   Public Shared Function LSLoadStringWithCounterEx(ByVal hConnect
As Short, ByVal hWnd As Integer, ByVal PrintType As Short, ByVal
strEndorse As IntPtr, ByVal LenEndorse As Short, ByVal StartNumber As
UInt32,
    ByVal [Step] As Short) As Integer
    End Function
    <DllImport("LsApi.dll")>
    Public Shared Function LSLoadString(ByVal hConnect As Short,
ByVal hWnd As Integer, ByVal PrintType As Short, ByVal LenEndorse As
Short, ByVal strEndorse As IntPtr) As Integer
    End Function
    <DllImport("LsApi.dll")>
   Public Shared Function LSConfigDoubleLeafingAndDocLength(ByVal
hConnect As Short, ByVal hWnd As Integer, ByVal Type As Int32, ByVal
Value As Short, ByVal DocMin As Int32, ByVal DocMax As Int32) As
Integer
    End Function
    <DllImport("LsApi.dll")>
```



```
Public Shared Function LSChangeStampPosition(ByVal hConnect As
Short, ByVal hWnd As Integer, ByVal [Step] As Short, ByVal Reserved
As Byte) As Integer
    End Function
    <DllImport("LsApi.dll")>
   Public Shared Function LSDisableWaitDocument(ByVal hConnect As
Short, ByVal hWnd As Integer, ByVal fWait As Boolean) As Integer
    End Function
    <DllImport("LsApi.dll")>
    Public Shared Function LSSetUnitSpeed(ByVal hConnect As Short,
ByVal hWnd As Integer, ByVal UnitSpeed As Short) As Integer
    End Function
    <DllImport("LsApi.dll")>
    Public Shared Function LSSetLightIntensity(ByVal hConnect As
Short, ByVal hWnd As Integer, ByVal UnitSpeed As Short) As Integer
   End Function
    <DllImport("LsApi.dll")>
    Public Shared Function LSModifyPWMUltraViolet(ByVal hConnect As
Short, ByVal hWnd As Integer, ByVal UnitSpeed As Short, ByVal
HighContrast As Boolean, ByVal Reserved As Short) As Integer
   End Function
    <DllImport("LsApi.dll")>
    Public Shared Function LSAutoDocHandle (ByVal hConnect As Short,
ByVal hWnd As Integer, ByVal Stamp As Short, ByVal Validate As Short,
ByVal CodeLine As Short, ByVal ScanMode As Short,
     ByVal Feeder As Short, ByVal Sorter As Short, ByVal NumDocument
As Short, ByVal ClearBlack As Short, ByVal Side As Byte, ByVal
ReadMode As Short, _
     ByVal SaveImage As Short, ByVal DirectoryFile As IntPtr, ByVal
BaseFilename As IntPtr, ByVal pos x As [Single], ByVal pos y As
[Single], ByVal sizeW As [Single],
     ByVal sizeH As [Single], ByVal OriginMeasureDoc As Short, ByVal
OcrImageSide As Short, ByVal FileFormat As Short, ByVal Quality As
Integer, ByVal SaveMode As Integer,
     ByVal PageNumber As Integer, ByVal WaitTimeout As Short, ByVal
Beep As Short, ByVal Reserved1 As Integer, ByVal Reserved2 As IntPtr,
ByVal Reserved3 As IntPtr) As Integer
   End Function
    <DllImport("LsApi.dll")>
    Public Shared Function LSGetDocData(ByVal hConnect As Short,
ByVal hWnd As Integer, ByRef NrDoc As UInt32, ByVal FilenameFront As
IntPtr, ByVal FilenameRear As IntPtr, ByVal Reserved1 As IntPtr,
     ByVal Reserved2 As IntPtr, ByRef FrontImage As IntPtr, ByRef
RearImage As IntPtr, ByRef Reserved3 As IntPtr, ByRef Reserved4 As
IntPtr, ByVal CodelineSW As IntPtr,
     ByVal CodelineHW As IntPtr, ByVal Barcode As IntPtr, ByVal
CodelinesOptical As IntPtr, ByRef DocToRead As Short, ByRef NrPrinted
As Int32, ByVal Reserved5 As IntPtr,
    ByVal Reserved6 As IntPtr) As Integer
    End Function
    <DllImport("LsApi.dll")>
    Public Shared Function LSDocHandle (ByVal hConnect As Short, ByVal
hWnd As Integer, ByVal Stamp As Short, ByVal Validate As Short, ByVal
CodeLine As Short, ByVal Side As Byte,
    ByVal ScanMode As Short, ByVal Feeder As Short, ByVal Sorter As
Short, ByVal WaitTimeout As Short, ByVal Beep As Short, ByRef NrDoc
As UInt32,
    ByVal ScanDocType As Int16, ByVal Reserved As Int32) As Integer
    End Function
    <DllImport("LsApi.dll")>
```



```
Public Shared Function LSReadCodeline (ByVal hConnect As Short,
ByVal hWnd As Integer, ByVal CodelineHW As IntPtr, ByRef
LenCodelineHW As Short, ByVal Barcode As IntPtr, ByRef LenBarcode As
    ByVal CodelinesOptical As IntPtr, ByRef LenOptic As Short) As
Integer
    End Function
    <DllImport("LsApi.dll")>
    Public Shared Function LSReadImage (ByVal hConnect As Short, ByVal
hWnd As Integer, ByVal ClearBlack As Short, ByVal Side As Byte, ByVal
ReadMode As Short, ByVal NrDoc As UInt32,
    ByRef FrontImage As IntPtr, ByRef RearImage As IntPtr, ByRef
Reserved1 As IntPtr, ByVal Reserved2 As IntPtr) As Integer
    End Function
    <DllImport("LsApi.dll")>
    Public Shared Function LSCodelineReadFromBitmap(ByVal hWnd As
Integer, ByVal hImage As IntPtr, ByVal CodelineType As Byte(), ByVal
UintMeasure As Short, ByVal Pos_x As Single, ByVal Pos_y As Single, _
     ByVal Width As Single, ByVal Height As Single, ByRef ro As
READOPTIONS, ByVal Codeline As IntPtr, ByRef Length Codeline As
Integer) As Integer
   End Function
    <DllImport("LsApi.dll")>
    Public Shared Function LSReadBarcodeFromBitmap(ByVal hWnd As
Integer, ByVal hImage As IntPtr, ByVal BarcodeType As Byte, ByVal
Pos x As Single, ByVal Pos_y As Single, ByVal Width As Single, _
    ByVal Height As Single, ByVal Codeline As IntPtr, ByRef
Length Codeline As Integer) As Integer
   End Function
    <DllImport("LsApi.dll")>
    Public Shared Function LSReadPdf417FromBitmap(ByVal hWnd As
Integer, ByVal hImage As IntPtr, ByVal Codeline As IntPtr, ByRef
Length Codeline As Integer, ByVal Reserved As Byte, ByVal Pos x As
Single,
     ByVal Pos y As Single, ByVal Width As Single, ByVal Height As
Single) As Integer
   End Function
    <DllImport("LsApi.dll")>
    Public Shared Function LSMergeImageGrayAndUV(ByVal hWnd As
Integer, ByVal hFrontGrayImage As IntPtr, ByVal hFrontUVImage As
IntPtr, ByVal Reserved As Single, ByVal Reserved2 As Single, ByRef
hGrayUVImage As IntPtr) As Integer
    End Function
    <DllImport("LsApi.dll")>
   Public Shared Function LSFreeImage(ByVal hWnd As Integer, ByRef
hImage As IntPtr) As Integer
   End Function
    <DllImport("LsApi.dll")>
   Public Shared Function LSUnitHistory (ByVal hConnect As Short,
ByVal hWnd As Integer, ByRef UnitHistory As UNITHISTORY) As Integer
   End Function
    Public Structure BITMAPINFOHEADER
        Public biSize As UInt32
        Public biWidth As Int32
       Public biHeight As Int32
       Public biPlanes As Int16
       Public biBitCount As Int16
       Public biCompression As UInt32
        Public biSizeImage As UInt32
```



Public biXPelsPerMeter As Int32 Public biYPelsPerMeter As Int32

```
Public biClrUsed As UInt32
                  Public biClrImportant As UInt32
         End Structure
         Public Structure UNITSTATUS
                  Public Size As Integer
Public UnitStatus As Integer
                                                                                                 ' Size of the structure
                                                                                                                    ' Ls40 Ls100 Ls150
Ls5xx Ls800
                   Public Photo Feeder As Boolean
                                                                                                        ' Ls40 Ls100 Ls150
Ls5xx Ls800
                   Public Photo Sorter As Boolean
                                                                                                                                     Ls100
                  Public Photo MICR As Boolean
                                                                                                                                    Ls100 Ls150
Ls5xx
                                                                                                             Ls100 Ls100
                  Public Photo_Path_Ls100 As Boolean
                  Public Photo_Fatn_Lsion As Boolean ' Lsion

Public Photo_Scanners As Boolean ' Lsion Lsion

Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsion Lsio
                 Public Photo Double Leafing Down As Boolean ' Ls100
Ls150
                 Public Photo Double Leafing Middle As Boolean '
Ls150
                 Public Photo Double Leafing Up As Boolean ' Ls100 Ls150
                                                                                                                                                 Ls150
                  Public Photo Card As Boolean
                  Public Pockets All Full As Boolean
                                                                                                                                                   Ls150
Ls5xx
                Public Photo Stamp As Boolean
Ls5xx
                 Public Photo Exit As Boolean
Ls5xx
                 Public Pocket 1 Full As Boolean
Ls5xx
                 Public Pocket 2 Full As Boolean
Ls5xx
                 Public Photo Path Feeder As Boolean
Ls800
                 Public Photo Path Module Begin As Boolean '
Ls800
                 Public Photo Path Binary Rigth As Boolean '
Ls800
                 Public Photo Path Binary Left As Boolean '
Ls800
                 Public Photo Path Module End As Boolean
Ls800
                  Public Sorter 1 input pocket 1 As Boolean '
Ls800
                  Public Sorter 1 pocket 1 full As Boolean '
Ls800
                 Public Sorter 1 input pocket 2 As Boolean '
Ls800
                 Public Sorter 1 pocket 2 full As Boolean '
Ls800
                 Public Sorter 1 input pocket 3 As Boolean '
Ls800
                 Public Sorter 1 pocket 3 full As Boolean '
Ls800
                 Public Sorter 2 input pocket 1 As Boolean '
Ls800
```



```
Public Sorter 2 pocket 1 full As Boolean
Ls800
        Public Sorter 2 input pocket 2 As Boolean '
Ls800
        Public Sorter 2 pocket 2 full As Boolean
Ls800
        Public Sorter 2 input pocket 3 As Boolean '
Ls800
        Public Sorter 2 pocket 3 full As Boolean
Ls800
        Public Sorter 3 input pocket 1 As Boolean '
Ls800
        Public Sorter 3 pocket 1 full As Boolean
Ls800
        Public Sorter 3 input pocket 2 As Boolean '
Ls800
        Public Sorter 3 pocket 2 full As Boolean
Ls800
        Public Sorter 3 input pocket 3 As Boolean '
Ls800
        Public Sorter 3 pocket 3 full As Boolean
Ls800
        Public Sorter 4 input pocket 1 As Boolean '
Ls800
        Public Sorter 4 pocket 1 full As Boolean
Ls800
        Public Sorter 4 input pocket 2 As Boolean '
Ls800
        Public Sorter 4 pocket 2 full As Boolean
Ls800
        Public Sorter 4 input pocket 3 As Boolean '
Ls800
        Public Sorter 4 pocket 3 full As Boolean
Ls800
        Public Sorter 5 input pocket 1 As Boolean '
Ls800
        Public Sorter 5 pocket 1 full As Boolean
Ls800
        Public Sorter 5 input pocket 2 As Boolean '
Ls800
        Public Sorter 5 pocket 2 full As Boolean
Ls800
        Public Sorter 5 input pocket 3 As Boolean '
Ls800
        Public Sorter 5 pocket 3 full As Boolean
Ls800
        Public Sorter 6 input pocket 1 As Boolean '
Ls800
        Public Sorter 6 pocket 1 full As Boolean
Ls800
        Public Sorter 6 input pocket 2 As Boolean '
Ls800
        Public Sorter 6 pocket 2 full As Boolean
Ls800
        Public Sorter 6 input pocket 3 As Boolean '
Ls800
        Public Sorter 6 pocket 3 full As Boolean
Ls800
        Public Sorter 7 input pocket 1 As Boolean '
Ls800
```



```
Public Sorter 7 pocket 1 full As Boolean '
Ls800
        Public Sorter 7 input pocket 2 As Boolean '
T<sub>1</sub>S800
        Public Sorter 7 pocket 2 full As Boolean '
Ls800
        Public Sorter 7 input pocket 3 As Boolean '
Ls800
        Public Sorter 7 pocket 3 full As Boolean '
Ls800
        Public Photo_Trigger As Boolean ' Ls40
Public Document_Retained As Boolean ' Ls40
Structure
        Public Photo Trigger As Boolean
    End Structure
    Public Structure UNITHISTORY
        Public Size As Int32
                                               ' Size of the structure
        Public doc_sorted As UInt32
                                               ' Document sortered
        Public doc_retained As UInt32
                                              ' Nr. of document
retained
        Public doc retained micr As UInt32 ' Nr Doc. retained after
MICR header
        Public doc retained scan As UInt32 ' Nr Doc .retained after
scanning
        Public doc_ink_jet As UInt32 ' Nr. of document printed
Public doc_stamped As UInt32 ' Nr. of document stamped
Public tot_paper_jams As UInt32 ' Totally of Paper jam
Public jams_in_feeder As UInt32 ' Nr. jam in the feeder
Public jams_in_micr As UInt32 ' Nr. jam during the MICR
reading
        Public jams scanner As UInt32
                                               ' Nr. jam between
scanners
                                               ' Nr. jam at stamp
        Public jams stamp As UInt32
document
        Public jams on exit As UInt32
                                               ' Nr. jam after the film
                                               ' Nr. jam in the card
        Public jams card As UInt32
entry
        Public nr double leafing As UInt32 ' Nr DoubleLeafing occurs
Ls800 only
        Public tot doc MICR err As UInt32 ' Nr. document MICR, read
with error
        Public doc cmc7 err As UInt32
                                               ' Nr. document CMC7, read
with error
        Public doc e13b err As UInt32
                                               ' Nr. document E13B, read
with error
        Public doc hw barcode err As UInt32 ' Nr. of document
Barcode, read from LS with error
        Public doc hw optic err As UInt32 ' Nr. of document OCR,
read from LS with error
        Public num turn on As UInt32
                                              ' Nr. of power ON
        Public time peripheral on As UInt32 ' Minutes peripheral time
life
                                                ' Section specific Ls800
unit.
        Public jam front scanner As UInt32 ' Jam in scanner front
        Public jam back scanner As UInt32 ' Jam in scanner back
        Public jam in the sorters As UInt32 ' Jam in sorters track
                                           ' Section compiled only from
Ls800 unit
```



```
Public nr drops printed As UInt32 ' Nr. drops printed
    End Structure
    Public Structure READOPTIONS
        Public PutBlanks As Integer ' 0 = CodeLIne whitout blans, 1
= CodeLine with 1 blanks
                                   ' 'N' for 1 type of CodeLine,
       Public TypeRead As Char
'X' for CodeLine E13B switch OCRB
    End Structure
    ' Parameter Peripheral Type
    Public Enum LsUnitType As Short
        Ls_40_Lsconnect = 39
        LS_40_USB = 40
        LS_{100}LSCONNECT = 109
        LS_{100}USB = 100
        LS_{100}RS232 = 101
        LS 100 ETH = 110
        LS_150_LSCONNECT = 149
        LS_{150}USB = 150
        LS 200 USB = 201
        LS 5xx SCSI = 500
        LS 515 LSCONNECT = 501
        LS 515 USB = 502
        LS 520 USB = 520
        LS 800 USB = 801
    End Enum
    Public Enum Stamp As Short
        STAMP NO = 0
        ' No stamp is done
        STAMP FRONT = 1
        ' Stamp on front document
        STAMP BACK = 2
        ' Stamp on rear document
        STAMP FRONT AND BACK = 3
        ' Stamp front and rear document
    End Enum
    Public Enum PrintValidate As Short
        NO PRINT VALIDATE = 0
        ' \overline{\text{No}} print is done
       PRINT VALIDATE = 1
        ' Print done
        PRINT LOGO = 4
        ' Print a logo only
        PRINT VALIDATE WITH LOGO = 5
        ' Print logo and lines
    End Enum
    Public Enum Feeder As Short
        FEED AUTO = 0
        ' Start Document from Feeder
        FEED FROM PATH = 1
        ' Start Document from Unit Path
    End Enum
    Public Enum Sorter As Short
        SORTER DOC HOLDED = 0
```



```
SORTER POCKET 1 = 1
    SORTER POCKET 2 = 2
    SORTER AUTOMATIC = 3
    SORTER SWICTH 1 TO 2 = 4
    SORTER DOC EJECTED = 5
    SORTER ON CODELINE CALLBACK = 6
    ' For Ls800 unit
    SORTER CIRCULAR = 48
    SORTER_SEQUENTIAL = 49
    SORTER POCKET 0 SELECTED = 50
SORTER POCKET 1 SELECTED = 51
SORTER POCKET 2 SELECTED = 52
SORTER POCKET 3 SELECTED = 53
    SORTER_POCKET_4_SELECTED = 54
SORTER_POCKET_5_SELECTED = 55
    SORTER_POCKET_6_SELECTED = 56
    SORTER_POCKET_7_SELECTED = 57
    SORTER POCKET 8 SELECTED = 58
    SORTER_POCKET_9_SELECTED = 59
    SORTER POCKET 10 SELECTED = 60
    SORTER_POCKET_11_SELECTED = 61
    SORTER POCKET 12 SELECTED = 62
    SORTER_POCKET_13_SELECTED = 63
    SORTER_POCKET_14_SELECTED = 64
    SORTER POCKET 15 SELECTED = 65
    SORTER POCKET 16 SELECTED = 66
    SORTER POCKET 17 SELECTED = 67
    SORTER_POCKET 18 SELECTED = 68
    SORTER POCKET 19 SELECTED = 69
    SORTER POCKET 20 SELECTED = 70
    SORTER POCKET 21 SELECTED = 71
End Enum
Public Enum CodeLineType As Byte
    NO READ CODELINE = 0
    READ CODELINE HW MICR = 1
    READ CODELINE E13B MICR WITH OCR = 15
    READ CODELINE SW OCRA = 65
                                                ''A',
                                                ''B',
    READ CODELINE SW OCRB NUM = 66
                                               ''C',
    READ CODELINE SW OCRB ALFANUM = 67
                                               ''F',
    READ CODELINE SW OCRB ITALY = 70
    READ CODELINE SW E13B = 69
                                               ''E',
    READ CODELINE SW E13B X OCRB = 88
                                               ''X',
    READ_BARCODE_2_OF_5 = 50
    READ BARCODE CODE39 = 51
    READ BARCODE CODE128 = 52
    READ BARCODE EAN13 = 53
    MAX CODE LINE LENGTH = 254
End Enum
Public Enum Unit As Short
    UNIT MM = 0
    UNIT INCH = 1
End Enum
Public Class OcrHeight
```



```
Public Const OCR_MAX HEIGHT IN MM As Double = 10.5
    Public Const OCR MAX HEIGHT IN INCH As Double = 0.41
End Class
Public Enum BlankInCodeline As Short
   BLANK IN CODELINE NO = 0
   BLANK_IN_CODELINE YES = 1
End Enum
Public Enum OriginOCR As Short
   ORIGIN BOTTOM RIGHT MM = 10
    ORIGIN BOTTOM RIGHT INCH = 20
End Enum
Public Enum ScanMode As Short
   SCAN\_MODE\_BW = 1
   SCAN_MODE_16_GRAY_100 = 2
   SCAN_MODE_16_GRAY_200 = 3
   SCAN_MODE_256_GRAY_100 = 4
   SCAN_MODE_256_GRAY_200 = 5
   SCAN_MODE_COLOR_100 = 10
   SCAN_MODE_COLOR_200 = 11
   SCAN_MODE_16_GRAY_300 = 20
   SCAN MODE 256 GRAY 300 = 21
   SCAN MODE COLOR 300 = 22
   SCAN MODE 256GR100 AND UV = 40
   SCAN MODE 256GR200 AND UV = 41
   SCAN_MODE_256GR300 AND UV = 42
End Enum
Public Enum ScanDocType As Short
   SCAN PAPER DOCUMENT = 0
   SCAN CARD = 1
End Enum
Public Enum Side As Short
                               ''N',
   SIDE NONE IMAGE = 78
   SIDE FRONT IMAGE = 70
                                ''B',
   SIDE BACK IMAGE = 66
                                ''X',
   SIDE ALL IMAGE = 88
                                ''U',
   SIDE FRONT UV = 85
   SIDE FRONT MERGED = 77
                                ''M',
End Enum
Public Enum Wait As Short
   WAIT NO = 71
                                ''G',
   WAIT YES = 87
                                ''W',
End Enum
Public Enum Beep As Short
   BEEP NO = 0
   BEEP YES = 1
End Enum
Public Enum ClearBlack As Short
   CLEAR BLACK NO = 0
   CLEAR BLACK YES = 1
   CLEAR AND ALIGN IMAGE = 2
End Enum
```



```
Public Enum PrintFont As Byte
       PRINT NO STRING = 0
       PRINTFONT NORMAL = 78
       PRINT FONT BOLD = 66
       PRINT FONT NORMAL 15 = 65
       PRINT UP FONT NORMAL = 110
                                       ''b',
       PRINT UP FONT BOLD = 98
        PRINT UP FONT NORMAL 15 CHAR = 97 ''a',
    End Enum
    Public Enum DoubleLeafing As Short
       DOUBLE LEAFING WARNING = 0
       DOUBLE LEAFING ERROR = 1 'DOUBLE LEAFING LEVEL1 = 1, non lo
uso piu'
       DOUBLE_LEAFING_LEVEL2 = 2
       DOUBLE_LEAFING_LEVEL3 = 3
       DOUBLE_LEAFING_DEFAULT = 4
       DOUBLE LEAFING LEVEL4 = 5
       DOUBLE LEAFING LEVEL5 = 6
       DOUBLE LEAFING DISABLE = 7
    End Enum
    Public Enum Reset As Short
       RESET_ERROR = 48 ''0',
RESET_PATH = 49 ''1',
                                 ''0',
       RESET_BELT_CLEANING = 50 ''2',
    End Enum
    Public Enum ImageSave As Short
       IMAGE SAVE ON FILE = 4
       IMAGE SAVE HANDLE = 5
       IMAGE SAVE BOTH = 6
       IMAGE SAVE NONE = 7
    End Enum
    Public Enum FileType As Short
       FILE JPEG = 10
       FILE BMP = 11
       FILE TIF = 3
       FILE CCITT = 25
       FILE CCITT GROUP3 1DIM = 27
       FILE CCITT GROUP3 2DIM = 28
       FILE_CCITT_GROUP4 = 29
    End Enum
    Public Enum FileAttribute As Short
       SAVE OVERWRITE = 0
       SAVE APPEND = 1
       SAVE REPLACE = 2
       SAVE INSERT = 3
    End Enum
    Public Enum LsSpeed As Short
       SPEED DEFAULT = 0
       SPEED STAMP = 1
    End Enum
    Public Enum Badge As Short
       BADGE READ TRACK 1 = &H20
```



```
BADGE READ TRACK 2 = \&H40
   BADGE READ TRACK 3 = &H80
   BADGE READ TRACKS 1 2 = &H60
   BADGE_READ_TRACKS_2_3 = &HC0
BADGE_READ_TRACKS_1_2_3 = &HE0
End Enum
Public Class LsReply
                        REPLY-CODE
       _____
  Public Const LS OKAY As Integer = 0
                     ERRORS
   Public Const LS SYSTEM ERROR As Integer = -1
   Public Const LS USB ERROR As Integer = -2
   Public Const LS PERIPHERAL NOT FOUND As Integer = -3
   Public Const LS HARDWARE ERROR As Integer = -4
   Public Const LS_PERIPHERAL_OFF_ON As Integer = -5
   Public Const LS_RESERVED ERROR As Integer = -6
   Public Const LS PAPER JAM As Integer = -7
   Public Const LS TARGET BUSY As Integer = -8
   Public Const LS INVALID COMMAND As Integer = -9
   Public Const LS DATA LOST As Integer = -10
   Public Const LS COMMAND IN EXECUTION YET As Integer = -11
   Public Const LS JPEG ERROR As Integer = -12
   Public Const LS COMMAND SEQUENCE ERROR As Integer = -13
   Public Const LS PC HW ERROR As Integer = -14
   Public Const LS IMAGE OVERWRITE As Integer = -15
   Public Const LS INVALID HANDLE As Integer = -16
   Public Const LS NO LIBRARY LOAD As Integer = -17
   Public Const LS BMP ERROR As Integer = -18
   Public Const LS TIFF ERROR As Integer = -19
   Public Const LS IMAGE NO MORE AVAILABLE As Integer = -20
   Public Const LS IMAGE NO FILMED As Integer = -21
   Public Const LS IMAGE NOT PRESENT As Integer = -22
   Public Const LS FUNCTION NOT AVAILABLE As Integer = -23
   Public Const LS DOCUMENT NOT SUPPORTED As Integer = -24
   Public Const LS BARCODE ERROR As Integer = -25
   Public Const LS INVALID LIBRARY As Integer = -26
   Public Const LS INVALID IMAGE As Integer = -27
   Public Const LS INVALID IMAGE FORMAT As Integer = -28
   Public Const LS INVALID BARCODE TYPE As Integer = -29
   Public Const LS OPEN NOT DONE As Integer = -30
   Public Const LS INVALID TYPE COMMAND As Integer = -31
   Public Const LS INVALID CLEARBLACK As Integer = -32
   Public Const LS INVALID SIDE As Integer = -33
   Public Const LS MISSING IMAGE As Integer = -34
   Public Const LS INVALID TYPE As Integer = -35
   Public Const LS INVALID SAVEMODE As Integer = -36
   Public Const LS INVALID PAGE NUMBER As Integer = -37
    Public Const LS INVALID NRIMAGE As Integer = -38
    Public Const LS INVALID STAMP As Integer = -39
```



```
Public Const LS INVALID WAITTIMEOUT As Integer = -40
Public Const LS INVALID VALIDATE As Integer = -41
Public Const LS INVALID CODELINE TYPE As Integer = -42
Public Const LS MISSING NRIMAGE As Integer = -43
Public Const LS INVALID SCANMODE As Integer = -44
Public Const LS INVALID BEEP As Integer = -45
Public Const LS_INVALID_FEEDER As Integer = -46
Public Const LS_INVALID_SORTER As Integer = -47
Public Const LS_INVALID_BADGE_TRACK As Integer = -48
Public Const LS_MISSING_FILENAME As Integer = -49
Public Const LS_INVALID_QUALITY As Integer = -50
Public Const LS_INVALID_FILEFORMAT As Integer = -51
Public Const LS_INVALID_COORDINATE As Integer = -52
Public Const LS_MISSING_HANDLE_VARIABLE As Integer = -53
Public Const LS_INVALID_POLO_FILTER As Integer = -54
Public Const LS_INVALID_ORIGIN_MEASURES As Integer = -55
Public Const LS_INVALID_SIZEH_VALUE As Integer = -56
Public Const LS_INVALID_FORMAT As Integer = -57
Public Const LS STRINGS TOO LONGS As Integer = -58
Public Const LS READ IMAGE FAILED As Integer = -59
Public Const LS INVALID CMD HISTORY As Integer = -60
Public Const LS MISSING BUFFER HISTORY As Integer = -61
Public Const LS INVALID ANSWER As Integer = -62
Public Const LS OPEN FILE ERROR OR NOT FOUND As Integer = -63
Public Const LS READ TIMEOUT EXPIRED As Integer = -64
Public Const LS_INVALID METHOD As Integer = -65
Public Const LS CALIBRATION FAILED As Integer = -66
Public Const LS_INVALID SAVEIMAGE As Integer = -67
Public Const LS INVALID UNIT As Integer = -68
Public Const LS INVALID NRWINDOWS As Integer = -71
Public Const LS INVALID VALUE As Integer = -72
Public Const LS ILLEGAL REQUEST As Integer = -73
Public Const LS INVALID NR CRITERIA As Integer = -74
Public Const LS MISSING CRITERIA STRUCTURE As Integer = -75
Public Const LS INVALID MOVEMENT As Integer = -76
Public Const LS INVALID DEGREE As Integer = -77
Public Const LS ROTATE ERROR As Integer = -78
Public Const LS MICR VALUE OUT OF RANGE As Integer = -79
Public Const LS PERIPHERAL RESERVED As Integer = -80
Public Const LS INVALID NCHANGE As Integer = -81
Public Const LS BRIGHTNESS ERROR As Integer = -82
Public Const LS CONTRAST ERROR As Integer = -83
Public Const LS INVALID SIDETOPRINT As Integer = -84
Public Const LS DOUBLE LEAFING ERROR As Integer = -85
Public Const LS INVALID BADGE TIMEOUT As Integer = -86
Public Const LS INVALID RESET TYPE As Integer = -87
Public Const LS MISSING SET CALLBACK As Integer = -88
Public Const LS IMAGE NOT 200 DPI As Integer = -89
Public Const LS DOWNLOAD ERROR As Integer = -90
Public Const LS INVALID SORT ON CHOICE As Integer = -91
Public Const LS INVALID FONT As Integer = -92
Public Const LS INVALID UNIT SPEED As Integer = -93
Public Const LS INVALID LENGTH As Integer = -94
Public Const LS SHORT PAPER As Integer = -95
Public Const LS INVALID DOC LENGTH As Integer = -96
Public Const LS INVALID DOCSLONG As Integer = -97
Public Const LS IMAGE NOT 256 COLOR As Integer = -98
Public Const LS BATTERY NOT CHARGED As Integer = -99
Public Const LS INVALID SCAN DOC TYPE As Integer = -100
Public Const LS ILLEGAL SCAN CARD SPEED As Integer = -101
```



```
Public Const LS INVALID PWM VALUE As Integer = -102
        Public Const LS INVALID KEY LENGTH As Integer = -103
        Public Const LS INVALID PASSWORD As Integer = -104
        Public Const LS UNIT LOCKED As Integer = -105
        Public Const LS INVALID IMAGEFORMAT As Integer = -106
        Public Const LS INVALID THRESHOLD As Integer = -107
        Public Const LS NO START FOR SORTER FULL As Integer = -108
        Public Const LS_IPBOX_ADDRESS_NOT_FOUNDED As Integer = -109
Public Const LS_INVALID_LED_COMMAND As Integer = -110
        Public Const LS INVALID COLOR PARAMETER As Integer = -111
        Public Const LS JAM AT MICR PHOTO As Integer = -201
        Public Const LS_JAM_DOC_TOO_LONG As Integer = -202
        Public Const LS JAM AT SCANNER PHOTO As Integer = -203
        Public Const LS_SCAN_NETTO IMAGE NOT SUPPORTED As Integer = -
521
        Public Const LS_256_GRAY_NOT_SUPPORTED As Integer = -522
        Public Const LS INVALID PATH As Integer = -523
        Public Const LS MISSING CALLBACK FUNCTION As Integer = -526
        Public Const LS INVALID OCR IMAGE SIDE As Integer = -558
        Public Const LS PERIPHERAL NOT ANSWER As Integer = -599
        Public Const LS INVALID CONNECTION HANDLE As Integer = -1000
        Public Const LS_INVALID CONNECT PERIPHERAL As Integer = -1001
        Public Const LS PERIPHERAL NOT YET INTEGRATE As Integer = -
1002
        Public Const LS UNKNOW PERIPHERAL REPLY As Integer = -1003
        Public Const LS CODELINE ALREADY DEFINED As Integer = -1004
        Public Const LS INVALID NUMBER OF DOC As Integer = -1005
        Public Const LS DECODE FONT NOT PRESENT As Integer = -1101
        Public Const LS DECODE INVALID COORDINATE As Integer = -1102
        Public Const LS DECODE INVALID OPTION As Integer = -1103
        Public Const LS DECODE INVALID CODELINE TYPE As Integer = -
1104
        Public Const LS DECODE SYSTEM ERROR As Integer = -1105
        Public Const LS DECODE DATA TRUNC As Integer = -1106
        Public Const LS DECODE INVALID BITMAP As Integer = -1107
        Public Const LS DECODE ILLEGAL USE As Integer = -1108
        Public Const LS BARCODE GENERIC ERROR As Integer = -1201
        Public Const LS BARCODE NOT DECODABLE As Integer = -1202
        Public Const LS BARCODE OPENFILE ERROR As Integer = -1203
        Public Const LS BARCODE READBMP ERROR As Integer = -1204
        Public Const LS BARCODE MEMORY ERROR As Integer = -1205
        Public Const LS BARCODE START NOTFOUND As Integer = -1206
        Public Const LS BARCODE STOP NOTFOUND As Integer = -1207
        Public Const LS PDF NOT DECODABLE As Integer = -1301
        Public Const LS PDF READBMP ERROR As Integer = -1302
        Public Const LS PDF BITMAP FORMAT ERROR As Integer = -1303
        Public Const LS PDF MEMORY ERROR As Integer = -1304
        Public Const LS PDF START NOTFOUND As Integer = -1305
        Public Const LS PDF STOP NOTFOUND As Integer = -1306
        Public Const LS PDF LEFTIND ERROR As Integer = -1307
        Public Const LS PDF RIGHTIND ERROR As Integer = -1308
        Public Const LS PDF OPENFILE ERROR As Integer = -1309
```



```
WARNINGS
       Public Const LS FEEDER EMPTY As Integer = 1
       Public Const LS DATA TRUNCATED As Integer = 2
       Public Const LS_DOC_PRESENT As Integer = 3
       Public Const LS_BADGE_TIMEOUT As Integer = 4
       Public Const LS_ALREADY_OPEN As Integer = 5
       Public Const LS_PERIPHERAL_BUSY As Integer = 6
       Public Const LS_DOUBLE_LEAFING_WARNING As Integer = 7
       Public Const LS_COMMAND_NOT_ENDED As Integer = 8
       Public Const LS_RETRY As Integer = 9
       Public Const LS_NO_OTHER_DOCUMENT As Integer = 10
       Public Const LS_QUEUE_FULL As Integer = 11
       Public Const LS_NO_SENSE As Integer = 12
       Public Const LS_TRY_TO_RESET As Integer = 14
       Public Const LS STRING TRUNCATED As Integer = 15
       Public Const LS COMMAND NOT SUPPORTED As Integer = 19
       Public Const LS_SORTER1_FULL As Integer = 35
       Public Const LS SORTER2 FULL As Integer = 36
       Public Const LS SORTERS BOTH FULL As Integer = 37
       Public Const LS KEEP DOC ON CODELINE ERROR As Integer = 39
       Public Const LS LOOP INTERRUPTED As Integer = 40
       Public Const LS SORTER 1 POCKET 1 FULL As Integer = 51
       Public Const LS_SORTER_1_POCKET_2_FULL As Integer = 52
       Public Const LS SORTER 1 POCKET 3 FULL As Integer = 53
       Public Const LS SORTER 2 POCKET 1 FULL As Integer = 54
       Public Const LS SORTER 2 POCKET 2 FULL As Integer = 55
       Public Const LS SORTER 2 POCKET 3 FULL As Integer = 56
       Public Const LS_SORTER 3 POCKET 1 FULL As Integer = 57
       Public Const LS SORTER 3 POCKET 2 FULL As Integer = 58
       Public Const LS SORTER 3 POCKET 3 FULL As Integer = 59
       Public Const LS SORTER 4 POCKET 1 FULL As Integer = 60
       Public Const LS SORTER 4 POCKET 2 FULL As Integer = 61
       Public Const LS SORTER 4 POCKET 3 FULL As Integer = 62
       Public Const LS SORTER 5 POCKET 1 FULL As Integer = 63
       Public Const LS SORTER 5 POCKET 2 FULL As Integer = 64
       Public Const LS SORTER 5 POCKET 3 FULL As Integer = 65
       Public Const LS SORTER 6 POCKET 1 FULL As Integer = 66
       Public Const LS SORTER 6 POCKET 2 FULL As Integer = 67
       Public Const LS SORTER 6 POCKET 3 FULL As Integer = 68
       Public Const LS_SORTER_7_POCKET_1_FULL As Integer = 69
       Public Const LS_SORTER_7_POCKET_2 FULL As Integer = 70
       Public Const LS SORTER 7 POCKET 3 FULL As Integer = 71
    End Class
End Class
Private Sub Identify (ByVal model As int)
        Dim Reply As Integer
       Dim hConnect As Short
        Dim UnitCfg As Byte() = New Byte(3) {}
        Dim strLsModel As IntPtr = Marshal.AllocHGlobal(20)
        Dim strFwVersion As IntPtr = Marshal.AllocHGlobal(20)
```



```
Dim Date Fw As IntPtr = Marshal.AllocHGlobal(20)
        Dim strUnitID As IntPtr = Marshal.AllocHGlobal(20)
        Dim strInkJetVersion As IntPtr = Marshal.AllocHGlobal(20)
        Dim DecoderExpVersion As IntPtr = Marshal.AllocHGlobal(20)
        hConnect = 0
        Reply = CtsLs.LSConnect(0, 0, model, hConnect)
        If Reply = CtsLs.LsReply.LS OKAY Then
            Dim strIdentify As [String]
            Dim blankOpt As String = "
            ' BoardVersion
            'FeederVersion,
            'SorterVersion,
            'Motorversion,
            'Reserved1,
            Reply = CtsLs.LSUnitIdentify(hConnect, 0, UnitCfg,
strLsModel, strFwVersion, Date Fw,
             strUnitID, IntPtr.Zero, DecoderExpVersion,
strInkJetVersion, IntPtr.Zero, IntPtr.Zero,
             IntPtr.Zero, IntPtr.Zero, IntPtr.Zero)
            'Reserved2
            If Reply = CtsLs.LsReply.LS OKAY Then
                strIdentify = "Model : " &
Marshal.PtrToStringAnsi(strLsModel) & vbLf & "FW version : " &
Marshal.PtrToStringAnsi(strFwVersion) & vbLf & "FW date : " &
Marshal.PtrToStringAnsi(Date Fw) & vbLf & vbLf & "Serial #: " &
Marshal.PtrToStringAnsi(strUnitID) & vbLf & vbLf & "Options :" & vbLf
Marshal.PtrToStringAnsi(strLsModel).Contains("LS40") = True Then
                    If (UnitCfg(0) And &H1) = &H1 Then
                        strIdentify += blankOpt & "MICR reader" &
vbLf
                    If (UnitCfg(0) And \&H2) = \&H2 Then
                        strIdentify += blankOpt & "Card Processing" &
vbLf
                    If (UnitCfg(0) And \&H8) = \&H8 Then
                        strIdentify += blankOpt & "Endorsement Ink-
jet printer" & vbLf
                    End If
                    If (UnitCfg(0) And \&H10) = \&H10 Then
                        strIdentify += blankOpt & "USB Powered" &
vbLf
                    End If
                    If (UnitCfg(0) And \&H20) = \&H20 Then
                        strIdentify += blankOpt & "Voiding front
stamp" & vbLf
                    End If
                    If (UnitCfg(1) And &H1) = &H1 Then
                        strIdentify += blankOpt & "Scanner FRONT" &
vbLf
                    End If
                    If (UnitCfg(1) And \&H2) = \&H2 Then
```



```
strIdentify += blankOpt & "Scanner REAR" &
vbLf
                    End If
                     If (UnitCfg(1) And \&H4) = \&H4 Then
                         strIdentify += blankOpt & "Badge reader with
tracks 1/2" & vbLf
                     End If
                     If (UnitCfg(1) And \&H8) = \&H8 Then
                         strIdentify += blankOpt & "Badge reader with
tracks 2/3" & vbLf
                     End If
                     If (UnitCfg(1) And &H10) = &H10 Then
                         strIdentify += blankOpt & "Badge reader with
tracks 1/2/3" & vbLf
                    End If
                ElseIf
Marshal.PtrToStringAnsi(strLsModel).Contains("LS100") = True Then
                    If (UnitCfg(1) And &H1) = &H1 Then
                         strIdentify += blankOpt & "MICR reader" &
vbLf
                    End If
                     If (UnitCfg(1) And \&H2) = \&H2 Then
                         strIdentify += blankOpt & "OCR reader" & vbLf
                    End If
                     If (UnitCfg(1) And \&H8) = \&H8 Then
                         strIdentify += blankOpt & "Endorsement Ink-
jet printer" & vbLf
                    End If
                    If (UnitCfg(1) And \&H10) = \&H10 Then
                         strIdentify += blankOpt & "Feeder " & vbLf
                    End If
                    If (UnitCfg(1) And \&H20) = \&H20 Then
                         strIdentify += blankOpt & "Voiding front
stamp" & vbLf
                    End If
                     If (UnitCfg(2) And \&H1) = \&H1 Then
                         strIdentify += blankOpt & "Scanner FRONT" &
vbLf
                    End If
                     If (UnitCfg(2) And \&H2) = \&H2 Then
                         strIdentify += blankOpt & "Scanner REAR" &
vbLf
                    End If
                     If (UnitCfg(2) And \&H4) = \&H4 Then
                         If (UnitCfg(2) And \&H10) = \&H10 Then
                             strIdentify += blankOpt & "Badge reader
with tracks 1/2/3" & vbLf
                         Else
                             If (UnitCfg(2) And &H8) = &H8 Then
                                 strIdentify += blankOpt & "Badge
reader with tracks 1/2" & vbLf
                             Else
                                 strIdentify += blankOpt & "Badge
reader with tracks 2/3" & vbLf
                            End If
                        End If
                    End If
                ElseIf
Marshal.PtrToStringAnsi(strLsModel).Contains("LS150") = True Then
```



```
If (UnitCfg(0) And \&H1) = \&H1 Then
                        strIdentify += blankOpt & "MICR reader" &
vbLf
                    End If
                    If (UnitCfg(0) And \&H2) = \&H2 Then
                         strIdentify += blankOpt & "Unit set in Normal
Speed" & vbLf
                    Else
                        strIdentify += blankOpt & "Unit set in High
Speed" & vbLf
                    End If
                    If (UnitCfg(0) And \&H4) = \&H4 Then
                        strIdentify += blankOpt & "Feeder Motorized"
& vbLf
                    End If
                    If (UnitCfg(0) And \&H8) = \&H8 Then
                        If (UnitCfg(2) And \&H8) = \&H8 Then
                            strIdentify += blankOpt & "High
Definition Ink-jet printer" & vbLf
                        Else
                             strIdentify += blankOpt & "Endorsement
Ink-jet printer" & vbLf
                        End If
                    End If
                    If (UnitCfg(0) And &H10) = &H10 Then
                        strIdentify += blankOpt & "Feeder with
Electromagnet 50 Doc." & vbLf
                    End If
                    If (UnitCfg(0) And \&H20) = \&H20 Then
                         strIdentify += blankOpt & "Voiding front
stamp" & vbLf
                    End If
                    If (UnitCfg(1) And &H4) = &H4 Then
                        strIdentify += blankOpt & "Scanner FRONT with
Ultra Violet" & vbLf
                    ElseIf (UnitCfg(1) And &H1) = &H1 Then
                        strIdentify += blankOpt & "Scanner FRONT" &
vbLf
                    End If
                    If (UnitCfg(1) And \&H2) = \&H2 Then
                        strIdentify += blankOpt & "Scanner REAR" &
vbLf
                    End If
                    If (UnitCfg(1) And \&H20) = \&H20 Then
                        strIdentify += blankOpt & "COLOR version" &
vbLf
                    End If
                    If (UnitCfg(1) And &H8) = &H8 Then
                        If (UnitCfg(1) And &H10) = &H10 Then
                             strIdentify += blankOpt & "Badge reader
with tracks 1/2/3" & vbLf
                        Else
                             strIdentify += blankOpt & "Badge reader
with tracks 2/3" & vbLf
                        End If
                    ElseIf (UnitCfg(1) And &H10) = &H10 Then
                        strIdentify += blankOpt & "Badge reader with
tracks 1/2" & vbLf
                    End If
```



```
ElseIf
Marshal.PtrToStringAnsi(strLsModel).Contains("LS515") = True Then
                    If (UnitCfg(1) And &H1) = &H1 Then
                         strIdentify += blankOpt & "CMC7 reader" &
vbLf
                    End If
                    If (UnitCfg(1) And \&H1) = \&H2 Then
                         strIdentify += blankOpt & "E13B reader" &
vbLf
                    End If
                    If (UnitCfg(1) And \&H8) = \&H8 Then
                        strIdentify += blankOpt & "Endorsement Ink-
jet printer" & vbLf
                    End If
                    If (UnitCfg(1) And \&H20) = \&H20 Then
                        strIdentify += blankOpt & "Voiding front
stamp" & vbLf
                    End If
                    If (UnitCfg(2) And &H1) = &H1 Then
                        If (UnitCfg(2) And &HC) = &H4 Then
                             strIdentify += blankOpt & "Scanner FRONT
with Ultra Violet" & vbLf
                        Else
                             strIdentify += blankOpt & "Scanner FRONT"
& vbLf
                        End If
                    End If
                    If (UnitCfg(2) And \&H2) = \&H2 Then
                        strIdentify += blankOpt & "Scanner REAR" &
vbLf
                    End If
                    If (UnitCfg(1) And \&H10) = \&H10 Then
                        strIdentify += blankOpt & "Badge reader" &
vbLf
                    End If
                    If (UnitCfg(1) And \&H20) = \&H20 Then
                        strIdentify += blankOpt & "Double Leafing
sensor" & vbLf
                    End If
                End If
                MessageBox.Show(strIdentify, TITLE POPUP)
            End If
            Reply = CtsLs.LSDisconnect(hConnect, 0)
        Else
            CheckReply(Reply, "LSConnect")
        End If
    End Sub
Private Function DoAutoDocHandle (ByVal hConnect As Short, ByVal
UnitCfg As Byte()) As Integer
        Dim Reply As Integer
           string
                       FileOut;
```



```
Dim BufFrontFile As IntPtr = Marshal.AllocHGlobal(1024)
       Dim BufRearFile As IntPtr = Marshal.AllocHGlobal(1024)
       Dim BufFrontImage As IntPtr
       Dim BufRearImage As IntPtr
       Dim BufFrontUVImage As IntPtr
       Dim BufFrontGrayUVImage As IntPtr
       Dim NoImage As IntPtr
       Dim BufCodelineSW As IntPtr =
Marshal.AllocHGlobal(CInt(CtsLs.CodeLineType.MAX CODE LINE LENGTH))
        Dim BufCodelineHW As IntPtr =
Marshal.AllocHGlobal(CInt(CtsLs.CodeLineType.MAX CODE LINE LENGTH))
       Dim BufBarcode As IntPtr =
Marshal.AllocHGlobal(CInt(CtsLs.CodeLineType.MAX CODE LINE LENGTH))
        Dim CodelineType As CtsLs.CodeLineType
       Dim C_x As Single
       Dim C_y As Single
Dim C_w As Single
       Dim C_h As Single
                   int
                         ImageBW;
       Dim DocToRead As Short
       Dim NrPrinted As Int32
       Dim DocToProcess As Int32
       Dim NrDoc As UInt32
       Dim NrCheque As Short = 1
       Dim PrintValidate As CtsLs.PrintValidate
       Dim dirBase As IntPtr
       Dim Filename As IntPtr
       'FILE *fhCodeline = NULL;
        ' COORDINATE PER BARCODE O PER OCR
        Dim TypeOfDecod As Byte
        Reply = CtsLs.LSConnect(0, 0, model, hConnect)
        If Reply <> CtsLs.LsReply.LS OKAY Then
          // Error Handling
          MessageBox.Show("Open not done: error " +
Reply.ToString());
          return Reply;
       End If
       PrintValidate = CtsLs.PrintValidate.NO_PRINT_VALIDATE
        '-----LoadString-----
       If stParAppl.PrintValidate <> CtsLs.PrintFont.PRINT NO STRING
Then
           Dim strEndorse As IntPtr = Marshal.AllocHGlobal(160)
            ' Copy the Secure string to unmanaged memory (and decrypt
it).
            strEndorse =
Marshal.StringToHGlobalAnsi(stParAppl.Endorse str)
            If stParAppl.Endorse str.Contains("%d") Then
```



```
Reply = CtsLs.LSLoadStringWithCounterEx(hConnect, 0,
CShort(stParAppl.PrintValidate), strEndorse,
CShort(stParAppl.Endorse str.Length), 8,
           Else
               Reply = CtsLs.LSLoadString(hConnect, 0,
CShort(stParAppl.PrintValidate),
CShort(stParAppl.Endorse str.Length), strEndorse)
            End If
            If Reply <> CtsLs.LsReply.LS OKAY Then
                If CheckReply(Reply, "LSLoadString") Then
                   Return Reply
               End If
           End If
           ' Set variable for print
           PrintValidate = CtsLs.PrintValidate.PRINT_VALIDATE
            'PrintValidate = CtsLs.PrintValidate.PRINT VALIDATE;
            'Reply = CtsLs.LSLoadString(hConnect, 0,
PRINT FORMAT HEAD TEST, 1, " ");
            'if (Reply != CtsLs.LsReply.LS OKAY)
                if (CheckReply(Reply, "LSLoadString"))
                {
                    return Reply;
       End If
        '----- Set Sensibilità foto doppia sfogliatura ------
       Reply = CtsLs.LSConfigDoubleLeafingAndDocLength(hConnect, 0,
stParAppl.DL Type, stParAppl.DL Value, stParAppl.DL MinDoc,
stParAppl.DL MaxDoc)
       If Reply <> CtsLs.LsReply.LS OKAY Then
            If CheckReply(Reply, "LSConfigDoubleLeafingAndDocLength")
Then
               Return Reply
           End If
       End If
        '----- Change stamp position -----
        'Reply = CtsLs.LSChangeStampPosition(hConnect, 0,
stParAppl.StampPosition, 0);
        'if (Reply != CtsLs.LsReply.LS OKAY)
            if (CheckReply(Reply, "LSChangeStampPosition"))
                return Reply;
        '----- Set attesa introduzione documento ------
       Reply = CtsLs.LSDisableWaitDocument(hConnect, 0,
stParAppl.WaitTimeout)
```



```
If Reply <> CtsLs.LsReply.LS OKAY Then
           If CheckReply(Reply, "LSDisableWaitDocument") Then
               Return Reply
           End If
       End If
       '----- Set speed document -----
       Reply = CtsLs.LSSetUnitSpeed(hConnect, 0, stParAppl.LowSpeed)
       If Reply <> CtsLs.LsReply.LS OKAY Then
           If CheckReply(Reply, "LSSetSpeedUnit") Then
               Return Reply
           End If
       End If
        '----- Set Light Intensity -----
       Reply = CtsLs.LSSetLightIntensity(hConnect, 0,
stParAppl.LightIntensity)
       If Reply <> CtsLs.LsReply.LS OKAY Then
           If CheckReply(Reply, "LSSetLightIntensity") Then
               Return Reply
           End If
       End If
        '----- Only for Ultra Violet type -----
       If (UnitCfg(1) And MASK SCANNER UV) = MASK SCANNER UV Then
           Reply = CtsLs.LSModifyPWMUltraViolet(hConnect, 0,
stParAppl.PercentPWM UV, stParAppl.Contrast UV,
stParAppl.Threshold UV)
           If Reply <> CtsLs.LsReply.LS OKAY Then
               If CheckReply(Reply, "LSModifyPWMUltraViolet") Then
                   Return Reply
               End If
           End If
       End If
        ' Settaggio dei parametri fissi per LS AutoDocHandle
       dirBase = Marshal.StringToHGlobalAnsi(PathAppl +
SAVE DIRECTORY IMAGE)
       Filename = Marshal.StringToHGlobalAnsi(NAME IMAGE)
       CodelineType = CtsLs.CodeLineType.NO READ CODELINE
       TypeOfDecod = stParAppl.TypeOfDecod
       If stParAppl.CodelineMICR <>
CtsLs.CodeLineType.NO READ CODELINE Then
           CodelineType = stParAppl.CodelineMICR
       ElseIf stParAppl.CodelineOCR <>
CtsLs.CodeLineType.NO READ CODELINE Then
           CodelineType = stParAppl.CodelineOCR
           C x = stParAppl.Codeline Sw x
           C y = stParAppl.Codeline Sw y
           C w = stParAppl.Codeline_Sw_w
           C h = stParAppl.Codeline_Sw_h
           TypeOfDecod -= DECODE OCR
       ElseIf stParAppl.BarcodeType <>
CtsLs.CodeLineType.NO READ CODELINE Then
```



```
CodelineType = stParAppl.BarcodeType
           C x = stParAppl.Barcode Sw x
             _y = stParAppl.Barcode Sw y
             _w = stParAppl.Barcode Sw w
           C h = stParAppl.Barcode Sw h
           TypeOfDecod -= DECODE OCR
       End If
       Reply = CtsLs.LSAutoDocHandle(hConnect, 0,
stParAppl.FrontStamp, CShort(PrintValidate), CShort(CodelineType),
stParAppl.ScanMode,
         CShort (CtsLs.Feeder.FEED AUTO),
CShort(CtsLs.Sorter.SORTER_POCKET_1), stParAppl.NumDoc,
stParAppl.ClearAlignImage, stParAppl.Side, 0, _
        stParAppl.SaveImage, dirBase, Filename, C_x, C_y, C_w,
        C_h, CShort(CtsLs.Unit.UNIT_MM), 0, stParAppl.FileFormat,
stParAppl.Qual, CShort(CtsLs.FileAttribute.SAVE OVERWRITE),
        1, CShort(If(stParAppl.WaitTimeout, CtsLs.Wait.WAIT_YES,
CtsLs.Wait.WAIT NO)), stParAppl.BeepOnError, 0, IntPtr.Zero,
IntPtr.Zero)
        If Reply <> CtsLs.LsReply.LS OKAY Then
           If CheckReply(Reply, "LSAutoDocHandle") Then
               Return Reply
           End If
       End If
        ' Salvo il nr. di documenti da processare
        If stParAppl.NumDoc <> 0 Then
           DocToProcess = stParAppl.NumDoc
           DocToProcess = 1000000
       End If
       If Save FrontImage <> IntPtr.Zero Then
           CtsLs.LSFreeImage(0, Save FrontImage)
           Save FrontImage = IntPtr.Zero
       End If
        If Save RearImage <> IntPtr.Zero Then
           CtsLs.LSFreeImage(0, Save RearImage)
           Save RearImage = IntPtr.Zero
       End If
        '-----GetDocData-----
       Dim pBitmap As Bitmap = Nothing
           if( Reply == LS OKAY )
          {
                 while( TRUE )
       While Reply = CtsLs.LsReply.LS OKAY
           Marshal.WriteByte(BufFrontFile, 0)
           Marshal.WriteByte(BufRearFile, 0)
           BufFrontImage = IntPtr.Zero
           BufRearImage = IntPtr.Zero
           BufFrontUVImage = BufFrontGrayUVImage = IntPtr.Zero
           NoImage = IntPtr.Zero
           NrDoc = 0
           DocToRead = 0
           NrPrinted = 0
```



```
Marshal.WriteByte(BufCodelineSW, 0)
           Marshal.WriteByte(BufCodelineHW, 0)
           Marshal.WriteByte(BufBarcode, 0)
            'BufFrontNettoFile,
            'BufBackNettoFile,
            'BufbackNettoImage,
           Reply = CtsLs.LSGetDocData(hConnect, 0, NrDoc,
BufFrontUVImage, NoImage, BufCodelineSW,
            BufCodelineHW, BufBarcode, IntPtr.Zero, DocToRead,
NrPrinted, IntPtr.Zero,
            IntPtr.Zero)
            ' Se e` doppia sfogliatura non termino
            If ((Reply <> CtsLs.LsReply.LS_OKAY) AndAlso (Reply <>
CtsLs.LsReply.LS SORTER1 FULL) AndAlso (Reply <>
CtsLs.LsReply.LS DOUBLE LEAFING WARNING)) Then
               If Reply <> CtsLs.LsReply.LS FEEDER EMPTY Then
                   CheckReply(Reply, "LS GetDocData")
               Exit While
            End If
            'metto il test per le altre codeline
            If (TypeOfDecod And DECODE OCR) = DECODE OCR Then
               Dim ro As CtsLs.READOPTIONS
               Dim CodelineOpt As Byte() = New Byte(3) {}
               Dim len codeline As Integer
               ro.PutBlanks = 1
               ro.TypeRead = "N"c
               If stParAppl.CodelineOCR =
CtsLs.CodeLineType.READ CODELINE SW E13B X OCRB Then
                   ro.TypeRead = "X"c
                   CodelineOpt(0) =
CByte (CtsLs.CodeLineType.READ CODELINE SW E13B)
                   CodelineOpt(1) =
CByte(CtsLs.CodeLineType.READ_CODELINE_SW_OCRB_ITALY)
                   CodelineOpt(2) =
CByte (AscW (ControlChars.NullChar))
               Else
                   CodelineOpt(0) = CByte(stParAppl.CodelineOCR)
                   CodelineOpt(2) =
CByte (AscW (ControlChars.NullChar))
               End If
               len codeline =
CInt(CtsLs.CodeLineType.MAX CODE LINE LENGTH)
               Reply = CtsLs.LSCodelineReadFromBitmap(0,
BufFrontImage, CodelineOpt, stParAppl.Unit measure,
stParAppl.Codeline Sw x, stParAppl.Codeline Sw y,
                stParAppl.Codeline Sw w, stParAppl.Codeline Sw h,
ro, BufCodelineSW, len codeline)
                If Reply <> CtsLs.LsReply.LS OKAY Then
                    CheckReply(Reply, "LSCodelineReadFromBitmap")
```



```
' Set Ok for not exit from the loop
                    Reply = CtsLs.LsReply.LS OKAY
                End If
            End If
            If (TypeOfDecod And DECODE BARCODE) = DECODE BARCODE Then
                Dim len barcode As Integer =
CInt(CtsLs.CodeLineType.MAX CODE LINE LENGTH)
                Reply = CtsLs.LSReadBarcodeFromBitmap(0,
BufFrontImage, CByte(stParAppl.BarcodeType),
CInt(stParAppl.Barcode_Sw_x), CInt(stParAppl.Barcode_Sw_y),
CInt(stParAppl.Barcode Sw w),
                 CInt(stParAppl.Barcode Sw h), BufBarcode,
len barcode)
                If Reply <> CtsLs.LsReply.LS OKAY Then
                    CheckReply(Reply, "LSReadBarcodeFromBitmap")
                    ' Set Ok for not exit from the loop
                    Reply = CtsLs.LsReply.LS OKAY
                End If
            End If
            If (TypeOfDecod And DECODE PDF417) = DECODE PDF417 Then
                Dim len barcode As Integer =
CInt(CtsLs.CodeLineType.MAX CODE LINE LENGTH)
                Reply = CtsLs.LSReadPdf417FromBitmap(0,
BufFrontImage, BufBarcode, len barcode, 0, 0,
                 0, 0, 0)
                If Reply <> CtsLs.LsReply.LS OKAY Then
                    CheckReply(Reply, "LSReadPdf417FromBitmap")
                    ' Set Ok for not exit from the loop
                    Reply = CtsLs.LsReply.LS OKAY
                End If
            End If
            If stParAppl.ScanMode =
CShort (CtsLs.ScanMode.SCAN MODE 256GR100 AND UV) OrElse
stParAppl.ScanMode = CShort(CtsLs.ScanMode.SCAN MODE 256GR200 AND UV)
OrElse stParAppl.ScanMode =
CShort (CtsLs.ScanMode.SCAN MODE 256GR300 AND UV) Then
                ' Build the mergered gray UV image
                If BufFrontUVImage <> IntPtr.Zero Then
                    'stParAppl.Threshold UV,
                    'if( stParAppl.SaveImage == IMAGE SAVE ON FILE | |
stParAppl.SaveImage == IMAGE SAVE BOTH )
                    ' {
                         // Check if I must save the image
                        if( stParAppl.FileFormat ==
(short)CtsLs.FileType.FILE JPEG )
                             FullFName, "%s\\%s%04dGUV.jpg", dirBase,
Filename, (NrDoc - 1));
                            Reply = LSSaveJPEG(hWnd,
BufFrontGrayUVImage, stParAppl.Qual, FullFName);
                        else if( stParAppl.FileFormat ==
(short)CtsLs.FileType.FILE BMP )
```



```
sprintf(FullFName, "%s\\%s%04dGUV.bmp",
dirBase, Filename, (NrDoc - 1));
                    ' Reply = LSSaveDIB(hWnd,
BufFrontGrayUVImage, FullFName);
                    ' }
                        else if( stParAppl.FileFormat ==
(short)CtsLs.FileType.FILE CCITT GROUP4 )
                             sprintf(FullFName, "%s\\%s%04dGUV.tif",
dirBase, Filename, (NrDoc - 1));
                             Reply = LSSaveTIFF(hWnd,
BufFrontGrayUVImage, FullFName, FILE TIF, SAVE OVERWRITE, 1);
                    1 }
                    CtsLs.LSMergeImageGrayAndUV(0, BufFrontImage,
BufFrontUVImage, 0, 0, BufFrontGrayUVImage)
               End If
            End If
            ' Show Codeline
            If Marshal.ReadByte(BufCodelineHW) <> 0 Then
                tbCodeline.Text =
Marshal.PtrToStringAnsi(BufCodelineHW)
            Else
                tbCodeline.Text = ""
            End If
            ' Show the immage
            If Form1.stParAppl.Side =
CByte(CtsLs.Side.SIDE ALL IMAGE) OrElse Form1.stParAppl.Side =
CByte (CtsLs.Side.SIDE FRONT IMAGE) Then
                Dim pBmp As CtsLs.BITMAPINFOHEADER =
Marshal.PtrToStructure(BufFrontImage,
GetType (CtsLs.BITMAPINFOHEADER) )
                pBitmap = New Bitmap (pBmp.biWidth, pBmp.biHeight,
PixelFormat.Format24bppRqb)
                BitmapData bmpData = pBitmap.LockBits(new
Rectangle (0, 0, pBitmap.Width, pBitmap.Height),
ImageLockMode.WriteOnly, pBitmap.PixelFormat);
                Dim xx As Integer, yy As Integer
                Dim diff As Int32, WidthBytes As Int32 = pBmp.biWidth
                diff = WidthBytes Mod 4
                If diff <> 0 Then
                    WidthBytes += (4 - diff)
                End If
                Dim row As Int32, col As Int32
                row = pBmp.biHeight - 1
                col = pBmp.biWidth - 1
                For yy = 0 To pBmp.biHeight - 1
                    For xx = 0 To pBmp.biWidth - 1
                        Dim Pixel As Byte =
Marshal.ReadByte(CInt(BufFrontImage) + 1064 + ((yy * WidthBytes) +
xx))
                        Dim Pixel24 As Color
                        Pixel24 = Color.FromArgb((Pixel * 256 * 256)
+ (Pixel * 256) + Pixel)
                        pBitmap.SetPixel(xx, (row - yy), Pixel24)
```



```
Next
                Next
                If pbImage. Image IsNot Nothing Then
                         //pbImage.Image = null;
                    pbImage.Image.Dispose()
                End If
                pbImage.Image = pBitmap
            End If
            ' Refresh the form
            Application.DoEvents()
            ' Enable the button for show the rear
            If Form1.stParAppl.Side =
CByte(CtsLs.Side.SIDE ALL_IMAGE) Then
                btRear.Enabled = True
            End If
            ' Free the aree
                             pBitmap.Dispose();
            ' Free the previous image memory and save the current
            If Save FrontImage <> IntPtr.Zero Then
                CtsLs.LSFreeImage(0, Save FrontImage)
            End If
            If BufFrontGrayUVImage <> IntPtr.Zero Then
                Save FrontImage = BufFrontGrayUVImage
                CtsLs.LSFreeImage(0, BufFrontImage)
                CtsLs.LSFreeImage(0, BufFrontUVImage)
            ElseIf BufFrontImage <> IntPtr.Zero Then
                Save FrontImage = BufFrontImage
            End If
            If Save RearImage <> IntPtr.Zero Then
                CtsLs.LSFreeImage(0, Save RearImage)
            End If
            Save RearImage = BufRearImage
            If (System.Threading.Interlocked.Decrement(DocToProcess))
= 0 Then
                Exit While
            End If
            NrCheque += 1
        End While
        ' Fine while ( TRUE )
        ' Free of local variable
        Marshal.FreeHGlobal(Filename)
        Marshal.FreeHGlobal(dirBase)
        Marshal.FreeHGlobal(BufBarcode)
        Marshal.FreeHGlobal(BufCodelineHW)
        Marshal.FreeHGlobal(BufCodelineSW)
        Marshal.FreeHGlobal(BufRearFile)
        Marshal.FreeHGlobal(BufFrontFile)
        Return Reply
```



End Function




Reply codes

LS functions reply codes are coded as requested by environment standard and all the possible reply codes are identified by a symbolic name as shown by the table below.

Symbolic Name	Class	Description	Possible Reasons
LS_OKAY		Command correctly executed	
LS_SYSTEM_ERROR	Е	The service was unable to execute command due to a system error	System allocation memory error
LS_USB_ERROR	Е	The service was unable to execute a command due to a USB error	Error condition coming from USB Manager or USB exchange data
LS_PERIPHERAL_NOT_FOUND	Е	Peripheral not found by the service	Peripheral is switched off or not connected to the USB port
LS_HARDWARE_ERROR	E	Peripheral hardware error	Peripheral hardware is not operating correctly
LS_PERIPHERAL_OFF_ON	Е	Peripheral has been switched off and on again	The peripheral has been switched off and on again between the last and the current command.
LS_RESERVED_ERROR	Е	Peripheral reservation error	Another program is using the peripheral.
LS_PAPER_JAM	Е	Document jammed	Document jammed
LS_INVALID_COMMAND	Е	Invalid command	The current command contains invalid parameters specification or is inconsistent with the previous command sequence
LS_DATA_LOST	Е	Error during codeline data transfer	Application buffer not sufficient for contained all the character decoded
LS_COMMAND_IN_EXECUTIO N_YET	Е	A command is already in execution	Command refused because other command has been launched
LS_COMMAND_SEQUENCE_ER ROR	Е	The command's sequence is not correct	The command is executed in wrong sequence.
LS_BARCODE_ERROR	Е	Barcode string is in error.	The barcode string cannot be read.



LS_INVALID_HANDLE	Е	The handle is invalid	The handle passed to image manipulation function like LSConvertImageToBW is invalid.
LS_NO_LIBRARY_LOAD	Е	Library Img_util.dll and/or CtsDecod.dll are not present or not correctly installed	Install the <i>complete software distribution kit</i> or verified that the library Img_util.dll and/or CtsDecod.dll are present in the same directory of the library LsApi.dll.
LS_JPEG_ERROR	Е	JPEG image not created	Folder for store the images probably not found.
LS_BMP_ERROR	Е	BMP image not created	Folder for store the images probably not found.
LS_TIFF_ERROR	Е	TIFF image not created	Folder for store the images probably not found.
LS_ALREADY_OPEN	W	The peripheral is already connected	Do LS_Close, or use the other command.
LS_STRING_TRUNCATED	W	Buffer insufficient for contain the library release	Selected feeder (autofeeder or scan feeder) is empty.
LS_FEEDER_EMPTY	W	Feeder is empty	Selected feeder (autofeeder or scan feeder) is empty.
LS_DATA_TRUNCATED	W	Data truncated	Data transferred during command execution has been truncated because the destination buffer was too small.
LS_DOC_PRESENT	W	Document present	You close or open a document handling session with a document already present inside document handling path.
LS_DOUBLE_LEAFING_ERROR	W	Document double feeding	More than one document has been feed by autofeeder.
LS_DOUBLE_LEAFING_WARNI NG	W	Document double feeding	More than one document has been feed by autofeeder.
LS_SORTER1_FULL	W	Sorter 1 full	Too many documents in sorter one.
LS_SORTER2_FULL	W	Sorter 2 full	Too many documents in sorter two.
LS500_SORTERS_BOTH_FULL	W	Sorters 1 and 2 full	Too many documents in sorter one and two.
LS_BADGETIMEOUT	W	Badge read timeout	Timeout expired during read badge.
LS_NO_OTHER_DOCUMENT	W	There are not other document	The queue is empty and loop handle is finished.

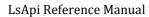



LS_TRY_TO_RESET	W	Try to execute a Reset command	The peripheral is in error
LS_NO_SENSE	W	The peripheral is busy	Re-execute the command
LS_QUEUE_FULL	W	The document's queue is full.	To many documents is scanned.
LS_RETRY	W	Retry the GetDocData command.	There are other documents in the queue.