

SpotOn

The Audio Playout Software



[Introduction](#)

[Installation](#)

[Getting Started](#)

[Main Menus](#)

[Button Menus](#)

[Button Icons](#)

[Sound Card SetUp](#)

[GPI Interfaces](#)

[Additional Information](#)

[Versions](#)

© David Markie 8th August 2021

EMail - david.markie@serialtech.com

Web - www.serialtech.com

Contents

Introduction	4
Installation 1	6
Getting Started.....	19
Main Menus	32
File Menu	33
SetUp Menu	52
Display Menu	71
Edit Menu.....	80
Search Menu	87
Global Menu.....	90
Options Menu	131
Info Menu.....	141
Engineering Menu.....	149
Admin Menu	174
Button Menus	204
Display Options	214
Audio SetUp	232
Audio SetUp - Gain.....	233
Audio SetUp -Trim.....	249
Audio SetUp - PlayList	280
Midi Assignment	284
Regions.....	288
Additional Information.....	291
Keyboard Shortcuts.....	292
Windows Sounds.....	295
Advanced Operation	299
USB Power Management	304
Game Port Connections	307
UDP/TCP Commands.....	310
PBus Control.....	317
Locked Attributes	320
Button Icons	322
Command Line Switches	328
Settings.....	330
XML Playout Logs	334
Screen Saver.....	336

Sound Card Mixers	339
Audio Processing	342
Decoders	345
Audio File Types	347
BLITS - 5.1 Surround Sound Ident	348
MultiChannel Sound	354
Sound Card SetUp	355
Audio Science ASI5041/2/4.....	356
DigiGram VX422	372
Gina 3G.....	377
Layla3G.....	382
Edirol UA-101/UA-25	386
M-Audio Delta 1010.....	392
RME HDSP AES-32	401
RME SetUp	411
RME HDSP MADI	416
RME Fireface 800	419
RME Multiface II.....	421
GPI Interfaces.....	424
Game Port Connections	425
GPI to Midi Convertor	428
Versions.....	451

Main Menu



[File](#) [SetUp](#) [Display](#) [Edit](#) [Search](#) [Global](#) [Options](#) [Info](#) [Help](#)

[File](#)

[SetUp](#)

[Display](#)

[Edit](#)

[Search](#)

[Global](#)

[Options](#)


[Info](#)

[Engineering](#)

[Admin](#)

[Help](#)

File Menu

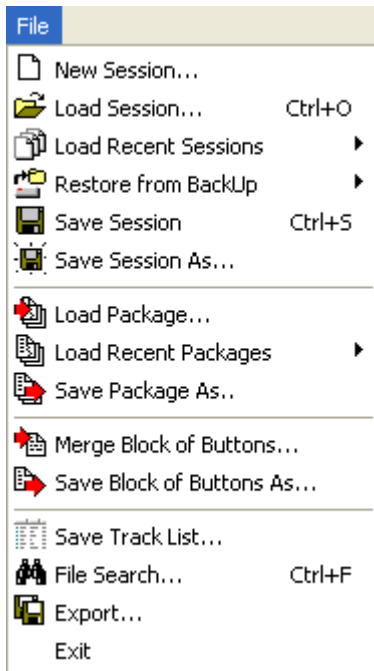

New Session	Clear all pages to start a new session
Load Session	Load data file containing complete setup information
Load Recent Sessions	Displays a list of recently accessed Sessions
Restore from BackUp	Restore session from timed backup file
Save Session	Save data to last loaded/saved disc file
Save Session As	Save data to a specific file
Load Package	Load file containing setup information and audio files
Load Recent Packages	Displays a list of recently accessed Packages
Save Package As	Save file containing setup information and audio files
Merge Block of Buttons	Load block of consecutive buttons
Save Block of Buttons	Save a block of consecutive buttons
Save Track List	Save track data in a spreadsheet compatible format
File Search	Opens an external file search utility
Export	Export copies of tracks to single folder
Exit	Close down SpotOn and save debug status files

New Session


In addition to clearing all the buttons this option will load the file ~newsession.dta if it is present in the Application Data folder, this file can be saved just as any other session file so allowing loading of a customised new session.

Application Data folder = ..\Documents and Settings\All Users\Application Data\Serialtech\SpotOn\

Load Session


Load a new session into SpotOn see [Load Session](#) page for an explanation

Save Session As

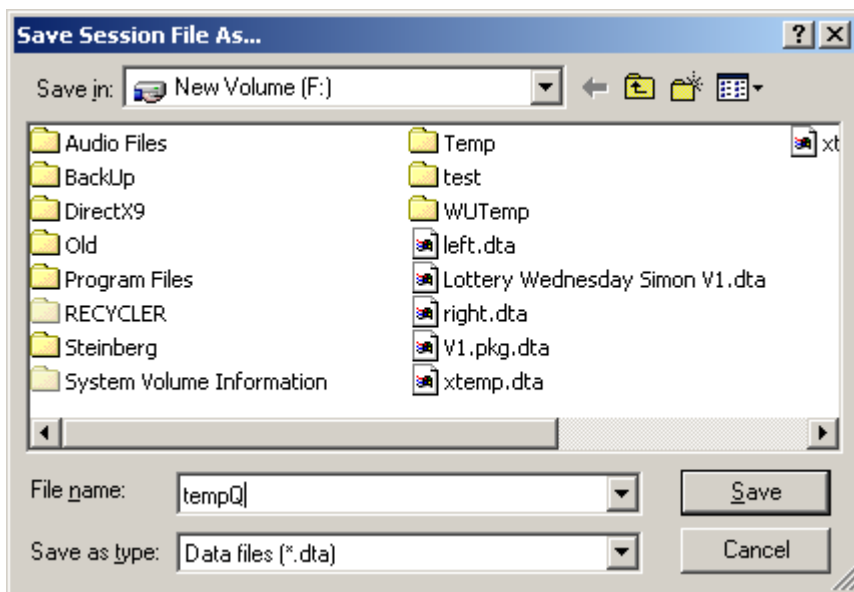

This saves the current session to disc, for SpotOn to locate the files the extension must be '.dta' this is added automatically. In the example above the file would be saved as 'tempQ.dta'.

If an invalid file extension is entered as part of the filename then it will be rejected.

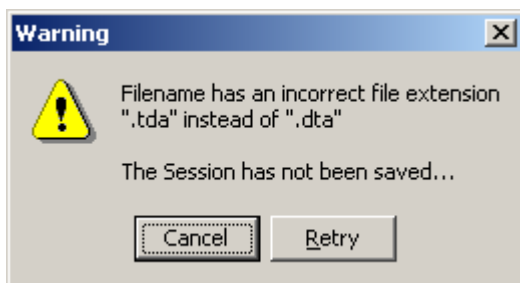


Restore from BackUp

To restore a session from the automatic backup files, select a file based on the time and date that is most likely to contain the data required


11:27 today	16:54 yesterday
11:03 today	18:23 Sun 11 Apr
11:00 today	14:39 Sun 11 Apr
18:00 yesterday	14:34 Sun 11 Apr
17:20 yesterday	14:29 Sun 11 Apr
17:09 yesterday	14:24 Sun 11 Apr
17:04 yesterday	14:19 Sun 11 Apr
16:59 yesterday	14:14 Sun 11 Apr

Load Package

A Package file (*.pkg) can be loaded to recreate a complete setup including replacing the audio WAV files, as this may take up a large amount of disc space the location of the extracted audio files can be changed during loading from the default of SpotOn\Package Media\ to a more appropriate location, the default location is set via [Admin|File Folders](#)

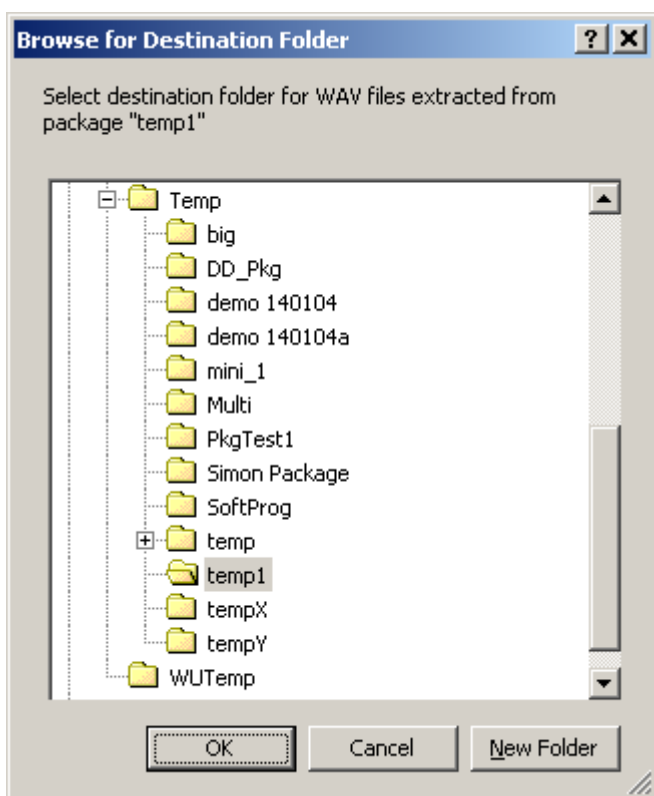


If SpotOn detects that the package being loaded was built with a version of the program that is more recent than the current version, then the warning dialog box below will appear.

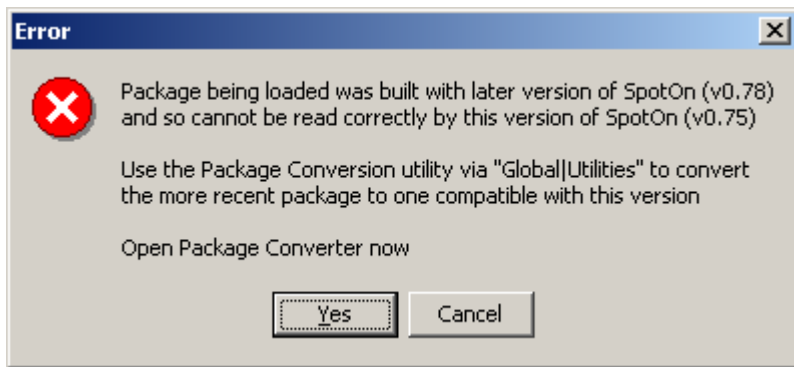



Clicking Yes will open the [Package Converter](#) utility, the Package Converter utility used must be the latest version and that can be found on the Serialtech web site - [PackageConvert.zip](#).

If the loaded package file contains less than the maximum number of buttons (<320) - a Mini package - then the option will be offered to merge the buttons into a specific place within the existing buttons.

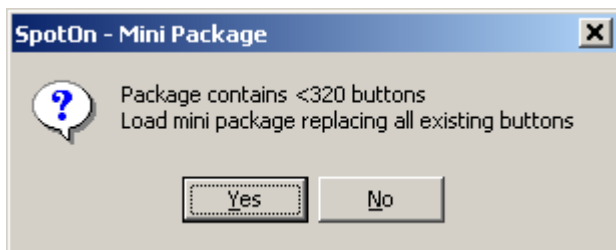


If Yes is selected all buttons in SpotOn will be cleared and then loaded from the Mini package starting at button 1.

If No is selected a further option is offered defining where the mini package will be merged into the existing set of buttons

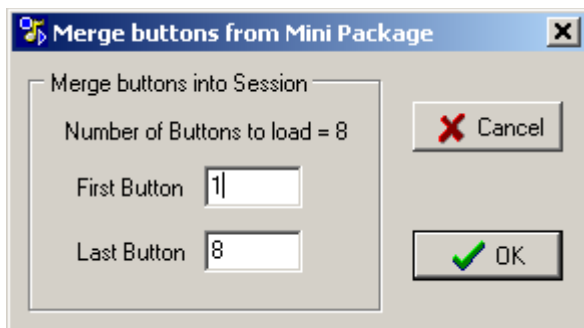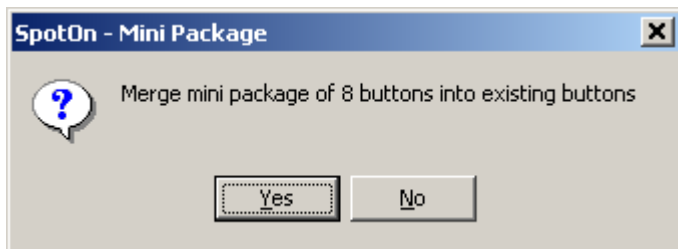


Default positioning starting at button 1, can be changed as below to start on any button.

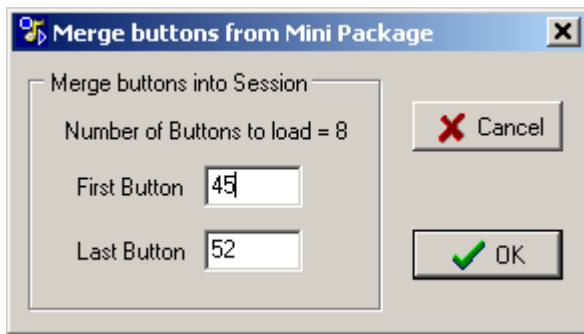

Depending on the length of the original filenames and the length of the name of the new folder, it is possible that the length of the overall path name may exceed the limit set by Windows. If this is the case then the filenames will be truncated but remain unique.

Save Package As

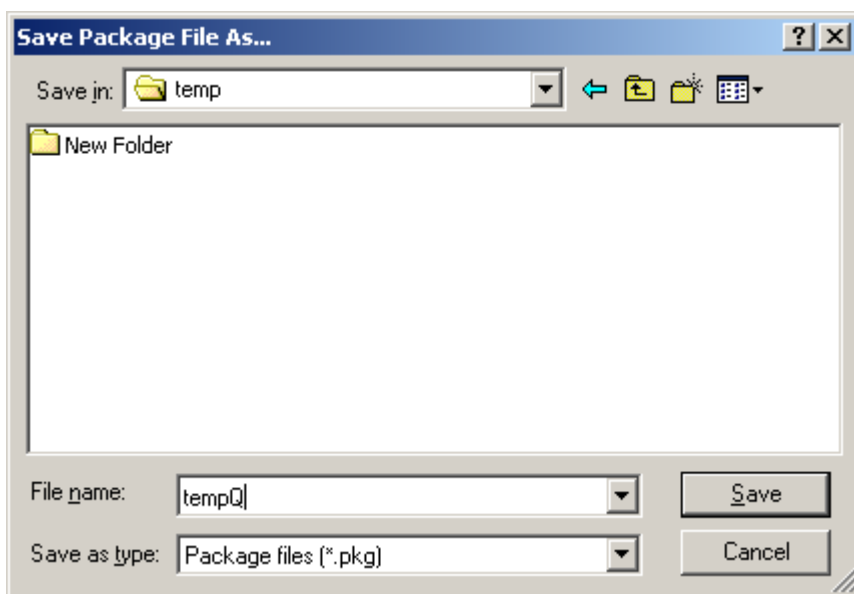


This option will save all the individual button settings along with the audio WAV files, consequently the resulting package file (*.pkg) can be very large, with CD quality audio the file will take up approximately 10MB for each minute of audio saved.

This package file can then be reloaded into the same computer or another computer running SpotOn to recreate the original setup.

There is a utility program provided with SpotOn called [UnPackageWAVs](#) that can extract the audio WAV files from the package file, this may be useful when working offline without access to SpotOn to review the audio material. The utility can also export audio tracks with the trim and gain settings applied by SpotOn.


A Package can contain any number of consecutive buttons between 1 and the maximum of 320

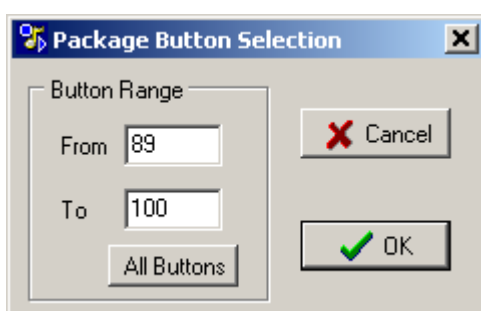


If the package does not contain all buttons then it is termed a Mini Package and can be merged into an existing set of buttons.

This saves the current package to disc, for SpotOn to locate the files the extension must be '.pkg' this is added automatically. In the example above the file would be saved as 'tempQ.pkg'.


If an invalid file extension is entered as part of the filename then it will be rejected.

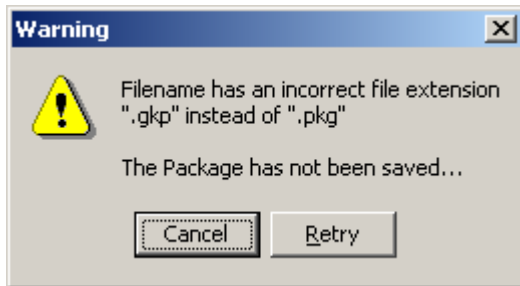


If a [CD/DVD burner utility](#) has been assigned then after the package has been saved there is then the option to burn it to CD or DVD.

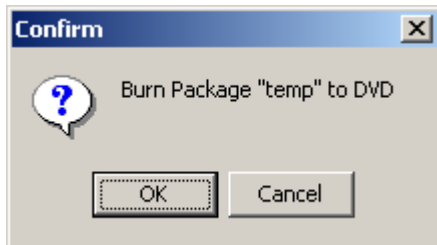

Merge Block of Buttons

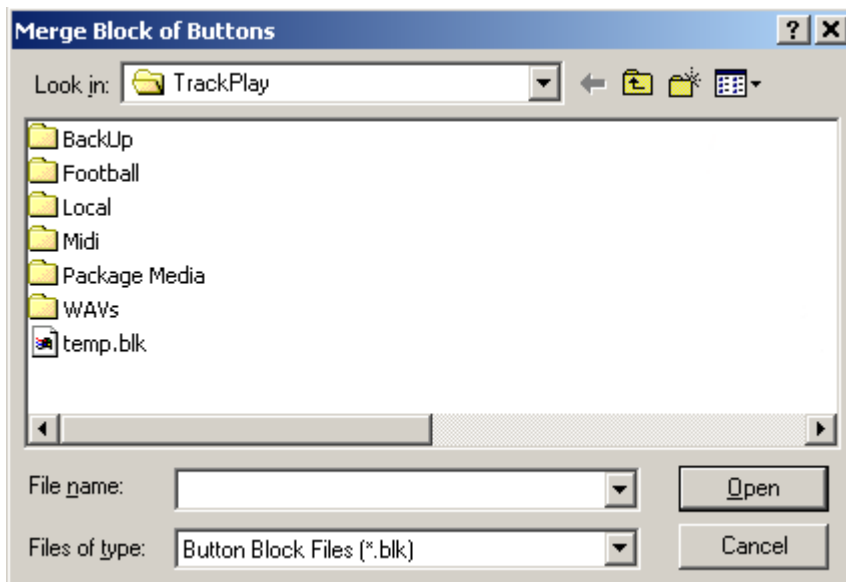


Having selected the file to retrieve the block of buttons, the first button of the sequence has to be defined, the number of buttons to be loaded is fixed in the file

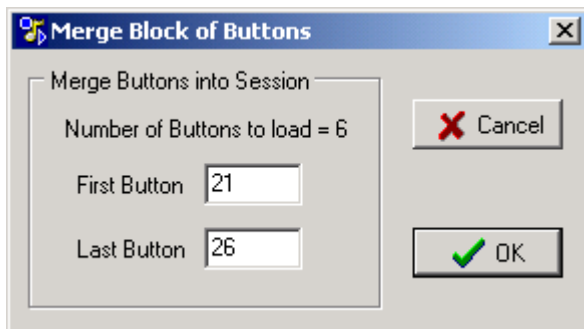


Save Block of Buttons

A continuous numerical run of buttons can be saved to a file, this can be used for a set of tracks that are commonly used and can be imported into new setups


Select a file to store the block of buttons

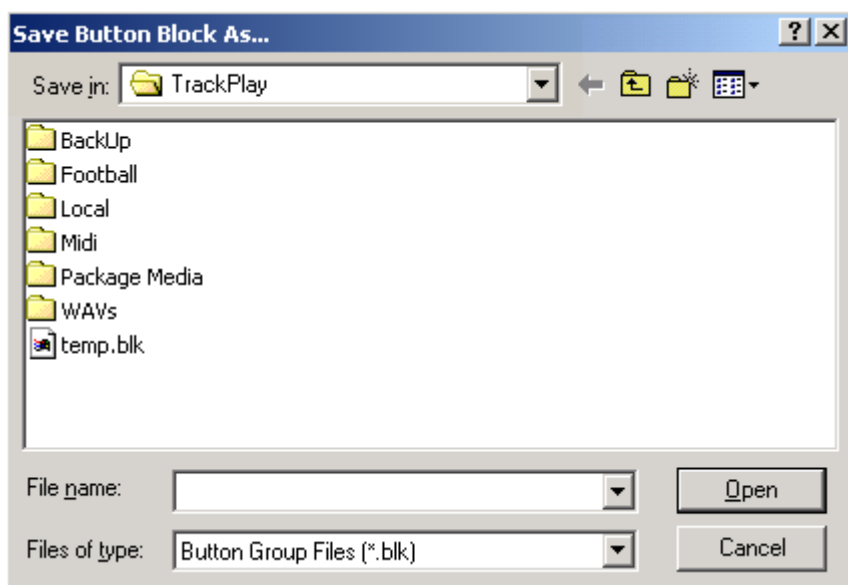

Then select the continuous range of buttons to save

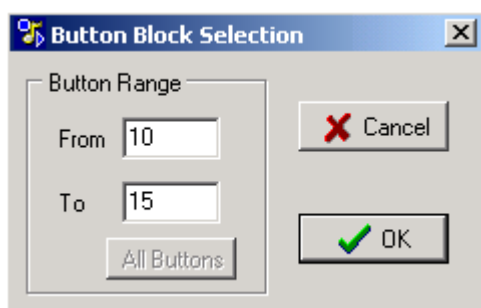

If an invalid file extension is entered as part of the filename then it will be rejected.

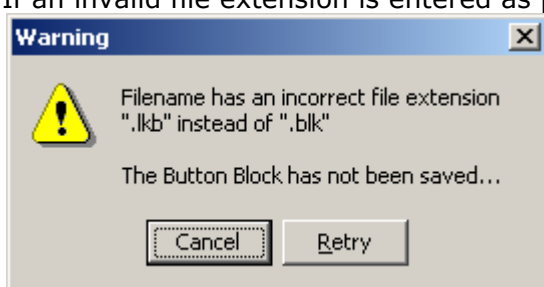

Save Track List

A Track List contains the settings of the assigned buttons the data is saved as both a text file (*.txt) and a comma separated variable (*.csv) file

A typical section of a Track List file (*.csv) imported into MS Excel


	A	B	C	D	E	F	G	H	I	J	K	L
1	#	TrackName	Length	Output	Gain	Left	Right	Speed	Trim In	In Point	Trim Out	Out Poi
2	2	SOUND1	00:00:05:02	a	0dB	0dB	0dB	0%	No	00:00:00:00	No	00:00:00:00
3	3	SOUND1	00:00:05:02	a	0dB	0dB	0dB	0%	No	00:00:00:00	No	00:00:00:00
4	4	SOUND1	00:00:05:02	a	0dB	0dB	0dB	0%	No	00:00:00:00	No	00:00:00:00
5	13	ding	00:00:00:69	e	0dB	0dB	0dB	0%	No	00:00:00:00	No	00:00:00:00
6	28	AudioTrack 09 (range)	00:00:08:01	e	0dB	0dB	0dB	0%	No	00:00:00:00	No	00:00:00:00
7	30	AudioTrack 14 (range)	00:00:11:51	e	0dB	0dB	0dB	0%	No	00:00:00:00	No	00:00:11:51
8	38	AudioTrack 14 (range)	00:00:11:51	e	0dB	0dB	0dB	0%	No	00:00:00:00	No	00:00:11:51
9	66	SOUND1	00:00:05:02	a	0dB	0dB	0dB	0%	No	00:00:00:00	No	00:00:00:00
10	67	SOUND1	00:00:05:02	a	0dB	0dB	0dB	0%	No	00:00:00:00	No	00:00:00:00
11	69	SOUND1	00:00:05:02	a	0dB	0dB	0dB	0%	No	00:00:00:00	No	00:00:00:00
12	70	SOUND1	00:00:05:02	a	0dB	0dB	0dB	0%	No	00:00:00:00	No	00:00:00:00
13	77	ding	00:00:00:69	a	0dB	0dB	0dB	0%	No	00:00:00:00	No	00:00:00:00
14	92	AudioTrack 09 (range)	00:00:08:01	e	0dB	0dB	0dB	0%	No	00:00:00:00	No	00:00:00:00
15	94	AudioTrack 14 (range)	00:00:11:51	e	0dB	0dB	0dB	0%	No	00:00:00:00	No	00:00:11:51
16	102	AudioTrack 14 (range)	00:00:11:51	e	0dB	0dB	0dB	0%	No	00:00:00:00	No	00:00:11:51

File Search


The menu item will run an external file search utility this utility may be customised to the type of files required, the utility is selected via [SetUp|Search](#) and the default program is [SpotOnSearch](#)

Export


For convenience SpotOn provides an export facility to copy all the currently used audio files to a single folder, this does not change the files or locations used by the application.

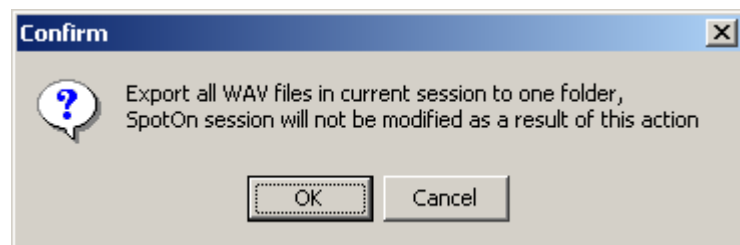


The destination folder is then selected

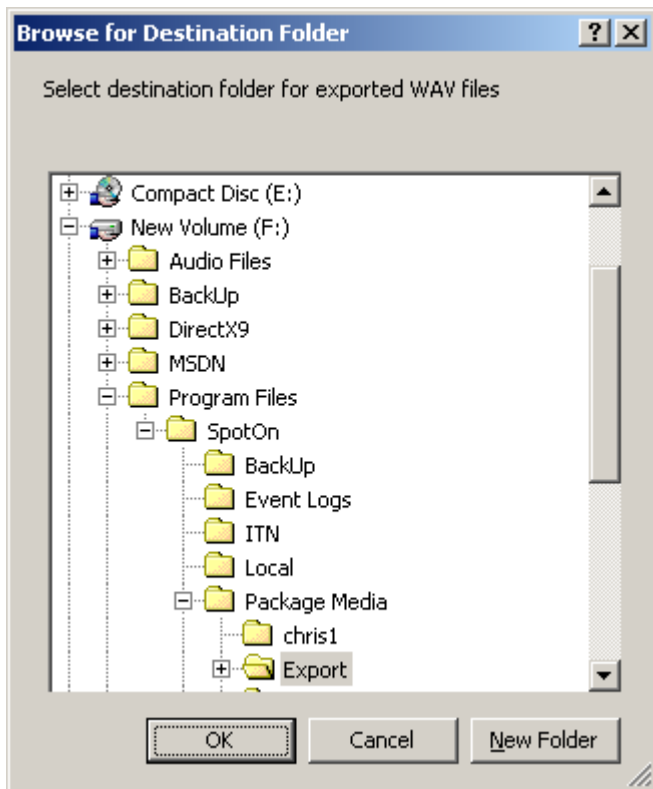

Next an option to export the files only from the buttons on the current page or from buttons on all pages is presented

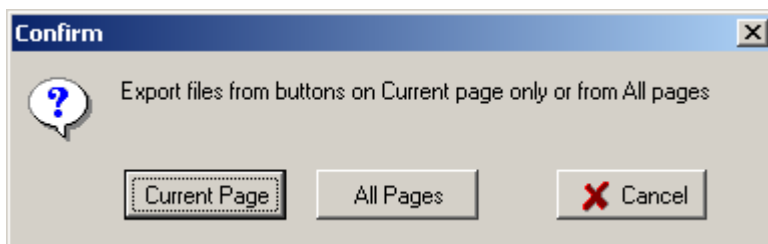

If a filename is found in the destination folder that is the same as any of the files being exported a warning dialog will be shown

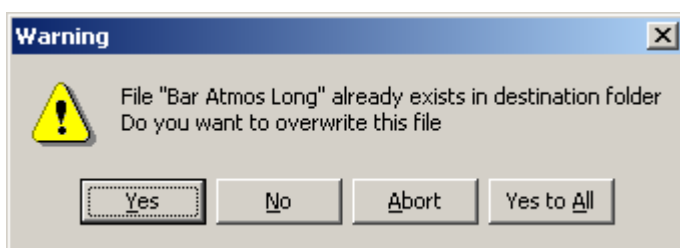

Exit

This option will close down SpotOn and save a debug status file ~StatusLog.txt to the application data folder, found at:-

Windows 7 - C:\Program Data\Serialtech\SpotOn

Windows XP - C:\Documents and Settings\All Users\Application Data\Serialtech\SpotOn

Windows 2K - C:\Documents and Settings\All Users.WINNT\Application Data\Serialtech\SpotOn

This file is only overwritten when SpotOn is closed via the File|Exit route, exiting the program with the more usual Windows close button leaves the file intact.

This mode will be useful in debugging problems, if a problem should occur close down SpotOn and then save the ~StatusLog.txt file to another folder, the zip the file and EMail it to your supplier along with a detailed description of what problems occurred.


More comprehensive debug logs can be saved via the [Global|Utilities menu](#)

Load Session


Load Session

This option will load the selected session file which will contain the button assignments and any parameters that have been set such as Master/Slave links, Hotkeys etc., to achieve this the audio tracks are assumed to be in the same location (disk drive/folder) as they were when the session was saved.

However it is possible that the audio tracks have been moved or possibly deleted, in this case SpotOn will report any missing files as shown below along with their last known location.

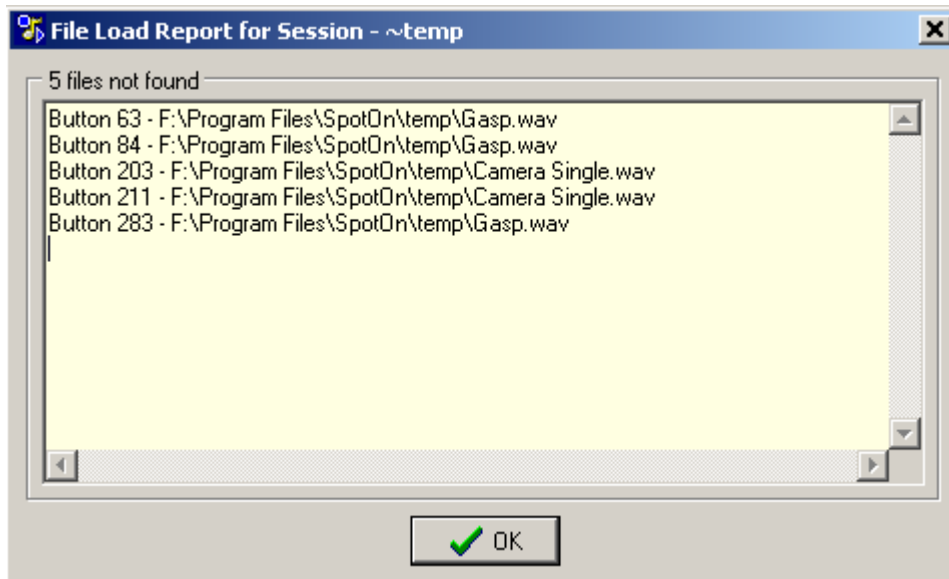


If the [Try Remote Files](#) option is checked, then the program will also attempt to search for the missing files in the location from which they were originally loaded eg CD or remote disk drive and then report as below.

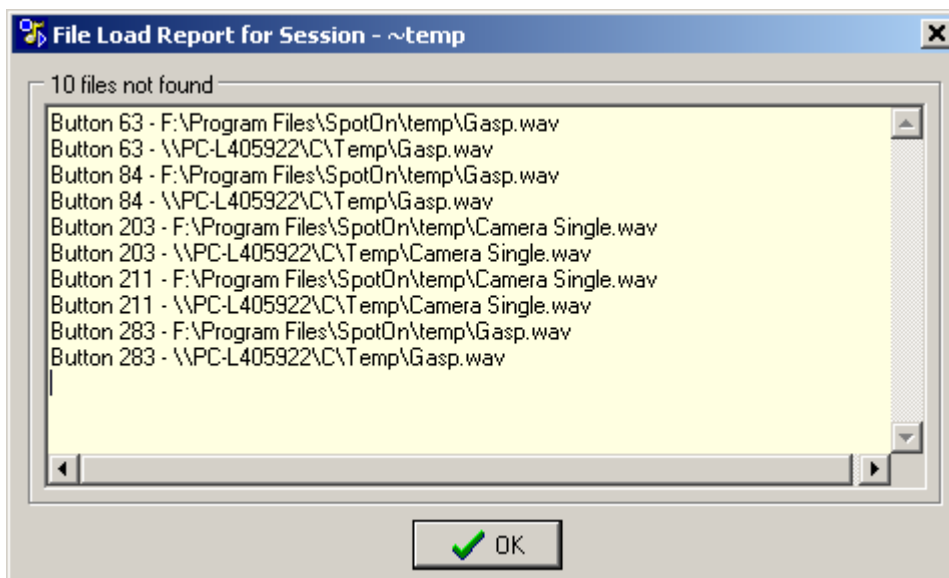


Here there are two entries for each button, the first for the local copy of the file and the second for its original location, these reports are saved to the log file which can be viewed via [Info|Logs](#)

SpotOn will also detect audio files with a timestamp that is not the same as that when the session file was saved, usually indicating the file has been recently edited.

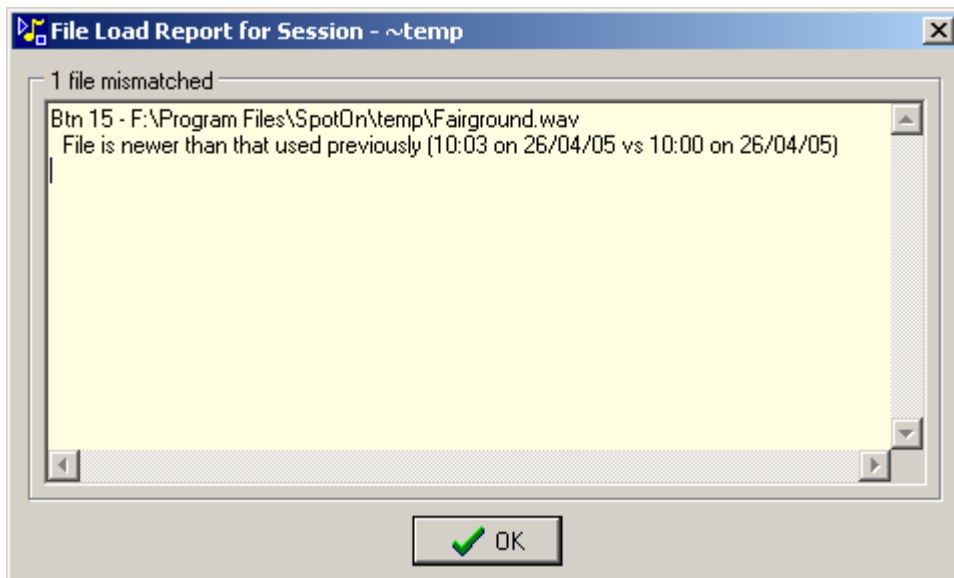

In this case if the playlist information has changed and it is possible the new playlist entries will be merged with the originals, also any fade out points that are now beyond the end of the file will be reset to default values.


This loading report is copied to the Event logs found under [Info|Logs|Events](#) so that any parameters changed can be reentered.

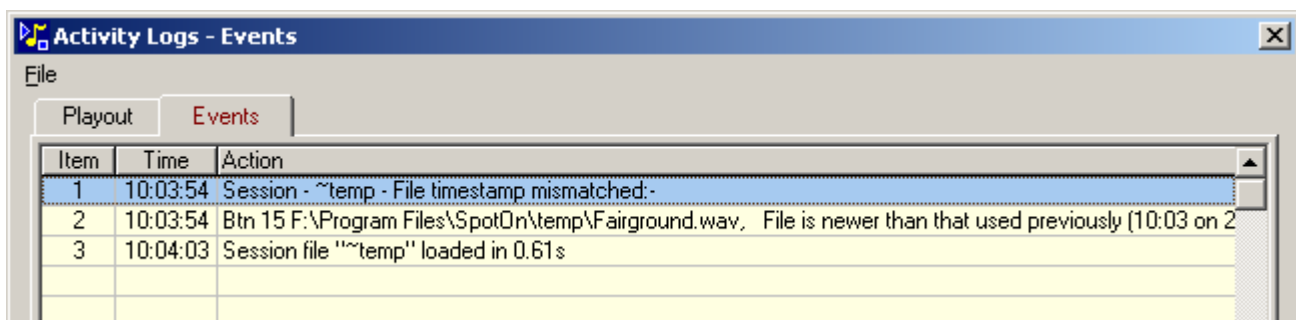

As a result of the possibility that some audio tracks may not be found or timestamps have been changed unintentionally by copying files, it is recommended that the session and audio data are saved together in a [Package](#).


File Not Found

If files cannot be found, the buttons concerned are shown with the text 'File not found' instead of the Trackname

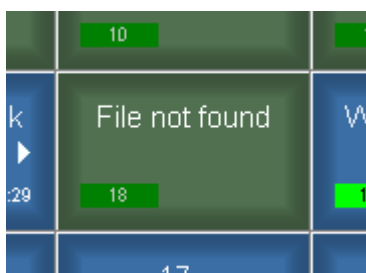


Note: It is important that a copy of the original session file is made using Windows Explorer before any attempts are made to recover missing files, this is to ensure the original session data is not inadvertently modified.

The right-click menu on this button contains an extra entry 'Locate File'

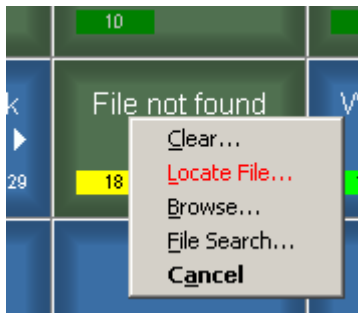

Choose Locate File to find the missing file and copy it to the original location where SpotOn was expecting to find the file or to copy it to a new location and modify the session file accordingly.

The Locate File dialog is shown below, on the left hand side is the procedure for locating/copying the file and on the right hand side the file locations.

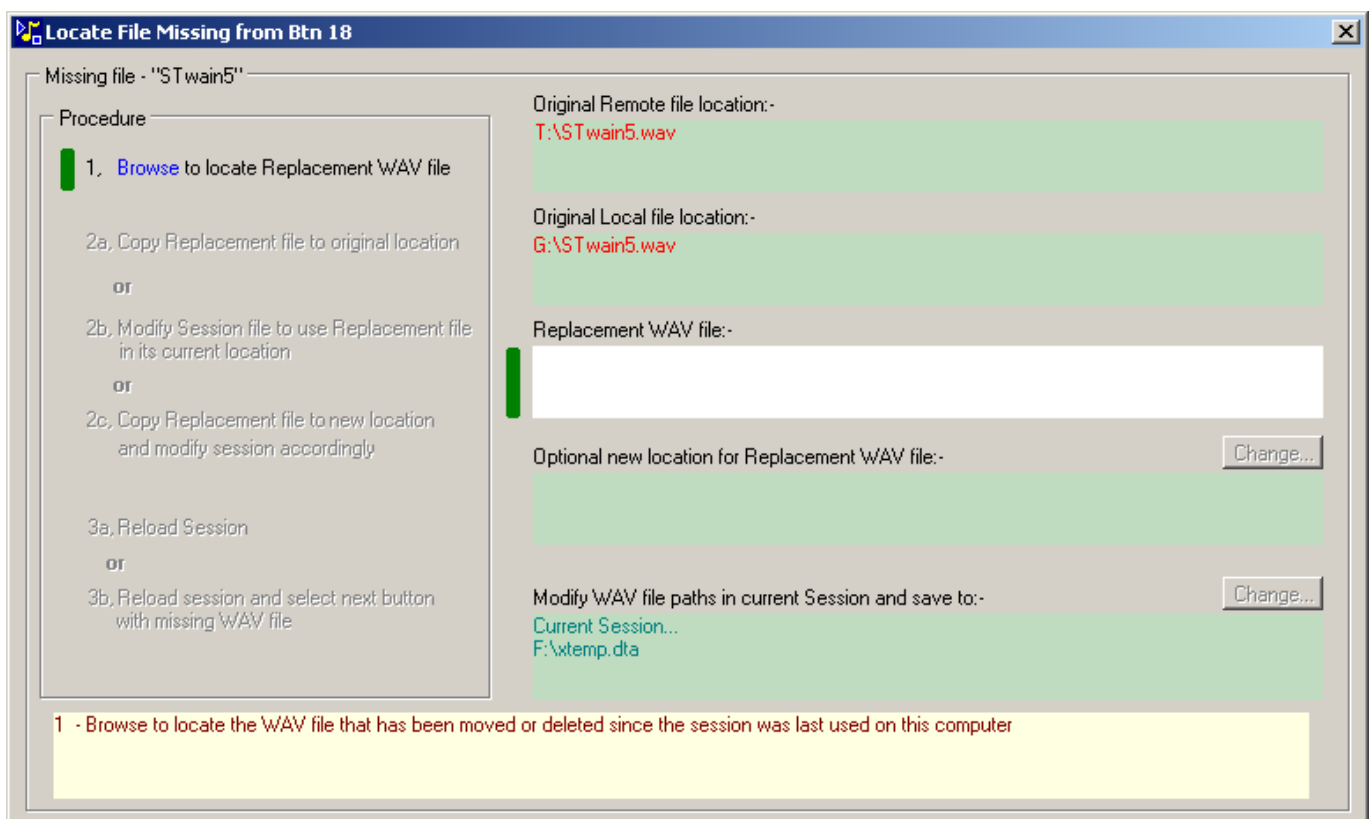

Folder locations:-

Working down from the top right - the Original Remote File location points to the original source of the track, this could be a CD or server which maybe no longer accessible, in which case it will be shown in red text.



The Original File location is where SpotOn expected to find the file, again this will be shown in red text if the location cannot be accessed

Original Local file location:-
G:\STwain5.wav

The Replacement WAV location is where SpotOn will now look for the audio file

Replacement WAV file:-

Once a replacement file has been located it can be copied to a new location, SpotOn will change the references to the audio file to point to the new location, the 'Change' button opens a folder selection dialog allowing the new location to be specified.

Optional new location for Replacement WAV file:- Change...

Lastly the session file that contains the changed filenames can be either the default current session or another new session file, the 'Change' button allows a new session file name to be entered

Modify WAV file paths in current Session and save to:- Change...
[Current Session...](#)
G:\xtemp.dta

Modify WAV file paths in current Session and save to:- Change...
[Alternate Session...](#)
G:\xtemp2.dta


Procedure:-

On the left of the dialog are listed the three steps to find the missing file, the steps are selected via hyperlinks indicated by blue text which is underlined when active, the vertical green bar shows the current step in the procedure.


Procedure

1. [Browse](#) to locate Replacement WAV file

The first step is to locate the missing file, clicking on Browse will display a file dialog window

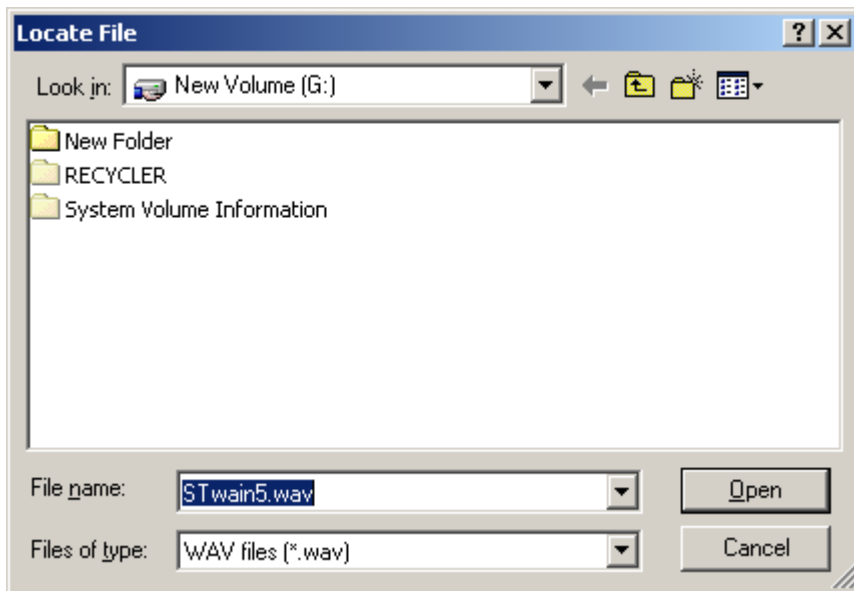


Here the file named 'STwain5.wav' no longer exists but in this case it is know to have been moved into the New Folder.

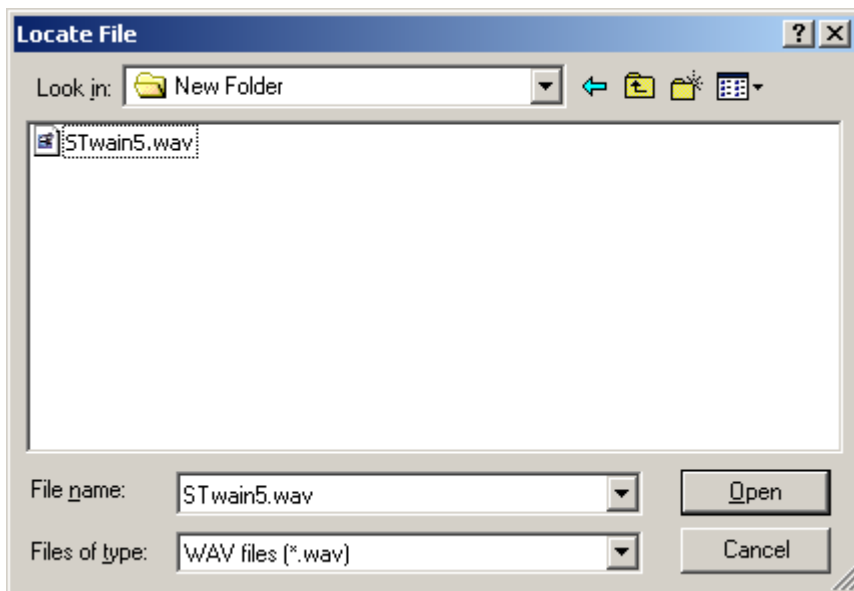

Once a replacement file has been assigned it is shown on the right of the dialog as a Replacement WAV file and the bar highlight on the far left moves to step 2

The hint panel at the bottom of the window give brief notes on the options available

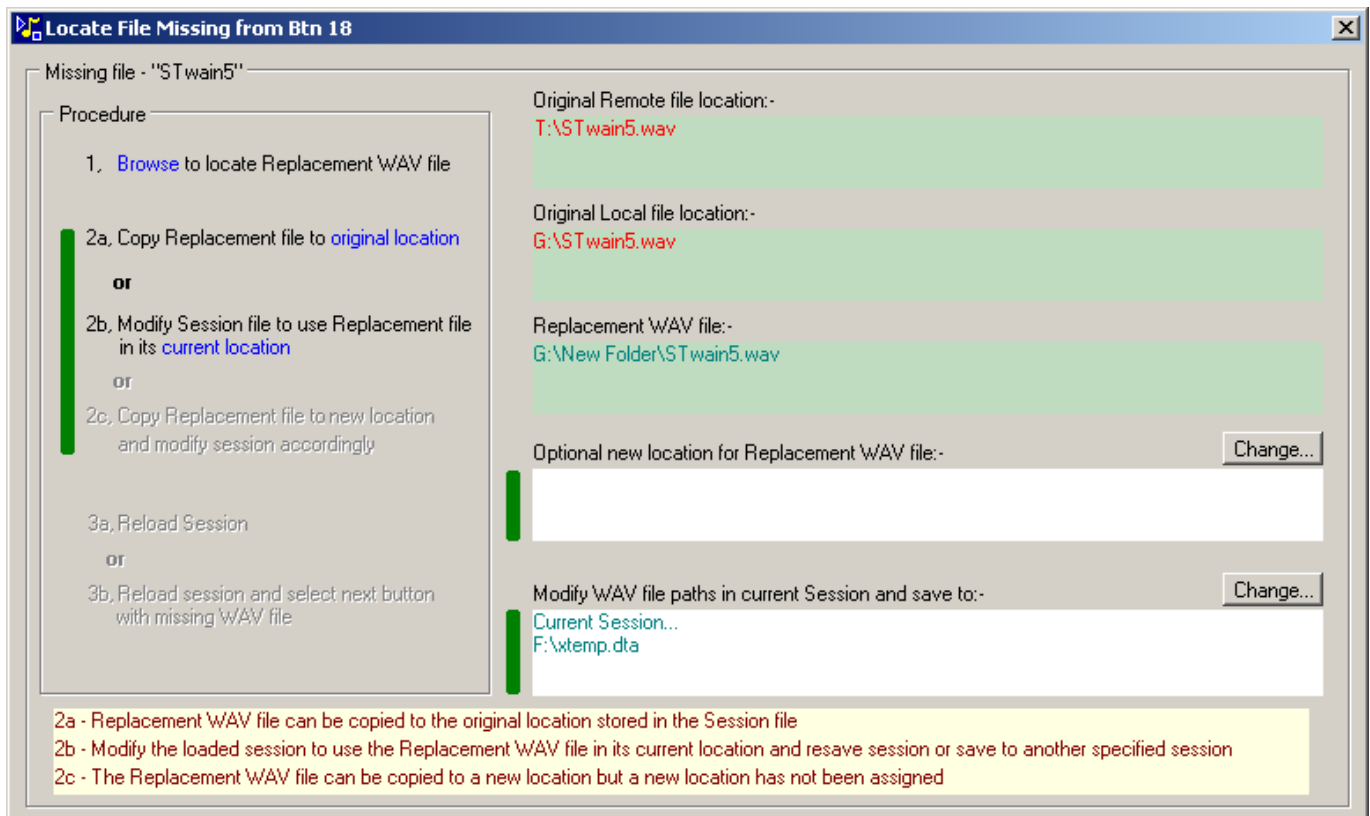


Some of the three options in step 2 may be disabled.


2a will be disabled if the original location does not exist on the computer, this may happen if a session has been copied from another computer or the computer disc drive configuration has been changed.

2b will always be enabled


2c is initially disabled until a new location is specified via the section below

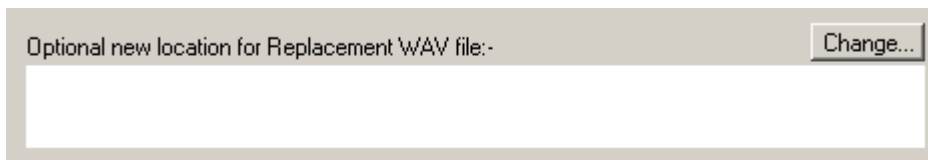

Click on the Change button to define a new location for the replacement WAV file

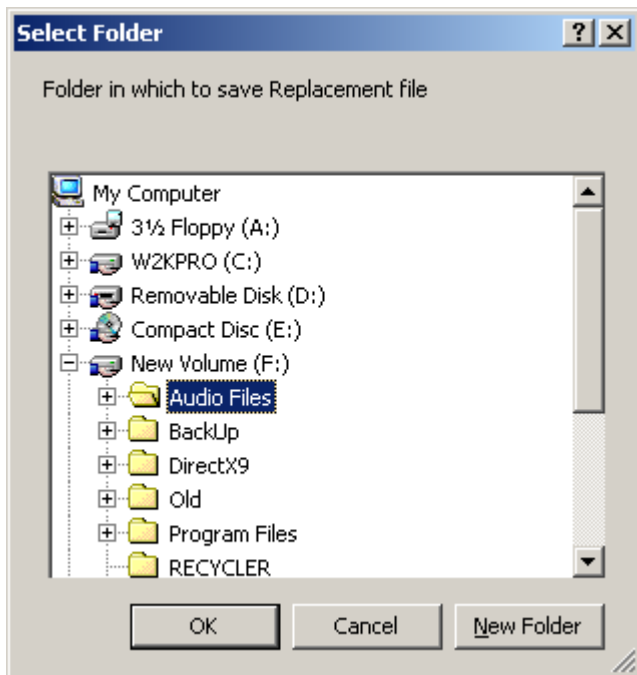


The alternative location is now specified and item 2c is enabled

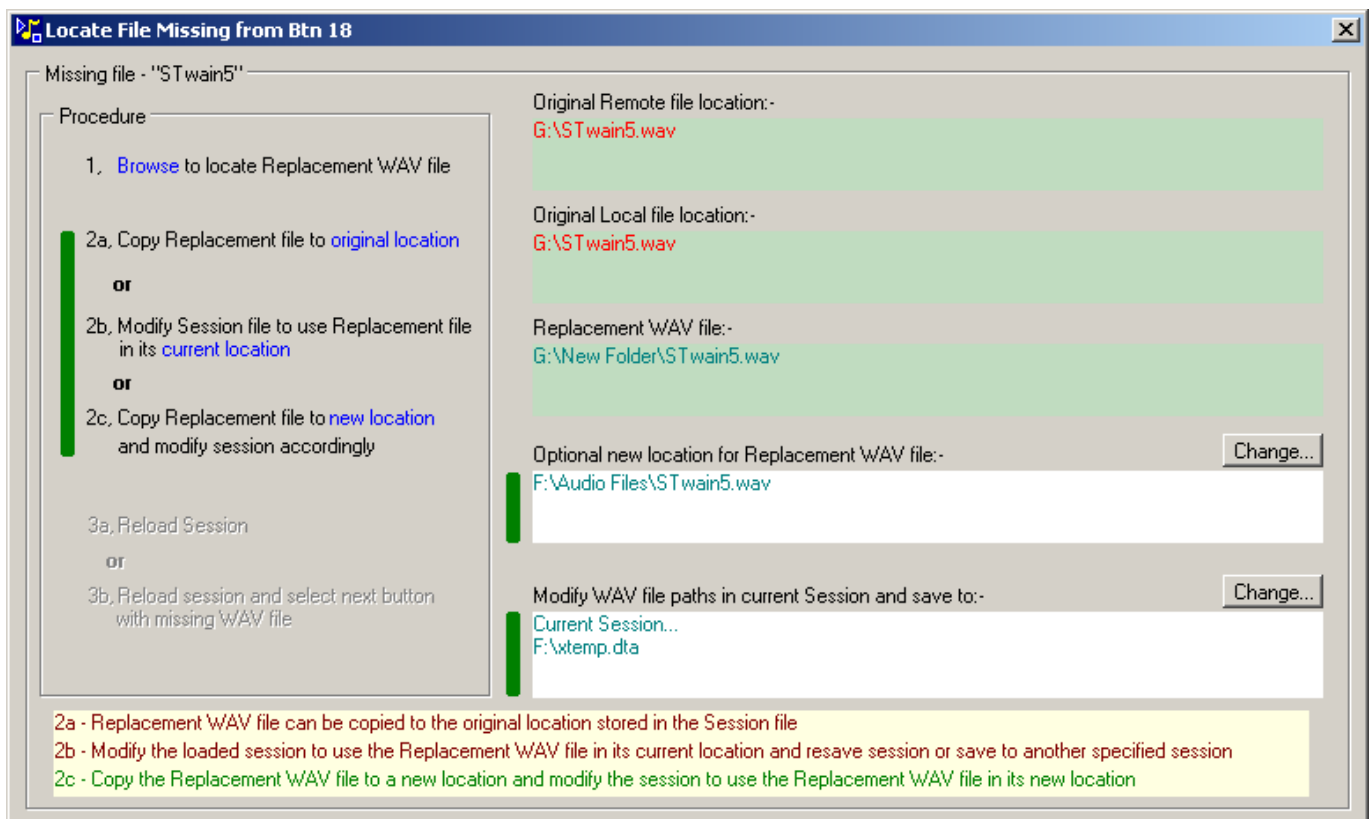


When the available options change the hint panel text is highlighted to indicate that it has been updated.


If the session data is to be modified the default is to modify the currently loaded session, alternatively another session name can be assigned by using the Change button

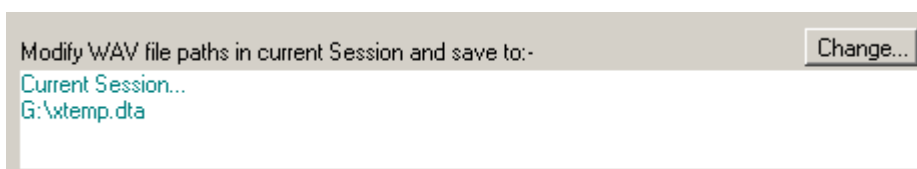

This displays a dialog box where the new session filename can be entered

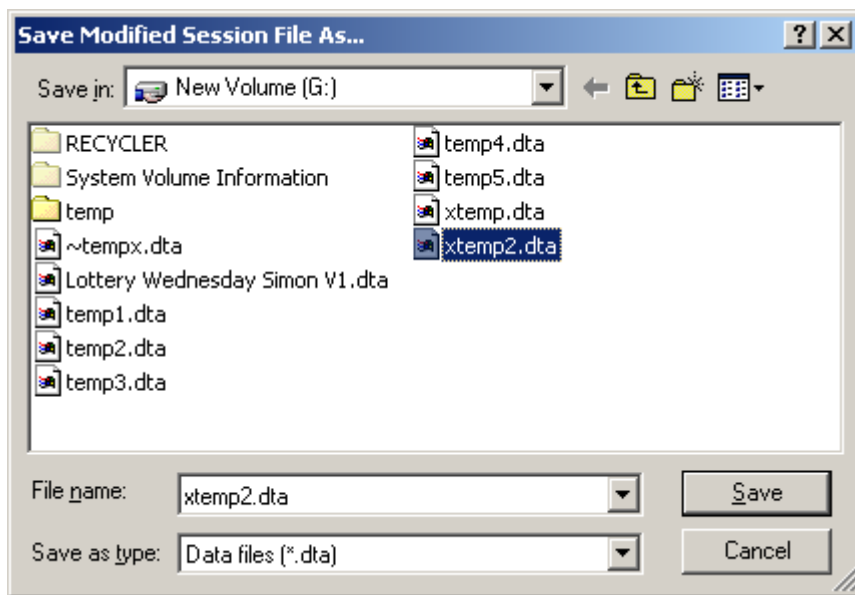


This is then reflected in the main dialog window

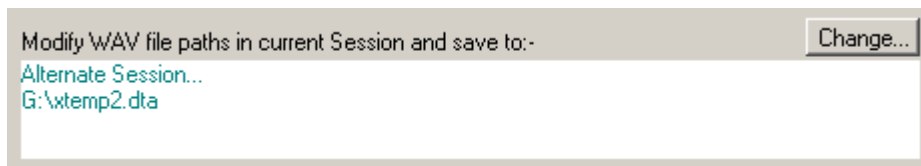

Clicking on any one of the options 2a, 2b or 2c will then move to step 3.

If when copying a file, a file of the same name is found in the destination folder a warning dialog will be shown

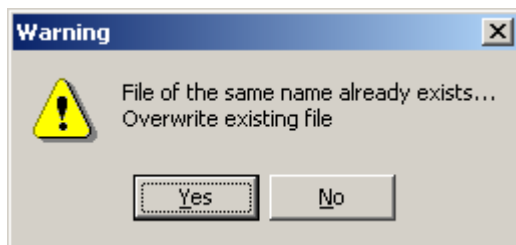

Finally on step 3 the two options are to reload the current session or to reload and select the next button with a missing WAV file.

Choosing 'select next button' will cause SpotOn to scan the remaining buttons for missing files and if the missing audio file is found in the same folder as the previous missing file then the session will be automatically modified with the new location.

Locate File Missing from Btn 18

Missing file - "STwain5"

Procedure

1, [Browse](#) to locate Replacement WAV file

2a, Copy Replacement file to [original location](#)

or

2b, Modify Session file to use Replacement file in its [current location](#)

or

2c, Copy Replacement file to [new location](#) and modify session accordingly

3a, [Reload Session](#)

or

3b, Reload session and [select next button](#) with missing WAV file

Original Remote file location:-
G:\STwain5.wav

Original Local file location:-
G:\STwain5.wav

Replacement WAV file:-
G:\New Folder\STwain5.wav

Optional new location for Replacement WAV file:-
F:\Audio Files\STwain5.wav

Modify WAV file paths in current Session and save to:-
Alternate Session...
F:\xtemp2.dta


Change...

Change...

3a - Close dialog and reload Session file


3b - Close dialog, reload Session file and reopen Locate File dialog with the next button having a missing track

SetUp Menu

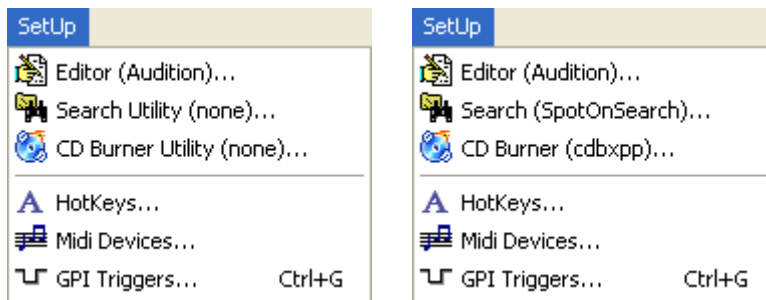


Editor

Opens a file selector dialog to select an external WAV file editor, the editor application can then be called via the Edit option in the [Button Menu](#), the current editor name is shown in the menu item, a user selected editor is saved within the session file.

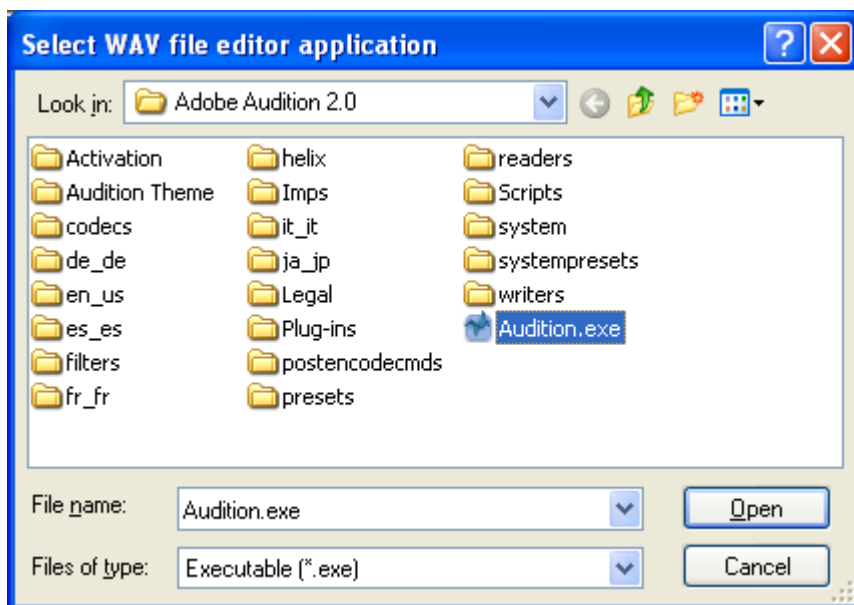


Selecting Cancel from the Editor select dialog will offer the option to clear the existing selection.

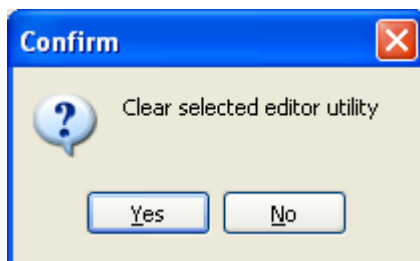


Search

Opens a file selector dialog to select an external file search utility, the utility can then be called via the Search option in the [File Menu](#), the name of the current search utility is shown in the menu item. A utility [SpotOnSearch](#) is packaged with the SpotOn for this purpose.

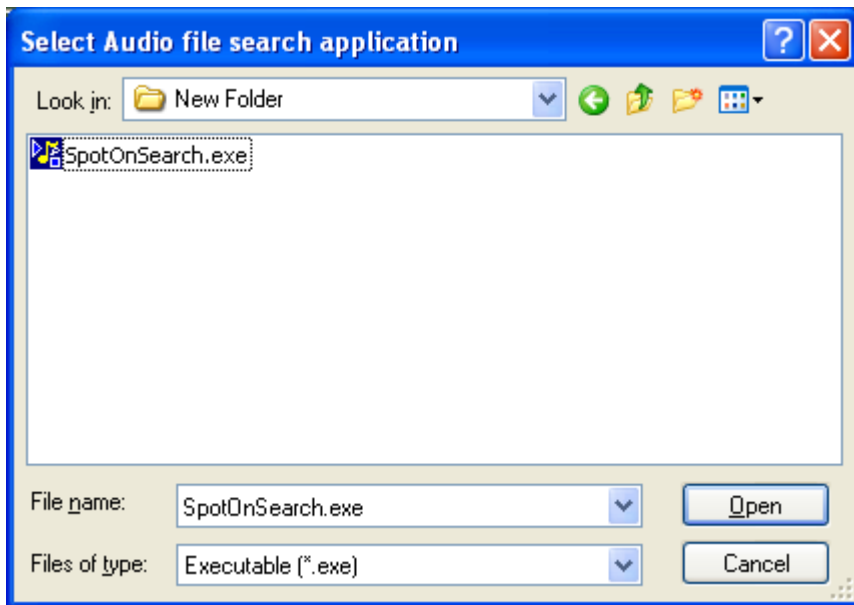


Selecting Cancel from the Search select dialog will offer the option to clear the existing selection.

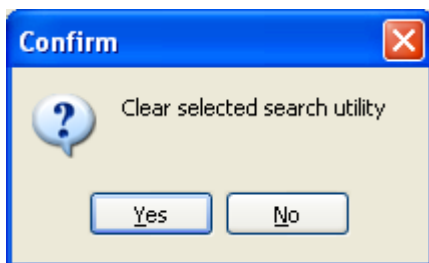

CD Burner


Opens a file selector dialog to select an external CD Burner utility. SpotOn is configured to use a third party CD burner utility "CDBurnerXP", the latest version of which can be found at <http://www.cdburnerxp.se>. The utility can then be called via Ctrl+B or the CD Burner option in the [Global Utilities](#) menu, the name of the current utility is shown in the SetUp menu item shown above.

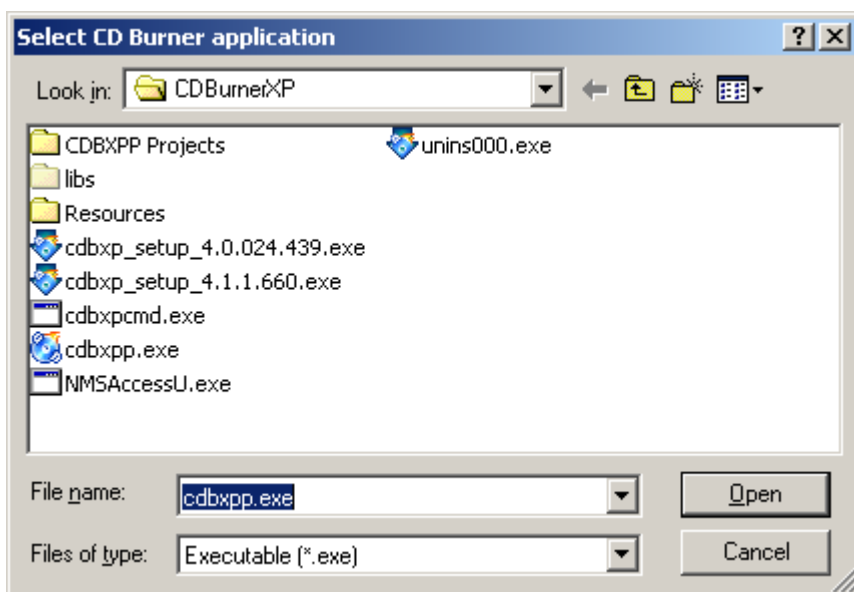

Selecting Cancel from the CD Burner select dialog will offer the option to clear the existing selection.



HotKeys

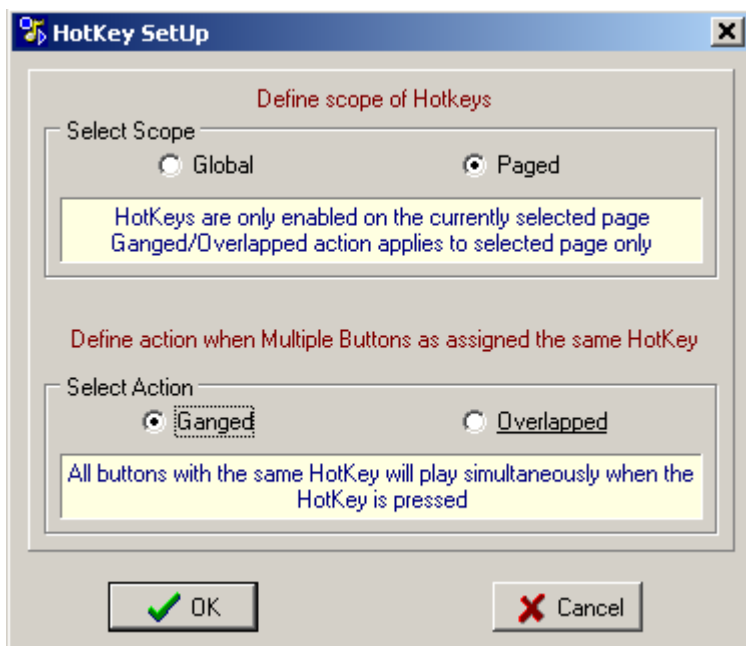

The action of pressing HotKeys can be handled in different ways.

The top selection in the setup dialog box Global/Paged defines the scope of the HotKeys, defining whether the HotKey press is restricted to act only on the currently selected page or applied to all pages globally.

The Ganged/Overlapped setting defines how buttons assigned to the same HotKey should act when the HotKey is pressed.

In Ganged mode all the buttons with the same HotKey will act together, alternatively in Overlapped mode the buttons with the same Hotkey will play in numerical sequence, starting with the first button not currently playing or with the least amount of time remaining if all buttons with the same HotKey are already playing.


Hotkey overlapped play action can also be triggered by a mouse left-click on a button, [see Advanced Operation](#) for further explanation

If the HotKeys are currently disabled then the message below will be shown.




Midi Devices

The Midi In and Out ports are set using the dialog box below, these are set globally and are not saved in the individual session data files.

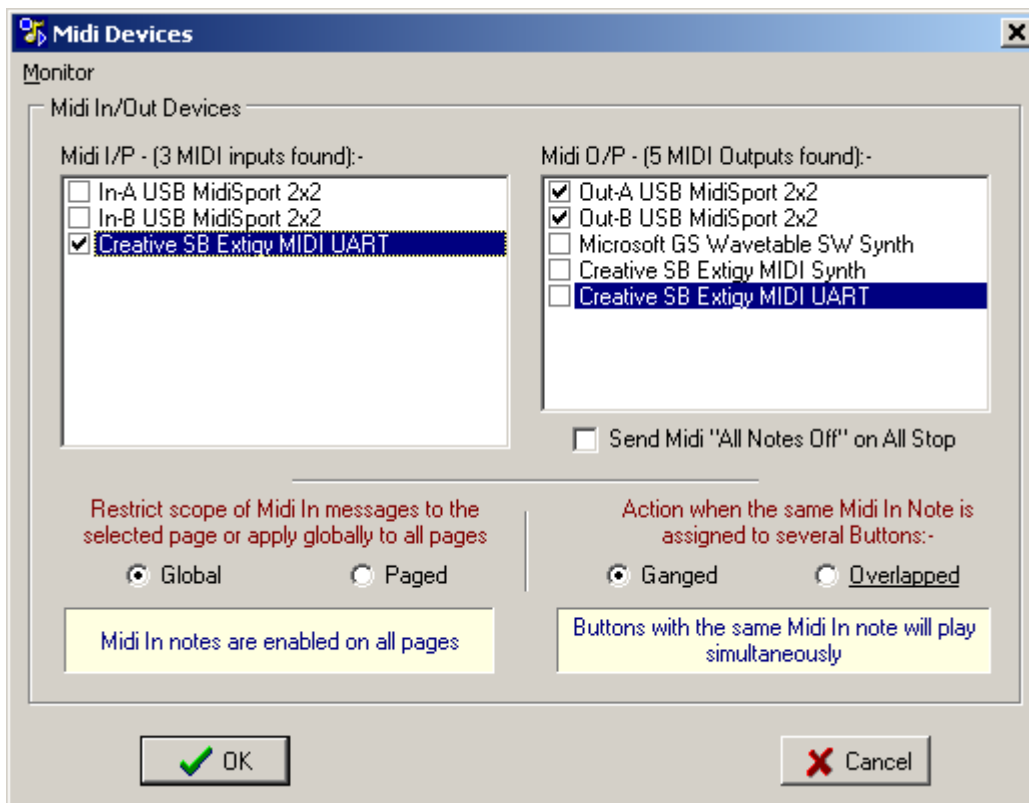

One or more Midi In devices can be selected along with multiple Midi out devices.

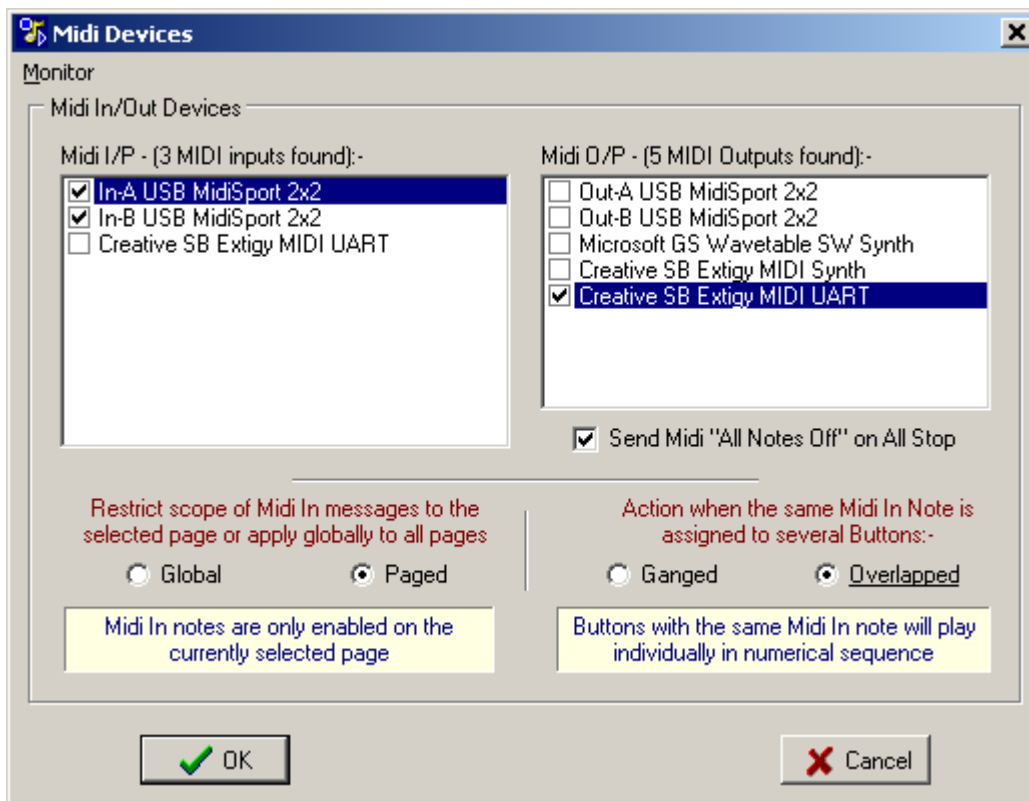


If either the Midi In or Midi Out options are disabled then a message will be shown at the bottom of the dialog box




There is also an option to send the Midi message "All Notes Off" to all Midi Out channels when Escape or All Stop buttons are pressed



The action of the Midi In notes can be restricted to act only on the currently selected page by selecting Paged option as shown below. Midi In notes can be set to act across all pages by selecting the Global option.

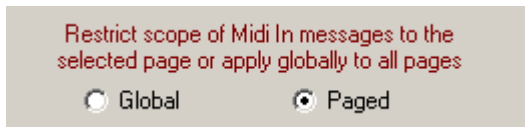

When more than one button is assigned the same Midi note the buttons can be played in one of two ways, Ganged or Overlapped (duplicate hotkey assignments operate in a similar way).

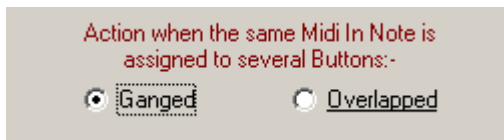


In Ganged mode all buttons with the same Midi In note will play when that Midi In message is received.

Alternatively in Overlapped mode each button with the same Midi In note will play individually on each successive Midi In message. The order in which the buttons are played is numeric starting with the first button not already playing.


The Overlapped mode is suited to effects that need to be repeated but have a long reverberation time, just stopping and restarting the audio would be incorrect, so in Overlapped mode the previous effect is left running whilst a new copy of the effect is played out.

The Midi Note text displayed on the buttons will be underlined if it forms part of an overlapped sequence.

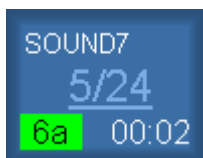

See [Advanced Operation](#) for further explanation

Selecting the Monitor menu item from the Midi devices window displays a listing the timestamped incoming midi messages. If Midi timecode is detected it will be shown at the top of the window in green text, if no Midi timecode is present the text will be in red. Midi timecode is also displayed in the [Data Rate panel](#) on the main window status bar.

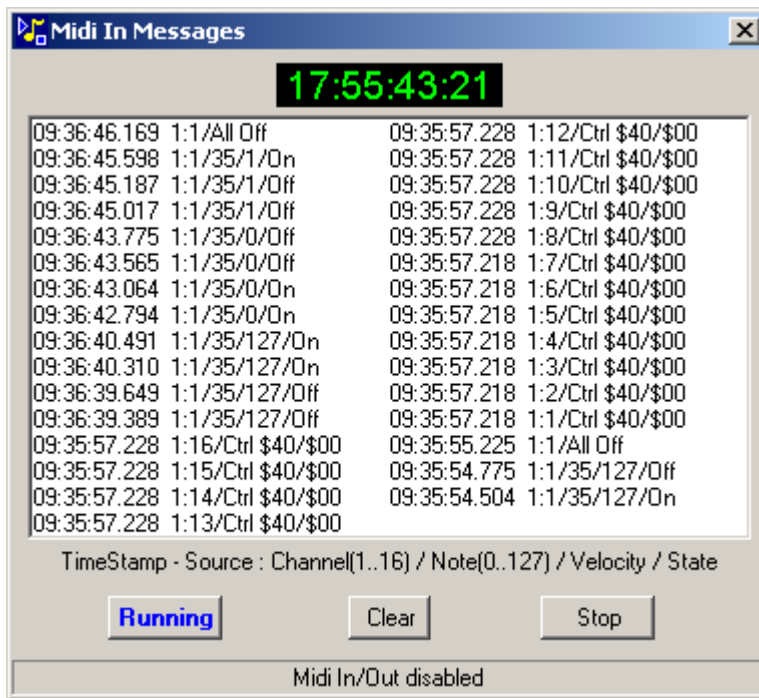

The most recent Midi messages are shown at the top of the list, the Run and Stop buttons control the logging of the messages, clear will delete all entries in the list.

GPI Triggers

External GPIs can be used via the computer game port to trigger playing of buttons see [GPI Assignments](#) this menu item can access via the Ctrl+G keyboard shortcut

GPI Assignments


SpotOn accepts inputs from up to 64 GPIs (General Purpose Interfaces), the first four of these are most simply implemented via the PC Game Port using the joystick button [connections](#). A USB joystick can also be used, however some internal wiring modifications to the joystick will be required to extract the switch contacts.

Any joysticks detected as being connected to the computer when SpotOn was run will be shown in the drop down list.

A PC Game Port card can be used to provide GPI inputs 1..4, with GPIs 5..64 typically triggered by Hotkey, Midi or time based emulation of GPIs - see later.

Joystick Selection

In the image below only one joystick was found and it has 4 buttons that can be used, these are assigned to GPI 1..4, "LEDs" for the remaining GPIs are shown in grey.

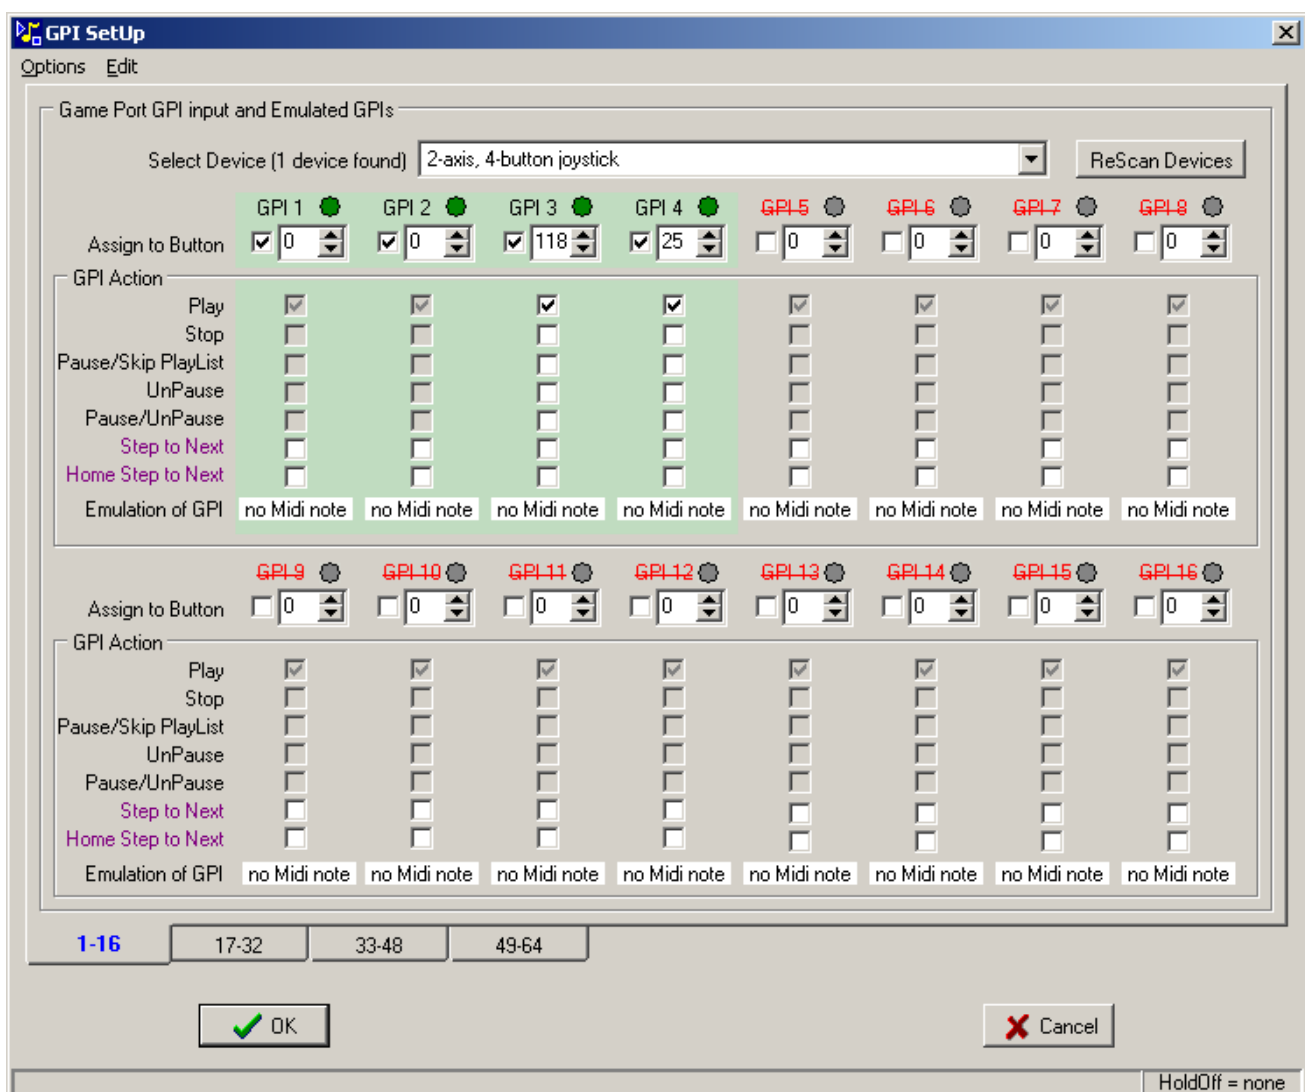

The area with a green background indicates that only GPI 1..4 can be 'real' GPIs from a game port card, the other GPIs will be emulated in some way.

If more than one joystick device was detected then they will appear in the drop down list

Select Device (2 devices found) None

- None
- 2-axis, 4-button joystick
- USB GAME DEVICE CONTROLLER

If the configuration of the GPI devices has changed the list can be refreshed by clicking on the ReScan Devices button which will clear the selection and fill the list with the devices currently connected.

ReScan Devices

If a GPI device (joystick) is disconnected whilst in use then the display will show something like this

Select Device (2 devices found) 2-axis, 4-button joystick (Unplugged)

If GPIs are enabled the status bar of the main window will also indicate a disconnected device by flashing the GPI panel black/white

GPI In On GPI In On

Disconnecting the GPI lead from the computer whilst SpotOn has it selected is not recommended, the GPI device should be deselected before it is unplugged, see [GPI wiring suggestions](#).

The next image shows the result when a 4 button joystick is detected, the red text in the GPI 1 box indicates that value (button number) has been changed since the dialog box was opened and hence is not a true mimic of the actual GPI assignment

GPI SetUp

Options Edit

Game Port GPI input and Emulated GPIs

Select Device (1 device found) 2-axis, 4-button joystick ReScan Devices

	GPI 1	GPI 2	GPI 3	GPI 4	GPI 5	GPI 6	GPI 7	GPI 8
Assign to Button	☒ 6	☒ 23	☒ 0	☒ 0	☐ 0	☐ 0	☐ 0	☐ 0
GPI Action								
Play	☒	☒	☒	☒	☐	☐	☐	☐
Stop	☐	☐	☐	☐	☐	☐	☐	☐
Pause/Skip PlayList	☐	☐	☐	☐	☐	☐	☐	☐
UnPause	☐	☐	☐	☐	☐	☐	☐	☐
Pause/UnPause	☐	☐	☐	☐	☐	☐	☐	☐
Step to Next	☐	☐	☐	☐	☐	☐	☐	☐
Home Step to Next	☐	☐	☐	☐	☐	☐	☐	☐
Emulation of GPI	no Midi note	no Midi note	no Midi note	no Midi note	no Midi note	no Midi note	no Midi note	no Midi note

The checkboxes immediately to the left of the GPI button number allow the GPI to be enabled/disabled, in the disabled mode the display is as shown below.

GPI 1

Assign to Button ☐ 6

The devices connected to the game port are only checked when SpotOn starts up, if there are any changes to the attached devices then the ReScan Devices button must be clicked or SpotOn restarted before they are registered.

ReScan Devices

The choice of joystick device is applied globally and is not saved in the individual session data files.

If the GPI In triggers are disabled via the GPI In On/Off menu option then the message below will be shown.



Button to GPI Assignment

The up/down nudge buttons associated with the GPI channels assign the button that will be controlled when the GPI becomes active, a button value of zero disables that GPI channel from controlling a specific button.

Under the nudge buttons are seven rows of checkboxes - Play, Stop, Pause, UnPause, Pause/UnPause, Step to Next and Home Step to Next.

Row 1 is the default action of Playing a track when the GPI becomes active.

Row 2 can be set to Stop a track when the GPI becomes active.

Row 3 can be set to temporarily Pause a track when the GPI becomes active, the Pause action is not available when the button has an active PlayList so this item will trigger a [Skip PlayList item](#) operation

Row 4 similarly will release the Pause and continue playing the track from the point it was paused.

Row 5 allows a single GPI to alternately Pause and UnPause a track



Row 6 enables the Step to Next Track function see [Options|Step To Next Track](#), if selected the GPI will issue a Play command to successive buttons each time it becomes active, (an option to skip over muted buttons is available under Options menu).

Row 7 of checkboxes provides the facility to reset the Step to Next operation by forcing the next button to be played to be the top left button on the current page, equivalent to pressing the Home key on the keyboard.


Note that when both Step to Next and Home Step to Next are checked SpotOn will first Home the selection to the top left button and then play that track and step to the next button.

In the example below GPI 1 will play successive buttons and GPI 2 will reset the next button to be the top left button.


Selecting any Step to Next checkbox will automatically set the GPI button value to zero.

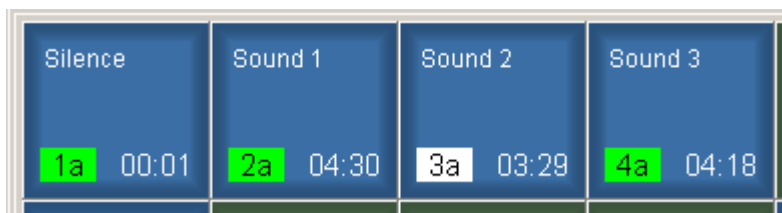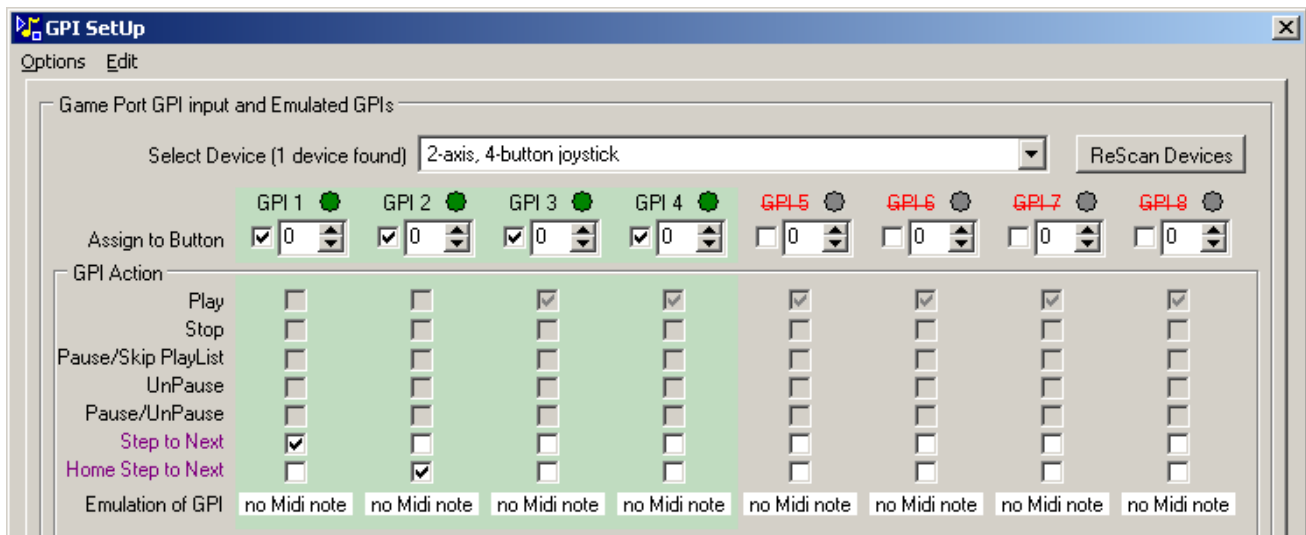

In this case if GPI 1 is asserted "Sound 2" will play and then SpotOn will step to button 4 ready to play "Sound 3"

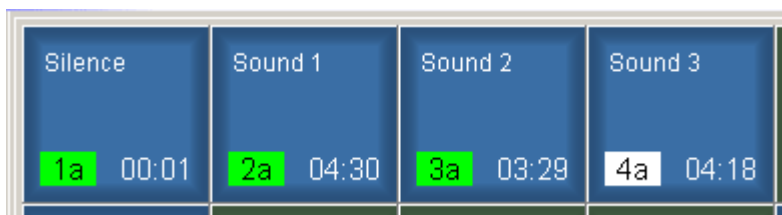


If GPI 2 is now asserted the Step to Next sequence will be reset to select button 1 which could well be a silent button that stopped all others, allowing the sequence to be reset at any time.

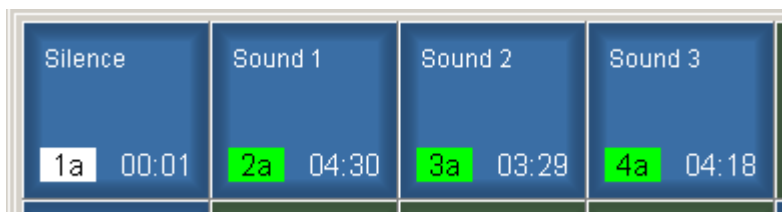

Emulation of GPI




Using the emulation selection boxes, a match to Hotkey, PC clock time, incoming Midi note, Midi timecode or a source of SMPTE timecode can be used instead of an external GPI to trigger the GPI action, right-click the selection box for options

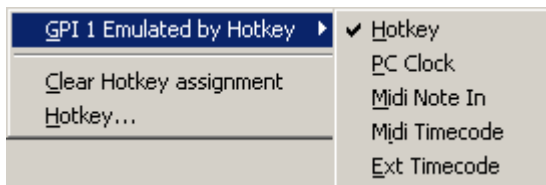


Emulation of GPI by Hotkey

Assign the Hotkey to the GPI by pressing the appropriate keyboard key

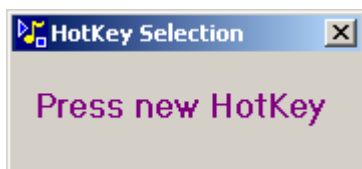


The image below shows Hotkeys Q, W, E assigned to GPIs 1..3

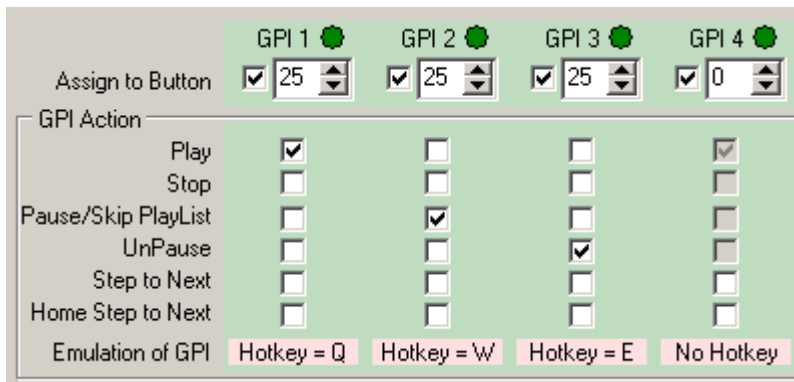


The same Hotkey can be assigned to button and to a GPI emulation

Emulation of GPI by PC Clock

The PC internal clock can also be used to trigger GPI actions

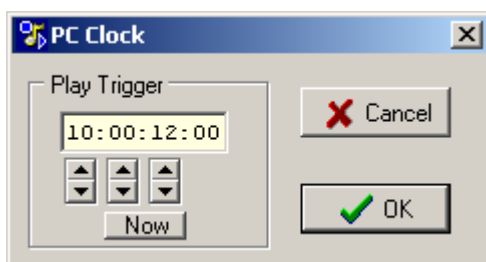


the precision of the time setting is restricted to 1 second for the PC clock source, the "Now" button is enabled in this mode to allow quick entry of the current time of day.

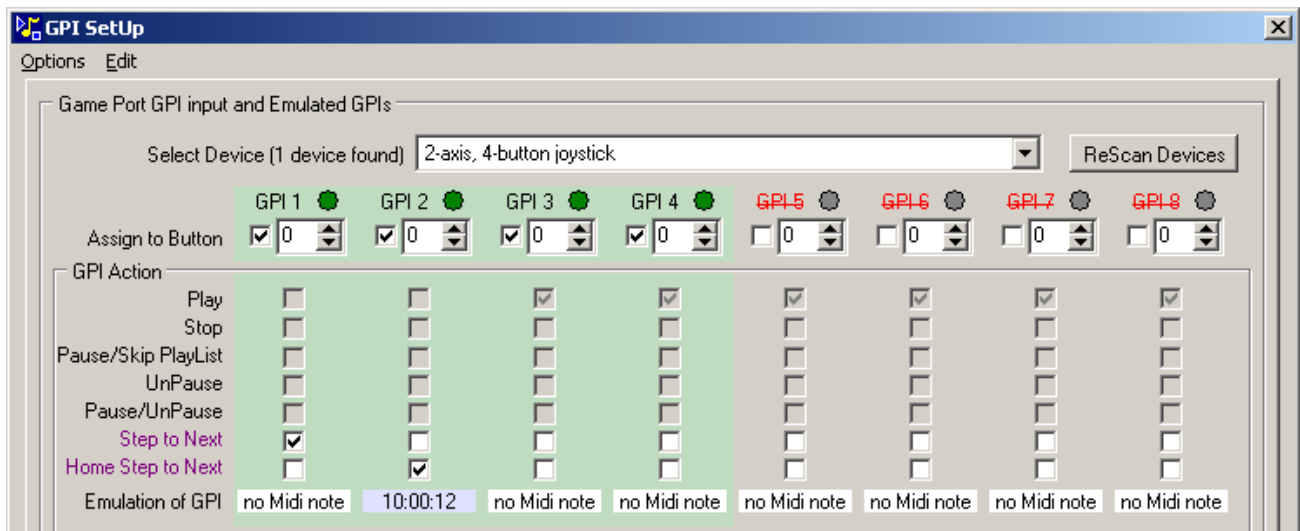


Emulation of GPI by Midi Note


Select Midi Note In to display a Midi Note dialog box.

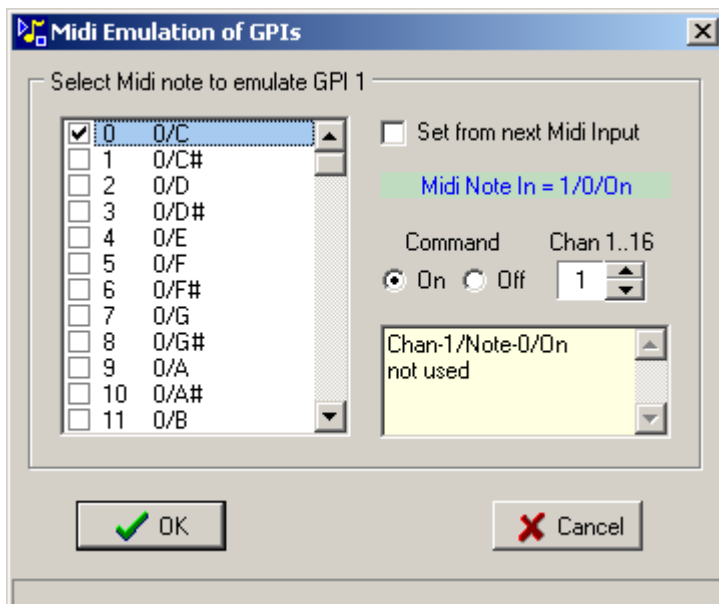

The Midi note can be automatically assigned by checking the box shown below, this will set the Midi note from the next Midi note to be received by SpotOn.





Here the Note On message for note 60 on channel 9 has been selected to emulate GPI 2

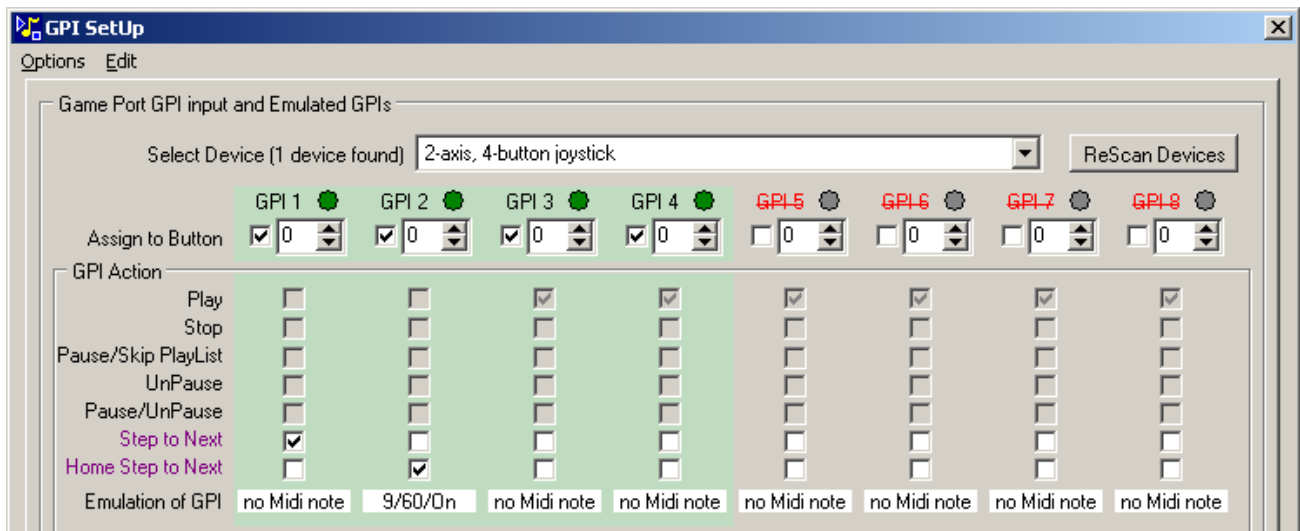

Now the selected Midi note will cause the GPI 2 action to be performed.

Emulation of GPI by Midi Timecode

The fourth option is to trigger from a Midi timecode stream

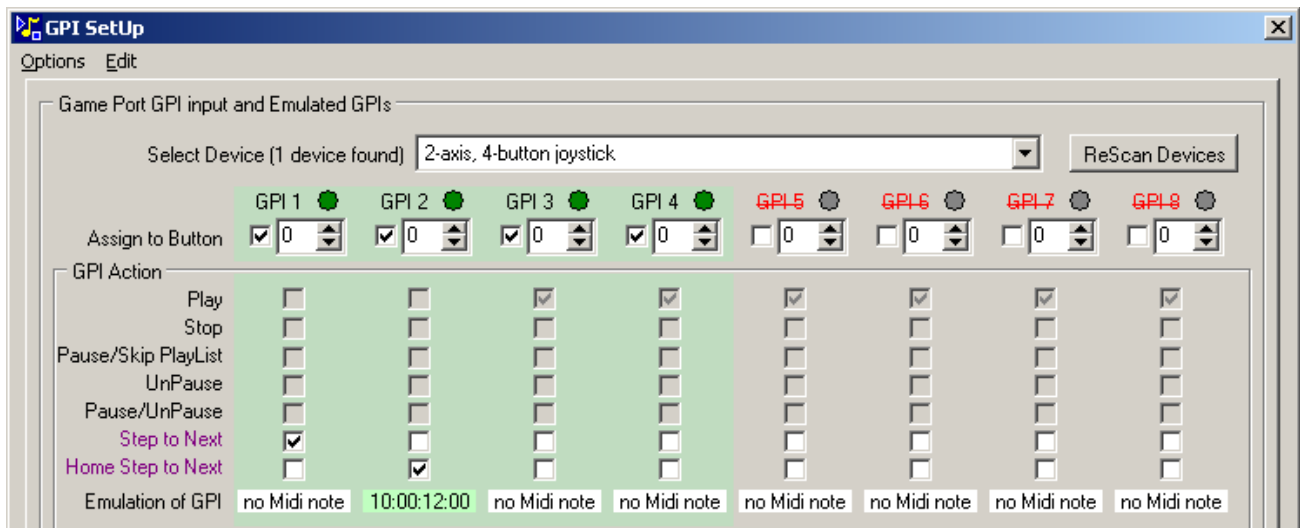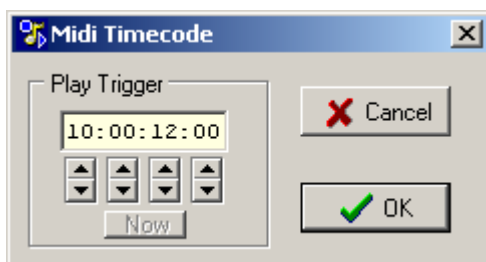

When any GPI with a time related trigger mode (PC Clock, Midi timecode or SMPTE timecode) is enabled and GPIs are enabled globally then the GPI In status panel background will flash to red whilst SpotOn is armed waiting for the time trigger.



Immediately after the time related GPI is triggered the associated GPI will be disabled to avoid subsequent false triggering.



The screenshot shows the MIDI Timecode menu with the following options:

- GPI 1 Emulated by Midi TC
- Clear Midi Timecode
- Midi Timecode...
- ✓ Auto Arm Timecode

The Auto Arming function can be disabled for all GPIs via the Options|Auto Arm Ext/Midi Timecode GPIs main menu option.

- GPI 1 Emulated by Midi TC ▶
- Clear Midi Timecode
- Midi Timecode...
- ✓ Auto Arm Timecode

There is a Global enable for SMPTE timecode triggering in [Options|Use SMPTE Timecode](#) and a setup dialog accessed via [Engineering|External Timecode](#)

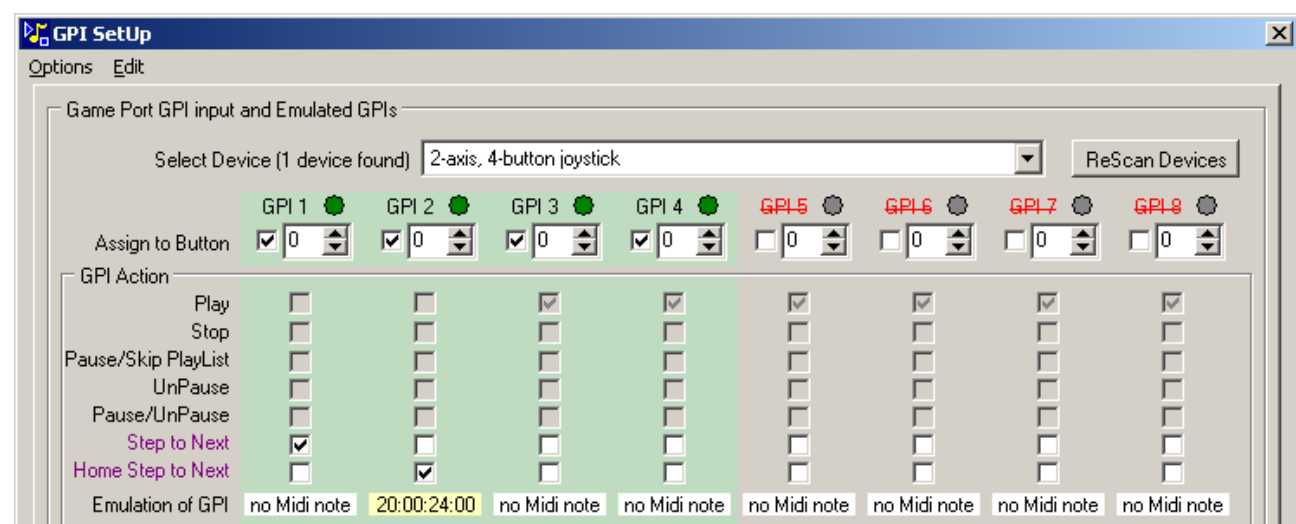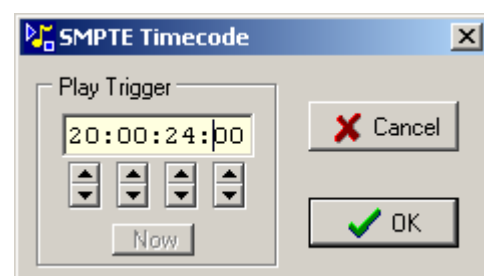


When any GPI with a time related trigger mode (PC Clock, Midi timecode or SMPTE timecode) is enabled and GPIs are enabled globally then the GPI In status panel background will flash to red whilst SpotOn is armed waiting for the time trigger.

GPI In On GPI In On

Immediately after the time related GPI is triggered the associated GPI will be disabled to avoid subsequent false triggering.


As an alternative triggering mode the GPI can be rearmed when the detected timecode is earlier than that set as the trigger point, this is selected via the right-click pop menu item Auto Arm Timecode

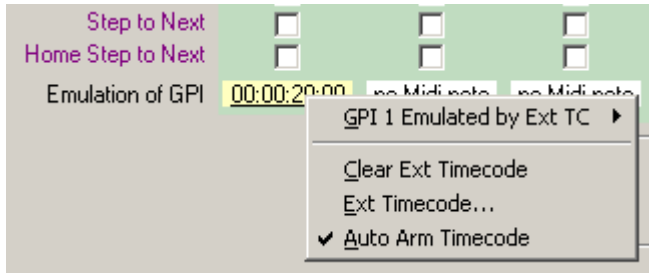

To indicate the GPI is in the Auto Arm mode the Midi timecode value is shown underlined.

The Auto Arming function can be disabled for all GPIs via the Options|Auto Arm Ext/Midi Timecode GPIs main menu option.




When the Auto Arming is disabled the associated popup menu item will be greyed out

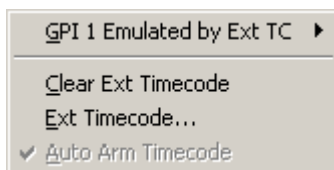

SMPTE timecode nudge:-


A hotkey shortcut is available to nudge the SMPTE timecode settings by shift+right clicking on the GPI In panel on the status bar.

The popup menu shows the last adjustment made along with options to nudge the trigger point earlier or later



GPI Indication

When a GPI channel is active then the LED will change to show red

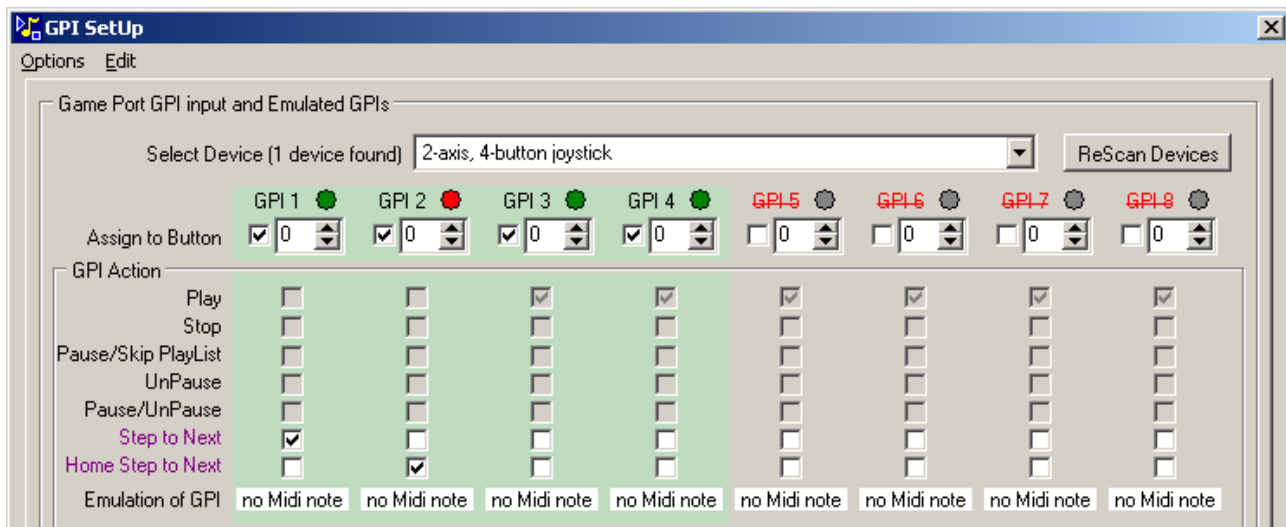


The GPIs can be globally enabled/disabled via the main menu [Options|Use GPI In](#) item and also by clicking the main window status bar panel



The text in the main window status panel briefly flashes red when an incoming GPI is detected

Menus-Options

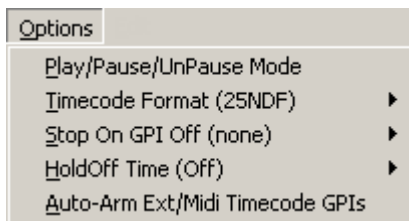

Play/Pause/UnPause

Checking the Play/Pause/UnPause option will change the default Pause/UnPause action to be Play/Pause/UnPause and the screen legends will follow accordingly.



When Pause/UnPause is selected as a GPI action, successive GPI pulses will alternately Pause and UnPause a playing track, however if the track is neither Playing or Paused then the GPI is ignored.

With Play/Pause/UnPause checked in addition to the action described above the track will begin Playing if a GPI pulse is detected when the track is stopped i.e. not Paused and not Playing.

So the sequence of events could be GPI pulse 1 = Play, GPI pulse 2 = Pause, GPI pulse 3 = UnPause.

Timecode Format




The timecode received by SpotOn either via Midi or external SMPTE inputs and used to trigger GPIs can be one of a variety of frame rates:-

24NDF	24Hz non-drop frame
25NDF	25Hz non-drop frame
30NDF	30Hz non-drop frame
29.97DF	29.97Hz drop frame

Selecting the appropriate format changes the timecode display and editing dialog boxes.

Stop on GPI Off


Normally the assertion/closure/forcing low of the GPI input is the only transition recognised and will Play the assigned button, if the menu option StoponGPIOff is selected then the off transition of the GPI is also detected and will Stop playout of the assigned button. GPI 1..4 can be individually set to react to the GPI off state.

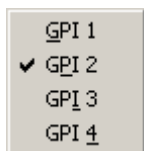


HoldOff

As it is likely that the source of the GPI signal will be a manually operated switch, there is the chance that the switch contacts will bounce so sending unwanted signals. To avoid this there is a selectable HoldOff period under menu Options|HoldOff Time

The range of HoldOff is 0..5 seconds

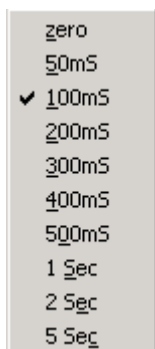

The currently selected HoldOff period is shown in the right hand panel of the status bar and applies to all GPI channels



AutoArm


Auto-Arm Midi timecode GPIs - this is a master enable for all the GPIs emulated by Midi timecode, a warning will be shown in the lower part of the window when this option is active.



When this option is checked, any GPI set to trigger from a Midi timecode and individually AutoArmed, will be re-armed when the timecode value detected is earlier than the trigger timecode.

This mode allows multiple passes without the need to arm/enable the GPIs on each pass.


Menus-Edit

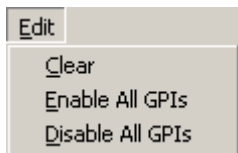

The Edit menu contains three items:-


- a, clear all the GPI button assignments
- b, set all GPIs enabled
- c, set all GPIs disabled

On exiting the GPI Setup dialog a message box will appear warning of any Hotkeys that are assigned directly to Buttons and also selected as GPI emulation triggers.

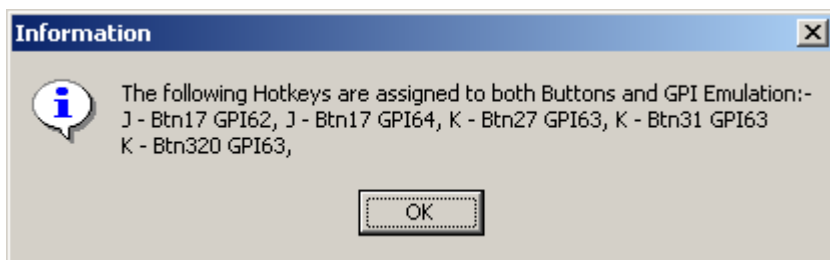


Display

If the main menu [Display/Show GPI In Icons](#) option is checked then buttons assigned a GPI will have a diamond shape on the centre left of the button image.

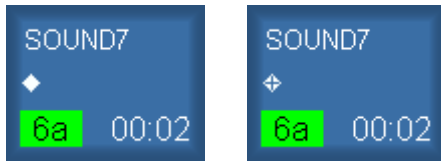


This diamond shape will have an internal + sign if more than one GPI is controlling a specific button

Display Menu

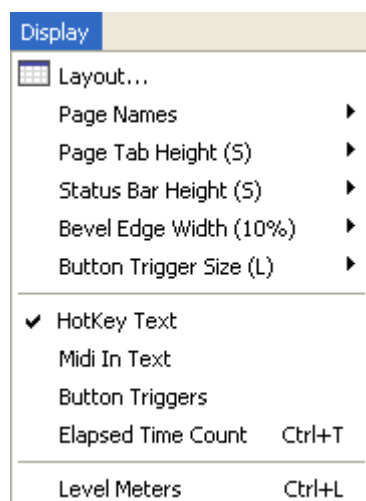


Layout

SpotOn can display the buttons in a number of different configurations ranging from 8 pages with 1 button per page to 160 buttons per page across 2 pages.

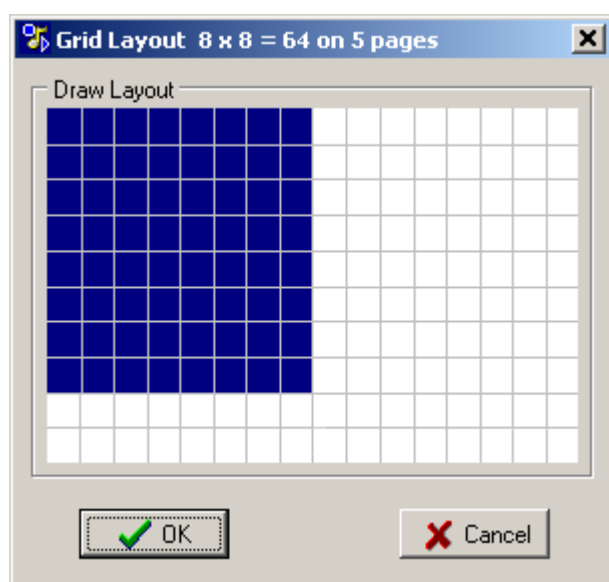


Use mouse to drag the layout to the desired configuration

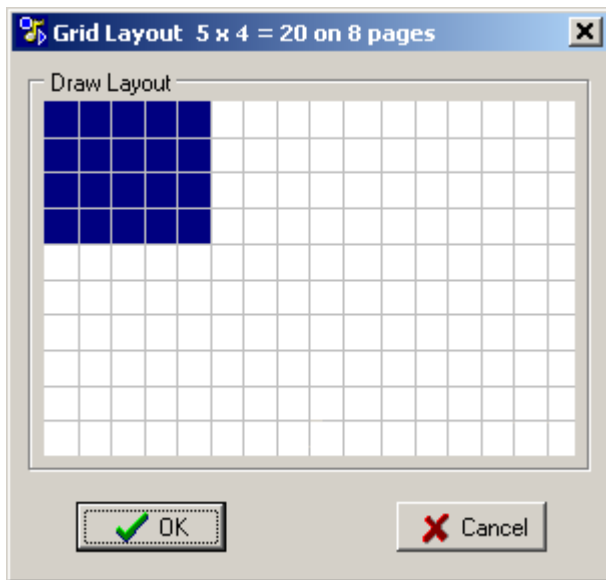


SpotOn has access to maximum of 8 pages of buttons, the number of pages actually available depends on how many buttons per page are displayed.


In the case below there were 48 buttons per page over 6 pages giving 288 buttons, pages 7 and 8 are therefore unavailable, buttons in the range 289 to 320 are hidden as they do not form a complete page.

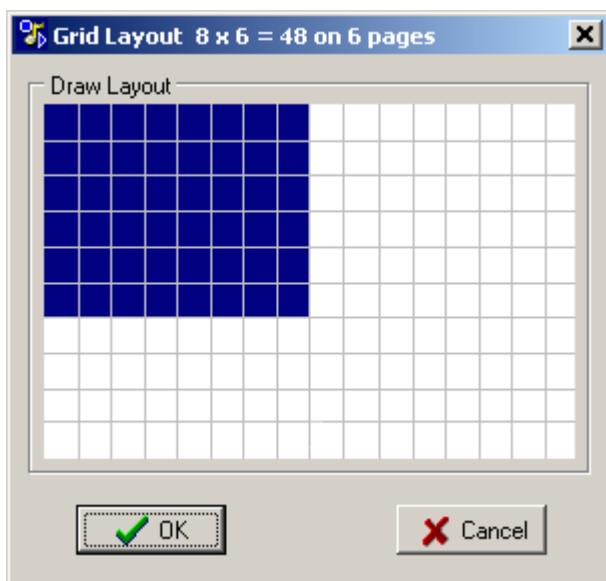


Page Names




By default the page names are numbers 1..8 these can be changed to something more meaningful, as the size of the page tabs are restricted only short names are suitable

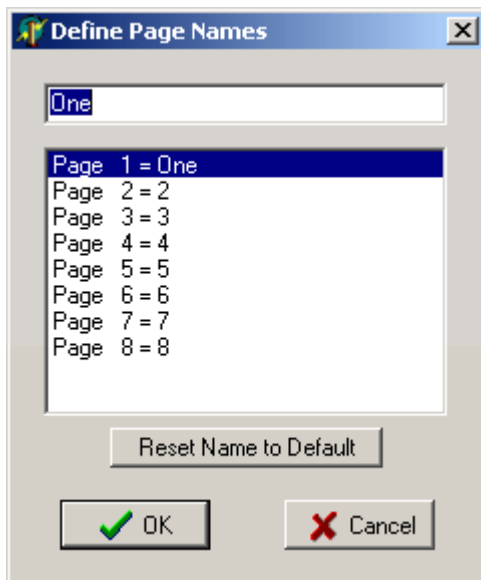


All the page names can be returned to the defaults of 1..8 using the Reset option, a confirmation dialog is shown before the names are changed

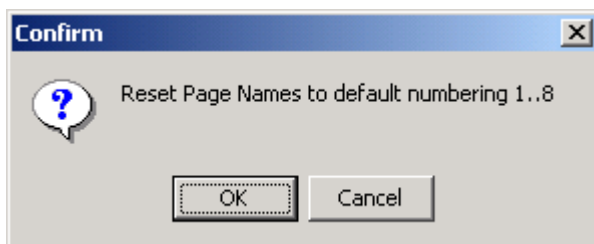

Another method of accessing the page name editor is to right-click the tabs

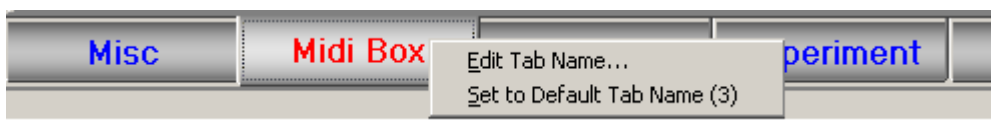


Page Tab Height

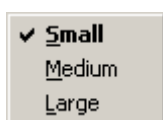

The height of the page tabs at the bottom of the screen can be set to any of three levels

Small:-

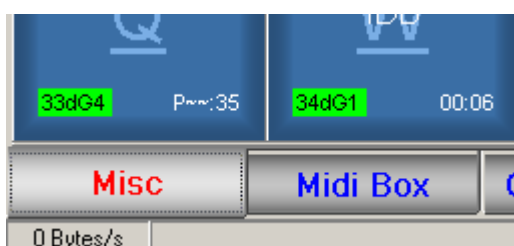


Medium:-



Large:-




The larger sizes are more suited to operation via a touchscreen, on the Medium and Large settings the tab text will be word wrapped onto two lines

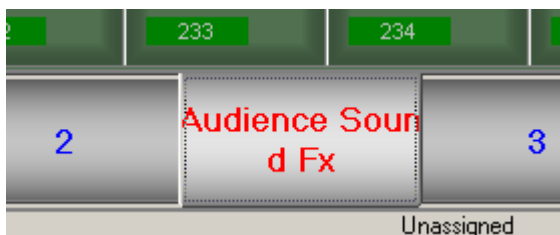


Depending on the width of the tab and the text the word wrapping may or may not be acceptable, however there is a feature that can force text onto the second line.

This is achieved by inserting a caret character '^' into the text at the point where the line break should appear.


(On most UK language keyboards the caret character is usually found as Shift+6)

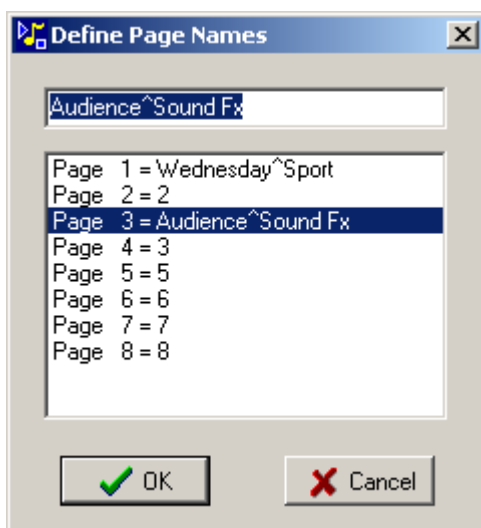

The resultant text is then correctly split over two lines

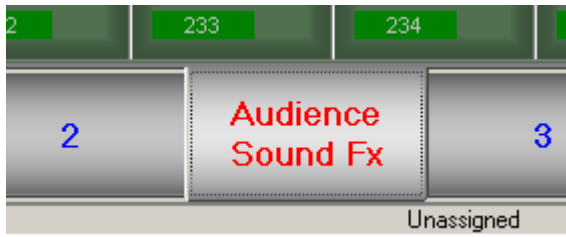


Status Bar Height




The height of the status bar at the bottom of the screen can be set to any of three levels


Small:-

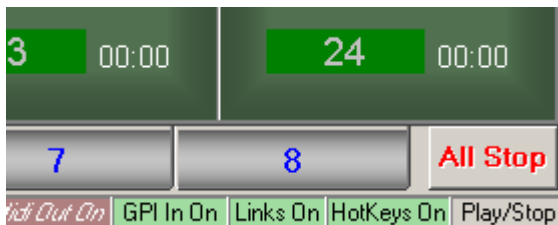

Medium:-

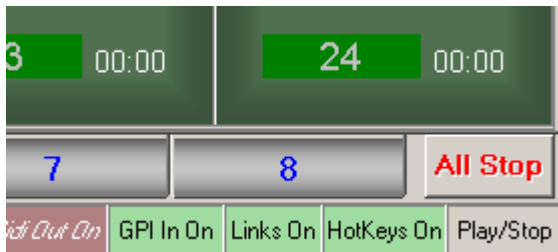

Large:-

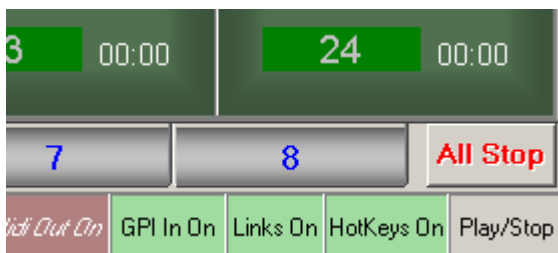

The larger sizes are more suited to operation via a touchscreen.


Bevel Edge Width

The width of the shaded edge of the buttons can be adjusted with this option




Button Trigger Size

The size of the graphic appearing on the button can be set to one of three sizes Small, Medium or Large.

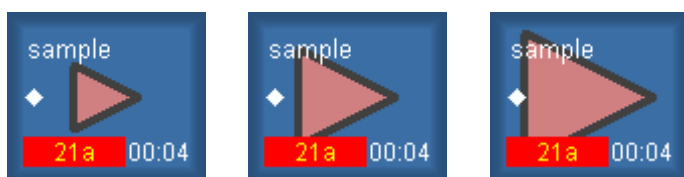

Hotkey Text

If a button has a Hotkey assigned it will normally be shown in dimmed text in the centre of the button, to aid visibility of the track name the hotkey indication can be disabled with this option.

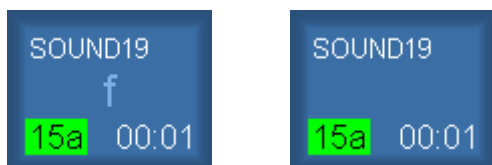

Midi In Text

As an alternative to the hotkey text display the buttons can show the Midi In Channel/Note assignment.




The button text display can be either HotKey, Midi In or none

Button Triggers

SpotOn buttons can be triggered in a variety of ways, essentially these can be split into two groups:-

Local	button click, PlayNext, Master/Slave...
Remote	GPI, Timecode, Midi...

To aid the operator identifying if particular button was triggered by some type of remote control, a Button Trigger graphic can be displayed on the button.

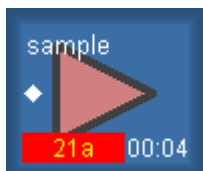

This graphic is shown when the button is triggered by Midi, GPI, UDP, TCP, PBus or Timecode

Edged Midi/HotKey Text

In order to improve visibility of the button Midi and HotKey text this option will add a drop shadow effect to the text



Elapsed Time Count

By default the display at the lower right of the button shows the time remaining - counting down to zero.

As an alternative the display can be changed to show the Elapsed time - counting up from zero

This option applies globally and has a keyboard shortcut of Ctrl+T




Level Meters

A window showing the signal level on the first 4 outputs can be displayed with this menu item or via the Ctrl+L keyboard shortcut.

The buttons playing on specific outputs are listed in numerical order up to a maximum of 3, the text is coloured according to the number of buttons contributing to the output.


Green	One button playing
Yellow	Two buttons playing
Red	Three or more buttons playing

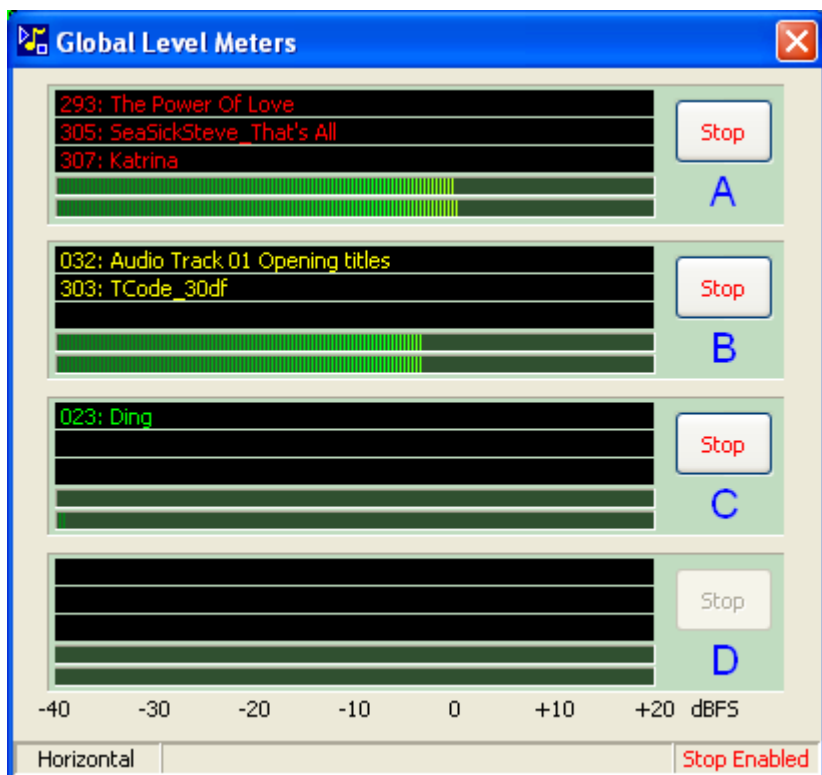


The Stop buttons on the right of the window allow all buttons on those specific outputs to be stopped, the Stop buttons are enabled by clicking the bottom right status bar panel


Stop Enabled Stop Disabled

Individual buttons can be stopped by right-clicking on the appropriate entry

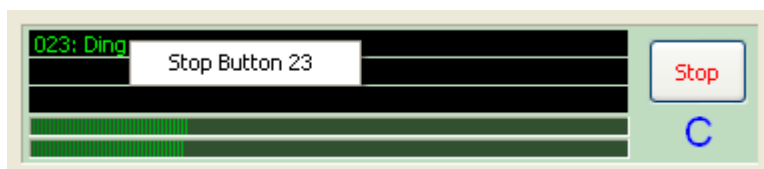


Right-clicking on the output letter "C" offers a timestamped listing of the last 100 tracks played on that output

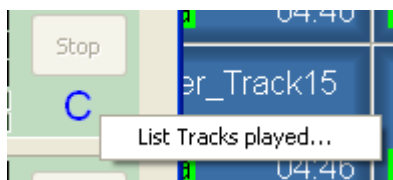

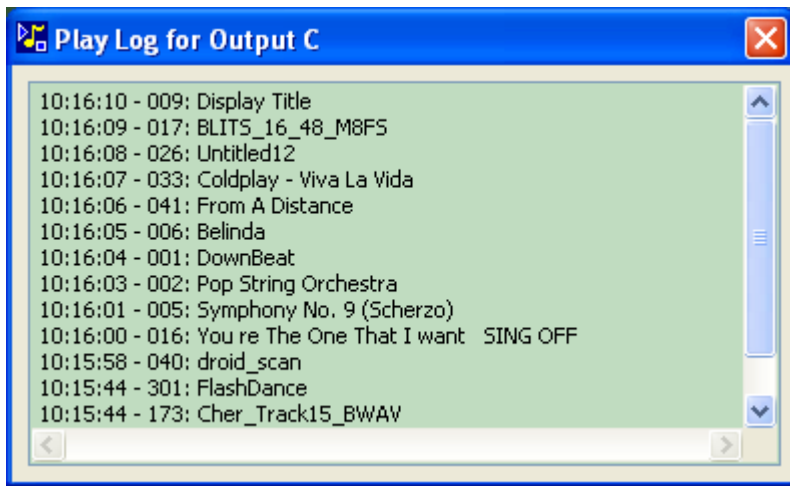

An alternative vertical Level Meter display is available by left clicking the lower left status bar panel on the Level Meter window.

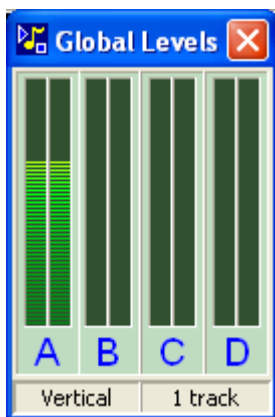

This simple display mode does not list the track names, but the number of tracks contributing to an output can be found by moving the mouse pointer over the output bargraphs.


The right-click option to show the list of recent tracks played on a specific output is still available in this mode.

Timecode Display

A floating window showing currently selected timecode reference



Edit Menu

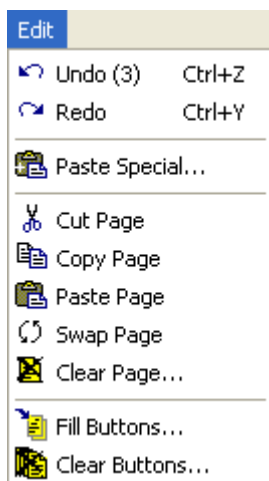


Undo	Undo last change
Redo	Redo last Undo
Paste Special	Selectively paste button parameters
Cut Page	Copy current page to clipboard and then clear current page
Copy Page	Copy current page to clipboard
Paste Page	Paste clipboard contents onto current page
Swap Page	Exchange page contents of current page with those last copied to clipboard
Clear Page	Clear contents of current page
Fill Buttons	Load a sequence of buttons with the same audio file
Clear Buttons	Clear all buttons


Paste Special

The Paste Special option available at both button and page level can be used to copy/paste certain parameters from one button to one or more other buttons.

First the source button is selected that has the parameters to be pasted and the button is copied to the clipboard using the button popup menu Copy item

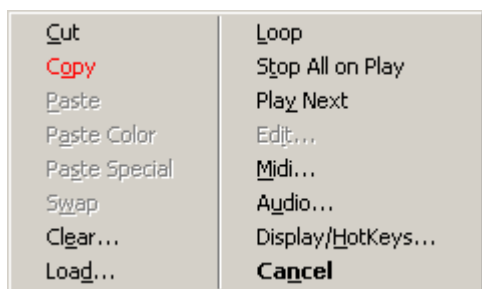


The main menu Edit|Paste Special dialog allows the selection of the parameters to be pasted, below Pan, Midi Out, Fade Out and Colour have been chosen, the Fade law checkbox is automatically checked when a fade time is selected.

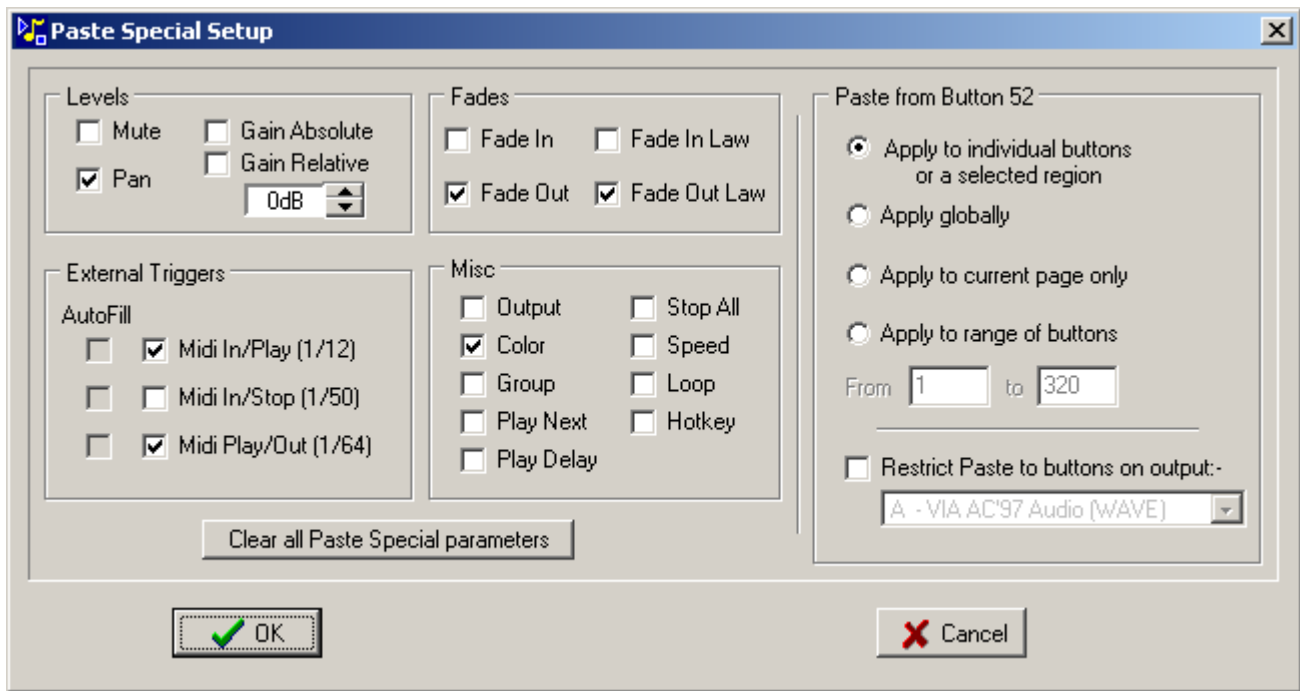

On the right hand side of the dialog is the section where the range of target buttons are defined, the default is single individual buttons.


The parameters can now be pasted onto existing buttons using the button popup menu Paste Special option

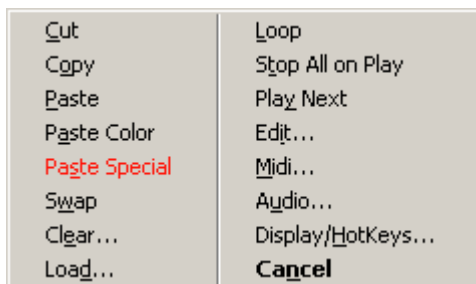


The status bar hint will indicate which parameters will be pasted, in this case Pan, Fade Out duration, Midi In to play and Color have been selected.



If a gain adjustment is required to be applied to several buttons and their relative gain settings must be maintained, then the Gain Relative option should be used, in the example below the gain of each button on which Paste Special is used will be increased by 3dB.

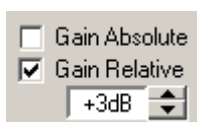


If more than one consecutive button is to be modified then other Paste Scope options can be used

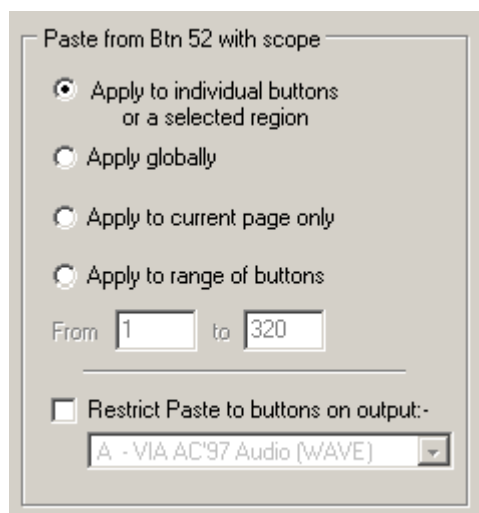


- 1, One individual button at a time
- 2, All buttons across all pages
- 3, All buttons on current page only
- 4, A defined range of buttons
- 5, Further restrict above selection to only act on buttons assigned to a specific output


If a range of buttons 10..18 is required then the entry will look as below

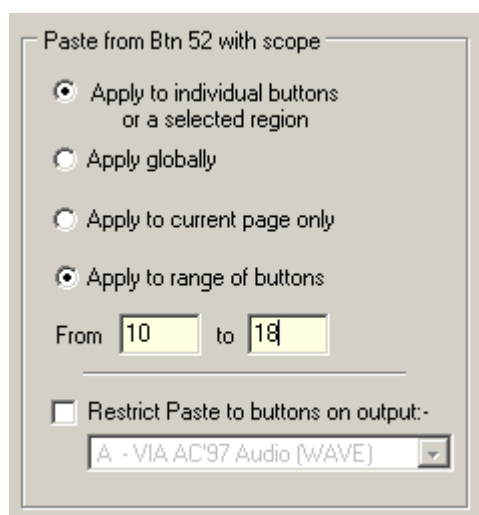

When the Paste Special dialog is exited a further confirmation dialog will be shown with a summary of the changes about to be applied

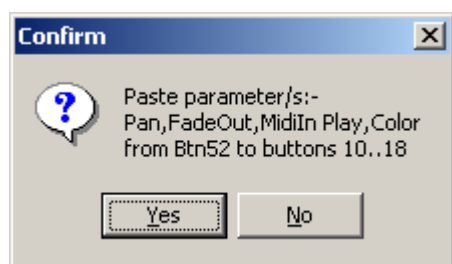

Midi In/Play, Midi In/Stop and Midi Play/Out paste options have 'AutoFill' modifiers, when checked these will fill the selected range of buttons with a Midi note based on that of the copied button.

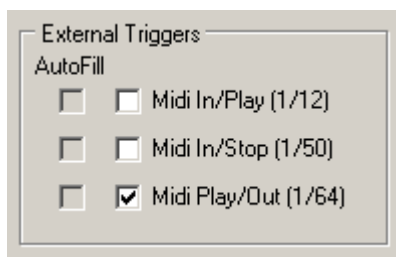

The Auto Fill modifier is only enabled when Paste Midi In/Play, Midi In/Stop or Midi Play/Out are checked and the Paste Scope is set to be a range of buttons



Pasting a range of buttons with Auto Fill checked will set the Midi notes of the pasted buttons to:-

Midi Note of copied Btn+1, Midi note of copied Btn+2, Midi note of copied Btn+3....

In the example above this would be in Channel/Note format:-


First button pasted >1/13, second button pasted >1/14, third button pasted >1/15...

The pasted Midi Channel number is always the same as the copied button.


As an example, button 81 has Midi In/Play allocated to note 1/70

SOUND22	SOUND24	SOUND25	SOUND26	SOUND27
1/70				
81a 00:01	82a 00:01	83a 00:02	84a 00:01	85a 00:02

If the Midi notes on buttons 82..88 are to be assigned notes 1/71..1/77, then the procedure is to copy button 81 to the clipboard, and to use Paste Special SetUp to Auto Fill the buttons 82..88 as shown below

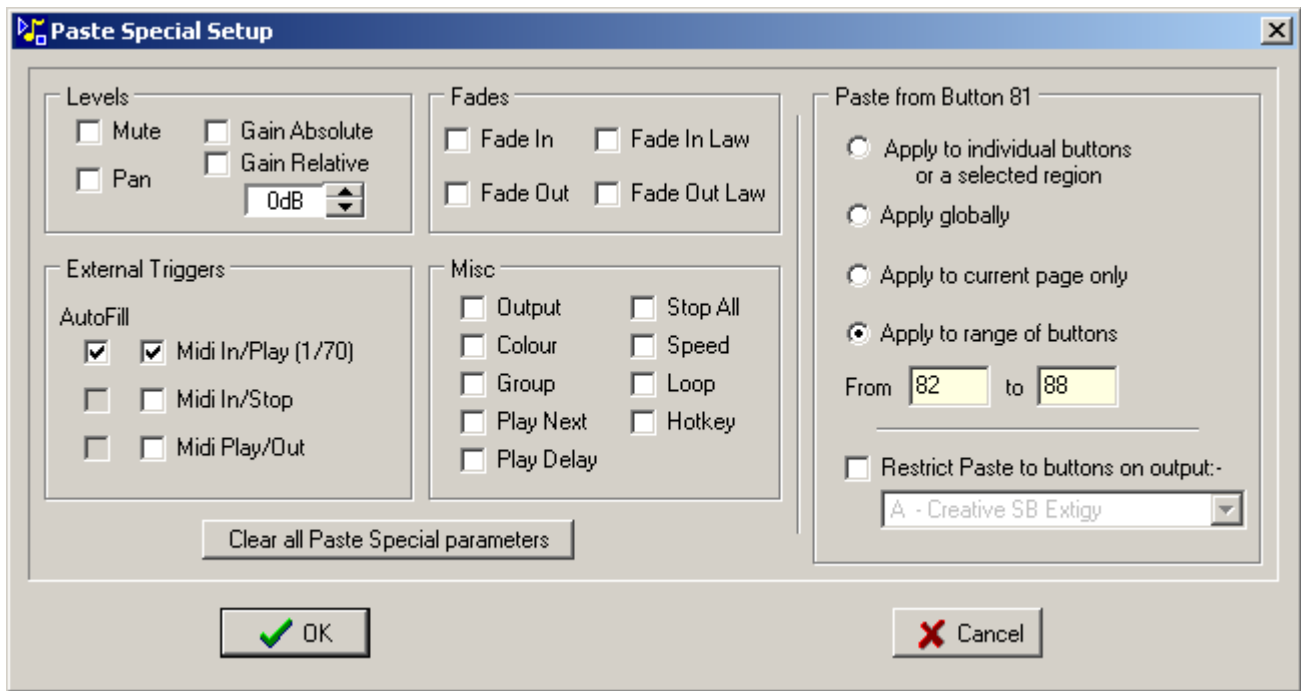


A prompt dialog appears confirming the changes

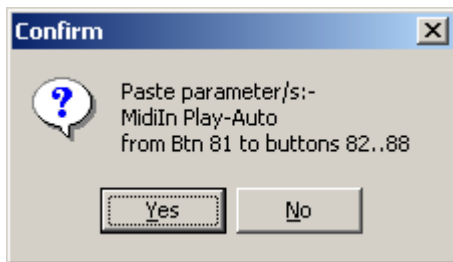


The result then becomes:-

SOUND22 1/70 81a 00:01	SOUND24 1/71 82a 00:01	SOUND25 1/72 83a 00:02	SOUND26 1/73 84a 00:01	SOUND27 1/74 85a 00:02
------------------------------	------------------------------	------------------------------	------------------------------	------------------------------

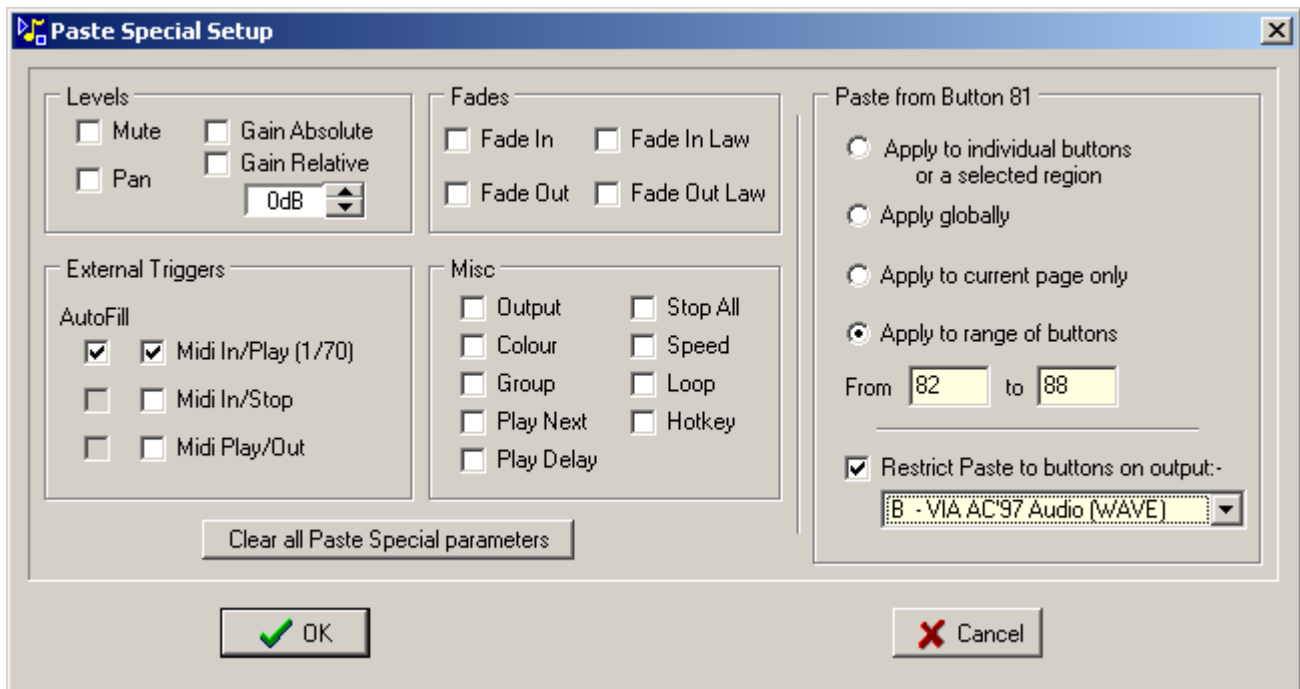


If the option to restrict the Paste Special action to buttons only on a specific output the prompt box will appear as below.

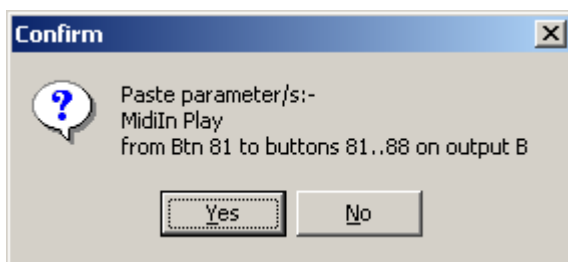


Fill Buttons


This option provides a quick method of loading the same audio file into a range consecutive buttons, this may be required when setting up SpotOn so that all spare buttons are loaded with for example 1 second of silence.

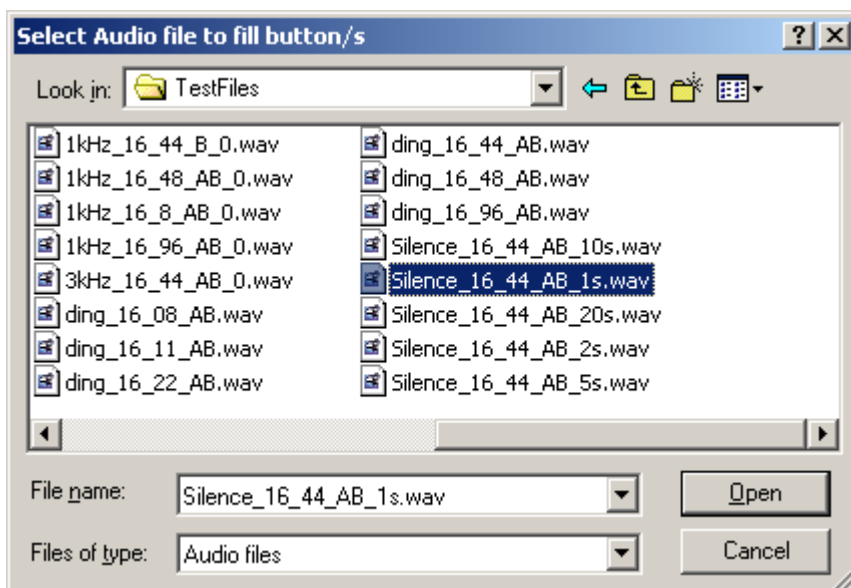

The first dialog box to be presented allows selection of the audio file followed by a further dialog defining of the range of buttons to be loaded

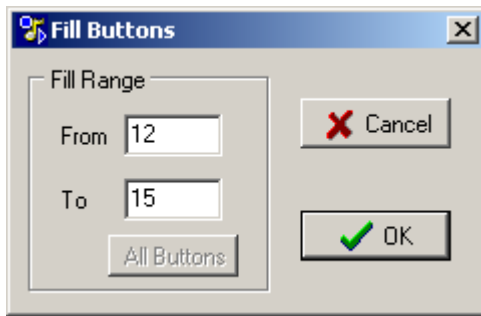


Finally a confirmation dialog box before the buttons are loaded.

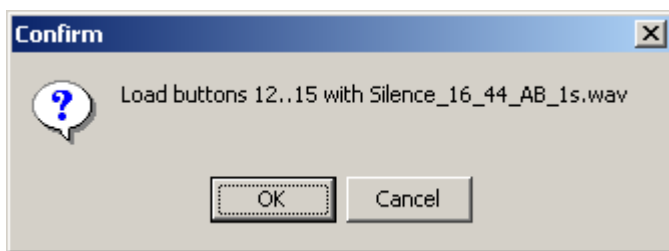


Clear Buttons


To clear tracks from one or more buttons enter the first and last button numbers then click OK

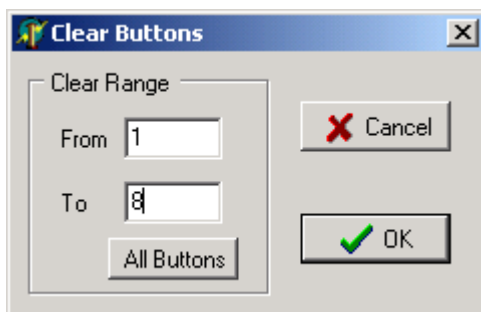

Click on "All buttons" to enter the full button range

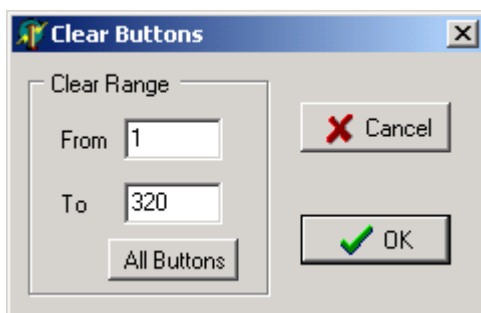


A confirmation dialog is shown before the buttons are cleared.

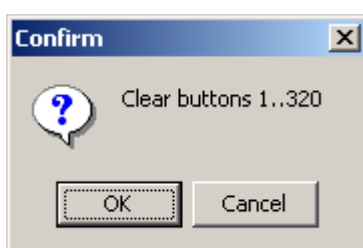


Search Menu

The Search menu will display a popup window similar to that shown below containing the 1000 most recent files loaded into SpotOn.

The names listed are the disk filenames or display names if they were altered when loaded into SpotOn. They can be searched by typing directly into the Search Text edit panel, here 'sun' has been entered and the file 'sunshine' has been moved to the top of the list.

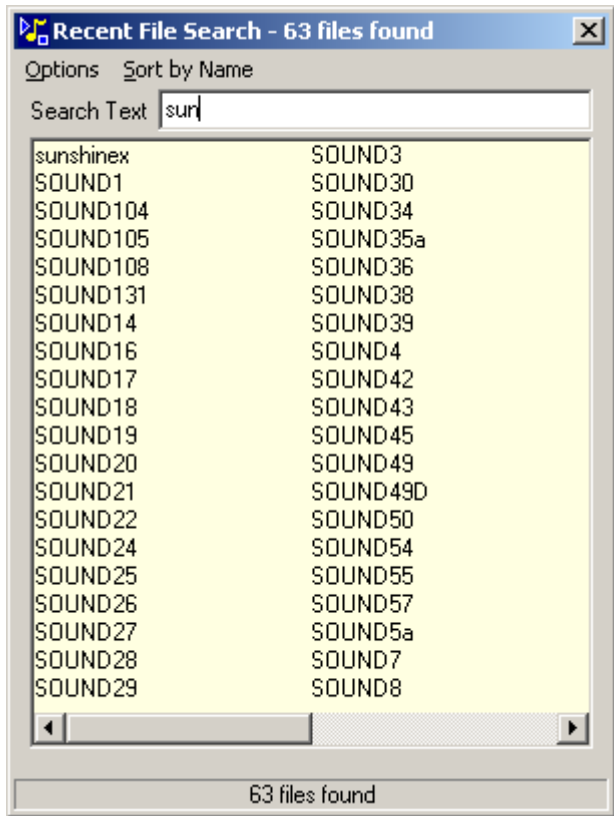

Once the required file has been located it can be selected and then dragged and dropped on to the appropriate main window button. Drag and Alt+Drop will automatically Top/tail track before it is loaded onto the button

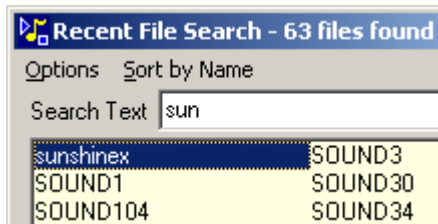



The actual location of the audio file is show in the search window status bar.



Sorting Search List


By default the list of tracknames will be sorted in ascending alphanumeric order.

The 'Sort by' menu allows the list to be sorted in alphanumeric order or with the most recently loaded tracknames at the beginning of the list.

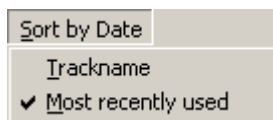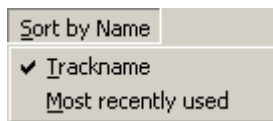


Remote Files

Tracks sourced from remote file locations are included in the list only if the [Try Remote Files](#) option is selected, in that case any remote files will be shown in red text.

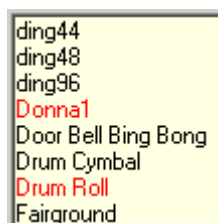


WAV files containing Copyright or Comment fields


WAV files can contain embedded text fields detailing copyright, artist, creation date etc., the Options menu allows files having entries in either the Copyright or Comments fields to be highlighted in the search list.

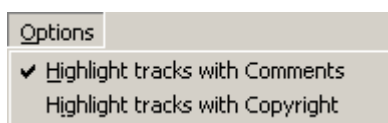

Checking the Highlight Comments option displays the file name in blue if it has an associated comment field.

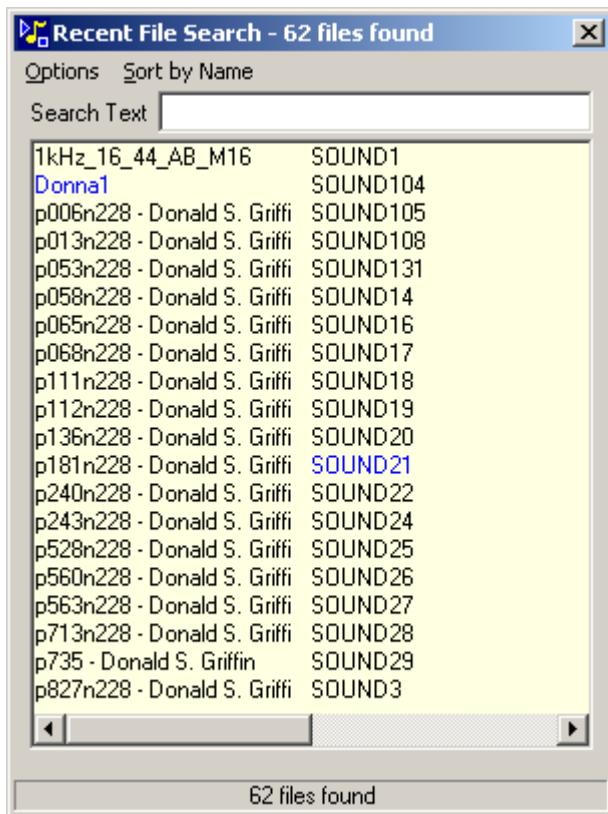

Selecting the file will show the comments in the upper status bar

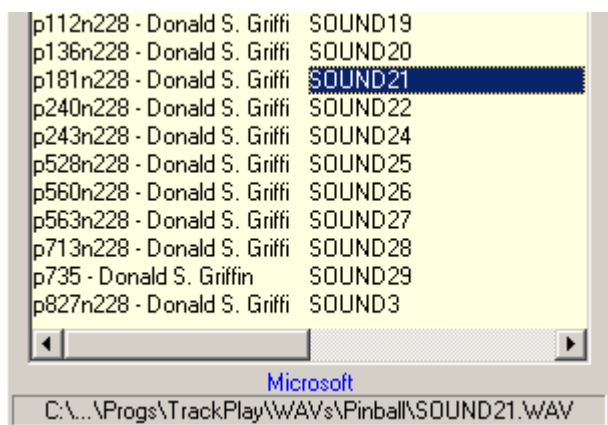


Preview Track

The tracks can be previewed individually by double-clicking files in the results list. So for example the entries for 'Sound21' and 'Sound22' can be compared by double-clicking the names, right-clicking will stop the track as will closing the Search window.

The previewed audio will be played on the output that was selected as being the 'Preview Output' via Global|[Preview Output Assignment](#).

Global Menu

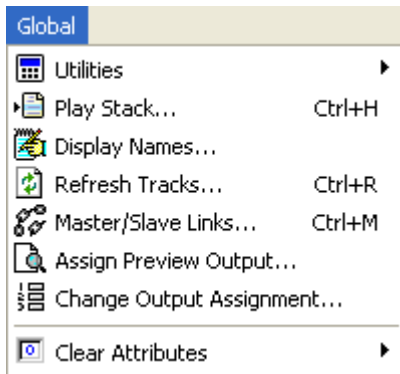

[Utilities](#)

Assorted utilities giving information about current session

[Play Stack \(Ctrl+H\)](#)

Simple track player utility

[Display Names](#)

Edit display names and change track/button allocation

[Refresh Tracks](#)

Update tracks that have been modified since being loaded

[Master/Slave Links](#)

Setup links between Master buttons and Slave buttons

[Assign Preview Output](#)

Sets output to be used when previewing tracks


[Change Output](#)

Change audio output device for some or all buttons

[Clear Attributes](#)

Clear selected attributes

Utilities

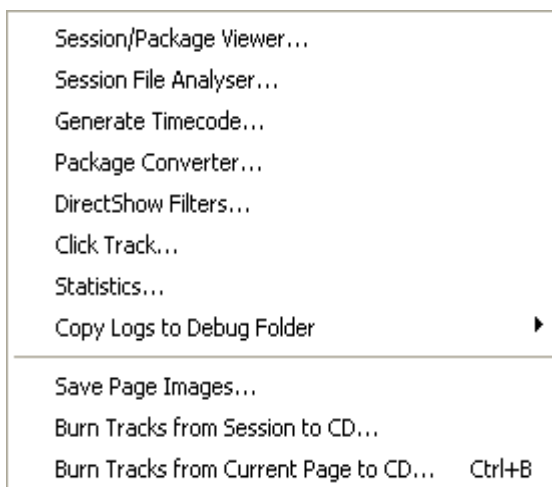

[Session/Package Viewer](#)

View contents of SpotOn Session and Package data files

[Extract Tracks from CD](#)

Extract tracks from CD and save to disc as WAV files

[Session File Analyser](#)

Analyse usage of audio files in sessions

[Generate Timecode](#)

Generate a timecode WAV file

[Package Converter](#)

Convert Packages to be compatible with previous versions

[DirectShow Filters](#)

Setup parameters for third party audio decoders

[Click Track](#)

Generates a click/count in track

[Statistics](#)

View audio file size and source folders

[Copy Logs to Debug Folder](#)

Save a set of SpotOn files for debugging

[Save Page Images](#)

Save images of the active pages to disc

[Burn Tracks from Session to CD](#)


Burn tracks from the whole session to CD using

[Burn Tracks from Current Page to CD](#)

Burn a selection of tracks to CD using CDBurnerXP

Utilities-Session/Package Viewer

Session/Package viewer allows the contents of either a SpotOn session or package to be examined, it will list the button number output device and track title. The information can be selected and pasted to the clipboard for use outside of SpotOn

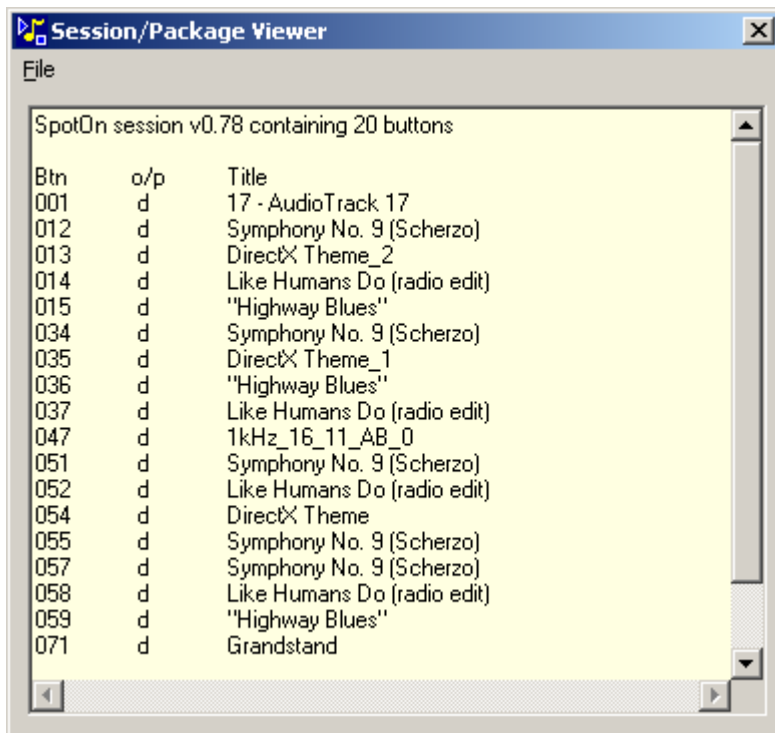


Utilities - Session File Analyser

Session File Analyser is an application that runs external to SpotOn and is described on the [Session Analyser](#) page.

Utilities - Generate Timecode

Occasionally it may be necessary to link the audio on a button with SMPTE timecode, this utility can create a WAV version of SMPTE timecode which when loaded onto a button can be played alongside the main audio with a Master/Slave link.


The first dialog box allows entry of the start timecode and the duration of the timecode track, in the example below timecode in the range 10:00:00:0 to 10:10:00:00 will be generated.

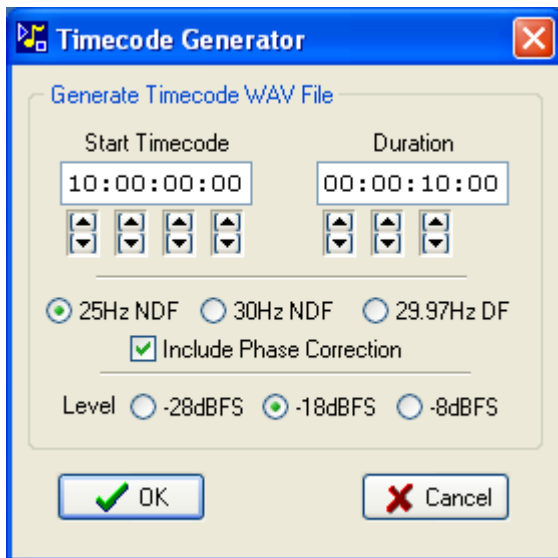


Options are available to set the timecode frame rate and signal level, -28dBFS equates to -10dBm.

The Include Phase Correction option allows a flag to be set in the timecode waveform to ensure the absolute phase of the sync word is maintained, most decoders can accommodate either setting.

Next the filename and location of the resultant timecode file is set.

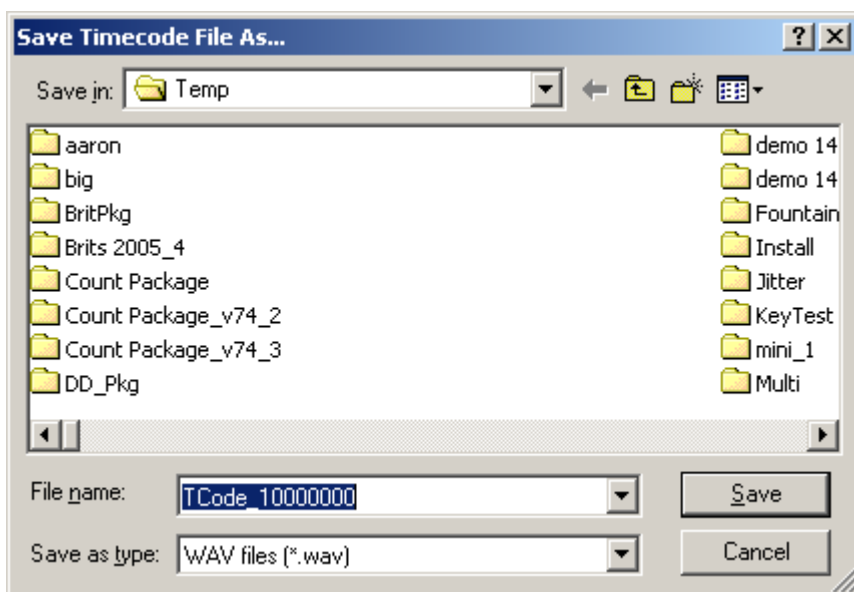

Finally a Wait window is displayed showing the timecode generation process, the cancel button will abort the operation.

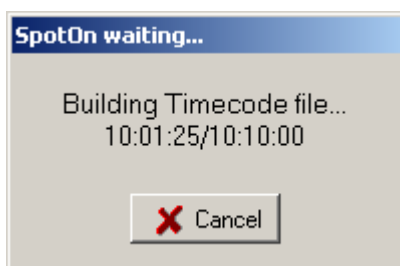

Utilities - Package Converter

[Package Converter](#) is an external standalone application that will convert SpotOn Packages from one version to another, this is used to convert packages built with more recent versions of SpotOn to run on older installations.


Utilities - DirectShow Filters

Compressed audio files have to be decoded into uncompressed PCM WAV format before SpotOn can play the file, some of the DirectShow filters that perform the decompression have parameters that affect their output, the default settings are shown on the [Decoders](#) page


Utilities - Click Track

A click track can be used as a timing reference or count in for musicians, SpotOn can generate a wide range of click track formats.


The parameters are set in the dialog shown below, the taps and beats can be previewed via the [Preview output](#)

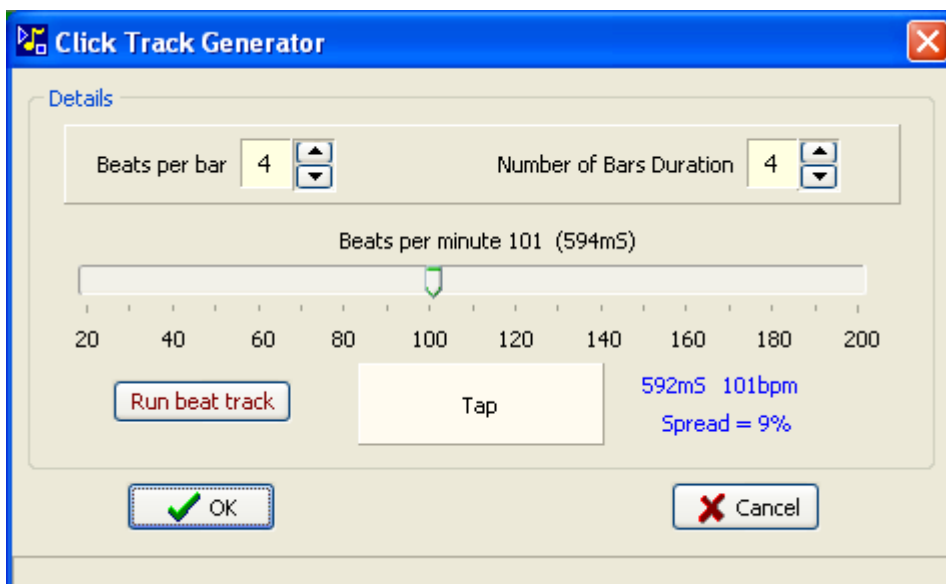


Clicking on OK will start building the file.

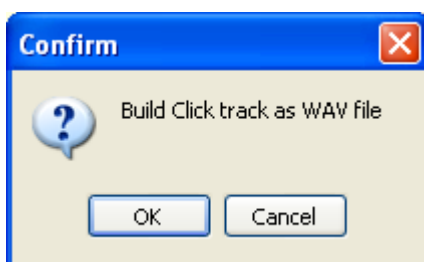

The file will be saved as a single channel 16 bit 48kHz wav file.

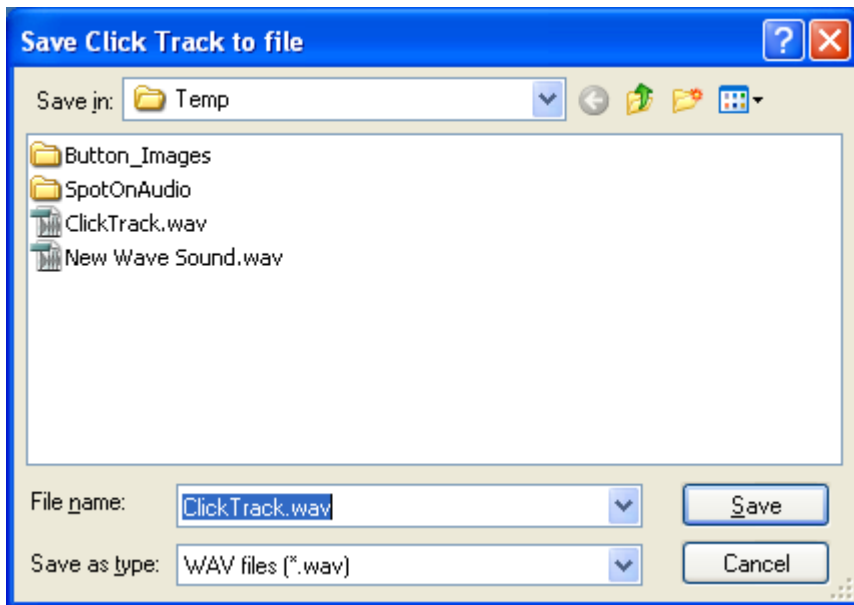


If the track is to be used immediately it can be loaded onto the next free button on SpotOn

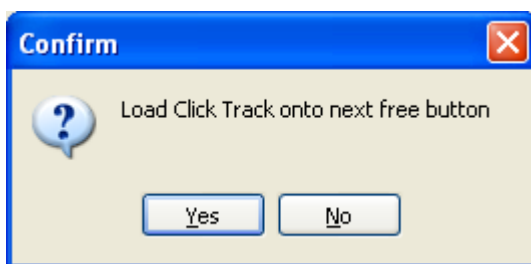


Utilities - Statistics

Statistics show results of analysing the current session data, and is presented in two graphs

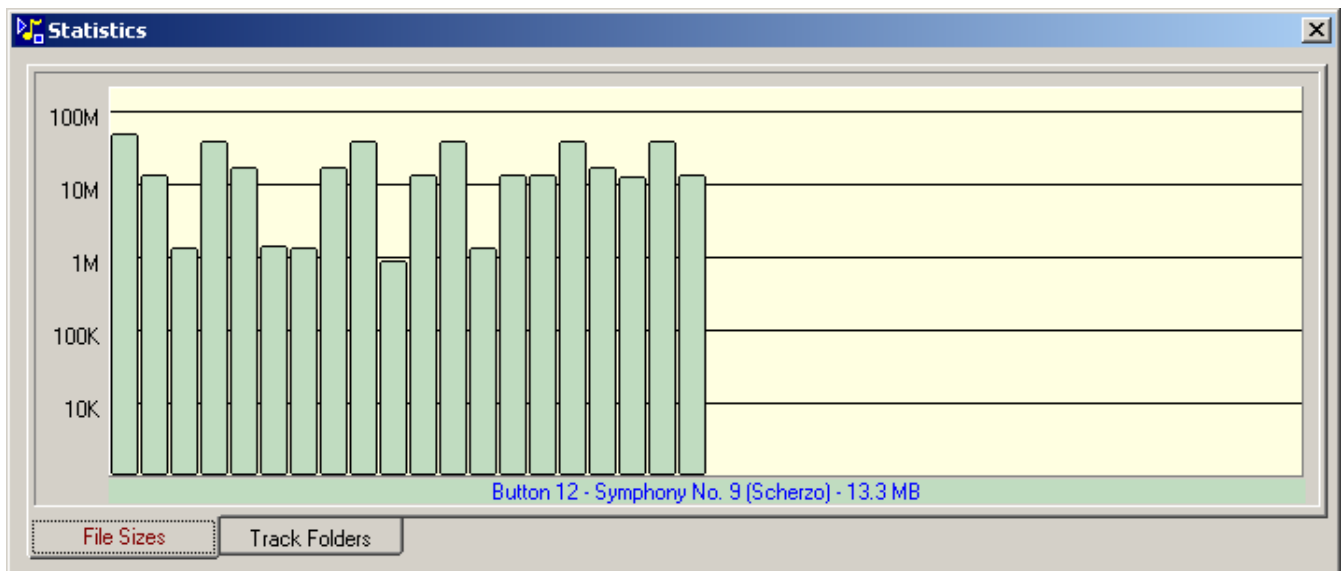


File Sizes displays a plot of file size for each button loaded, so that very large files can be identified.

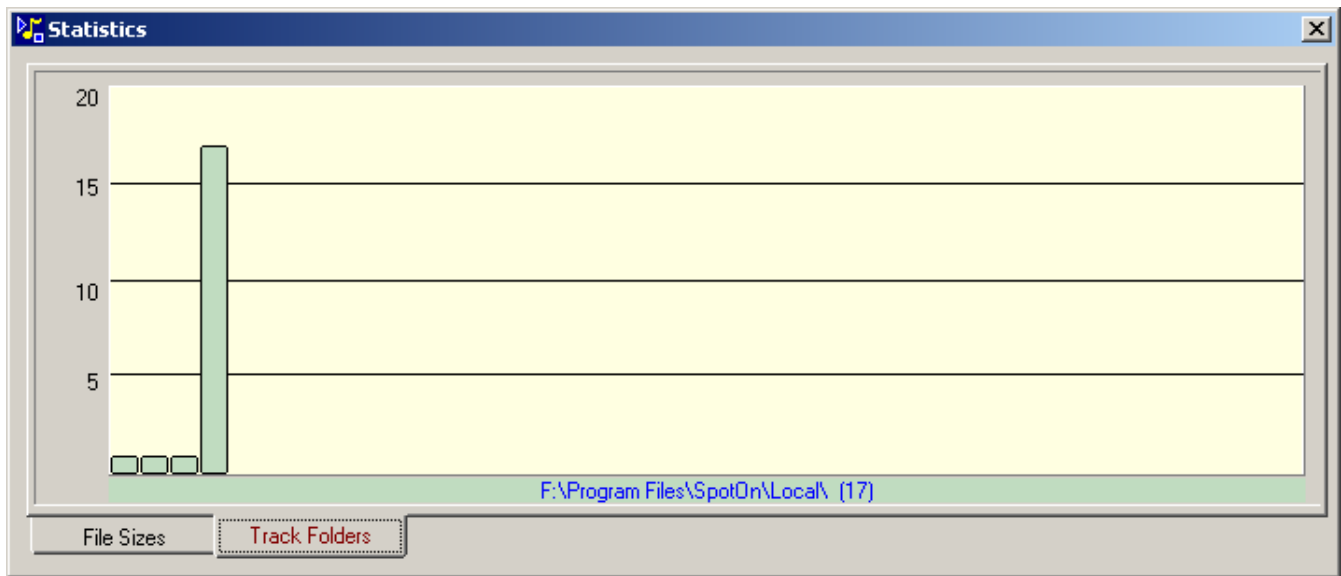


Track Folders displays the 'fragmentation' of the session, meaning how many different folders are used to store the audio files. In the above example the 20 files are spread across 4 folders, with 3 folders each containing one file and another holding the remaining 17.


When files are loaded from a networked or removable disc they are copied to the local disc into a 'Local Files' folder, as defined in the [File Folders](#) menu. This folder is highlighted in red in the Track Folders display to indicate that some files are held in the general 'Local Files' folder and not in a more relevant folder associated with a show/programme.

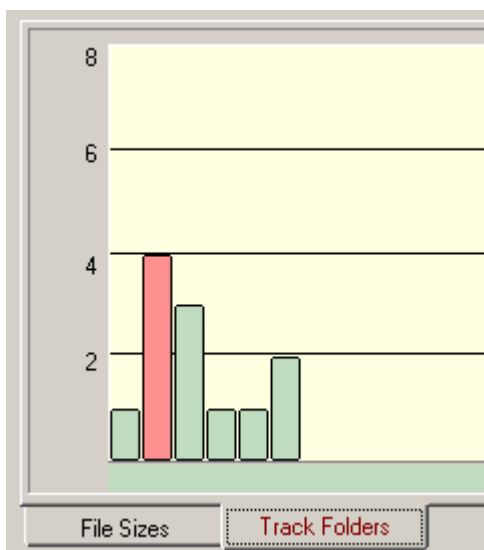


Right-clicking on any will show a popup menu

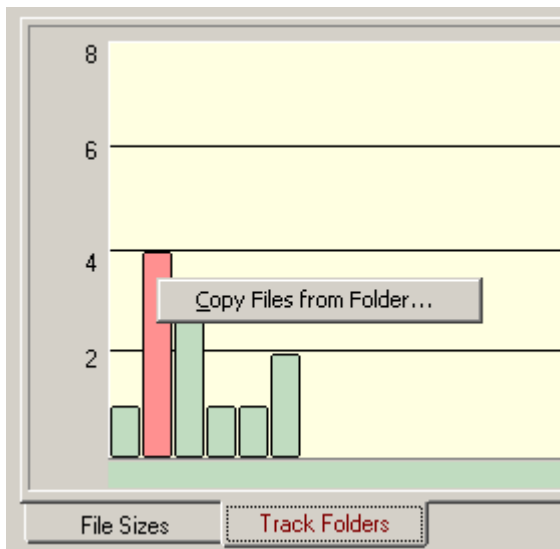


Clicking on the Copy Files menu item displays a dialog box confirming the the files are to be copied

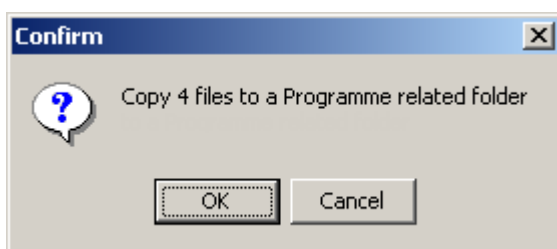

Next the new destination folder is selected

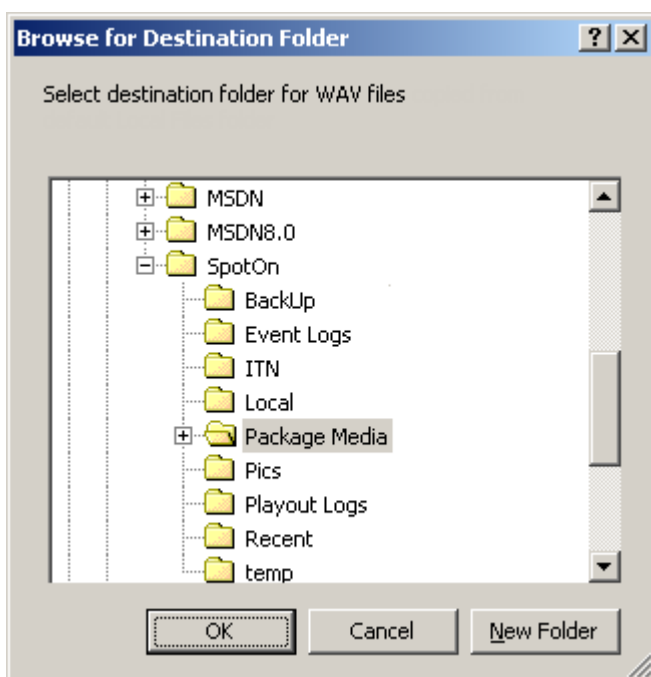

Finally a further confirmation before the files are copied.

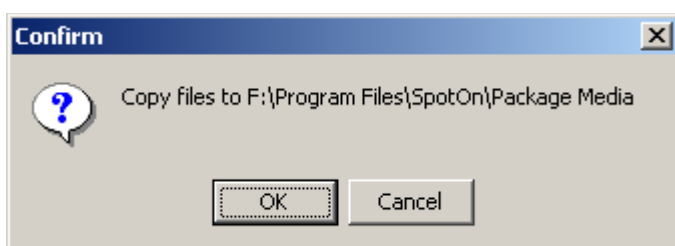


If a file of the same name already exists in the new folder then it will not be overwritten




Utilities - Copy Logs to Debug Folder


A sub menu on this item allows the date range of log files to be specified, Payout, Event and Error logs are all included.




Selecting one of the above options will display a confirmation dialog warning that the contents of the \Debug folder will be deleted, this folder is only used by SpotOn for debug log files and no other files should be present.

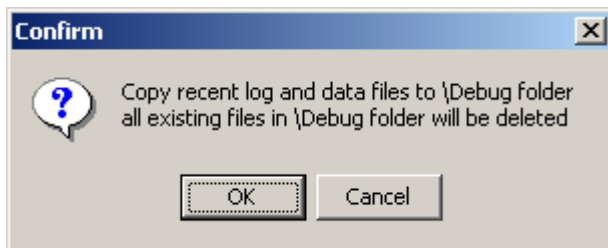


After the files have been copied a Debug.cab file is created and whilst this is being built a command line window will appear showing the compression progress

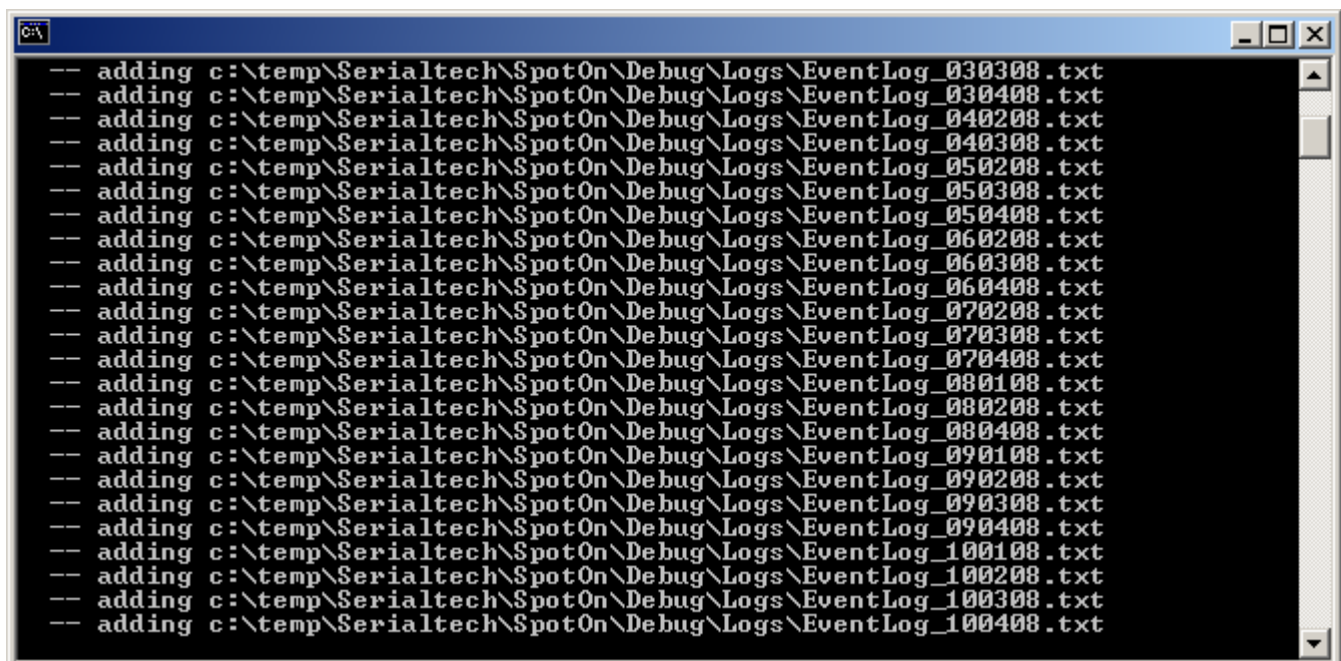


Next an option to transfer the debug files to a FTP server is offered, this uploads the files directly to a server so they can be analysed

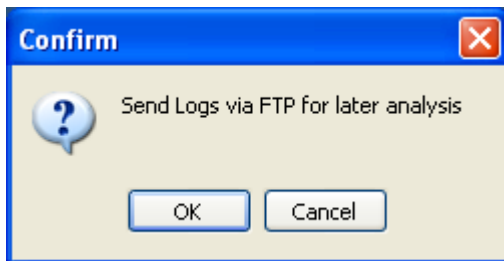

Selecting OK will open a FTP MiniClient window

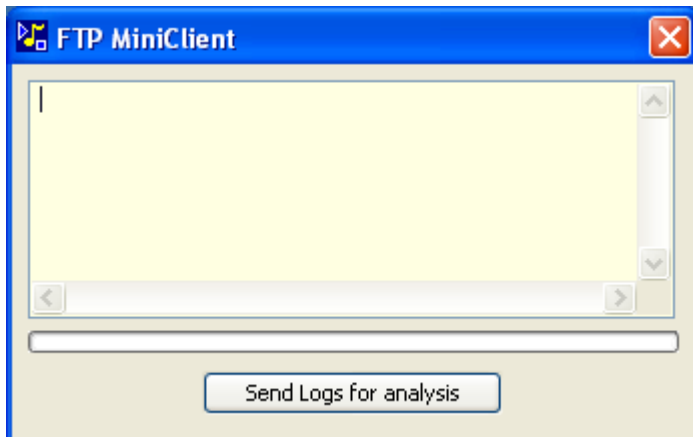


Clicking on Send Logs for analysis will start the file transfer

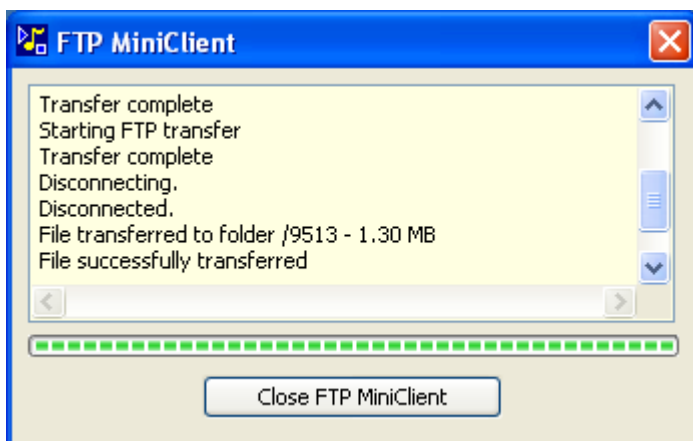

When completed close the window to continue

On completion of the copy/compression/FTP process there is a final option to display the contents of the \Debug folder

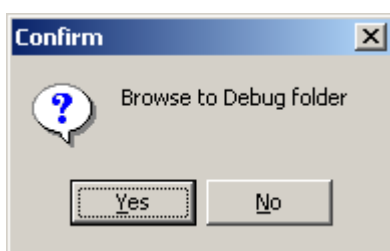


The "Debug_Logs.cab" file can then be sent for analysis if required.


Utilities - Save Page Images

To assist in passing information between SpotOn operators this menu option allows the SpotOn pages to be saved to file as either Windows bitmap or JPEG images.

The dialog box below allows the location of the image files to be set.

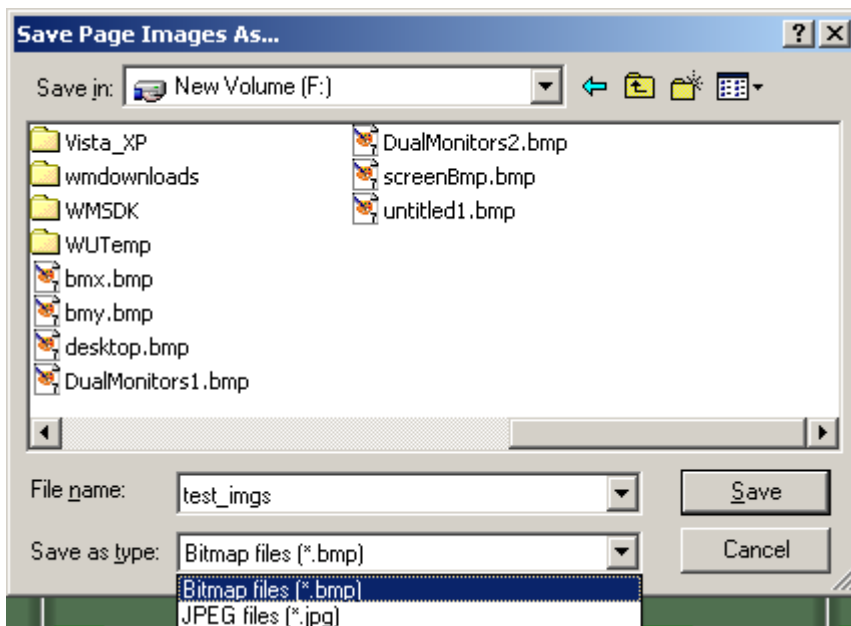

As the images are saved SpotOn will cycle through all available pages and then return to the originally displayed page.

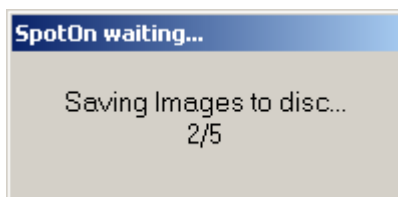



Utilities - Burn Tracks to CD (Ctrl+B)

SpotOn is configured to use a third party CD burner utility "CDBurnerXP", the latest version of CDBurnerXP can be found at <http://www.cdburnerxp.se>

In order for SpotOn to access the utility the location of CDBurnerXP has to be assigned in the [SetUp menu](#).

By default all the tracks on the current page or session are selected for burning, alternatively a [source region](#) can be used with non-contiguous selections on a single page.


Next the type of file to burn onto the CD is selected to be either an Audio CD compatible with CD players or a Data CD containing the original *.wav files for use with a computer.

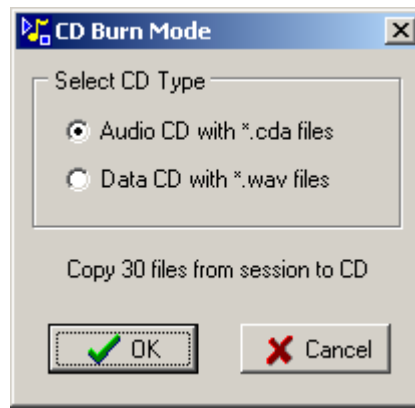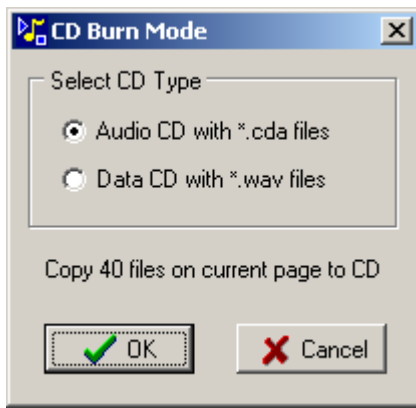


Note the files burned to CD are the original files without any modifications applied by SpotOn, i.e. gain, pan and trims adjustments are not copied across. However, in the case of MultiChannel files being saved to *.cda tracks then the file will be mixed down to stereo.

The adjustments made by SpotOn to a track can be [rendered](#) to a copy of the track from the Trim window.

Clicking OK will open up the CDBurnerXP utility where the tracks to be burned can be edited or previewed

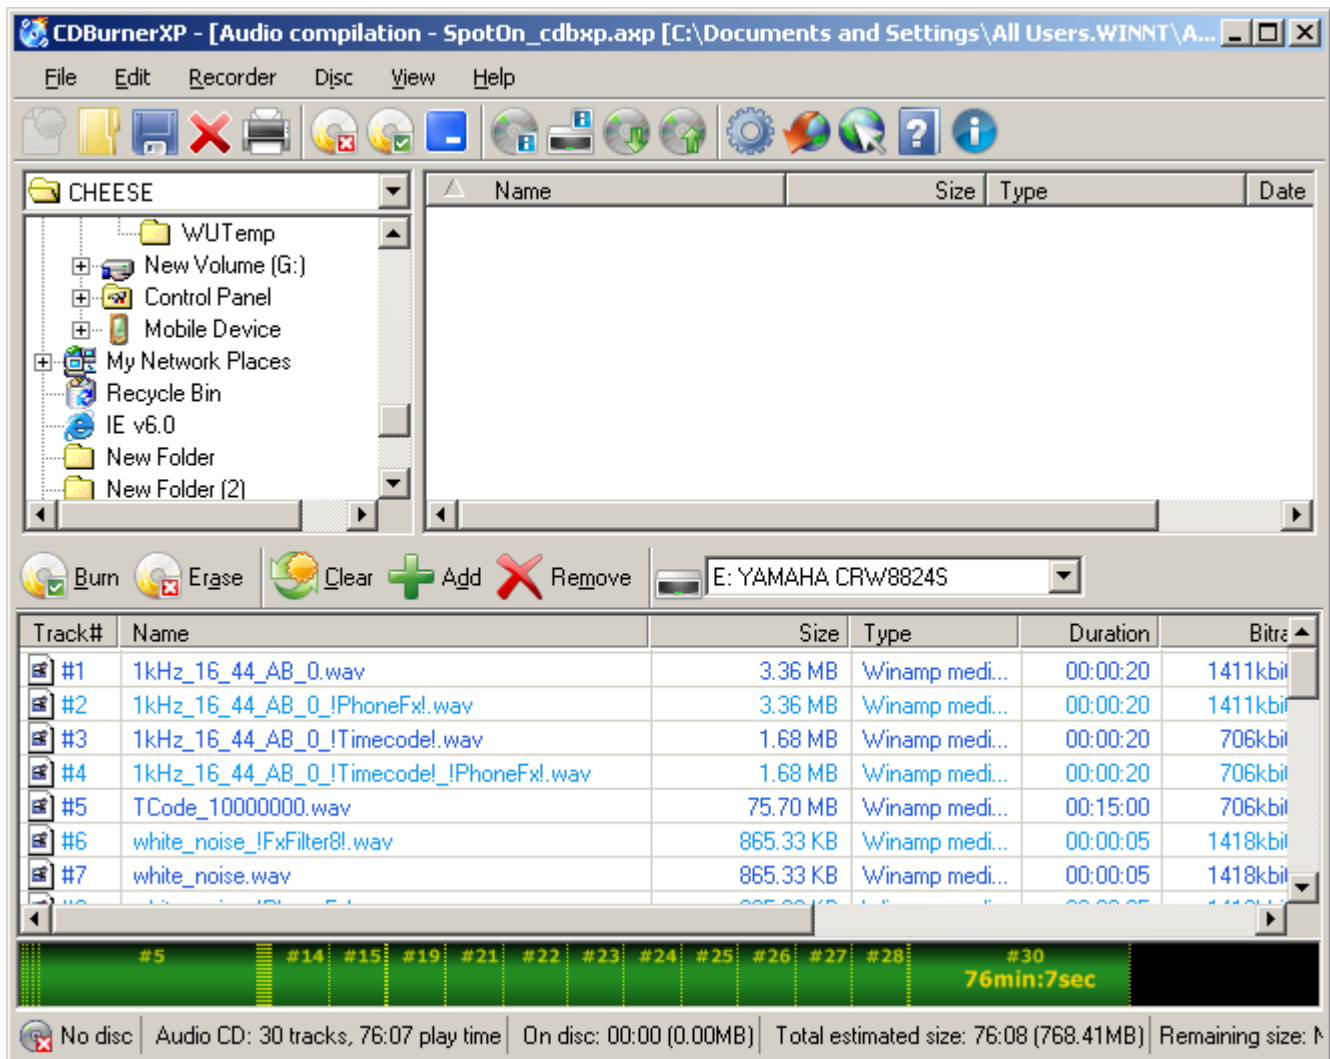

If no utility has been assigned or the file cannot be found the following message will be displayed.

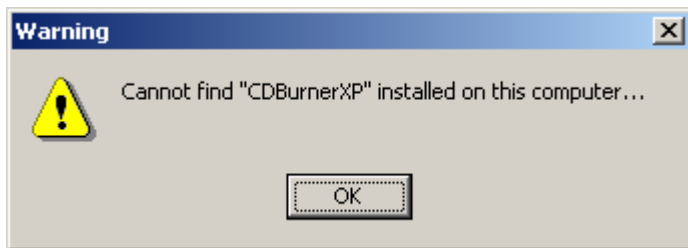


Refresh Tracks (Ctrl+R)


If any tracks have been edited with an external WAV file edit application and then resaved, SpotOn will not know about the change until restarted or the button tracks are refreshed.

SpotOn could well be confused if audio files currently in use are modified externally, due to the information extracted from the audio file when originally loaded into SpotOn now being incorrect.

To avoid this situation clicking Refresh Tracks (Ctrl+R) will scan the disk files and compare the timestamps with those of the tracks currently loaded, files with more recent timestamps will be listed as shown below.

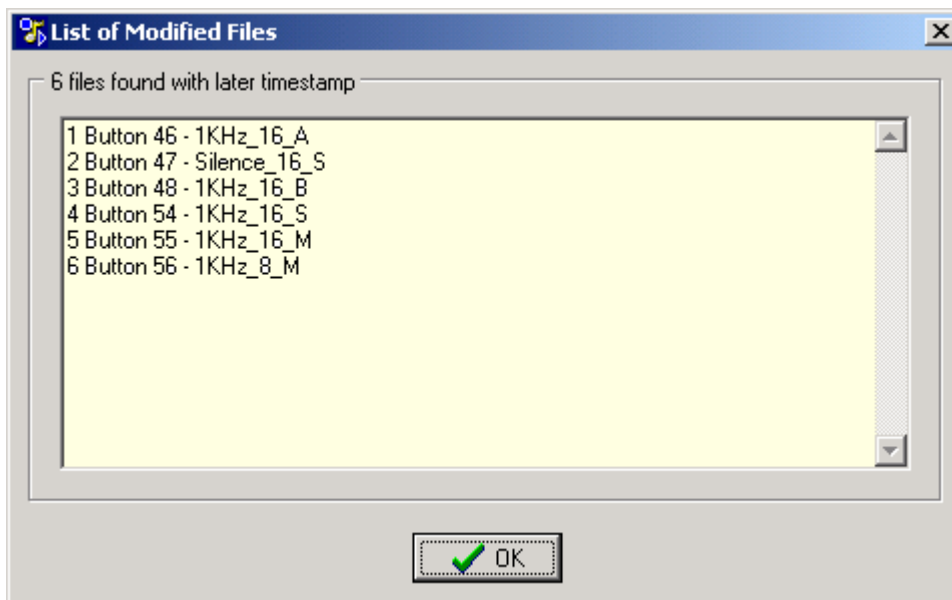

Following this dialog box is another to confirm that the updated tracks are to be loaded.

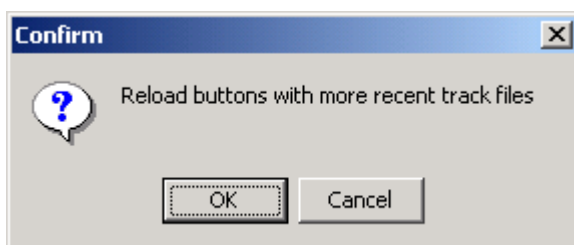


Playlist item selection and fade out times may be reset by this process, so the parameters of the buttons using these files listed must be checked and rehearsed before use.

When using the [Advanced Editing](#) option the tracks must be refreshed on completion of any editing operation

Change Output Assignment


This option can globally change all buttons to use a specific audio output or only change those buttons already using a certain port.

The upper drop down box selects to audio output to be changed, and the lower box the output port that will be used instead.

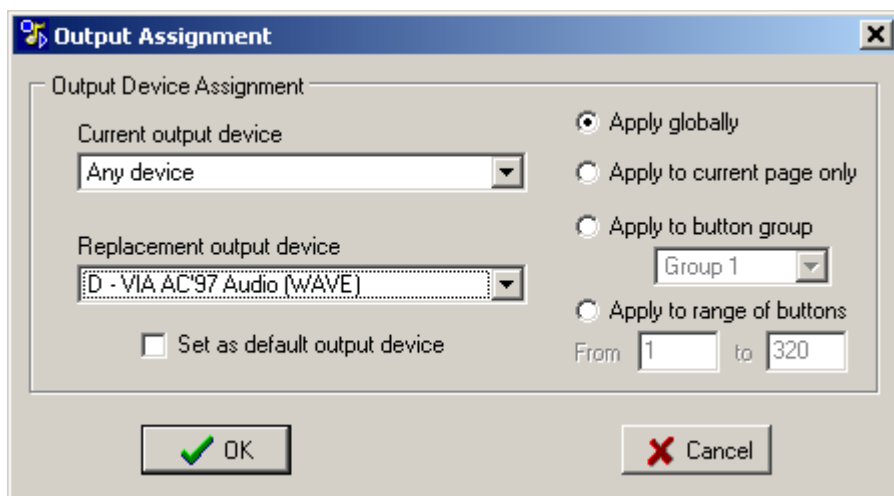


In the example above "Any device" is selected in the upper box and output "D" in the lower box, this will change all button to use output D. On the right hand side of the window the scope of the changes to output assignment can be set to either global, the current page, buttons on a specific group or a range of sequential buttons.


Clicking OK will show the confirmation dialog box.

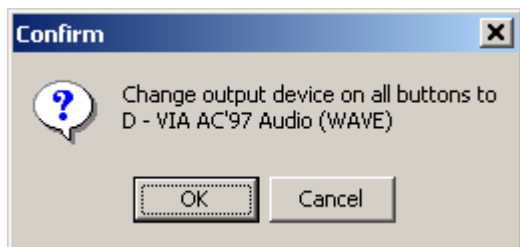

The second example below defines output device "E" in the upper box, in this case only those buttons that are currently using output E will be changed to output D.

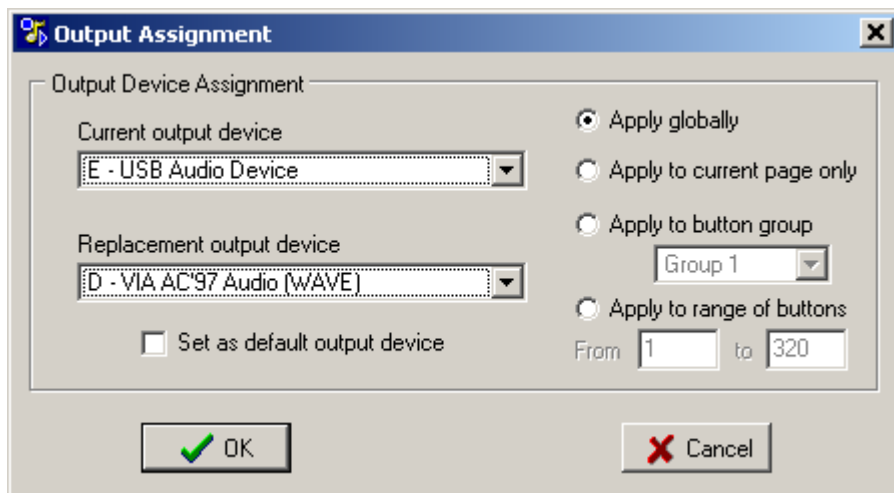


Checking the Set as Default option will cause any subsequently loaded track to be assigned to the output selected in the lower box.

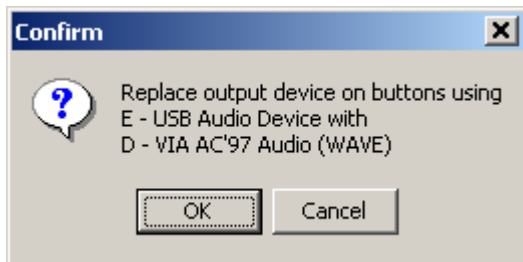

Preview Output Assignment

When tracks are played they use their assigned output, however tracks can be previewed via an alternative output, this dialog box sets the Preview output.

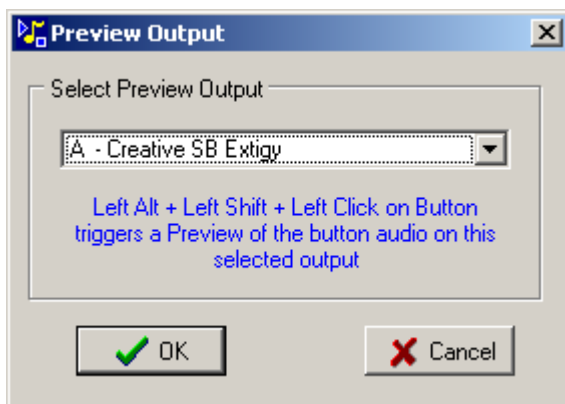


To enter the Preview mode from the main window press and hold left Shift and left Alt keyboard buttons, at this stage the DataRate panel will change colour to yellow and show "Pvw Mode".



Left-clicking on a button will now play that button on the Preview o/p only. The button preview can be stopped by holding down the left Shift and left Alt keyboard buttons and left or right clicking the button (depending on the mouse options selected).


The Preview playout is completely independent of the usual playout mode, so buttons can be played out of the normal outputs whilst being previewed, only one button can be previewed at any one time.

The button being previewed is shown with a crosshatch rectangle

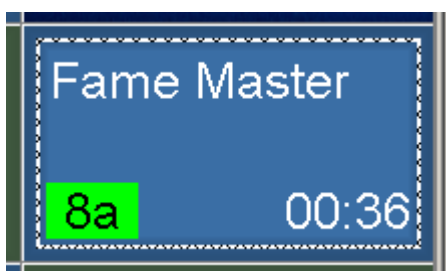

The time display will not count down during preview.

Clear Attributes

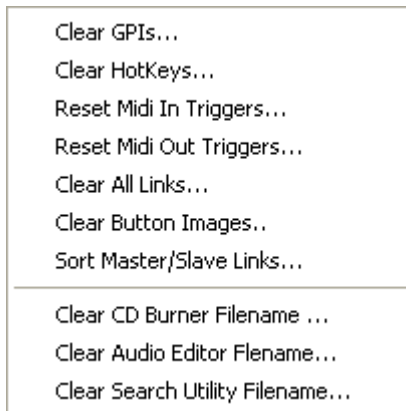

Clear GPIs

Clear Hotkeys

[Reset Midi In Triggers](#)

[Reset Midi Out Triggers](#)

Clear All Links

Clear Button Images

Sort Master/Slave Links

Clear CD Burner filename

Clear Audio editor filename

Clear Search Utility filename

Clear all GPI/button assignments

Clear all HotKeys assigned to buttons

Remove all Midi In triggers assigned to buttons

Remove all Midi Out triggers assigned to buttons

Clear all Master/Slave links

Deletes images images from all buttons

Sort Master/Slave links into "master button" order

Disable CD burner utility

Disable audio editor utility

Disable file search utility


Reset All Midi In Triggers

Remove all the Midi In Note settings from all buttons



Reset All Midi Out Triggers

Remove all the Midi Out Note settings from all buttons

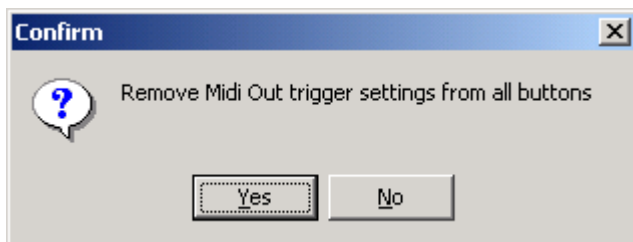


Display Names

Single button display names can be edited using the button menu [Display](#) option, if a large number need to be changed then the window below is more appropriate.

The left hand column show the button number, columns P, R, C show the page, row and column respectively.

The final two columns contain the display name and the original file name

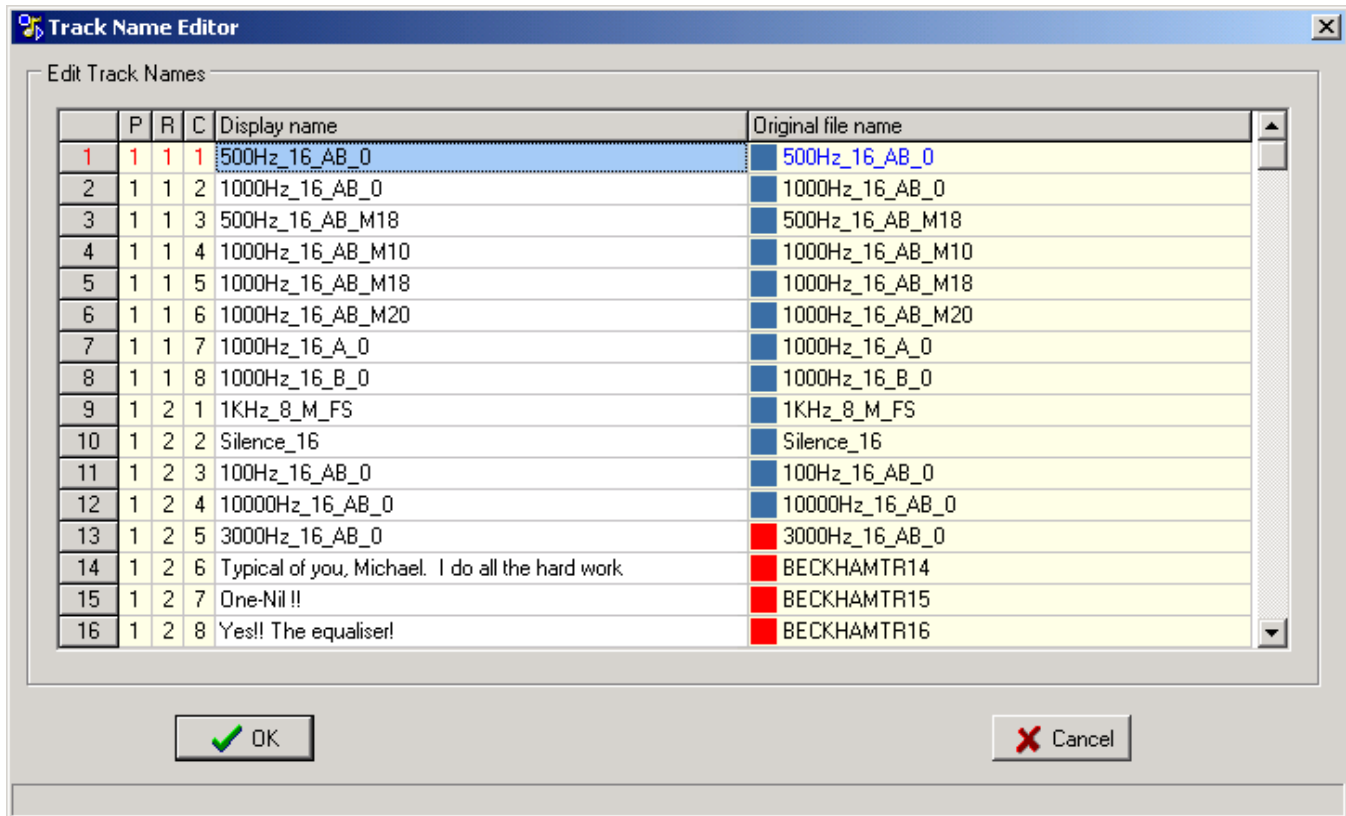

The display name can be edited by first selecting the cell and then double clicking to invoke the text editor

	P	R	C	Display name
1	1	1	1	500Hz_16_AB_0
1	1	2	1	1000Hz_16_AB_0
1	1	3	1	500Hz_16_AB_M18
1	1	4	1	1000Hz_16_AB_M10


Another use of this window is the ability to reorder the tracks on the buttons

The entries in the right hand column can be dragged and dropped into new positions either singly or in blocks, button entries cannot be copied or cleared from this window.

To move a single track, simply click and hold down the left mouse button on the track in the filename column and drag the mouse within the column to the new location, the track will be inserted above the drop point.


To move multiple track the Windows shift+click selection method is used.

If in the example below the tracks 11..14 are to be cut and pasted between tracks 5 and 6, first select the tracks to be moved by clicking on track 11 in the filename column then shift+clicking on track 14 in the same column. The selected tracks will be shown in white on black text.

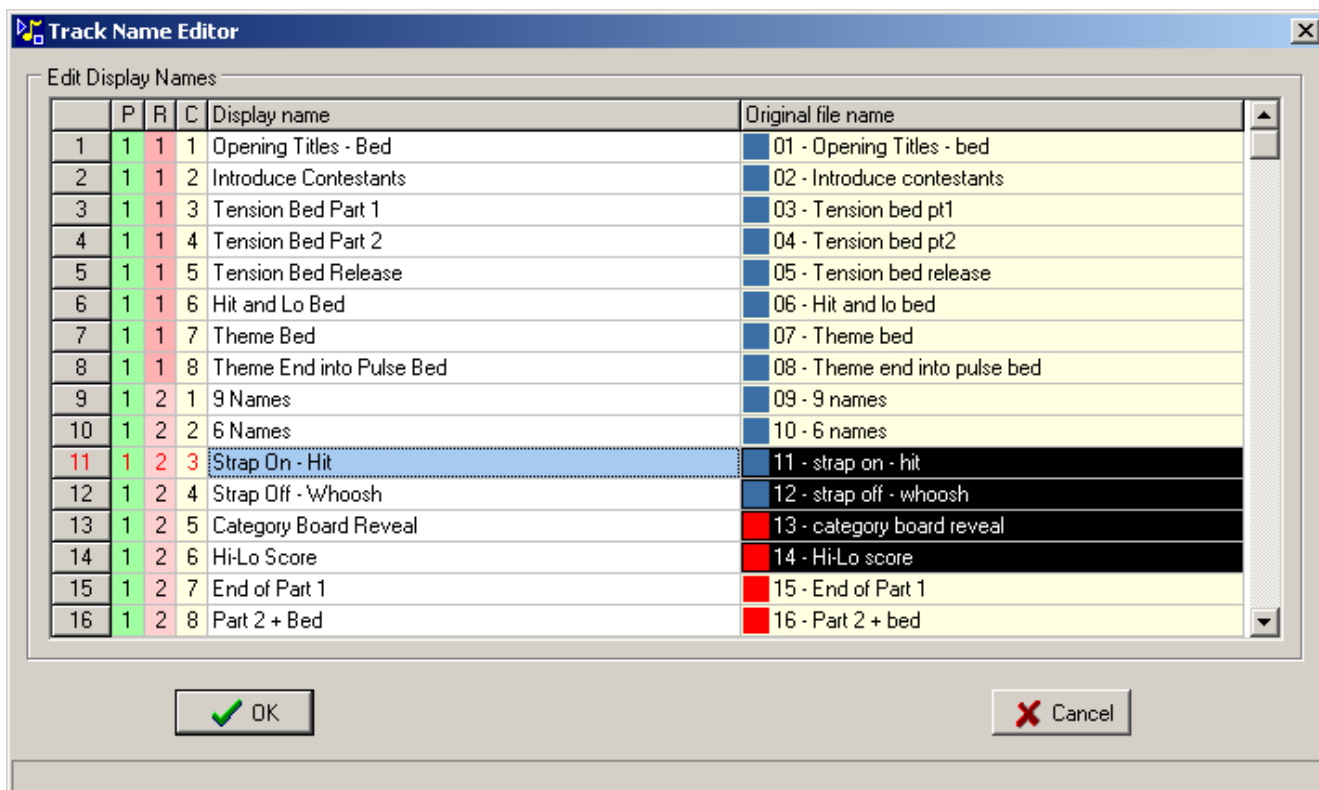

Now click and hold down the left mouse button anywhere in the selected area, then drag the mouse to the entry for track 6 in the same column.


Release the left mouse button and the selected tracks will be inserted above track 6 as shown below

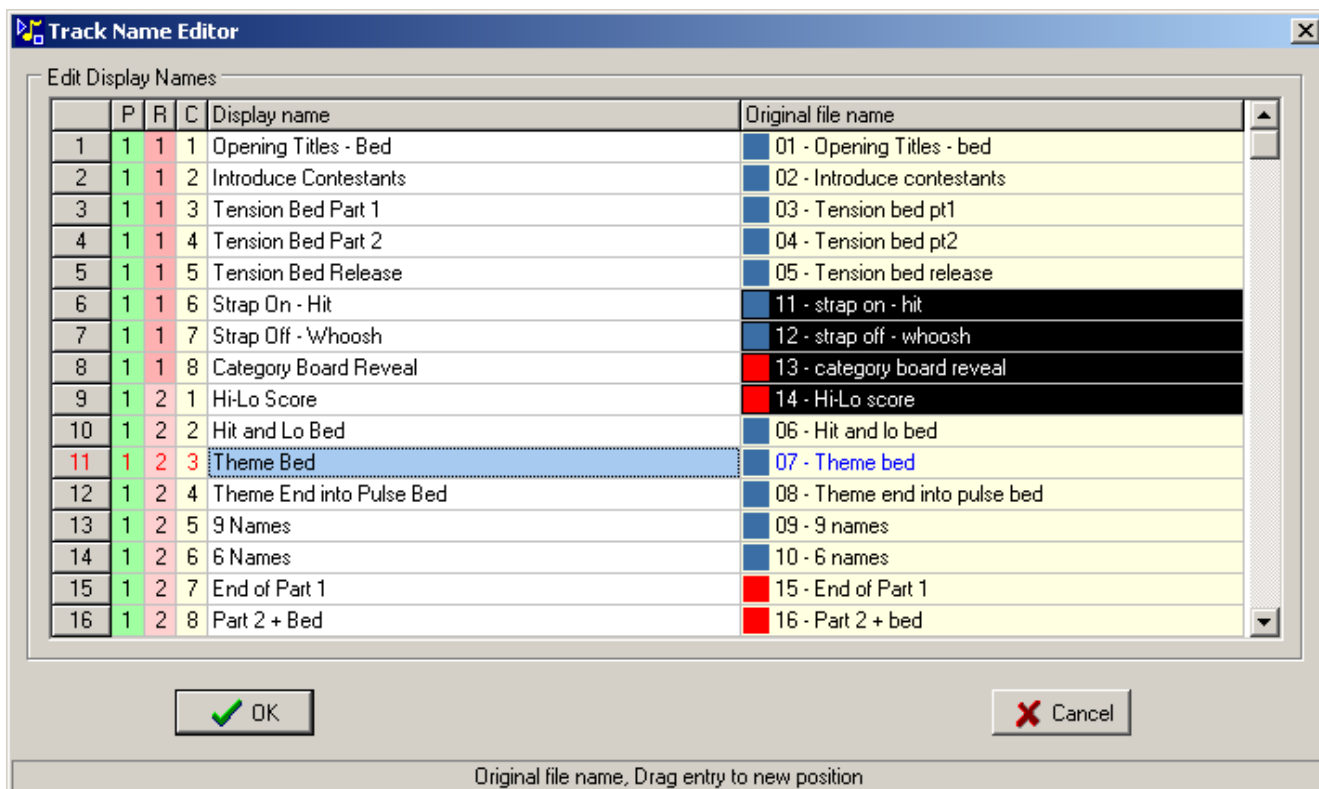

Master/Slave Links


Buttons can be linked together so that one button (Master) can Play or Stop any number of other buttons (Slaves), alternatively buttons may be grouped so that playing any button in the group will stop all others in that group.

Special features such as Voice Over, Pause/UnPause and AutoPan can also be control via Master/Slave operation.

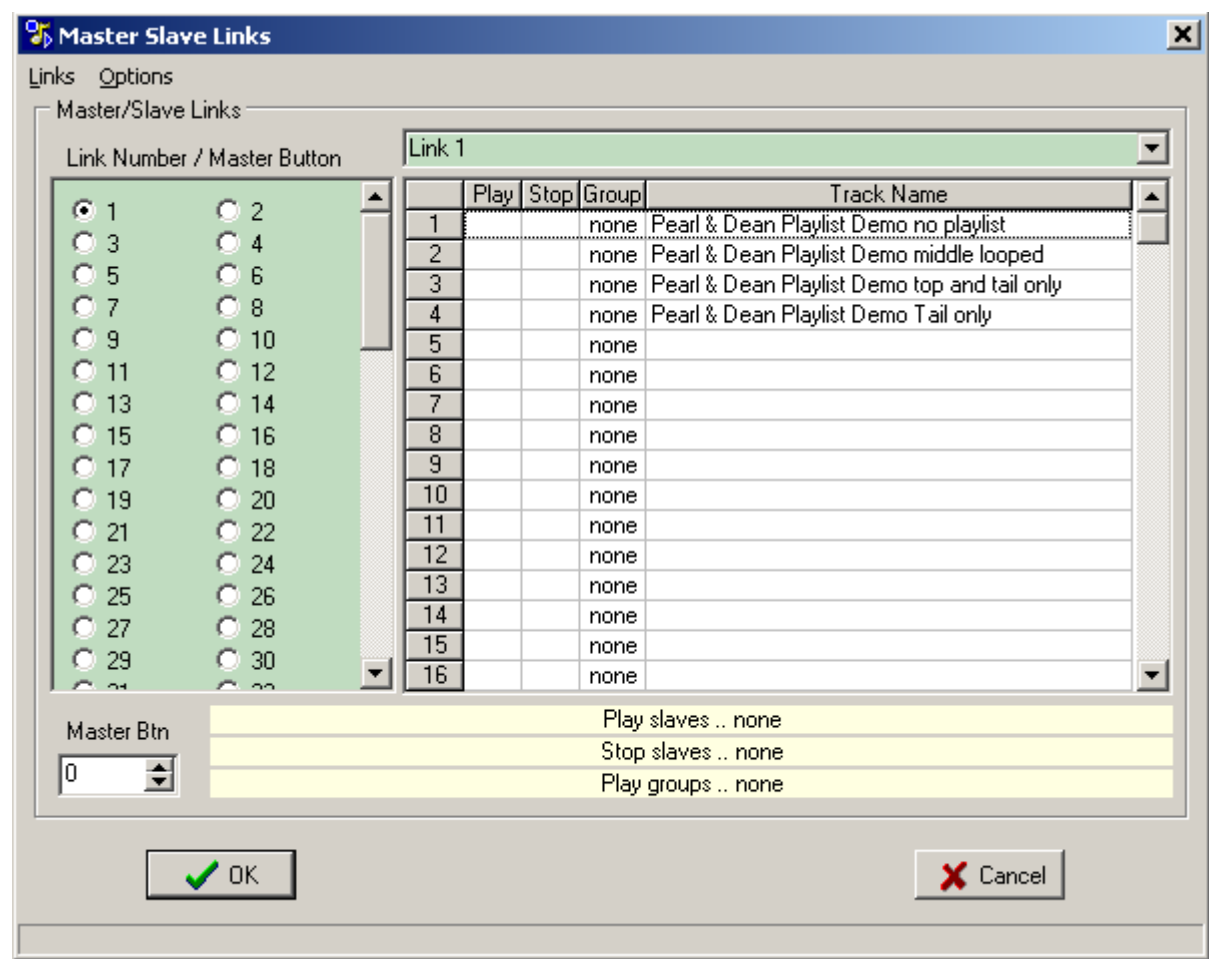


Links

There are 100 Links that can be used, clicking on the left hand panel will select the appropriate link for editing, or alternatively selecting the link from the drop down list, the currently selected link is highlighted in blue text

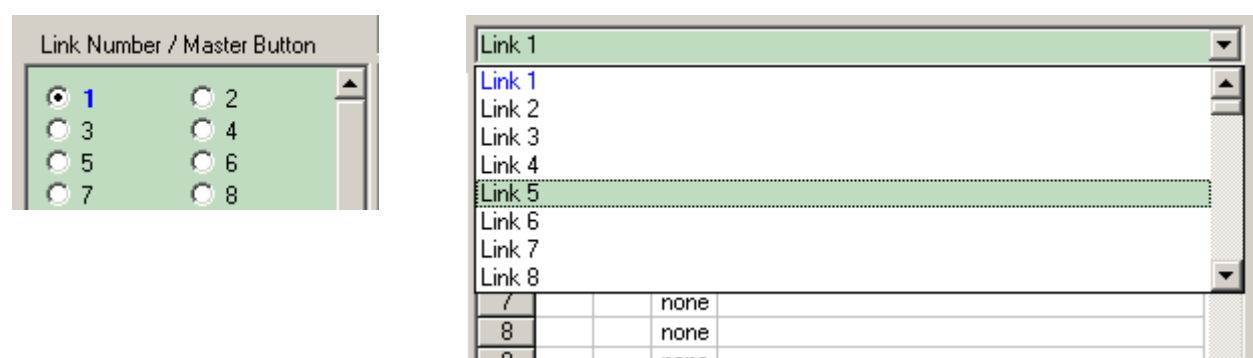


The Master button for a link can be typed in to the spin edit box or allocated by clicking the button number on the left hand side of the list, the selected Master button is highlighted in blue

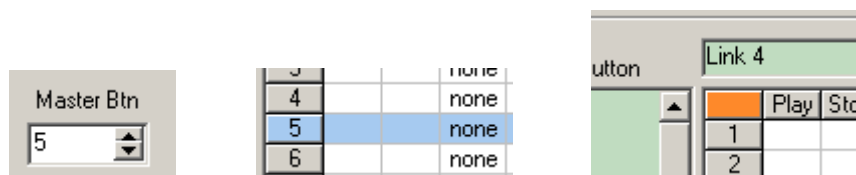

A link can be deleted by entering 0 as the Master Button or clicking the top left cell in the display grid - shown in orange above.


Play Slaves (those that will Play when the Master button is played) and Stop Slaves (those that will Stop when the Master is played) are allocated by clicking the appropriate cell in the list

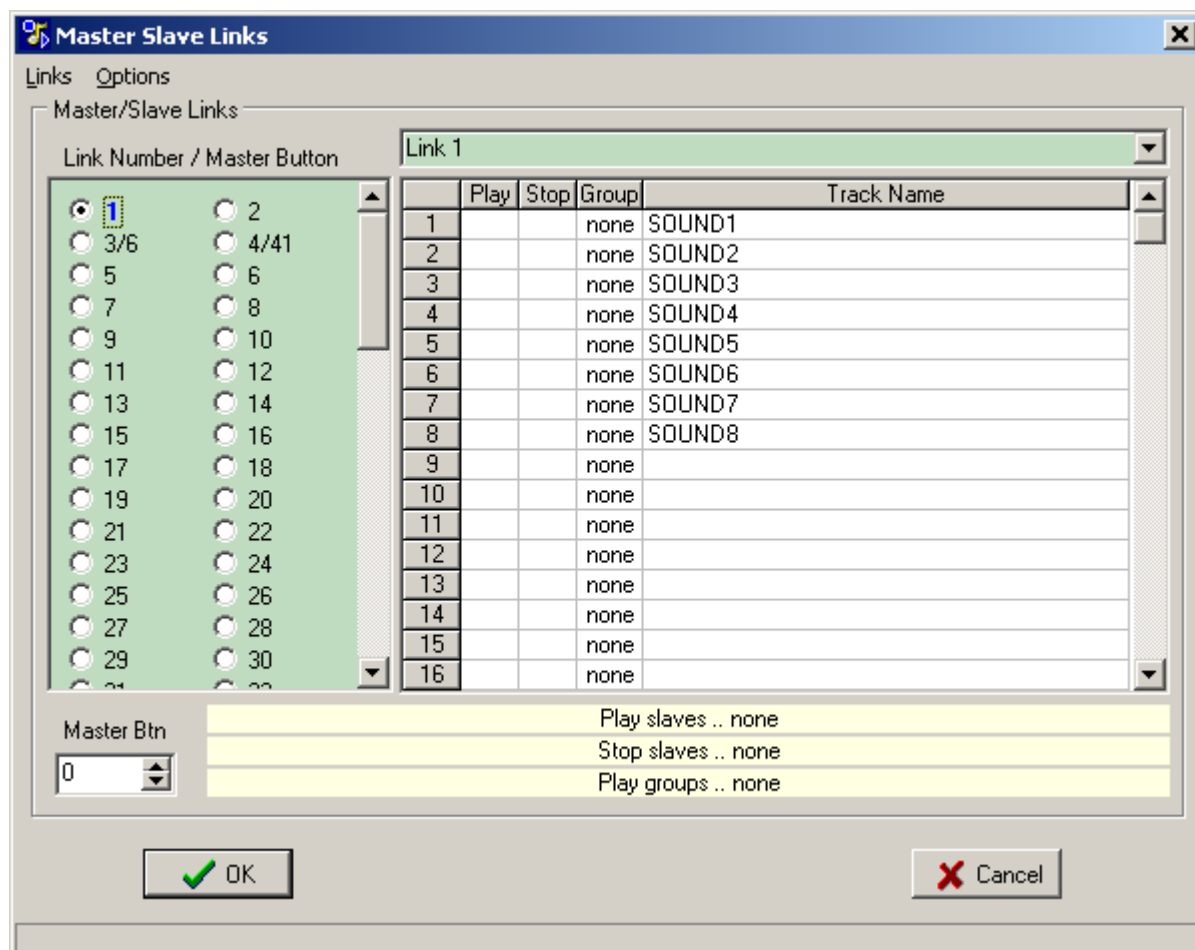


In the image above Link 1 is selected and is highlighted blue in the left hand panel, it has no master or slave buttons allocated.

Links 3 and 4 do have allocations and the master button is shown to the right of the link number i.e. 3/6 and 4/41

Selecting Link 3 shows the button allocations, buttons 1,2,3,4,5 will stop and button 7 will play when the master button 6 is played.

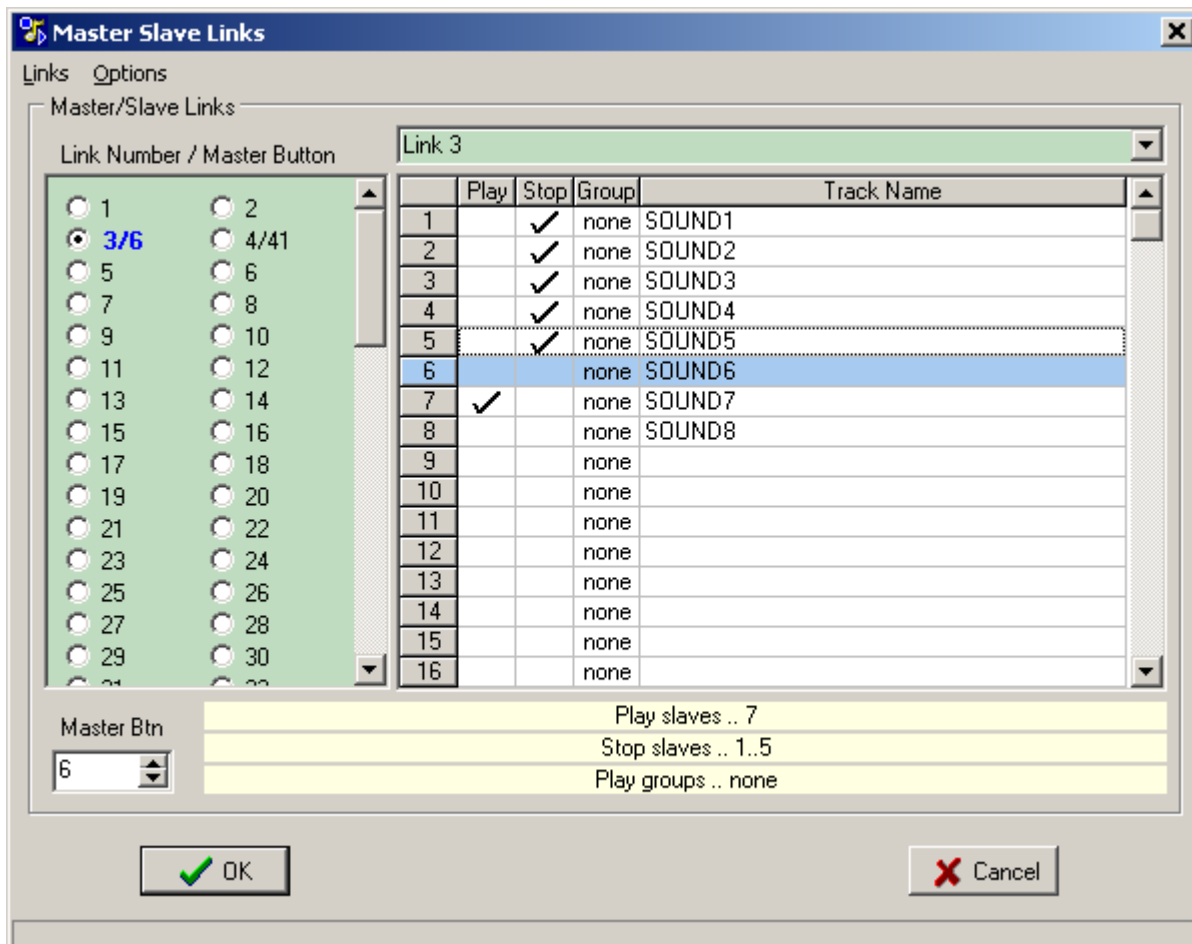


Similarly for link 4 buttons 39,40 will play and buttons 42,43,44,45,46 will stop when the master button 41 is played

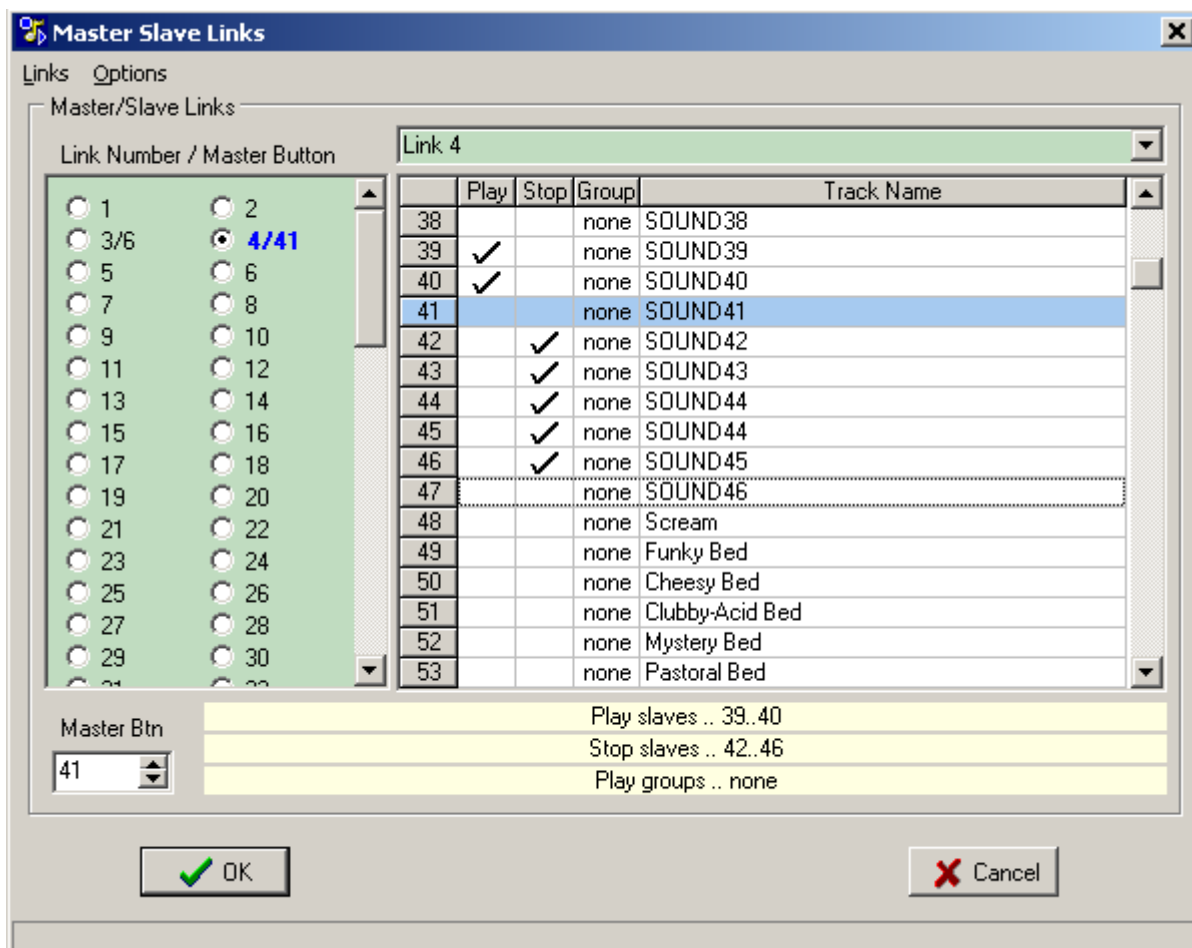


A summary of the allocated buttons is shown at the bottom of the button allocation list

The individual links can be named by typing into the drop down list selection

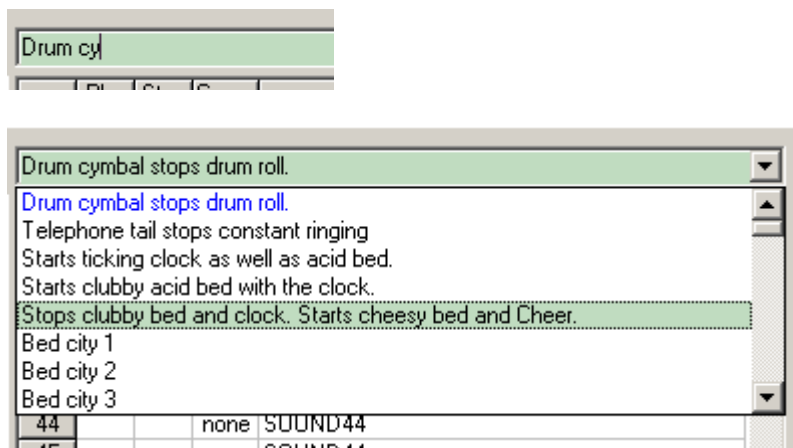


The links can be sorted into Master Button order using the Global|Sort Master/Slave Links option

If the Master/Slave links are currently disabled the message below appears at the bottom of the dialog box

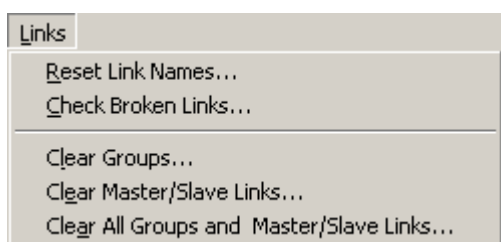

The Links menu allows for the link names to be reset to their default of Link 1.. Link 99, and all Groups and Links to be cleared.

In addition the Links can be analysed and broken links displayed, a broken link is defined as one where the Master button is unused or all the Play and Stop slaves are pointing to unused buttons.

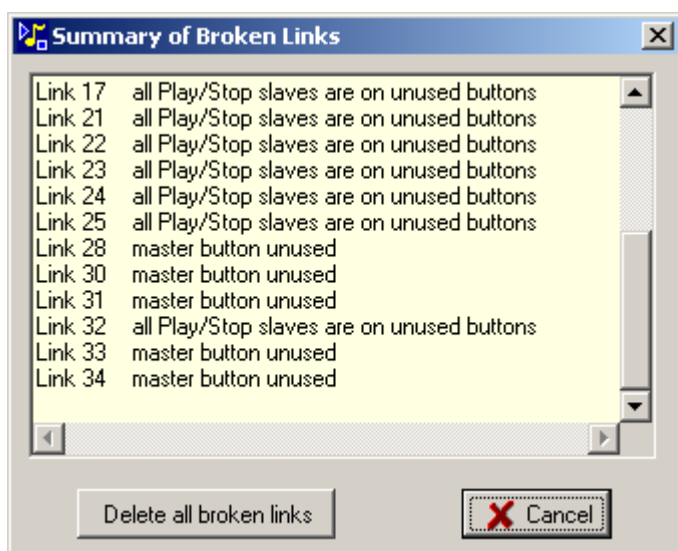

An option to delete all broken links is available

An additional menu is available by right-clicking the Play or Stop columns.

	Play	Stop	Group	Track Name
1			none	dinn 16 NR AR
2				
3				
4				
5				
6				
7			none	
8				

Play Groups

As an alternative to using Links for collections of exclusive buttons Groups may be more appropriate.

There are 25 separate button groups and only one button assigned to a particular group can be playing at any one time, so playing a button will stop all other buttons in the group.

By default the buttons will not be assigned to any group and will show as "none" in the Group column

	Play	Stop	Group	Track Name
1			none	Pearl & Dean Playlist Demo no playlist
2			none	Pearl & Dean Playlist Demo middle looped
3			none	Pearl & Dean Playlist Demo top and tail only
4			none	Pearl & Dean Playlist Demo Tail only
5			none	
6			none	

Left clicking on the appropriate group cell will increment the group number and then roll back to none.

Right clicking the group cells displays a popup menu

✓ none	Group 10	Group 20
Group 1	Group 11	Group 21
Group 2	Group 12	Group 22
Group 3	Group 13	Group 23
Group 4	Group 14	Group 24+
Group 5	Group 15	Group 25!
Group 6	Group 16	Group A*
Group 7	Group 17	Group B*
Group 8	Group 18	Group C*
Group 9	Group 19	Cancel

Selecting an item will set the group value for that button, the screen shot below shows 5 buttons assigned to group 3.


The Play selection on button 7 is coloured red as it belongs to a Master/Slave link and is now invalid - Groups and Play Links cannot act on the same button and will be automatically deleted on exiting from the Links dialog.

	Play	Stop	Group	Track Name
1			none	SOUND1
2			3	SOUND2
3			3	SOUND3
4			none	SOUND4
5			3	SOUND5
6			none	SOUND6
7	✗		3	SOUND7
8		✓	3	SOUND8
9			none	
10			none	
11			none	
12			none	


The summary text in the lower part of the window shows the number of buttons assigned to each group.

Play groups .. G3:5						
SOUND2	SOUND3	SOUND4	SOUND5	SOUND6	SOUND7	SOUND8
2dG3 00:12	3dG3 00:12	4d 00:12	5dG3 00:01	6d 00:12	7dG3 P00:09	8dG3 P00:04

As an alternative to setting up the Play Groups in this dialog box the groups can be assigned from the main screen by shift+ctrl right-clicking on a button

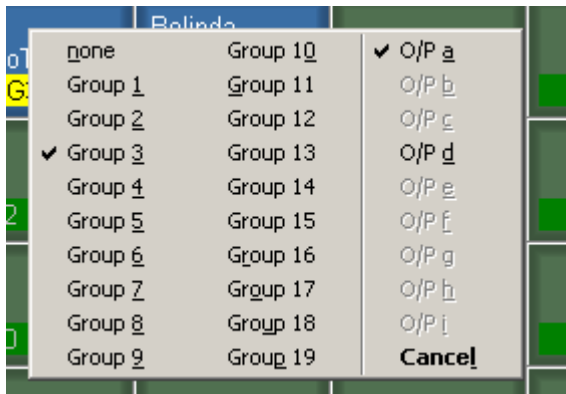


If the Groups and Master/Slave links are disabled then the group selections will be greyed out

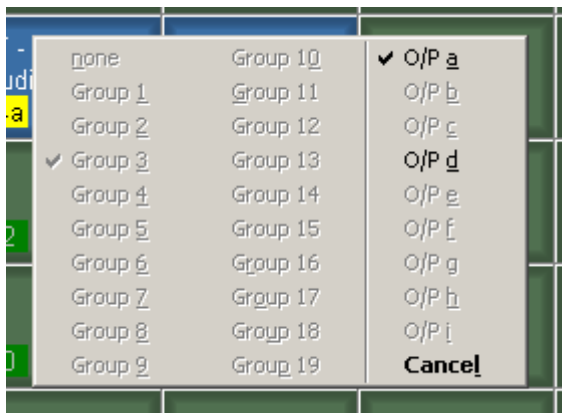

Buzzer Groups

In the above description of Play Groups there were 25 exclusive groups numbered 1..25, and 4 buzzer groups with legends A..D

Buttons assigned to Buzzer Groups act slightly differently to Play Groups, in that if any button that belongs to a buzzer group is played all other members of that buzzer group are prevented from being played for the duration of a timeout period.

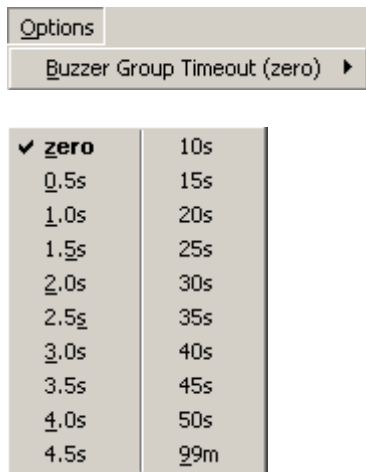

The intended use of this is in "Bell and Buzzer" rounds in quiz shows where only the first person in a team to press the the 'bell' or 'buzzer' actually triggers the sound effect, other presses are locked out.

This Buzzer Group mode of operation is only available when the Play command is received from an external source ie GPI or Midi, HotKey and mouse click operation is not affected by the presence of Buzzer Groups.

The Buzzer Group timeout can be set between zero and 99 minutes, with the longer timeouts it will often be necessary to reset the timeout period, say for the start of the next quiz round. The timeouts can be reset either by toggling the GPIs off/on or by use of the special play group 25.

Play group 25 is shown in the group selection windows as 25! meaning that it acts differently from groups 1..24.

When any button in group 25 is played directly (not with a Play Next) it will play and also clear the Buzzer Group timeouts. In practice this could be a button loaded with silence and operated by an external GPI triggered by someone supervising the quiz game.

Play Stack


Play group 24 has a secondary function in that it will fade out any tracks playing in the [Play Stack](#) window.

Display

The Groups and Master/Slave Links can be enabled via the [Options](#) menu or by clicking the status panel below



The button displays change to indicate any links, here button 10 has an M suffix to the button number indicating it is a Master and buttons 2, 5 and 6 have an S (Slave) suffix.

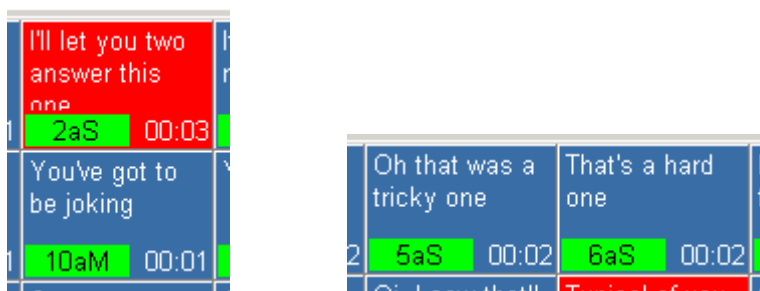

The status bar gives more information showing which Link the Master or Slave buttons are acting on.




Voice Over

Voice Over mode is a special case of Master/Slave links where the gain of the Play Slave/s is reduced under control of the Master track - Stop slaves have no meaning in this mode and will be deleted.


The Slave track/s would be already playing and when the master 'voice over' track is played the gain of the slave/s will be reduced using the fade time and law of the master track - this means the Fade In and Fade Out of the master track must be non-zero.

To convert a Master/Slave link to be a VoiceOver link:-


First select an existing link - in this case #17 that has a master button 35 and one play slave button 34

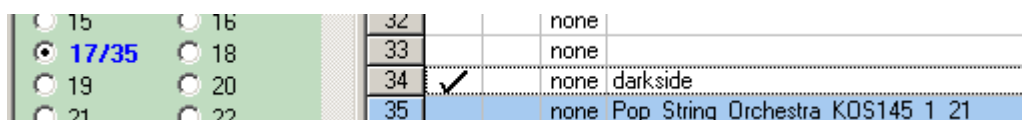

Right-click the link number - the link must be assigned a Master button for the popup options to be displayed

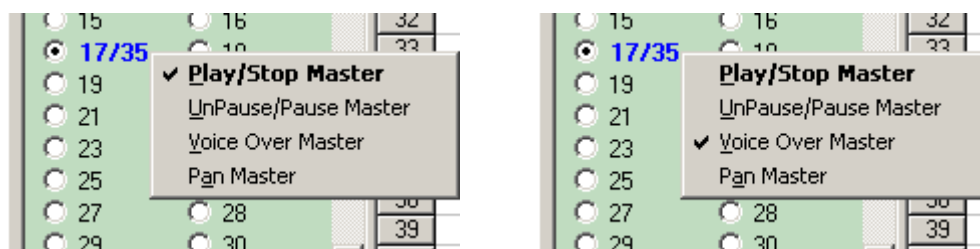


Check the Voice Over master option, at which point the link number will be underlined and the 'tick' in the play column will change to a fade down/up image.

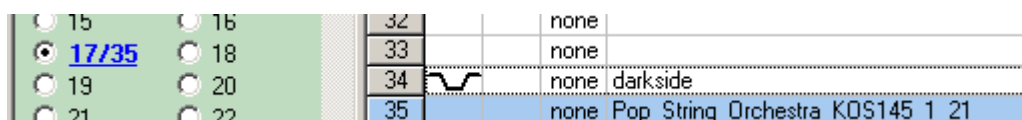

This means that track 34 will be faded down for the duration of the master track 35

The amount of gain reduction is set on each individual slave via the [Audio](#) button menu

When the Master/Slave setup window is closed a check is made of the buttons acting as Voice Over masters, if any have zero Fade In or Fade Out times a warning prompt box will appear indicating which buttons have to be modified.

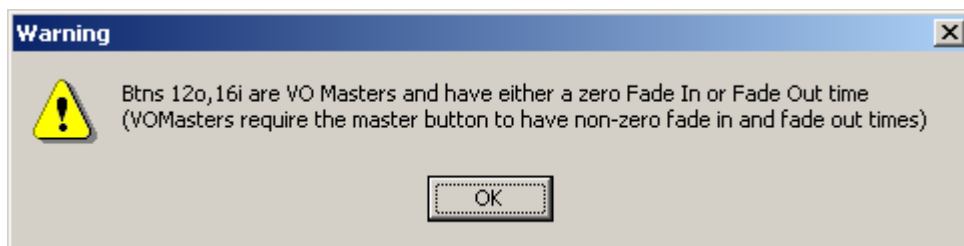


AutoPan

The AutoPan feature allows one or more slave buttons to have their Pan setting modified under the control of a Master button.


In a similar way to the Voice Over mode described above the pan transition is triggered by the Fade In and Fade Out of the Master track.

For AutoPan the starting point is the normal Pan value defined in the Audio Setup dialog, the end value is an alternative value defined in the [Audio SetUp](#) dialog by right-clicking the pan bar.

The AutoPan mode is selected by right-clicking the appropriate Link number and checking Pan Master

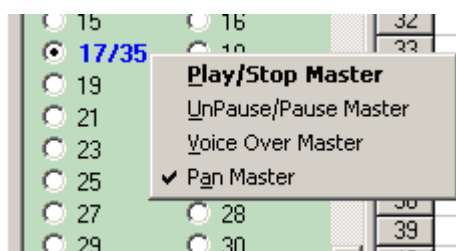


The selected play slave entries will have a double headed arrow displayed indicating that button is now an AutoPan slave.

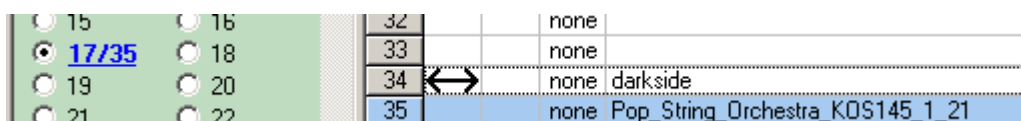

UnPause/Pause

The UnPause/Pause mode is selected by right-clicking the appropriate Link number and checking UnPause/Pause Master

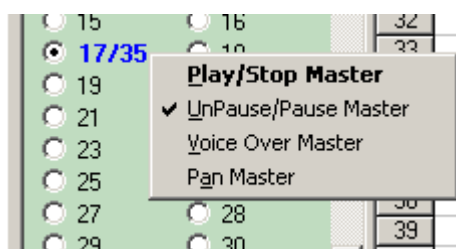

The selected stop slave entries will have a double line displayed indicating that button is now an Pause slave and similarly the selected Play slaves will have a double line with diagonal cross indicating the button is an UnPause slave

☐ 15	☐ 16	☐ 32		none
☒ 17/35	☐ 18	☐ 33		none
☐ 19	☐ 20	☐ 34	⚡	none darkside
☐ 21	☐ 22	☐ 35		none Pop_String_Orchestra_KOS145_1_21

Link Diagrams

With a complex set of Master/Slave links it is often difficult to establish which buttons are linked, an example is shown below. The Master Slave setup dialog window can provide the information but not in a readily useful format.

		sample_3	temp		
4	5aS 00:04	6aS 00:09	7		
sample_7	sample	sample	sting		
14aMS 00:04	15aM 00:04	16aM 00:04	17aS 00:04		
s	sample	sample_9	WoneCouple		
24aMS 00:04	25aM 00:04	26aS 00:04	27aS 00:03		
	Hotel_California_high	sample_2			
34	35aS 00:52	36aS 00:04	37		

A keyboard shortcut Ctrl+Shift+left mouse press can be used to show the master/slave links graphically, using the key combination on button 15 shows button 14 is a play slave (line is green).


		sample_3	temp		
4	5aS 00:04	6aS 00:09	7		
sample_7	sample	sample	sting		
14aMS 00:04	15aM 00:04	16aM 00:04	17aS 00:04		
s	sample	sample_9	WoneCouple		
24aMS 00:04	25aM 00:04	26aS 00:04	27aS 00:03		
	Hotel_California_high	sample_2			
34	35aS 00:52	36aS 00:04	37		

Testing the reverse link by clicking on button 14 shows a white line indicating it is a play slave from buttons 15 and 25, also button 14 is a play master to a button off the screen on another page (near horizontal green line).

Note the yellow border at the top of the page, this is drawn around the SpotOn screen to indicate the image is temporarily frozen whilst the graphics are displayed.

		sample_3	temp		
4	5aS 00:04	6aS 00:09	7		
sample_7	sample	sample	sting		
14aMS 00:04	15aM 00:04	16aM 00:04	17aS 00:04		
s	sample	sample_9	WoneCouple		
24aMS 00:04	25aM 00:04	26aS 00:04	27aS 00:03		
	Hotel_California_high	sample_2			
34	35aS 00:52	36aS 00:04	37		

Clicking on button 25 confirms some of the previous links and in addition displays button 36 as a Stop slave to button 25 (line is blue).

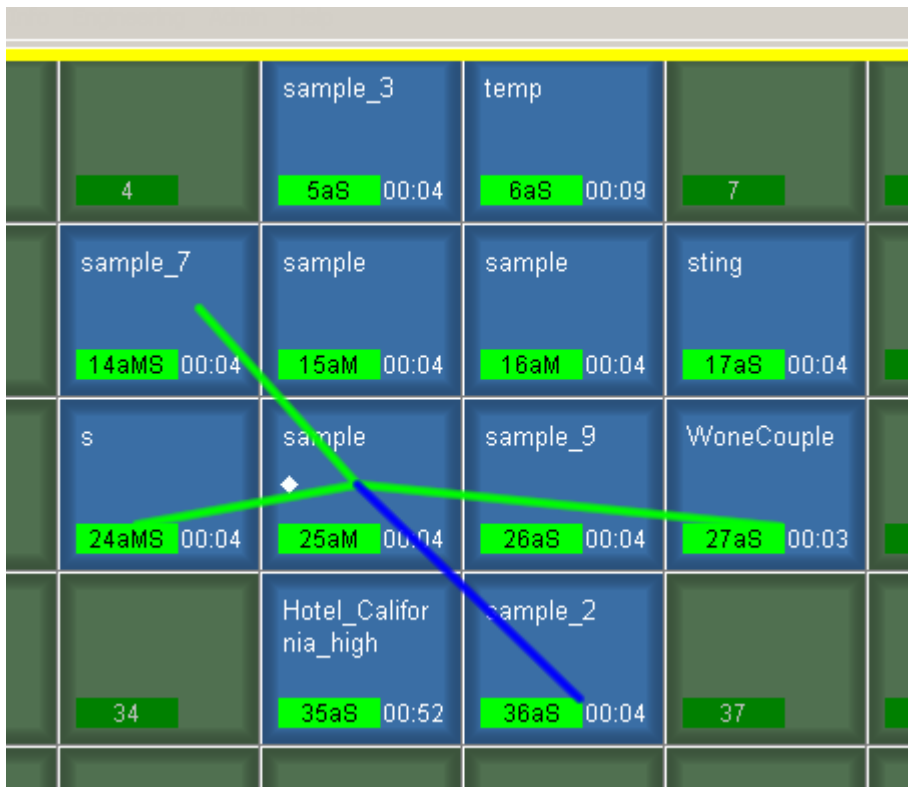


A reverse interrogation of button 36 shows it is a stop slave to master button 25 (line is magenta)



If instead of just using Shift+Ctrl+Left mouse press to display the existing links Shift+Ctrl+left mouse drag can create new links.


Below the Shift+Ctrl+Left mouse button has been dragged from button 52 to 54 drawing a thick red line, releasing the left mouse button as in 'drag and drop' will show a confirmation dialog.

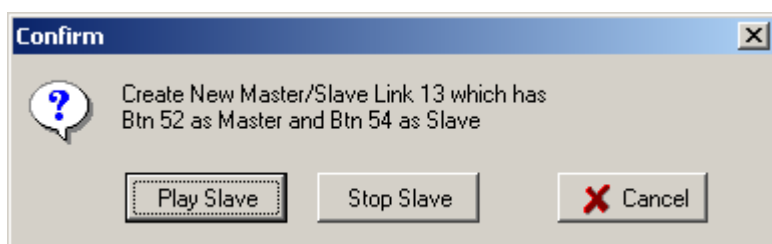


The next unused Master/Slave link will be selected for this new link - in this example link 13



Play and Stop links can also be deleted using the same drag/drop method, for example if the mouse is Shift+Ctrl drag and dropped between buttons 52 and 54 as below

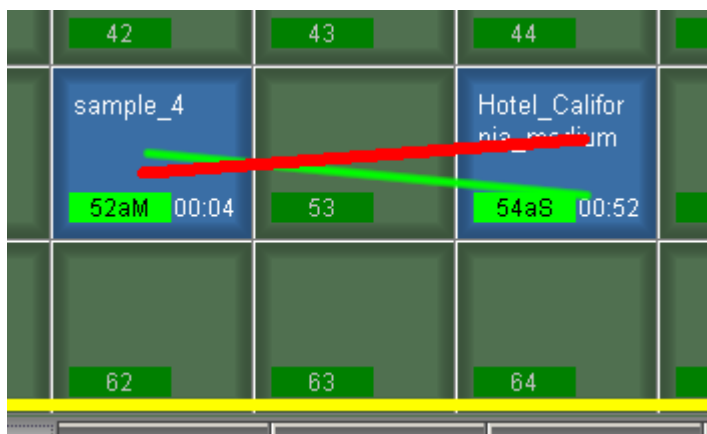

then a prompt dialog will ask if the link is to be deleted.

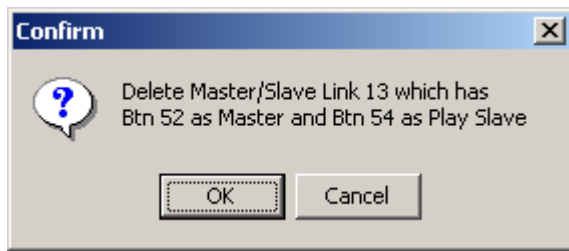


Play Stack

A Play Stack is built into SpotOn and runs independently of the main SpotOn operation, the intended use is for playing out audience 'warm up' or interval music.

The stack can be set to play a set of tracks and fade out after a predetermined time or loop until stopped manually.

A fade out of the Play Stack can be triggered from the main SpotOn window by playing any button in [Group 24](#).


Tracks can be loaded by Ctrl+Left click drag (copy button mode) from the SpotOn buttons or by right-clicking an entry in the Play Stack and selecting Load/Insert.

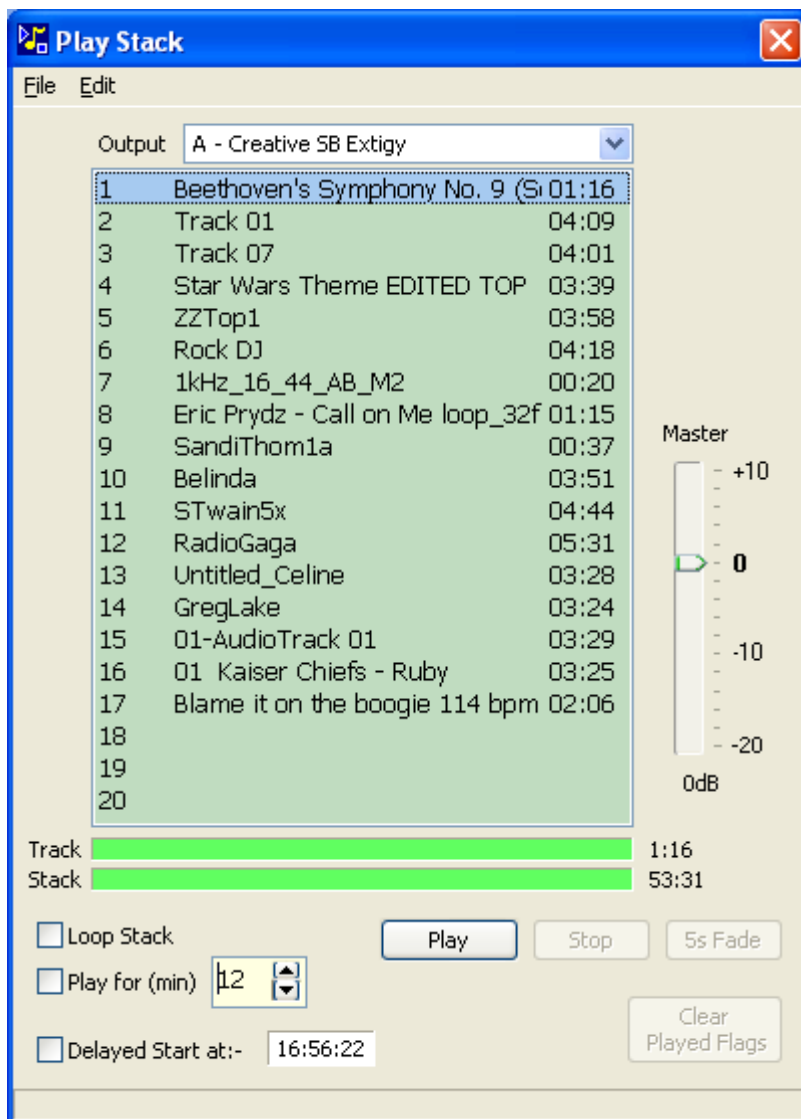

The image above shows 17 tracks loaded and track 1 highlighted, the track names are taken from the audio filenames and truncated to fit the screen, there is no option to change the displayed track name.

Clicking on Play will start playing the stack in sequence from the highlighted button, the two bargraphs below the track list show the time remaining for the track on the upper bargraph and the time remaining in the whole stack on the lower bargraph.

The track entry will be shown in red text when it is playing.

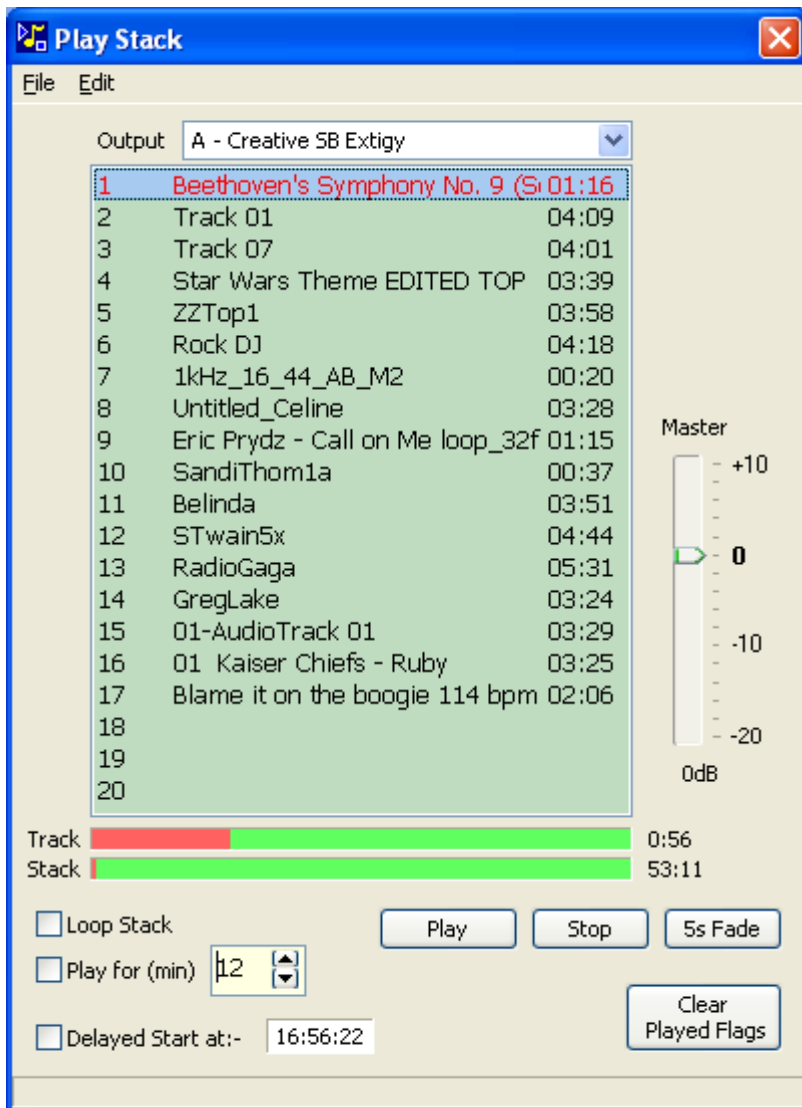

When the 'Loop Stack' checkbox is checked as shown below, the lower bargraph is disabled as the duration of a looped stack is infinite.




Tracks can be drag and dropped within the stack to change the playout order, in the example below, track 13 is being dragged and when dropped will be inserted above the track shown with yellow text and become track 8. Tracks currently numbered 8..12 will be moved down the stack one position and be renumbered.

1	Beethoven's Symphony No. 9 (S	01:16
2	Track 01	04:09
3	Track 07	04:01
4	Star Wars Theme EDITED TOP	03:39
5	ZZTop1	03:58
6	Rock DJ	04:18
7	1kHz_16_44_AB_M2	00:20
8	Eric Prydz - Call on Me loop_32f	01:15
9	SandiThom1a	00:37
10	Belinda	03:51
11	STwain5x	04:44
12	RadioGaga	05:31
13	Untitled_Celine	03:28
14	GregLake	03:24
15	01-AudioTrack 01	03:29

Stack after drag/drop of track 13


1	Beethoven's Symphony No. 9 (S	01:16
2	Track 01	04:09
3	Track 07	04:01
4	Star Wars Theme EDITED TOP	03:39
5	ZZTop1	03:58
6	Rock DJ	04:18
7	1kHz_16_44_AB_M2	00:20
8	Untitled_Celine	03:28
9	Eric Prydz - Call on Me loop_32f	01:15
10	SandiThom1a	00:37
11	Belinda	03:51
12	STwain5x	04:44
13	RadioGaga	05:31
14	GregLake	03:24
15	01-AudioTrack 01	03:29

Tracks in the stack can be freely rearranged whilst the stack is playing, the only restriction is not to remove the track currently playing.

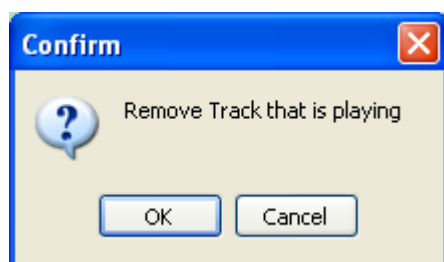


An internal flag is set as tracks are played out and the text background of the played track changes to grey, this is only an indication of the track already played and has no effect on the operation of the Play Stack.

The flags can be cleared by clicking on the 'Clear Played Flags' button

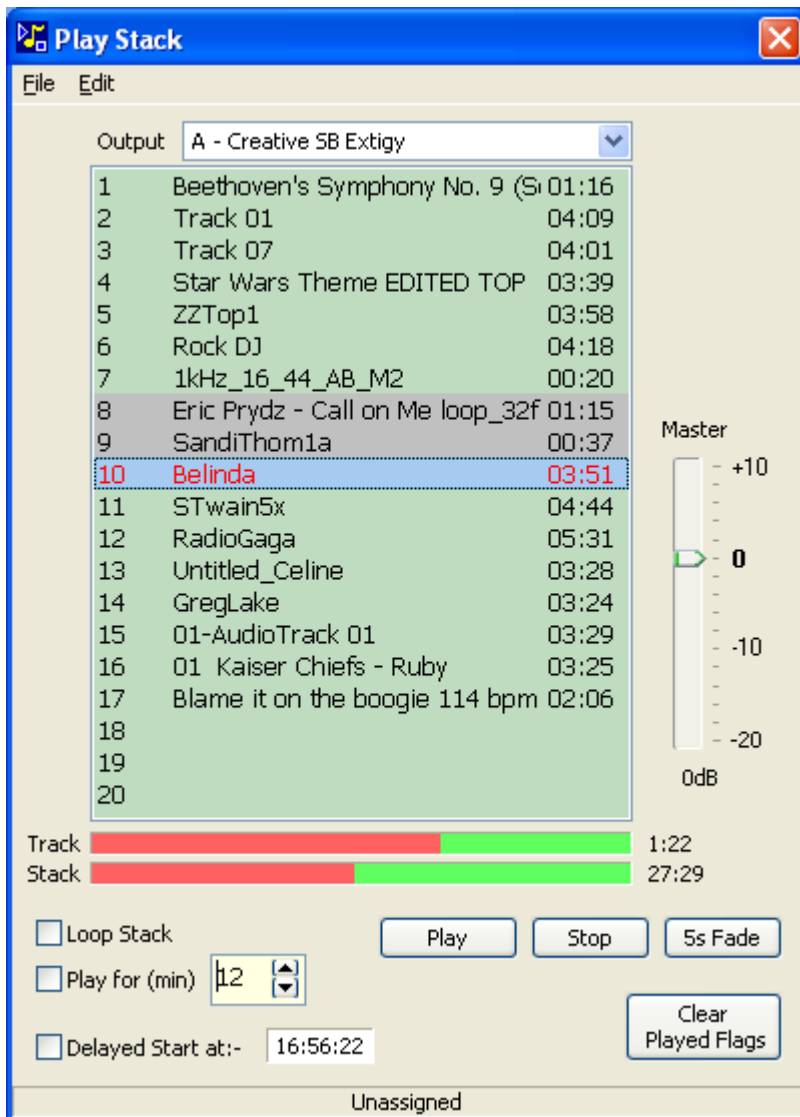


The Play Stack can be set to play for a defined length of time in the range 1..90 minutes, at the end of the time the track will fade out and stop.

This mode is set by checking the 'Play for (min)' checkbox and entering a value in the duration by typing directly or using the up/down buttons.


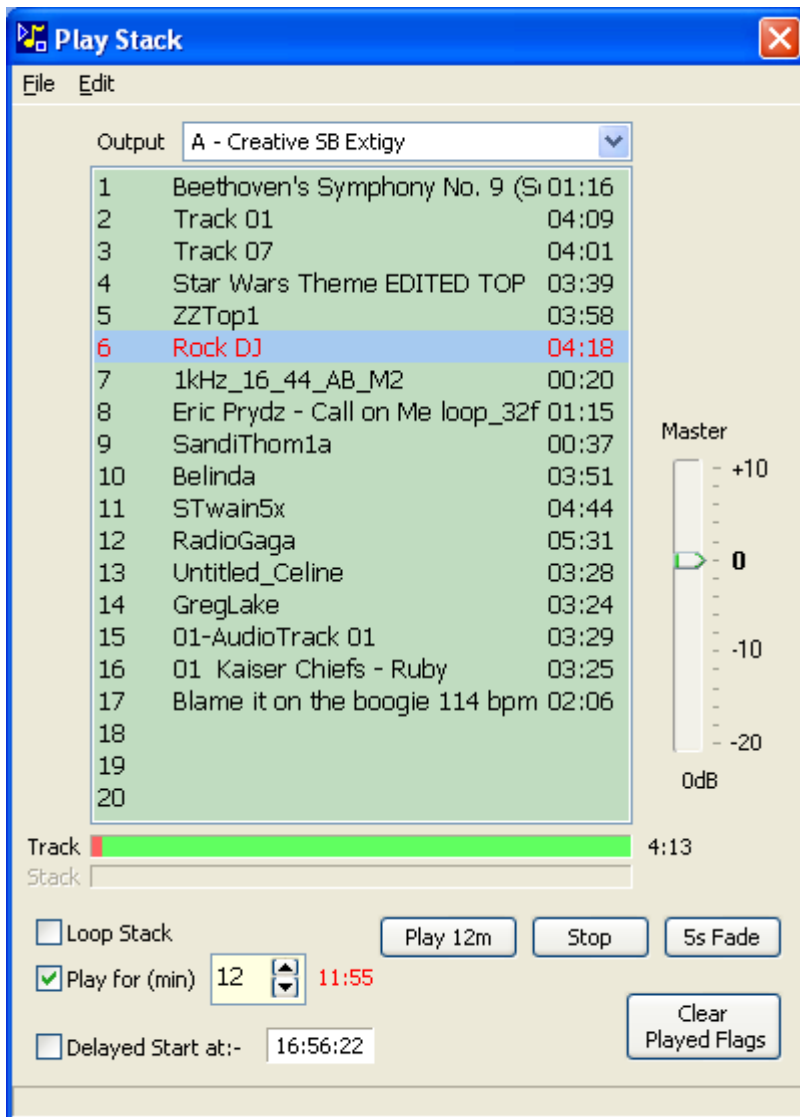


When the Play button is pressed a time remaining count down is shown in red text to the right of the duration.

The Stack Play button can be triggered from the PC clock.



Right-clicking on the time panel displays an editor dialog

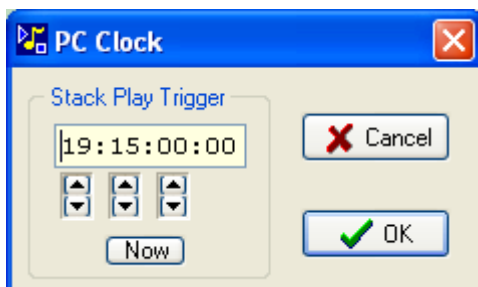


When active the start time text will be shown in red, at the point the start time is reached the stack will begin to play and the text will be shown as invalid and the checkbox cleared.

☐ Delayed Start at:-

19:15:00

When the Play Stack window is closed it will remain active and has just been hidden, it can be reopened via the SpotOn Global|Play Stack menu.

If the Play Stack is playing a track and is then closed the track will continue to play and the SpotOn status bar will show a red/yellow flashing panel with the text 'Play Stack'

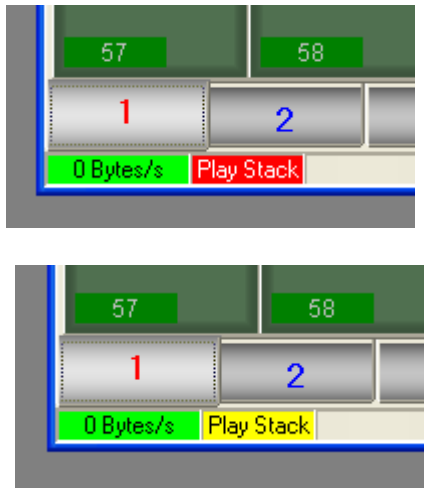

Clicking on the flashing status bar panel will reopen the Play Stack window

Playing a button in the main SpotOn window that is assigned to Group 24 will trigger a fade out of any Play Stack track currently playing.

none	Group 10	Group 20
Group 1	Group 11	Group 21
Group 2	Group 12	Group 22
Group 3	Group 13	Group 23
Group 4	Group 14	✓ Group 24+
Group 5	Group 15	Group 25!
Group 6	Group 16	Group A*
Group 7	Group 17	Group B*
Group 8	Group 18	Group C*
Group 9	Group 19	Cancel

Menus


The File menu allows basic loading and saving of the Play Stack tracks and configuration, only the track filenames are saved and the Play Stack relies on the audio files staying in the same location on the local disc drives.

Menus - File


File

Load Stack File...

Save Stack File As...

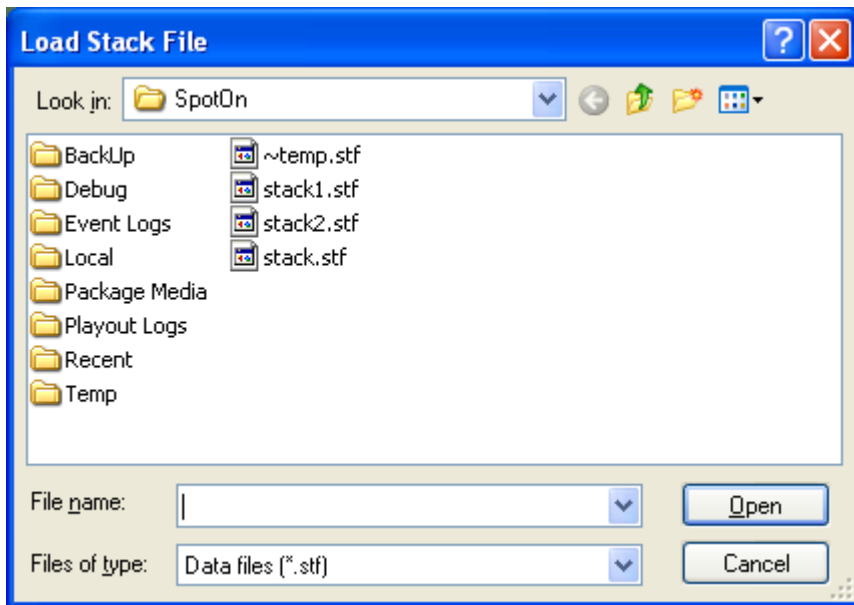


The Play Stack files are saved with the .stf file extension which may be associated with other programs, the only effect of this is that the icons shown along side the files will be different.


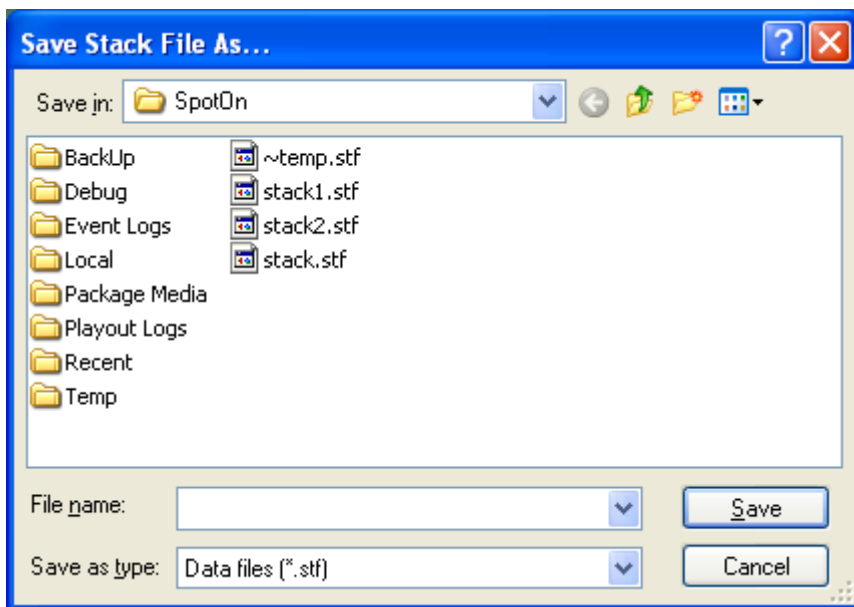


Menus - Edit


The Edit menu gives 32 levels of Undo/Redo and two options that act on all tracks

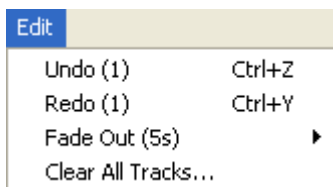


Fade Out will set the fade out time to any of the values shown below, this fade time is used at the end of a 'Play for' time or whenever the 'xs Fade' button is clicked and applies to all tracks.

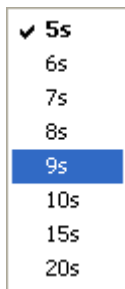

If the fade out is in progress the Fade Out button text will change colour to red and count down to the end of the fade time.




The 'Clear All Tracks' option will remove all tracks from the stack.

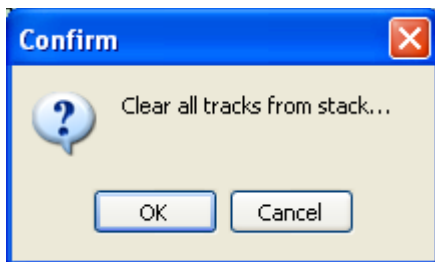


Menus- Track

The right-click menu on the tracks allows changes to be made to the individual entry.


Right-clicking on a blank track offers the load option.

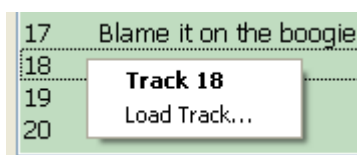


Play Stack uses the same default folder locations as SpotOn, however only *.WAV files can be loaded.

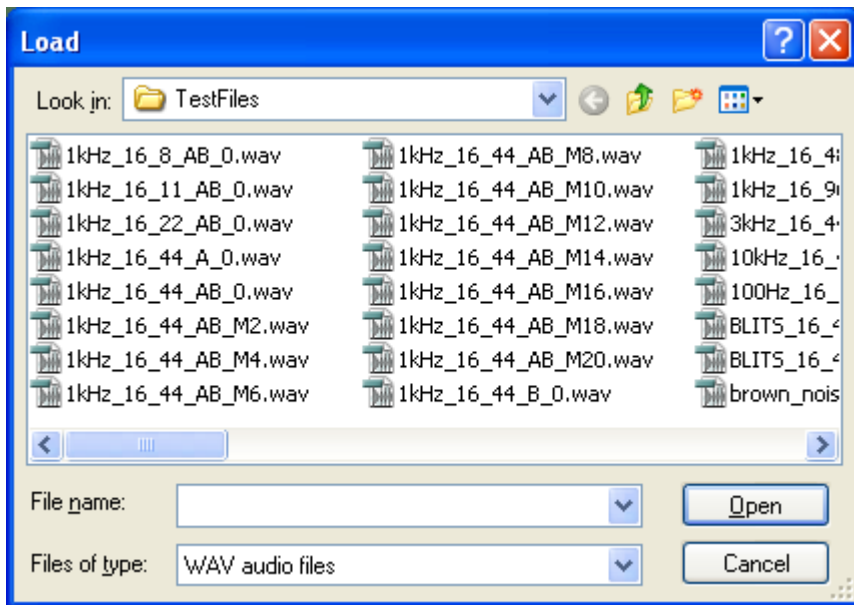

Right-clicking on an existing track will offer more options.

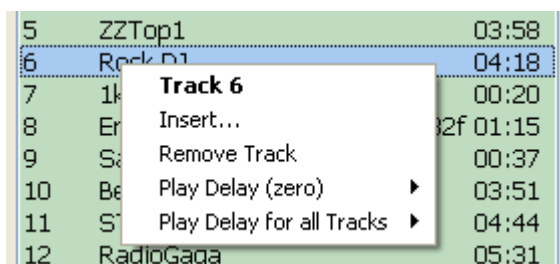

Insert will load an new track immediately above the highlighted track.

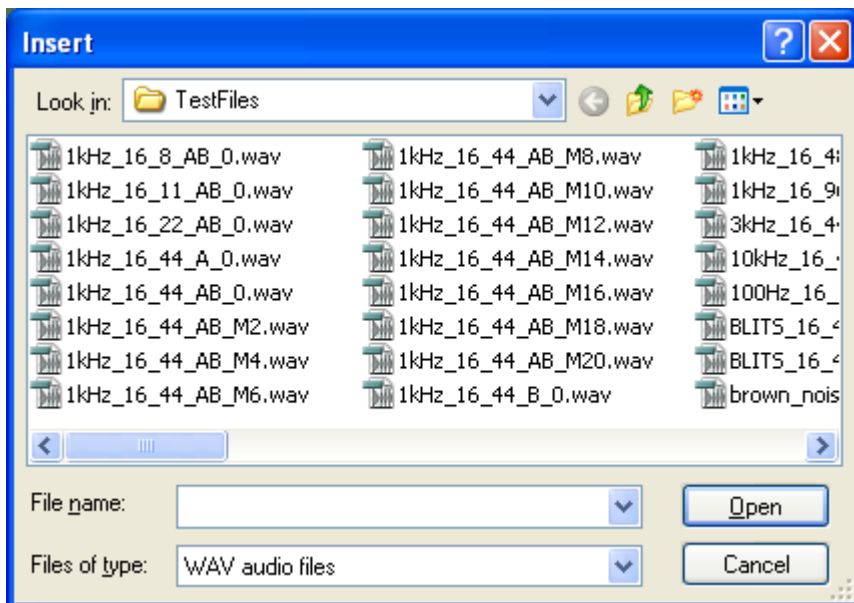

Remove Track deletes the track from the list and moves the remaining tracks to fill the gap.

Play Delay sets a pause before the track starts to play, this can be set on an individual track or globally using Play Delay for all Tracks

- ✓ zero
- 1s
- 2s
- 3s
- 4s
- 5s
- 6s
- 7s
- 8s
- 9s

If track 6 was set to have a Play delay of 7sec the entry in the list would show 'd7'


4	Star Wars Theme EDITED TOP	03:39
5	ZZTop1	03:58
6	d7 Rock DJ	04:18
7	1kHz_16_44_AB_M2	00:20
8	Untitled_Celine	03:28
9	Eric Prydz - Call on Me loop_32f	01:15

The Delay counts down when the track is played.

4	Star Wars Theme EDITED TOP	03:39
5	ZZTop1	03:58
6	d4 Rock DJ	04:18
7	1kHz_16_44_AB_M2	00:20
8	Untitled_Celine	03:28
9	Eric Prydz - Call on Me loop_32f	01:15

4	Star Wars Theme EDITED TOP	03:39
5	ZZTop1	03:58
6	d7 Rock DJ	04:18
7	1kHz_16_44_AB_M2	00:20
8	Untitled_Celine	03:28
9	Eric Prydz - Call on Me loop_32f	01:15


Options Menu

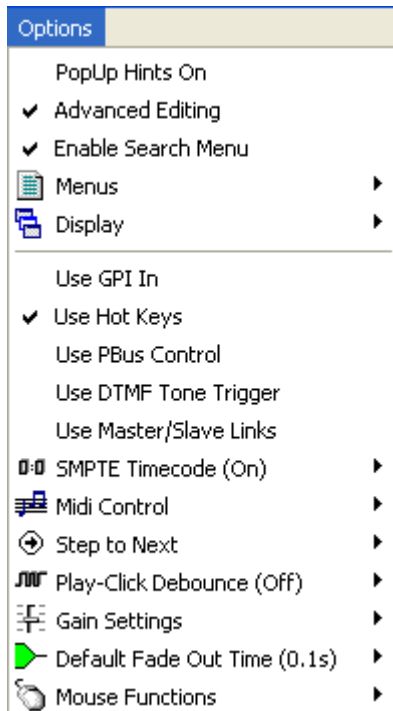


PopUp Hints On	toggle popup hint on/off
Advanced Editing	allow editing of loaded WAV files
Enable Search Menu	enables Search menu item on main menu bar
Menus	set main and popup menu options
Display	general display options
Use GPI In	enable GPIs from game port
Use Hot Keys	show button hot keys
Use PBus Control	enable remote control of SpotOn via a PBus serial link
Use DTMF Tone Trigger	enable triggering from external DTMF tones
Use Master/Slave Links	enable master/slave links
SMPTE Timecode	enable int/ext SMPTE LTC timecode to trigger buttons directly and via
Midi Control	Midi enabling options
Step to Next	enable juke box mode
Play-Click Debounce	use hold off time between touchscreen presses
Gain Settings	set overall gain offset and fade in/out depth
Default Fade Out Time	set fade on all subsequently loaded tracks
Mouse Functions	change function of mouse buttons

Advanced Editing


When this item is checked it allows the user to edit the audio data file being used by SpotOn, a warning message box is shown prior to any editing operation reminding the user that this mode is active.

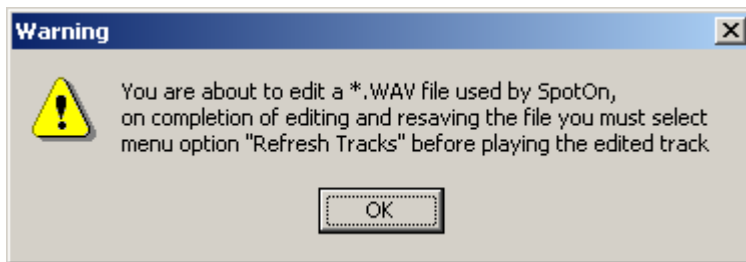

Menus




Menu Icons will toggle menu graphical icons on/off

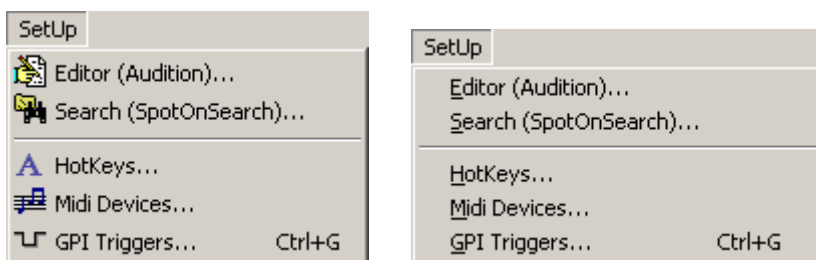

The Group/Output selection option changes the format of the button popup menu when a button is shift+ctrl right-clicked, with the option unchecked the full range of Group assignment is available.

✓ none	Group 10	Group 20
Group 1	Group 11	Group 21
Group 2	Group 12	Group 22
Group 3	Group 13	Group 23
Group 4	Group 14	Group 24+
Group 5	Group 15	Group 25!
Group 6	Group 16	Group A*
Group 7	Group 17	Group B*
Group 8	Group 18	Group C*
Group 9	Group 19	Cancel

With the item checked only Groups 1..19 are available for selection but in addition the output device can now be assigned to any of the first nine output devices.

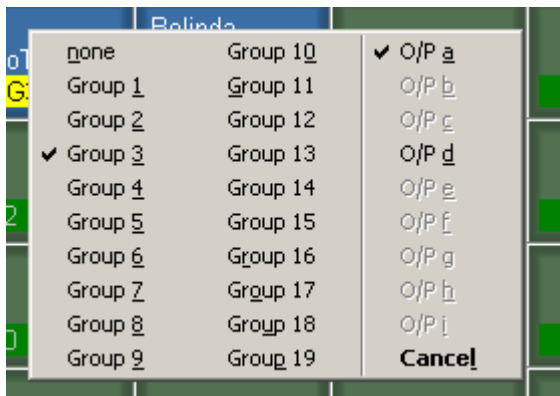

Display

Start Maximized	
☒ Start with Blank Session	
Start with "New" Session	
AutoShow Session Notes	
Bring to Front with Scroll Lock	
Individual Button Fonts	
Friendly Output Names	
Button Images	
Disable Button Text	
Highlight Buttons Playing	
AutoLoad Button Images	
Show Tracks Already Played	
Reset Tracks Played Ctrl+U	

Start Maximised

[Start with Blank Session](#)

[Start with 'New' Session](#)

Auto Show Session Notes

[Bring to Front with Scroll](#)

on start up display is maximised to full screen, only when loading Blank SpotOn starts without loading previous session

SpotOn loads a default template session

show notes window on opening sessions

bring main window into focus whenever Scroll Lock is pressed

Individual Button Fonts

Use Friendly Output Names

[Button Images](#)

Disable Button Text

[Highlight Buttons Playing](#)

AutoLoad Button Images

[Show Tracks Already Played](#)

Reset Tracks Played

allows Trackname font to be set separately for each button

use names defined in [Output Device Assign](#)

allows bitmap images to be shown on buttons

removes all text from all buttons allowing button images to be seen in draws flashing corners on the buttons that are playing

automatically loads button images associated with audio files

indicate tracks that have been played in this session

clear Tracks Played indications (Ctrl+U)

Display - Start with Blank Session

Instead of loading a temporary file on start up to restore the state of the program to be the same as when it was last shut down, this option when checked loads a blank session file.

Display - Bring to Front with Scroll Lock

Hotkeys will only trigger SpotOn buttons when SpotOn is the active application, for instance if Adobe Audition is being used and the SpotOn hotkey "F1" is pressed the key press will be handled by Audition and not SpotOn.

In order to ensure that SpotOn is the active application before using hotkeys the Scroll Lock key can be used to make SpotOn active.

It is recommended that a double press of Scroll Lock is used so that the Scroll Lock state is left unchanged, very few applications make use of the Scroll Lock state but some unusual behaviour may be noticed when navigating spreadsheets if Scroll Lock is on.

Display - Individual Button Fonts


With the Individual Button Fonts option checked the font used to display the Trackname on each button can [changed independently](#).

Display - Button Images

Normally a button consists of a flat or shaded edge plain colour background with text and symbols drawn ontop




Images can also be used as the button background

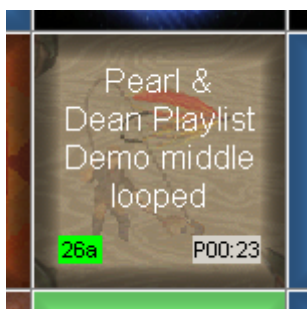

The images are enabled by this menu option and the specific image is allocated to the button via the button right-click [Display properties](#) dialog.

Highlight Buttons Playing

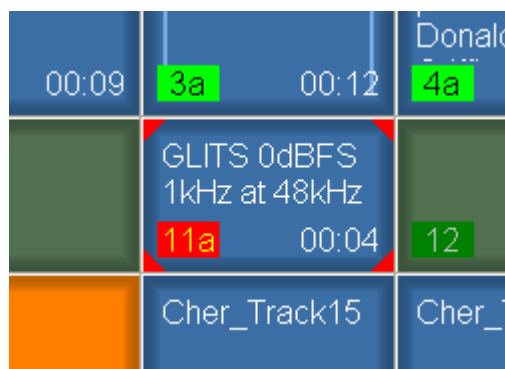

In addition to the flashing button number the corners of the button can flash in sync with the button number.

Show Tracks Already Played

With this option checked the colours of the buttons played will be set to black, so indicating those tracks already used. The button colours can be restored by using the Reset Tracks Played option or the Ctrl+U keyboard shortcut.

Segment of screen before any track is played




Same segment after playing buttons 2,4,15,18,25 and 28



Hot Keys

Each button can be assigned a hot key so that individual tracks can be played out directly from the keyboard, this option enables the assigned HotKeys.

The HotKeys as assigned to buttons via the [Button right-click menu](#)

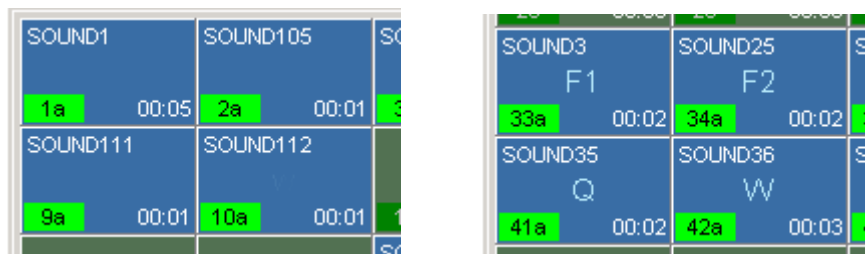


SMPTE Timecode




The options are to enable/disable triggering from all SMPTE timecode sources and to use the [Timecode Trigger List](#)


Step To Next Track



This allows consecutive tracks to be played out by pressing the spacebar or GPI/Midi signals, when this option is selected the track number of the active button will be shown with a white background or the button will have white diagonal corners. The active button can be changed by navigating around the page with the cursor keys, left, right, up and down arrow keys along with Home and End

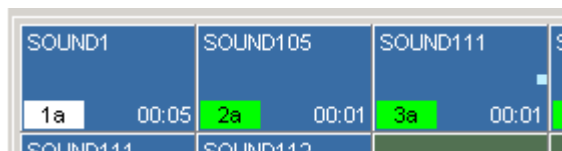

Pressing the spacebar will play the currently active track and make the next button active ready for payout.

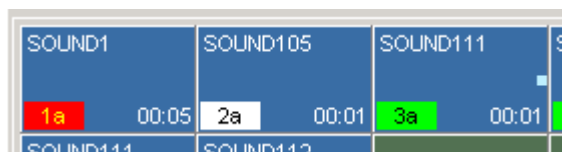

This newly active button can be played at any time by pressing the spacebar, see [GPI Assignments](#) for triggering function externally.

if Skip over Muted Buttons is checked then buttons that are muted (have the muted box checked in audio setup dialog box) will be ignored when playing out using the spacebar and the next non-muted button will be selected as the next to play.


Similarly Skip over PlayNext buttons will ignore buttons in a PlayNext sequence as these buttons will be played automatically when the first button in the sequence is played.

The next button to play can be highlighted via the [Options|Display|Highlight](#) Step to Next option.

Home and End keys will position the highlighted key to the top left or bottom right buttons respectively.

When a button is assigned the virtual HotKey '=' it can be used as an alternative Home position, pressing Alt+Home will scan backwards through the buttons and move the Step to Next highlight to the previous button assigned '=' as a HotKey.


Play-Click Debounce

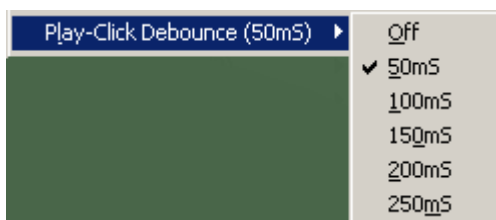

When using a mouse left-click or touchscreen press to play a track, SpotOn will respond to every action. This can present a problem when using a touchscreen in that the "button" may not be pressed cleanly with the possible consequence of a double press being detected.


The debounce options in this menu prevent the button being pressed in the XXmS after the initial press so masking out any secondary/unintentional presses.

Default Fade Out Time

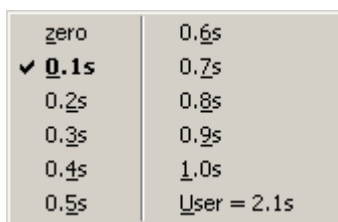


To minimize the abrupt audio transition when tracks are stopped before the end a default fade time can be used, this setting applied to all subsequently loaded tracks.


A setting of zero will produce audible clicks if the signal level is significant at the time the track is stopped, a worst case is shown below with full level tone stopped mid cycle.

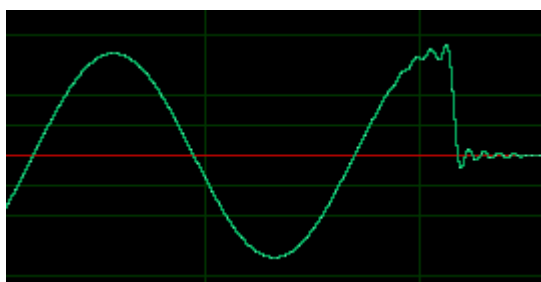

A range of value 0.1s to 1.0s are available along with a user defined value that is saved with the session data.

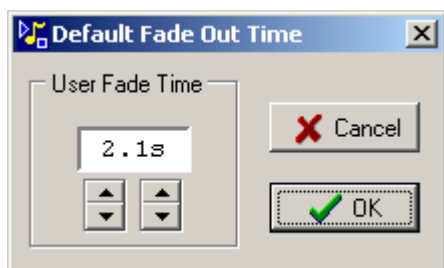

Midi

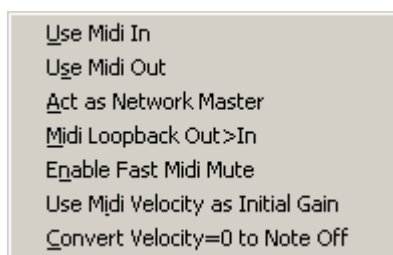

Use Midi In

Use Midi Out

Act as Network Master

Midi Loopback Out>In

Enable Fast Midi Mute

Use Midi Velocity as Initial Gain

Convert Velocity=0 to Note Off

respond to incoming Midi messages

generate Midi outgoing messages

send Midi out via Network link to a slave SpotOn computer


internally loop outgoing messages back to the input, without

specialist option for handling very fast Midi In messages


use the Velocity data in Midi messages to set the initial gain

test midi message for zero velocity and translate into a Note


Gain Settings

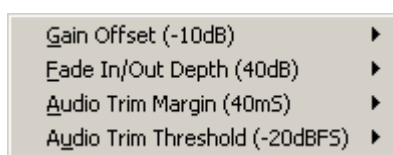


The overall gain offset of the audio played out by SpotOn can be set to 0dB or -10dB, when -10dB is selected the level of individual tracks can be increased by up to 10dB.




The depths of the Fade In and Out applied to tracks is globally set by this option

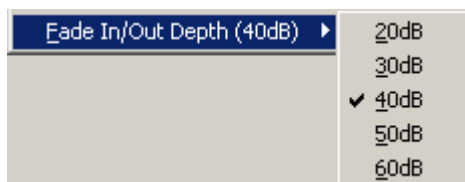

When using the AutoTrim feature the threshold for detecting audio can be set globally over the range -20dBFS..-50dBFS

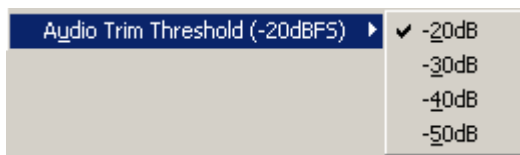


A modifier can be applied to the AutoTrim feature where the calculated In and Out points are expanded by a short time to include any leading or trailing transients.

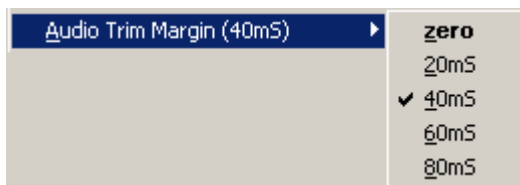

Mouse Functions

The functions of the left, right and centre mouse buttons can be changed with this option

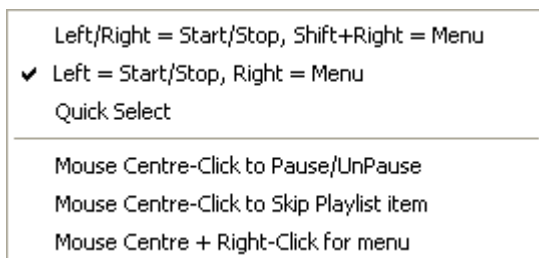

Play/Stop:-

The default setting is alternate clicks of left mouse button to start and stop the track with the right mouse button used to bring up the popup menus.

If required this action can be changed to have the left and right mouse buttons start and stop the track respectively with Shift + right-click accessing the popup menus.

With the Quick Select option checked the mouse left/right button action can be changed by clicking on the [lower right hand panel](#) in the main window status bar.

Pause/Skip/Menu:-


When using pointing devices with a centre button this can be assigned to a Pause/UnPause function, this only operates on tracks that do not contain a PlayList.

If the track does contain a PlayList the centre click can be set to cause the current PlayList section to move onto the next section on completion of the next loop, see [Advanced Operation](#)

As an alternative to using the keyboard Shift key the centre mouse button can be used to display the button menu.


Note that in some installations using a Keyboard, Video and Mouse (KVM) switch the mouse centre+right key combination is a shortcut to change the KVM selection.

Info Menu

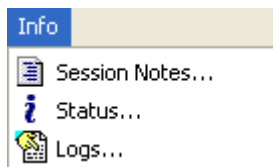

Session Notes

Provides a free text entry note pad which is saved with the session file

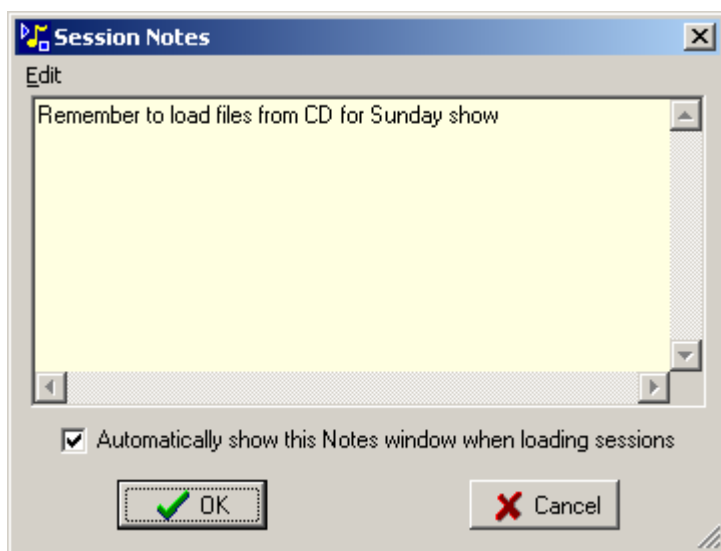


If the item in Options|Display|Auto Show Session Notes is checked then this window will be shown each time a session is loaded and the notes field is not blank.

The checkbox on this window can be unchecked to stop the window automatically showing for the remainder of the SpotOn session.


If the item in Options|Display|Auto Show Session Notes is unchecked, the notes window will not be automatically shown.

The notes field can be cleared using the menu item below.





Status

A selection of status information is listed in this panel only the first few items shown below will be of general use.

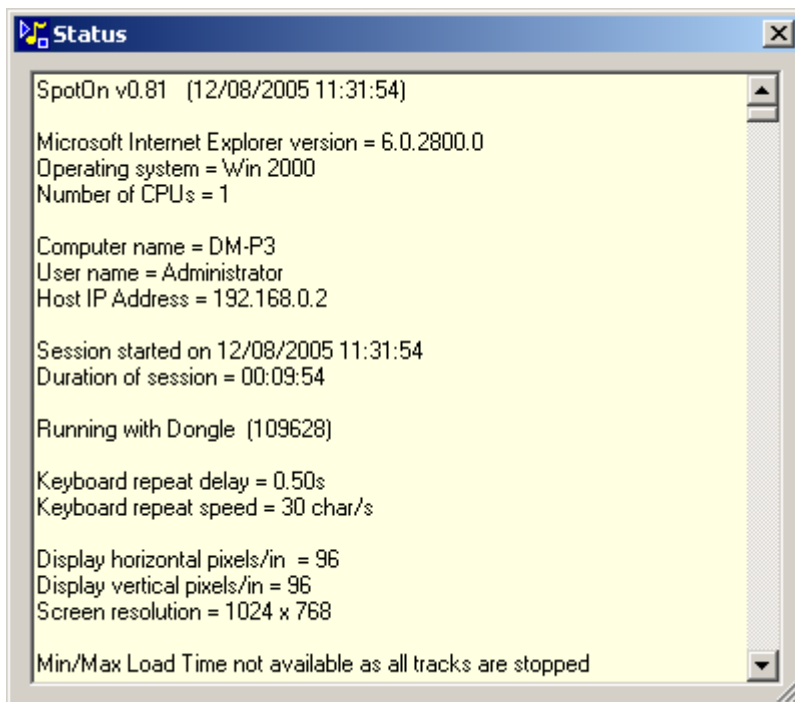


If is necessary to copy some of the status information, right-clicking on the display will offer the option to copy to the Windows clipboard either all the text or just the selected text.

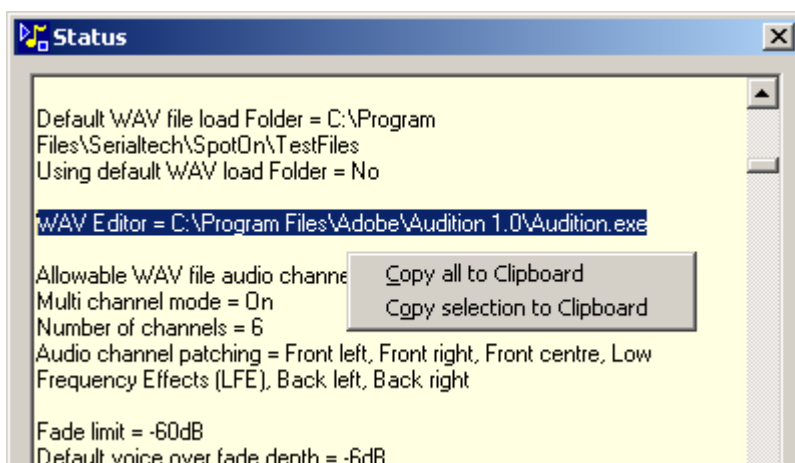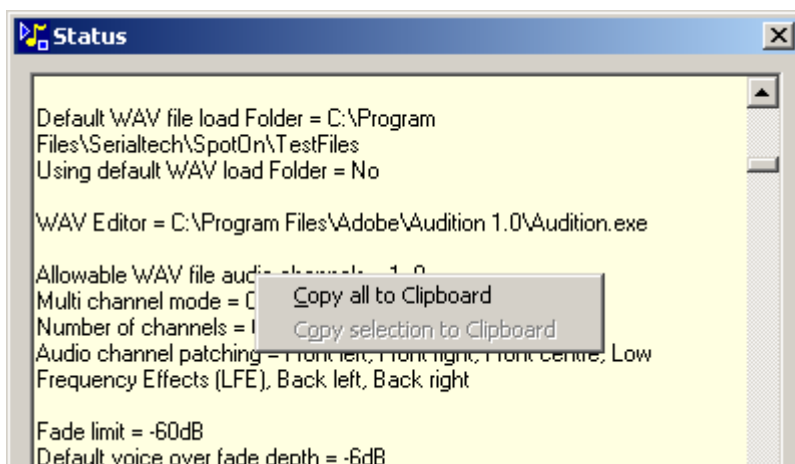

Logs

A range of user activities are logged and can be viewed via this menu item, the activities are split into two pages - Payout and Events.

The Payout page shown below lists all the buttons that are played out against a timestamp along with other information describing the track and is intended for use with royalty payment logging.

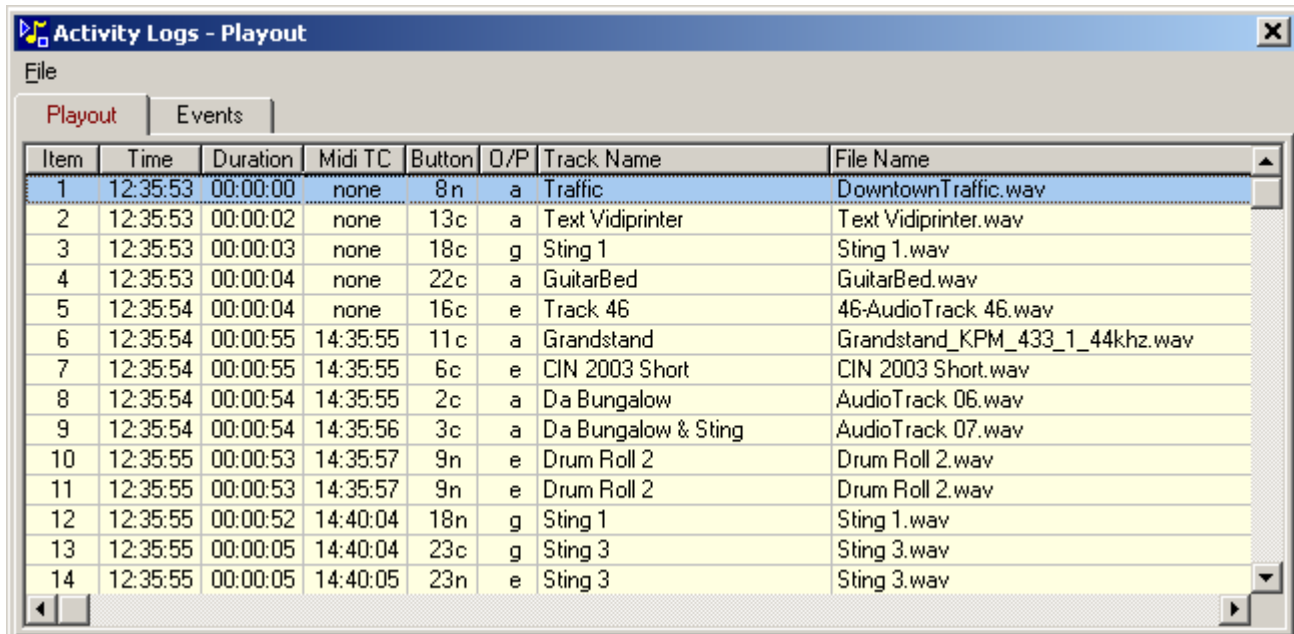


Activity Logs - Payout

File

Playout Events

Item	Time	Duration	Midi TC	Button	O/P	Track Name	File Name
1	12:35:53	00:00:00	none	8n	a	Traffic	DowntownTraffic.wav
2	12:35:53	00:00:02	none	13c	a	Text Vidiprinter	Text Vidiprinter.wav
3	12:35:53	00:00:03	none	18c	g	Sting 1	Sting 1.wav
4	12:35:53	00:00:04	none	22c	a	GuitarBed	GuitarBed.wav
5	12:35:54	00:00:04	none	16c	e	Track 46	46-AudioTrack 46.wav
6	12:35:54	00:00:55	14:35:55	11c	a	Grandstand	Grandstand_KPM_433_1_44khz.wav
7	12:35:54	00:00:55	14:35:55	6c	e	CIN 2003 Short	CIN 2003 Short.wav
8	12:35:54	00:00:54	14:35:55	2c	a	Da Bungalow	AudioTrack 06.wav
9	12:35:54	00:00:54	14:35:56	3c	a	Da Bungalow & Sting	AudioTrack 07.wav
10	12:35:55	00:00:53	14:35:57	9n	e	Drum Roll 2	Drum Roll 2.wav
11	12:35:55	00:00:53	14:35:57	9n	e	Drum Roll 2	Drum Roll 2.wav
12	12:35:55	00:00:52	14:40:04	18n	g	Sting 1	Sting 1.wav
13	12:35:55	00:00:05	14:40:04	23c	g	Sting 3	Sting 3.wav
14	12:35:55	00:00:05	14:40:05	23n	e	Sting 3	Sting 3.wav

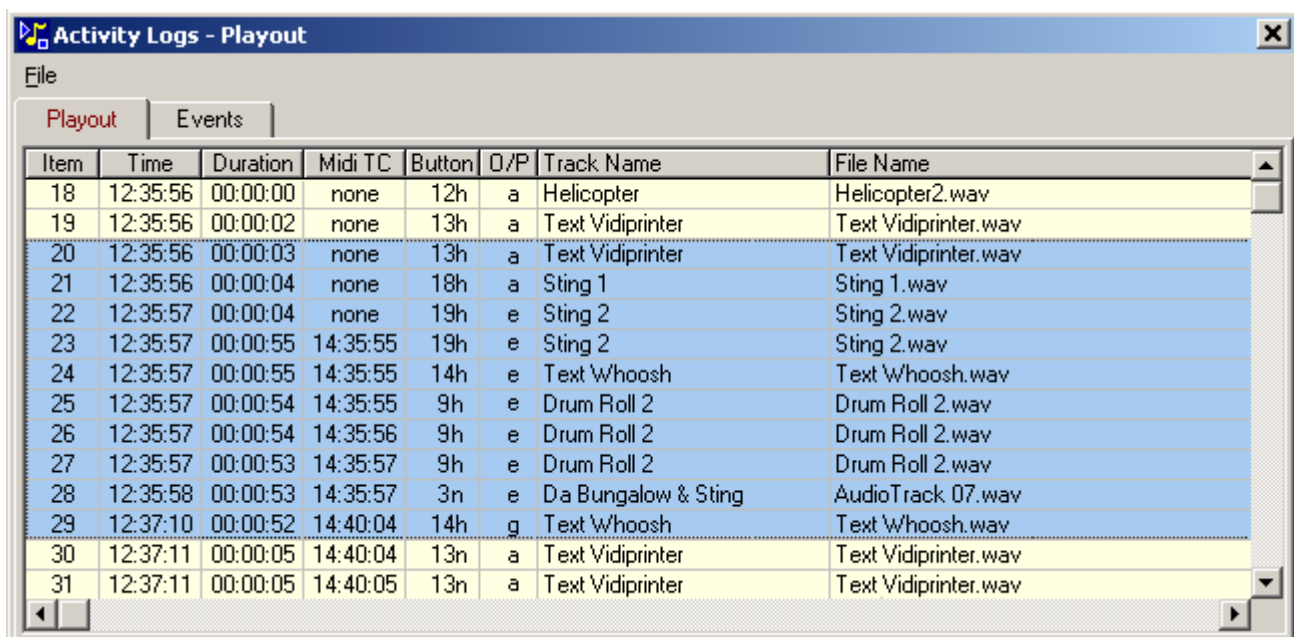


Activity Logs - Payout

File

Playout Events

Item	Time	Duration	Midi TC	Button	O/P	Track Name	File Name
18	12:35:56	00:00:00	none	12h	a	Helicopter	Helicopter2.wav
19	12:35:56	00:00:02	none	13h	a	Text Vidiprinter	Text Vidiprinter.wav
20	12:35:56	00:00:03	none	13h	a	Text Vidiprinter	Text Vidiprinter.wav
21	12:35:56	00:00:04	none	18h	a	Sting 1	Sting 1.wav
22	12:35:57	00:00:04	none	19h	e	Sting 2	Sting 2.wav
23	12:35:57	00:00:55	14:35:55	19h	e	Sting 2	Sting 2.wav
24	12:35:57	00:00:55	14:35:55	14h	e	Text Whoosh	Text Whoosh.wav
25	12:35:57	00:00:54	14:35:55	9h	e	Drum Roll 2	Drum Roll 2.wav
26	12:35:57	00:00:54	14:35:56	9h	e	Drum Roll 2	Drum Roll 2.wav
27	12:35:57	00:00:53	14:35:57	9h	e	Drum Roll 2	Drum Roll 2.wav
28	12:35:58	00:00:53	14:35:57	3n	e	Da Bungalow & Sting	AudioTrack 07.wav
29	12:37:10	00:00:52	14:40:04	14h	g	Text Whoosh	Text Whoosh.wav
30	12:37:11	00:00:05	14:40:04	13n	a	Text Vidiprinter	Text Vidiprinter.wav
31	12:37:11	00:00:05	14:40:05	13n	a	Text Vidiprinter	Text Vidiprinter.wav

For the purposes of external analysis, a section of the list can be highlighted using Shift+click and Ctrl+click methods and saved to disc by right clicking in the grid.

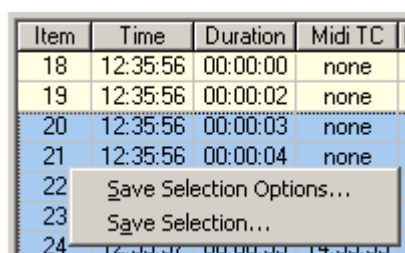


Item	Time	Duration	Midi TC
18	12:35:56	00:00:00	none
19	12:35:56	00:00:02	none
20	12:35:56	00:00:03	none
21	12:35:56	00:00:04	none
22			
23			
24	12:35:57	00:00:55	14:35:55

Save Selection Options...

Save Selection...

Save Selection Options opens up a further dialog box


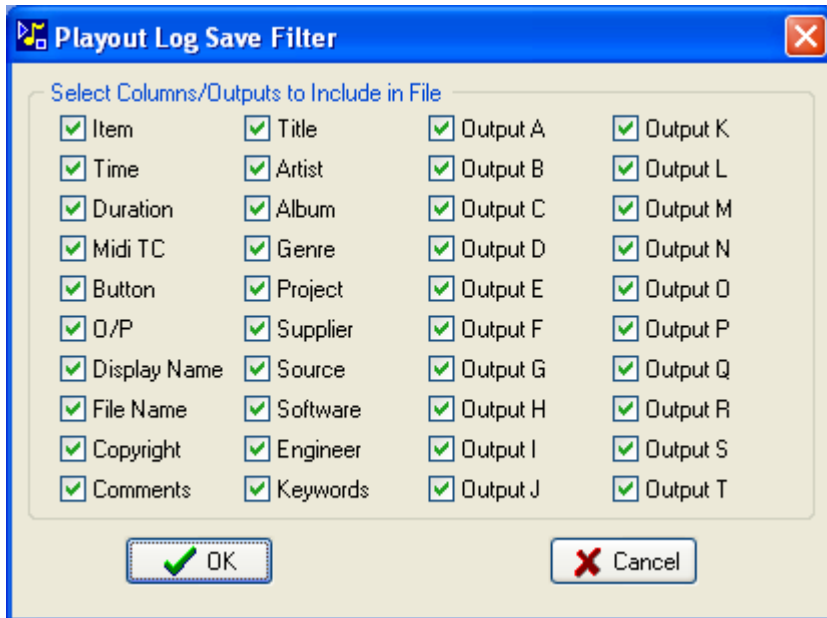


The Playout Log columns to be included in the file can be selected and also restricted to specific outputs, this option is only available when saving a highlighted selection of the current Playout Log which includes 2 or more lines.

The lower case suffices appended to the button numbers indicate the method by which the button was played, these can be any one of the following:-


- a Audio dialog Play
- b Position bar
- c Mouse Click
- d Play Delay
- e Fine Trim
- f DTMF Midi
- g GPI
- h Hotkey
- i TCP message
- j TCP Midi message
- k Timecode list
- n PlayNext
- o Midi loop back
- p PBus message
- q Wired Midi (ExtMidiLo..ExtMidiHi)
- r Midi test
- s Slave
- t Trim window Play
- u UDP message
- v Midi over UDP message
- x Start time archived to log
- y AutoPlay
- # WAV Preview dialog
- @ Click track
- [Timecode stack
-] unPause
- (Preview
-) Centre click
- ~ Effect setup dialog
- ^ Output Assign

The trigger codes can be listed via the Info|Trigger Codes menu

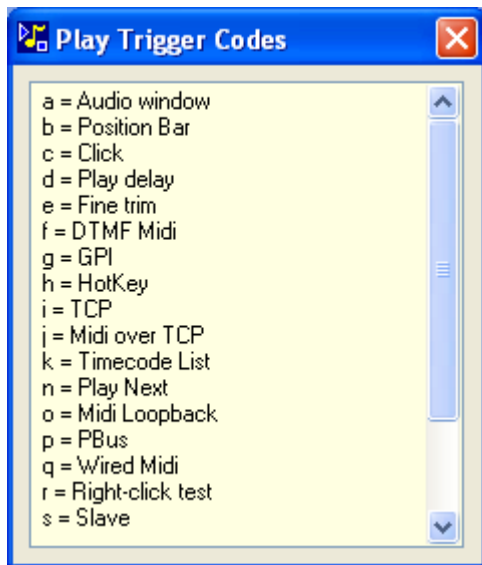

The duration column shows the length of time a track was playing before it was stopped, the column will show a value of ??:??:?? whilst a track is playing.

With long track or tracks that loop the duration cannot be entered for some considerable time after they were started, the consequence of this is that the duration may not be correctly entered into the archived Playout Logs. To avoid this there is an option in the [Engineering menu](#) forcing the archive to only be updated when all tracks are stopped, if this option is selected then the title bar will change as shown below.

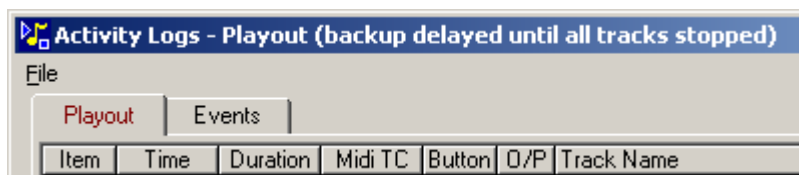

The Playout logs are saved to disc in the [default folder](#) with one log for each day SpotOn was used. The number of logs stored in the default folder is limited to 28, the oldest existing logs are deleted to maintain the maximum number of logs at 28.



However, Playout Logs can be stored in a user defined folder assigned via [File Folders](#), the number of files stored in the user defined folder is unlimited.

The second page shows other activities such as GPI in, Midi In/Out, files loaded/saved and system errors.

Item	Time	Action
1	12:34:34	All Stop
2	12:35:42	Package loaded - F:\Program Files\SpotOn\ITN\Simon Package.pkg
3	12:36:36	GPI In On
4	12:36:36	GPI-1 On at 12:36:36:632
5	12:36:36	GPI-1 On at 12:36:36:832
6	12:36:37	GPI-1 Off at 12:36:37:112
7	12:36:37	GPI-1 On at 12:36:37:192
8	12:36:37	GPI-1 Off at 12:36:37:453
9	12:36:37	GPI-1 On at 12:36:37:513
10	12:36:37	GPI-1 Off at 12:36:37:713
11	12:36:54	Midi In On
12	12:37:00	Midi In L:0/9/On at 12:37:00:456
13	12:37:04	Midi In L:3/13/On at 12:37:04:301
14	12:37:11	Midi Out 0:0/12/On at 12:37:11:221


The Event logs are saved to disc in the [default folder](#) with one log for each day SpotOn was used. The number of logs stored in the default folder is limited to 28, the oldest existing logs are deleted to maintain the maximum number of logs at 28.

The main menu has option to save to disk either the entire log or just the highlighted section and also access archived logs - this is more applicable to the Playout logs where tracks played a few days ago can be located.

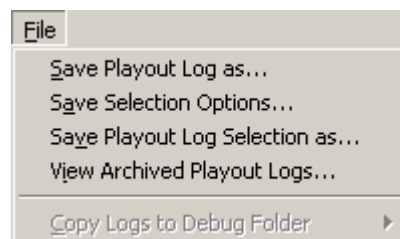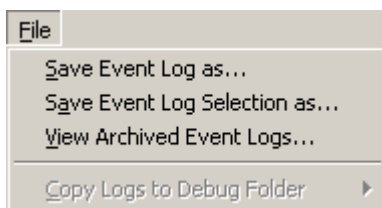


Both of the logs are automatically saved to disk when SpotOn closes.


The last item in the menu is 'Copy Logs to Debug Folder' this option is only enabled when in Engineering mode and is used to copy a selection of recent logs to a folder for debugging purposes, see [Debug Logs](#)

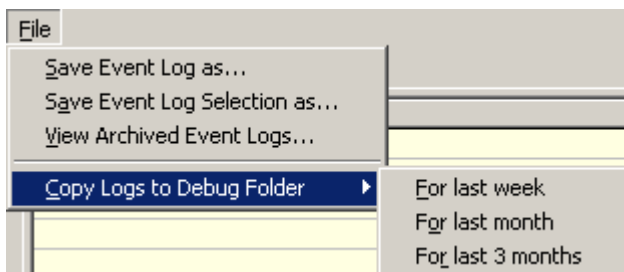


The SetUp menu Column options are only enabled whilst viewing the Playout log

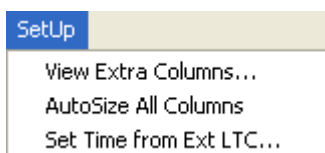

in SpotOn v0.96 and above the playout log can display additional metadata, the columns shown can be selected via the View Extra Columns option

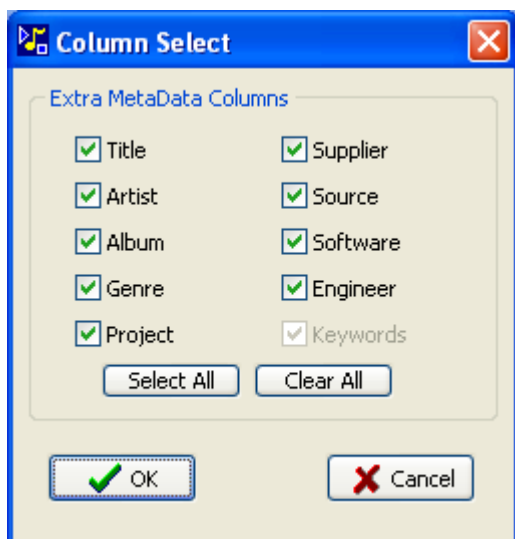

The width of the individual Playout log columns can be autosized by double clicking on the column header, alternatively all columns being shown can be autosized with the Autosize All Columns option

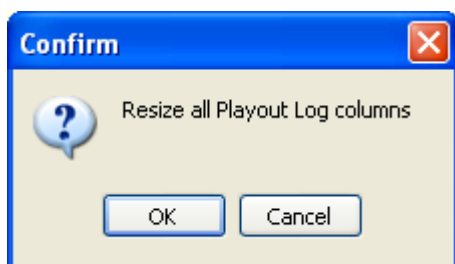

The timestamp applied to both the Playout and Event log entries is based on the PC clock, this can be set to the correct time by using the Windows Internet Time Server option or from an [external LTC signal](#)

Local Files


This menu item has been disabled

Each time SpotOn loads a button with an audio file located on a non fixed drive it copies the file to a local directory.


After sometime there may be files stored in this local directory that are redundant and can therefore be deleted, the file names coloured red are in use in the current session of SpotOn.

The items coloured green are not in use in the current session - but maybe used by others and be referenced in their data files.



The file Aaron.wav below is shown as not used but write protected and therefore cannot be deleted.

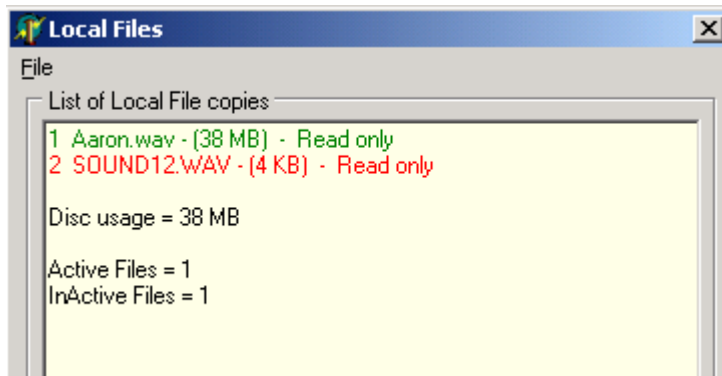


If the file was not write protected it would appear as below

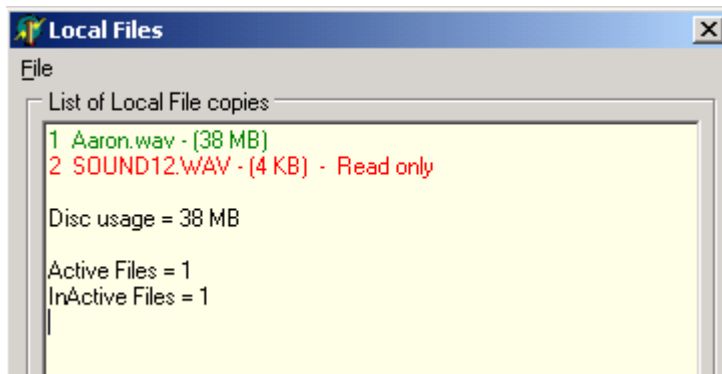

Using the File menu the unused files can be deleted from the Local directory

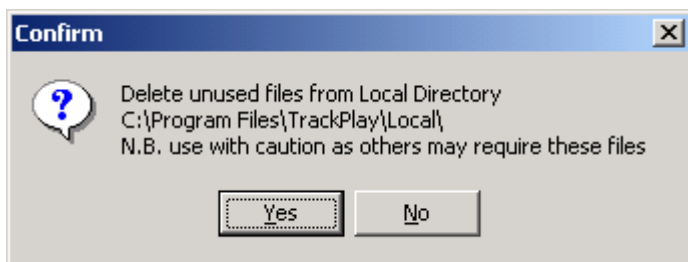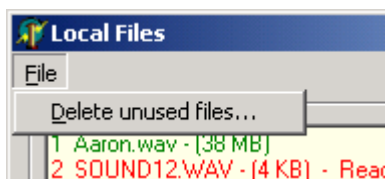

Engineering Menu

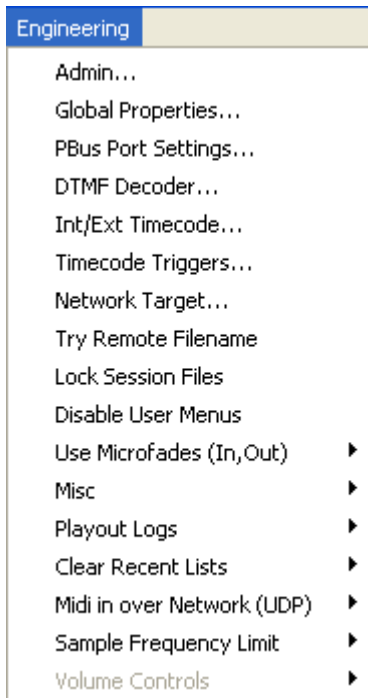

The Engineering Menu contains options to be set by an advanced user


Admin	Administrator menu options
Global Properties	Set range of property values
PBus Port Settings	Settings for receiving PBus commands
DTMF Decoder	Settings for receiving external DTMF tones
Int/Ext Timecode	Input settings for SMPTE or Button timecode
Timecode Triggers	Trigger buttons from a list of SMPTE timecodes
Network Target	Assigns target computer address
Try Remote Filename	search remote locations for audio file
Lock Session Files	Set loaded track files to be read-only
Disable User Menus	Disable menu items for simple playout operation
Use Micro Fades	Render precision fades for Fade Out and short Fade In durations
Misc	Assorted Settings
Playout Logs	Options for generating/copying playout logs
Clear Recent Lists	Clear history lists in File menu
Midi In over Network	Enables Midi messages received via a Network connection
Sample Frequency Limit	Set highest sample frequency that SpotOn will allow in WAV files
Volume Controls	Adjust levels of Windows volume controls for each output - option disabled

Admin

Provides password protected access to the [Administrator](#) menu options

Global Properties

The Global Properties option allows a large number of the menu options to be viewed and set within one dialog window.

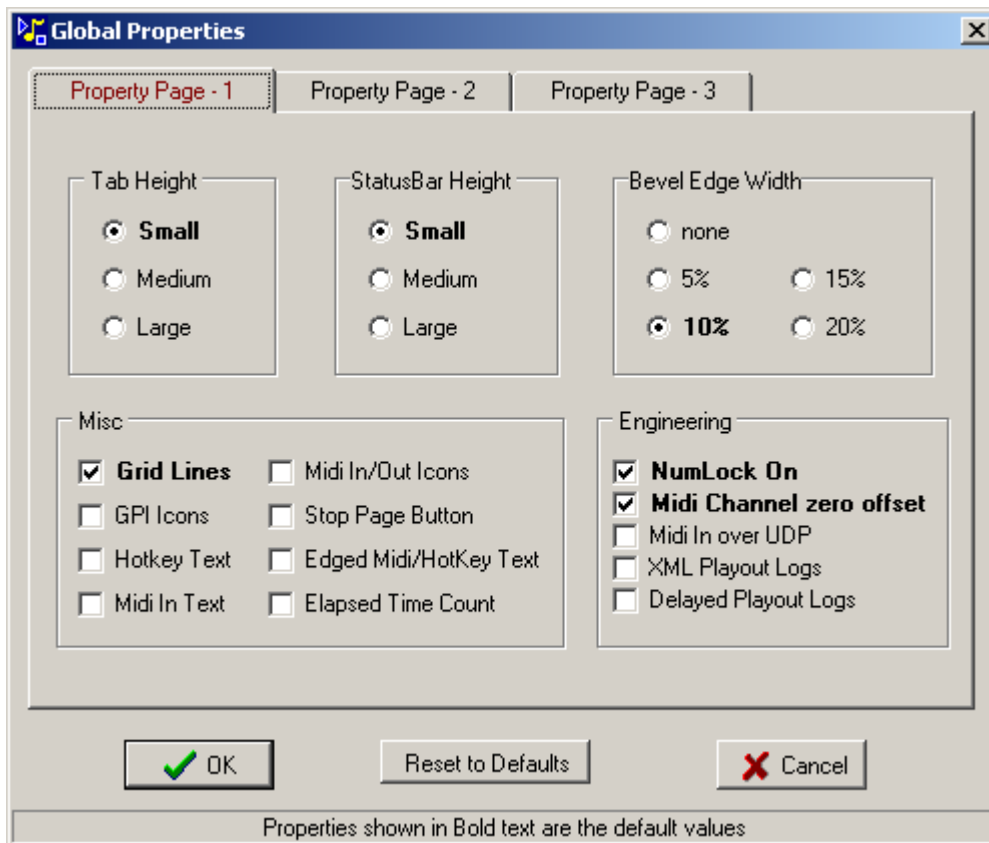


The default values are shown in bold text


The 'Reset to Defaults' button will set all properties on all pages to the default values.

The 4th property page is only accessible when Admin mode is enabled, this page is a slightly more sophisticated version of the [Output Assignment](#) dialog.


Initially the current output device configuration is shown in the right hand panel

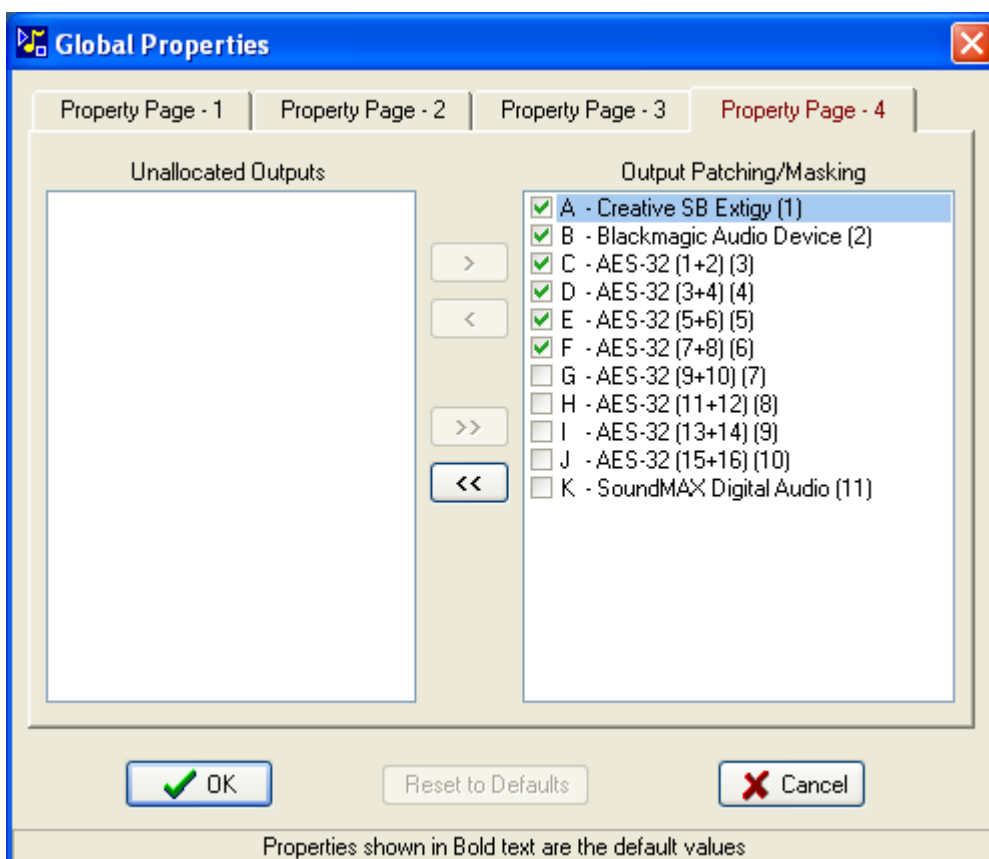


Clicking the << button will move all except the default output device into the left panel.

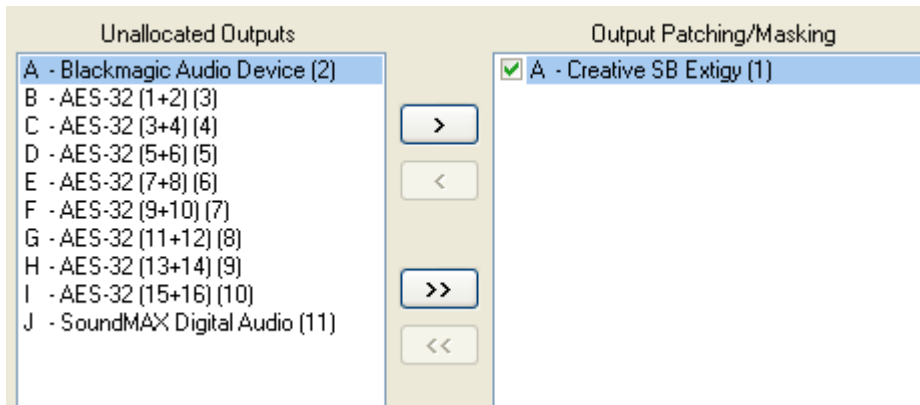


Now the output order can be built up by highlighting a entry in the left panel and clicking > to move the output in to the right hand panel.

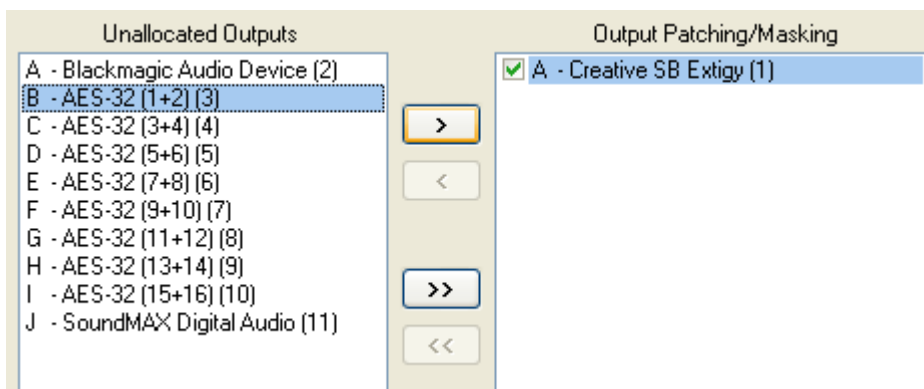

The moved entry will be automatically 'unmasked' (checkbox ticked)

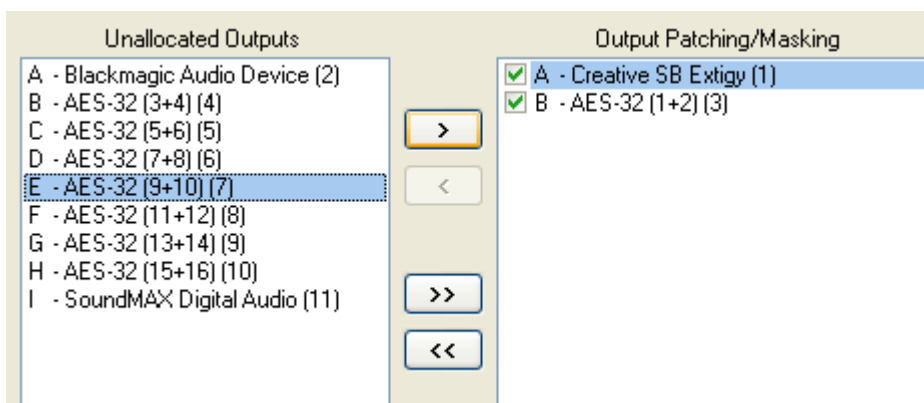


Continue moving entries until all the required outputs are in the right hand panel

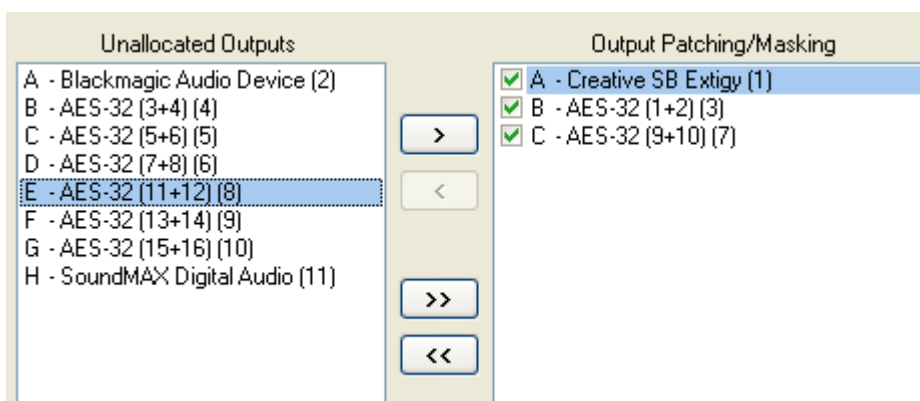

Finally move all the remaining entries across to the right hand panel by clicking >>

These items will be entered as masked.

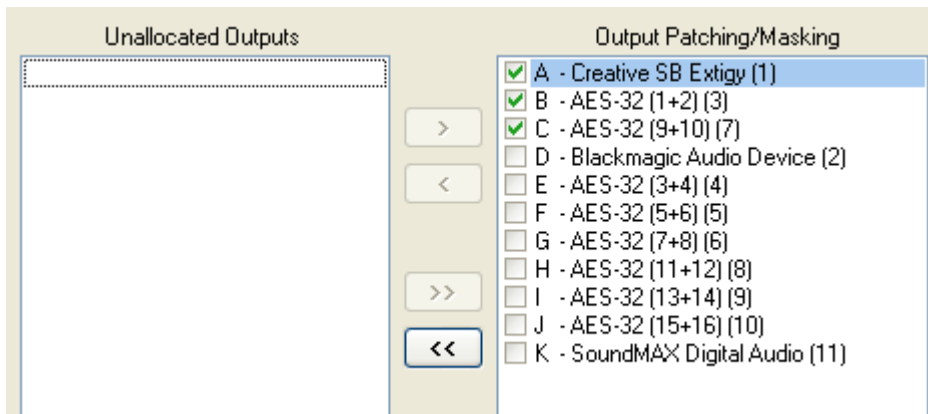

The order of the items in the right hand panel can be changed by left drag/dropping.

Try Remote Filename

When loading a session file it is possible that some audio material referred to has been deleted from the local drive, in this case if the track assigned to a particular button cannot be found the button remains blank and a warning dialog will display the tracks not found.

However, if the Try Remote Filename option is checked then the original file location will also be tested to see if the file is still in that location, if it is it will be copied to the local drive. The disadvantage of this is that if network drives are being used and are offline, the timeout can be quite long making the program unresponsive.

PBus Settings

SetUp for PBus control see [PBus Control](#)

PBus SetUp

Port Number

☒ None
 ☐ Com 1
 ☐ Com 2
 ☐ Com 3
 ☐ Com 4
 ☐ Com 5
 ☐ Com 6
 ☐ Com 7
 ☐ Com 8
 ☐ Com 9
 ☐ Com 10
 ☐ Com 11
 ☐ Com 12
 ☐ Com 13
 ☐ Com 14
 ☐ Com 15
 ☐ Com 16

Baud Rate

☐ 9600
 ☐ 19200
 ☒ 38400

Stop Bits

☒ 1
 ☐ 2

Parity

☒ None
 ☐ Odd
 ☐ Even

Defaults

Address Range 10..11 - Buttons 1..200

Base Address Number of Addresses

Registers 0..99 at Addr 10 refer to Btns 1..100
 Registers 0..99 at Addr 11 refer to Btns 101..200
 Registers 0..99 at Addr 12 refer to Btns 201..300
 Registers 0..31 at Addr 13 refer to Btns 301..320

OK Cancel

Int/Ext Timecode

SpotOn can decode external SMPTE longitudinal timecode from a selected audio input or take the elapsed time timecode of a nominated button and use it to trigger [GPis](#) or cause [AutoPlay](#) buttons to chase the timecode.

Timecode Input

Options Chase Timecode

Timecode Input Source (30Hz)

☒ Left Channel
 ☐ Right Channel
 ☐ L-R Difference

☐ +18dB
 ☐ +12dB
 ☐ +6dB
 ☒ Unity
 ☐ -6dB

+6dB
 0dB
 -6dB


LTC Level

-18dBFS

Calculate Timecode from track position of Button number

OK Cancel

The analogue audio timecode (LTC) should be connected to an audio input channel and the channel selected from the upper drop-down menu.

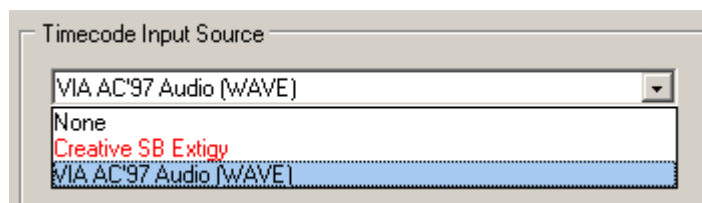

The lower drop-down menu selects the sample rate and bit depth for the timecode signal - this is fixed at 44.1kHz and 16 bit.




The bargraphs on the right hand side of the window show the signal levels for left and right channels, immediately below is the calculated average signal level and the decoded timecode value.

The timecode can be decoded from the Left or Right channels or the difference between the two channels, the last option is a facility to use a balanced feed of LTC with an unbalanced stereo input as might be found on a Laptop computer.

Coarse and fine gain adjustment are available to compensate for low level inputs, if possible the level should be set to match the markers (-18dBFS) on the level bars .

The default options are shown in bold text.


To use the alternative of deriving the timecode from a button select a non zero value in the button number box




The action of selecting a non-zero button number will set the audio input to None, similarly setting the audio input selection to anything other than None will set the button number to zero.

The timecode is calculated from the current absolute position within the track and does not take into account any In Point that may be set.

If the button number is set to 321 (which exceeds the highest button number available) the timecode will be based on the PC internal clock.

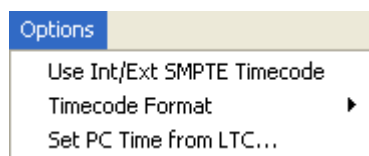


The Use Int/Ext SMPTE Timecode item duplicates the item in the [Options menu](#) and can disable/enable all the timecode facilities, if disabled a message will be shown in the lower part of the dialog.

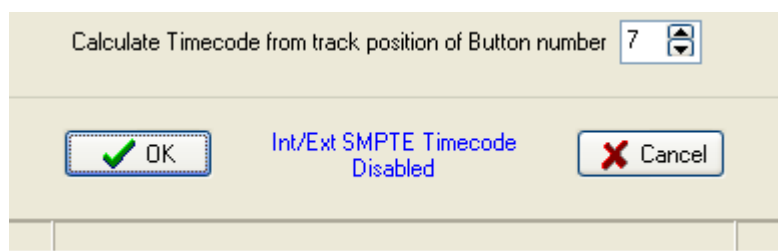

Timecode format to be changed from the default of 25Hz non-drop frame.




Additionally the external LTC signal can be used to set the PC clock, a prompt dialog box is shown with the current error

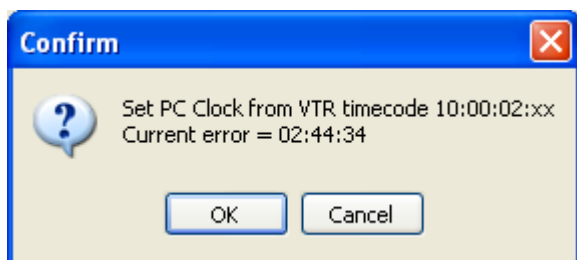

Access rights of the current user may restrict the ability to change the PC clock settings.


The timecode chase function allows [AutoPlay](#) buttons to chase external timecode, this function is enabled by checking 'Chase to Timecode On', alternatively this option can be set via a command line switch /[ChaseTCode](#).

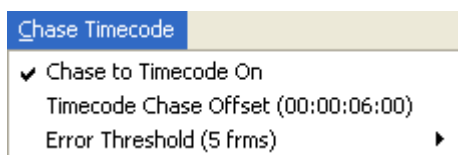


The buttons selected to chase timecode should preferably be BWA V files containing an embedded start timecode in the metadata. The start time on Non BWA V buttons or BWA V buttons with no embedded start time will default to a 00:00:00:00.

It is important that the global [Timecode Format](#) set above matches the external timecode being used, differences in frame rate are not flagged but if there is a discrepancy between drop frame and non-drop frame timecode is will be indicated in the right hand side of the status bar.

In the example below the global Timecode Format is set to 30Hz drop frame (29.97Hz), however the external timecode has been detected as non-drop frame.

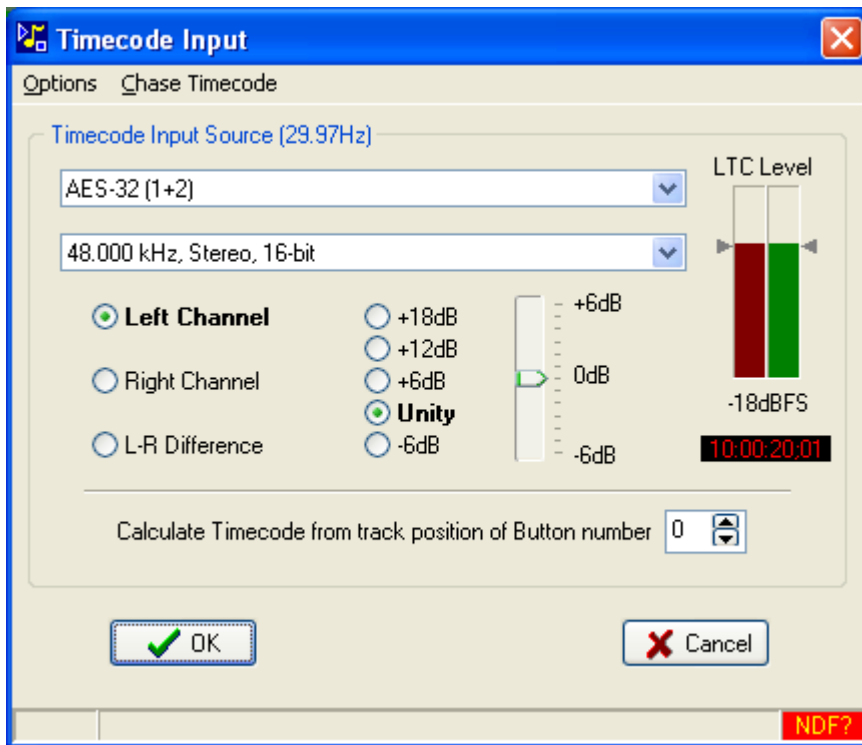

The dialog below enables an offset to be entered so that the button timecode is always a predetermined amount ahead of the external timecode.

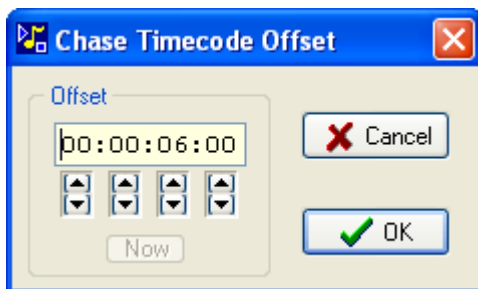

The Error Threshold setting defines how much error there has to be between the external timecode and the button timecode before the button is resynchronised.

- +/- 1 frame**
- +/- 2 frames
- +/- 3 frames
- +/- 4 frames
- ✓ +/- 5 frames


Timecode Triggers

The [Timecode Trigger List](#) offers a method of triggering buttons from incoming timecode as an alternative to emulated GPIs


DTMF Tone Trigger

SpotOn can decode [DTMF](#) tone sequences and trigger buttons via associated Midi notes 16/100..115

Network Target

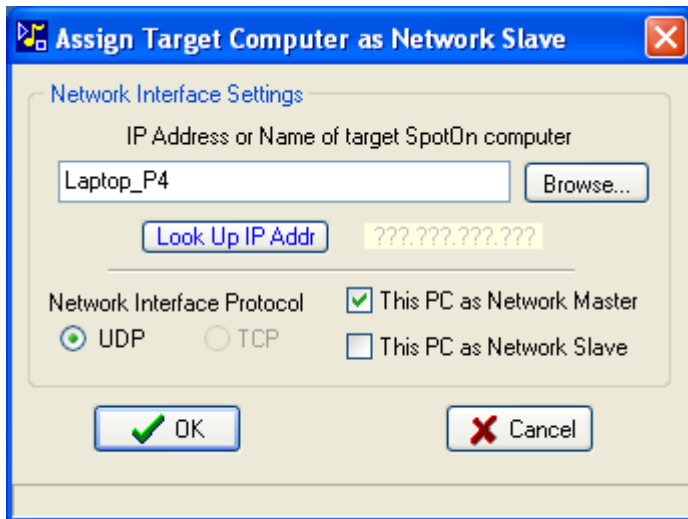

If a Target follow Master setup is required where two SpotOn computers have identical packages loaded and one computer is to track the other then 'This PC as Network Master' should be checked on the Master computer and 'This PC as Network Slave' checked on the Target computer.




When loading packages onto other computers, the computer name and dongle number are automatically checked against those embedded in the package file to ensure the Networked messages are not looped back to the same computer.


On the status bar of the Master computer the MidiOut panel should have underlined text indicating it is a Network Master

Midi Out On


On the Master computer enter the computer name or IP address for the Target computer.




If only the computer name of the target computer is known, the current IP address of that computer can be found by clicking on LookUp IP Addr.

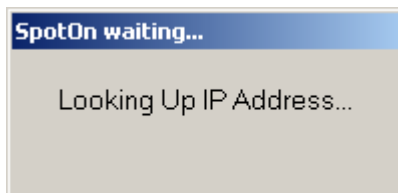

if the look up is successful then the IP address will be displayed proving that the computer is or was recently connected to the network

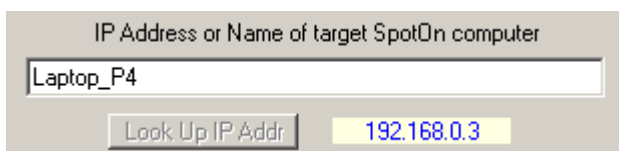

if the look up fails then Not Found is shown indicating that no computer of that name is currently on the network

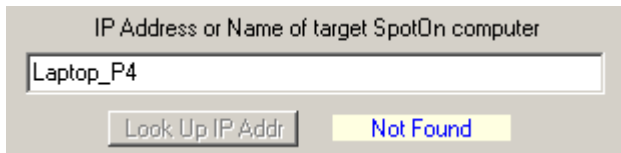

SpotOn will accept either the Target computer name or its IP address, entering the computer name is preferred on networks operating DHCP where the computer IP addresses are not fixed.

Other than loading the packages the following should be set automatically on exiting the dialog

On the Master computer "[Use Midi Out](#)" in the Options menu must be enabled.

On the target computer "[Use Midi In over Network|Midi In over UDP](#)" in the Engineering menu and "[Use Midi In](#)" in the Options menu must be enabled.


Master Computer

Network Master - checked
Enter name of Target Computer
Use Midi Out - enabled
Load package

Target Computer


Network Master - unchecked
Use Midi In over Network (UDP) - checked
Use Midi In - enabled
Load same package as Master

Midi In over Network




SpotOn can accept conventional Midi messages supplied via the sound card or game port, it can also respond to Midi messages passed to the computer running SpotOn via a network connection and is enabled by checking the UDP and/or TCP options.

The Midi In On mimic on the main window status bar will be in italics if either option is checked.



See [UDP/TCP Commands](#) for further information and details of non-Midi commands that can be sent over UDP

Playout Logs




[Save XML Logs](#)

Delay Log BackUp

Generate XML formatted playout logs as well as plain text logs
Delays backup of Playout logs until all tracks are stopped, this

When Delayed Log BackUp is selected the Playout log display window title bar indicates the selection.

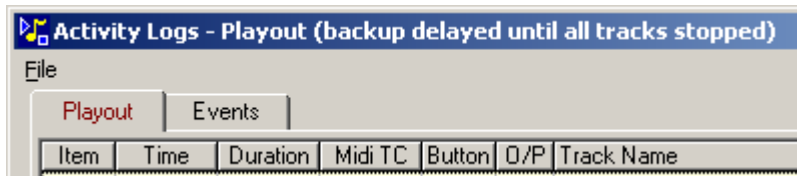


Lock Session Files

To avoid accidental deletion or modification of files loaded into a session they can be set to be Read-Only for the duration of the session by using this option which is saved within the session and package files.

Disable User Menus

If the SpotOn is to be used purely for playout and no loading or editing facilities are required then this option will disable all the main menus and the right click options.

Misc

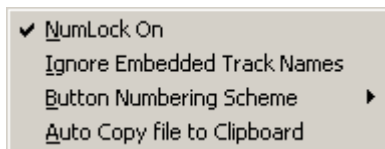

NumLock On

[Ignore Embedded Track Names](#)

[Button Numbering Scheme](#)

Auto Copy file to Clipboard

Set NumLock on at start up

Ignore embedded track names when loading audio files

Arrange the numbering of tracks

When checked the [button popup menu](#) Copy action will also copy

Misc - NumLock On

When checked set the keyboard NumLock state to be On at start up

Misc - Ignore Embedded Track Names

Audio files can have a 'Display name' embedded in the file along with the audio data, by default SpotOn uses this name if it is present as the Trackname when loading the file.

When this option is checked SpotOn will ignore the embedded 'Display Title' and make up a Trackname from the filename of the audio track when the file is initially loaded

Misc - Button Numbering Scheme

✓ **Normal**

Paged in Rows

Paged in Columns

Paged in Rows/Columns

Paged in Columns/Rows


Paged in 2 Blocks per page

Normal with Column/Row order

In some instances the default numbering of the buttons on the pages may not be suitable so a range of alternative schemes is available:-

Normal	1	2	3	4	5	6
(numbers increase on subsequent pages)	7	8	9	10	11	12
	13	14	15	16	17	18
	19	20	21	22	23	24
Paged in Rows	1	2	3	4	5	6
(numbers the same on all pages)	1	2	3	4	5	6
	1	2	3	4	5	6
	1	2	3	4	5	6
Paged in Columns	1	1	1	1	1	1
(numbers the same on all pages)	2	2	2	2	2	2
	3	3	3	3	3	3
	4	4	4	4	4	4
Paged in Rows/Columns	1	2	3	4	5	6
(numbers the same on all pages)	7	8	9	10	11	12
	13	14	15	16	17	18
	19	20	21	22	23	24
Paged in Columns/Rows	1	5	9	13	17	21
(numbers the same on all pages)	2	6	10	14	18	22
	3	7	11	15	19	23
	4	8	12	16	20	24
Paged in 2 Blocks per page	1	5	9	1	5	9
(numbers the same on all pages)	2	6	10	2	6	10
	3	7	11	3	7	11
	4	8	12	4	8	12
Normal but with Column/Row order	1	5	9	13	17	21
(numbers increase on subsequent pages)	2	6	10	14	18	22
	3	7	11	15	19	23
	4	8	12	16	20	24

Clear Recent Lists

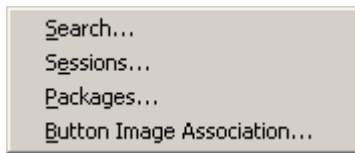

Recent history lists available from the File menu and the File Search history can be cleared with this option along with the button image associations, note Undo does not operate with these actions.

Sample Frequency Limit




The sample frequency of WAV files can be any value - typically 8,000.. 96,000 samples/second, at the higher sample frequencies and especially with 32 bit samples the data rate can become very high and the application will slow down as more CPU time is absorbed during payout.

The default value is 48kHz which should be sufficient for most purposes.

Volume Controls - menu item disabled

Each audio output device on a PC has its own set of mixer controls these can be accessed with this menu option



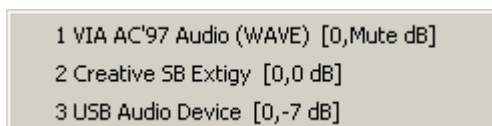


Note the level settings displayed to the right of the sound device name, these are of the form:-

[Master level, Wave output level]


Levels are shown in dB (0dB is the maximum level), if a level is muted the word "Mute" is shown instead of the level value.

Typical control panels are shown below - note that not all sound card drivers support all options.

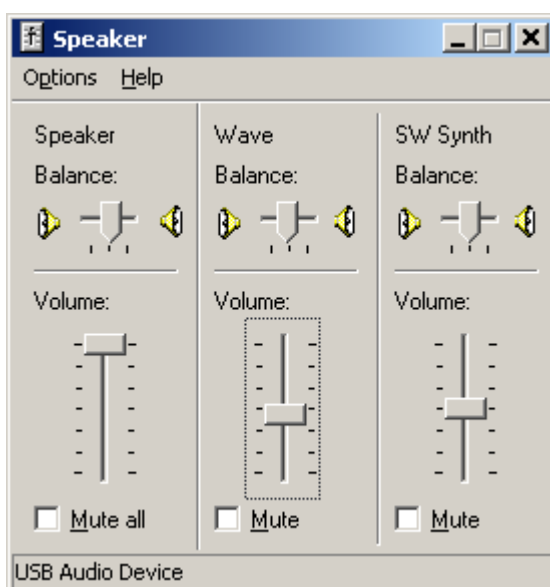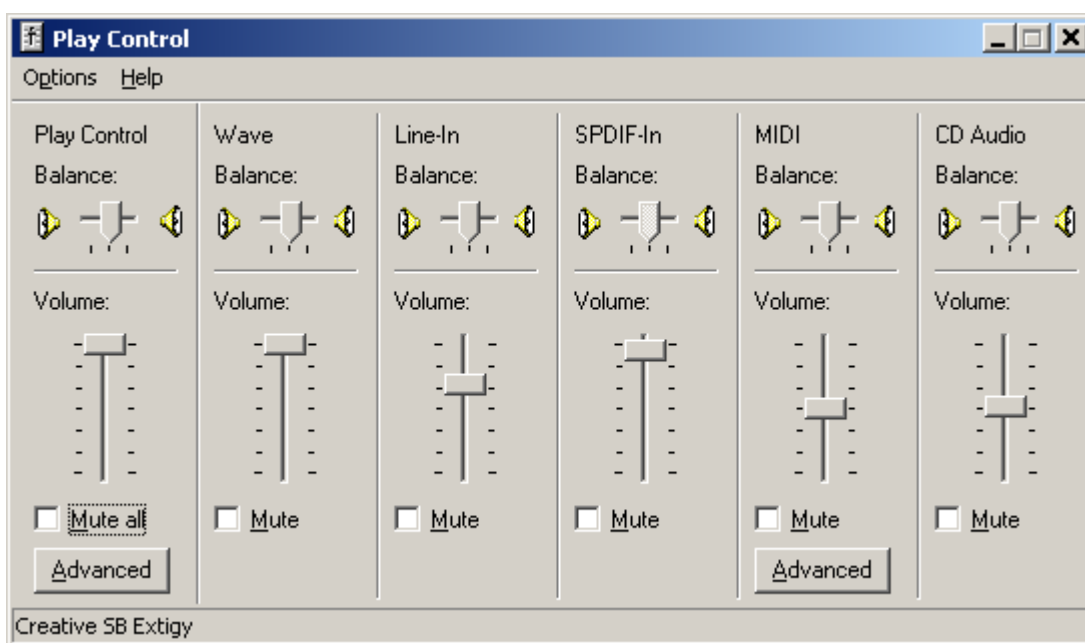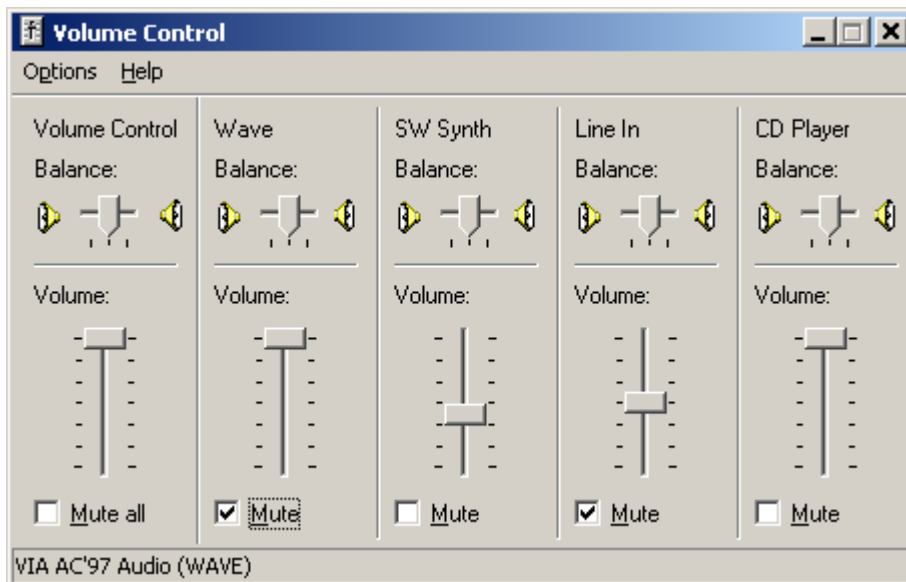


DTMF Decoder

SpotOn can decode external DTMF tones (0..F) from a selected audio input and use them to trigger buttons via Midi notes 100..115 on channel 16.

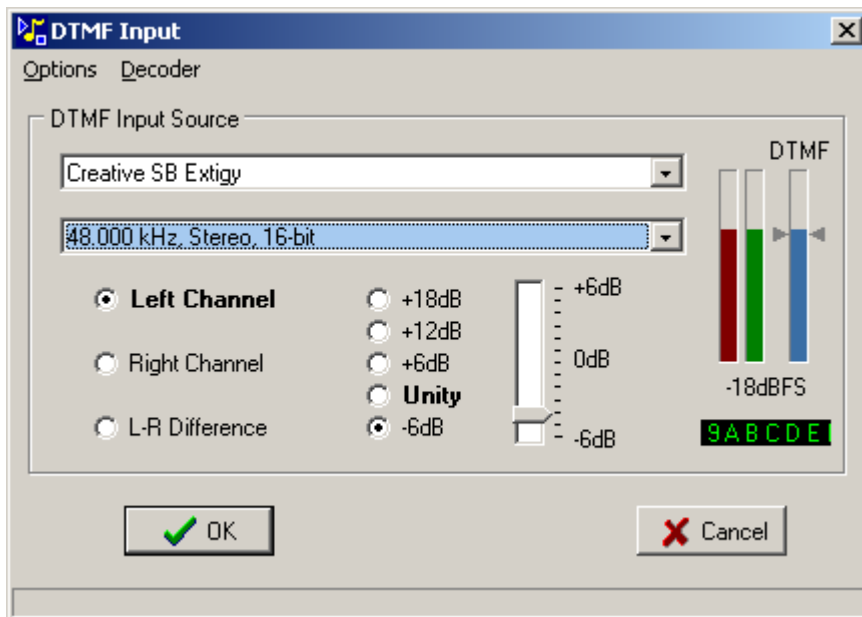

The analogue DTMF source should be connected to an audio input channel and the channel selected from the upper drop-down menu. If the source entry is displayed in red text then it is already in use as an input for the [SMPTE timecode](#) reader and is not available.

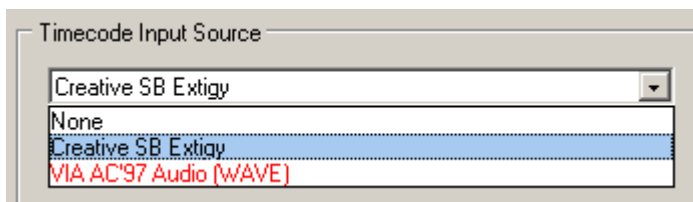

The lower drop-down menu selects the sample rate and bit depth for the timecode signal - this is fixed at 48kHz and 16 bit.




The bargraphs on the right hand side of the window show the signal levels for left, right and filtered channels, immediately below is the decoded data scrolling right to left.

Coarse and fine gain adjustment are available to compensate for low level inputs, if possible the level should be set so that the right hand bargraph matches the markers (-18dBFS).


The DTMF can be decoded from the Left channel, Right channel or the difference between the two channels, the last option is a facility to use a balanced feed of DTMF with an unbalanced stereo input as might be found on a Laptop computer.

The default options are shown in bold text.


The DTMF tones decoded are translated to Midi Note On messages in the range 100..115 on channel 16 for DTMF tones 0..F respectively where E=* and F=#.

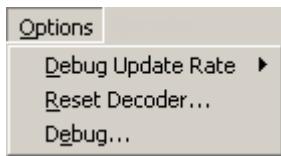

Debug Update rate sets the refresh period of the debug display



Reset Decoder sets all the decoder parameters to their default values after clicking on OK in the confirmation dialog

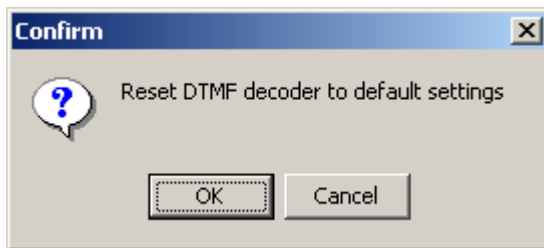

The Debug option displays a live timestamped list of the incoming DTMF data along with analysis of the signal quality

	0	1	2	3	4	5	6	7	Error	Twist	Tone3	Rat
	697Hz	770Hz	852Hz	941Hz	1209Hz	1336Hz	1477Hz	1633Hz		dB	dB	%
0000mS >	92,	176,	2304,	123,	1040,	25,	46,	25	tone3	-6.9	-15.4	8
0025mS >	28,	39,	4,	7,	7,	25,	3,	5	bntot	2.9	-1.0	5
0050mS >	42,	12,	15,	18,	4,	30,	7,	8	bntot	-2.9	-4.6	5
0075mS >	32,	26,	47,	383,	12,	311,	10,	6	tone3	-1.8	-16.4	8
0100mS >	49,	144,	101,	2138,	37,	2326,	26,	6 = 0		0.7	-23.5	9
0125mS >	42,	223,	95,	1454,	46,	2169,	26,	9	tone3	3.5	-16.3	8
0150mS >	46,	178,	16,	36,	9,	134,	7,	4	bntot	-2.5	-9.3	7
0175mS >	32,	117,	18,	7,	6,	14,	9,	2	bntot	11.2	-5.3	7
0200mS >	47,	39,	9,	4,	14,	40,	12,	4	bntot	-1.3	-0.4	5
0225mS >	696,	100,	17,	19,	434,	78,	15,	13	tone3	-4.1	-12.8	8
0250mS >	2634,	123,	17,	16,	1708,	70,	14,	13 = 1		-3.8	-22.9	9
0275mS >	1246,	104,	11,	8,	1181,	43,	11,	9 = 1 ****		-0.5	-21.1	9
0300mS >	18,	38,	10,	2,	59,	15,	5,	4	bntot	3.8	-6.6	6
0325mS >	13,	63,	16,	6,	2,	9,	4,	1	bntot	-11.9	-1.7	6
0350mS >	35,	53,	8,	2,	4,	15,	7,	3	bntot	3.7	-7.6	6
0375mS >	1301,	50,	20,	10,	6,	18,	934,	13 = 3		-2.9	-25.4	9
0400mS >	2493,	91,	53,	18,	10,	41,	2766,	33 = 3 ****		0.9	-28.8	9
0425mS >	802,	55,	32,	11,	6,	39,	1334,	20 = 3		4.4	-23.2	9
0450mS >	26,	57,	25,	2,	3,	32,	58,	3	bntot	0.0	-5.0	5
0475mS >	19,	51,	54,	2,	2,	20,	11,	4	bntot	0.5	-8.2	6
0500mS >	33,	88,	21,	4,	33,	13,	8,	4	bntot	8.6	0.0	5
0525mS >	43,	1911,	21,	10,	998,	17,	5,	12 = 4		-5.6	-27.2	9
0550mS >	71,	2899,	10,	6,	1749,	30,	11,	10 = 4 ****		-4.4	-27.9	9
0575mS >	44,	286,	29,	9,	447,	22,	4,	4	tone3	3.9	-16.3	8
0600mS >	30,	5,	27,	4,	17,	4,	1,	1	bntot	-1.1	-4.0	6
0625mS >	12,	5,	57,	4,	3,	4,	2,	2	bntot	13.7	-7.8	7
0650mS >	41,	195,	77,	9,	99,	9,	13,	5	bntot	-5.9	-2.2	6
0675mS >	106,	2725,	58,	30,	1235,	59,	24,	21 = 4		-6.9	-21.4	9
0700mS >	156,	2237,	329,	42,	1787,	45,	14,	6	tone3	-2.0	-14.7	8
0725mS >	162,	133,	68,	13,	224,	11,	10,	3	tone3	2.8	-1.7	6
0750mS >	156,	23,	32,	6,	11,	2,	3,	1	bntot	-13.8	-2.7	8
0775mS >	169,	58,	64,	14,	7,	7,	6,	4	bntot	-8.5	-0.8	7
0800mS >	149,	372,	1165,	73,	16,	340,	11,	6	hilo	9.9	-0.8	7
0825mS >	232,	43,	2573,	70,	24,	1934,	29,	11	2ndt2	-2.5	-18.4	9
0850mS >	87,	45,	1384,	69,	35,	1858,	41,	36 = 8		2.6	-24.0	9
0875mS >	54,	32,	191,	22,	27,	90,	50,	118	tone3	-4.2	-2.3	5
0900mS >	19,	33,	67,	48,	8,	12,	31,	167	bntot	7.9	-2.9	6
0925mS >	50,	29,	102,	68,	47,	6,	27,	89	bntot	-1.2	-2.3	4
0950mS >	138,	37,	450,	62,	297,	22,	61,	13	tone3	-3.6	-6.7	6
0975mS >	65,	59,	3611,	175,	1619,	80,	36,	32	2ndt1	-7.0	-19.3	9

Portion of DFT bins sum in DTMF Tone 1 = 25%

Minimum DFT bins sum = 500

Maximum value of 2nd harmonic of Tones 1+2 = -30dB*

Hold

DTMF tone twist limit = -12/+9dB*

Maximum value of adjacent bin wrt Tone 2 = -18dB*

Signal pre-filter = Wideband +/-0.50dB*

The labels at the bottom of the screen show the decoder parameters, those with a '*' suffix have right-click popup menus enabling the parameters can be changed live.

The Hold button at the bottom centre freezes the display for analysis, the Spacebar is the shortcut key for this button.

The Debug window is split into columns

Timestamp	25mS block decoding	
Tone Levels	Levels of the individual DTMF tones received	
Decoded Value	Decoded character 0..9, A..F	
Error	****	No Error
	bntot	Total of all the frequency components not above threshold - insufficient signal
	tone1	Ratio of the level of tone 1 to the sum of all frequency components not above
	revtw	Higher tone level is greater than lower tone level and exceeds limit - channel has
	nortw	Higher tone level is less than lower tone level and exceeds limit - channel has an
	tone3	Next largest tone after the two main tones is not suppressed sufficiently -
	hilo	Two tones detected are either both Lo tones or both Hi tones - there should be
	2ndt1	Second harmonic of main tone 1 is larger than expected, so may not be a DTMF
	2ndt2	Second harmonic of main tone 2 is larger than expected, so may not be a DTMF
Twist	Measure of the relative values of the two main tones, shown as Normal Twist (nortw)	
Tone3	Level of Tone 3 when compared with Tone 2 exceeds the preset limit	
Ratio	Ratio of levels of Tone 1+Tone 2 to overall total is insufficient	

	0	1	2	3	4	5	6	7	Error	Twist	Tone3	Ratio
	697Hz	770Hz	852Hz	941Hz	1209Hz	1336Hz	1477Hz	1633Hz		dB	dB	%
0875mS >	54,	32,	191,	22,	27,	90,	50,	118	tone3	-4.2	-2.3	53
0900mS >	19,	33,	67,	48,	8,	12,	31,	167	bntot	7.9	-2.9	61
0925mS >	50,	29,	102,	68,	47,	6,	27,	89	bntot	-1.2	-2.3	46
0950mS >	138,	37,	450,	62,	297,	22,	61,	13	tone3	-3.6	-6.7	69
0975mS >	65,	59,	3611,	175,	1619,	80,	36,	32	2ndt1	-7.0	-19.3	92

At timestamp 875mS the two tones detected correspond to DTMF frequencies 2 (tone 1 - highest level) and 7 (tone 2 - second highest level) and are shown in blue text.

The error is 'tone3' because the next largest signal shown in green text at DTMF frequency 5 (tone 3) is too close in level to DTMF frequency 7 (tone 2), the difference is -2.3dB, the relative level of tone 3 is shown in magenta coloured text as it exceeds the tone 3 limit of -18dB.


At timestamp 975mS the two tones detected correspond to DTMF frequencies 2 (tone 1) and 4 (tone 2), tone 2 is shown as normal in blue text but tone 1 is shown in magenta text which corresponds to the error '2ndt1' indicating the second harmonic of tone 1 exceeds the threshold.

The example below shows a high quality DTMF signal being decoded.

At timestamps 0, 25, & 50mS there is insufficient signal at the DTMF frequencies so the error is 'bntot', the next 3 entries correctly detect a '9', after two valid decodes the character is accepted as being good '****'. A similar sequence of events follows when decoding the next character 'A'.

	0	1	2	3	4	5	6	7	Error	Twist	Tone3	Ratio
	697Hz	770Hz	852Hz	941Hz	1209Hz	1336Hz	1477Hz	1633Hz		dB	dB	%
0000mS >	15,	5,	6,	3,	7,	4,	31,	9	bntot	6.7	-3.9	58
0025mS >	17,	4,	2,	6,	4,	7,	10,	5	bntot	-4.1	-3.1	48
0050mS >	4,	6,	160,	14,	11,	5,	101,	4	bntot	-4.0	-17.2	85
0075mS >	3,	12,	332,	13,	5,	11,	329,	9 = 9		-0.1	-27.9	93
0100mS >	10,	9,	374,	9,	4,	10,	313,	7 = 9	****	-1.5	-29.8	93
0125mS >	13,	7,	333,	17,	8,	6,	277,	8 = 9		-1.6	-24.4	91
0150mS >	12,	23,	38,	7,	4,	2,	54,	5	bntot	3.0	-4.3	63
0175mS >	50,	22,	13,	9,	6,	9,	14,	30	bntot	-4.5	-2.6	52
0200mS >	287,	13,	11,	11,	9,	4,	22,	166 = A		-4.8	-17.6	87
0225mS >	300,	11,	13,	18,	6,	3,	20,	260 = A	****	-1.3	-22.4	89
0250mS >	231,	18,	6,	9,	13,	2,	7,	297 = A		2.2	-22.2	90
0275mS >	107,	13,	13,	7,	4,	3,	13,	207	bntot	5.7	-18.1	86


The Decoder menu sets the individual parameters of the decoder

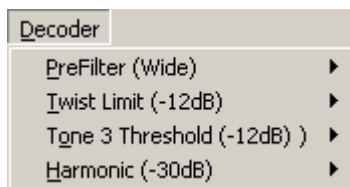

The narrowband PreFilter selects only the DTMF tone spectrum range whereas the wideband filter includes the second harmonics of the DTMF tones




Twist is a measure of the relative amplitudes of the two most significant tones (tone 1 and tone 2)

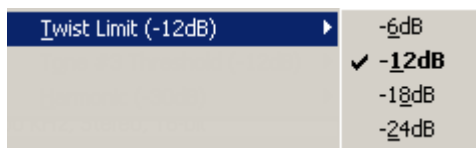

Tone 3 threshold sets the limit for the next largest frequency component after the two most significant tones



With the Wideband prefilter selected a further check on the validity of the DTMF tones can be made by testing the level of the second harmonic of the primary tones.

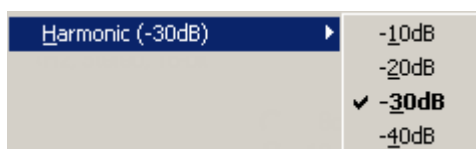

In the SpotOn\TestFiles folder are a selection of DTMF wav files:-

DTMF?_48_A_M18.wav	Single pulse of DTMF 'O'.. DTMF 'F' at 48kHz 16 bit mono at -18dBFS
DTMF_48_TestToneSeq.wav	Sequence of DTMF characters at 48kHz 16 bit mono at -18dBFS
DTMF_48_TestTones.wav	Sequence of DTMF tones 0..7 and then all tones simultaneously at 48kHz 16 bit mono at -34dBFS

The DTMF decoder is enabled via the [options menu](#) selection Use DTMF Tone Trigger

Timecode Trigger List

The Timecode Triggers dialog offers a list of timecode trigger points allocated to buttons, the list is formed of 6 columns.

The first column is the entry number followed in the next column (#) showing the state of the trigger, the third column (On) shows if the entry is enabled, clicking in the cells in the 'On' column will toggle the enabled state, this state is mimicked on the right hand edit panel as 'Trigger On'. The next three columns show cue point timecode, button number and button name respectively.

Clicking on the column headers will sort the list.

	#	On	Timecode	Btn	Name
1		✓	10:00:02:00	69	Untitled12
2		✓	10:00:05:00	65	white_noise
3			10:00:06:00	69	Untitled12
4			10:00:08:00	69	Untitled12
5			10:00:08:00	69	Untitled12
6					
7					
8					
9					
10					
11					
12					
13					
14					
15					
16					
17					
18					
19					
20					
21					

Timecode Cues

10:00:04:00

Grab Timecode

Timeline Timecode

10:00:08:00

▲ ▲ ▲ ▲

▼ ▼ ▼ ▼

Button Number

69

Untitled12


☒ Trigger On

Add Ins Del

Modify

☒ Enable Button Triggers from Timecode List

Button numbers can be entered by typing directly into the right hand Button Number section or by using the up/down nudge buttons. If the button selected is blank the number and the entry in the list will be shown in italic text as shown below in entry 6.

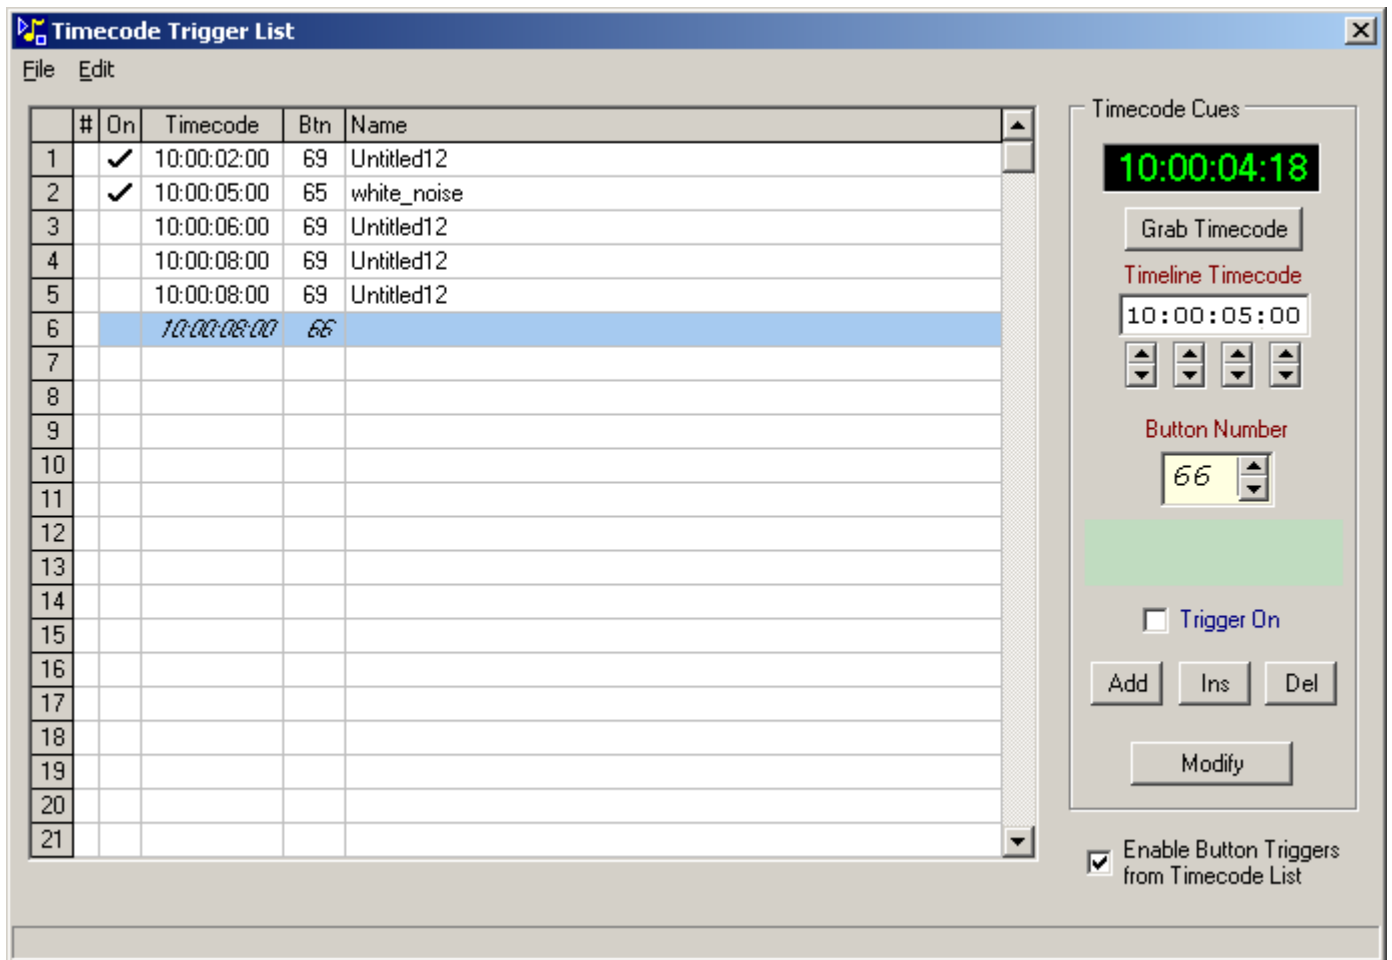

The timecode display in the upper right corner shows the [SMPTE timecode](#) being decoded from either an external source or directly from a button, the text will be yellow if no timecode is available.

The Mark Cue button will load the current timecode and add a new entry to the list, this can be used to make a first pass at setting the timecode cues.

The Add button will add a new entry to the end of the list, Del button will delete the selected entry and the Modify button will update the selected entry with the data in the right hand edit section.

The Insert button will insert a new entry above the selected line moving all higher numbered entries one line, if the list is full the last entry will be lost.

the State column show the current state of the cue - armed (green), playing (red) and elapsed (yellow).

	#	On	Timecode	Btn	Name
1		✓	10:00:02:00	69	Untitled12
2		✓	10:00:05:00	65	white_noise
3			10:00:06:00	69	Untitled12
4			10:00:08:00	69	Untitled12
5			10:00:08:00	69	Untitled12
6			10:00:08:00	66	
7					

Cues 1 and 2 are armed.

	#	On	Timecode	Btn	Name
1		✓	10:00:02:00	69	Untitled12
2		✓	10:00:05:00	65	white_noise
3			10:00:06:00	69	Untitled12
4			10:00:08:00	69	Untitled12
5			10:00:08:00	69	Untitled12
6			10:00:08:00	66	
7					

Cue 1 is playing and cue 2 armed.

	#	On	Timecode	Btn	Name
1		✓	10:00:02:00	69	Untitled12
2		✓	10:00:05:00	65	white_noise
3			10:00:06:00	69	Untitled12
4			10:00:08:00	69	Untitled12
5			10:00:08:00	69	Untitled12
6			10:00:08:00	66	
7					

Cue 1 has elapsed and cue 2 armed.

Items in the list can be selected by single clicks or using the standard Shift+click for a block of items.

	#	On	Timecode	Btn	Name
1			09:57:06:00	1	Sting 4 N
2			09:59:30:00	10	Round 2
3			09:59:30:00	7	Bed 5 main N95%
4			09:59:58:00	11	Round 3
5			09:59:58:00	18	vote bed
6			10:00:20:00	22	Sudden Death
7			10:00:36:22	34	HeadtoHead N

or Ctrl+click for a non-contiguous block of items.

	#	On	Timecode	Btn	Name
1			09:57:06:00	1	Sting 4 N
2			09:59:30:00	10	Round 2
3			09:59:30:00	7	Bed 5 main N95%
4			09:59:58:00	11	Round 3
5			09:59:58:00	18	vote bed
6			10:00:20:00	22	Sudden Death
7			10:00:36:22	34	HeadtoHead N
8			10:00:36:22	20	Sting 4 N

There is a right-click popup menu on the list


Clear Entry
Copy
Paste
Insert
Clear List
Compact List

Clear Entry allows the selected entries to be deleted, Copy will temporarily copy the selected entries to the clipboard.

Paste will paste the entries from the clipboard over the list starting at the currently selected row, Insert will move the selected entry and all higher numbered entries toward the end of the list and insert the entries from the clipboard into the blank lines created.

Compact List removes any blank lines and sorts the list into timecode order and finally Clear List will delete all entries.

There are two main menu sections File and Edit.

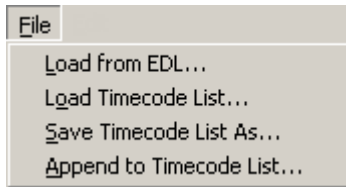

Load from EDL

Load timecodes from a section of an EDL file *.edl or *.txt

Load Timecode List

Load timecodes from disc file *.tcl


Save Timecode List As

Save timecode list to disc file *.tcl

Append to Timecode List


Load timecodes from disc and append to end of current list

Under the Edit menu are options to Undo or Redo changes



Timecode Triggers are enabled via the [Options menu](#), this option is copied by the Enable Button Triggers checkbox in the lower right of the window.

Loading timecodes from an EDL (Edit Decision List) - an EDL contains four columns of timecode along with transition instructions, a typical EDL is shown below

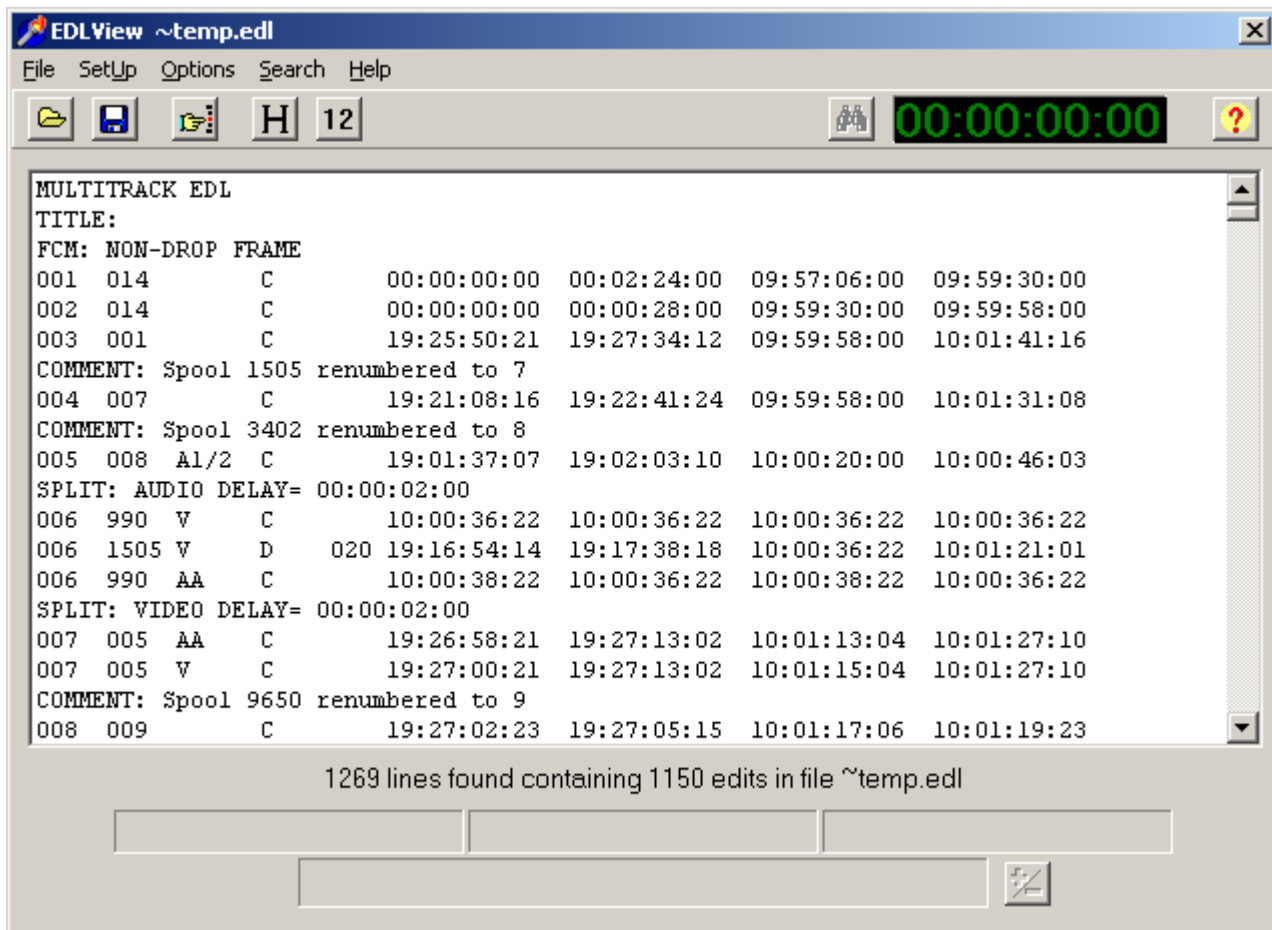

Using the Load from EDL option the timecodes can be extracted and displayed as a simple list, the section of timecodes to be added to the Timecode Trigger list are selected by left-click dragging across the text. Any partial lines selected will be included in the example below lines 10 to 20 inclusive will be transferred.

Only one timecode column can be used and that is selected from the options immediately below the listing, Recorder In is the default

EDL Timecode Viewer

Select lines of timecode entries to transfer into Cue List by left-click dragging across text

	Player In	Player Out	Recorder In	Recorder Out	Btn	Duration
0001	00:00:00:00	00:02:24:00	09:57:06:00	09:59:30:00	001	00:02:24:00
0002	00:00:00:00	00:00:28:00	09:59:30:00	09:59:58:00	001	00:00:28:00
0003	19:25:50:21	19:27:34:12	09:59:58:00	10:01:41:16	001	00:01:43:16
0004	19:21:08:16	19:22:41:24	09:59:58:00	10:01:31:08	001	00:01:33:08
0005	19:01:37:07	19:02:03:10	10:00:20:00	10:00:46:03	001	00:00:26:03
0006	10:00:36:22	10:00:36:22	10:00:36:22	10:00:36:22	001	00:00:00:00
0007	19:16:54:14	19:17:38:18	10:00:36:22	10:01:21:01	020	00:00:44:04
0008	10:00:38:22	10:00:36:22	10:00:38:22	10:00:36:22	001	23:59:58:00
0009	19:26:58:21	19:27:13:02	10:01:13:04	10:01:27:10	001	00:00:14:06
0010	19:27:00:21	19:27:13:02	10:01:15:04	10:01:27:10	001	00:00:12:06
0011	19:27:02:23	19:27:05:15	10:01:17:06	10:01:19:23	001	00:00:02:17
0012	19:27:02:02	19:27:03:06	10:01:16:10	10:01:17:14	001	00:00:01:04
0013	19:27:02:21	19:27:05:18	10:01:17:04	10:01:20:01	001	00:00:02:22
0014	19:27:04:06	19:27:15:09	10:01:18:14	10:01:29:17	001	00:00:11:03
0015	19:27:06:01	19:27:32:16	10:01:20:09	10:01:46:24	001	00:00:26:15
0016	19:26:59:07	19:27:20:06	10:01:13:15	10:01:34:14	001	00:00:20:24
0017	19:27:13:13	19:27:24:17	10:01:23:15	10:01:34:19	001	00:00:11:04
0018	19:27:14:21	19:27:15:15	10:01:24:23	10:01:25:17	001	00:00:00:19
0019	19:27:11:22	19:27:36:15	10:01:21:24	10:01:46:17	001	00:00:24:18
0020	19:27:15:11	19:27:15:20	10:01:25:13	10:01:25:22	001	00:00:00:09
0021	19:27:19:19	19:27:22:07	10:01:29:21	10:01:32:09	001	00:00:02:13
0022	19:27:19:06	19:27:23:01	10:01:28:07	10:01:32:02	001	00:00:03:20
0023	19:27:20:19	19:27:31:03	10:01:29:20	10:01:40:04	001	00:00:10:09
0024	19:27:34:11	19:27:54:05	10:01:34:06	10:01:54:00	001	00:00:19:19
0025	19:27:36:11	19:27:54:05	10:01:36:06	10:01:54:00	001	00:00:17:19
0026	19:27:30:18	19:27:41:19	10:01:29:17	10:01:40:18	001	00:00:11:01
0027	19:27:37:07	19:27:41:19	10:01:36:06	10:01:40:18	001	00:00:04:12
0028	19:27:40:19	19:27:54:18	10:01:39:18	10:01:53:17	001	00:00:13:24

Select timecode column to enter into Cue List

☐ Player In
 ☐ Player Out
 ☒ Recorder In
 ☐ Recorder Out

There is no option for button numbers to appear in the standard EDL so the Dissolve time is used to indicate the 3 digit button number, below the button number 020 will be associated with Player In timecode 19:16:54:14

```
006 990 V C 10:00:36:22 10:00:36:22 10:00:36:22 10:00:36:22
006 1505 V D 020 19:16:54:14 19:17:38:18 10:00:36:22 10:01:21:01
006 990 AA C 10:00:38:22 10:00:36:22 10:00:38:22 10:00:36:22
```


This can be seen in line 6 of the EDL Timecode Viewer above.

This interpretation of button numbers could be used if facilities to generate a dummy EDL is available, alternatively SpotOn can load simple text files based on the format:-

```
D 023 12:34:56:01
D 132 01:23:45:10
```

This could be produced directly in a text editor or extracted from a spreadsheet as a tab delimited file.

Admin Menu

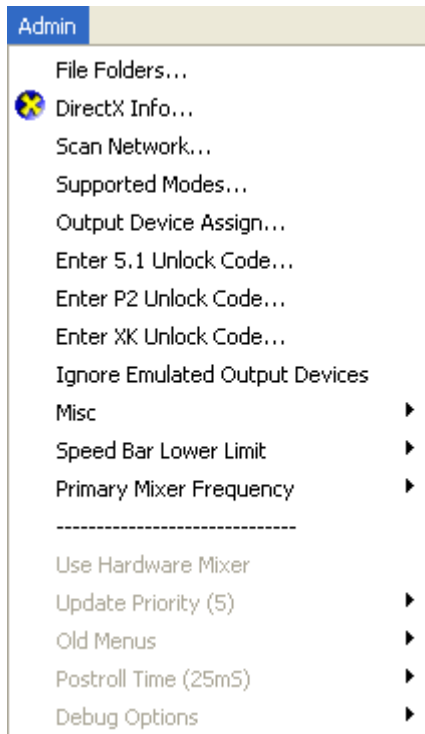

[File Folders](#)

[DirectX Info](#)

[Scan Network](#)

[Supported Modes](#)

[Output Device Assign](#)

[Enter 5.1 Unlock Code](#)

[Enter P2 Unlock Code](#)

[Enter Xk Unlock Code](#)

[Ignore Emulated Output Devices](#)

[Misc](#)

[Speed Bar Lower Limit](#)

[Primary Mixer Frequency](#)

Sets folder locations for application data

Opens Microsoft DirectX diagnostic tool

Scan network for other SpotOn systems

Analyse modes supported by audio output devices

Configures audio output patching

Enable SpotOn for 5.1 surround sound operation

Enter unlock code to enable SpotOn_P2

Enter unlock code to enable SpotOn_Xk

Prevent SpotOn from opening Emulated Output Devices

Miscellaneous settings

Define the lower limit of the speed change slider bar


Sets the Windows sound mixer sampling frequency

File Folders


File Folders option displays a selection dialog box to define the locations of the folders used for:-

- a, temporary storage when tracks are copied prior to being edited by an external WAV file editor
- b, storage for tracks loaded from a network connection or a CD
- c, root folder in which new folders are created for files extracted from packages
- d, folder for playout logs containing a timestamped listing tracks played
- e, location of session backup files which can be used to recover from a computer failure
- f, default location for User session files
- g, default folder for loading audio files


These settings are also displayed in the [Info/Status](#) listing

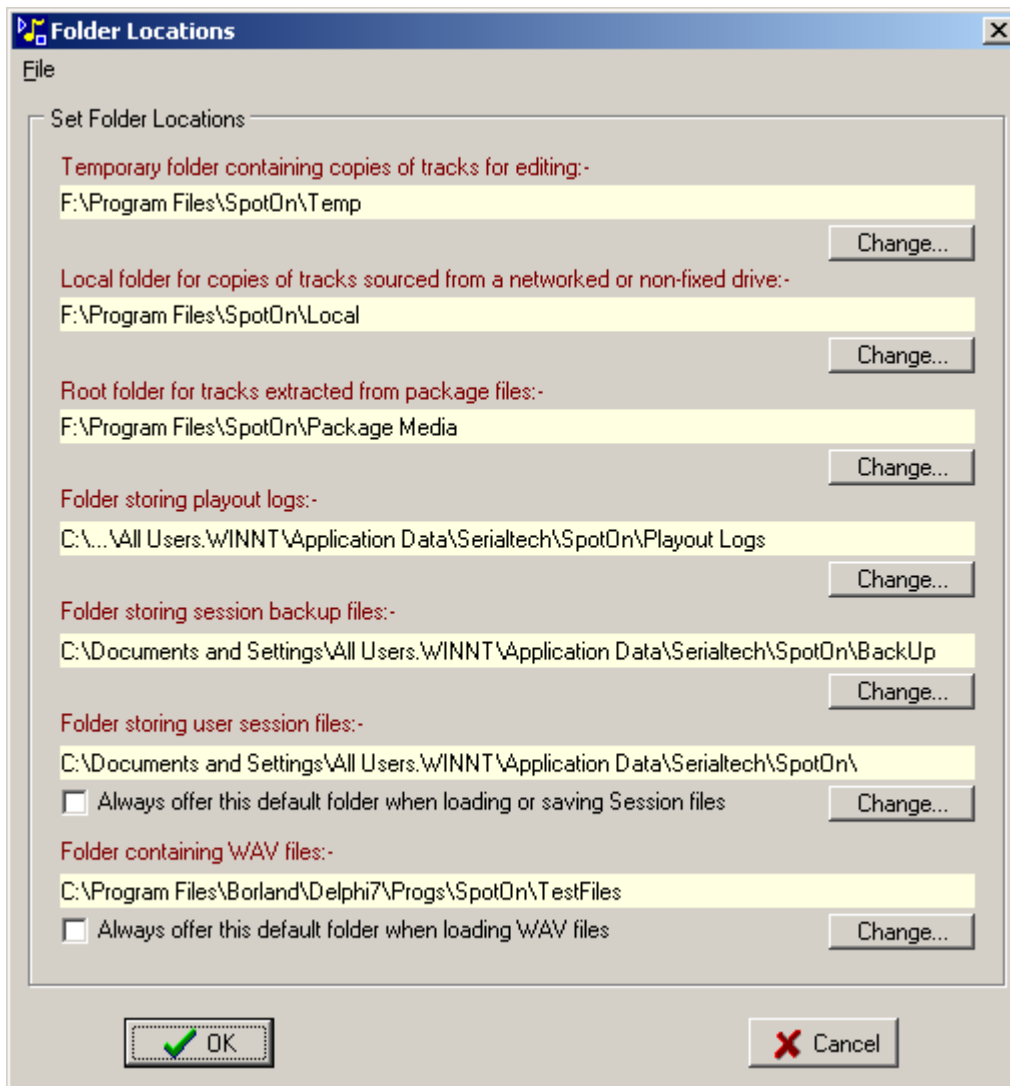


Clicking on the Change button will show a Folder Section dialog.

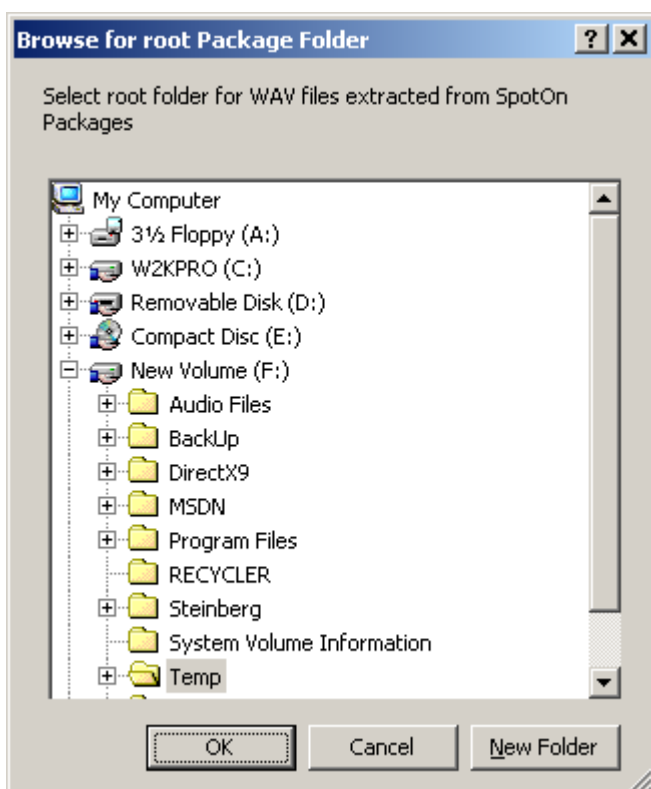

By default any files sourced from a network connection or a CD will be stored in the location defined in Folder Locations, however a dialog box will appear each time a remote file is loaded.

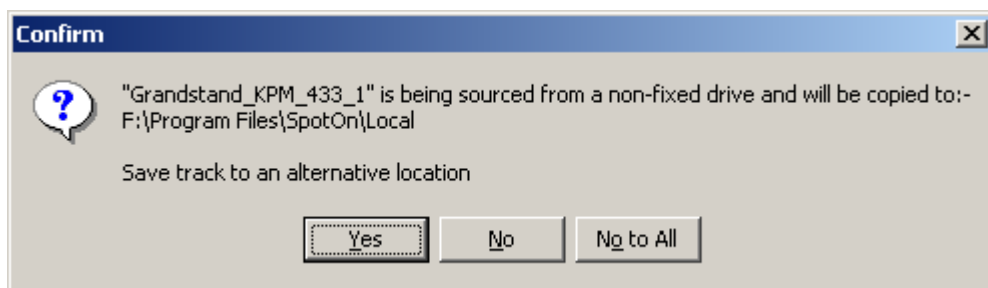


This gives the opportunity to save the file to a more appropriate - programme related - folder. If "Yes" is selected then a further folder selection dialog is shown.

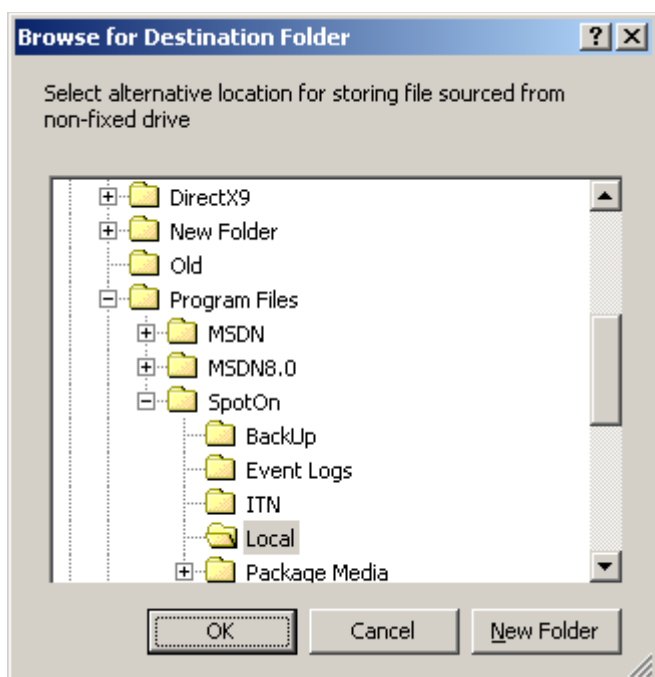

Scan Network


In order to administer a network containing several SpotOn installations, it is useful to be able to scan through all of the installations currently running and list the version number along with other system parameters.

The window below shows the result of running the scan on a small network with two installations

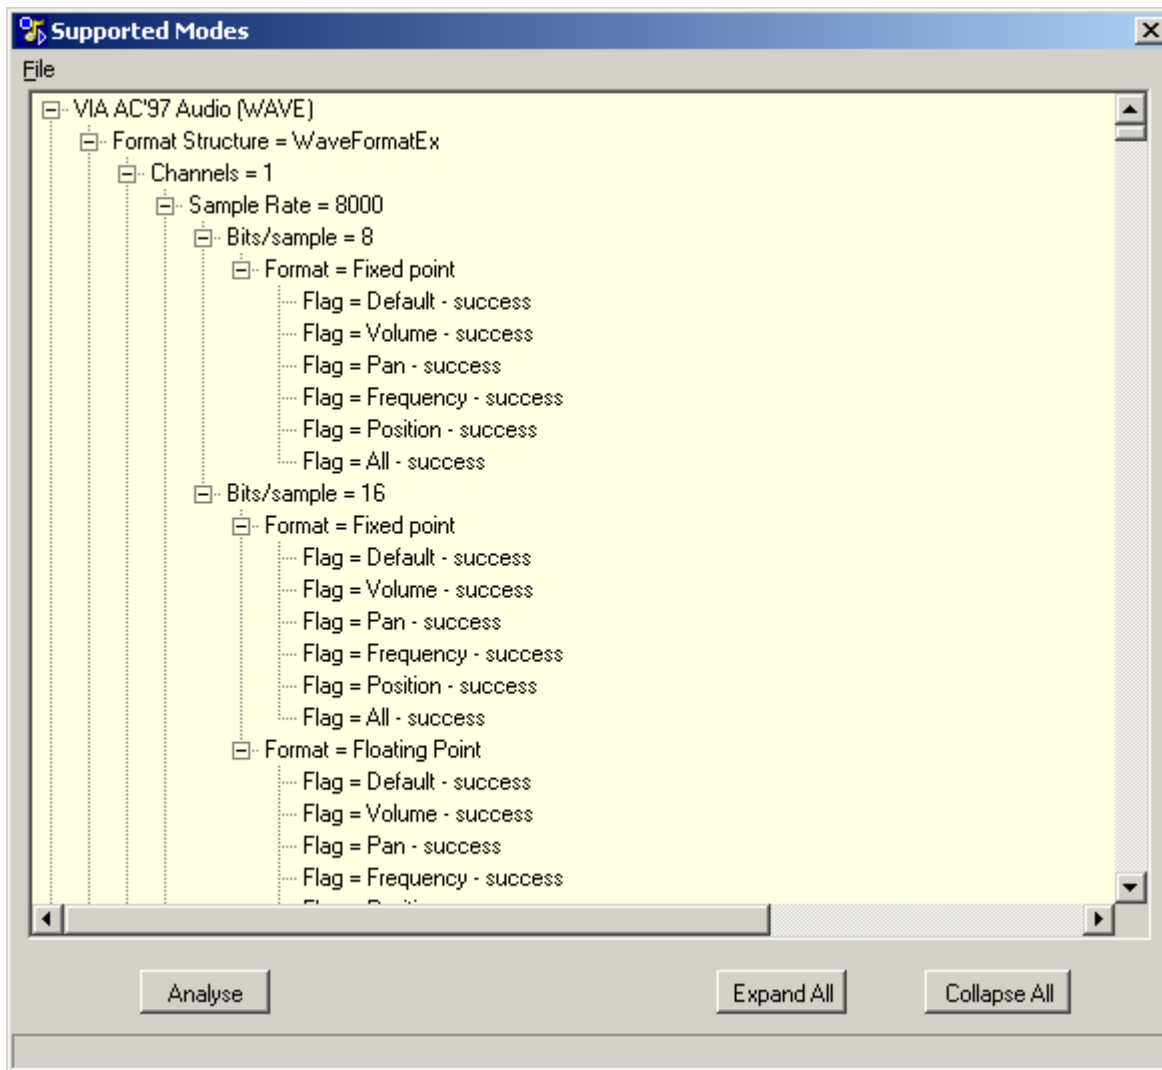


The results can be saved to a text file via the File|Save As menu option.

Output Device Assign

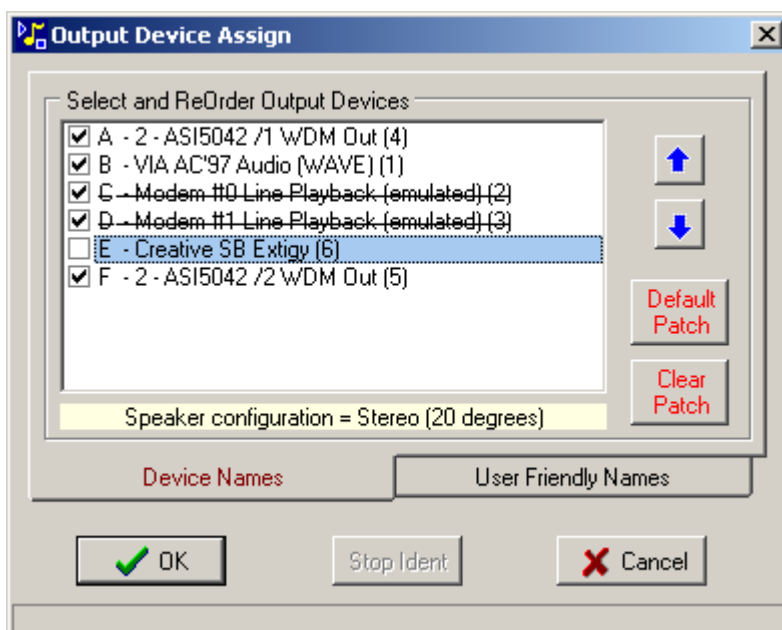


See [Output Device Assign](#) page

Enter 5.1 Unlock Code

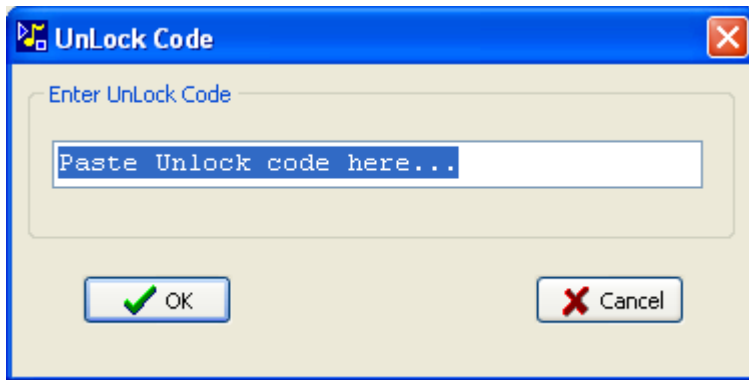

Before SpotOn can be used in 5.1 surround sound mode, an unlock code must be entered, the unlock code will be supplied when SpotOn upgrade is purchased.

If the unlock code supplied is of the form `"/multi6 /MCA1CF316F76107CE"` then the code should be entered without prefix `"/multi6 /MC"`

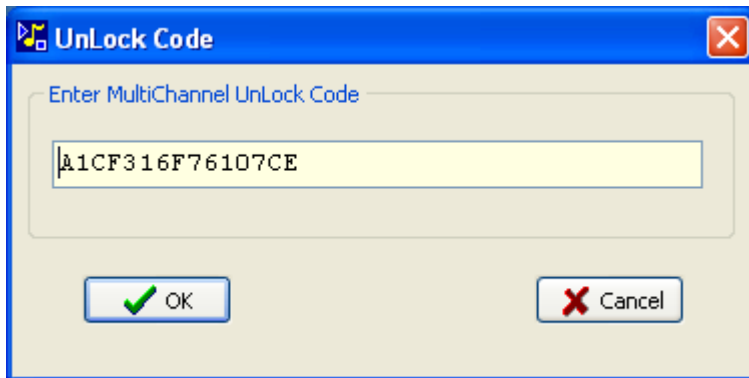


If the code entered was found to be invalid a warning dialog box is shown



If the code was valid then a shortcut placed on the Windows desktop.




Enter P2 Unlock Code

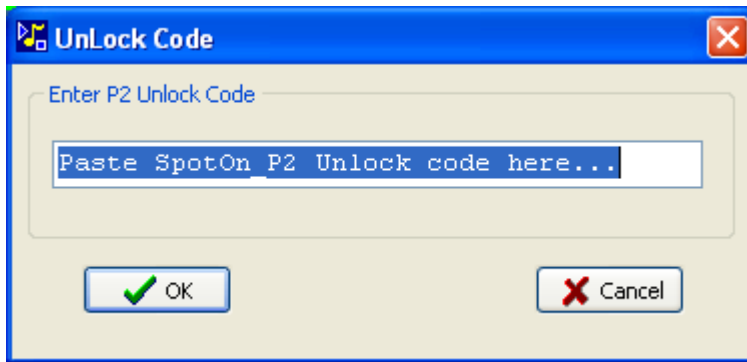


A Windows-style dialog box titled "UnLock Code" with a blue header bar and a close button (X) in the top right corner. The main area has a light beige background. At the top, it says "Enter P2 Unlock Code". Below this is a text input field with the placeholder text "Paste SpotOn_P2 Unlock code here...". At the bottom, there are two buttons: "OK" with a green checkmark icon and "Cancel" with a red X icon.

The SpotOn_P2 utility is installed with SpotOn but not enabled, to enable it enter the unlock code in one of the two formats shown below.

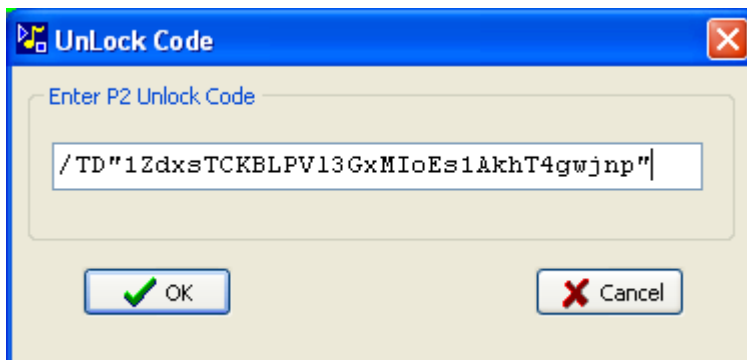


A Windows-style dialog box titled "UnLock Code" with a blue header bar and a close button (X) in the top right corner. The main area has a light beige background. At the top, it says "Enter P2 Unlock Code". Below this is a text input field containing the code: `/TD"1ZdxsTCKBLPV13GxMIoEs1AkhT4gwjnp"`. At the bottom, there are two buttons: "OK" with a green checkmark icon and "Cancel" with a red X icon.

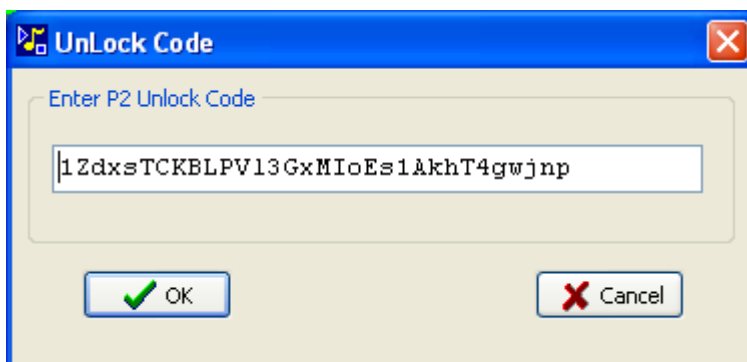



A Windows-style dialog box titled "UnLock Code" with a blue header bar and a close button (X) in the top right corner. The main area has a light beige background. At the top, it says "Enter P2 Unlock Code". Below this is a text input field containing the code: `1ZdxsTCKBLPV13GxMIoEs1AkhT4gwjnp`. At the bottom, there are two buttons: "OK" with a green checkmark icon and "Cancel" with a red X icon.

Enter XK Unlock Code

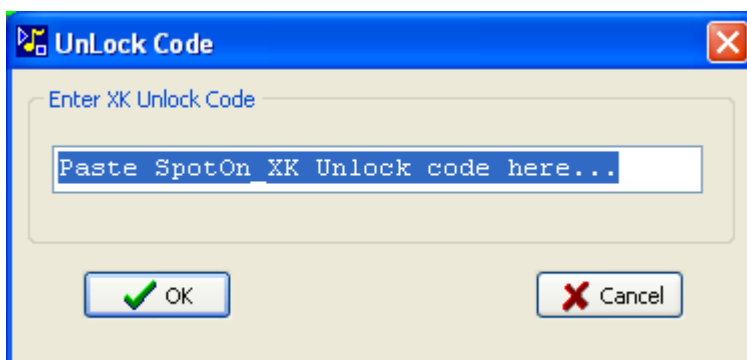

A Windows-style dialog box titled "UnLock Code" with a blue header bar and a close button (X) in the top right corner. The main area has a light beige background. At the top, it says "Enter XK Unlock Code". Below this is a text input field with the placeholder text "Paste SpotOn_XK Unlock code here...". At the bottom, there are two buttons: "OK" with a green checkmark icon and "Cancel" with a red X icon.


The SpotOn_Xk utility is installed with SpotOn but not enabled, to enable it enter the unlock code in one of the two formats shown below.

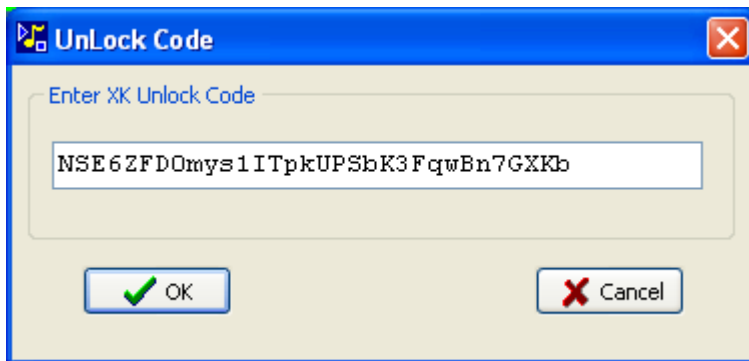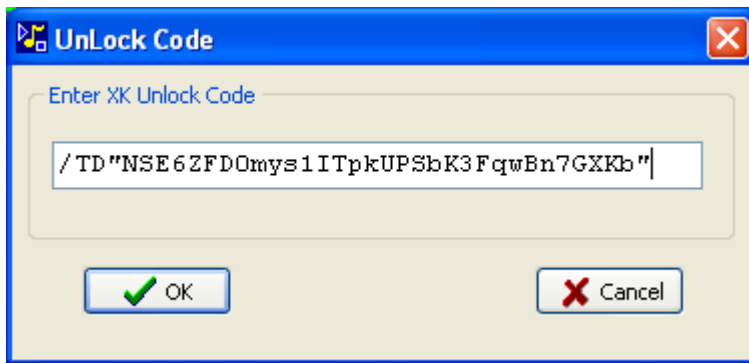


Ignore Emulated Output Devices

With some sound card drivers a single output may be presented with more than one implementation, below an AudioScience ASI5044 card shows two entries "/1 Wave Out (Emulated)" and "/01 WDM Out" that refer to the same output device.

The WDM version is the one preferred for use with SpotOn, so to allow this to be used the "Emulated" version must be ignored by checking the Ignore Emulated Devices option.

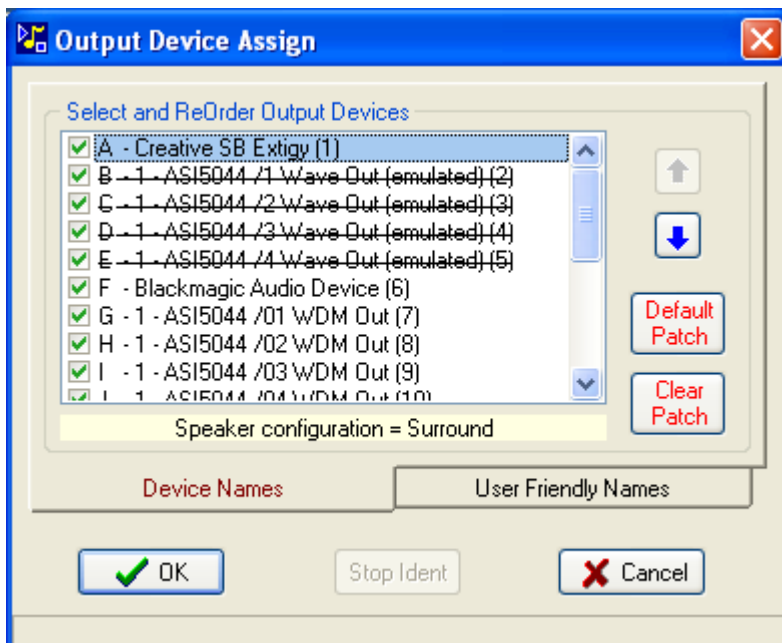


Misc

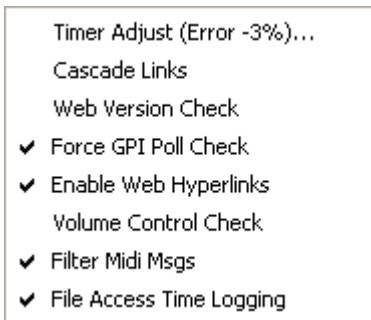


Misc - Timer Adjust

Due to the variation in performance of the Windows timing routines it may be necessary to adjust the base timer period in SpotOn this can either be 20mS or 31mS.

The menu item text shows the error, in the example below timer is 3% too long a +/- 15% error is acceptable



If the option is chosen to change the timer period then the following confirmation dialog box will be shown

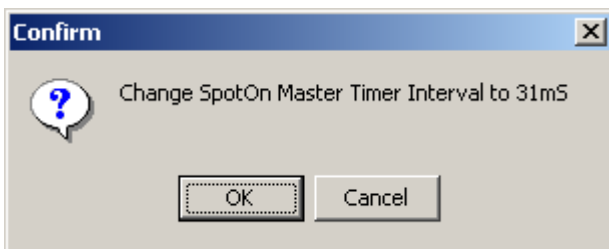

Misc - Cascade Links

In normal operation of Master/Slave links, the Play Slave link is only effective if the Master button has been triggered by a mouse click or external trigger.


The Play Slave link is not effective if the Master button has been played as a result of itself being a Play Slave.

For example if Btn 2 is a play slave of Btn 1 and Btn 3 is a play slave of Btn 2, playing Btn 1 will play Btn1 and the slave Btn 2, the play slave on Btn 3 will not automatically be triggered.

When the Cascade Links option is checked the play slave action can itself be triggered from another play slave, so in the case above, playing button 1 will cause buttons 1, 2 & 3 to play.


There is a trap to fall into with Cascaded Links, it is now possible to set up an infinite loop where a Master button ends up being triggered by itself via various Master/Play Slave links. Playing such a link could lock up SpotOn and require Task Manager to close it down, so to avoid this a limit of 32 cascaded links has been set.

Warning dialogs will appear when an infinite loop is detected.

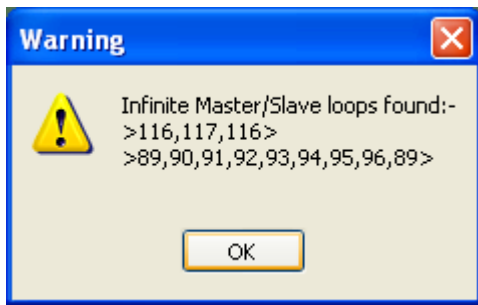


Misc - Web Version Check

If [Web Hyperlinks](#) are enabled SpotOn will attempt to check each week for new updates, if a new version is ready for download then a message dialog similar to the one shown below will appear.

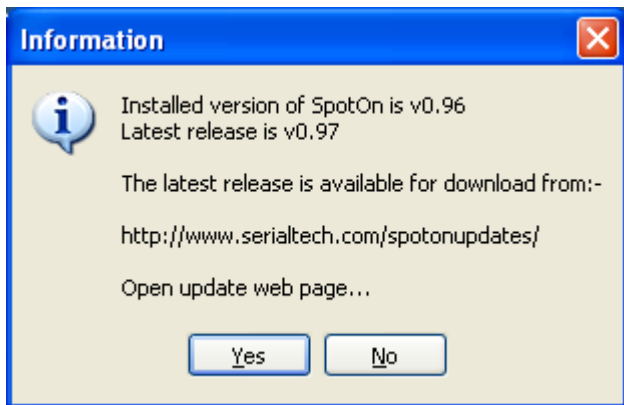

If Admin mode is enabled and an update is not available then a message will be shown indicating the current and latest versions

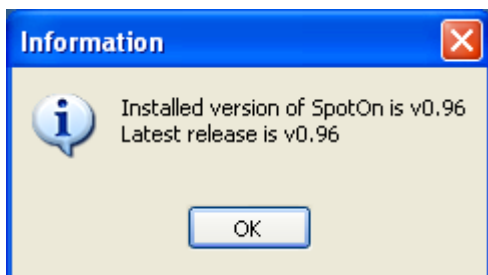



Force GPI Poll Check

Only present as a debug aid, SpotOn continuously poll GPI devices and if a device is disconnected whilst SpotOn is running it can cause problems by modulating the audio output with a 50Hz square wave.


With this option unchecked, as soon as the device is detected as being disconnected it is removed from the polling list and so the disturbance is minimised. However, this is then sensitive to a poor connection to the GPI device which may be briefly unplugged in which case the GPI would be disabled until reassigned.

Misc - Enable Web Hyperlinks

In the situation where a WWW internet connection is not provided the help menu options that access the internet can be disabled

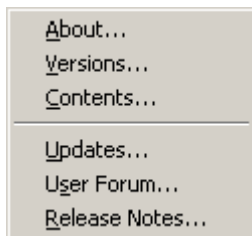

Misc - Volume Control Check

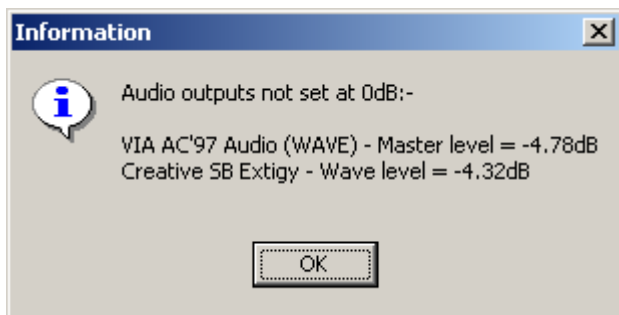

At startup SpotOn checks the settings of the Windows audio output levels, if any are not set to maximum (0dB) then a warning message is displayed, unchecking this option suppresses this warning dialog box.

Misc - Filter Midi Msgs



When Midi messages are being received very quickly SpotOn may not have time to implement all the actions, Filter Midi Msgs option was added to only act on the last messages for each channel/Note - intended for Debug use only.


Misc - File Access Time Logging

Indicates whether the Operating System keeps a record of when files were last accessed, when enabled this can slightly slow down file access speeds.

Speed Bar Lower Limit

The speed bar shown in the [Audio SetUp](#) dialog window has an upper limit of 400% (4x normal speed) and a lower limit set by the following menu option in the range 1%..25%

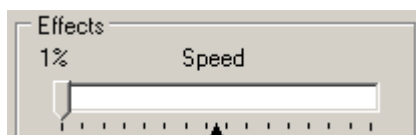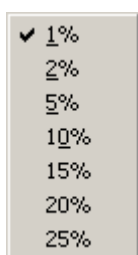

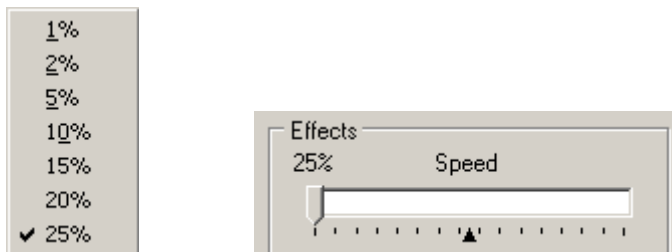

This setting also applies to the floating SpeedBars


Primary Mixer Frequency



The audio tracks are mixed together to form the main output of SpotOn, as the tracks could have different sample rates they all have to be converted to a common rate before mixing, this rate can be either of the two standards 44100Hz or 48000Hz.


SpotOn will have to be restarted for this change to take effect.

Old Menus

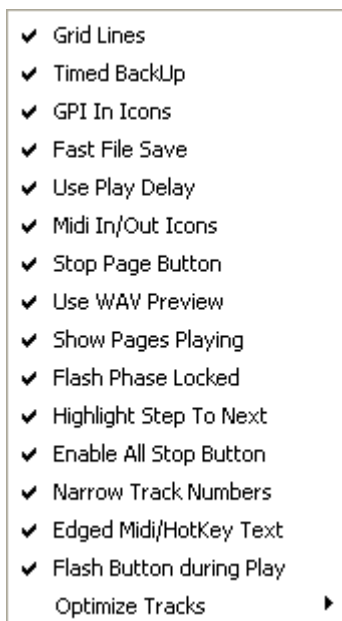

Old Menus - Grid Lines

Under some circumstances it may be necessary to highlight the gaps between the buttons, this option adds a grid of white lines between the buttons

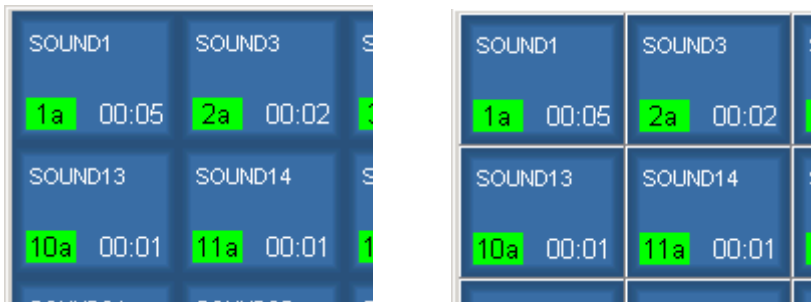


Old Menus- Timed BackUp

Backups of the current session are automatically made every 5 minutes and the last 16 files are retained - which equates to 80 minutes usage

Old Menus - GPI In Icons

By checking this option buttons that have GPIs assigned can be indicated by an extra button icon, a diamond on the left hand edge

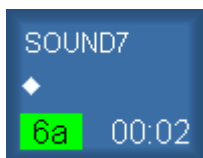

Old Menus - Fast File Save


There are two methods of regularly saving system files in the background task routines, checking this item will cause SpotOn to use the "Fast" method instead of the "Threaded" method - intended for Debug use only.

Old Menus - Play Delay

Allow delayed play on Play Next and linked Slave buttons

Old Menus - Midi In/Out Icons



In order to easily see which buttons have Midi In or Out assignments this option adds the button icons shown below designating Midi In and Midi Out respectively

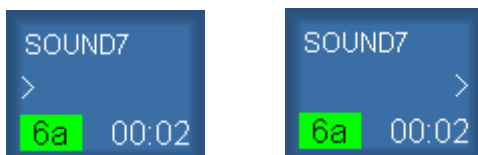

Old Menus - Stop Page Button


In addition to the All Stop button which stops all tracks on all pages, there is a Page Stop button which will stop all tracks on the current page, by default the page Stop button is hidden.

The All Stop button can be enabled/disabled via [this menu](#)

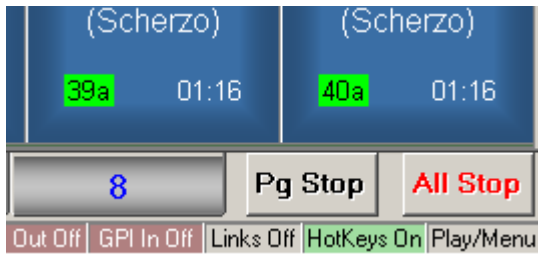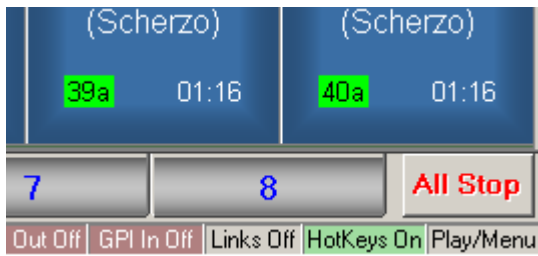

Old Menus - Use WAV Preview


Checking this option adds a track preview area to the "Load" file selector dialog

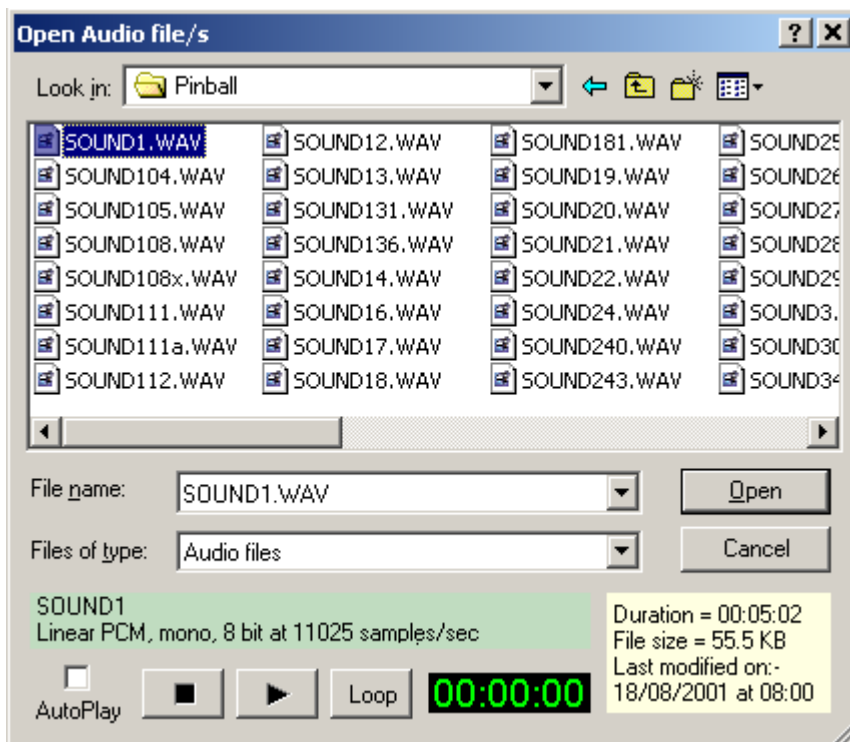

The track will be played out on the output assigned to the button about to be loaded at the [default output level](#)

Old Menus - Show Pages Playing

As an aid to know on which page tracks are being played, this option marks the page tabs in the upper left corner with a red triangle, this will flash if the Options|Flash Button During Play option is set.



Old Menu - Flash Phase Locked

Synchronize flashing of all button numbers

Old Menu - Highlight Step to Next

Step to Next mode shows the selected button with a white background to the track number





In some circumstances this may not be obvious on the screen so the Highlight Step to Next option adds extra highlighting in the corners of the button




Old Menu - Enable All Stop Button

This will disable/enable the All Stop button in the status bar

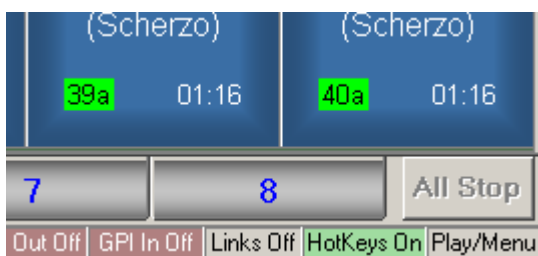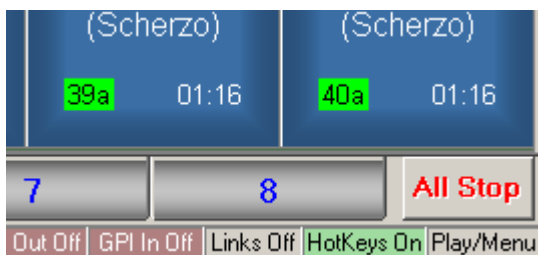

Old Menus - Narrow Track Numbers

The coloured background on the track numbers sometimes extends over the duration numbers, so hiding some or all of the modifier symbols.

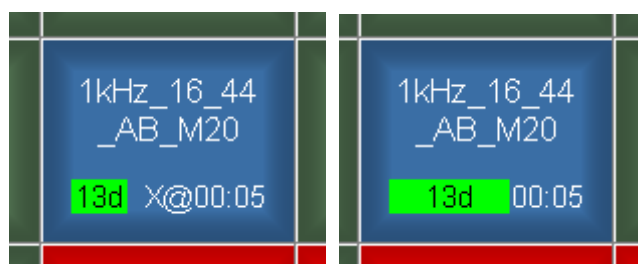

Links Off

Links On

In the situation above the switching on of the Master/Slave links causes the green text background to extend towards the right hand side of the button, this is to allow for indication of all the possible combinations of links. All buttons on a page have the text background set to the same width.

To reduce the instances of the track number hiding the duration modifiers the Narrow Track Numbers option can be checked, this will set the width of the background to be as wide as possible whilst avoiding overlapping the duration text except when absolutely necessary.



Links On

Links On

Old Menus - Edged Midi/HotKey Text


In order to improve visibility of the button Midi and HotKey text this option will add a drop shadow effect to the text



Old Menus - Flash Button During Play

Flash button number bright/dark red when playing

Old Menus - Optimize Tracks



Tracks can be optimized either globally covering all tracks on all pages, or just on the current page, so assigning the most frequently played tracks to hardware mixers.

Use Win XP Themes - enabled by default

Check the Use Win XP Themes_menu item to enable the Windows "XP theme" look when running under Windows XP or above, SpotOn will have to be restarted for this to take effect.

XP themes disabled:-




XP Themes enabled:-



Note: the actual representation will depend on the particular color scheme selected under WinXP themes, and consequentially the readability of some sections of the program may be reduced.


Output Device Assign

Output Device Assign - Clear Patch

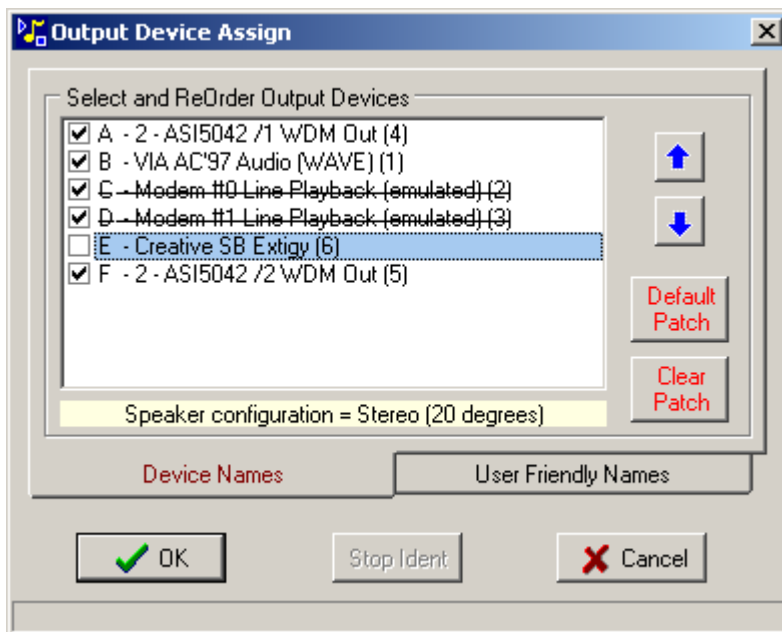


When assigning outputs for the first time or after a change of output devices eg Multi-channel/Stereo, it is recommended that the Clear Patch button is used to clear any ambiguous settings in the SpotOn configuration file.

Clicking on Clear Patch will display the dialog box below

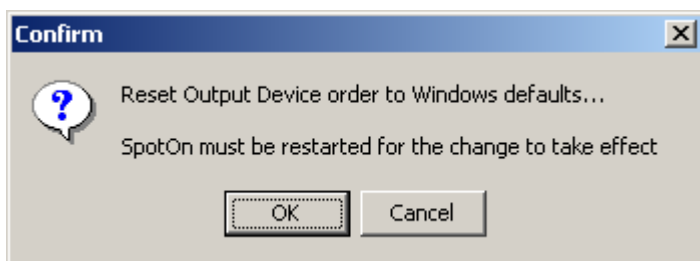


Choosing OK will close the Output Device Assign dialog and return to the main SpotOn screen.

Output Device Assign - Default Patch

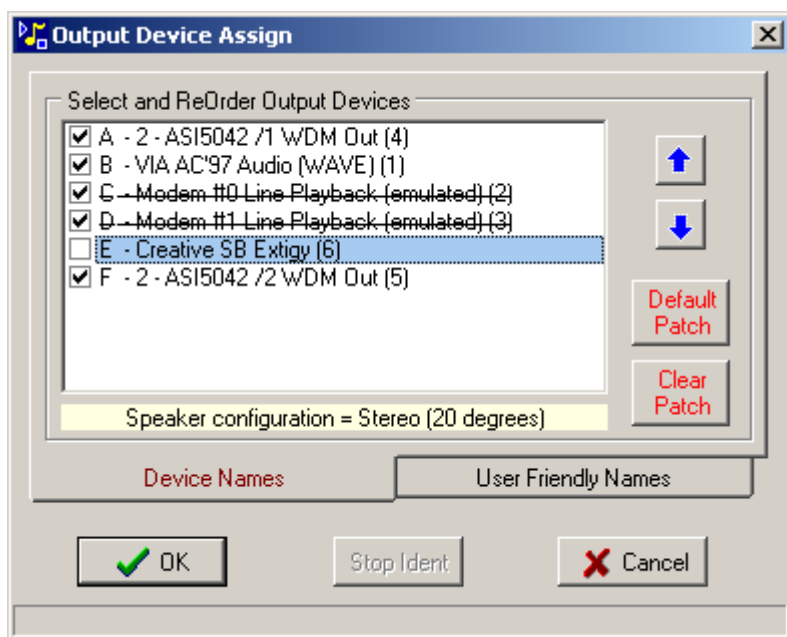


The Default Patch is saved on installation when the outputs have been initially configured. If necessary the Default Patch button will return the output device patch and masking to the installation settings.

Clicking on Default Patch will display the dialog box below

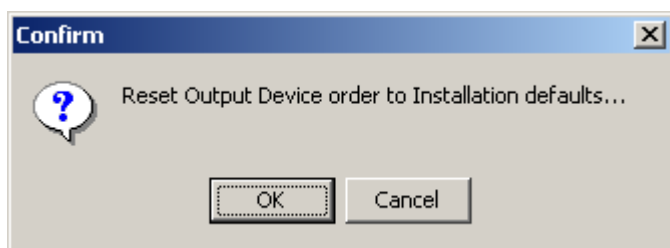

Output Device Assign - Masking

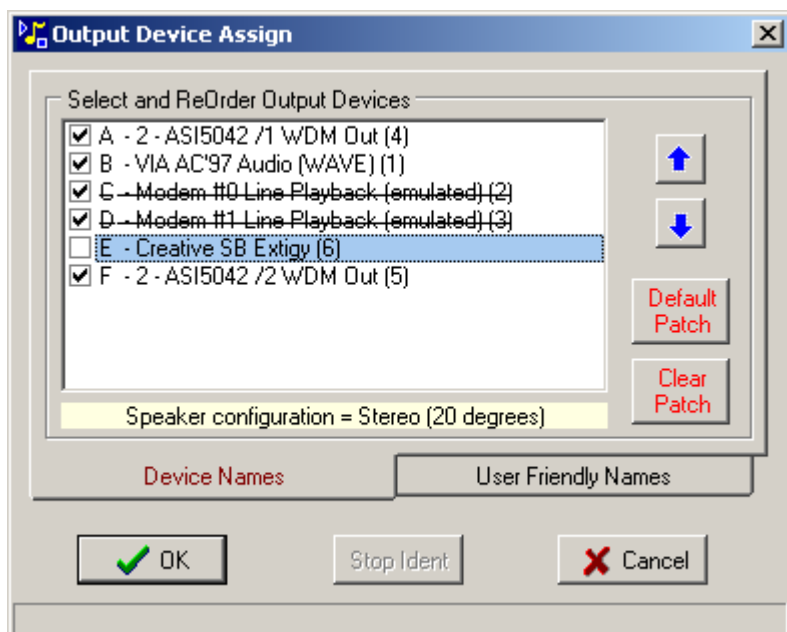

Some sound cards do not allow more than one application to access an output port simultaneously, in this case it is useful to force SpotOn to not use a specific output port so making it available for other applications.


In the example above there are seven output ports listed A..F.

Items A, B and F are sound card outputs being used by SpotOn


Items C and D are not available because they are virtual outputs provided by two modems and not in fact real sound card ports.

The remaining item E has been unchecked and therefore will be masked out of ports used by SpotOn, the masking of ports will only take effect the next time SpotOn is restarted. If there are buttons using any port/s that are masked on restart then those buttons will be assigned to device designated as the Windows Preferred audio output device, designated by the subscript '(1)' in the device list. If the Windows preferred audio output device is also masked then the buttons concerned will not be loaded.

After a restart output E is shown in red text

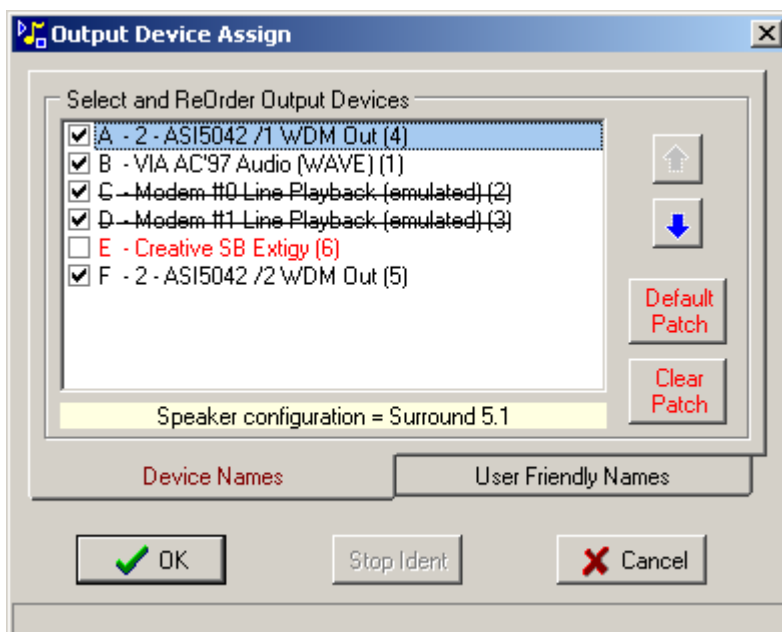

The example below shows the effect of masking outputs in the [Audio SetUp](#) dialog, where output E cannot be selected.

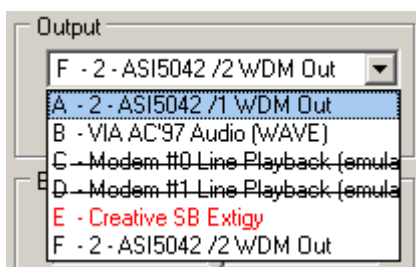


Output Device Assign - Order


The up, down and reset buttons on the right hand side of the window allows the ordering of the output devices.

If outputs currently known as A and D were to be the main options it would be useful to move them to the first two positions in the list so appearing as A and B

To do this first highlight the line describing output D

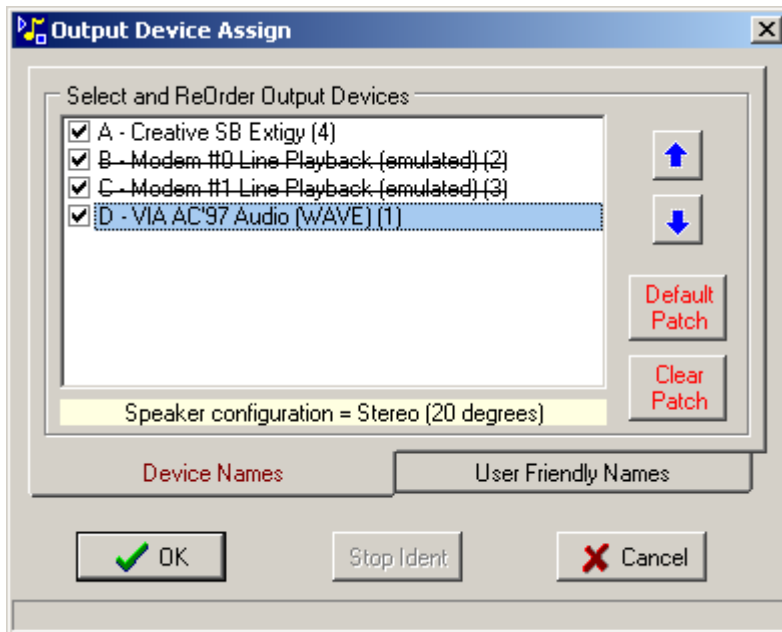


By clicking the up arrow twice the order now appears as

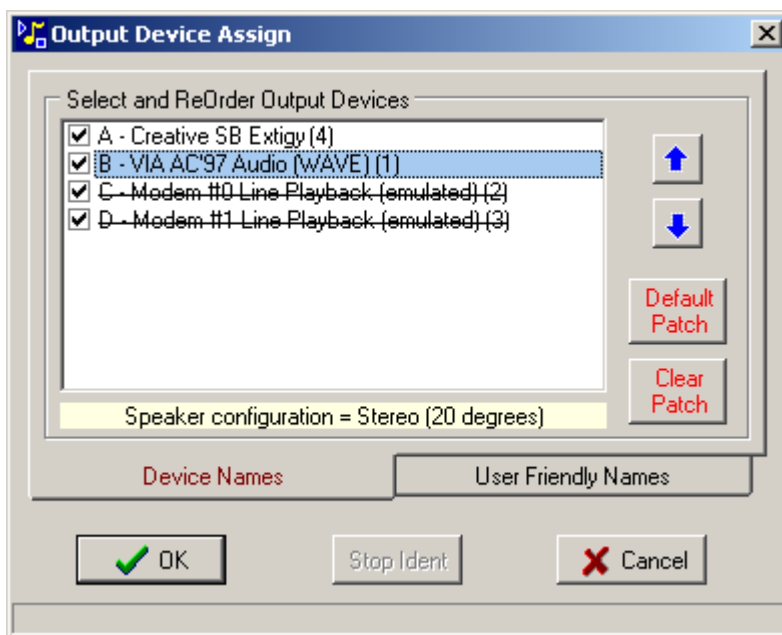

Reset Order button will restore the output device order to that which was found by the Windows OS.

Identically loaded computers may not always report the output devices in the same order, so this option is useful in making the computers 'look' the same to the user.


Exiting with OK produces a confirmation dialog box to warn that all buttons will be reloaded to in order to implement the change

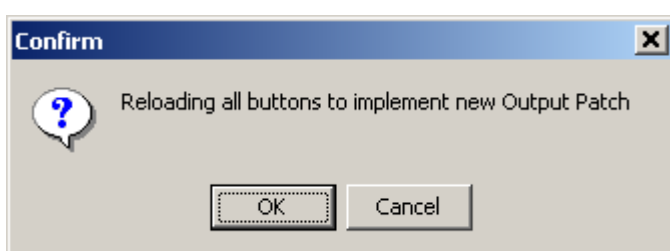


Output Device Assign - Names

The names that appear alongside the output ports are those obtained from Windows, often more informative names are required, selecting the User Friendly Names tab show the alternative names defined - these initially default to the Windows name.


The new names are enabled via the Options|Display|Use Friendly Output Names menu item.

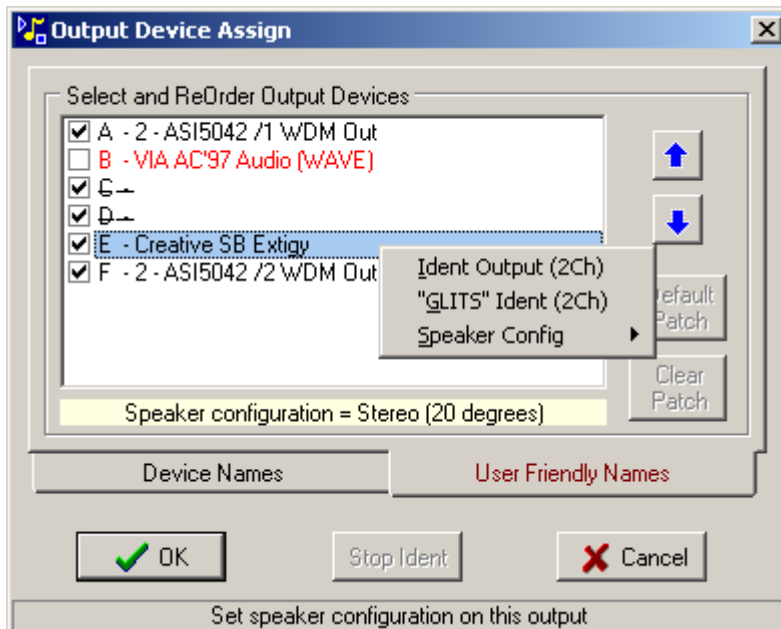


Right-click an entry and select Edit User Name, which displays the edit box below

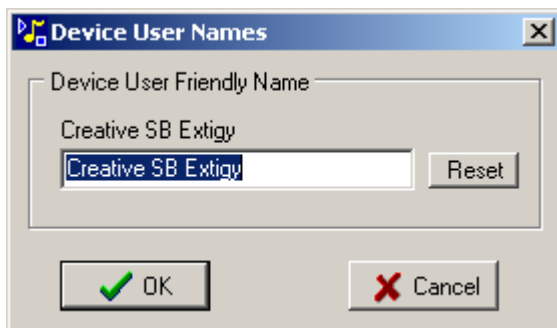


Enter the new name

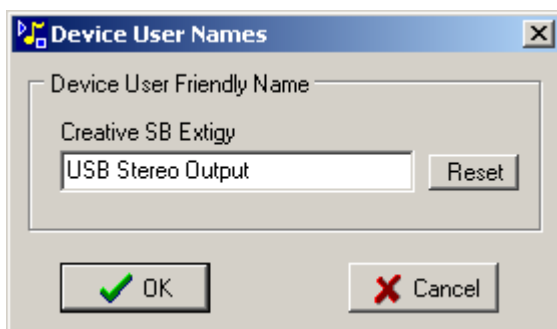

On closing the editor the name is up dated

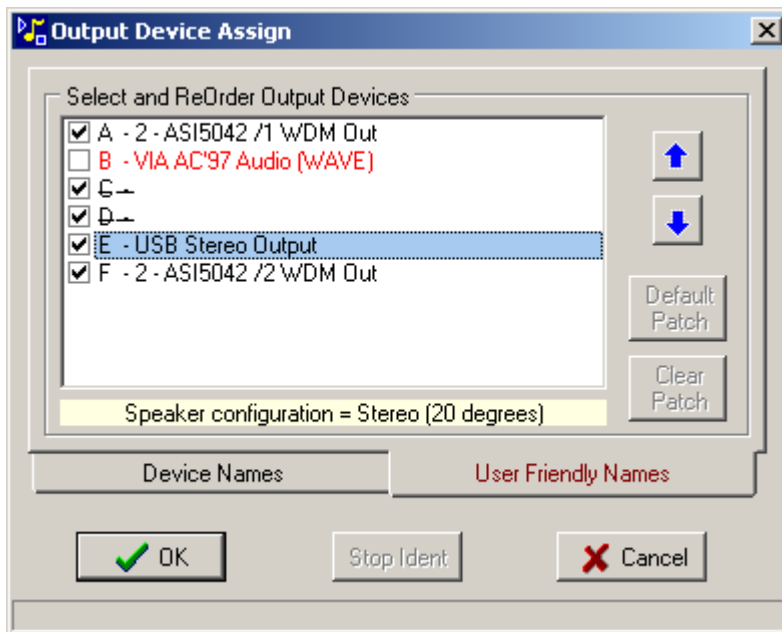


The User Friendly Names are only used in the button menu - option Audio|Output as below:-

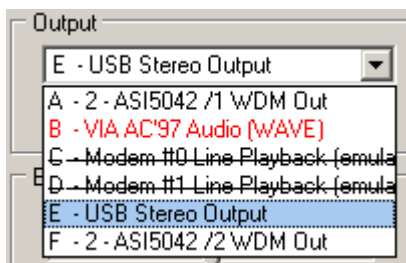


Output Device Assign - Mode


Under the list of output devices there is a panel showing the 'Speaker Configuration' of that output



To change the 'Speaker Configuration' right-click an entry and select the Speaker Config option.

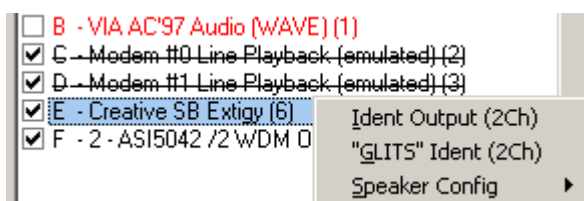

The full list of modes is shown with the three most common modes enabled.

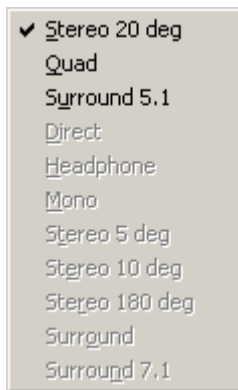


Check the appropriate option to change the mode of that output, in some cases it will also be necessary to use the manufacturers setup utility to change the hardware mode.


Output Device Assign - Idents

As SpotOn can operate in conventional 2 channel stereo and multi-channel modes, it may be useful to identify the individual output ports.

To identify output right-click the entry and select Ident option, this will start a voice ident loop spanning all output channels.

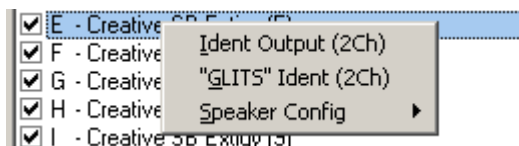

The "GLITS" test tone sequence is available for stereo sound configurations and is formed by interrupted 1kHz tone with one break on the left channel followed by two breaks on the right channel.

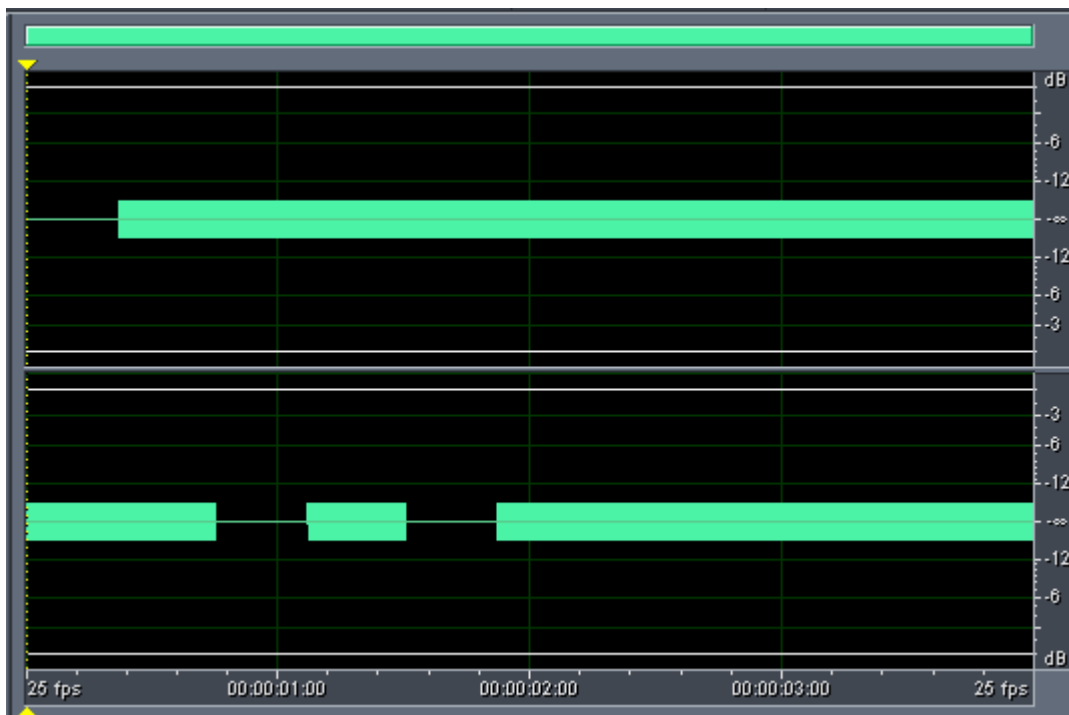

Similarly the "BLITS" test tone sequence is available for 5.1 surround sound configurations - see [BLITS](#) page for further details

☒ A - 2 - ASI5042 /1 WDM Out (4)

☐ B - VIA AC'97 Audio (WAVE) (1)


☒ C - Modem #0 Line Playback (em

☒ D - Modem #1 Line Playback (em


Ident Output (6Ch)

"BLITS" Ident (6Ch)

Speaker Config ▶

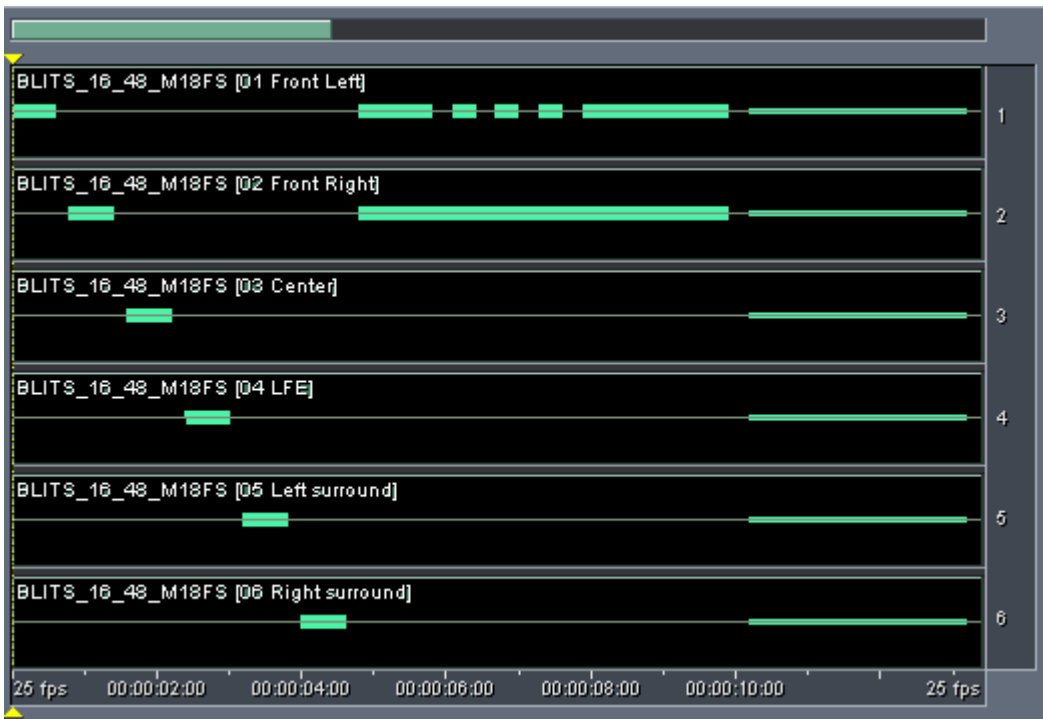

Help Menu

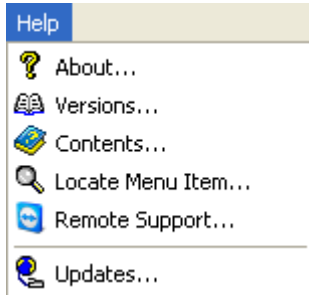

About	Just displays an 'About Box'
Versions	Shows Versions page from help file
Contents	Opens this help file
Locate Menu Item	Search dialog for finding menu items
Remote Support	Utility to provide remote support of the SpotOn system

*Updates Accesses SpotOn updates web page


*Enabled via [Admin menu](#)

Locate Menu Item

The dialog below allows the menus to be searched for a keyword, the search term 'button' lists 18 items.

The results shown in blue text are hyperlinks to menu dialogs and can be clicked to open up the appropriate dialog box.

The format of the results includes the main menu item followed by a number of menu subitems eg Options | Display.

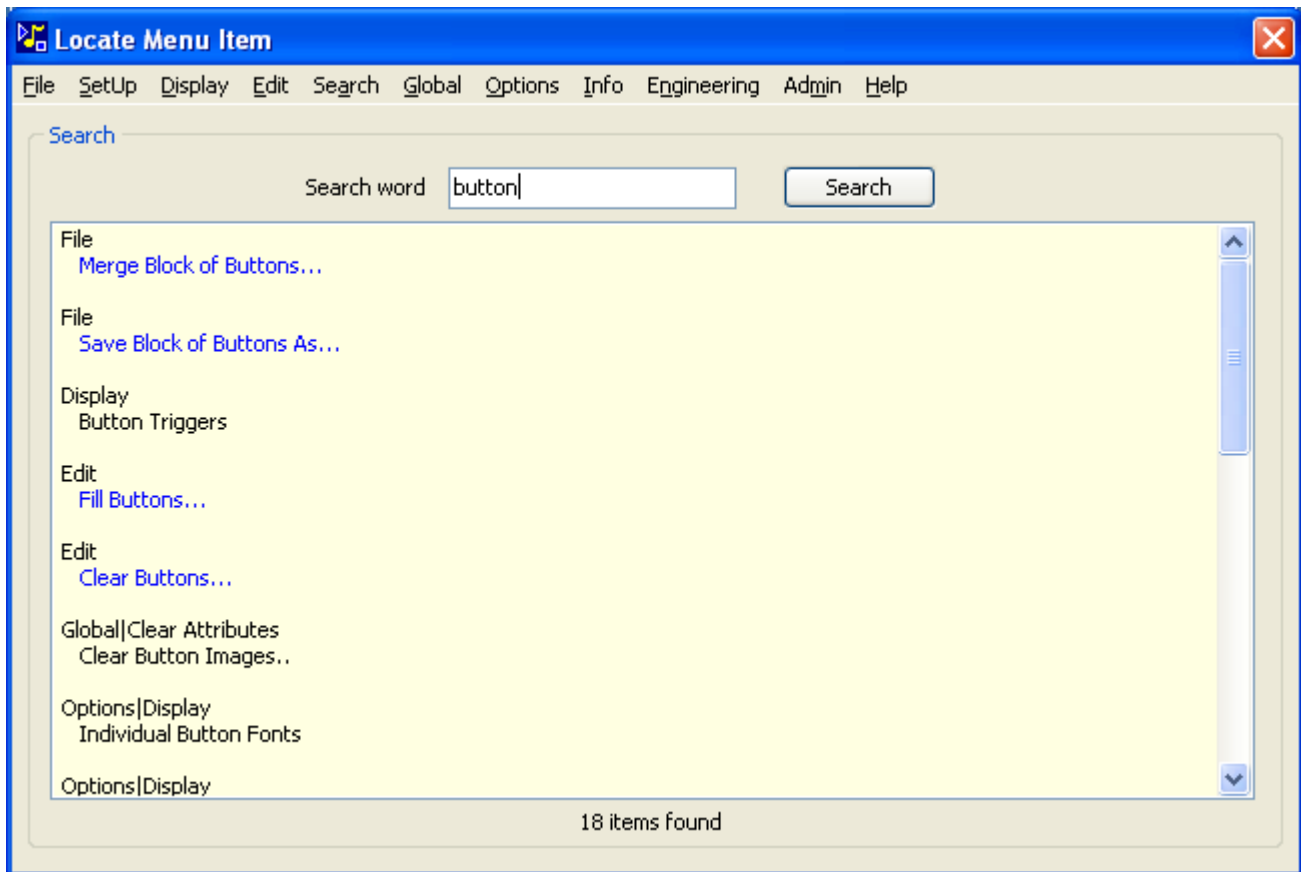


The menu bar shown at the top of the dialog is a copy of the main SpotOn menu and is live.


Remote Support

Remote support is available for SpotOn, prior arrangement with the supplier is required for this facility. The [TeamViewer](#) utility is used to provide remote access to the SpotOn computer.


A client application needs to be run on the local computer to allow access.

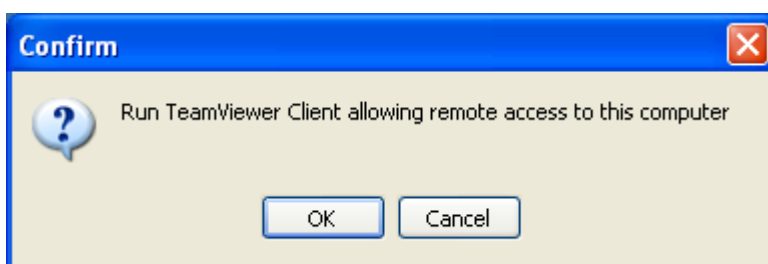

The ID and password displayed on the SpotOn computer should be passed on to the SpotOn supplier so that remote access can be initiated.

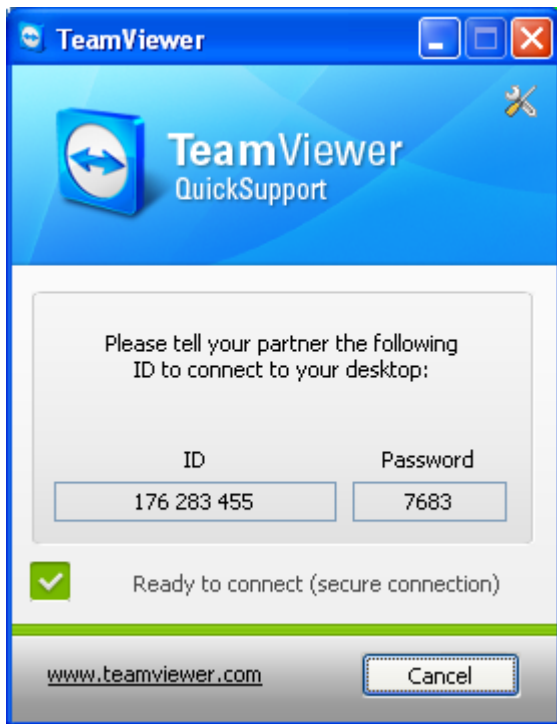

Button PopUp Menu

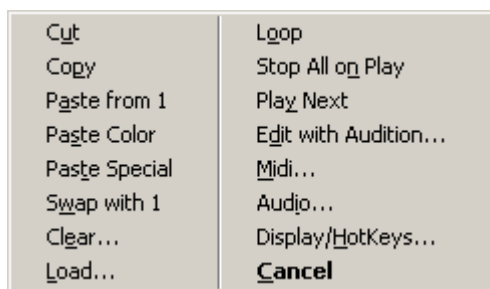

The items in the left hand column deal with the button as a whole, the items on the right cover the parameters of the track loaded into the button.

The **Cut**-to clipboard, **Copy**-to clipboard and **Paste**-from clipboard options allow tracks to be moved between buttons, Paste Colour will take the colour of the "Copied" button and paste it to a destination button enabling say, a set of buttons with similar sounds to have the same colour.

Swap will exchange the button "Copied" to the clipboard with the destination button.

Clear will remove all references to a track from a single button

Load and **Browse** display file selection dialogs for loading of tracks to buttons.

The first three items in the right hand column as options that can be checked or unchecked.


Loop when checked will cause the track play command to start playing the

Stop All on Play if this option is checked when the track begins to play all other tracks being played will fade out using their individual fade times, this is indicated by a small square halfway up the right hand edge of the button.

Alternatively tracks can be set to stop immediately without fades by muting the audio on this button (see [Audio Setup](#)), in this case the square box icon is replaced by a square outline

An advanced operation of Stop on Mouse Up is available by ctrl+clicking this option. When selected the track will play whilst the left mouse button is held down and stop when it is released, the mode is indicated by a white outlined red square on the right hand side of the button

Play Next checking this option will cause the track contained in the next highest button to play when this track reaches the end, this is indicated by a small right facing arrow halfway up the right hand edge of the button

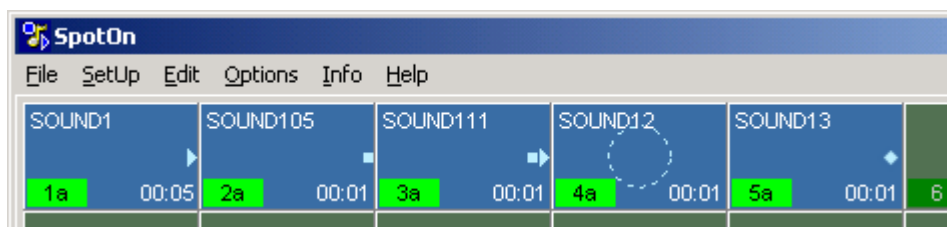

When the track on button 1 reaches the end, Button 2 will begin to play

When button 2 plays any other tracks that may be playing will be stopped

When button 3 plays it will also stop any other tracks that are currently playing and will then play button 4 when the track on button 3 reaches the end.

Button 4 is set to loop continuously

Edit opens up the user defined WAV file editor, this editor is selected via SetUp|Editor menu

Midi see [Midi Assignment](#)

Audio see [Audio Setup](#)

Display see [Display Options](#)

For a full description of the popup menu options see [Button Menus](#) page