ECG-HRM

Generated by Doxygen 1.9.7

| 1 Module Index | 2 |
|--------------------------------|----|
| 1.1 Modules | 2 |
| 2 Data Structure Index | 2 |
| 2.1 Data Structures | 2 |
| 3 File Index | 2 |
| 3.1 File List | 2 |
| 4 Module Documentation | 4 |
| 4.1 Device Drivers | 4 |
| 4.1.1 Detailed Description | 4 |
| 4.1.2 ADC | |
| 4.1.3 GPIO | 5 |
| 4.1.4 ILI9341 | 7 |
| 4.1.5 PLL | 17 |
| 4.1.6 SPI | 18 |
| 4.1.7 SysTick | 21 |
| 4.1.8 Timer | 22 |
| 4.1.9 UART | 27 |
| 4.2 Application Software | 31 |
| 4.2.1 Detailed Description | 31 |
| 4.2.2 Debug | 32 |
| 4.2.3 Filter | 32 |
| 4.2.4 LCD | 32 |
| 4.2.5 QRS | 38 |
| 4.2.6 UserCtrl | 38 |
| 4.3 Program Threads | 38 |
| 4.3.1 Detailed Description | 39 |
| 4.3.2 Function Documentation | |
| 5 Data Structure Documentation | 40 |
| 5.1 LCD_t Struct Reference | 40 |
| 6 File Documentation | 40 |
| 6.1 Debug.h File Reference | 40 |
| 6.1.1 Detailed Description | |
| 6.2 Filter.h File Reference | |
| 6.2.1 Detailed Description | |
| 6.3 LCD.c File Reference | |
| 6.3.1 Detailed Description | |
| 6.4 LCD.h File Reference | |
| 6.4.1 Detailed Description | |
| 6.5 QRS.h File Reference | |
| | |

69

| 6.5.1 Detailed Description | . 46 |
|-------------------------------|------|
| 6.6 UserCtrl.h File Reference | . 47 |
| 6.6.1 Detailed Description | . 47 |
| 6.6.2 Function Documentation | . 48 |
| 6.7 ADC.c File Reference | . 48 |
| 6.7.1 Detailed Description | . 48 |
| 6.8 ADC.h File Reference | . 49 |
| 6.8.1 Detailed Description | . 49 |
| 6.9 GPIO.c File Reference | . 50 |
| 6.9.1 Detailed Description | . 50 |
| 6.10 GPIO.h File Reference | . 51 |
| 6.10.1 Detailed Description | . 52 |
| 6.11 ILI9341.c File Reference | . 52 |
| 6.11.1 Detailed Description | . 54 |
| 6.12 ILI9341.h File Reference | . 54 |
| 6.12.1 Detailed Description | . 56 |
| 6.13 PLL.c File Reference | . 57 |
| 6.13.1 Detailed Description | . 57 |
| 6.14 PLL.h File Reference | . 57 |
| 6.14.1 Detailed Description | . 58 |
| 6.15 SPI.c File Reference | . 59 |
| 6.15.1 Detailed Description | . 59 |
| 6.16 SPI.h File Reference | . 60 |
| 6.16.1 Detailed Description | . 61 |
| 6.17 SysTick.c File Reference | . 61 |
| 6.17.1 Detailed Description | . 61 |
| 6.18 SysTick.h File Reference | . 62 |
| 6.18.1 Detailed Description | . 62 |
| 6.19 Timer.c File Reference | . 63 |
| 6.19.1 Detailed Description | . 64 |
| 6.20 Timer.h File Reference | . 64 |
| 6.20.1 Detailed Description | . 65 |
| 6.21 UART.c File Reference | . 65 |
| 6.21.1 Detailed Description | . 66 |
| 6.22 UART.h File Reference | . 66 |
| 6.22.1 Detailed Description | . 67 |
| 6.23 main.c File Reference | . 68 |
| 6.23.1 Detailed Description | . 68 |
| | |

Index

1 Module Index

1.1 Modules

Here is a list of all modules:

| Device Drivers | 4 |
|----------------------|----|
| ADC | 4 |
| GPIO | 5 |
| ILI9341 | 7 |
| PLL | 17 |
| SPI | 18 |
| SysTick | 21 |
| Timer | 22 |
| UART | 27 |
| Application Software | 31 |
| Debug | 32 |
| Filter | 32 |
| LCD | 32 |
| QRS | 38 |
| UserCtrl | 38 |
| Program Threads | 38 |

2 Data Structure Index

2.1 Data Structures

Here are the data structures with brief descriptions:

LCD_t 40

3 File Index

3.1 File List

Here is a list of all documented files with brief descriptions:

3.1 File List 3

| Debug.h Functions to output debugging information to a serial port via UART | 40 |
|---|----|
| Filter.h Functions to implement digital filters via linear constant coefficient difference equations (LC-CDEs) | 41 |
| LCD.c Source code for LCD module | 42 |
| LCD.h Module for outputting the ECG waveform and HR to a liquid crystal display (LCD) | 43 |
| QRS.h QRS detection algorithm functions | 46 |
| UserCtrl.h Interface for user control module | 47 |
| ADC.c Source code for ADC module | 48 |
| ADC.h Driver module for analog-to-digital conversion (ADC) | 49 |
| GPIO.c Source code for GPIO module | 50 |
| GPIO.h Driver module for using the LaunchPad's onboard switches and RGB LEDs for GPIO and interrupts | 51 |
| ILI9341.c Source code for ILI9341 module | 52 |
| ILI9341.h Driver module for interfacing with an ILI9341 LCD driver | 54 |
| PLL.c Implementation details for phase-lock-loop (PLL) functions | 57 |
| PLL.h Driver module for activating the phase-locked-loop (PLL) | 57 |
| SPI.c Source code for SPI module | 59 |
| SPI.h Driver module for using the serial peripheral interface (SPI) protocol | 60 |
| SysTick.c Implementation details for SysTick functions | 61 |
| SysTick.h Driver module for using SysTick-based timing and/or interrupts | 62 |
| Timer.c Implementation for timer module | 63 |
| Timer.h Driver module for timing (Timer0) and interrupts (Timer1) | 64 |

| UART.c | |
|---|----|
| Source code for UART module | 65 |
| UART.h | |
| Driver module for serial communication via UART0 and UART 1 | 66 |
| main.c | |
| Main program file for ECG-HRM | 68 |

4 Module Documentation

4.1 Device Drivers

Device driver modules.

Modules

• ADC

Functions for differential-input analog-to-digital conversion.

• GPIO

Functions for interfacing the LaunchPad's RGB LEDs (PF1-3) and switches (PF0/4).

• ILI9341

Functions for interfacing an ILI9341-based 240RGBX320 LCD via SPI.

• PLL

Function for initializing the phase-locked loop.

• SPI

Functions for SPI-based communication via SSI0 peripheral.

SysTick

Functions for timing and periodic interrupts via SysTick.

Timer

Functions for timing and periodic interrupts via general-purpose timer modules (GPTM).

• UART

Functions for UART-based communication.

4.1.1 Detailed Description

Device driver modules.

4.1.2 ADC

Functions for differential-input analog-to-digital conversion.

Files

• file ADC.c

Source code for ADC module.

• file ADC.h

Driver module for analog-to-digital conversion (ADC).

4.1.2.1 Detailed Description

Functions for differential-input analog-to-digital conversion.

4.1.3 GPIO

Functions for interfacing the LaunchPad's RGB LEDs (PF1-3) and switches (PF0/4).

Files

• file GPIO.c

Source code for GPIO module.

· file GPIO.h

Driver module for using the LaunchPad's onboard switches and RGB LEDs for GPIO and interrupts.

Macros

- #define LED_RED (uint8_t) 0x02
- #define LED GREEN (uint8 t) 0x08
- #define LED_BLUE (uint8_t) 0x04
- #define LED_YELLOW (LED_RED + LED_GREEN)
- #define **LED_CYAN** (LED_BLUE + LED_GREEN)
- #define **LED_PURPLE** (LED_RED + LED_BLUE)
- #define LED_WHITE (LED_RED + LED_BLUE + LED_GREEN)

Functions

```
• void GPIO_PF_Init (void)
```

Initialize GPIO Port F.

void GPIO_PF_LED_Init (void)

Initialize PF1-3 to interface the LaunchPad's onboard RGB LED.

void GPIO_PF_LED_Write (uint8_t color_mask, uint8_t on_or_off)

Write a 1 or 0 to the selected LED(s).

• void GPIO_PF_LED_Toggle (uint8_t color_mask)

Toggle the selected LED(s).

• void GPIO_PF_Sw_Init (void)

Initialize PF0/4 to interface the LaunchPad's onboard switches. PF4 is Sw1, and PF0 is Sw2.

void GPIO_PF_Interrupt_Init (void)

Initialize GPIO Port F interrupts via Sw1 and Sw2.

4.1.3.1 Detailed Description

Functions for interfacing the LaunchPad's RGB LEDs (PF1-3) and switches (PF0/4).

4.1.3.2 Function Documentation

GPIO_PF_Init()

Initialize GPIO Port F.

Here is the caller graph for this function:



GPIO_PF_Interrupt_Init()

Initialize GPIO Port F interrupts via Sw1 and Sw2.

GPIO_PF_LED_Init()

Initialize PF1-3 to interface the LaunchPad's onboard RGB LED.

GPIO_PF_LED_Toggle()

Toggle the selected LED(s).

Parameters

| color_mask | Hex. number of LED pin(s) to write to. 0x02 (PF1) – RED; 0x04 (PF2) – BLUE; 0x08 (PF3) – | |
|------------|--|--|
| | GREEN | |

GPIO_PF_LED_Write()

Write a 1 or 0 to the selected LED(s).

Parameters

| color_mask | Hex. number of LED pin(s) to write to. 0x02 (PF1) – RED; 0x04 (PF2) – BLUE; 0x08 (PF3) – GREEN | |
|------------|--|--|
| on_or_off | =0 for OFF, >=1 for ON | |

GPIO_PF_Sw_Init()

```
void GPIO_PF_Sw_Init (
     void )
```

Initialize PF0/4 to interface the LaunchPad's onboard switches. PF4 is Sw1, and PF0 is Sw2.

Here is the caller graph for this function:



4.1.4 ILI9341

Functions for interfacing an ILI9341-based 240RGBX320 LCD via SPI.

Files

• file ILI9341.c

Source code for ILI9341 module.

• file ILI9341.h

Driver module for interfacing with an ILI9341 LCD driver.

Macros

- #define NOP (uint8_t) 0x00
- #define SWRESET (uint8_t) 0x01
- #define SPLIN (uint8 t) 0x10
- #define SPLOUT (uint8 t) 0x11
- #define PTLON (uint8 t) 0x12
- #define NORON (uint8 t) 0x13
- #define **DINVOFF** (uint8_t) 0x20
- #define DINVON (uint8 t) 0x21
- #define CASET (uint8_t) 0x2A
- #define PASET (uint8 t) 0x2B
- #define RAMWR (uint8_t) 0x2C
- #define DISPOFF (uint8_t) 0x28
- #define DISPON (uint8_t) 0x29
- #define PLTAR (uint8 t) 0x30
- #define VSCRDEF (uint8 t) 0x33
- #define MADCTL (uint8_t) 0x36
- #define VSCRSADD (uint8_t) 0x37
- #define IDMOFF (uint8 t) 0x38
- #define IDMON (uint8 t) 0x39
- #define PIXSET (uint8 t) 0x3A
- #define FRMCTR1 (uint8 t) 0xB1
- #define PRCTR (uint8_t) 0xB5
- #define IFCTL (uint8 t) 0xF6
- #define NUM COLS (uint16 t) 240
- #define NUM_ROWS (uint16 t) 320

Functions

void ILI9341 Init (void)

Initialize the LCD driver, the SPI module, and Timer2A.

void ILI9341_resetHard (void)

Perform a hardware reset of the LCD driver.

void ILI9341 resetSoft (void)

Perform a software reset of the LCD driver.

void ILI9341_setSleepMode (bool is_sleeping)

Enter or exit sleep mode. The LCD driver is in sleep mode by default upon powering on or either kind of reset.

void ILI9341_setDispMode (bool is_normal, bool is_full_colors)

Set the display area and color expression.

void ILI9341_setPartialArea (uint16_t rowStart, uint16_t rowEnd)

Set the partial display area for partial mode. Call before activating partial mode via ILI9341_setDisplayMode().

void ILI9341 setDispInversion (bool is ON)

Toggle display inversion. Turning ON causes colors to be inverted on the display.

void ILI9341 setDispOutput (bool is_ON)

Turn display output ON or OFF. This function clears the display and stops outputting to the display area, but does not affect frame memory or power.

void ILI9341 setScrollArea (uint16 t topFixedArea, uint16 t vertScrollArea, uint16 t bottFixedArea)

Set the vertical scrolling area of the display. The sum of the three parameters should be equal to the max number of rows $NUM_ROWS = 320$.

void ILI9341_setScrollStart (uint16_t startRow)

Set the start row for vertical scrolling.

 void ILI9341_setMemAccessCtrl (bool areRowsFlipped, bool areColsFlipped, bool areRowsColsSwitched, bool isVertRefreshFlipped, bool isColorOrderFlipped, bool isHorRefreshFlipped)

Set how data is converted from memory to display.

void ILI9341 setColorDepth (bool is 16bit)

Set the pixel format to be 16-bit (65K colors) or 18-bit (262K colors).

void ILI9341_NoOpCmd (void)

Send the "No Operation" command ($NOP = 0 \times 00$) to the LCD driver. Can be used to terminate the "Memory Write" (RAMWR) and "Memory Read" (RAMRD) commands, but does nothing otherwise.

void ILI9341_setFrameRate (uint8_t div_ratio, uint8_t clocks_per_line)

TODO: Write.

• void ILI9341_setBlankingPorch (uint8_t vpf, uint8_t vbp, uint8_t hfp, uint8_t hbp)

TODO: Write.

void ILI9341 setInterface (void)

Sets the interface for the ILl9341. The parameters for this command are hard-coded, so it only needs to be called once upon initialization.

void ILI9341_setRowAddress (uint16_t start_row, uint16_t end_row)

not using backlight, so these aren't necessary

void ILI9341_setColAddress (uint16_t start_col, uint16_t end_col)

Sets the start/end rows to be written to.

void ILI9341 writeMemCmd (void)

Sends the "Write Memory" (RAMWR) command to the LCD driver, signalling that incoming data should be written to memory.

void ILI9341_write1px (uint8_t red, uint8_t green, uint8_t blue, bool is_16bit)

Write a single pixel to frame memory.

4.1.4.1 Detailed Description


Functions for interfacing an ILI9341-based 240RGBX320 LCD via SPI.

4.1.4.2 Function Documentation

ILI9341_resetHard()

Perform a hardware reset of the LCD driver.

The LCD driver's RESET pin requires a negative logic (i.e. active LOW) signal for >= 10 [us] and an additional 5 [ms] before further commands can be sent. Here is the caller graph for this function:



ILI9341_resetSoft()

Perform a software reset of the LCD driver.

the driver needs 5 [ms] before another command

ILI9341_setBlankingPorch()

TODO: Write.

TODO: Write

ILI9341_setColAddress()

Sets the start/end rows to be written to.

```
Should be called along with 'ILI9341_setRowAddress()' and before 'ILI9341_writeMemCmd()'.
```

Parameters

| start_col | 0 <= start_col <= end_col | |
|-----------|----------------------------|--|
| end_col | start_col <= end_col < 240 | |

This function is simply an interface to ILI9341_setAddress(). To work correctly, start_col must be no greater than end_col, and end_col cannot be greater than the max column number (default 240).

ILI9341_setColorDepth()


```
void ILI9341_setColorDepth ( bool is\_16bit )
```

Set the pixel format to be 16-bit (65K colors) or 18-bit (262K colors).

Parameters

is_16bit

16-bit requires 2 transfers and allows for 65K colors. 18-bit requires 3 transfers and allows for 262K colors. Here is the caller graph for this function:



ILI9341_setDispInversion()

```
void ILI9341_setDispInversion ( bool \ is\_ON \ )
```

Toggle display inversion. Turning ON causes colors to be inverted on the display.

Parameters

is_ON | true to turn ON, false to turn OFF

TODO: Write descriptionHere is the caller graph for this function:



ILI9341_setDispMode()

```
void ILI9341_setDispMode (
                bool is_normal,
                bool is_full_colors )
```

Set the display area and color expression.

```
Normal mode is the default and allows output to the full display area. Partial mode should be activated after calling 'ILI9341_setPartialArea()'.
```

Setting 'is_full_colors' to 'false' restricts the color expression to 8 colors, determined by the MSB of the R/G/B values.

Parameters

| is_normal | true for normal mode, false for partial mode |
|----------------|--|
| is_full_colors | 'truefor full colors, false` for 8 colors |

Here is the caller graph for this function:



ILI9341_setDispOutput()

```
void ILI9341_setDispOutput ( bool is\_ON )
```

Turn display output ON or OFF. This function clears the display and stops outputting to the display area, but does not affect frame memory or power.

Parameters

```
is_ON true to turn ON, false to turn OFF
```

TODO: Write descriptionHere is the caller graph for this function:



ILI9341_setFrameRate()

```
void ILI9341\_setFrameRate (
```

```
uint8_t div_ratio,
uint8_t clocks_per_line )
```

TODO: Write.

TODO: Write

ILI9341_setInterface()

Sets the interface for the ILI9341. The parameters for this command are hard-coded, so it only needs to be called once upon initialization.

This function implements the "Interface Control" IFCTL command from p. 192-194 of the ILI9341 datasheet, which controls how the LCD driver handles 16-bit data and what interfaces (internal or external) are used.

| Name | Bit # | Param # | Effect when set = 1 |
|----------|-------|---------|---|
| MY_EOR | 7 | | flips value of corresponding MADCTL bit |
| MX_EOR | 6 | | flips value of corresponding MADCTL bit |
| MV_EOR | 5 | 0 | flips value of corresponding MADCTL bit |
| BGR_EOR | 3 | | flips value of corresponding MADCTL bit |
| WEMODE | 0 | | overflowing pixel data is not ignored |
| EPF[1:0] | 5:4 | 1 | controls 16 to 18-bit pixel data conversion |
| MDT[1:0] | 1:0 | | controls display data transfer method |
| ENDIAN | 5 | | host sends LSB first |
| DM[1:0] | 3:2 | 2 | selects display operation mode |
| RM | 1 | _ | selects GRAM interface mode |
| RIM | 0 | | specifies RGB interface-specific details |

The first param's bits are cleared so that the corresponding MADCTL bits (ILI9341_setMemoryAccessCtrl()) are unaffected and overflowing pixel data is ignored. The EPF bits are cleared so that the LSB of the R and B values is copied from the MSB when using 16-bit color depth. The TM4C123 sends the MSB first, so the ENDIAN bit is cleared. The other bits are cleared and/or irrelevant since the RGB and VSYNC interfaces aren't used. Here is the caller graph for this function:



ILI9341_setMemAccessCtrl()

```
bool areColsFlipped,
bool areRowsColsSwitched,
bool isVertRefreshFlipped,
bool isColorOrderFlipped,
bool isHorRefreshFlipped )
```

Set how data is converted from memory to display.


Parameters

| areRowsFlipped | |
|----------------------|--|
| areColsFlipped | |
| areRowsColsSwitched | |
| isVertRefreshFlipped | |
| isColorOrderFlipped | |
| isHorRefreshFlipped | |

This function implements the "Memory Access Control" (MADCTL) command from p. 127-128 of the ILI9341 datasheet, which controls how the LCD driver displays data upon writing to memory.

| Name | Bit # | Effect when set = 1 | |
|------|-------|--|--|
| MY | 7 | flip row (AKA "page") addresses | |
| MX | 6 | flip column addresses | |
| MV | 5 | exchange rows and column addresses | |
| ML | 4 | reverse horizontal refresh order | |
| BGR | 3 | reverse color input order (RGB -> BGR) | |
| МН | 2 | reverse vertical refresh order | |

All bits are clear after powering on or ${\tt HWRESET}$. Here is the caller graph for this function:



ILI9341_setPartialArea()

Set the partial display area for partial mode. Call before activating partial mode via ILI9341_setDisplayMode().

Parameters

| rowStart | |
|----------|--|
| rowEnd | |

ILI9341_setRowAddress()

not using backlight, so these aren't necessary

Sets the start/end rows to be written to.

```
Should be called along with 'ILI9341_setColAddress()' and before 'ILI9341_writeMemCmd()'.
```

Parameters

| start_row | 0 <= start_row <= end_row |
|-----------|----------------------------|
| end_row | start_row <= end_row < 320 |

This function is simply an interface to ILI9341_setAddress(). To work correctly, start_row must be no greater than end_row, and end_row cannot be greater than the max row number (default 320).

ILI9341_setScrollArea()

Set the vertical scrolling area of the display. The sum of the three parameters should be equal to the max number of rows $NUM_ROWS = 320$.

Parameters

| topFixedArea | Number of rows fixed at the top of the screen. |
|----------------|---|
| vertScrollArea | Number of rows that scroll. |
| bottFixedArea | Number of rows fixed at the bottom of the screen. |

ILI9341_setScrollStart()

Set the start row for vertical scrolling.

Parameters

| startRow | Start row for scrolling. Should be >= topFixedArea | _ | 1 |
|----------|--|---|---|
|----------|--|---|---|

ILI9341_setSleepMode()

```
void ILI9341_setSleepMode ( bool \ is\_sleeping \ )
```

Enter or exit sleep mode. The LCD driver is in sleep mode by default upon powering on or either kind of reset.

Parameters

| is_sleeping | true to enter sleep mode, false to exit |
|-------------|---|
|-------------|---|

This function turns sleep mode ON or OFF depending on the value of $is_sleeping$. Either way, the MCU must wait >= 5 [ms] before sending further commands.

It's also necessary to wait 120 [ms] before sending SPLOUT after sending SPLIN or a reset, so this function waits 120 [ms] regardless of the preceding event. Here is the caller graph for this function:



ILI9341_write1px()

Write a single pixel to frame memory.

```
Call 'ILI9341_writeMemCmd()' before this one.
```

Parameters

| red | 5 or 6-bit R value |
|----------|---|
| green | 5 or 6-bit G value |
| blue | 5 or 6-bit B value |
| is_16bit | true for 16-bit (65K colors, 2 transfers) color depth, false for 18-bit (262K colors, 3 transfer) color depth NOTE: set color depth via ILI9341_setColorDepth() |

This function sends one pixel to the display. Because the serial interface (SPI) is used, each pixel requires 2 transfers in 16-bit mode and 3 transfers in 18-bit mode.


The following table (adapted from p. 63 of the datasheet) visualizes how the RGB data is sent to the display when using 16-bit color depth.

| Transfer | 1 | | | | | | | | | | 2 | 2 | | | | |
|----------|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|
| Bit # | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
| Value | R4 | R3 | R2 | R1 | R0 | G5 | G4 | G3 | G2 | G1 | G0 | B4 | В3 | B2 | B1 | B0 |

The following table (adapted from p. 64 of the datasheet) visualizes how the RGB data is sent to the display when using 18-bit color depth.

| Transfer | | 1 | | | | | | 2 | | | |
|----------|----|----|----|----|----|----|-----|-----|----|----|--|
| Bit # | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 | 7 | 6 | |
| Value | R5 | R4 | R3 | R2 | R1 | R0 | 0/1 | 0/1 | G5 | G4 | |

Here is the caller graph for this function:




ILI9341_writeMemCmd()

```
void ILI9341_writeMemCmd ( void \quad )
```

Sends the "Write Memory" (RAMWR) command to the LCD driver, signalling that incoming data should be written to memory.

Should be called after setting the row (ILI9341_setRowAddress()) and/or and/or column (ILI9341_setRowAddress()) addresses, but before writing image data (ILI9341_write1px()). Here is the caller graph for this function:



4.1.5 PLL

Function for initializing the phase-locked loop.

Files

• file PLL.c

Implementation details for phase-lock-loop (PLL) functions.

• file PLL.h

Driver module for activating the phase-locked-loop (PLL).

Functions

void PLL_Init (void)
 Initializes the phase-locked-loop (PLL), allowing a bus frequency of 80[MHz].

4.1.5.1 Detailed Description

Function for initializing the phase-locked loop.

4.1.5.2 Function Documentation

PLL_Init()

```
void PLL_Init (
     void )
```

Initializes the phase-locked-loop (PLL), allowing a bus frequency of 80[MHz].

4.1.6 SPI

Functions for SPI-based communication via SSI0 peripheral.

Files

• file SPI.c

Source code for SPI module.

• file SPI.h

Driver module for using the serial peripheral interface (SPI) protocol.

Functions

```
• void SPI_Init (void)
```

Initialize SSI0 to act as an SPI Controller (AKA Master) in mode 0.

uint8_t SPI_Read (void)

Read data from peripheral.

• void SPI_WriteCmd (uint8_t cmd)

Write an 8-bit command to the peripheral.

void SPI_WriteData (uint8_t data)

Write 8-bit data to the peripheral.

• void SPI_WriteSequence (uint8_t cmd, uint8_t *param_sequence, uint8_t num_params)

Write a sequence of data to the peripheral, with or without a preceding command.

4.1.6.1 Detailed Description

Functions for SPI-based communication via SSI0 peripheral.

4.1.6.2 Function Documentation

SPI_Init()

```
void SPI_Init (
     void )
```

Initialize SSI0 to act as an SPI Controller (AKA Master) in mode 0.

| TM4C Pin | Function | ILI9341 Pin | Description |
|----------|----------|-------------|---|
| PA2 | SSI0Clk | CLK | Serial clock signal |
| PA3 | SSI0Fss | CS | Chip select signal |
| PA4 | SSI0Rx | MISO | TM4C (M) input, LCD (S) output |
| PA5 | SSI0Tx | MOSI | TM4C (M) output, LCD (S) input |
| PA6 | GPIO | D/C | Data = 1, Command = 0 |
| PA7 | GPIO | RESET | Reset the display (negative logic/active LOW) |


Clk. Polarity = steady state low (0)

Clk. Phase = rising clock edge (0)

The bit rate BR is set using the clock prescale divisor CPSDVSR and SCR field in the SSI Control 0 (CR0) register:

$$BR = f_{bus}/(CPSDVSR * (1 + SCR))$$

The ILI9341 driver has a min. read cycle of 150 [ns] and a min. write cycle of 100 [ns], so the bit rate BR is set to be equal to the bus frequency ($f_{bus}=80[MHz]$) divided by 12, allowing a bit rate of 6.67 [MHz], or a period of 150 [ns]. Here is the caller graph for this function:



SPI_Read()

Read data from peripheral.

Returns

uint8_t


SPI_WriteCmd()

Write an 8-bit command to the peripheral.

Parameters

```
cmd command for peripheral
```

Here is the caller graph for this function:

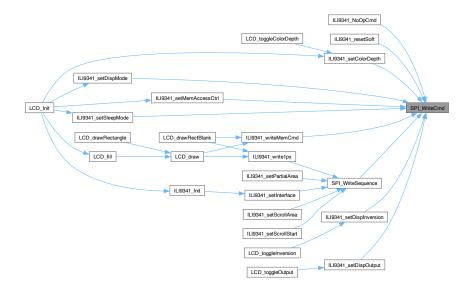


SPI_WriteData()

Write 8-bit data to the peripheral.

Parameters

data input data for peripheral

Here is the caller graph for this function:

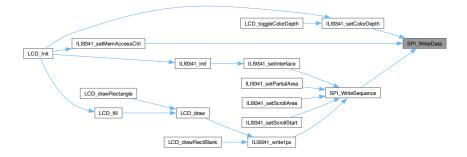


SPI_WriteSequence()

Write a sequence of data to the peripheral, with or without a preceding command.

Parameters

| cmd | 8-bit command (using cmd = 0 omits the command) |
|----------------|---|
| param_sequence | sequence of parameters to send after cmd |
| num_params | <pre>number of parameters to send; should be <= size of param_sequence</pre> |

Here is the caller graph for this function:

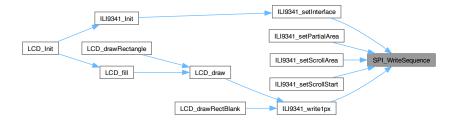

4.1.7 SysTick

Functions for timing and periodic interrupts via SysTick.

Files

• file SysTick.c

Implementation details for SysTick functions.

· file SysTick.h

Driver module for using SysTick-based timing and/or interrupts.

Functions

```
    void SysTick_Timer_Init (void)
```

Initialize SysTick for timing purposes.

void SysTick_Wait1ms (uint32_t delay_ms)

Delay for specified amount of time in [ms]. Assumes f_bus = 80[MHz].

void SysTick_Interrupt_Init (uint32_t time_ms)

Initialize SysTick for interrupts.

4.1.7.1 Detailed Description

Functions for timing and periodic interrupts via SysTick.

4.1.7.2 Function Documentation

SysTick_Interrupt_Init()

Initialize SysTick for interrupts.

Parameters

```
time_ms Time in [ms] between interrupts. Cannot be more than 200[ms].
```

SysTick_Timer_Init()

Initialize SysTick for timing purposes.

4.1.8 Timer

Functions for timing and periodic interrupts via general-purpose timer modules (GPTM).

Files

· file Timer.c

Implementation for timer module.

• file Timer.h

Driver module for timing (Timer0) and interrupts (Timer1).

Functions

void TimerOA Init (void)

Initialize timer 0 as 32-bit, one-shot, countdown timer.

void Timer0A Start (uint32 t time ms)

Count down starting from the inputted value.

• uint8_t Timer0A_isCounting (void)

Returns 1 if Timer0 is still counting and 0 if not.

void Timer0A_Wait1ms (uint32_t time_ms)

Wait for the specified amount of time in [ms].

void Timer1A_Init (uint32_t time_ms)

Initialize timer 1 as a 32-bit, periodic, countdown timer with interrupts.

void Timer2A_Init (void)

Initialize timer 2 as 32-bit, one-shot, countdown timer.

void Timer2A_Start (uint32_t time_ms)

Count down starting from the inputted value.

uint8_t Timer2A_isCounting (void)

Returns 1 if Timer2 is still counting and 0 if not.

• void Timer2A_Wait1ms (uint32_t time_ms)

Wait for the specified amount of time in [ms].

4.1.8.1 Detailed Description

Functions for timing and periodic interrupts via general-purpose timer modules (GPTM).

4.1.8.2 Function Documentation

Timer0A_Init()

```
void Timer0A_Init (
     void )
```

Initialize timer 0 as 32-bit, one-shot, countdown timer.

Timer0A_isCounting()

Returns 1 if Timer0 is still counting and 0 if not.

Returns

uint8_t status


Here is the caller graph for this function:



Timer0A_Start()

Count down starting from the inputted value.

Parameters



Here is the caller graph for this function:



Timer0A_Wait1ms()

25 4.1 Device Drivers Wait for the specified amount of time in [ms].

Parameters

| time_ms | Time in [ms] to load into Timer 0. Must be <= 53 seconds. | |
|---------|---|--|
|---------|---|--|

Timer1A_Init()

Initialize timer 1 as a 32-bit, periodic, countdown timer with interrupts.

Parameters

time_ms | Time in [ms] between interrupts. Must be <= 53 seconds.

Timer2A_Init()

Initialize timer 2 as 32-bit, one-shot, countdown timer.

Here is the caller graph for this function:



Timer2A_isCounting()

```
uint8_t Timer2A_isCounting ( void\ )
```

Returns 1 if Timer2 is still counting and 0 if not.

Returns

uint8_t status

Here is the caller graph for this function:



Timer2A_Start()

Count down starting from the inputted value.

Parameters

```
|time\_ms| Time in [ms] to load into Timer 2. Must be \leq= 53 seconds.
```

Here is the caller graph for this function:



Timer2A_Wait1ms()

Wait for the specified amount of time in [ms].

Parameters

| time_ms | Time in [ms] to load into Timer 2. Must be <= 53 seconds. |
|---------|---|
|---------|---|

Here is the caller graph for this function:



4.1.9 UART

Functions for UART-based communication.

Files

• file UART.c

Source code for UART module.

file UART.h

Driver module for serial communication via UART0 and UART 1.

Functions

• void UARTO Init (void)

Initialize UART0 to a baud rate of 115200, 8-bit data length, 1 start bit, and 1 stop bit.

unsigned char UARTO ReadChar (void)

Read a single character from UARTO.

void UART0_WriteChar (unsigned char input_char)

Write a single character to UARTO.

void UART0_WriteStr (unsigned char *str_ptr)

Write a C string to UARTO.

void UART1_Init (void)

Initialize UART1 to a baud rate of 115200, 8-bit data length, 1 start bit, and 1 stop bit.

unsigned char UART1_ReadChar (void)

Read a single character from UART1.

void UART1_WriteChar (unsigned char input_char)

Write a single character to UART1.

void UART1_WriteStr (unsigned char *str_ptr)

Write a C string to UART1.

4.1.9.1 Detailed Description

Functions for UART-based communication.

4.1.9.2 Function Documentation

UARTO Init()

Initialize UART0 to a baud rate of 115200, 8-bit data length, 1 start bit, and 1 stop bit.

Given the bus frequency (f_bus) and desired baud rate (BR), the baud rate divisor (BRD) can be calculated: $BRD = f_{bus}/(16*BR)$

The integer BRD (IBRD) is simply the integer part of the BRD: IBRD = int(BRD)

The fractional BRD (FBRD) is calculated using the fractional part (mod (BRD, 1)) of the BRD: FBRD = int((mod(BRD,1)*64)+0.5)

NOTE: LCRH must be accessed AFTER setting the BRD register0

UART0_ReadChar()

```
unsigned char UARTO_ReadChar ( void \quad )
```

Read a single character from UART0.

Returns

input_char

This function uses busy-wait synchronization to read a character from UART0.

UART0_WriteChar()

Write a single character to UART0.

Parameters

input_char

This function uses busy-wait synchronization to write a character to UART0. Here is the caller graph for this function:



UART0_WriteStr()

```
void UARTO_WriteStr (
          unsigned char * str_ptr )
```

Write a C string to UART0.

Parameters

str_ptr | pointer to C string

This function uses UARTO_WriteChar() function to write a C string to UARTO. The function writes until either the

entire string has been written or a null-terminated character has been reached.

UART1_Init()

Initialize UART1 to a baud rate of 115200, 8-bit data length, 1 start bit, and 1 stop bit.

Given the bus frequency (f_bus) and desired baud rate (BR), the baud rate divisor (BRD) can be calculated: $BRD = f_{bus}/(16*BR)$

The integer BRD (IBRD) is simply the integer part of the BRD: IBRD = int(BRD)

The fractional BRD (FBRD) is calculated using the fractional part (mod (BRD, 1)) of the BRD: FBRD = int((mod(BRD,1)*64)+0.5)

NOTE: LCRH must be accessed AFTER setting the BRD register

UART1_ReadChar()

Read a single character from UART1.

Returns

input_char

This function uses busy-wait synchronization to read a character from UART1.

UART1_WriteChar()

Write a single character to UART1.

Parameters

input_char

This function uses busy-wait synchronization to write a character to UART1.Here is the caller graph for this

function:



UART1_WriteStr()

```
void UART1_WriteStr (
          unsigned char * str_ptr )
```

Write a C string to UART1.

Parameters

str_ptr | pointer to C string

This function uses UART1_WriteChar() function to write a C string to UART0. The function writes until either the entire string has been written or a null-terminated character has been reached.

4.2 Application Software

Application-specific modules.

Modules

Debug

Debug module.

Filter

Filter module.

• LCD

Module for displaying graphs on an LCD via the ILI9341 module.

• QRS

QRS detection algorithm.

UserCtrl

User control module.

4.2.1 Detailed Description

Application-specific modules.

4.2.2 Debug

Debug module.

Debug module.

4.2.3 Filter

Filter module.

Filter module.

4.2.4 LCD

Module for displaying graphs on an LCD via the ILI9341 module.

Files

• file LCD.c

Source code for LCD module.

• file LCD.h

Module for outputting the ECG waveform and HR to a liquid crystal display (LCD).

Macros

- #define **X_MAX** NUM_ROWS
- #define Y_MAX NUM_COLS
- #define LCD_BLACK (uint8_t) 0x00
- #define LCD_RED (uint8_t) 0x04
- #define LCD_GREEN (uint8_t) 0x02
- #define LCD_BLUE (uint8_t) 0x01
- #define **LCD_YELLOW** (uint8_t) 0x06
- #define LCD_CYAN (uint8 t) 0x03
- #define LCD_PURPLE (uint8_t) 0x05
- #define LCD_WHITE (uint8_t) 0x07

Init./Config. Functions

• void LCD_Init (void)

Initialize the LCD driver and its internal independencies.

• void LCD_toggleOutput (void)

Toggle display output ON or OFF (OFF by default). Turning output OFF prevents the LCD driver from refreshing the display, which can prevent abnormalities like screen tearing while attempting to update the image.

void LCD_toggleInversion (void)

Toggle color inversion ON or OFF (OFF by default).

void LCD_toggleColorDepth (void)

Toggle 16-bit or 18-bit color depth (16-bit by default).

Drawing Area Definition Functions

• void LCD_setArea (uint16_t x1_new, uint16_t x2_new, uint16_t y1_new, uint16_t y2_new)

Set the area of the display to be written to.

```
0 \le x_1 \le x_2 < X_{MAX}

0 \le y_1 \le y_2 < Y_{MAX}.
```

void LCD_setX (uint16_t x1_new, uint16_t x2_new)

Set only new x-coordinates to be written to. $0 \le x_1 \le x_2 \le X_{MAX}$.

void LCD_setY (uint16_t y1_new, uint16_t y2_new)

Set only new y-coordinates to be written to. $0 \le y_1 \le y_2 \le Y_{MAX}$.

Color Setting Functions

void LCD_setColor (uint8_t R_val, uint8_t G_val, uint8_t B_val)

Set the current color value for the display. Only the first 5-6 bits of each inputted value are used.

void LCD_setColor_3bit (uint8_t color_code)

Set the color value via a 3-bit code.

Drawing Functions

• void LCD draw (void)

Draw on the LCD display. Call this function after setting the drawable area via $LCD_setArea()$, or after individually calling $LCD_setX()$ and/or $LCD_setY()$.

void LCD_fill (void)

Fill the display with a single color.

void LCD drawHLine (uint16 t yCenter, uint16 t lineWidth)

Draw a horizontal line across the entire display.

void LCD_drawVLine (uint16_t xCenter, uint16_t lineWidth)

Draw a vertical line across the entire display.

void LCD_drawRectangle (uint16_t x1, uint16_t dx, uint16_t y1, uint16_t dy, bool is_filled)

Draw a rectangle of size dx x dy onto the display. The bottom-left corner will be located at (x1, y1).

• void LCD_drawRectBlank (uint16_t x1, uint16_t dx, uint16_t y1, uint16_t dy, uint16_t y_min, uint16_t y_max, uint16_t color_code)

Draw a rectangle of size dx x dy and blank out all other pixels between y_min and y_max.

4.2.4.1 Detailed Description

Module for displaying graphs on an LCD via the ILI9341 module.

4.2.4.2 Function Documentation


LCD_draw()

```
void LCD_draw (
     void )
```

Draw on the LCD display. Call this function after setting the drawable area via $LCD_setArea()$, or after individually calling $LCD_setX()$ and/or $LCD_setY()$.

References ILI9341_write1px(), and ILI9341_writeMemCmd().

Here is the caller graph for this function:



LCD_drawHLine()

Draw a horizontal line across the entire display.

Parameters

| yCenter | y-coordinate to center the line on |
|-----------|---|
| lineWidth | width of the line; should be a positive, odd number |

LCD_drawRectangle()

Draw a rectangle of size dx x dy onto the display. The bottom-left corner will be located at (x1, y1).

Parameters

| x1 | lowest (left-most) x-coordinate |
|-----------|--|
| dx | length (horizontal distance) of the rectangle |
| y1 | lowest (bottom-most) y-coordinate |
| dy | height (vertical distance) of the rectangle |
| is_filled | true to fill the rectangle, false to leave it unfilled |

LCD_drawRectBlank()

Draw a rectangle of size dx x dy and blank out all other pixels between y_min and y_max .

Parameters

| x1 | lowest (left-most) x-coordinate |
|------------|--|
| dx | length (horizontal distance) of the column |
| y1 | y-coordinate of the pixel's bottom side |
| dy | height (vertical distance) of the pixel |
| y_min | lowest (bottom-most) y-coordinate |
| y_max | highest (top-most) y-coordinate |
| color_code | 3-bit color code |

TODO: Write description

LCD_drawVLine()

Draw a vertical line across the entire display.

Parameters

| xCenter | x-coordinate to center the line on |
|-----------|---|
| lineWidth | width of the line; should be a positive, odd number |

LCD_Init()

```
void LCD_Init (
     void )
```

Initialize the LCD driver and its internal independencies.

LCD_setArea()

Set the area of the display to be written to.


```
0 <= x_1 <= x_2 < X_{MAX}

0 <= y_1 <= y_2 < Y_{MAX}.
```

Parameters

| x1_new | left-most x-coordinate |
|--------|-------------------------|
| x2_new | right-most x-coordinate |
| y1_new | lowest y-coordinate |
| y2_new | highest y-coordinate |

Here is the caller graph for this function:

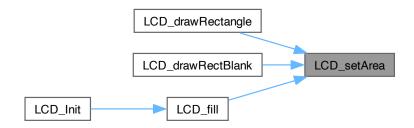


LCD_setColor()

Set the current color value for the display. Only the first 5-6 bits of each inputted value are used.

Parameters

| R_val | 5-bit ([0-31]) R value; 6-bit ([0-63]) if color depth is 18-bit |
|-------|---|
| G_val | 6-bit ([0-63]) G value |
| B_val | 5-bit ([0-31]) B value; 6-bit ([0-63]) if color depth is 18-bit |

Here is the caller graph for this function:



LCD_setColor_3bit()

Set the color value via a 3-bit code.

Parameters

| color code | 3-bit color value to use. Bits 2, 1, 0 correspond to R, G, and B values, respectively. |
|------------|---|
| coloi_codc | o bit color value to use. Bits 2, 1, o correspond to 11, a, and b values, respectively. |

This is simply a convenience function for setting the color using the macros defined in the header file.

| hex | binary | macro |
|------|--------|------------|
| 0x00 | 000 | LCD_BLACK |
| 0x01 | 001 | LCD_BLUE |
| 0x02 | 010 | LCD_GREEN |
| 0x03 | 011 | LCD_CYAN |
| 0x04 | 100 | LCD_RED |
| 0x05 | 101 | LCD_PURPLE |
| 0x06 | 110 | LCD_YELLOW |
| 0x07 | 111 | LCD_WHITE |

Here is the caller graph for this function:



LCD_setX()

```
void LCD_setX ( \label{lcd_lcd_lcd_lcd} \mbox{uint16\_t} \ x1\_new, \\ \mbox{uint16\_t} \ x2\_new \ )
```

Set only new x-coordinates to be written to. $0 <= x_1 <= x_2 < X_{MAX}$.

Parameters

| x1_new | left-most x-coordinate |
|--------|-------------------------|
| x2_new | right-most x-coordinate |

LCD_setY()

Set only new y-coordinates to be written to. $0 <= y_1 <= y_2 < Y_{MAX}$.

Parameters

| y1_new | lowest y-coordinate |
|--------|----------------------|
| y2_new | highest y-coordinate |

4.2.5 QRS

QRS detection algorithm.

QRS detection algorithm.

4.2.6 UserCtrl

User control module.

User control module.

4.3 Program Threads

Primary threads of execution.

Functions

- int main (void)
- void GPIO_PortF_Handler (void)

Interrupt service routine (ISR) for the UserCtrl module via GPIO Port F.

• void ADC0_SS3_Handler (void)

Interrupt service routine (ISR) for collecting ADC samples.

void Timer1A_Handler (void)

Interrupt service routine (ISR) for outputting data to the LCD.

4.3.1 Detailed Description

Primary threads of execution.

4.3.2 Function Documentation

ADC0_SS3_Handler()

Interrupt service routine (ISR) for collecting ADC samples.

GPIO_PortF_Handler()

Interrupt service routine (ISR) for the UserCtrl module via GPIO Port F.

Timer1A_Handler()

```
void Timer1A_Handler (
     void )
```

Interrupt service routine (ISR) for outputting data to the LCD.

5 Data Structure Documentation

5.1 LCD_t Struct Reference

Data Fields

- uint16_t x1
- uint16_t x2
- uint16_t **y1**
- uint16_t y2
- uint32_t numPixels
- uint8_t R_val
- uint8_t G_val
- uint8 t B val
- bool is_outputON
- $\bullet \ \ \mathsf{bool} \ \textbf{is_inverted}$
- bool is_16bit
- bool is_init

The documentation for this struct was generated from the following file:


• LCD.c

6 File Documentation

6.1 Debug.h File Reference


Functions to output debugging information to a serial port via UART.

```
#include "UART.h"
#include "tm4c123gh6pm.h"
Include dependency graph for Debug.h:
```

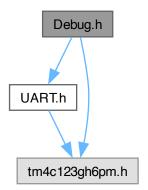

6.2 Filter.h File Reference 41

This graph shows which files directly or indirectly include this file:



6.1.1 Detailed Description

Functions to output debugging information to a serial port via UART.


Author

Bryan McElvy

6.2 Filter.h File Reference

Functions to implement digital filters via linear constant coefficient difference equations (LCCDEs).

This graph shows which files directly or indirectly include this file:



6.2.1 Detailed Description


Functions to implement digital filters via linear constant coefficient difference equations (LCCDEs).

Author

6.3 LCD.c File Reference

Source code for LCD module.

```
#include "LCD.h"
#include "ILI9341.h"
#include "SPI.h"
#include "Timer.h"
#include "tm4c123gh6pm.h"
#include <stdint.h>
#include <stdbool.h>
Include dependency graph for LCD.c:
```

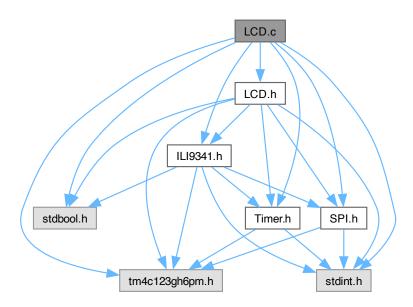

Data Structures

struct LCD_t

Functions

• void LCD_Init (void)

Initialize the LCD driver and its internal independencies.

• void LCD_toggleOutput (void)

Toggle display output ON or OFF (OFF by default). Turning output OFF prevents the LCD driver from refreshing the display, which can prevent abnormalities like screen tearing while attempting to update the image.

• void LCD_toggleInversion (void)

Toggle color inversion ON or OFF (OFF by default).

• void LCD_toggleColorDepth (void)

Toggle 16-bit or 18-bit color depth (16-bit by default).

void LCD_setArea (uint16_t x1, uint16_t x2, uint16_t y1, uint16_t y2)

6.4 LCD.h File Reference 43

```
Set the area of the display to be written to.
```

```
0 <= x_1 <= x_2 < X_{MAX}

0 <= y_1 <= y_2 < Y_{MAX}.
```

void LCD_setX (uint16_t x1, uint16_t x2)

Set only new x-coordinates to be written to. $0 <= x_1 <= x_2 < X_{MAX}$.

void LCD_setY (uint16_t y1, uint16_t y2)

Set only new y-coordinates to be written to. $0 \le y_1 \le y_2 \le Y_{MAX}$.

• void LCD_setColor (uint8_t R_val, uint8_t G_val, uint8_t B_val)

Set the current color value for the display. Only the first 5-6 bits of each inputted value are used.

void LCD_setColor_3bit (uint8_t color_code)

Set the color value via a 3-bit code.

void LCD_draw (void)

Draw on the LCD display. Call this function after setting the drawable area via $LCD_setArea()$, or after individually calling $LCD_setX()$ and/or $LCD_setY()$.

· void LCD_fill (void)

Fill the display with a single color.

void LCD_drawHLine (uint16_t yCenter, uint16_t lineWidth)

Draw a horizontal line across the entire display.

void LCD_drawVLine (uint16_t xCenter, uint16_t lineWidth)

Draw a vertical line across the entire display.

void LCD_drawRectangle (uint16_t x1, uint16_t dx, uint16_t y1, uint16_t dy, bool is_filled)

Draw a rectangle of size dx x dy onto the display. The bottom-left corner will be located at (x1, y1).

void LCD_drawRectBlank (uint16_t x1, uint16_t dx, uint16_t y1, uint16_t dy, uint16_t y_min, uint16_t y_max, uint16_t color_code)

Draw a rectangle of size dx x dy and blank out all other pixels between y_min and y_max.

6.3.1 Detailed Description

Source code for LCD module.

Author


Bryan McElvy

6.4 LCD.h File Reference


Module for outputting the ECG waveform and HR to a liquid crystal display (LCD).

```
#include "ILI9341.h"
#include "SPI.h"
#include "Timer.h"
#include "tm4c123gh6pm.h"
#include <stdint.h>
```

#include <stdbool.h>
Include dependency graph for LCD.h:

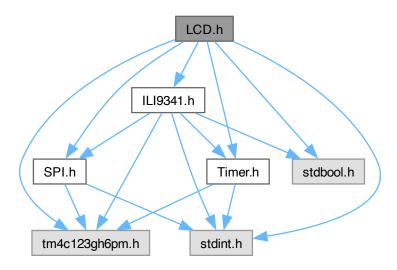

This graph shows which files directly or indirectly include this file:



Macros

- #define X_MAX NUM_ROWS
- #define Y MAX NUM COLS
- #define LCD_BLACK (uint8_t) 0x00
- #define LCD_RED (uint8_t) 0x04
- #define **LCD_GREEN** (uint8_t) 0x02
- #define LCD_BLUE (uint8_t) 0x01
- #define LCD_YELLOW (uint8_t) 0x06
- #define LCD_CYAN (uint8_t) 0x03
- #define LCD_PURPLE (uint8_t) 0x05
- #define LCD_WHITE (uint8_t) 0x07

6.4 LCD.h File Reference 45

Functions

Init./Config. Functions

void LCD Init (void)

Initialize the LCD driver and its internal independencies.

void LCD_toggleOutput (void)

Toggle display output ON or OFF (OFF by default). Turning output OFF prevents the LCD driver from refreshing the display, which can prevent abnormalities like screen tearing while attempting to update the image.

void LCD_toggleInversion (void)

Toggle color inversion ON or OFF (OFF by default).

void LCD_toggleColorDepth (void)

Toggle 16-bit or 18-bit color depth (16-bit by default).

Drawing Area Definition Functions

void LCD_setArea (uint16_t x1_new, uint16_t x2_new, uint16_t y1_new, uint16_t y2_new)

Set the area of the display to be written to.

```
0 <= x_1 <= x_2 < X_{MAX}

0 <= y_1 <= y_2 < Y_{MAX}.
```

void LCD setX (uint16 t x1 new, uint16 t x2 new)

Set only new x-coordinates to be written to. $0 \le x_1 \le x_2 \le X_{MAX}$.

void LCD_setY (uint16_t y1_new, uint16_t y2_new)

Set only new y-coordinates to be written to. $0 \le y_1 \le y_2 \le Y_{MAX}$.

Color Setting Functions

void LCD_setColor (uint8_t R_val, uint8_t G_val, uint8_t B_val)

Set the current color value for the display. Only the first 5-6 bits of each inputted value are used.

void LCD_setColor_3bit (uint8_t color_code)

Set the color value via a 3-bit code.

Drawing Functions

• void LCD_draw (void)

Draw on the LCD display. Call this function after setting the drawable area via LCD_setArea(), or after individually calling LCD_setX() and/or LCD_setY().

void LCD_fill (void)

Fill the display with a single color.

void LCD_drawHLine (uint16_t yCenter, uint16_t lineWidth)

Draw a horizontal line across the entire display.

void LCD_drawVLine (uint16_t xCenter, uint16_t lineWidth)

Draw a vertical line across the entire display.

• void LCD_drawRectangle (uint16_t x1, uint16_t dx, uint16_t y1, uint16_t dy, bool is_filled)

Draw a rectangle of size dx x dy onto the display. The bottom-left corner will be located at (x1, y1).

void LCD_drawRectBlank (uint16_t x1, uint16_t dx, uint16_t y1, uint16_t dy, uint16_t y_min, uint16_t y_
 max, uint16_t color_code)

Draw a rectangle of size dx x dy and blank out all other pixels between y_min and y_max.

6.4.1 Detailed Description


Module for outputting the ECG waveform and HR to a liquid crystal display (LCD).

Author


6.5 QRS.h File Reference

QRS detection algorithm functions.

#include "Filter.h"
Include dependency graph for QRS.h:



This graph shows which files directly or indirectly include this file:



6.5.1 Detailed Description

QRS detection algorithm functions.

Author

Bryan McElvy


This module contains functions for detecting heart rate (HR) using a simplified version of the Pan-Tompkins algorithm.

6.6 UserCtrl.h File Reference


Interface for user control module.

```
#include "GPIO.h"
#include "Timer.h"
```

Include dependency graph for UserCtrl.h:

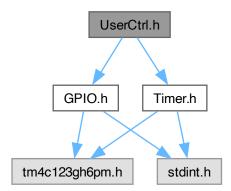

This graph shows which files directly or indirectly include this file:



Functions

void UserCtrl_Init ()

Initializes the UserCtrl module and its dependencies (Timer0B and GPIO_PortF)

6.6.1 Detailed Description

Interface for user control module.

Author

6.6.2 Function Documentation

UserCtrl_Init()


```
void UserCtrl_Init ( )
```

Initializes the UserCtrl module and its dependencies (Timer0B and GPIO_PortF)

6.7 ADC.c File Reference

Source code for ADC module.

```
#include "ADC.h"
#include "tm4c123gh6pm.h"
#include <stdint.h>
Include dependency graph for ADC.c:
```

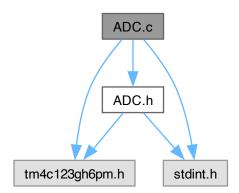

6.7.1 Detailed Description

Source code for ADC module.


Author

6.8 ADC.h File Reference 49


6.8 ADC.h File Reference

Driver module for analog-to-digital conversion (ADC).

```
#include "tm4c123gh6pm.h"
#include <stdint.h>
Include dependency graph for ADC.h:
```



This graph shows which files directly or indirectly include this file:



6.8.1 Detailed Description


Driver module for analog-to-digital conversion (ADC).

Author

6.9 GPIO.c File Reference

Source code for GPIO module.

```
#include "GPIO.h"
#include "tm4c123gh6pm.h"
#include <stdint.h>
Include dependency graph for GPIO.c:
```

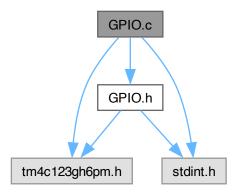

Functions

```
• void GPIO_PF_Init (void)
```

Initialize GPIO Port F.

• void GPIO_PF_LED_Init (void)

Initialize PF1-3 to interface the LaunchPad's onboard RGB LED.

• void GPIO_PF_LED_Write (uint8_t color_mask, uint8_t on_or_off)

Write a 1 or 0 to the selected LED(s).

void GPIO_PF_LED_Toggle (uint8_t color_mask)

Toggle the selected LED(s).

void GPIO_PF_Sw_Init (void)

Initialize PF0/4 to interface the LaunchPad's onboard switches. PF4 is Sw1, and PF0 is Sw2.

void GPIO_PF_Interrupt_Init (void)

Initialize GPIO Port F interrupts via Sw1 and Sw2.

6.9.1 Detailed Description


Source code for GPIO module.

Author


6.10 GPIO.h File Reference

Driver module for using the LaunchPad's onboard switches and RGB LEDs for GPIO and interrupts.

```
#include "tm4c123gh6pm.h"
#include <stdint.h>
Include dependency graph for GPIO.h:
```



This graph shows which files directly or indirectly include this file:

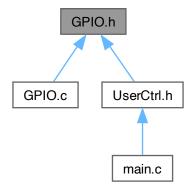

Macros

- #define LED_RED (uint8 t) 0x02
- #define LED_GREEN (uint8_t) 0x08
- #define **LED_BLUE** (uint8_t) 0x04
- #define **LED_YELLOW** (LED_RED + LED_GREEN)
- #define **LED_CYAN** (LED_BLUE + LED_GREEN)
- #define **LED_PURPLE** (LED_RED + LED_BLUE)
- #define LED_WHITE (LED_RED + LED_BLUE + LED_GREEN)

Functions

6.10.1 Detailed Description

Driver module for using the LaunchPad's onboard switches and RGB LEDs for GPIO and interrupts.


Author

Bryan McElvy

6.11 ILI9341.c File Reference

Source code for ILI9341 module.

```
#include "ILI9341.h"
#include "SPI.h"
#include "Timer.h"
#include "tm4c123gh6pm.h"
#include <stdint.h>
#include <stdbool.h>
Include dependency graph for ILI9341.c:
```

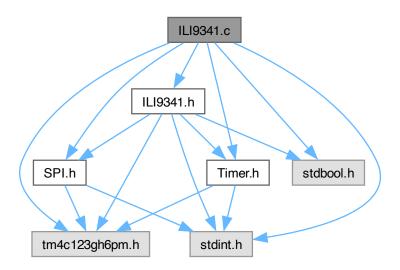

Macros

- #define NOP (uint8_t) 0x00
- #define SWRESET (uint8_t) 0x01
- #define SPLIN (uint8 t) 0x10
- #define SPLOUT (uint8_t) 0x11
- #define PTLON (uint8 t) 0x12
- #define NORON (uint8 t) 0x13
- #define **DINVOFF** (uint8_t) 0x20
- #define DINVON (uint8 t) 0x21
- #define CASET (uint8_t) 0x2A
- #define **PASET** (uint8 t) 0x2B
- # # define DAMMD (winto t) 0x0
- #define RAMWR (uint8_t) 0x2C
- #define **DISPOFF** (uint8_t) 0x28
- #define DISPON (uint8_t) 0x29
- #define PLTAR (uint8_t) 0x30
- #define VSCRDEF (uint8 t) 0x33
- #define MADCTL (uint8_t) 0x36
- #define VSCRSADD (uint8_t) 0x37
- #define IDMOFF (uint8 t) 0x38
- #define IDMON (uint8 t) 0x39
- #define PIXSET (uint8 t) 0x3A
- #define FRMCTR1 (uint8_t) 0xB1
- #define PRCTR (uint8_t) 0xB5
- #define IFCTL (uint8_t) 0xF6

Functions

• void ILI9341_Init (void)

Initialize the LCD driver, the SPI module, and Timer2A.

void ILI9341 resetHard (void)

Perform a hardware reset of the LCD driver.

void ILI9341_resetSoft (void)

Perform a software reset of the LCD driver.

void ILI9341_setSleepMode (bool is_sleeping)

Enter or exit sleep mode. The LCD driver is in sleep mode by default upon powering on or either kind of reset.

• void ILI9341_setDispMode (bool is_normal, bool is_full_colors)

Set the display area and color expression.

void ILI9341_setPartialArea (uint16_t rowStart, uint16_t rowEnd)

Set the partial display area for partial mode. Call before activating partial mode via ILI9341_setDisplayMode().

void ILI9341 setDispInversion (bool is ON)

Toggle display inversion. Turning ON causes colors to be inverted on the display.

void ILI9341_setDispOutput (bool is_ON)

Turn display output ON or OFF. This function clears the display and stops outputting to the display area, but does not affect frame memory or power.

void ILI9341_setScrollArea (uint16_t topFixedArea, uint16_t vertScrollArea, uint16_t bottFixedArea)

Set the vertical scrolling area of the display. The sum of the three parameters should be equal to the max number of rows $NUM_ROWS = 320$.

void ILI9341_setScrollStart (uint16_t startRow)

Set the start row for vertical scrolling.

 void ILI9341_setMemAccessCtrl (bool areRowsFlipped, bool areColsFlipped, bool areRowsColsSwitched, bool isVertRefreshFlipped, bool isColorOrderFlipped, bool isHorRefreshFlipped) Set how data is converted from memory to display.

void ILI9341_setColorDepth (bool is_16bit)

Set the pixel format to be 16-bit (65K colors) or 18-bit (262K colors).

void ILI9341_NoOpCmd (void)

Send the "No Operation" command (NOP = 0×00) to the LCD driver. Can be used to terminate the "Memory Write" (RAMWR) and "Memory Read" (RAMRD) commands, but does nothing otherwise.

void ILI9341_setFrameRate (uint8_t div_ratio, uint8_t clocks_per_line)

TODO: Write.

• void ILI9341 setBlankingPorch (uint8 t vpf, uint8 t vbp, uint8 t hfp, uint8 t hbp)

TODO: Write.

• void ILI9341_setInterface (void)

Sets the interface for the ILI9341. The parameters for this command are hard-coded, so it only needs to be called once upon initialization.

void ILI9341 setRowAddress (uint16 t start row, uint16 t end row)

not using backlight, so these aren't necessary

• void ILI9341 setColAddress (uint16 t start col, uint16 t end col)

Sets the start/end rows to be written to.

void ILI9341_writeMemCmd (void)

Sends the "Write Memory" (RAMWR) command to the LCD driver, signalling that incoming data should be written to memory.

• void ILI9341 write1px (uint8 t red, uint8 t green, uint8 t blue, bool is 16bit)

Write a single pixel to frame memory.

6.11.1 Detailed Description

Source code for ILI9341 module.

Author


Bryan McElvy

6.12 ILI9341.h File Reference


Driver module for interfacing with an ILI9341 LCD driver.

```
#include "SPI.h"
#include "Timer.h"
#include "tm4c123gh6pm.h"
#include <stdint.h>
```

#include <stdbool.h>
Include dependency graph for ILI9341.h:

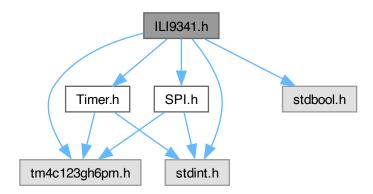

This graph shows which files directly or indirectly include this file:

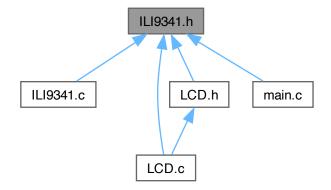

Macros

- #define NUM_COLS (uint16_t) 240
- #define NUM_ROWS (uint16_t) 320

Functions

- void ILI9341_Init (void)
 - Initialize the LCD driver, the SPI module, and Timer2A.
- void ILI9341_resetHard (void)

Perform a hardware reset of the LCD driver.

void ILI9341 resetSoft (void)

Perform a software reset of the LCD driver.

void ILI9341 setSleepMode (bool is sleeping)

Enter or exit sleep mode. The LCD driver is in sleep mode by default upon powering on or either kind of reset.

void ILI9341 setDispMode (bool is normal, bool is full colors)

Set the display area and color expression.

void ILI9341_setPartialArea (uint16_t rowStart, uint16_t rowEnd)

Set the partial display area for partial mode. Call before activating partial mode via ILI9341_setDisplayMode().

void ILI9341_setDispInversion (bool is_ON)

Toggle display inversion. Turning ON causes colors to be inverted on the display.

void ILI9341 setDispOutput (bool is ON)

Turn display output ON or OFF. This function clears the display and stops outputting to the display area, but does not affect frame memory or power.

void ILI9341 setScrollArea (uint16 t topFixedArea, uint16 t vertScrollArea, uint16 t bottFixedArea)

Set the vertical scrolling area of the display. The sum of the three parameters should be equal to the max number of rows $NUM_ROWS = 320$.

void ILI9341_setScrollStart (uint16_t startRow)

Set the start row for vertical scrolling.

 void ILI9341_setMemAccessCtrl (bool areRowsFlipped, bool areColsFlipped, bool areRowsColsSwitched, bool isVertRefreshFlipped, bool isColorOrderFlipped, bool isHorRefreshFlipped)

Set how data is converted from memory to display.

void ILI9341 setColorDepth (bool is 16bit)

Set the pixel format to be 16-bit (65K colors) or 18-bit (262K colors).

void ILI9341_NoOpCmd (void)

Send the "No Operation" command ($NOP = 0 \times 00$) to the LCD driver. Can be used to terminate the "Memory Write" (RAMWR) and "Memory Read" (RAMRD) commands, but does nothing otherwise.

• void ILI9341_setFrameRate (uint8_t div_ratio, uint8_t clocks_per_line)

TODO: Write.

• void ILI9341_setBlankingPorch (uint8_t vpf, uint8_t vbp, uint8_t hbp)

TODO: Write.

• void ILI9341 setInterface (void)

Sets the interface for the ILI9341. The parameters for this command are hard-coded, so it only needs to be called once upon initialization.

void ILI9341_setRowAddress (uint16_t start_row, uint16_t end_row)

not using backlight, so these aren't necessary

void ILI9341_setColAddress (uint16_t start_col, uint16_t end_col)

Sets the start/end rows to be written to.

void ILI9341_writeMemCmd (void)

Sends the "Write Memory" (RAMWR) command to the LCD driver, signalling that incoming data should be written to memory.

• void ILI9341 write1px (uint8 t red, uint8 t green, uint8 t blue, bool is 16bit)

Write a single pixel to frame memory.

6.12.1 Detailed Description

Driver module for interfacing with an ILI9341 LCD driver.

Author

Bryan McElvy


This module contains functions for initializing and outputting graphical data to a 240RGBx320 resolution, 262K color-depth liquid crystal display (LCD). The module interfaces the LaunchPad (or any other board featuring the TM4C123GH6PM microcontroller) with an ILI9341 LCD driver chip via the SPI (serial peripheral interface) protocol.

6.13 PLL.c File Reference 57

6.13 PLL.c File Reference

Implementation details for phase-lock-loop (PLL) functions.

```
#include "PLL.h"
#include "tm4c123gh6pm.h"
#include <stdint.h>
Include dependency graph for PLL.c:
```

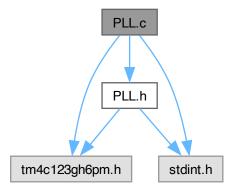

Functions

void PLL_Init (void)
 Initializes the phase-locked-loop (PLL), allowing a bus frequency of 80[MHz].

6.13.1 Detailed Description

Implementation details for phase-lock-loop (PLL) functions.


Author

Bryan McElvy


6.14 PLL.h File Reference

Driver module for activating the phase-locked-loop (PLL).

```
#include "tm4c123gh6pm.h"
#include <stdint.h>
Include dependency graph for PLL.h:
```



This graph shows which files directly or indirectly include this file:



Functions

void PLL_Init (void)
 Initializes the phase-locked-loop (PLL), allowing a bus frequency of 80[MHz].

6.14.1 Detailed Description

Driver module for activating the phase-locked-loop (PLL).


Author

6.15 SPI.c File Reference 59

6.15 SPI.c File Reference

Source code for SPI module.

```
#include "SPI.h"
#include "tm4c123gh6pm.h"
#include <stdint.h>
Include dependency graph for SPI.c:
```

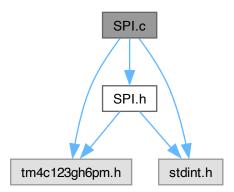

Functions

• void SPI_Init (void)

Initialize SSI0 to act as an SPI Controller (AKA Master) in mode 0.

• uint8_t SPI_Read (void)

Read data from peripheral.

void SPI_WriteCmd (uint8_t cmd)

Write an 8-bit command to the peripheral.

void SPI_WriteData (uint8_t data)

Write 8-bit data to the peripheral.

void SPI_WriteSequence (uint8_t cmd, uint8_t *param_sequence, uint8_t num_params)

Write a sequence of data to the peripheral, with or without a preceding command.

6.15.1 Detailed Description


Source code for SPI module.

Author


6.16 SPI.h File Reference

Driver module for using the serial peripheral interface (SPI) protocol.

```
#include "tm4c123gh6pm.h"
#include <stdint.h>
Include dependency graph for SPI.h:
```



This graph shows which files directly or indirectly include this file:

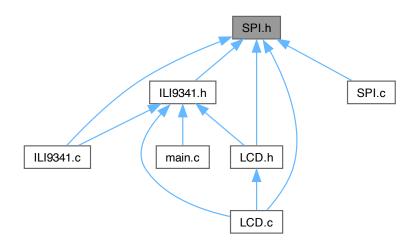

Functions

void SPI_Init (void)

Initialize SSI0 to act as an SPI Controller (AKA Master) in mode 0.

uint8_t SPI_Read (void)

Read data from peripheral.

void SPI_WriteCmd (uint8_t cmd)

Write an 8-bit command to the peripheral.

• void SPI_WriteData (uint8_t data)

Write 8-bit data to the peripheral.

• void SPI_WriteSequence (uint8_t cmd, uint8_t *param_sequence, uint8_t num_params)

Write a sequence of data to the peripheral, with or without a preceding command.

6.16.1 Detailed Description

Driver module for using the serial peripheral interface (SPI) protocol.

Author


Bryan McElvy

6.17 SysTick.c File Reference

Implementation details for SysTick functions.

```
#include "SysTick.h"
#include "tm4c123gh6pm.h"
#include <stdint.h>
```

Include dependency graph for SysTick.c:

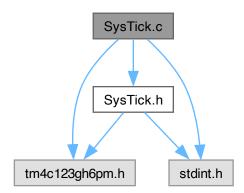

Functions

void SysTick_Timer_Init (void)

Initialize SysTick for timing purposes.

void SysTick_Wait1ms (uint32_t delay_ms)

Delay for specified amount of time in [ms]. Assumes f_bus = 80[MHz].

void SysTick_Interrupt_Init (uint32_t time_ms)

Initialize SysTick for interrupts.

6.17.1 Detailed Description


Implementation details for SysTick functions.

Author


6.18 SysTick.h File Reference

Driver module for using SysTick-based timing and/or interrupts.

```
#include "tm4c123gh6pm.h"
#include <stdint.h>
Include dependency graph for SysTick.h:
```



This graph shows which files directly or indirectly include this file:

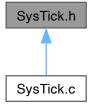

Functions

void SysTick_Timer_Init (void)

Initialize SysTick for timing purposes.

void SysTick_Wait1ms (uint32_t delay_ms)

Delay for specified amount of time in [ms]. Assumes f_bus = 80[MHz].

void SysTick_Interrupt_Init (uint32_t time_ms)

Initialize SysTick for interrupts.

6.18.1 Detailed Description


Driver module for using SysTick-based timing and/or interrupts.

Author

6.19 Timer.c File Reference

Implementation for timer module.

```
#include "Timer.h"
#include "tm4c123gh6pm.h"
#include <stdint.h>
Include dependency graph for Timer.c:
```

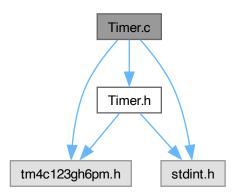

Functions

Timer0A

void Timer0A_Init (void)

Initialize timer 0 as 32-bit, one-shot, countdown timer.

void Timer0A_Start (uint32_t time_ms)

Count down starting from the inputted value.

• uint8_t Timer0A_isCounting (void)

Returns 1 if Timer0 is still counting and 0 if not.

void Timer0A_Wait1ms (uint32_t time_ms)

Wait for the specified amount of time in [ms].

Timer1A

void Timer1A_Init (uint32_t time_ms)
 Initialize timer 1 as a 32-bit, periodic, countdown timer with interrupts.

Timer2A

void Timer2A Init (void)

Initialize timer 2 as 32-bit, one-shot, countdown timer.

• void Timer2A_Start (uint32_t time_ms)

Count down starting from the inputted value.

uint8_t Timer2A_isCounting (void)

Returns 1 if Timer2 is still counting and 0 if not.

void Timer2A_Wait1ms (uint32_t time_ms)

Wait for the specified amount of time in [ms].

6.19.1 Detailed Description

Implementation for timer module.


Author

Bryan McElvy


6.20 Timer.h File Reference

Driver module for timing (Timer0) and interrupts (Timer1).

```
#include "tm4c123gh6pm.h"
#include <stdint.h>
Include dependency graph for Timer.h:
```



This graph shows which files directly or indirectly include this file:

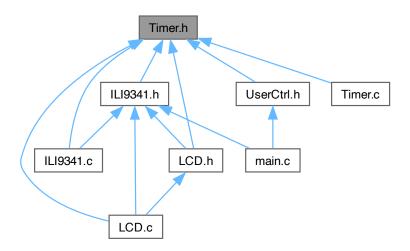

Functions

void Timer0A_Init (void)

Initialize timer 0 as 32-bit, one-shot, countdown timer.

void Timer0A_Start (uint32_t time_ms)

Count down starting from the inputted value.

uint8 t Timer0A isCounting (void)

Returns 1 if Timer0 is still counting and 0 if not.

void Timer0A_Wait1ms (uint32_t time_ms)

Wait for the specified amount of time in [ms].

void Timer1A Init (uint32 t time ms)

Initialize timer 1 as a 32-bit, periodic, countdown timer with interrupts.

void Timer2A_Init (void)

Initialize timer 2 as 32-bit, one-shot, countdown timer.

void Timer2A_Start (uint32_t time_ms)

Count down starting from the inputted value.

• uint8_t Timer2A_isCounting (void)

Returns 1 if Timer2 is still counting and 0 if not.

void Timer2A_Wait1ms (uint32_t time_ms)

Wait for the specified amount of time in [ms].

6.20.1 Detailed Description

Driver module for timing (Timer0) and interrupts (Timer1).


Author

Bryan McElvy

6.21 UART.c File Reference

Source code for UART module.

```
#include "UART.h"
#include "tm4c123gh6pm.h"
Include dependency graph for UART.c:
```

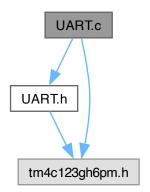

Functions

void UART0_Init (void)

Initialize UART0 to a baud rate of 115200, 8-bit data length, 1 start bit, and 1 stop bit.

• unsigned char UART0_ReadChar (void)

Read a single character from UARTO.

• void UART0_WriteChar (unsigned char input_char)

Write a single character to UARTO.

void UART0_WriteStr (unsigned char *str_ptr)

Write a C string to UARTO.

void UART1_Init (void)

Initialize UART1 to a baud rate of 115200, 8-bit data length, 1 start bit, and 1 stop bit.

• unsigned char UART1_ReadChar (void)

Read a single character from UART1.

void UART1_WriteChar (unsigned char input_char)

Write a single character to UART1.

• void UART1_WriteStr (unsigned char *str_ptr)

Write a C string to UART1.

6.21.1 Detailed Description

Source code for UART module.


Author

Bryan McElvy


6.22 UART.h File Reference

Driver module for serial communication via UART0 and UART 1.

#include "tm4c123gh6pm.h"
Include dependency graph for UART.h:



This graph shows which files directly or indirectly include this file:

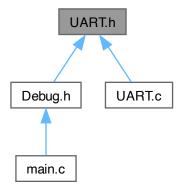

Functions

• void UARTO_Init (void)

Initialize UART0 to a baud rate of 115200, 8-bit data length, 1 start bit, and 1 stop bit.

unsigned char UART0_ReadChar (void)

Read a single character from UARTO.

• void UART0_WriteChar (unsigned char input_char)

Write a single character to UARTO.

void UART0_WriteStr (unsigned char *str_ptr)

Write a C string to UARTO.

void UART1_Init (void)

Initialize UART1 to a baud rate of 115200, 8-bit data length, 1 start bit, and 1 stop bit.

unsigned char UART1_ReadChar (void)

Read a single character from UART1.

· void UART1_WriteChar (unsigned char input_char)

Write a single character to UART1.

void UART1_WriteStr (unsigned char *str_ptr)

Write a C string to UART1.

6.22.1 Detailed Description

Driver module for serial communication via UART0 and UART 1.

Author

Bryan McElvy

UARTO uses PAO and PAI, which are not broken out but can connect to a PC's serial port via USB.


UART1 uses PB0 (Rx) and PB1 (Tx), which are not broken out but do not connect to a serial port.

6.23 main.c File Reference

Main program file for ECG-HRM.

```
#include "ADC.h"
#include "ILI9341.h"
#include "PLL.h"
#include "Debug.h"
#include "Filter.h"
#include "QRS.h"
#include "UserCtrl.h"
```

Include dependency graph for main.c:

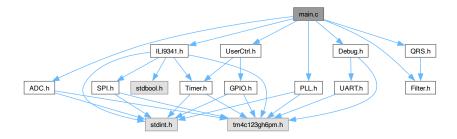

Functions

- int main (void)
- void GPIO_PortF_Handler (void)

Interrupt service routine (ISR) for the UserCtrl module via GPIO Port F.

• void ADC0_SS3_Handler (void)

Interrupt service routine (ISR) for collecting ADC samples.

void Timer1A_Handler (void)

Interrupt service routine (ISR) for outputting data to the LCD.

6.23.1 Detailed Description

Main program file for ECG-HRM.

Author

Index

| ADC, 4 | ILI9341_writeMemCmd, 17 |
|------------------------------|--------------------------|
| ADC.c, 48 | ILI9341.c, 52 |
| ADC.h, 49 | ILI9341.h, 54 |
| ADC0_SS3_Handler | ILI9341 resetHard |
| | - |
| Program Threads, 39 | ILI9341, 9 |
| Application Software, 31 | ILI9341_resetSoft |
| | ILI9341, 9 |
| Debug, 32 | ILI9341_setBlankingPorch |
| Debug.h, 40 | ILI9341, 10 |
| Device Drivers, 4 | ILI9341 setColAddress |
| • | ILI9341, 10 |
| Filter, 32 | |
| Filter.h, 41 | ILI9341_setColorDepth |
| 1 11(61.11, 41 | ILI9341, 10 |
| CDIO E | ILI9341_setDispInversion |
| GPIO, 5 | ILI9341, 11 |
| GPIO_PF_Init, 6 | ILI9341_setDispMode |
| GPIO_PF_Interrupt_Init, 6 | ILI9341, 11 |
| GPIO_PF_LED_Init, 6 | |
| GPIO_PF_LED_Toggle, 6 | ILI9341_setDispOutput |
| GPIO_PF_LED_Write, 6 | ILI9341, 12 |
| GPIO PF Sw Init, 7 | ILI9341_setFrameRate |
| | ILI9341, 12 |
| GPIO.c, 50 | ILI9341 setInterface |
| GPIO.h, 51 | ILI9341, 13 |
| GPIO_PF_Init | ILI9341 setMemAccessCtrl |
| GPIO, 6 | _ |
| GPIO_PF_Interrupt_Init | ILI9341, 13 |
| GPIO, 6 | ILI9341_setPartialArea |
| | ILI9341, 14 |
| GPIO_PF_LED_Init | ILI9341_setRowAddress |
| GPIO, 6 | ILI9341, 15 |
| GPIO_PF_LED_Toggle | ILI9341_setScrollArea |
| GPIO, 6 | |
| GPIO_PF_LED_Write | ILI9341, 15 |
| GPIO, 6 | ILI9341_setScrollStart |
| GPIO_PF_Sw_Init | ILI9341, 15 |
| GPIO, 7 | ILI9341_setSleepMode |
| | ILI9341, 15 |
| GPIO_PortF_Handler | ILI9341_write1px |
| Program Threads, 39 | ILI9341, 16 |
| | ILI9341 writeMemCmd |
| ILI9341, 7 | - |
| ILI9341_resetHard, 9 | ILI9341, 17 |
| ILI9341 resetSoft, 9 | 100.00 |
| ILI9341_setBlankingPorch, 10 | LCD, 32 |
| ILI9341_setColAddress, 10 | LCD_draw, 34 |
| | LCD_drawHLine, 34 |
| ILI9341_setColorDepth, 10 | LCD drawRectangle, 34 |
| ILI9341_setDispInversion, 11 | LCD drawRectBlank, 35 |
| ILI9341_setDispMode, 11 | LCD drawVLine, 35 |
| ILI9341_setDispOutput, 12 | _ · |
| ILI9341 setFrameRate, 12 | LCD_Init, 35 |
| ILI9341 setInterface, 13 | LCD_setArea, 36 |
| ILI9341 setMemAccessCtrl, 13 | LCD_setColor, 36 |
| ILI9341_setPartialArea, 14 | LCD_setColor_3bit, 37 |
| | LCD_setX, 38 |
| ILI9341_setRowAddress, 15 | LCD setY, 38 |
| ILI9341_setScrollArea, 15 | LCD.c, 42 |
| ILI9341_setScrollStart, 15 | LCD.h, 43 |
| ILI9341_setSleepMode, 15 | |
| ILI9341_write1px, 16 | LCD_draw |
| _ , , | |

70 INDEX

| LCD 04 | |
|--|---|
| LCD, 34 | SysTick_Timer_Init, 22 |
| LCD_drawHLine | SysTick.c, 61 |
| LCD, 34 | SysTick.h, 62 |
| LCD_drawRectangle | SysTick_Interrupt_Init |
| LCD, 34 | SysTick, 22 |
| LCD drawRectBlank | SysTick_Timer_Init |
| LCD, 35 | SysTick, 22 |
| LCD drawVLine | Cycrion, LL |
| LCD, 35 | Timer, 22 |
| , | Timer0A Init, 23 |
| LCD_Init | Timer0A isCounting, 23 |
| LCD, 35 | Timer0A Start, 24 |
| LCD_setArea | - : |
| LCD, 36 | Timer0A_Wait1ms, 24 |
| LCD_setColor | Timer1A_Init, 26 |
| LCD, 36 | Timer2A_Init, 26 |
| LCD_setColor_3bit | Timer2A_isCounting, 26 |
| LCD, 37 | Timer2A_Start, 26 |
| LCD_setX | Timer2A_Wait1ms, 27 |
| LCD, 38 | Timer.c, 63 |
| LCD_setY | Timer.h, 64 |
| LCD, 38 | Timer0A_Init |
| LCD_t, 40 | Timer, 23 |
| | Timer0A_isCounting |
| main.c, 68 | Timer, 23 |
| , | Timer0A Start |
| PLL, 17 | Timer, 24 |
| PLL_Init, 18 | Timer0A Wait1ms |
| PLL.c, 57 | Timer, 24 |
| PLL.h, 57 | Timer1A Handler |
| PLL Init | - |
| PLL, 18 | Program Threads, 39 |
| Program Threads, 38 | Timer1A_Init |
| | Timer, 26 |
| ADC0_SS3_Handler, 39 | Timer2A_Init |
| GPIO_PortF_Handler, 39 | Timer, 26 |
| Timer1A_Handler, 39 | Timer2A_isCounting |
| ODC 00 | Timer, 26 |
| QRS, 38 | Timer2A_Start |
| QRS.h, 46 | Timer, 26 |
| | |
| CDI 10 | Timer2A_Wait1ms |
| SPI, 18 | Timer2A_Wait1ms Timer, 27 |
| SPI_Init, 19 | |
| SPI_Init, 19 SPI_Read, 19 | |
| SPI_Init, 19 SPI_Read, 19 SPI_WriteCmd, 19 | Timer, 27 |
| SPI_Init, 19 SPI_Read, 19 SPI_WriteCmd, 19 SPI_WriteData, 20 | Timer, 27 UART, 27 |
| SPI_Init, 19 SPI_Read, 19 SPI_WriteCmd, 19 | Timer, 27 UART, 27 UART0_Init, 28 UART0_ReadChar, 28 |
| SPI_Init, 19 SPI_Read, 19 SPI_WriteCmd, 19 SPI_WriteData, 20 | Timer, 27 UART, 27 UART0_Init, 28 UART0_ReadChar, 28 UART0_WriteChar, 29 |
| SPI_Init, 19 SPI_Read, 19 SPI_WriteCmd, 19 SPI_WriteData, 20 SPI_WriteSequence, 21 SPI.c, 59 SPI.h, 60 | Timer, 27 UART, 27 UART0_Init, 28 UART0_ReadChar, 28 UART0_WriteChar, 29 UART0_WriteStr, 29 |
| SPI_Init, 19 SPI_Read, 19 SPI_WriteCmd, 19 SPI_WriteData, 20 SPI_WriteSequence, 21 SPI.c, 59 | Timer, 27 UART, 27 UART0_Init, 28 UART0_ReadChar, 28 UART0_WriteChar, 29 UART0_WriteStr, 29 UART1_Init, 30 |
| SPI_Init, 19 SPI_Read, 19 SPI_WriteCmd, 19 SPI_WriteData, 20 SPI_WriteSequence, 21 SPI.c, 59 SPI.h, 60 | Timer, 27 UART, 27 UART0_Init, 28 UART0_ReadChar, 28 UART0_WriteChar, 29 UART0_WriteStr, 29 UART1_Init, 30 UART1_ReadChar, 30 |
| SPI_Init, 19 SPI_Read, 19 SPI_WriteCmd, 19 SPI_WriteData, 20 SPI_WriteSequence, 21 SPI.c, 59 SPI.h, 60 SPI_Init | Timer, 27 UART, 27 UART0_Init, 28 UART0_ReadChar, 28 UART0_WriteChar, 29 UART0_WriteStr, 29 UART1_Init, 30 UART1_ReadChar, 30 UART1_WriteChar, 30 |
| SPI_Init, 19 SPI_Read, 19 SPI_WriteCmd, 19 SPI_WriteData, 20 SPI_WriteSequence, 21 SPI.c, 59 SPI.h, 60 SPI_Init SPI, 19 | Timer, 27 UART, 27 UART0_Init, 28 UART0_ReadChar, 28 UART0_WriteChar, 29 UART0_WriteStr, 29 UART1_Init, 30 UART1_ReadChar, 30 UART1_WriteChar, 30 UART1_WriteStr, 31 |
| SPI_Init, 19 SPI_Read, 19 SPI_WriteCmd, 19 SPI_WriteData, 20 SPI_WriteSequence, 21 SPI.c, 59 SPI.h, 60 SPI_Init SPI, 19 SPI_Read | Timer, 27 UART, 27 UART0_Init, 28 UART0_ReadChar, 28 UART0_WriteChar, 29 UART0_WriteStr, 29 UART1_Init, 30 UART1_ReadChar, 30 UART1_WriteChar, 30 UART1_WriteStr, 31 UART.c, 65 |
| SPI_Init, 19 SPI_Read, 19 SPI_WriteCmd, 19 SPI_WriteData, 20 SPI_WriteSequence, 21 SPI.c, 59 SPI.h, 60 SPI_Init SPI, 19 SPI_Read SPI, 19 SPI_WriteCmd | Timer, 27 UART, 27 UART0_Init, 28 UART0_ReadChar, 28 UART0_WriteChar, 29 UART0_WriteStr, 29 UART1_Init, 30 UART1_ReadChar, 30 UART1_WriteChar, 30 UART1_WriteStr, 31 UART.c, 65 UART.h, 66 |
| SPI_Init, 19 SPI_Read, 19 SPI_WriteCmd, 19 SPI_WriteData, 20 SPI_WriteSequence, 21 SPI.c, 59 SPI.h, 60 SPI_Init SPI, 19 SPI_Read SPI, 19 SPI_Read SPI, 19 SPI_WriteCmd SPI, 19 | Timer, 27 UART, 27 UART0_Init, 28 UART0_ReadChar, 28 UART0_WriteChar, 29 UART0_WriteStr, 29 UART1_Init, 30 UART1_ReadChar, 30 UART1_WriteChar, 30 UART1_WriteChar, 31 UART.c, 65 UART.h, 66 UART0_Init |
| SPI_Init, 19 SPI_Read, 19 SPI_WriteCmd, 19 SPI_WriteData, 20 SPI_WriteSequence, 21 SPI.c, 59 SPI.h, 60 SPI_Init SPI, 19 SPI_Read SPI, 19 SPI_WriteCmd SPI, 19 SPI_WriteCmd SPI, 19 SPI_WriteData | Timer, 27 UART, 27 UART0_Init, 28 UART0_ReadChar, 28 UART0_WriteChar, 29 UART0_WriteStr, 29 UART1_Init, 30 UART1_ReadChar, 30 UART1_WriteChar, 30 UART1_WriteStr, 31 UART.c, 65 UART.h, 66 UART0_Init UART, 28 |
| SPI_Init, 19 SPI_Read, 19 SPI_WriteCmd, 19 SPI_WriteData, 20 SPI_WriteSequence, 21 SPI.c, 59 SPI.h, 60 SPI_Init SPI, 19 SPI_Read SPI, 19 SPI_Read SPI, 19 SPI_WriteCmd SPI, 19 SPI_WriteData SPI, 20 | Timer, 27 UART, 27 UART0_Init, 28 UART0_ReadChar, 28 UART0_WriteChar, 29 UART1_WriteStr, 29 UART1_Init, 30 UART1_ReadChar, 30 UART1_WriteChar, 30 UART1_WriteStr, 31 UART.c, 65 UART.h, 66 UART0_Init UART, 28 UART0_ReadChar |
| SPI_Init, 19 SPI_Read, 19 SPI_WriteCmd, 19 SPI_WriteData, 20 SPI_WriteSequence, 21 SPI.c, 59 SPI.h, 60 SPI_Init SPI, 19 SPI_Read SPI, 19 SPI_WriteCmd SPI, 19 SPI_WriteData SPI, 20 SPI_WriteSequence | Timer, 27 UART, 27 UART0_Init, 28 UART0_ReadChar, 28 UART0_WriteChar, 29 UART0_WriteStr, 29 UART1_Init, 30 UART1_ReadChar, 30 UART1_WriteChar, 30 UART1_WriteStr, 31 UART.c, 65 UART.h, 66 UART0_Init UART, 28 UART0_ReadChar UART, 28 |
| SPI_Init, 19 SPI_Read, 19 SPI_WriteCmd, 19 SPI_WriteData, 20 SPI_WriteSequence, 21 SPI.c, 59 SPI.h, 60 SPI_Init SPI, 19 SPI_Read SPI, 19 SPI_WriteCmd SPI, 19 SPI_WriteCmd SPI, 19 SPI_WriteData SPI, 20 SPI_WriteSequence SPI, 21 | Timer, 27 UART, 27 UART0_Init, 28 UART0_ReadChar, 28 UART0_WriteChar, 29 UART0_WriteStr, 29 UART1_Init, 30 UART1_ReadChar, 30 UART1_WriteChar, 30 UART1_WriteStr, 31 UART.c, 65 UART.h, 66 UART0_Init UART, 28 UART0_ReadChar UART, 28 UART0_WriteChar |
| SPI_Init, 19 SPI_Read, 19 SPI_WriteCmd, 19 SPI_WriteData, 20 SPI_WriteSequence, 21 SPI.c, 59 SPI.h, 60 SPI_Init SPI_19 SPI_Read SPI, 19 SPI_WriteCmd SPI, 19 SPI_WriteData SPI, 20 SPI_WriteSequence SPI, 21 SysTick, 21 | Timer, 27 UART, 27 UART0_Init, 28 UART0_ReadChar, 28 UART0_WriteChar, 29 UART1_WriteChar, 29 UART1_Init, 30 UART1_ReadChar, 30 UART1_WriteChar, 30 UART1_WriteStr, 31 UART.c, 65 UART.h, 66 UART0_Init UART, 28 UART0_ReadChar UART, 28 UART0_WriteChar UART, 29 |
| SPI_Init, 19 SPI_Read, 19 SPI_WriteCmd, 19 SPI_WriteData, 20 SPI_WriteSequence, 21 SPI.c, 59 SPI.h, 60 SPI_Init SPI, 19 SPI_Read SPI, 19 SPI_WriteCmd SPI, 19 SPI_WriteCmd SPI, 19 SPI_WriteData SPI, 20 SPI_WriteSequence SPI, 21 | Timer, 27 UART, 27 UART0_Init, 28 UART0_ReadChar, 28 UART0_WriteChar, 29 UART0_WriteStr, 29 UART1_Init, 30 UART1_ReadChar, 30 UART1_WriteChar, 30 UART1_WriteStr, 31 UART.c, 65 UART.h, 66 UART0_Init UART, 28 UART0_ReadChar UART, 28 UART0_WriteChar |

INDEX 71

UART, 29
UART1_Init
 UART, 30
UART1_ReadChar
 UART, 30
UART1_WriteChar
 UART, 30
UART1_WriteStr
 UART, 31
UserCtrl, 38
UserCtrl.h, 47
 UserCtrl_Init, 48
UserCtrl_Init
 UserCtrl.h, 48