Contents

Inte	nterrupts and interrupt handling				
1.1		uction			
1.2	Interru	ıpts	2		
	1.2.1	Types of interrupts	6		
	1.2.2	Handling interrupts	6		
1.3	RISC-	·V interrupts	8		
	1.3.1	RISC-V Privileged Modes	9		
	1.3.2	RISC-V Machine Modes Exceptions	10		
	1.3.3	FE-310 Interrupts	14		
	1.3.4	Interrupt Entry and Exit	16		
	1.3.5	Implementing Vector Table and Handlers			
1.4	ARM	Cortex-M7 exceptions and interrupts			
	1.4.1	ARM Cortex-M7 programmer's model	24		
	1.4.2	System Control Block	26		
	1.4.3	Exceptions			
	1.4.4	Exception numbers and priorities	29		
	1.4.5	Vector table and Exception handlers	30		
	1.4.6	Exception entry and exit			
	1.4.7	Case Study: A simple task scheduler on ARM Cortex-M7			
1.5	ARM 9 exceptions and interrupts 56				
	1.5.1	Vector table and interrupt priorities	56		
	1.5.2	ARM9 interrupt handling	58		
	1.5.3	Interrupt handlers in C	60		
1.6	Intel in	nterrupts			
1.7	Interru	upt controllers	64		
	1.7.1	ARM Advanced Interrupt Controller			
	1.7.2	RISC-V Platform-Level Interrupt Controller in FE310	70		
	1.7.3	ARM Cortex-M Nested Vectored Interrupt Controller	75		
	1.7.4	Intel 8259A Programmable Interrupt Controler			
	1.7.5	8259A PIC Cascading			
	176	Intel Advanced Programmable Interrupt Controler	83		

vi	Contents

1.8	PCI interrupts			
	1.8.1	PCI Legacy interrupts		
	1.8.2	PCI interrupts routing		
		Message Signaled Interrupts		

Chapter 1

Interrupts and interrupt handling

CHAPTER GOALS

Have you ever wondered how computer components demand and get attention from the CPU? How do they tell the CPU or operating system that something important has just happened in the computer system, which requires an immediate response from the CPU, e.g., new data has just arrived at an I/O interface and should be processed immediately? This is done using so-called interrupts. This chapter will cover the theory and practice of interrupts and their handling. An interrupt is a hardware-initiated procedure that interrupts whatever program (CPU) is currently executing and requests that the CPU immediately start running another program that is written to service the particular interrupt request.

Upon completion of this chapter, you will be able to:

- Distinguish between interrupts and exceptions.
- Explain the operation of the interrupt signals.
- Explain the interrupt and exception handling.
- Explain the function of interrupt vectors and vector tabels.
- Explain the function of an interrupt controller.
- Explain the interrupts and interrupt handling in the Intel and ARM family of processors.

1.1 Introduction

During my childhood, there were two powerful military blocs in Europe and the world: the Eastern (Soviet) Block and the Western (USA) Block. That was a period of geopolitical tension between the Soviet Union and the United States and their respective allies, the Eastern Bloc and the Western Bloc. The country where I grew up, former Yugoslavia, was not part of any of these military blocks, though politically, it

was closer to the eastern block. In the 1970s, former Yugoslav air force purchased a number of Soviet MIG-21 fighter aircraft from the USSR. The MIG-21 aircraft sold to Yugoslav air force had virtually no modern electronic devices, and the military of Yugoslavia wanted to install missile sensors in the planes. However, the USA and its allies have imposed an embargo on the purchase of electronic and computer components against Yugoslavia. Among all the universities in Yugoslavia, only the University of Ljubljana was allowed to purchase a few pieces (up to 20) of each chip that would be used only in the educational process. That's why the Yugoslav Army approached the University of Ljubljana to buy all the necessary electronic and computer components and develop a system that would be installed on the aircraft and would detect missiles. The system at the time had to be based on the modern Motorola 6800 microprocessors from the US. At its core, the system had a microcomputer built on the Motorola 6800 processor and a missile sensor. In addition to detecting missiles, the microcomputer had to do other things, also. If the missile sensor detected a rocket, the computer system had to immediately stop whatever it was currently doing and alert the pilot to the approaching missile. But how would a missile sensor be able to communicate to the CPU if the CPU could do nothing but fetch and execute instructions from memory? Remember that the CPU fetches and executes instructions every clock cycle. That's all it is able to do. So there must be some mechanism by which the CPU can be immediately interrupted and required to start another program. In our case, the CPU would run another program (e.g., display the current altitude and speed of the aircraft). In the event that the sensor detects a missile, it must, in some way, immediately suspend the currently running program and require the CPU to execute a program to flash the warning lights and alert the pilot. So, the CPU must have some mechanism in place to immediately stop the execution of one program and start another program. This mechanism is called interrupts, and the program that the CPU starts running in the response to an is called interrupt service program (ISP) or interrupt handler.

Interrupts and interrupt handling must be **transparent**. This means that the stopped (interrupted) program must not know that it has been stopped and must continue after the termination of the interrupt service program as if it had not been interrupted at all.

In the following chapters, we will learn about the interrupt mechanism and interrupt handling.

1.2 Interrupts

As we said in the Introduction, we want to have to ability to service external interrupts. This is useful if a device external to the processor needs attention. Figure 1.1 illustrates a simplified system with a CPU and a peripheral device. To be able to respond to interrupt requests from a peripheral device, a CPU usually has at least one interrupt request (IRQ) pin and one interrupt acknowledge (INTA) pin. The IRQ pin is the input used by a peripheral device to interrupt the processor (i.e., to interrupt

1.2 Interrupts 3

the normal program flow in the CPU.). Since the CPU should finish executing the current instruction(s) before servicing any external interrupts, the peripheral device may have to wait for several clock cycles before the CPU responds to the interrupt request. The INTA pin is the output used to signal the peripheral device, which has requested an interrupt via the IRQ signal, that the CPU has started servicing the interrupt request and that the IRQ signal can be deactivated. Both pins in Figure 1.1, IRQ and INTA, are active low. Two resistors are used to establish a logic one on both signals IRQ and INTA (i.e., both signals are deactivated) when no one drives them.

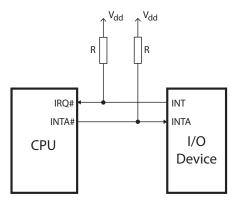


Fig. 1.1: A simplified block diagram of a computer system with interrupt controlling signals.

In general, CPUs can respond to interrupts in two different ways: in either an edge-sensitive or level-sensitive manner. In an edge-sensitive manner, the interrupt signal input is designed to be triggered by a particular signal edge (level transition): either a falling edge (high to low) or a rising edge (low to high). In a level-sensitive manner, the interrupt signal input is designed to be triggered by a logic signal level. A peripheral device invokes a level-triggered interrupt by driving the signal to and holding it at the active level. We refer to this operation as asserting the signal. It de-asserts the signal when the processor signals it to do so. One advantage of level-triggered interrupt inputs is that they allow multiple devices to share a common interrupt signal. Most often, the active level of an interrupt input signal is LOW. In such a case, the interrupt signal is tied to the HIGH voltage level using a pull-up resistor. When multiple peripheral devices share one level-triggered interrupt input signal, the device that wants to assert the interrupt request simply connects the signal to the ground (pulls thew signal LOW). The system in Figure 1.1 uses level-sensitive interrupt signals.

Summary: Assering and de-asserting a signal

Some signals are active high, and some signals are active low. To avoid the problem of high vs. low and the fact that for some signals, active means high and for some signals active means low, we just say asserted (activated) vs. de-asserted (deactivated).

When the device needs the attention from the CPU, it activates (asserts) the IRQ pin on the CPU. During the normal flow of execution through a program, the program counter increases sequentially through the address space, with branches to nearby labels or branches and links to subroutines. The CPU checks the status of the IRQ pin every time before a new instruction pointed to by the program counter is fetched from memory. When a peripheral device requests the interrupt, it is necessary to preserve the previous processor status while handling the interrupt, so that execution of the program that was running when the interrupt request occurred can resume when the appropriate interrupt handler has completed. We say that the interrupts must be 100% transparent. So, when an interrupt request occurs, the CPU

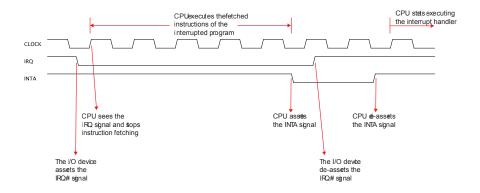


Fig. 1.2: A timing diagram for an external interrupt request.

completes the current instruction and asserts the INTA signal. When a peripheral device sees the INTA signal, it de-asserts the IRQ signal. Figure 1.2 shows the timing diagram for an external interrupt request for the simple system from Figure 1.1.

Then the CPU saves the part of the context of the interrupted program in the stack. A context is a state of the program counter, status register, stack pointer, and all other program-visible CPU registers. Some CPUs save the whole context in the stack, while others save only a part of the context in the stack. Since interrupts can happen at any time, there is no way for the active programs to prepare for the interrupt (e.g., by saving registers that the interrupt handler might write to). It is important to note that calling conventions do not apply when handling interrupts: the interrupt is not being "called" by the active program; it is interrupting the active program. Thus, the interrupt handler code must preserve the content ensure that it

1.2 Interrupts 5

does not overwrite any registers that the program may be using before their content is saved. After the CPU has saved the context, the CPU automatically loads the address of the interrupt handler into the program counter. The interrupt handler is a program written by the user and depends on the peripheral device's functionality. Depending on how much of the context is automatically saved by the CPU, the interrupt handler must first save every register it intends to use in the stack or somewhere in memory.

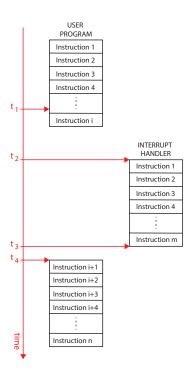


Fig. 1.3: The procedure involved in interrupts.

Figure 1.3 shows the procedure involved in interrupts: the CPU executes the sequence of instructions from a user program until an interrupt request occurs at the time t_1 . When the IRQ signal is asserted, the CPU stops executing the user code and starts executing the interrupt handler. But before executing the interrupt handler at time t_2 , the CPU must finish the execution of already fetched instructions, save the (part of) context, and obtain the address of the interrupt handler. The time $t_2 - t_1$ required for this procedure is called **interrupt latency**. In general, interrupt latency is the time that elapses from when the IRQ signal is asserted to when the CPU starts to execute the interrupt handler. Interrupt latency duration is usually not predetermined and depends on how many instructions are already in the CPU's pipeline, on how CPU saves the context and on whether any new interrupt requests are temporarily

disabled. Once the CPU completes the execution of the interrupt handler at time t_3 , it returns back to the execution of the user code at time t_4 . Before returning to user code, the CPU must automatically restore the previously saved context.

1.2.1 Types of interrupts

There are typically three types of interrupts regarding the source of the interrupt: external interrupts (or simply interrupts), traps or exceptions, and software interrupts. External interrupts are triggered by an external device by activating the interrupt request pin on the CPU. Traps or exceptions are activated internally in the CPU, usually as a result of some exceptional condition caused by instruction. For example, traps are caused when illegal or undefined instruction is fetched, or when the CPU attempts to execute an instruction that was not fetched because the address was illegal. A special instruction triggers software interrupts. Such instructions function similarly to subroutine calls, but the subroutine, in this case, the interrupt handler, is not being "called", but an interrupt-like sequence occurs. These software-interrupt instructions are useful when the user program does not know or is not allowed to know the address of the routine which it would like to "call", e.g., they are usually used for requesting operating system services and routines.

External interrupts are divided into two types: maskable and non-maskable interrupts. Maskable interrupts can be enabled or disabled by setting a bit in the CPU's control register or by executing a special instruction. For example, Intel has the CLI instruction to mask the interrupts, and ARM has CPSID instruction for this purpose. Non-maskable interrupts have a higher priority than maskable interrupts. That means that if both maskable and non-maskable interrupts are activated at the same time, the CPU will service the non-maskable interrupt first.

1.2.2 Handling interrupts

In a situation where multiple types of interrupts and exceptions can occur, there must be a mechanism in place where different handler code can be executed for different types of events. In general, there are two methods for handling this problem: polled interrupts and vectored interrupts.

In polled interrupts, the processor branches to a specific address that begins a sequence of instructions that check the cause of the interrupt or exception and branch to handler code for the type of interrupt/exception encountered. This is also called polled interrupt/exception handling.

In vectored interrupts, the processor branches to a different address for each type of interrupt or exception. Each exception address is separated by only one word, and these addresses form a table called **interrupt vector table**. Each entry of the interrupt vector table is called **interrupt vector**, and it is the address of an interrupt

1.2 Interrupts 7

handler. Hence, the vector table contains the start addresses, called interrupt vectors, for all exception handlers. This method is called **vectored interrupt handling**. This concept is common across many processor architectures, although interrupt vector tables may be implemented in other architecture-specific fashions. For example, another common concept is to place a jump instruction (instead of vectors) at each entry in the table. Each of these jump instructions forces the processor to jump to the handler code for each type of interrupt/exception. In this case, the address of each table entry is considered as an interrupt vector.

1.4 ARM Cortex-M7 exceptions and interrupts

In the terminology ARM uses, all events or conditions that can interrupt the normal program flow and transfer control to a specific handler (service) routine are referred to as exceptions. ARM Cortex-M7 processors support a variety of exceptions, and they are essential for handling events like interrupts, faults, and system calls. In general, exceptions can originate both by the hardware and the software.

1.4.1 ARM Cortex-M7 programmer's model

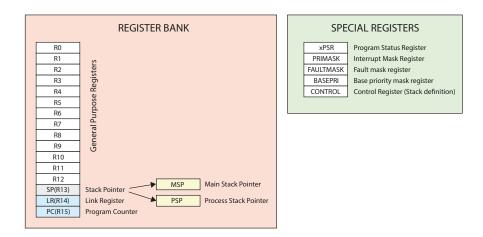


Fig. 1.10: ARM Cortex-M7 core registers.

In this subsection, we will briefly describe the ARM Cortex-M7 programmer's model. The ARM Cortex-M7 processor core features a set of registers used for various purposes in program execution and system control. These registers can be categorized into two groups: register bank and special registers (see Figure 1.10).

1.4.1.1 Register bank

The register bank contains 16 32-bit registers. Thirteen of them are general-purpose registers, and the other three have special uses:

1. Registers R0 to R12 are general-purpose registers for data storage and data operations.

- 2. R13 is Stack Pointer (SP) for maintaining the stack, typically used for local variables and function call frames. The Cortex-M7 contains two physically different stack pointers for different privilege levels:
 - a. The Main Stack Pointer (MSP)is the default Stack Pointer after reset and is mainly used when the processor runs in privileged or system mode.
 - The Process Stack Pointer (PSP) can only be used in unprivileged or user mode.
- 3. R14 is Link Register (LR), which stores the return address when calling subroutines or functions. On reset, the processor sets the LR value to 0xFFFFFFFF.
- 4. R15 is Program Counter (PC), which holds the memory address of the currently executing instruction.

Because the stack pointer register in ARM Cortex-M7 has two physical copies, we say it is **banked**. In the context of ARM Cortex processors, the term 'banked register' refers to a type of register that has multiple copies or 'banks', each associated with a specific execution mode or privilege level. These banks allow the processor to maintain separate register sets for different execution contexts, such as user mode, privileged mode, and exception modes. The selection of the stack pointer is determined by a special register called the CONTROL register, which is a part of the special register set.

1.4.1.2 Special registers

Besides the registers in the register bank, there are several special registers. These registers contain the processor status and define the operation states and interrupt/exception masking. The special registers are:

1. xPSR is a 32-bit Program Status Register. Some of the bit fields in the xPSR




Fig. 1.11: xPSR register.

register are N (negative flag), Z (zero flag), V (overflow flag), C (carry flag), T (Thumb state) and EXCEPTION NUMBER representing the number of the current exception (interrupt).

CONTROL register is a 32-bit register that allows the processor to manage privileged and unprivileged execution modes and select the active stack pointer. It

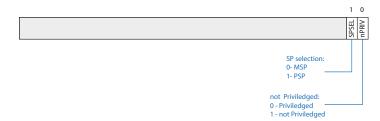


Fig. 1.12: CONTROL register.

includes the following fields: nPRIV (Privilege Level Bit) determines the privilege level of the processor (0 for privileged, 1 for unprivileged), and SPSEL (Stack Pointer Select Bit) selects the active stack pointer (0 for MSP, 1 for PSP).

3. Three exception masking registers:

a.

4. The PRIMASK register is a 1-bit wide interrupt mask register. When set, it blocks all exceptions (including interrupts) apart from the Non-Maskable Interrupt (NMI) and the HardFault exception. The FAULTMASK register is very similar to PRIMASK, but it also blocks the HardFault exception. The BASEPRI register masks (blocks) exceptions or interrupts based on their priority level

Special registers are not memory mapped and can be accessed using special register access instructions MSR and MRS:

MRS reg, special_reg reads special register into general-purpose register, and MSR special_reg, reg writes to special register from general-purpose register.

1.4.2 System Control Block

In addition to the registers we have just covered, ARM Cortex-M7 processors maintain another important register bank called System Control Block (SCB). The System Control Block is a crucial part of the processor's control and configuration. The SCB is a memory-mapped register bank that includes several registers and control bits that influence the processor's behaviour, manage exceptions, and provide system-level control. For example, the SCB registers for controlling processor configurations (e.g., low power modes), providing fault status information (fault status registers), relocating the vector table and controlling/obtaining the status of some interrupts. Here, we provide a brief description of only one CSB register related to interruptions and exceptions. This is the Interrupt Control and State Register (ICSR). This register provides bits for setting and clearing two software interrupts, PendSV

and SysTick. The ICSR register is memory-mapped at address 0xE000ED04. For example, writing 1 to bit 28 in ICSR will set the PendSV exception to pending.

1.4.3 Exceptions

ARM architecture distinguishes between the two types of exceptions: **interrupts** originate from the external hardware, and **exceptions** originate from the CPU core or software (e.g., access to an invalid memory location or an SVC assembly instruction, which is commonly used as a convenient way to enter the operating system kernel). The following information identifies each ARM Cortex-M7 exception:

- 1. Exception Number A unique number referencing a particular exception (starting at 1). This number is also used as the offset within the vector table, where the address of the handling routine for the exception is stored. This routine is usually referred to as the exception handler or interrupt service routine (ISR) and is the procedure which runs when an exception is triggered. The ARM hardware will automatically look up this function pointer (address of the exception handler) in the vector table when an exception is triggered and start executing the code. When the CPU is servicing an exception, its exception number is in the lower nine bits of the xPSR register.
- 2. Priority Level / Priority Number Each exception has a priority associated with it. For most exceptions, this number is configurable. Counter-intuitively, the lower the priority number, the higher the precedence the exception has. So, for example, if two exceptions of priority level 2 and priority level 1 occur simultaneously, the exception with priority level 1 exception will be serviced first. When we say an exception has the "highest priority", it will have the lowest priority number. If two exceptions have the same priority number, the exception with the lowest exception number will run first.
- 3. **Synchronous or Asynchronous** As the name implies, some exceptions will fire immediately after an instruction is executed (e.g. SVCall). These exceptions are referred to as synchronous. Exceptions that do not fire immediately after a particular code path is executed are referred to as asynchronous (e.g. external interrupts).

ARM Cortex-M7 exceptions can be broadly categorised into four main types:

1. Interrupts are asynchronous events that can occur anytime and interrupt the normal program execution. They are typically generated by external peripherals (e.g., timers, UARTs, GPIO), and the processor responds to them by temporarily halting the current execution and transferring control to an interrupt service routine (ISR). For instance, a UART may use an interrupt request to indicate that new data have been received. A corresponding exception handler (ISR) is then executed that reads the received data. Interrupts can be divided into two main categories:

- a. External Interrupts: These are generated by external peripherals or devices to request the processor's attention. The Cortex-M7 processor supports a set of external interrupts (IRQs) that can be individually configured and prioritized.
- b. **NMI** (**Non-Maskable Interrupt**): This is a special type of interrupt that has higher priority than regular interrupts and cannot be disabled or masked. NMIs are typically used for critical system functions. Like ordinary interrupt requests, Non-Maskable Interrupt (NMI) requests can be issued by either hardware or software (e.g. if errors happen in other exception handlers, an NMI will be triggered). The main difference is that their priority is extremely high, namely, the highest in the system below the reset exception.

Two more exceptions also belong to this category and are generated within the processor rather than from external peripheral devices. They are:

- a. **SysTick** exception, generated periodically by the 24-bit count-down system timer and often used by operating systems to drive time slicing. If needed, the same exception can also be issued by software.
- b. **PendSV** exception can only be triggered by software. Operating systems often use it to indicate that a context switch is due and perform it in the future when no other exceptions are waiting to be handled. The PendSV exception can be triggered by writing 1 to bit 28 in the ICSR (a part of the System Control block), which is memory-mapped at address 0xE000ED04.
- 2. Faults are synchronous events generated due to an abnormal event detected by the processor, either internally or while communicating with memory and other devices. These exceptions are of great interest and concern because they indicate serious hardware or software issues that likely prevent the software itself from continuing with normal activities. The following faults are present in Cortex-M7 processors:
 - a. UsageFault occurs when the processor detects an issue with the program's execution or when an instruction cannot be executed for various reasons. For instance, the instruction may be undefined or may contain a misaligned address that prevents it from accessing memory correctly. Another reason for raising a UsageFault exception is an attempt to divide by zero. Some of the faults mentioned above (like dividing by zero) can be masked in software, i.e., the processor can be instructed to just ignore them without generating any exception, whereas others (such as undefined instruction) cannot, for obvious reasons.
 - b. BusFault triggers when an error occurs on the data or instruction bus while accessing memory. In other words, it can be generated as a consequence of an explicit memory access performed by an instruction during its execution and also by fetching an instruction from memory. BusFaults result from issues in memory access, most often as attempting to access a location with no valid memory. As Cortex-M7 is a memory-mapped input-output (I/O) architecture, whenever we refer to a memory address, we actually mean

- an address within the processor's address space that may refer to either a memory location or an I/O register.
- c. MemManage (Memory Management Fault) faults occur when there is a memory access violation, such as accessing restricted memory regions. In other words, this fault occurs when the memory protection mechanism blocks memory access. An optional Memory Protection Unit (MPU) provides a programmable way of protecting memory regions against data read and write operations, as well as instruction fetches. For instance, the processor's MPU can be programmed to forbid instruction fetch from address areas containing I/O registers.
- d. HardFault is a severe fault that can be generated when an error occurs during exception processing, thus disrupting the normal exception handling flow. HardFaults have a higher priority than any exception with configurable priority. HardFaults are typically unrecoverable, meaning the processor cannot continue the normal program execution from the point of the fault. Usually, the application or CPU must be reset. To prevent HardFaults, developers should follow best practices for writing robust and well-tested code. This includes avoiding undefined instructions, ensuring valid memory accesses, and monitoring stack usage to prevent stack overflows. Additionally, proper fault handling and diagnostics can help identify and address issues before they lead to a HardFault. Hard faults in Cortex-M7 processors are a critical part of system reliability and safety, as they help detect and report severe issues that could otherwise result in unpredictable or incorrect system behaviour.
- 3. Supervisor call (SVC) is a software-initiated exception. It is used to transition from the user or application mode to a more privileged mode, typically for making requests to the operating system or kernel. The execution of an SVC assembly instruction raises this exception. It is commonly used as a convenient way to enter the operating system kernel and request it to perform a function on behalf of the application.
- 4. Reset Exception (Reset) is invoked on power up or a warm reset. The exception model treats reset as a special form of exception. When reset is asserted, the operation of the processor stops, potentially at any point in an instruction. When reset is de-asserted, execution restarts from the address provided by the reset entry in the vector table. It is handled as other exceptions for the most part, except that instruction execution can stop at an arbitrary point.

1.4.4 Exception numbers and priorities

Table 1.4 lists different types of exceptions with their priorities, exception numbers and vector addresses. All exceptions have an associated priority with a lower number value indicating a higher priority. The programmer (software) configures the

Exception Number	Exception Type	Priority	Vector Address	Activation
1	Reset	-3 (Highest)	0x00000004	Asynchronous
2	NMI	-2	0x00000008	Asynchronous
3	HardFault	-1	0x0000000C	Synchronous
4	MemManage	Configurable	0x00000010	Synchronous
5	BusFault	Configurable	0x00000014	Synchronous
6	UsageFault	Configurable	0x00000018	Synchronous
7-10	unused	-	-	-
11	SVCall	Configurable	0x0000002C	Synchronous
12-13	unused	-	-	-
14	PendSV	Configurable	0x00000038	Asynchronous
15	SysTick	Configurable	0x0000003C	Asynchronous
16 and above	Interrupt (IRQ)	Configurable	0x00000040 and above	Asynchronous

Table 1.4: Exception types in Cortex-M7.

priorities for most exceptions, except for Reset, NMI and HardFault. If the software does not configure any priorities, then all exceptions with a configurable priority have a priority of 0. Configurable priority values are in the range 0-15. Here is the rule of **order of execution** of exceptions:

- If two or more exceptions are pending, the exception with the highest priority runs first.
- 2. If two or more exceptions with the same priority are pending, the exception with the lowest exception number runs first.
- 3. When the processor executes an exception handler, the exception handler is preempted if a higher-priority exception occurs. If an exception occurs with the same priority as the exception being handled, the handler is not preempted, irrespective of the exception number. However, the status of the new interrupt remains pending.

The exceptions with exception numbers 1-15 are so-called **built-in exceptions**. The built-in exceptions are a mandatory part of every ARM Cortex-M core. The ARM Cortex-M specifications reserve exception numbers 1-15, inclusive, for built-in exceptions.

1.4.5 Vector table and Exception handlers

The vector table contains the reset value of the stack pointer and the start addresses, also called **exception vectors**, for all exception handlers. On system reset, the vector table is at address 0x00000000. This is the default start address of the vector

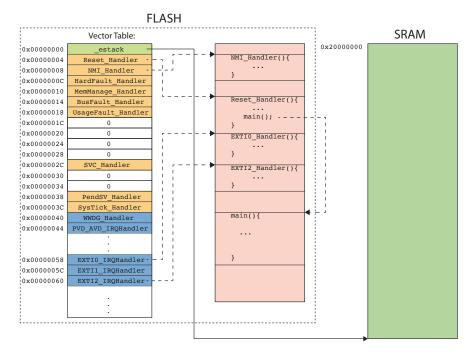


Fig. 1.13: The memory layout of the vector table and exception handlers in ARM Cortex-M7 cores.

table, where Cortex-M7 expects to find it. This is usually a linker job that places the vector table at the beginning of the binary file we upload to the flash memory. Figure 1.13 shows how the vector table is organized in memory and the order of the exception vectors in the vector table. The first entry of this array is the value of the stack pointer. Note that the programmer is responsible for setting the first value into the stack pointer (which is the address of the beginning of the stack). Usually, this address corresponds to the end of the SRAM, as we often use the stack that expands in the direction of descending addresses. Starting from the second entry of this table, we can find the starting addresses for all exception handlers. This means that the vector table has a length of up to 256 for Cortex-7 and depends on the number of interrupts implemented. The silicon vendor that uses an ARM Cortex-M7 core can implement up to 240 interrupts. The silicon vendor must configure the top range value, which is dependent on the number of interrupts implemented. ARM requires that we always adjust the vector table's size by rounding up to the next power of two. For example, if there are 16 interrupts, the minimum size of the vector table is 32 words, enough for 16 built-in exceptions and up to 16 interrupts. If the user (silicon vendor) requires 21 interrupts, the size of the vector table must be 64 words because the required table size is 37 words, and the next power of two is 64. The name of the exception handlers in Figure 1.13 is just a convention, and we are totally free to rename them if we like a different one. They are just symbols.

Defining a vector table for a Cortex-M7 processor involves setting up a table of exception handler addresses that the processor will jump to when specific exceptions occur. As said before, the vector table must be placed at the beginning of the flash memory, where the processor expects to find it. In ARM Cortex-M microcontroller development, the .isr_vector is a special section in the microcontroller's memory where the vector table for exceptions and interrupts is defined. The vector table contains addresses of exception and interrupt service routines (ISRs). The .isr_vector section is a label used in the linker script to specify the location of the vector table in memory. Commonly, the vector table is implemented in assembly code in the startup file (e.g. for the Cortex-M7-based STM32H753 microcontroller, the startup file would be startup_stm32h753xx.s) as:

```
.section .isr_vector
g_pfnVectors:
  .word _estack
/* Built-in Exceptions */
  .word Reset Handler
  .word NMI Handler
  .word HardFault Handler
         MemManage_Handler
  .word
  .word BusFault_Handler
  .word
         UsageFault_Handler
  .word
  .word
  .word
         0
  .word
         SVC Handler
  word
  .word
         DebugMon_Handler
  .word
         0
         PendSV_Handler
  .word
  .word
        SysTick_Handler
  /* External Interrupts */
  .word
        WWDG_IRQHandler
  .word
        PVD_AVD_IRQHandler
  .word
        EXTIO_IRQHandler
  .word
         EXTI1_IRQHandler
  .word
         EXTI2 IROHandler
         WAKEUP_PIN_IRQHandler
  .word
```

Listing 1.9: The vector table for Cortex-M7.

Then, the exception and interrupt handler functions should be implemented in the code. These functions are called when their corresponding exceptions or interrupts occur. The handler function names should match the names of the entries in the vector table for a very obvious reason:

```
void Reset_Handler(void) {
    // Reset handler code
}
void NMI_Handler(void) {
```

```
// NMI handler code
}

void HardFault_Handler(void) {
    // HardFault handler code
}

void EXTIO_IRQHandler (void) {
    // HardFault handler code
}

// HardFault handler code
}
```

Listing 1.10: Exception handlers in C.

1.4.6 Exception entry and exit

Exception entry and exit in an ARM Cortex-M7 processor is a well-defined process that enables the CPU to handle various exceptions, including interrupts and faults while preserving the state of the currently executing program. This mechanism ensures that the system can respond to events without compromising the integrity of the application code. Here, we provide a detailed description of the exception entry and exit process in a Cortex-M7.

1.4.6.1 Exception entry

The **exception entry** occurs when there is a pending exception with sufficient priority and either:

- 1. The processor is executing a normal program and the new exception terminates the currently executing program.
- The processor executes the exception handler, and the new exception is of higher priority than the exception being handled, in which case the new exception preempts the original exception. When one exception preempts another, we say the exceptions are **nested**.

When the processor takes an exception, the processor pushes the **current execution context** onto the current stack. The execution context consists of eight 32-bit words: registers R0 through R3, R12, the link register LR (also accessible as R14), the program counter PC (R15), and the program status register xPSR, for a total of 32 bytes. This operation is referred to as **stacking**, and the structure of eight 32-bit data words is referred to as the **stack frame**. The reason behind automatically saving the execution context is that accepting and handling an exception should not necessarily prevent the processor from returning to its current activity later. This is particularly true for interrupts and other exception requests that occur asynchronously to current processor activities and are most often totally unrelated to them. Thus, the exceptions and interrupts should be transparent with respect to any code executing when they arrive. Figure 1.14 shows the exception stack frame

after stacking. Immediately after stacking, the stack pointer indicates the lowest address in the stack frame. The reader will notice that Cortex-M processors use the **full-descending stack** (the stack grows downward in memory, and the stack pointer points to the lowest memory address in use). The stack frame includes the return

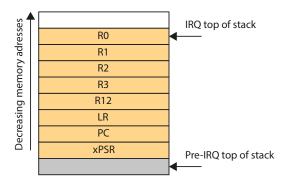


Fig. 1.14: The layout of the stack frame after stacking in ARM Cortex-M7.

address, as the PC is also saved during stacking. This is the address of the next instruction in the interrupted program. This value is restored to the PC at exception return so that the interrupted program resumes.

Here, we have to describe stack pointers and processing modes in ARM Cortex-M processors in more detail. In ARM Cortex-M processors, there are two registers used to access and manipulate stack: the **Main Stack Pointer (MSP)** and the **Process Stack Pointer (PSP)**. These stack pointers are critical in managing the execution context and handling exceptions in the processor. Additionally, the Cortex-M architecture defines two processing modes: **Thread mode** and **Handler mode**, each with distinct purposes and behaviours. The Main Stack Pointer (MSP) and Process Stack Pointer (PSP) can be accessed and manipulated through the stack pointer (SP), also known as register r13. Commonly, operating mode defines which of the two (MSP or PSP) is accessible through SP (i.e. visible as SP).

Thread mode is the typical execution mode for user/application code. The processor often uses the PSP (although it is possible to use MSP in this mode also) as the current stack pointer in this mode. The processor enters Thread mode after a reset or when returning from an exception or interrupt. User-level code runs in Thread mode, and the PSP is often used for function calls and managing thread-specific context. Handler mode is a privileged execution mode used for handling exceptions and interrupts. The processor switches from Thread mode to Handler mode when an exception or interrupt occurs. The processor automatically saves the current context onto the PSP or MSP stack (depending on the operation mode of the interrupted program) before executing the exception handler. The MSP is then used in Handler mode as the stack pointer. Handler mode is reserved for system-level tasks and en-

sures that critical operations can be carried out even when the application stack is compromised.

In parallel to the stacking operation, the processor writes an **exception return value** (called EXC_RETURN value in the ARM documentation) to the link register (LR). This indicates which stack pointer corresponds to the stack frame and what operation mode the processor was in before the entry occurred. The information provided by the EXEC_RETURN value allows the processor to locate the stack frame to be restored upon returning from an exception, interpret it in the right way, and bring back the processor to the execution mode of the interrupted program. Table 1.5 shows the EXC_RETURN values and their meaning upon returning from an exception.

Table 1.5: Exception return values and their behaviour upon returning from an exception.

EXC_RETURN[31:0]	Description
0xFFFFFFF1	Return to Handler mode, exception return uses the exception stack frame from
UXFFFFFF	the MSP and execution uses MSP after return.
0xFFFFFFF9	Return to Thread mode, exception return uses the exception stack frame from
UXFFFFFF	the MSP and execution uses MSP after return.
0xFFFFFFFD	Return to Thread mode, exception return uses the exception stack frame from
UXFFFFFFD	the PSP and execution uses PSP after return.

In parallel to the stacking operation, the processor also performs a vector fetch that reads the exception handler start address from the vector table. The processors determines the exception vector to be fetched into the PC by the exception number:

$$PC \leftarrow M[0x0000\ 0000 + 4 \times (exception\ number)].$$

When stacking is complete, the processor starts executing the exception handler, switching to Handler Mode. Associated with the execution mode switch, the processor may also use a new stack. As mentioned previously, handler mode execution always uses MSP, whereas thread mode execution may use either MSP or PSP, depending on processor configuration. The Reset exception is a deviation from this general rule. The Reset exception is handled in Thread mode instead. Upon reset, execution starts in Thread mode, and the processor is automatically configured to use MSP.

1.4.6.2 Exception return

The **exception return** occurs when the processor is in Handler mode and executes an instruction which loads the EXC_RETURN value into the PC (for example bx lr). Recall that EXC_RETURN is the value loaded into the LR on exception entry. The exception mechanism relies on this value to detect when the processor has completed an exception handler. The lowest bits of this value provide information

on the return stack and processor mode. When this value is loaded into the PC, it indicates to the processor that the exception is complete, and the processor should initiate the appropriate exception return sequence instead of fetching an instruction.

When an exception return value is loaded into the program counter PC as part of an exception handler epilogue, it directs the processor to initiate an exception handler return sequence instead of simply returning to the caller. In fact, the ARM Architecture Procedure Calling Standard (AAPCS) states that a function call must save into the link register LR the return address before setting the program counter PC to the function entry point. This is typically accomplished by executing a branch and link instruction b1 with a PC-relative target address. In the epilogue of the called function, it is then possible to return to the caller by storing back into PC the value stored into LR at the time of the call. This can be done, for instance, by means of a branch and exchange instruction bx, using LR as argument.

This aspect of the exception return has been architected to permit any AAPCS-compliant function to be used directly as an exception handler. In this way, any AAPCS-compliant function can be used as an exception handler. This is especially important when exception handlers are written in a high-level language like C because compilers are able to generate AAPCS-compliant code by default, and hence, they can also generate exception-handling code without treating it as a special case. The exception handlers for ARM Cortex-M processors are thus implemented as regular C functions and do not require a special function declaration keyword. As a result, an exception handler return performed by hardware is indistinguishable from a regular software-managed function return.

The following code presents the exception handler for an exception triggered by GPIO Pin 13 through EXTI15_10 lines. The exception handler is implemented just as a regular C function without any special function declaration:

```
void EXTI15_10_IRQHandler(void)
{
    // Check if GPI0_PIN_13 triggered the interrupt:
    if (__HAL_GPI0_EXTI_GET_IT(GPI0_PIN_13) != 0x00U)
    {
        // Your code to handle the GPI0_PIN_13 interrupt goes here

        // Clear the GPI0_PIN_13 interrupt flag
        __HAL_GPI0_EXTI_CLEAR_IT(GPI0_PIN_13);
}
}
```

Listing 1.11: The exception handler for EXTI15_10 interrupt implemented as a regular C function.

1.4.7 Case Study: A simple task scheduler on ARM Cortex-M7

In the realm of computer systems and real-time operating systems (RTOS), the concept of context switching is the linchpin of multitasking and responsiveness. It's a finely tuned mechanism that orchestrates the efficient execution of multiple tasks, allowing a processor to handle numerous concurrent operations with precision and determinism. At its core, context switching is a process by which the processor transitions from executing one task to another. The context of each task includes the task's state of the processor—registers, program counter, stack pointer, and system variables. This transition involves the preservation of the current task's context, the loading of the new task's context, and the seamless continuation of the latter's execution.

Context switching begins with a trigger—typically a timer interrupt signalling the need to switch contexts. The processor diligently saves the current context onto a task's stack and retrieves the context of the next task to be executed from its stack. An RTOS relies on a task scheduler, interrupt handling mechanisms, and precise memory management to orchestrate this performance. The scheduler keeps a record of tasks and manages their execution, while the interrupt system plays a pivotal role in triggering context switches when a timer interrupt occurs.

Understanding the intricacies of context switching is paramount for engineers working with computer systems to create efficient, deterministic, and robust applications. So, let's raise the curtain and delve into the intricacies of context switching, where the processor seamlessly switches tasks, and the computer system transforms into a multitasking maestro.

1.4.7.1 Background

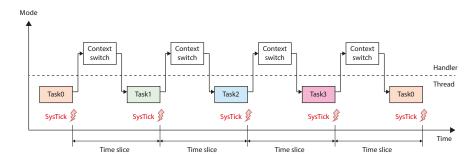


Fig. 1.15: A simple task scheduler.

A simple round-robin task scheduler (Figure 1.15) on Cortex-M7 processors effectively manages multiple tasks or threads in a cooperative multitasking environ-

ment. In this scheduler, each task is given a fixed time slice (quantum) during which it can execute. When its time slice expires, the scheduler switches to the next task in the queue. **The task scheduler relies on the interrupts and stacks to achieve context switching**. The SysTick and PendSV interrupts can both be used for context switching. The SysTick peripheral is a 24-bit timer that interrupts the processor each time it counts down to zero. This makes it well-suited to round-robin style context switching, and we are going to use the SysTick to perform a context switch.

When switching contexts, the scheduler needs a way to keep track of which tasks are doing what using a task table. Recall from the previous sections that the ARM Cortex-M7 processor has two separate stack pointers which can be accessed through a banked SP register: Main Stack Pointer (MSP), which is the default one after startup and is used in exception handlers running in the Handler mode, and Process Stack Pointer (PSP), which is often used in regular user procedures running in the Thread mode. In our application, tasks run in the Thread Mode with PSP, and the context-switcher (kernel) runs in the Handler Mode with MSP. This allows stack separation between the kernel and tasks (which simplifies the context switch procedure) and prevents tasks from accessing important registers and affecting the kernel.

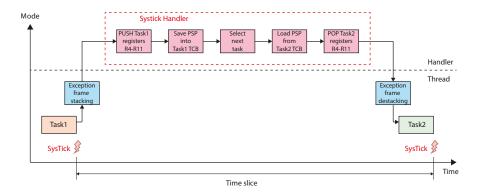


Fig. 1.16: A simple task scheduler.

Figure 1.16 shows the scheduler operations during a context switch in more detail. The scheduler relies on exception entry and exit mechanisms, which automatically save and restore the critical CPU context (registers R0-R3, R12, LR, PC and xPSR) using the exception frame on the stack. When a SysTich exception occurs, the Task1 critical registers are automatically saved into the Task1 exception stack frame. Once in the Systick handler, the scheduler is responsible for pushing the interrupted task Task1 registers R4-R11 onto the task's stack and saving its PSP in the task's TCB. Then, the scheduler selects the next task (Task2) in a round-robin fashion. Before returning from the SysTick handler, the scheduler is responsible for loading the Task2 SP into the PSP register and restoring the Task2 registers R4-

R11 from the Task2 stack. Then, upon exception exit, the Task2 critical registers are restored from its exception stack frame, and the execution returns to the new task.

Usually, three routines are required to implement and run the scheduler: create new tasks, initialize tasks, and perform the context switch. Besides, several data structures are required to implement and manage the stack for each task and represent each task's state. In the following subsections, we provide a step-by-step description of implementing a very simple round-robin scheduler on a Cortex-M7 processor.

1.4.7.2 Tasks

A task is a piece of code or a function that does a specific job when it is allowed to run. Usually, a task is an infinite loop which can repeatedly do multiple steps. In our simple scheduler application, the tasks cannot be finished (they never return) and do not take any arguments. Here is a C implementation of a task:

```
void task() {
    // init task:
    ...
    // main loop
    while(1) {
        // do things over and over
}
```

Listing 1.12: A task in C. In our application, a task never returns and does not take any arguments.

1.4.7.3 Stacks

In a multitasking environment, where multiple tasks are executed in a time-sharing manner, each task needs to have its own stack. Each task executes within its own context with no coincidental dependency on other tasks within the system or the scheduler itself. Each task's stack provides isolation between tasks. It ensures that local variables and function call frames of one task do not interfere with those of another task. This isolation is crucial for maintaining data integrity and preventing unintended side effects between tasks. Only one task within the application can execute at any point in time, and the scheduler is responsible for deciding which task this should be. As a task does not know of the scheduler activity, it is the scheduler's responsibility to ensure that the processor context (register values, stack contents, etc.) when a task is swapped in is exactly the same as when the same task was swapped out. In other words, each task's stack allows tasks to be reentrant. Reentrancy means that a task can be interrupted while executing and later resume from where it left off without corrupting its state. The stack stores the task's execution context, enabling reentrant behaviour. Besides, each task should be able to make

function calls and put arguments on the stack without worrying about function call frames interfering with those of other tasks. Furthermore, allocating a fixed amount of stack space for each task makes it easier to predict memory usage and stack requirements for each task, simplifying system design and analysis.

To achieve this, **each task is provided with its own stack** in our simple task scheduler. The size of each task's stack is 1 kB (256 32-bit words). So, for four tasks we create a memory block that holds all four stacks as follows:

```
unsigned int stackRegion[NTASKS * TASK_STACK_SIZE];
```

Listing 1.13: Memory block for tasks' stacks. NTASKS equals 4 and TASK_STACK_SIZE equals 256.

1.4.7.4 Task control block

A Task Control Block (TCB), also known as a Task Control Structure (TCS), is a data structure used in real-time operating systems (RTOS) and multitasking environments to manage and control individual tasks or threads. The TCB holds essential information about a task's state, allowing the operating system or scheduler to manage and switch between tasks efficiently. The exact contents and structure of a TCB may vary depending on the operating system or RTOS, but it typically includes the following information: task identifier, task state (e.g., ready to run, blocked, suspended, etc.), task priority, stack pointer, task name, and additional task's parameters.

In our implementation, each task will always be ready to run, so we will omit the task state from TCB. Besides, all tasks in our scheduler will have the same priority and will be selected on a round-robin basis, so we will omit the task priority from TCB. Because each task should have its own stack to save its local variable and exception frame, our TCB must include the SP value, which points to the current stack pointer of the task. The scheduler will select the next task in a round-robin fashion and write its SP value into the PSP register. The scheduler will also copy the PSP register of the interrupted task into its SP value. Also, in our implementation, the Task Control Block will contain the start address of the task. Here is a minimal TCB implementation using struct in C:

```
typedef struct{
  unsigned int *sp;
  void (*pTaskFunction)();
} TCB_Type;
```

Listing 1.14: TCB structure.

In our simple implementation, our scheduler will contain only four tasks. It would be easy to add additional tasks later, but for now, we will keep the code

as simple as possible. Each of the four tasks should have its TCB. Hence, we create a TCB table as:

```
TCB_Type TCB[NTASKS];
```

Listing 1.15: TCB table. NTASKS is a constant equal to 4.

1.4.7.5 Task creation

The TaskCreate() function saves the address of the task's stack and the address of the task's function into the task's TCB.

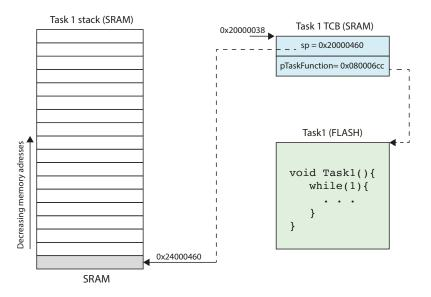


Fig. 1.17: Memory layout and content after calling the TaskCreate() function.

The following code presents the function used to create a new task:

Listing 1.16: The function TaskCreate() that creates a new task.

The parameters of the above TaskCreaet() function are:

- pTCB a pointer to a task's TCB,
- pStackBase pointer task's stack block,
- TaskFunction address of a task's function.

Figure 1.17 illustrates the memory layout and the contents of the task's stack and TCB after creating Task1 using the TaskCreate() function.

1.4.7.6 Task initialisation

The following code presents the function used to initialize a new task:

```
void TaskInit(TCB_Type* pTCB){
     HWSF_Type* pHWStackFrame;
SWSF_Type* pSWStackFrame;
     // Set pointers to HWSF and SWSF:
     pHWStackFrame = (HWSF_Type*)((void*)pTCB->sp - sizeof(HWSF_Type));
     pSWStackFrame = (SWSF_Type*)((void*)pHWStackFrame
                                                    - sizeof(SWSF_Type));
     // populate HW Stack Frame
     pHWStackFrame->r0 = 0;
     pHWStackFrame ->r1
     pHWStackFrame->r2
     pHWStackFrame ->r3
     pHWStackFrame->r12 = 0;
     pHWStackFrame->lr = 0xFFFFFFFF; // (reset val - task never exits)
pHWStackFrame->pc = (unsigned int) (pTCB->pTaskFunction);
     pHWStackFrame->psr = 0x01000000; // Set T bit (bit 24) in EPSR.
                                                    // The Cortex-M4 processor only
                                                    // supports execution of
                                                    // instructions in Thumb state.
                                                    // Attempting to execute
                                                    // instructions when the T bit
                                                    // is 0 (Debug state)
// results in a fault.
     // populate SW Stack Frame
     pSWStackFrame \rightarrow r4 = 0x04040404;
     pSWStackFrame->r5 = 0x05050505;
pSWStackFrame->r6 = 0x06060606;
     pSWStackFrame -> r7 = 0x07070707;
     pSWStackFrame->r8 = 0x080808088:
     pSWStackFrame \rightarrow r9 = 0x09090909;
     pSWStackFrame->r10 = 0x0a0a0a0a;
pSWStackFrame->r11 = 0x0b0b0b0bb;
     // Set task's stack pointer in the TCB to point at the top // of the task's SW stack frame
                     = (unsigned int*) pSWStackFrame;
     pTCB->sp
41
  }
```

Listing 1.17: The function TaskInit() that creates a new task.

The only parameter of the above TaskInit() function is a pointer to a task's TCB. The TaskInit() function performs the following steps:

1. Initialize pointers to two stack frames that hold the exception stack frame (so-called hardware stack frame) and the so-called software stack frame. The hardware stack frame will hold eight registers saved by the CPU during exception entry. Besides these eight registers, we need to save the remaining eight registers from the task's context (R4-R11). We need to prepare these stack frames for each new task so that when the task switch occurs, both frames will be ready for de-stacking and, hence, entering a new task. To make this task easier, we will abstract the frames with two structures:

```
typedef struct{
  unsigned int r0;
  unsigned int r1;
  unsigned int r2;
  unsigned int r3;
  unsigned int r12;
  unsigned int lr;
  unsigned int pc;
  unsigned int psr;
} HWSF_Type;
typedef struct{
  unsigned int r4;
  unsigned int r5;
  unsigned int r6;
  unsigned int r7;
  unsigned int r8;
  unsigned int r9;
  unsigned int r10;
  unsigned int r11;
} SWSF_Type;
```

Listing 1.18: Structures used to abstract the hardware and software stack frames.

The hardware stack frame resides at the bottom of the task's stack, and the software stack frame resides above the hardware stack frame.

- 2. Now, as two pointers to stack frames, pHWStackFrame and pHWStackFrame, are set, we can populate both frames with initial values. The hardware stack frame is populated as follows:
 - PSR = 0x01000000 this is the default reset value in the program status register,
 - PC = the address of the task,
 - LR = 0xFFFFFFF in our case, tasks never finish, so LR=0xFFFFFFF (reset value),
 - r12, r3-r0 = 0x000000000 we may also pass the arguments into the task via r0-r3, but this is not the case in our simple scheduler.
- 3. Finally, it saves the address of the top of the software stack frame into the task's SP enttry in the task's TCB.

After these steps, a new task is ready to be executed for the first time when the task switch occurs, and the task is selected for execution. Figure 1.18 illustrates the memory layout and the contents of the task's stack and TCB after creating Task1 using the TaskInit() function.

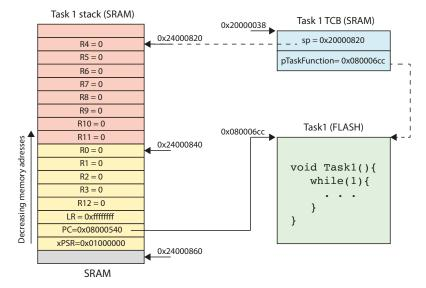


Fig. 1.18: Memory layout and content after calling the TaskInit() function.

1.4.7.7 Scheduler initialisation

The following code presents the function used to initialize all four tasks:

Listing 1.19: The function InitScheduler() creates all tasks and initializes all tasks except the firt one (Task0). At the end, it sets the top of the stack of the first task (Task0) into the PSP register.

The function InitScheduler() performs the following steps:

- 1. Creates all tasks.
- 2. Initializes all tasks except the first one (Task0). Task0 will be called from the main function and will be the first task interrupted by the SysTick timer. Hence, its stack frames will be populated during the context switch.
- 3. Saves the top of the stack of the first task (Task0) into the PSP register.

To read or write the PSP register, which is not memory-mapped, requires the usage of special CPU instructions MSR and MRS. Hence, in order to access the PSP register, we are forced to use assembly. To make programming easier, the above code relies on the <code>__set_PSP</code> function defined in the Cortex Microcontroller Software Interface Standard (CMSIS) library to write intio the PSP register. CMSIS is a vendor-independent hardware abstraction layer (HAL) for ARM Cortex-M processors. It simplifies software development for a wide range of microcontroller devices, promoting code portability and reusability across various microcontroller families and manufacturers. CMSIS defines two inline assembly functions to read or write the PSP register:

```
Set Process Stack Pointer
  \brief
  \details Assigns the given value to the Process Stack Pointer (PSP)
 \param [in] topOfProcStack Process Stack Pointer value to set
__attribute__((always_inline))
static inline void __set_PSP(uint32_t topOfProcStack)
  __asm volatile ("MSR psp, %0" : : "r" (topOfProcStack) : );
  \brack brief
          Get Process Stack Pointer
  \details Returns the current value of the Process Stack Pointer (PSP)
  \return PSP Register value
__attribute__((always_inline))
static inline void uint32_t __get_PSP(void)
  uint32_t result;
  __asm volatile ("MRS %0, psp" : "=r" (result) );
 return(result);
```

Listing 1.20: The CMSIS definition of inline assembly functions for accessing the PSP register.

After these steps, everything is set up for the first context switch. Figure 1.19 illustrates the memory layout and the task's stack after initializing scheduler using the InitScheduler() function.

1.4.7.8 Context switch

Context switching in multitasking environments can be performed using stack pointer (SP) swapping. The process involves saving the current task's context onto

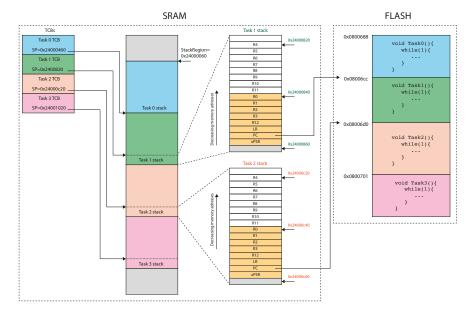


Fig. 1.19: Memory layout and content after initializing four tasks during the sceduler initialization.

its stack and then loading the context of the next task to be executed by swapping the SP. Figure 1.21 shows the process of context switching using stack pointer swapping. Here's a step-by-step description of how context switching is accomplished using this method:

- 1. When a trigger for context switching occurs (the trigger is a timer interrupt), the CPU saves the exception stack frame onto the Task1 stack using the PSP stack pointer and enters the timer's interrupt handler.
- 2. The remaining eight registers (R4-R11) are saved the onto the Task1 stack. The context switcher saves the current PSP into the Task1 TCB.
- 3. The context switcher determines which task should run next. The scheduler considers the round-robin scheduling policy to make this decision.
- 4. The context switcher retrieves the SP of Task2 from the Task2 TCB and saves it into the PSP register. The PSP now points to the stack where the context of Task2 is saved.
- 5. The eight registers (R4-R11) of Task2 are popped from stack.
- 6. The timer handler exits; hence, the de-stacking operation performed by the CPU retrieves the exception frame from the Task2 stack. As the PC of Task2 is part of its exception frame, the CPU returns to Task2

Figure 1.21 shows the chronology of the stack pointer when a context switch happens between Task1 and Task2. The following code presents the function that implements the context switcher:

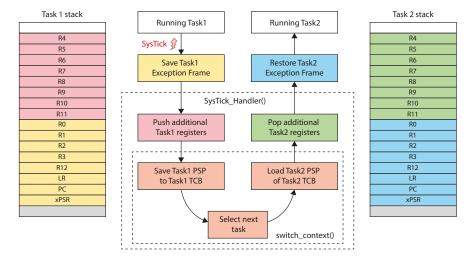


Fig. 1.20: Context switching using stack pointer swapping.

```
int ContextSwitch(int current_task, TCB_Type pTCB[]){
  volatile int new_task;

pTCB[current_task].sp = (unsigned int*) __get_PSP();

// select next task in round-robin fashion
  new_task = current_task + 1;
  if (new_task == NTASKS) new_task = 0;
  __set_PSP((unsigned int)pTCB[new_task].sp);

return new_task;
}
```

Listing 1.21: The functions ContextSwitch() that implements context switching.

The parameters of the ContextSwitch functions are the index of the current task (current_task) and the pointer to the TCB table (pTCB). The function return the index of a new task.

1.4.7.9 SysTick handler

Finally, we can implement the SysTick handler that will perform task switch:

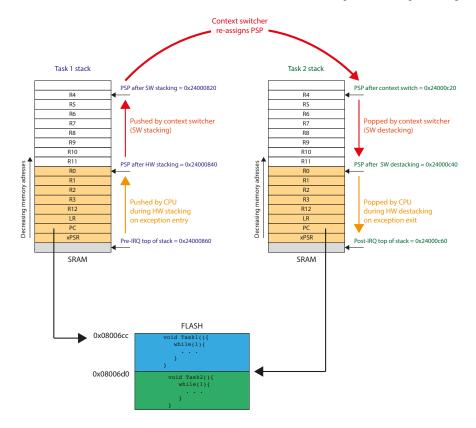


Fig. 1.21: The modification progress of the PSP stack pointer during context switching.

Listing 1.22: The SysTick handler used to perform task switch.

The SysTick handler performs the following steps:

- 1. Saves the context (R4-R11) of the interrupted task on the task's stack using PSP.
- 2. Switch context (swap stack pointers) using the textttswitch_context() function.
- 3. Restore the context (R4-R11) of the new task from its stack using PSP.

4. Return from interrupt and restore the exception frame of the new task from its stack.

1.4.7.10 Starting the scheduler

Finally, we are ready to start our scheduler within the main function. To do so, we need to:

- 1. Initialize scheduler.
- 2. Switch to NOT PRIVILEGED mode with PSP as the stack pointer by setting the last two bits in the CONTROL register.
- 3. Call Task0.
- 4. Within Task0, wait for the first SysTick interrupt.

The following code shows how to start the scheduler:

```
unsigned int stackRegion[NTASKS * TASK_STACK_SIZE];
  TCB_Type TCB[NTASKS];
  void (*TaskFunctions[NTASKS])();
 5 int current_task = -1;
  void Task0(){
    while(1) {}
  void Task1(){
    while(1) {}
void Task2(){
    while(1) {}
  void Task3(){
   while(1) {}
  }
19
21 int main(void)
    TaskFunctions[0] = Task0;
    TaskFunctions[1] = Task1;
    TaskFunctions[2] = Task2;
    TaskFunctions[3] = Task3;
     // Init scheduler
    InitScheduler(stackRegion, TCB, TaskFunctions);
     current_task = 0;
     // Start SysTick timer with the highest priority:
    HAL_InitTick(0);
     // Switch to NOT PRIVILEDGED with PSP:
      _set_CONTROL(0x00000003);
     // Call the first task:
Task0(); // never return!
    Task0();
     while(1){}
```

Listing 1.23: Starting the scheduler.

To write into the CONTROL register (which is not memory-mapped), the above code uses the __set_CONTROL function defined in the CMSIS library as:

```
/**
\brief Set Control Register
\details Writes the given value to the Control Register.
\param [in] control Control Register value to set

*/
__STATIC_FORCEINLINE void __set_CONTROL(uint32_t control)

{
__ASM volatile ("MSR control, %0" : "r" (control) : "memory");

}
```

Listing 1.24: The CMSIS definition of inline assembly function for writing into the CONTROL register.

1.4.7.11 Using PendSV for context switching

The approach with the SysTick handler used to perform the context switching would, however, not work with other interrupts (peripheral interrupts, for example). The SysTick handler would interrupt IRQ handlers as well, and stack registers affected by the peripheral IRQ handler and unstack task's registers, resulting in undefined behaviour of both tasks and peripheral interrupt handler. This would undoubtedly result in the hard fault.

The PendSV (Pending Supervisor Call) interrupt is commonly used for context switching in ARM Cortex-M microcontrollers due to several advantages and characteristics that make it well-suited for this purpose. The PendSV interrupt has the lowest possible priority among all exceptions and interrupts. This makes it an ideal choice for context switching, as it doesn't interfere with other higher-priority interrupts or exceptions. The PendSV exception will interrupt only the non-priority tasks and certainly not any exception handler. The low-priority nature of PendSV ensures that it doesn't preempt other exceptions or interrupts, providing predictable and deterministic behaviour during context switches. This predictability is essential in real-time systems. PendSV can be triggered explicitly through software by setting the PendSV bit in the ICSR register within the System Control Block. This allows for precise control over when context switches occur. Typically, the PendSV interrupt is set pending from the SysTick handler.

Figure 1.22 shows the solution to this problem with the PendSV interrupt. Usually, the SysTick interrupt has the highest priority among all exceptions and interrupts with configurable priority. If an interrupt request (IRQ) takes place before the SysTick exception, the SysTick exception might preempt the IRQ handler. In this case, we should not carry out the context switching. The PendSV exception solves the problem by delaying the context-switching request until all other IRQ handlers have completed their processing. To do this, the PendSV is programmed as the lowest-priority exception. The Systick handler sets the pending status of the PendSV, and the context switching is carried out within the PendSV exception. Let us describe the solution in Figure 1.22:

- 1. Task1 is preempted by an IRQ interrupt request.
- 2. Task1's hardware stack frame is stacked on the process stack using the PSP.

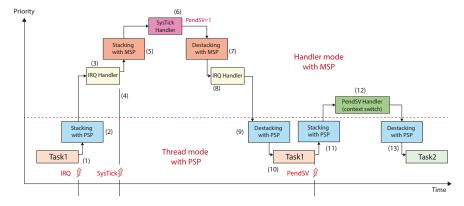


Fig. 1.22: A simple task scheduler based on PendSV interrupts.

- 3. The IRQ handler executes.
- 4. The SysTick exception eventually preempts the IRQ handler.
- 5. The ardware stack frame of the IRQ handler is stacked on the main stack using the MSP register.
- 6. The SysTick handler sets the PendSV bit. Hence, PendSV interrupt is pending.
- 7. The SysTick exits, and the hardware stack frame of the IRQ handler is popped from the main stack.
- 8. The IRQ handler continues its execution.
- 9. The IRQ handler exits, and the hardware stack frame of the Task1 is popped from the process stack.
- 10. The Task1 continues its execution.
- 11. PendSV is fired and the Task1's hardware stack frame is stacked on the process stack using the PSP.
- 12. PendSV handler performs the context switching.
- 13. PendSV handler exits and the Task2's hardware stack frame is popped from the process stack using the PSP.
- 14. Task2 executes.

Hence, the solution to implement a scheduler based on the SysTick and PendSV exceptions is simple. Firstly, we move the code for context switching from the SysTick handler into the PendSV handler:

Listing 1.25: Starting the scheduler.

Secondly, the SysTick handler only sets PendSV pending in the ICSR register:

```
void SysTick_Handler(void)
2 {
    // Set the PendSV Pending bit in ICSR:
4 SCB->ICSR |= (unsigned long)0x01 << 28;
}</pre>
```

Listing 1.26: The SysTick handler only sets PendSV pending.

1.4.7.12 Using the Supervisor call (SVC) exception to start the scheduler

Instead of directly calling the first task (Task0) from the main function, the first task should be initialized and started in the same way as the others. In other words, the scheduler should rely on the exception return to start the first task. For this purpose, we can use the Supervisor Call (SVC) exception. Recall that the SVC instruction triggers the SVC exception. Due to the interrupt priority behaviour of the Cortex-M processors, the SVC instruction can only be used in thread mode or exception handlers that have a lower priority than the SVC itself. Otherwise, a HardFault exception would be generated. The SVC instruction is a privileged operation that allows a task in an unprivileged mode to request a service from the operating system (or kernel) running in a privileged mode. This separation of privilege levels ensures that only trusted code can initiate scheduling or other system-related operations. Figure 1.23 shows the process of starting and running the scheduler using the SVC exception. Let us describe the solution in Figure 1.23:

- 1. The main() function initializes the scheduler (i.e., initializes all tasks) and eventually executes the SVC instruction.
- 2. The main() function is preempted by the SVC exception, and its hardware stack frame is stacked on the process stack using the PSP
- 3. The SVC handler sets the PSP to point to the top of the Task0 stack, restores the context (R4-R11) of the Task0 and exits.
- 4. Upon exception exit, the hardware stack frame of Task0 is restored, therefore returning control to Task0.
- 5. Task0 executes until the end of its time slot.
- 6. The SysTick exception preempts Task0, saving its hardware stack frame onto its stack.

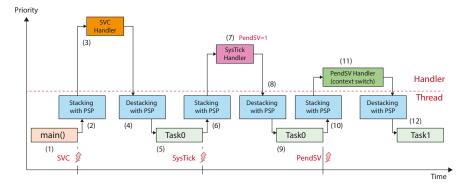


Fig. 1.23: Starting the scheduler with the SVC exception.

- The SysTick handler sets the PendSV bit. Hence, the PendSV interrupt is pending.
- 8. The SysTick exits, and the hardware stack frame of Task0 is popped from the main stack.
- 9. Task0 continues its execution.
- 10. PendSV is fired, and the Task0 hardware stack frame is stacked on the process stack using the PSP.
- 11. PendSV handler performs the context switching.
- 12. PendSV handler exits, and Task1's hardware stack frame is popped from the process stack using the PSP.
- 13. Task1 now executes.

To initialize the scheduler that uses the SVC exception to start the first task, we use the following function:

Listing 1.27: The function InitSchedulerSVC() creates all tasks and initializes the stack frames for all tasks.

Contrary to the function InitScheduler(), the function InitSchedulerSVC() initializes the stack and both stack frames of all tasks. The SVC handler simply sets the PSP to point to the top of TaskO's stack and restores the context (R4-R11) of the first task:

```
void SVC_Handler(void)
{

/* We are here, because main() called SVC. As we interrupted main(),
   * there is no need to save its context.

* We should never return to main()!!
   * The SVC_Handler should start the first task - Task0

* The Task 0 is started by restoring its SW context and
   * its HW context upon the exception return.

// set PSP to Task0.SP:
   __set_PSP((unsigned int)TCB[0].sp);
   current_task = 0;

// Restore the context of the Task 0:
   __RESTORE_CONTEXT();
}
```

Listing 1.28: The SVC Handler.

The following code shows how to start the scheduler:

```
unsigned int stackRegion[NTASKS * TASK_STACK_SIZE];
  TCB_Type TCB[NTASKS];
  void (*TaskFunctions[NTASKS])();
 5 int current_task = -1;
  void Task0(){
    while(1) {}
  void Task1(){
   while(1) {}
void Task2(){
    while(1) {}
15 }
  void Task3(){
    while(1) {}
  }
19
21 int main(void)
    TaskFunctions[0] = Task0;
    TaskFunctions[1] = Task1;
    TaskFunctions[2] = Task2;
    TaskFunctions[3] = Task3;
     // Init scheduler
    InitSchedulerSVC(stackRegion, TCB, TaskFunctions);
     // Start SysTick timer:
    HAL_InitTick(0);
    // Switch to NOT PRIVILEDGED with PSP:
```

```
__set_CONTROL(0x00000003);
// Start the scheduler:
    __asm volatile("svc 0");
while(1){}
}
```

Listing 1.29: Starting the scheduler using the SVC exception.

The code for the scheduler can be found here:

https://github.com/bulicp/ContextSwitchM7-book.git.