HOW TO TURN A LED IN STM32F407 DISCOVERY BOARD

1. Identify internal LEDs in my board. In this case, if we check the pinout of our board we can find four different leds which are in port D.

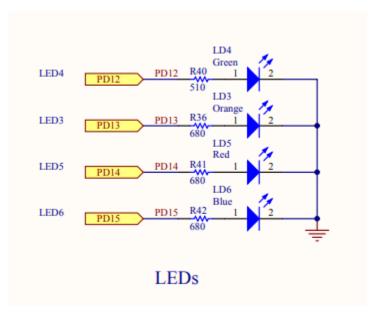


Figure 1. Pinout Internal LEDs in STM32F407 Discovery Board.

2. Search for registers as: clock, port D and port C in the datasheet.

AHB1	0x4002 4000 - 0x4002 4FFF	BKPSRAM
	0x4002 3C00 - 0x4002 3FFF	Flash interface register
	0x4002 3800 - 0x4002 3BFF	RCC
	0X4002 3400 - 0X4002 37FF	Reserved
	0x4002 3000 - 0x4002 33FF	CRC
	0x4002 2400 - 0x4002 2FFF	Reserved
	0x4002 2000 - 0x4002 23FF	GPIOI
	0x4002 1C00 - 0x4002 1FFF	GPIOH
	0x4002 1800 - 0x4002 1BFF	GPIOG
	0x4002 1400 - 0x4002 17FF	GPIOF
	0x4002 1000 - 0x4002 13FF	GPIOE
	0X4002 0C00 - 0x4002 0FFF	GPIOD
	0x4002 0800 - 0x4002 0BFF	GPIOC
	0x4002 0400 - 0x4002 07FF	GPIOB
	0x4002 0000 - 0x4002 03FF	GPIOA
	0x4001 5800- 0x4001 FFFF	Reserved

Figure 2. Memory mapping

3. Go to RCC Registers and click in the section to enable the clock of the AHB1. Here we are going to add the *Address Offset* with the RCC register.

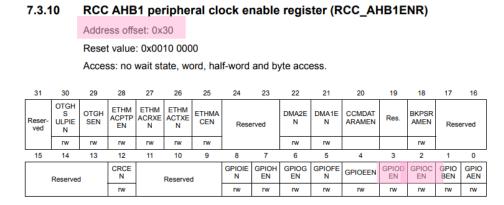


Figure 3. RCC Registers: RCC AHB1 clock enable register

RCC: 0x40023800 EN: 0x30 *pClkEN = 0x40023830

4. Then, we are going to enable the clock according to the ports we chose. In this case, as we can see in figure 3, we must set the bit 2 and 3.

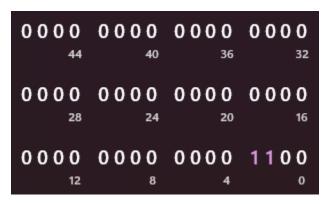


Figure 4. Setting bits.

*
$$pClkEN = 0xC$$
; or * $pClkEN = (1 << 2) | (1 << 3)$;

5. We are going to calculate the register with the address offset of GPIO moder, which is 0x00. So, we are going to have basically the main register of our ports.

<u>*pPortModeD= 0x40020C00;</u> *pPortModeC=0x40020800;

6. Configure the ports as outpus. We have to go to GPIOx_ODR section and adding the address offset to our ports.

*pOutputC= 40020814; *pOutputD = 0x40020C14; 7. Finally, we are going to configurate the bits. Basically we are going to the GPIOx_MODER and start to setting all the ports or pins that we are going to use. In this case, my pins were 9 and 14, so we are going to clear all the bytes and then, set only the bit 28 and 18 due to the port configuration that we have that is 01: General purpose.


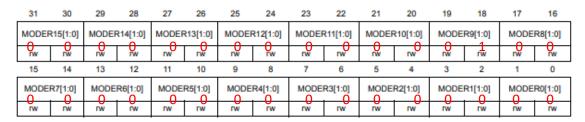


Figure 5. GPIO port moder register.

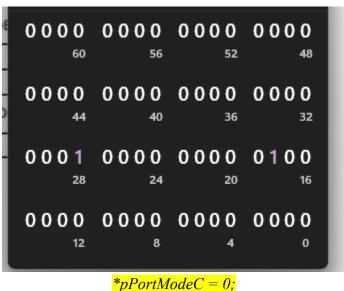

*pPortModeC = 0; *pPortModeC |=0x40000; //Setting first one bit 18. *pPortModeD=0; *pPortModeD|=0x100000;

8. To finish, we are going to set our pines. So, we are going to look at the GPIOx_ODR, and set one by one the bit in where our pin is going.



Figure 6. GPIO port output data register.

*pOutputC|=0x200;

*pOutputD = 0x4000;

9. And then, we are going to build our code and debug it to see the function of it. In the following figure, we can see the internal led turned on as the external led.

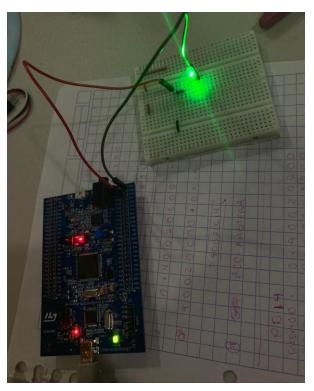


Figure 7. Final product