

Assembling guide of the campus robot

Number given to the items	Item	Description	Quantity needed
1	DC-Powered Electromagnet	5698K112*	4
2	Screw no 1	91251A342*	4
3	Magnet ring	Receptacle for the magnet	4
4	Leg		4
5	Link-1	Connects the leg to the motor	4
6	Link-2	Connects the leg to the motor	4
7	Link-3	Connects the leg to the motor	4
8	Motor attachment	Connects the leg to the motor	4
9	Motor	DYNAMIXEL XL430-W250-T	4
10	Motor mount	Receptacle for the motor	4
11	Servo mount	Receptacle for the servomotor	4
12	Servomotor		4
13	Frame	Main piece for carrying the legs	1
14	Servo support	Makes sur the leg is fixed	4

- Materials needed for foot:
- 1 of item 1
- 1 of item 2
- 1 of item 3
- Instructions:
- 1- Insert the electromagnet in the ring
- 2-Screw the electromagnet with the ring.
- 3- Make sure the electromagnet and the ring touches the ground at the same time
- 4-Repeat 3 other times

1-foot assembly

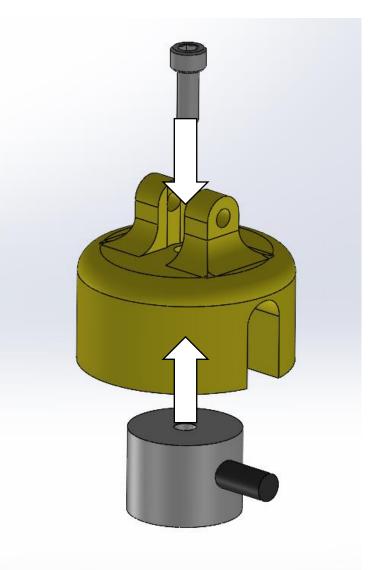

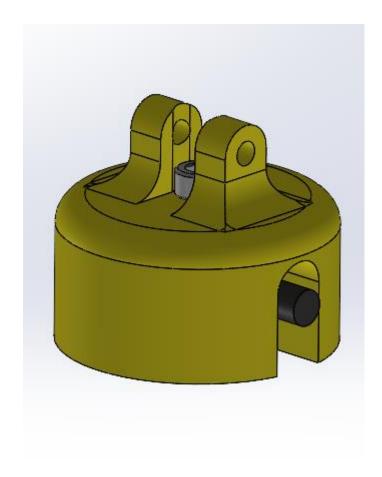

*Each part that needs to be screwed and isn't a motor takes a screw of 4mm of diameter. The length used is at your discretion

Materials needed for leg part 1:

1 of item 4

1 of item 5

1 of item 6

1 of item 7


1 of item 8

4 screws


• Instructions:

1- Align the correspondant holes of any connected part and screw them together (the order doesnt matter)

2-Repeat 3 other times

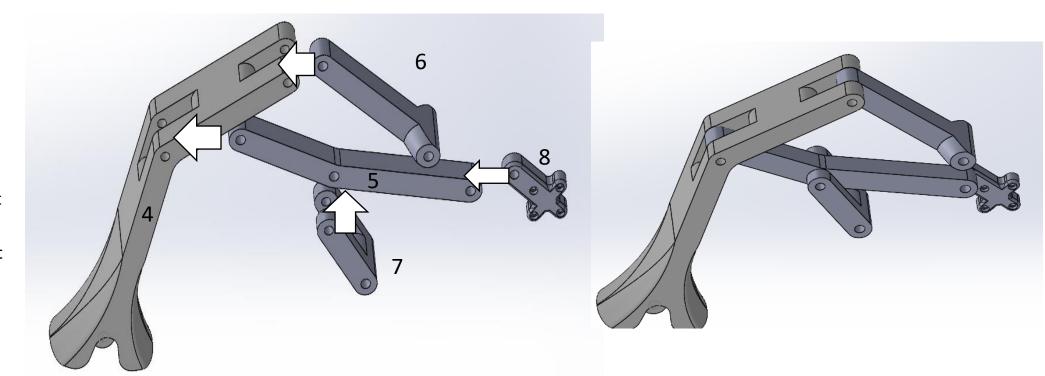



- *The diameter for all motor and servomotor screws is 2mm
- Materials needed for leg part 2:
- 1 leg from part 1
- 1 of item 9
- 1 of item 10
- 4 screws
- Instructions:
- 1- Insert the motor in the receptacle
- 2- Align the correspondant holes of any connected part and screw them together (the order doesnt matter)
- 3-Repeat 3 other times

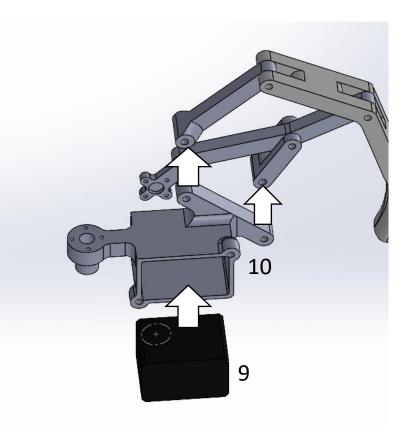



- Materials needed for leg part 3:
- 1 leg from part 2
- 1 of item 11
- 1 of item 12
- 4 screws
- Instructions:
- 1- Tight fit the servo mount with the motor mount
- 2- Align the correspondant holes of any connected part and screw them together (the order doesnt matter)
- 3-Repeat 3 other times

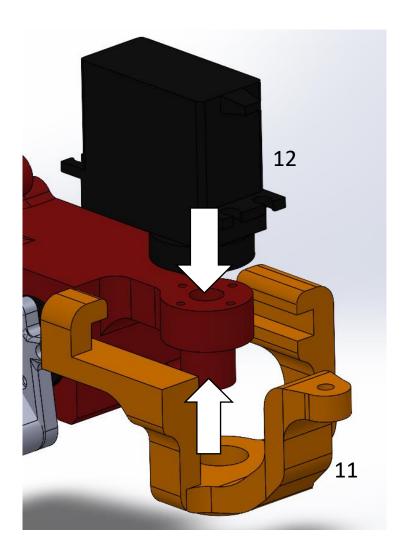

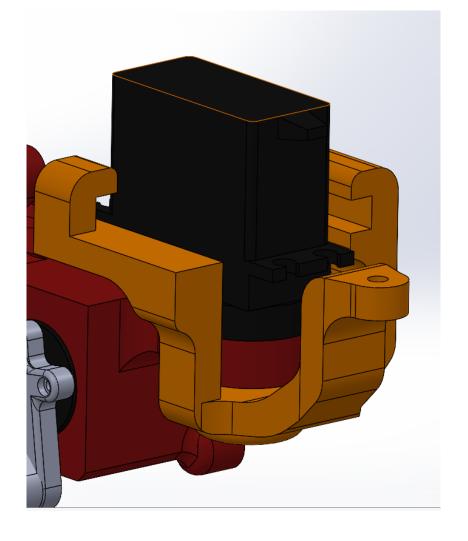

Materials needed for leg part 3:


1 leg from part 3


1 of item 13

1 of item 14


6 screws

- Instructions:
- 1- Slide the servo mount through the frame so the servomotor is in the dedicated spot
- 2-Put the servo support down ont the servomotor
- 3- Align the correspondant holes of any connected part and screw them together (the order doesnt matter)
- 4-Repeat 3 other times

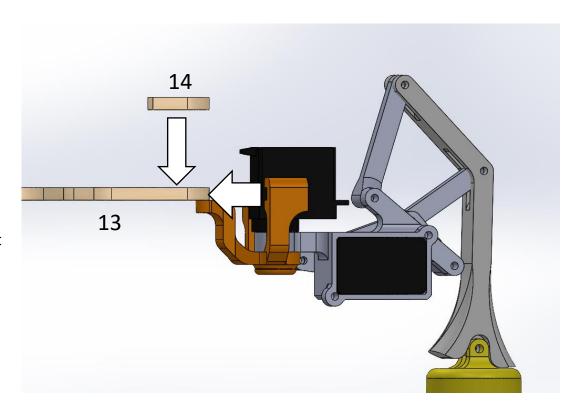


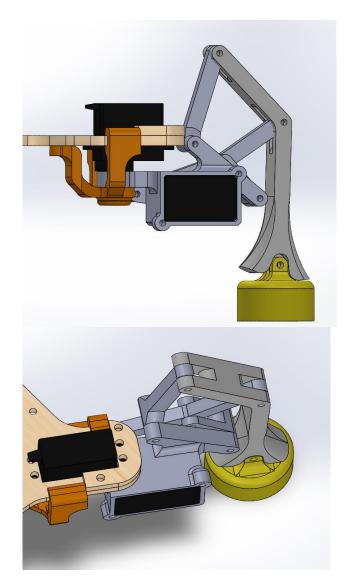

7-Result without open cr card

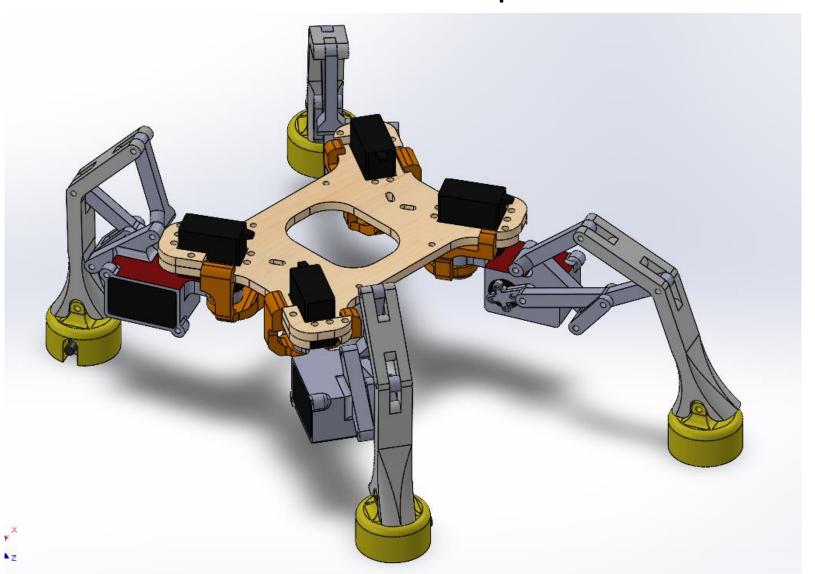

Electrical assembly guide

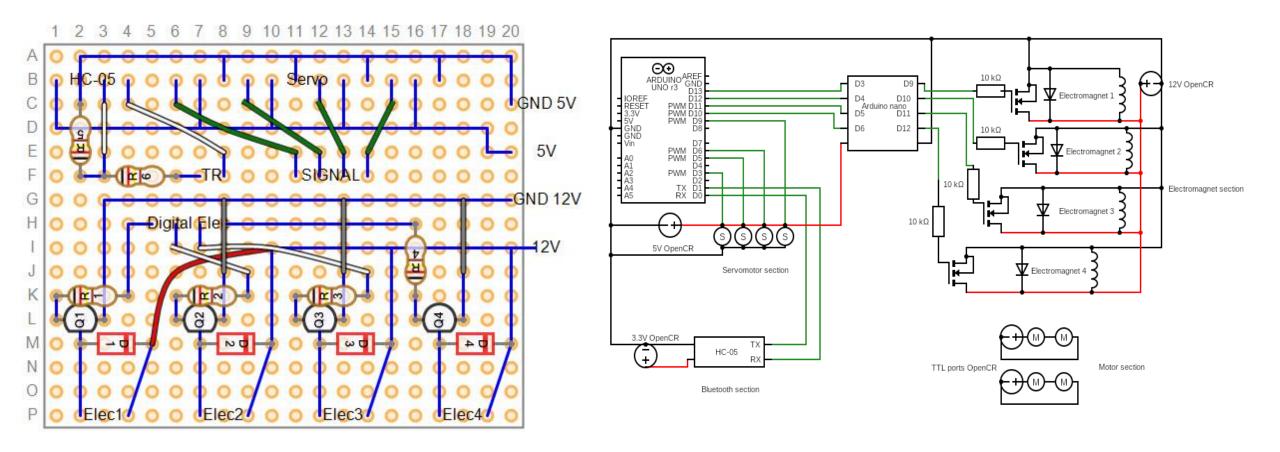


1- Explanations about previous images

• U can base yourself on the previous photos to do the electrical assembly, just mind that depending on your open cr card, some pins might not work. U can change them as necessary, just remember to change the code later depending on your choices.


*Red=12V *Blue=5V

2- IRL demo of the protoboard 1

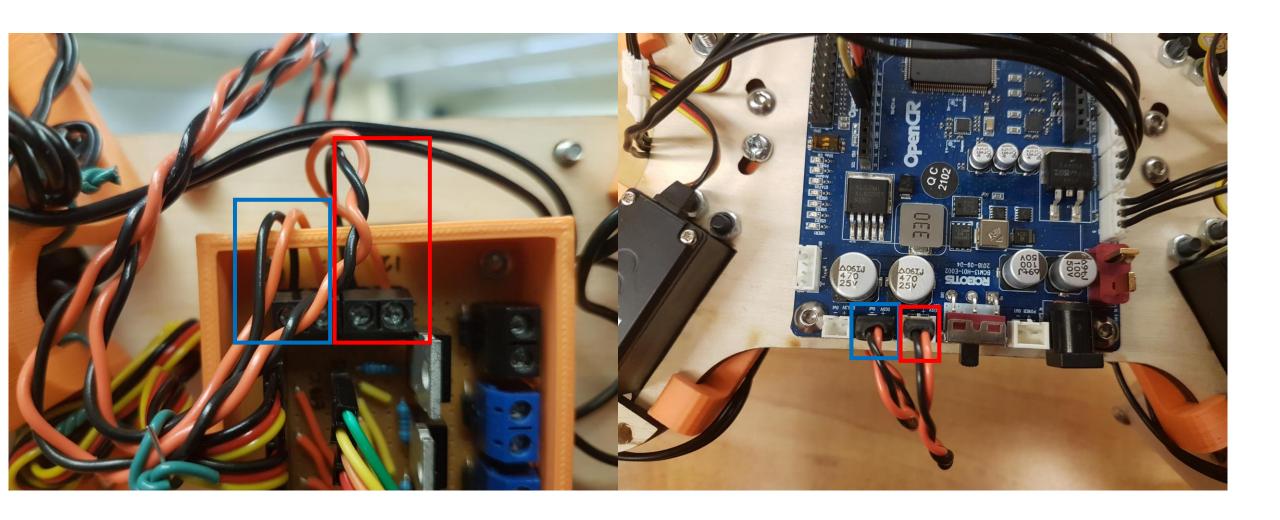

- *Red=Motor
- *Blue=servomotor

2- IRL demo of the protoboard 2

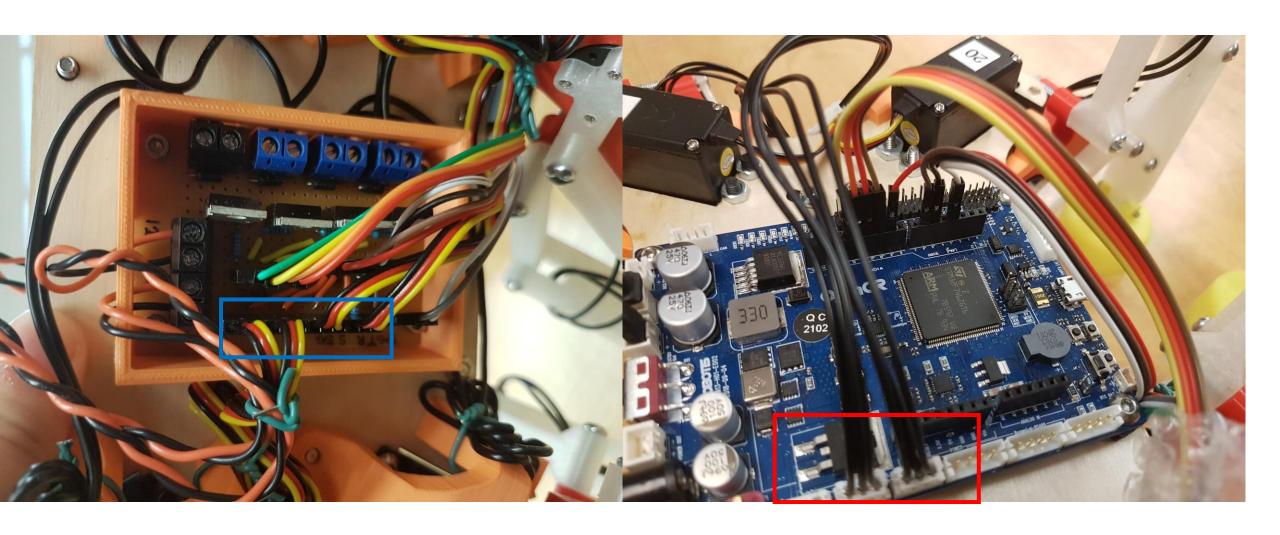

*Red=signals for the electromagnets *Blue=signals for the servomotor

2- IRL demo of the protoboard 3

