Cheat Sheet for EE464

Performance Parameters

$$TruePowerFactor = \frac{P}{S} = DPF \frac{I_{1,RMS}}{I_{RMS}}$$

$$THD = \sqrt{(\frac{I_{rms}}{I_{1rms}})^2 - 1}$$

Symmetry	Condition Required	a_h and b_h				
Even	f(-t) = f(t)	$b_h = 0$ $a_h = \frac{2}{\pi} \int_0^{\pi} f(t) \cos(h\omega t) d(\omega t)$				
Odd	f(-t) = -f(t)	$a_h = 0$ $b_h = \frac{2}{\pi} \int_0^{\pi} f(t) \sin(h\omega t) d(\omega t)$				
Half-wave	$f(t) = -f(t + \frac{1}{2}T)$	$a_h = b_h = 0 \text{ for even } h$ $a_h = \frac{2}{\pi} \int_0^{\pi} f(t) \cos(h\omega t) d(\omega t) \text{ for odd } h$ $b_h = \frac{2}{\pi} \int_0^{\pi} f(t) \sin(h\omega t) d(\omega t) \text{ for odd } h$				

Figure 1: Fourier Transform Table




Figure 2: Cuk converter




Figure 3: Sepic converter

Switch Selection

Peak Switch Current


$$\hat{I}_{sw} = rac{1}{(1-D)} rac{N_2}{N_1} I_o + rac{N_1}{N_2} rac{(1-D)T_s}{2L_m} V_o$$

Peak Switch Voltage

$$\hat{V}_{sw} = V_d + rac{N_1}{N_2} V_o = rac{V_d}{(1-D)}$$

Figure 4: Flyback switch considerations

Push-Pull Converter

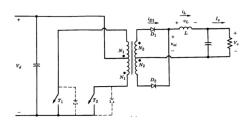

Fourier Coefficients




Figure 5: Bipolar Switching




Figure 6: Unipolar switching

Table 8-1 Generalized Harmonics of v_{Ao} for a Large m_{f} .

m_a					
h	0.2	0.4	0.6	0.8	1.0
1	0.2	0.4	0.6	0.8	1.0
Fundamental					
m_f	1.242	1.15	1.006	0.818	0.601
$m_f \pm 2$	0.016	0.061	0.131	0.220	0.318
$m_f \pm 4$					0.018
$2m_f \pm 1$	0.190	0.326	0.370	0.314	0.181
$2m_e \pm 3$		0.024	0.071	0.139	0.212
$2m_f \pm 5$				0.013	0.033
$3m_f$	0.335	0.123	0.083	0.171	0.113
$3m_f \pm 2$	0.044	0.139	0.203	0.176	0.062
$3m_f \pm 4$		0.012	0.047	0.104	0.157
$3m_f \pm 6$				0.016	0.044
$\frac{1}{4m_{\ell}\pm 1}$	0.163	0.157	0.008	0.105	0.068
$4m_{c} \pm 3$	0.012	0.070	0.132	0.115	0.009
$4m_f \pm 5$			0.034	0.084	0.119
$4m_f \pm 7$				0.017	0.050
Note: (1) /1V	$I = \langle \Omega \rangle \setminus I$	V 1 is tobul	ated as a fu	notion of m	

Note: $(\hat{V}_{AO})_h/\frac{1}{2}V_d$ [= $(\hat{V}_{AN})_h/\frac{1}{2}V_d$] is tabulated as a function of m_d

Figure 7: Harmonics

Table 8-5 Normalized Fourier Coefficients $V_{\rm r}/V_{\rm dc}$ for Unipolar PWM in Fig. 8-18

	$m_a=1$	0.9	0.8	0.7	0.6	0.5	0.4	0.3	0.2	0.1
n=1	1.00	0.90	0.80	0.70	0.60	0.50	0.40	0.30	0.20	0.10
$n=2m_f\pm 1$	0.18	0.25	0.31	0.35	0.37	0.36	0.33	0.27	0.19	0.10
$n=2m_f\pm 1$ $n=2m_f\pm 3$	0.21	0.18	0.14	0.10	0.07	0.04	0.02	0.01	0.00	0.00

Figure 8: Unipolar Harmonics

Table 8-3 Normalized Fourier Coefficients V_n/V_{dc} for Bipolar PWM

	m _a =1	0.9	0.8	0.7	0.6	0.5	0.4	0.3	0.2	0.1
n=1	1.00	0.90	0.80	0.70	0.60	0.50	0.40	0.30	0.20	0.10
$n=m_f$	0.60	0.71	0.82	0.92	1.01	1.08	1.15	1.20	1.24	1.27
$n=m_f$ $n=mf\pm 2$	0.32	0.27	0.22	0.17	0.13	0.09	0.06	0.03	0.02	0.00

Figure 9: Bipolar Harmonics

$$\begin{split} \boxed{ V_o &= V_s \bigg(\frac{D}{1-D} \bigg) \bigg(\frac{N_2}{N_1} \bigg) } & \boxed{ \frac{\Delta V_o}{V_o} = \frac{D}{RCf} } \\ I_{L_{m,\max}} &= I_{L_m} + \frac{\Delta i_{L_m}}{2} \\ &= \frac{V_s D}{(1-D)^2 R} \bigg(\frac{N_2}{N_1} \bigg)^2 + \frac{V_s DT}{2L_m} \\ I_{L_{m,\min}} &= I_{L_m} - \frac{\Delta i_{L_m}}{2} \quad \text{equate this to zero for dom boundary} \\ &= \frac{V_s D}{(1-D)^2 R} \left(\frac{N_2}{N_1} \right)^2 - \frac{V_s DT}{2L_m} \\ \Delta V_{o, \text{ESR}} &= \Delta i_C r_C = I_{L_{m,\max}} \bigg(\frac{N_1}{N_2} \bigg) r_C \end{split}$$

Figure 10: Flyback Formulas

$$\begin{bmatrix} V_o = V_s D \bigg(\frac{N_2}{N_1} \bigg) & \boxed{ \frac{\Delta V_o}{V_o} = \frac{1 - D}{8L_x C f^2} } \\ \Delta V_{o, \text{ESR}} = \Delta i_C r_C = \Delta i_{L_x} r_C = \bigg[\frac{V_o (1 - D)}{L_x f} \bigg] r_C \\ \Delta i_{L_m} = \frac{V_s D T}{L_m} \end{bmatrix}$$

Figure 11: Forward (single switched) Converter Formulas

$$\begin{bmatrix} V_o = 2V_s \left(\frac{N_S}{N_P}\right) D \end{bmatrix} \begin{bmatrix} \frac{\Delta V_o}{V_o} = \frac{1 - 2D}{32L_x C f^2} \end{bmatrix}$$

$$\Delta V_{o,ESR} = \Delta i_{L_x} r_C = \begin{bmatrix} \frac{V_o \left(\frac{1}{2} - D\right)}{L_x f} \end{bmatrix} r_C$$

Figure 12: Push Pull Formulas