hello_blinky.rs

Introduction to Embedded Rust

Dawid Królak

- Expert engineer @ mobica a cognizant company
- Part time Rust developer
- Passionate about space exploration industry

https://twitter.com/Taavicjusz

https://github.com/taavit

https://mastodon.social/@taavit

Agenda

- Why Rust?
- How to start?
- Few words on embedded-hal
- Demo #1
- Let's build a blinky driver
- Demo #2
- Bonus demo: Orientation tracker

What is Rust

- System programming language
- Single ownership for variables
- Type safety
- Lifetime for references
- Separation of safe and unsafe code
- Unified ecosystem (cargo)
 - Testing methods
 - Dependency management
 - Built in linter and formatter

Installing rust

https://www.rust-lang.org/tools/install

Using rustup (Recommended)

It looks like you're running macOS, Linux, or another Unix-like OS. To download Rustup and install Rust, run the following in your terminal, then follow the on-screen instructions. See "Other Installation Methods" if you are on Windows.

curl --proto '=https' --tlsv1.2 -sSf https://sh.rustup.rs | sh

Installing target


dawid@atarynka:~\$ rustup target add thumbv6m-none-eabi
dawid@atarynka:~\$ cargo install elf2uf2-rs

Blinky


```
use core::time::Duration;
fn main() {
     let mut blink = false;
     loop {
           println!("{}", if blink {"[*]"} else {"[]"});
           blink = !blink;
           std::thread::sleep(Duration::from_millis(250));
```

rp-pico example

#![no_std]

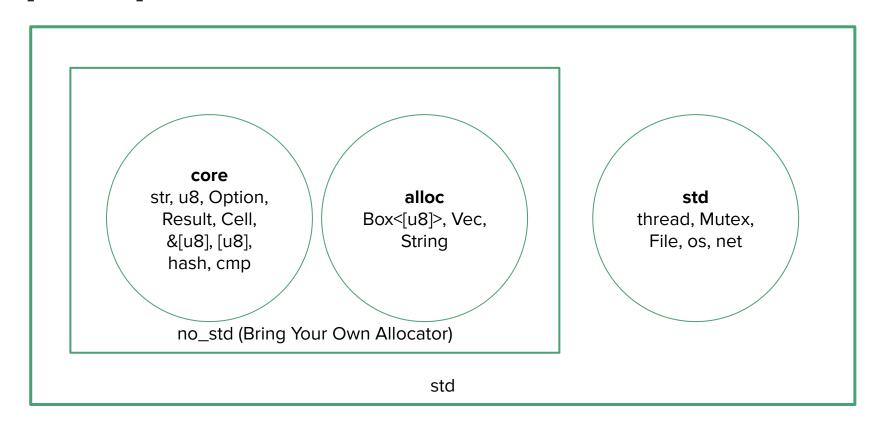


#![no_std]

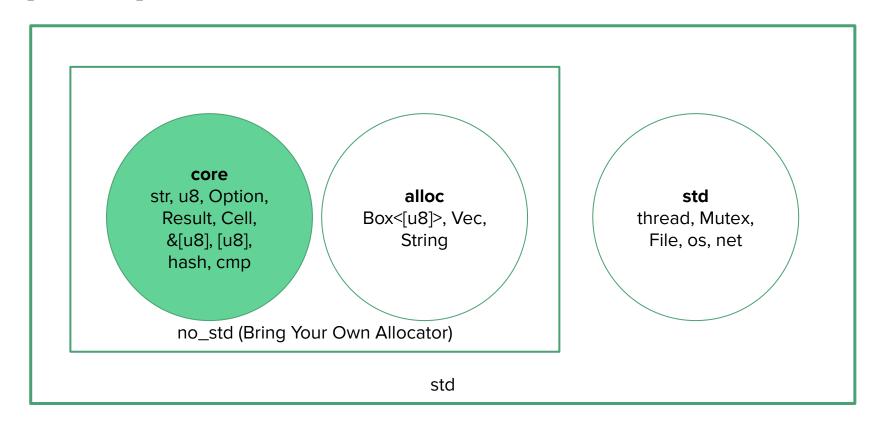


rp-pico example

use rp_pico::entry;

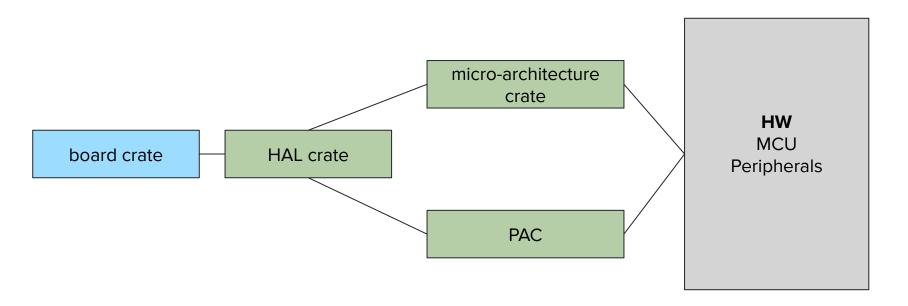

use rp_pico::entry;

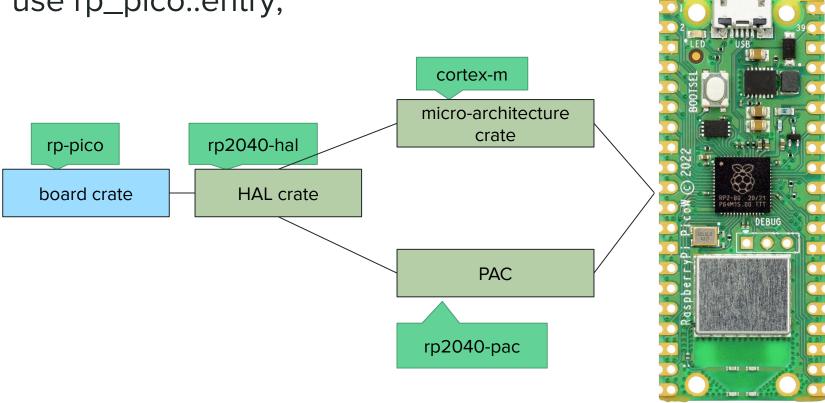

embedded-hal

A Hardware Abstraction Layer (HAL) for embedded systems

This project is developed and maintained by the <u>HAL team</u>.

Scope

embedded-hal serves as a foundation for building an ecosystem of platform-agnostic drivers. (driver meaning library crates that let a target platform interface an external device like a digital sensor or a wireless transceiver).

The advantage of this system is that by writing the driver as a generic library on top of embedded-hal driver authors can support any number of target platforms (e.g. Cortex-M microcontrollers, AVR microcontrollers, embedded Linux, etc.).

The advantage for application developers is that by adopting embedded-hal they can unlock all these drivers for their platform.



Available versions:

- embedded-hal@0.2.7
- embedded-hal@1.0.0-rc
- embedded-hal-async@0.2.0-alpha
- embedded-hal-async@1.0.0-rc

All are valid and but not all drivers provides all implementations

embedded-hal drivers

Driver crates @

Platform agnostic crates to interface external components. These crates use the embedded-hal interface to support all the devices and systems that implement the embedded-hal traits.

The list below contains drivers that have achieved the "released" status. In order to add a driver to this list, please ensure that your driver has a short blog post, article or sufficiently explanatory README showing an example of its use. Ideally this post would demonstrate using the device in a small project so that a Rust and/or embedded newcomer can also understand it. Otherwise please add it to the WIP section below.

```
1. AD983x - SPI - AD9833/AD9837 waveform generators / DDS - Intro blog post -
 2. adafruit-alphanum4 - I2C - Driver for Adafruit 14-segment LED Alphanumeric Backpack based on the
   ht16k33 chip - crates.io v0.1.2
 3. ADE791x - SPI - ADE7912/ADE7913 3-Channel, Isolated, Sigma-Delta ADC - github -
 4. <u>ADS1x1x</u> - I2C - 12/16-bit ADCs like ADS1013, ADS1015, ADS1115, etc. - Intro blog post - crates.io
 5. ADXL313 - SPI - 3-axis accelerometer - crates.io v0.2.4
 6. ADXL343 - I2C - 3-axis accelerometer - crates.io vo.8.0
 7. ADXL355 - SPI - 3-axis accelerometer - Intro blog post - crates.io v0.2.3
 8. AFE4404 - I2C - Pulse oximeter - crates.io v0.2.4
 9. AHT20 - I2C - Humidity and temperature sensor - github - crates.io vo.
10. AHT20-driver - I2C - Humidity and temperature sensor - Intro blog post - github - crates.io v1.2.0
11. AnyLeaf - I2C - pH sensor module - github - crates.io v1.0.1
12. AT86RF212 - SPI - Low power IEEE 802.15.4-2011 ISM RF Transceiver - Intro blog post -
13. BlueNRG - SPI - driver for BlueNRG-MS Bluetooth module - Intro post crates.io v0.1.0
14. BMA400 - I2C/SPI - Bosch 12-bit 3-axis accelerometer - github crates.io
15. BNO055 - I2C - Bosch Sensortec BNO055 9-axis IMU driver - Intro post crates.io
16. CD74HC4067 - GPIO - 16-channel digital and analog multiplexer - Intro blog post - github -
17. dht-sensor - 1-Wire - DHT11/DHT22 temperature/humidity sensor driver - github - crates.io
```

rp-pico example

```
let mut delay = cortex m::delay::Delay::new(
     clocks.system clock.freq().to Hz()
let mut <u>led pin</u> = pins.led.into push pull output();
   led pin.set high().unwrap();
    delay.delay ms (500);
   led pin.set low().unwrap();
   delay.delay ms (500);
```

Building

memory.x

```
MEMORY {
    BOOT2 : ORIGIN = 0 \times 100000000, LENGTH = 0 \times 100
    FLASH : ORIGIN = 0 \times 10000100, LENGTH = 2048K - 0 \times 100
    RAM : ORIGIN = 0 \times 200000000, LENGTH = 256K
EXTERN(BOOT2_FIRMWARE)
SECTIONS {
    /* ### Boot loader */
     .boot2 ORIGIN(BOOT2) :
         KEEP(*(.boot2));
     } > B00T2
} INSERT BEFORE .text;
```

config.toml

```
[build]
target = "thumbv6m-none-eabi"
[target.thumbv6m-none-eabi]
runner = "elf2uf2-rs -d"
rustflags = [
```

build.rs

```
fn main() {
  let out = &PathBuf::from(env::var os("OUT DIR").unwrap());
       .unwrap()
       .write all (include bytes! ("memory.x"))
       .unwrap();
   println! ("cargo:rustc-link-search= {}", out.display());
```

Building and flashing

```
dawid@atarynka ~/projects/hello_blinky/board$ cargo r --release
```

Demo

blinky-driver

Basic driver

```
pub fn blink times(&mut self, count: usize) {
        self.led.set high().unwrap();
        self.delayer.delay ms (125);
        self.led.set low().unwrap();
        self.delayer.delay ms (125);
```

Powerful enum

```
pub fn new(ms: u32) -> Self {
    match ms {
```

Matching enums

```
pub fn blink sequence (&mut self, sequence: &[LedSignal]) {
                   self.delayer.delay ms (250);
                   self.led.set high().unwrap();
                   self.delayer.delay ms (duration.into());
                   self.led.set low().unwrap();
                   self.delayer.delay ms (125);
               LedSignal::PAUSE(duration) => {
                   self.delayer.delay ms(duration.into());
```

Driver usage

Global state

```
static DEVICE: Mutex<
                   PullDown
               >,
> = Mutex::new(Cell::new(None));
```

Step by step

- Static
 - global variable
 - mutating is unsafe
- Mutex
 - critical_section crate
 - Provides mutex and critical section for no_std (bare metal)
- Cell
 - core library
 - Provides zero cost internal mutability
- Option
 - core library
 - enumerator
 - Stores Something of our type or None
 - similar to null pointer

Device initialization

```
let delay = cortex m::delay::Delay::new(core.SYST, clocks.system_clock.freq().to_Hz());
let led pin = pins.led.into push pull output();
let dev = FinalBlinky::new(led pin, delay);
critical section::with(
    |cs| DEVICE.borrow(cs).replace(Some(dev))
);
```

Device usage (ie. interrupt)

```
|cs| {
   let mut dev = DEVICE.borrow(cs).take().unwrap();
   dev.blink times(5);
   DEVICE.borrow(cs).set(Some(dev));
```

Demo #2

Links

Links

- Repo with demo hello #1, #2: https://github.com/taavit/hello_blinky
- Repo with demo tracker #3: https://github.com/taavit/rp2040-logger-hal
- embedded-hal: https://github.com/rust-embedded/embedded-hal
- Rust based OS for automotive: https://oxidos.io/
- Critical safety systems in Rust (Compiler for ESA based LEON cpu): https://ferrous-systems.com/blog/rust-for-mission-critical-applications/
- Key ripper rp2040 based DIY Keyboard:
 https://www.youtube.com/watch?v=x7LQevYn7d0

Ok(())