## ArUserImportEx()


Imports users from the specified file (created using  $\underline{\text{ArUserExportEx}}$ ). Previous users on the system are deleted.

This function block can only be used for **redundancy** in certain circumstances! Applicable limitations are described in the following sections:

<u>Local data</u> <u>Asynchronous execution</u>

For more information, see section "Redundancy".

## **Function block**

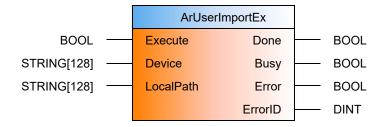

## **Parameters**

I/O	Parameter	Data type	Description	
IN	Execute	BOOL	Starts execution	
IN	Device	STRING [128]	Name of an existing file device that was generated using AS or DevLink	
IN	LocalPath	STRING [128]	Local file path to the file to be imported starting from the specified file device	
OUT	Done	BOOL	Execution completed	
OUT	Busy	BOOL	Currently executing	
OUT	Error	BOOL	Execution failed	
OUT	ErrorID	DINT	Execution error (see help documentation)	

The following status codes can be returned:

Name	Werte	Beschreibung
arUSER ERR PARAMETER	-1070585894	The function block was called with an invalid parameter.
arUSER ERR FILE	-1070585891	

aruserimportex.html

		A problem occurred accessing the specified file path (opening, reading, parsing, writing, etc.).
arUSER ERR INTERNAL	-1070585889	An unexpected internal error has occurred.