ArUserExportEx()
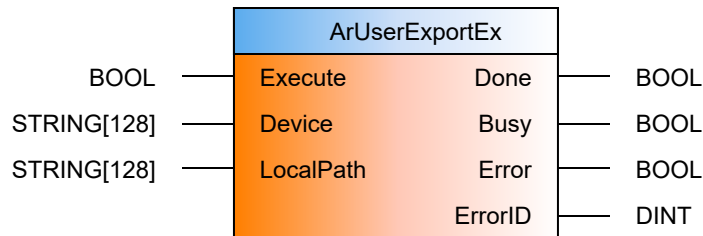
Exports all users to a file.
This file can be then be imported (e.g. to another controller) using ArUserImportEx.

> This function block can only be used for **redundancy** in certain circumstances!
> Applicable limitations are described in the following sections:
>
> Local data
> Asynchronous execution
>
> For more information, see section "Redundancy".

Function block

Parameters

I/O	Parameter	Data type	Description
IN	Execute	BOOL	Starts execution
IN	Device	STRING [128]	Name of an existing file device that was generated using AS or DevLink
IN	LocalPath	STRING [128]	Local file path to the file to be exported starting from the specified file device. If the path contains both a filename and directory path, this directory must already exist.
OUT	Done	BOOL	Execution completed
OUT	Busy	BOOL	Currently executing
OUT	Error	BOOL	Execution failed
OUT	ErrorID	DINT	Execution error (see help documentation)

The following status codes can be returned:

Name	Werte	Beschreibung
arUSER_ERR_PARAMETER	-1070585894	The function block was called with an invalid parameter.

| arUSER_ERR_FILE | -1070585891 | A problem occurred accessing the specified file path (opening, reading, parsing, writing, etc.). |
| arUSER_ERR_INTERNAL | -1070585889 | An unexpected internal error has occurred. |