


Simulated Payload: Power

This state diagram shows the power and detector states

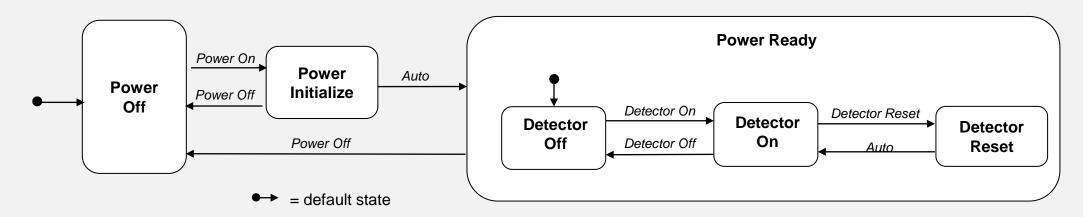

- The payload initializes into the Power Off state
- When a Power On command is received the payload transitions to the Power Initialize state where it waits
 for the number of seconds defined in PL_SIM_LIB's JSON initiable. Then it autonomously transitions to the
 Power Ready state
- In the Power Ready state the detector can be turned on and off
- When the detector is on it produces image data
- The detector has a reset command that simulates an electronic reset that is used to clear a simulated fault

Simulated Payload: Detector

- A fictitious payload that has a science data detector
- The detector produces "images" and each image has ten rows of data
- Each row has ten pairs of text digits. The first digit in the pair is the row number and the second digit increments from 0..9 within a row. Here's a complete image:

An image is read out one row at a time

PL_SIM App

PL_MGR App

Commands

- Power On, Power Off
- Set Fault, Clear Fault

Telemetry

```
StatusTlm.Payload.ValidCmdCnt
                                           : 1
StatusTlm.Payload.InvalidCmdCnt
                                           : 0
StatusTlm.Payload.LibPowerState
                                           : READY
StatusTlm.Payload.LibPowerInitCycleCnt
                                           : 0
StatusTlm.Payload.LibDetectorResetCycleCnt: 0
StatusTlm.Payload.LibDetectorState
                                           : ON
                                           : FALSE
StatusTlm.Payload.LibDetectorFault
StatusTlm.Payload.LibDetectorReadoutRow
                                           : 4
StatusTlm.Payload.LibDetectorImageCnt
```

Commands

- Start Science, Stop Science
- Reset Detector
- Configure Science File Parameters

Telemetry

```
StatusTlm.Payload.ValidCmdCnt
                                            : 1
                                            : 0
StatusTlm.Payload.InvalidCmdCnt
StatusTlm.Payload.PayloadPowerState
                                            : READY
StatusTlm.Payload.PayloadDetectorFault
                                            : FALSE
StatusTlm.Payload.PayloadDetectorReadoutRow: 7
StatusTlm.Payload.PayloadDetectorImageCnt
                                            : 4
StatusTlm.Payload.SciFileOpen
                                            : TRUE
StatusTlm.Payload.SciFileImageCnt
                                            : 1
StatusTlm.Payload.SciFilename
                                            : /cf/pl sci 003.txt
```

Library and Application Summary

PL_SIM_LIB

- Simulate payload power states, detector states, and detector science data
- Provides an interface to set and clear a detector fault. Science data is corrupted when the fault is present
- JSON initialization table defines number of 1Hz cycles for power initialization and detector reset


PL_SIM App

- Provides a ground command and telemetry interface to PL_SIM_LIB
- Command include: power on, power off, set fault, and clear fault

PL MGR

- Manage the data interface to the payload and the creation of science data files
 - Reads detector data and writes images to files
- Commands to start and stop science data that turn on and off the detector, respectively
- JSON initialization table defines the science file path, base science filename and number of images per file

Power On Payload

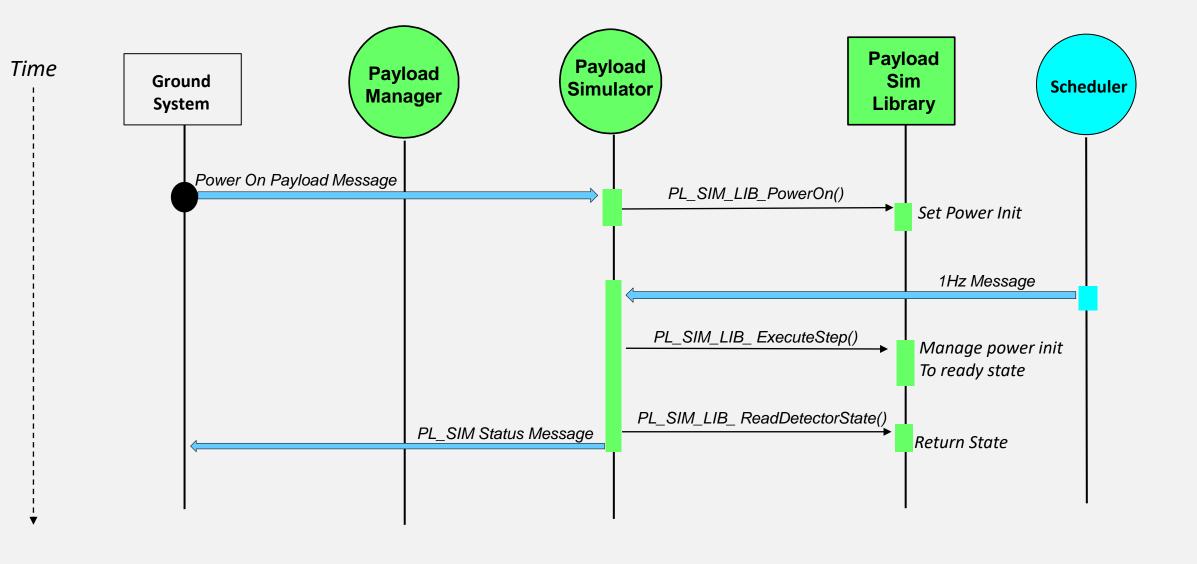


Software Bus Message

→ Library Call

Start Event

Start Science

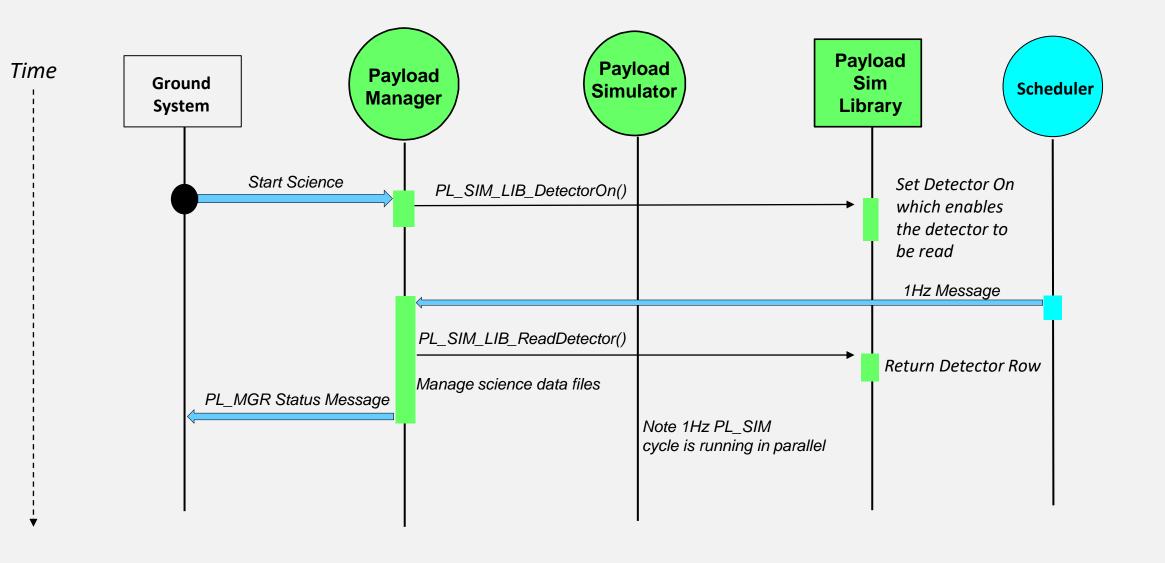


Software Bus Message

→ Library Call

Start Event

Payload Manager App Object Design

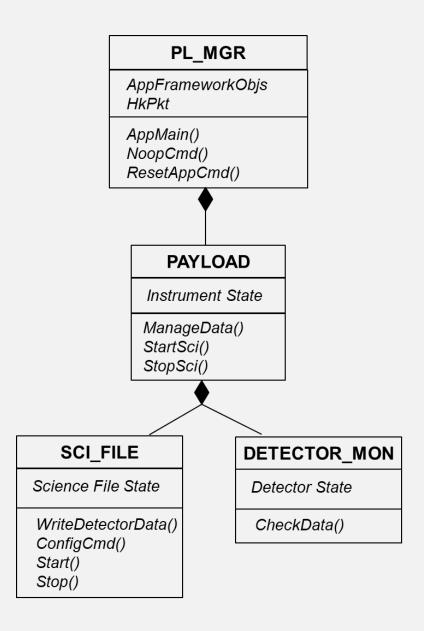

PL_MGR

- Manages app initialization, main runtime loop, and status telemetry
- Dispatches commands to objects

PAYLOAD

- Manage payload interface
- Has knowledge of the detector control and data interface
- Simulated vs actual payload conditional compilation flags should be limited to this object


SCI FILE

- Manage science data files
- Only needs to know detector science data format to minimize coupling

DETECTOR_MON

Monitors detector status and data for faults

Payload Manager App Control Flow

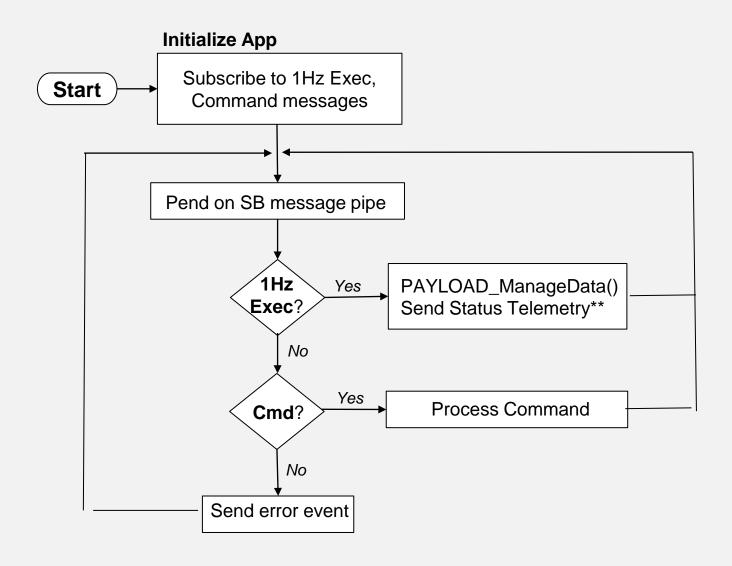

^{**} When instrument is on status telemetry is sent at the execution rate