# $P4_{16}$ Portable Switch Architecture (PSA) (draft)

The P4.org language consortium 2017-09-15

#### Abstract

P4 is a language for expressing how packets are processed by the data plane of a programmable network forwarding element. P4 programs specify how the various programmable blocks of a target architecture are programmed and connected. The Portable Switch Architecture (PSA) is target architecture that describes common capabilities of network switch devices which process and forward packets across multiple interface ports.

## Contents

	Target Architecture Model	
	Naming conventions	
3. PSA Data types		
	3.1. PSA type definitions	
	3.2. PSA supported metadata types	
	3.3. Match kinds	
4.	PSA Externs	
	4.1. Restrictions on where externs may be used	
	4.2. Packet Replication Engine	
	4.2.1. Behavior of packets after Ingress processing is complete	
	4.2.2. Behavior of packets after Egress processing is complete	
	4.2.3. Actions for directing packets during ingress	
	4.2.4. Clone, Recirculate, Resubmit	
	4.3. Buffering Queuing Engine	
	4.3.1. Actions for directing packets during egress	
	4.4. Hashes	
	4.4.1. Hash function	
	4.5. Checksum computation	
	4.5.1. Checksum example	
	4.6. Counters	
	4.6.1. Counter types	
	4.6.2. Counter	
	4.6.3. Direct Counter	
	4.6.4. Example program using counters	
	4.7. Meters	
	4.7.1. Meter types	
	4.7.2. Meter colors	
	4.7.3. Meter	
	4.7.4. Direct Meter	
	4.8. Registers	
	4.9. Random	
	4.10. Action Profile	
	4.11. Action Selector	
	4.12. Packet Generation	
	4.13. Parser Value Sets	
	4.14. Timestamps	
<b>5</b> .	Programmable blocks	

# 1. Target Architecture Model

The Portable Switch Architecture (PSA) Model has six programmable P4 blocks and two fixed-function blocks, as shown in Figure 1. Programmable blocks are hardware blocks whose function

can be programmed using the P4 language. The Packet buffer and Replication Engine (PRE) and the Buffer Queuing Engine (BQE) are target dependent functional blocks that may be configured for a fixed set of operations.

Incoming packets are parsed and have their checksums validated and are then passed to an ingress match action pipeline, which makes decisions on where the packets should go. After the ingress pipeline, the packet may be buffered and/or replicated (sent to multiple egress ports). For each such egress port, the packet passes through an egress match action pipeline and a checksum update calculation before it is deparsed and queued to leave the pipeline. Note: the checksum operations are available – validation in the parser, and checksum computation and update in deparser (see also Table 1) however, they need to be explicitly invoked though the checksum extern in order to be executed.




Figure 1. Portable Switch Pipeline

A programmer targeting the PSA is required to instantiate objects for the programmable blocks that conform to these APIs. Note that the programmable block APIs are templatized on user defined headers and metadata. In PSA, the user can define a single metadata type for all controls.

When instantiating the main package object, the instances corresponding to the programmable blocks are passed as arguments.

# 2. Naming conventions

In this document we use the following naming conventions:

- Types are named using CamelCase followed by \_t. For example, PortId\_t.
- Control types and extern object types are named using CamelCase. For example IngressParser.
- Struct types are named using lower case words separated by \_ followed by \_t. For example psa\_ingress\_input\_metadata\_t.
- Actions, extern methods, extern functions, headers, structs, and instances of controls and externs start with lower case and words are separated using \_. For example send\_to\_port.
- Enum members, const definitions, and #define constants are all caps, with words separated by \_. For example 'PORT CPU'.

Architecture specific metadata (e.g. structs) are prefixed by psa\_.

# 3. PSA Data types

## 3.1. PSA type definitions

Each PSA implementation will have specific bit widths for the following types. These widths should be defined in the target specific implementation of the PSA file.

```
typedef bit<unspecified> PortId_t;
typedef bit<unspecified> MulticastGroup_t;
typedef bit<unspecified> PacketLength_t;
typedef bit<unspecified> EgressInstance_t;
typedef bit<unspecified> Timestamp_t;
```

## 3.2. PSA supported metadata types

```
enum InstanceType_t {
    NORMAL,
              /// Packet is "normal", i.e. none of the other cases below
               /// Packet was created via a clone operation
    RESUBMIT, /// Packet arrival is the result of a resubmit operation
    RECIRCULATE /// Packet arrival is the result of a recirculate operation
}
struct psa_ingress_parser_input_metadata_t {
 PortId_t
                          ingress_port;
  InstanceType_t
                          instance_type;
struct psa_egress_parser_input_metadata_t {
 PortId_t
                          egress_port;
  InstanceType_t
                           instance_type;
}
struct psa_parser_output_metadata_t {
  ParserError_t
                          parser_error;
}
struct psa_ingress_input_metadata_t {
 // All of these values are initialized by the architecture before
 // the Ingress control block begins executing.
 PortId_t
                          ingress_port;
 InstanceType_t
                          instance_type;
                         ingress_timestamp;
 Timestamp_t
 ParserError_t
                          parser_error;
}
struct psa_ingress_output_metadata_t {
  // The comment after each field specifies its initial value when the
  // Ingress control block begins executing.
  bool
                          clone;
                                             // false
                                            // undefined
  PortId_t
                           clone_port;
                                            // true
 bool
                           drop;
                                             // false
  bool
                           resubmit;
  MulticastGroup_t
                           multicast_group; // 0
 PortId_t
                           egress_port;
                                            // undefined
 bool
                           truncate;
                                             // false
                           truncate_payload_bytes; // undefined
  PacketLength_t
struct psa_egress_input_metadata_t {
 PortId_t
                           egress_port;
  InstanceType_t
                          instance_type;
  EgressInstance_t
                           instance;
                                           /// instance coming from PRE
```

3.3. Match kinds 4. PSA EXTERNS

```
Timestamp_t
                            egress_timestamp;
 ParserError_t
                            parser_error;
}
struct psa_egress_output_metadata_t {
 // The comment after each field specifies its initial value when the
  // Egress control block begins executing.
 bool
                            clone;
                                            // false
 bool
                            drop;
                                            // false
 bool
                                            // false
                            recirculate;
 bool
                            truncate;
                                            // false
                            truncate_payload_bytes;
                                                     // undefined
 PacketLength_t
```

## 3.3. Match kinds

Additional supported match\_kind types

```
match_kind {
    range, /// Used to represent min..max intervals
    selector /// Used for implementing dynamic_action_selection
}
```

## 4. PSA Externs

## 4.1. Restrictions on where externs may be used

All instantiations in a P4<sub>16</sub> program occur at compile time, and can be arranged in a tree structure we will call the instantiation tree. The root of the tree T represents the top level of the program. Its children are the node for the package PSA\_Switch described in Section 5, and any externs instantiated at the top level of the program. The children of the PSA\_Switch node are the parsers and controls passed as parameters to the PSA\_Switch instantiation. If any of those parsers or controls instantiate other parsers, controls, and/or externs, the instantiation tree contains child nodes for them, continuing until the instantiation tree is complete.

For every instance whose node is a descendant of the Ingress node in this tree, call it an Ingress instance. Similarly for the other parameters of package PSA\_Switch. All other instances are top level instances.

A PSA implementation is allowed to reject programs that instantiate externs, or attempt to call their methods, from anywhere other than the places mentioned in the table below.

For example, Counter being restricted to "Ingress, Egress" means that every Counter instance must be instantiated within either the Ingress control block or the Egress control block, or be a descendant of one of those nodes in the instantiation tree. If a Counter instance is instantiated in Ingress, for example, then it cannot be referenced, and thus its methods cannot be called, from any non-Ingress control block.

PSA implementations need not support instantiating these externs at the top level. PSA implementations are allowed to accept programs that use these externs in other places, but they need not. Thus P4 programmers wishing to maximize the portability of their programs should restrict their use of these externs to the places indicated in the table.

emit method calls for the type packet\_out are restricted to be within departer control blocks in PSA, because those are the only places where an instance of type packet\_out is visible. Similarly all methods for type packet\_in, e.g. extract and advance, are restricted to be within parsers in

Extern type	Where it may be instantiated and called from
ActionProfile	Ingress, Egress
ActionSelector	Ingress, Egress
Checksum	IngressParser, EgressParser, Deparser
Counter	Ingress, Egress
Digest	Ingress, Egress
Hash	Ingress, Egress
Meter	Ingress, Egress
DirectCounter	Ingress, Egress
DirectMeter	Ingress, Egress
Random	Ingress, Egress
Register	Ingress, Egress
ValueSet	IngressParser, EgressParser

**Table 1.** Summary of controls that can instantiate and invoke externs.

PSA programs.  $P4_{16}$  restricts all verify method calls to be within parsers, whether they are for the PSA architecture or not.

TBD: The rationale for these restrictions is: (1) it is expected that the highest performance PSA implementations will not be able to update the same extern instance from both ingress and egress, nor from more than one of the top level parsers or controls instantiated by the PSA\_Switch package. (2) In a multi-pipeline device, there are effectively multiple instantiations of the ingress pipeline and of the egress pipeline. The primary motivation to create a multi-pipeline device is the practical difficulty in allowing the same stateful object (e.g. table, counter, etc.) to be accessed at a packet rate higher than that of a single pipeline. Thus each stateful object should be accessed from only a single pipeline on such a device.

## 4.2. Packet Replication Engine

The PacketReplicationEngine extern (abbreviated PRE) represents a part of the PSA pipeline that is not programmable via writing P4 code.

Even though the PRE can not be programmed using P4, it can be configured both directly using control plane APIs and by setting intrinsic metadata. The psa.p4 include file provides some actions to help set these metadata fields for some common use cases, described later.

The PRE extern object has no constructor, and thus it cannot be instantiated in the user's P4 program. The architecture instantiates it exactly once, without requiring the user's P4 program to instantiate it. The PRE is made available to the Ingress programmable block using the same mechanism as packet\_in. A corresponding Buffering and Queuing Engine (BQE) extern is defined for the Egress pipeline (see 4.3).

#### 4.2.1. Behavior of packets after Ingress processing is complete

The pseudocode below defines where copies of packets will be made after the Ingress control block has completed executing, based upon the contents of several metadata fields in the struct psa\_ingress\_output\_metadata\_t.

```
// false
bool
                         resubmit;
MulticastGroup_t
                         multicast_group; // 0
                                           // undefined
PortId_t
                         egress_port;
                                           // false
bool
                         truncate;
PacketLength_t
                         truncate_payload_bytes; // undefined
  psa_ingress_output_metadata_t ostd;
  if (truncate) {
      Truncate the payload to at most truncate_payload_bytes long.
          This affects any copies made below.
  if (ostd.clone) {
      create a copy of the packet and send it to the packet buffer,
          after which it will start egress processing with
          egress_port=ostd.clone_port (which might be PORT_CPU to
          send the clone to the control CPU).
      The contents of the packet will be the same as the packet as
         it began ingress parsing, prepended with any headers
         created by clone.emit() calls in the ingress departer apply
  // Continue below, regardless of whether a clone was created or not.
  if (ostd.drop) {
      drop the packet
              // Do not continue below.
      return;
  }
  if (ostd.resubmit) {
      resubmit the packet, i.e. it will go back to starting with the
          ingress parser;
      // TBD: Specify if anything is different about the resubmitted
      // packet vs. other copies that might be made below.
      return; // Do not continue below.
  if (ostd.multicast_group != 0) {
      Make 0 or more copies of the packet according to the control
          plane configuration of multicast group ostd.multicast_group.
      return; // Do not continue below.
  enqueue one packet for output port ostd.egress_port
```

TBD: Need text defining, for each possible copy, exactly what the contents of the packet will be.

TBD: Should it be possible to truncate a cloned or resubmitted packet differently than the normal packet that goes out?

TBD: If it is planned to be possible at the end of ingress to send a packet to be replicated via a multicast\_group, and also have a copy go to the control CPU, give an example showing this case (after showing some simpler common cases). Ideally it should be possible for the copy going to the control CPU to have a software-defined header (defined in the P4 program) that is different than any headers on the packet copies going to the Egress control block.

#### 4.2.2. Behavior of packets after Egress processing is complete

The pseudocode below defines where copies of packets will be made after the Egress control block has completed executing, based upon the contents of several metadata fields in the struct psa\_egress\_output\_metadata\_t.

```
struct psa_egress_output_metadata_t {
 // The comment after each field specifies its initial value when the
 // Egress control block begins executing.
                                         // false
                          clone;
 bool
 bool
                                         // false
                           drop;
                                        // false
 bool
                           recirculate;
 bool
                           truncate;
                                          // false
 PacketLength_t
                           truncate_payload_bytes; // undefined
}
   psa_egress_input_metadata_t istd;
   psa_egress_output_metadata_t ostd;
   if (truncate) {
       Truncate the payload to at most truncate_payload_bytes long.
            This affects any copies made below.
   if (ostd.clone) {
       create a copy of the packet and send it to the packet buffer,
           after which it will start egress processing with
           egress_port=ostd.clone_port (which might be PORT_CPU to
           send the clone to the control CPU).
       The contents of the packet will be the same as the packet as
           it comes out of the egress deparser, prepended with any
           headers created by clone.emit() calls in the egress
           deparser apply block.
   }
   // Continue below, regardless of whether a clone was created or not.
   if (ostd.drop) {
       drop the packet
       return; // Do not continue below.
   if (ostd.recirculate) {
       recirculate the packet, i.e. it will go back to starting with the
            ingress parser;
       // TBD: Specify if anything is different about the recirculated
       // packet vs. other copies that might be made below.
       return; // Do not continue below.
   }
   // The value istd.egress_port below is the same one that the
   // packet began its Egress processing with, as decided during
   // Ingress processing for this packet. The Egress control block
   // is not allowed to change it.
   enqueue one packet for output port istd.egress_port
```

TBD: Need text defining, for each possible copy, exactly what the contents of the packet will be, and any differences between the values of the fields in the structs psa\_parser\_input\_metadata\_t and

psa\_egress\_input\_metadata\_t, in the copy, as compared to the values seen for the packet that caused those copies to be made.

TBD: Should it be possible to truncate a cloned or recirculated packet differently than the normal packet that goes out?

#### 4.2.3. Actions for directing packets during ingress

All of these actions modify one or more metadata fields in the struct with type psa\_ingress\_output\_metadata\_t that is an out parameter of the Ingress control block. None of these actions has any other immediate effect. What happens to the packet is determined by the value of all fields in that struct when ingress processing is complete, not at the time one of these actions is called. See Section 4.2.1.

These actions are provided for convenience in making changes to these metadata fields. Their effects are expected to be common kinds of changes one will want to make in a P4 program. If they do not suit your use cases, you are of course welcome to modify the metadata fields directly in your P4 programs however you prefer, perhaps within actions you define yourself.

#### **4.2.3.1.** Unicast operation Sends packet to a port.

```
/// Modify ingress output metadata to cause one packet to be sent to
/// egress processing, and then to the output port egress_port, unless
/// it is dropped during egress processing.
/// This action does not change whether a clone or resubmit operation
/// will occur.
/// The one copy it causes to be sent to egress processing will have
/// its struct of type psa_egress_input_metadata_t filled in as
/// follows:
/// egress_port - equal to the egress_port parameter of this action
/// instance_type - InstanceType_t.NORMAL
/// instance - undefined
/// egress_timestamp - the time the packet begins egress processing
action send_to_port(inout psa_ingress_output_metadata_t meta,
                    in PortId_t egress_port)
{
    meta.drop = false;
    meta.multicast_group = 0;
    meta.egress_port = egress_port;
}
```

## **4.2.3.2.** Multicast operation Sends packet to a multicast group or a port.

The multicast\_group parameter is the multicast group id. The control plane must program the multicast groups through a separate mechanism.

```
/// Modify ingress output metadata to cause 0 or more copies of the
/// packet to be sent to egress processing.

/// This action does not change whether a clone or resubmit operation
/// will occur.

/// The control plane must program each multicast_group to create the
```

```
/// desired copies of the packet. For a particular multicast group,
/// the control plane specifies a list of 0 or more copy
/// specifications:
/// (egress_port[0], instance[0]),
/// (egress_port[1], instance[1]),
/// ...,
/// (egress_port[N-1], instance[N-1])
/// Copy number i sent to egress processing will have its struct of
/// type psa egress input metadata t filled in as follows:
/// egress_port - equal to the egress_port[i]
/// instance_type - InstanceType_t.NORMAL
/// instance - instance[i]
/// egress_timestamp - the time the packet begins egress processing
action multicast(inout psa_ingress_output_metadata_t meta,
                 in MulticastGroup_t multicast_group)
{
    meta.drop = false;
    meta.multicast_group = multicast_group;
}
4.2.3.3. Drop operation Do not send a copy of the packet for normal egress processing.
/// Modify ingress output metadata to cause no packet to be sent for
/// normal egress processing.
/// This action does not change whether a clone will occur. It will
/// prevent a packet from being resubmitted.
action ingress_drop(inout psa_ingress_output_metadata_t meta)
    meta.drop = true;
}
4.2.3.4. Truncate operation For all copies of the packet made at the end of Ingress processing,
truncate the payload to be at most the specified number of bytes. Specifying 0 is legal, and causes
only packet headers to be sent, with no payload.
/// For any copies made of this packet at the end of Ingress
/// processing, truncate the payload to at most payload_bytes bytes in
/// length.
action ingress_truncate(inout psa_ingress_output_metadata_t meta,
                         in PacketLength_t payload_bytes)
    meta.truncate = true;
    meta.truncate_payload_bytes = payload_bytes;
}
```

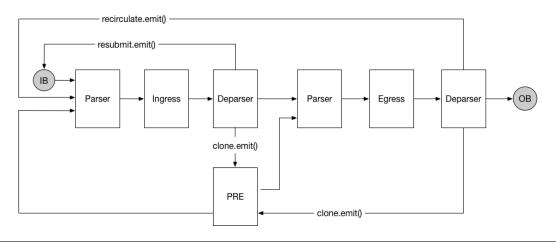


Figure 2. Clone, recirculate, and resubmit in PSA

#### 4.2.4. Clone, Recirculate, Resubmit

Figure 2 shows the proposed architectures for clone, recirculate, and resubmit in PSA.

**4.2.4.1.** Clone A PSA implementation provides a cloning mechanism to create copies of the original packet as independent packet instances. A cloned packet may be a duplicate of the original packet or a copy of the deparsed packet after egress pipeline. The cloning mechanism submit the cloned packet to either the ingress parser or the buffering mechanism. In a PSA implementation, the cloning mechanism is logically implemented in the PRE, that is, even if targets chose to implement it as part of other controls, the observable behavior should follow the semantics of cloning in the PRE.

The cloning mechanism can optionally attach metadata to the cloned packet. A PSA implementation provides the clone extern to specify the attached metadata. The clone extern provides a emit method which accepts the attached metadata of generic type T. In PSA, the metadata is prepended to the cloned packet. It is the responsibility of the programmer to parse the cloned packet such that it correctly extracts the attached metadata. The attached metadata may be of type header, header stack, header union or struct of the above types. Invoking the emit method multiple times will attach all specified metadata to the same cloned packet. The PSA architecture instantiates the clone extern in the ingress and egress deparser. A P4 program can use it in ingress and egress deparser only. It is an error to instantiate the clone extern in the P4 control or parser block

A PSA implementation provides two configuration metadata, clone and clone\_port, to the PRE to control the cloning mechanism. When clone is set to true, the cloning mechanism generates a cloned packet with the optional attached metadata. When clone is set to false, cloning is disabled and a cloned packet is not generated even if the emit method is invoked in the deparser. The clone\_port controls the destination of the cloned packet. A common use case is to the send the cloned packet to the control CPU, in which case the clone\_port should be set to the value that represents the control CPU port.

```
extern clone {
   /// Write @hdr into the ingress/egress clone engine.
   /// @T can be a header type, a header stack, a header union, or a struct
   /// containing fields with such types.
   void emit<T>(in T hdr);
}
```

**4.2.4.2.** Resubmit A PSA implementation provides a resubmission mechanism to resend the original packet to ingress parser for recursive processing. The resubmitted packet is the original packet as seen on the ingress pipeline. The resubmission mechanism sends the original packet to the ingress parser. The resubmission mechanism does not make copies of the original packet. In a PSA implementation, the resubmission mechanism is logically implemented in the PRE, that is, even if targets chose to implement it as part of other controls, the observable behavior should follow the semantics of resubmitting in the PRE.

The resubmission mechanism can optionally attach metadata to the resubmitted packet. A PSA implementation provides the resubmit extern to specify the attached metadata. The resubmit extern provides a emit method which accepts the attached metadata of generic type T. In a PSA implementation, the metadata is prepended to the resubmitted packet. It is the responsibility of the programmer to parse the resubmitted packet correctly to extract the attached metadata. The attached metadata can be of type header, header

stack, header union or struct of the above types. Invoking the emit method multiple times will attach all specified metadata to the same resubmitted packet. The PSA architecture instantiates the resubmit extern in the ingress deparser. A P4 program can use it in ingress deparser only. It is an error to instantiate the resubmit extern in the P4 control or parser block.

A PSA implementation provides a configuration bit resubmit to the PRE to enable the resubmission mechanism. If resubmit is set to true, the resubmission mechanism resends the original packet with the optional attached metadata. If resubmit is set to false, the resubmission mechanism is disabled and the original packet is not resubmitted even if the emit method is invoked in the departer.

```
extern resubmit {
    /// Write @hdr into the ingress packet buffer.
    /// @T can be a header type, a header stack, a header union or a struct
    /// containing fields with such types.
    void emit<T>(in T hdr);
}
```

**4.2.4.3.** Recirculate A PSA implementation provides a recirculation mechanism to send a deparsed packet from egress pipeline to ingress parser for recursive processing. The recirculated packet is the deparsed packet after the egress pipeline. The recirculation mechanism does not make copies of the original packet. It sends the deparsed packet from egress back to the ingress parser. In a PSA implementation, the recirculation mechanism is logically implemented in the PRE, that is, even if targets chose to implement it as part of other controls, the observable behavior should follow the semantics of recirculating in the PRE.

The recirculation mechanism can optionally attach metadata to the recirculated packet. A PSA implementation provides the recirculate extern to specify the attached metadata. The emit method in the recirculate extern accepts an attached metadata of generic type T. In a PSA implementation, the metadata is prepended to the recirculated packet. It is the responsibility of the programmer to parse the recirculated packet correctly to extract the attached metadata. The attached metadata can be of type header, header stack, header

union or struct of the above types. Invoking the emit method multiple times will attach all specified metadata to the same recirculated packet. The PSA architecture instantiates the recirculate extern in the ingress deparser. A P4 program can use it in egress deparser only. It is an error to instantiate the recirculate extern in a P4 control or parser block.

A PSA implementation provides a configuration bit recirculate to the PRE to enable the recirculation mechanism. If recirculate is set to true, the recirculation mechanism sends back the departed packet with the optional attached metadata to the ingress parser. If recirculate is set to false, the recirculation mechanism is disabled and the departed packet is not recirculated even if the emit method is invoked in the departer.

One possible implementation of the recirculate bit is to set the egress\_port metadata to

a dedicated recirculation port number. A PSA implementation sends the departed packet to the dedicated recirculation port to recirculate the packet.

A PSA implementation provides a metadata bit is\_recirc as the input metadata to the parser to indicate if a packet is a recirculation packet. The is\_recirc bit is true if the packet is a recirculation packet.

One possible implementation of the is\_recirc bit is to set the bit based on the ingress\_port metadata of the received packet. If the ingress\_port metadata is equal to the dedicated recirculation port number, then the is\_recirc bit is set.

```
extern recirculate {
    /// Write @hdr into the egress packet.
    /// @T can be a header type, a header stack, a header union or a struct
    /// containing fields with such types.
    void emit(in T hdr);
}
```

## 4.3. Buffering Queuing Engine

The BufferingQueueingEngine extern (abbreviated BQE) represents another part of the PSA pipeline, after Egress, that is not programmable via writing P4 code.

Even though the BQE can not be programmed using P4, it can be configured both directly using control plane APIs and by setting intrinsic metadata.

The BQE extern object has no constructor, and thus it cannot be instantiated in the user's P4 program. The architecture instantiates it exactly once, without requiring the user's P4 program to instantiate it. The BQE is made available to the Egress programmable block using the same mechanism as packet\_in. A corresponding Packet Replication Engine (PRE) extern is defined for the Ingress pipeline (see 4.2).

#### 4.3.1. Actions for directing packets during egress

**4.3.1.1. Drop operation** Do not send the packet out of the device after egress processing is complete.

```
/// Modify egress output metadata to cause no packet to be sent out of
/// the device.

/// This action does not change whether a clone will occur. It will
/// prevent a packet from being recirculated.

action egress_drop(inout psa_egress_output_metadata_t meta)
{
    meta.drop = true;
}
```

**4.3.1.2. Truncate operation** For all copies of the packet made at the end of Egress processing, truncate the payload to be at most the specified number of bytes. Specifying 0 is legal, and causes only packet headers to be sent, with no payload.

4.4. Hashes 4. PSA EXTERNS

```
{
    meta.truncate = true;
    meta.truncate_payload_bytes = payload_bytes;
4.4. Hashes
Supported hash algorithms:
enum HashAlgorithm_t {
  IDENTITY,
 CRC32,
 CRC32_CUSTOM,
  CRC16,
  CRC16_CUSTOM,
  ONES_COMPLEMENT16, /// One's complement 16-bit sum used for IPv4 headers,
                      /// TCP, and UDP.
                      /// target implementation defined
  TARGET_DEFAULT
}
4.4.1. Hash function
Example usage:
parser P() {
 Hash<bit<16>>(HashAlgorithm_t.CRC16) h;
  bit<16> hash_value = h.get_hash(buffer);
Parameters:
  • algo The algorithm to use for computation (see 4.4).
  • O The type of the return value of the hash.
extern Hash<0> {
  /// Constructor
  Hash(HashAlgorithm_t algo);
  /// Compute the hash for data.
  /// Oparam data The data over which to calculate the hash.
  /// @return The hash value.
  0 get_hash<D>(in D data);
  /// Compute the hash for data, with modulo by max, then add base.
  /// @param base Minimum return value.
  /// @param data The data over which to calculate the hash.
  /// @param max The hash value is divided by max to get modulo.
             An implementation may limit the largest value supported,
  ///
             e.g. to a value like 32, or 256.
  /// @return (base + (h % max)) where h is the hash value.
  O get_hash<T, D>(in T base, in D data, in T max);
```

TBD: Should there be a const defined that specifies the maximum allowed value of max parameter?

## 4.5. Checksum computation

Checksums and hash value generators are examples of functions that operate on a stream of bytes from a packet to produce an integer. The integer may be used, for example, as an integrity check for a packet or as a means to generate a pseudo-random value in a given range on a packet-by-packet or flow-by-flow basis.

Parameters:

• W The width of the checksum

#### 4.5.1. Checksum example

The partial P4 program below demonstrates one way to use the Checksum extern to verify whether the checksum field in a parsed IPv4 header is correct, and set a parser error if it is wrong. It also demonstrates checking for parser errors in the ingress control block, dropping the packet if any errors occurred during parsing. PSA programs may choose to handle packets with parser errors in other ways than shown in this example – it is up to the P4 program author to choose and write the desired behavior.

Neither P4<sub>16</sub> nor the PSA provide any special mechanisms to record the location within a packet that a parser error occurred. A P4 program author can choose to record such location information explicitly. For example, one may define metadata fields specifically for that purpose, e.g. to hold an encoded value representing the last parser state reached, or the number of bytes extracted so far. Then, assign values to those fields within parser state code.

```
// Define additional error values, one of them for packets with
// incorrect IPv4 header checksums.
error {
    UnhandledIPv40ptions,
    BadIPv4HeaderChecksum
}
typedef bit<32> PacketCounter_t;
typedef bit<8> ErrorIndex_t;
const bit<9> NUM_ERRORS = 256;
parser IngressParserImpl(packet_in buffer,
                         out headers parsed_hdr,
                         inout metadata user_meta,
                         in psa_ingress_parser_input_metadata_t istd,
                         out psa_parser_output_metadata_t ostd)
{
    Checksum<bit<16>>(HashAlgorithm_t.ONES_COMPLEMENT16) ck;
    state start {
        buffer.extract(parsed_hdr.ethernet);
        transition select(parsed_hdr.ethernet.etherType) {
            0x0800: parse_ipv4;
```

```
default: accept;
        }
   }
   state parse_ipv4 {
       buffer.extract(parsed_hdr.ipv4);
        // TBD: It would be good to enhance this example to
        // demonstrate checking of IPv4 header checksums for IPv4
        // headers with options, but this example does not handle such
        // packets.
        verify(parsed_hdr.ipv4.ihl == 5, error.UnhandledIPv4Options);
        // TBD: Update the code below for checking the IPv4 header
        // checksum with whatever the API we decide upon for a PSA
        // checksum extern.
        ck.clear();
        ck.update({ parsed_hdr.ipv4.version,
                parsed_hdr.ipv4.ihl,
                parsed_hdr.ipv4.diffserv,
                parsed_hdr.ipv4.totalLen,
                parsed_hdr.ipv4.identification,
                parsed_hdr.ipv4.flags,
               parsed_hdr.ipv4.fragOffset,
                parsed_hdr.ipv4.ttl,
                parsed_hdr.ipv4.protocol,
                //parsed_hdr.ipv4.hdrChecksum, // intentionally leave this out
                parsed_hdr.ipv4.srcAddr,
                parsed_hdr.ipv4.dstAddr });
        // The verify statement below will cause the parser to enter
        // the reject state, and thus terminate parsing immediately,
        // if the IPv4 header checksum is wrong. It will also record
        // the error error.BadIPv4HeaderChecksum, which will be
        // available in a metadata field in the ingress control block.
        verify(ck.get() == parsed_hdr.ipv4.hdrChecksum,
               error.BadIPv4HeaderChecksum);
        transition select(parsed_hdr.ipv4.protocol) {
           6: parse_tcp;
           default: accept;
        }
   state parse_tcp {
       buffer.extract(parsed_hdr.tcp);
        transition accept;
   }
}
control ingress(inout headers hdr,
                inout metadata user_meta,
                PacketReplicationEngine pre,
                in psa_ingress_input_metadata_t istd,
                out psa_ingress_output_metadata_t ostd)
{
   // Table parser_error_count_and_convert below shows one way to
   // count the number of times each parser error was encountered.
```

```
// Although it is not used in this example program, it also shows
   // how to convert the error value into a unique bit vector value
   // 'error_idx', which can be useful if you wish to put a bit
   // vector encoding of an error into a packet header, e.g. for a
   // packet sent to the control CPU.
   DirectCounter<PacketCounter_t>(CounterType_t.PACKETS) parser_error_counts;
   ErrorIndex_t error_idx;
   action set_error_idx (ErrorIndex_t idx) {
       error idx = idx;
       parser_error_counts.count();
   table parser_error_count_and_convert {
       key = {
           istd.parser_error : exact;
       }
       actions = {
            set_error_idx;
       }
       default_action = set_error_idx(0);
        const entries = {
           error.NoError
                                       : set_error_idx(1);
           error.PacketTooShort
                                       : set_error_idx(2);
           error.NoMatch
                                        : set_error_idx(3);
           error.StackOutOfBounds
                                       : set_error_idx(4);
            error.HeaderTooShort
                                       : set_error_idx(5);
           error.ParserTimeout
                                       : set error idx(6);
           error.BadIPv4HeaderChecksum : set_error_idx(7);
           error.UnhandledIPv4Options : set_error_idx(8);
       }
       psa_direct_counters = { parser_error_counts };
   apply {
       if (istd.parser_error != error.NoError) {
           // Example code showing how to count number of times each
           // kind of parser error was seen.
           parser_error_count_and_convert.apply();
           ingress_drop(ostd);
           exit;
       }
        // Do normal packet processing here.
   }
}
```

The partial program below demonstrates one way to use the Checksum extern to calculate and then fill in a correct IPv4 header checksum in the computeChecksum control block, just before the deparser. In this example, the checksum is calculated fresh, so the outgoing checksum will be correct regardless of what changes might have been made to the IPv4 header fields in the ingress (or egress) control block that precedes it.

```
control computeChecksum(inout headers hdr, inout metadata meta) {
   Checksum<bit<16>>(HashAlgorithm_t.ONES_COMPLEMENT16) ck;
   apply {
```

```
// TBD: Update the code below for checking the IPv4 header
        // checksum with whatever the API we decide upon for a PSA
        // checksum extern.
        ck.clear();
        ck.update({ hdr.ipv4.version,
                hdr.ipv4.ihl,
                hdr.ipv4.diffserv,
                hdr.ipv4.totalLen,
                hdr.ipv4.identification,
                hdr.ipv4.flags,
                hdr.ipv4.fragOffset,
                hdr.ipv4.ttl,
                hdr.ipv4.protocol,
                //hdr.ipv4.hdrChecksum, // intentionally leave this out
                hdr.ipv4.srcAddr,
                hdr.ipv4.dstAddr });
       hdr.ipv4.hdrChecksum = ck.get();
   }
}
```

TBD: It would be good if the Checksum extern can handle a case of doing a 'delta' correction of a TCP header checksum when an IPv4 or IPv6 source or destination address is changed, e.g. due to implementing a feature like NAT. This should be possible without having to redo the TCP checksum over the entire TCP payload, by assuming that the incoming TCP header checksum was correct. With the proposed remove and update methods, this should be possible by calling remove on the old source/destination addresses, and then update on the new source/destination addresses. It would also be good to have a short example program demonstrating one way to do this, ideally with a one-packet test case to verify it works when it is implemented.

## 4.6. Counters

Counters are a mechanism for keeping statistics. The control plane can read counter values. A P4 program cannot read counter values, only update them. If you wish to implement a feature involving sequence numbers in packets, for example, use Registers instead (Section 4.8).

Direct counters are counters associated with a particular P4 table, and are implemented by the extern DirectCounter. There are also indexed counters, which are implemented by the extern Counter. The primary differences between direct counters and indexed counters are:

- Number of independently updatable counter values:
  - A single instantiation of a direct counter always contains as many independent counter values as the number of entries in the table with which it is associated (TBD: see below for what this means for tables that use action profiles).
  - You must specify the number of independent counter values for an indexed counter when instantiating it. This number of counters need not be the same as the size of any table.
- Where counter updates are allowed in the P4 program:
  - For a direct counter, you may only invoke its **count** method from inside the actions of the table with which it is associated, and this always updates the counter value associated with the matching table entry.
  - For an indexed counter, you may invoke its count method anywhere in the P4 program where extern object method invocations are permitted (e.g. inside actions, or directly inside a control's apply block), and every such invocation must specify the index of the counter value to be updated.

Counters are only intended to support packet counters and byte counters, or a combination of both called PACKETS\_AND\_BYTES. The byte counts are always increased by some measure of the packet length, where the packet length used might vary from one PSA implementation to another. For example, one implementation might use the Ethernet frame length, including the Ethernet header and FCS bytes, as the packet arrived on a physical port. Another might not include the FCS bytes in its definition of the packet length. Another might only include the Ethernet payload length. Each PSA implementation should document how it determines the packet length used for byte counter updates.

If you wish to keep counts of other quantities, or to have more precise control over the packet length used in a byte counter, you may use Registers to achieve that (Section 4.8).

#### 4.6.1. Counter types

```
enum CounterType_t {
   PACKETS,
   BYTES,
   PACKETS_AND_BYTES
}
4.6.2. Counter
/// Indirect counter with n_counters independent counter values, where
/// every counter value has a data plane size specified by type W.
extern Counter<W, S> {
 Counter(bit<32> n_counters, CounterType_t type);
 void count(in S index);
  /*
 /// The control plane API uses 64-bit wide counter values. It is
 /// not intended to represent the size of counters as they are
 /// stored in the data plane. It is expected that control plane
 /// software will periodically read the data plane counter values,
 /// and accumulate them into larger counters that are large enough
 /// to avoid reaching their maximum values for a suitably long
 /// operational time. A 64-bit byte counter increased at maximum
 /// line rate for a 100 gigabit port would take over 46 years to
 /// wrap.
 @ControlPlaneAPI
   bit<64> read
                     (in S index);
   bit <64> sync_read (in S index);
   void set
                     (in S index, in bit<64> seed);
   void reset
                      (in S index);
   void start
                     (in S index);
                     (in S index);
   void stop
 }
}
```

See below for pseudocode of an example implementation for the Counter extern.

The example implementation for next\_counter\_value is not intended to restrict PSA implementations. In particular, the storage format for PACKETS\_AND\_BYTES type counters is just one example of how it could be done. Implementations are free to store state in other ways, as long as the control plane API returns the correct packet and byte count values.

Two common techniques for counter implementations in the data plane are:

- wrap around counters
- saturating counters, that 'stick' at their maximum possible value, without wrapping around.

This specification does not mandate any particular approach in the data plane. Implementations should strive to avoid losing information in counters. One common implementation technique is to implement an atomic "read and clear" operation in the data plane that can be invoked by the control plane software. The control plane software invokes this operation frequently enough to prevent counters from ever wrapping or saturating, and adds the values read to larger counters in driver memory.

```
Counter(bit<32> n_counters, CounterType_t type) {
   this.num_counters = n_counters;
   this.counter_vals = new array of size n_counters, each element with type W;
   this.type = type;
   if (this.type == CounterType_t.PACKETS_AND_BYTES) {
        // Packet and byte counts share storage in the same counter
        // state. Should we have a separate constructor with an
        // additional argument indicating how many of the bits to use
        // for the byte counter?
       W shift_amount = TBD;
        this.shifted_packet_count = ((W) 1) << shift_amount;</pre>
        this.packet_count_mask = (~((W) 0)) << shift_amount;</pre>
        this.byte_count_mask = ~this.packet_count_mask;
   }
}
W next_counter_value(W cur_value, CounterType_t type) {
   if (type == CounterType_t.PACKETS) {
       return (cur_value + 1);
   // Exactly which packet bytes are included in packet_len is
   // implementation-specific.
   PacketLength_t packet_len = <packet length in bytes>;
   if (type == CounterType t.BYTES) {
       return (cur_value + packet_len);
   }
   // type must be CounterType_t.PACKETS_AND_BYTES
   // In type W, the least significant bits contain the byte
   // count, and most significant bits contain the packet count.
   // This is merely one example storage format. Implementations
   // are free to store packets_and_byte state in other ways, as
   // long as the control plane API returns the correct separate
   // packet and byte count values.
   W next_packet_count = ((cur_value + this.shifted_packet_count) &
                           this.packet_count_mask);
   W next_byte_count = (cur_value + packet_len) & this.byte_count_mask;
   return (next_packet_count | next_byte_count);
}
```

Optional debugging information that may be kept if an index value is out of range includes:

- Number of times this occurs.
- A FIFO of the first N out-of-range index values that occur, where N is implementation-defined (e.g. it might only be 1). Extra information to identify which count() method call in the P4 program had the out-of-range index value is also recommended.

#### 4.6.3. Direct Counter

```
extern DirectCounter<W> {
  DirectCounter(CounterType_t type);
  void count();
  /*
  @ControlPlaneAPI
         read<W>
                       (in TableEntry key);
         sync_read<W> (in TableEntry key);
                      (in W seed);
    void set
                       (in TableEntry key);
    void reset
    void start
                      (in TableEntry key);
    void stop
                       (in TableEntry key);
  }
```

A DirectCounter instance must appear in the list of values of the psa\_direct\_counters table attribute for exactly one table. We call this table the DirectCounter instance's "owner". It is an error to call the count method for a DirectCounter instance anywhere except inside an action of its owner table.

The counter value updated by an invocation of **count** is always the one associated with the table entry that matched.

TBD: How to describe which counter value is updated for tables with action profiles and direct counters? Or should this combination even be allowed?

An action of an owner table need not have count method calls for all of the DirectCounter instances that the table owns. You must use an explicit count() method call on a DirectCounter to update it, otherwise its state will not change.

An example implementation for the DirectCounter extern is essentially the same as the one for Counter. Since there is no index parameter to the count method, there is no need to check for whether it is in range.

The rules here mean that an action that calls count on a DirectCounter instance may only be an action of that instance's one owner table. If you want to have a single action A that can be invoked by multiple tables, you can still do so by having a unique action for each such table with a

DirectCounter, where each such action in turn calls action A, in addition to any count invocations they have.

A DirectCounter instance must have a counter value associated with its owner table that is updated when there is a default action assigned to the table, and a search of the table results in a miss. If there is no default action assigned to the table, then there need not be any counter updated when a search of the table results in a miss.

By "a default action is assigned to a table", we mean that either the table has a default\_action table property with an action assigned to it in the P4 program, or the control plane has made an explicit call to assign the table a default action. If neither of these is true, then there is no default action assigned to the table.

TBD: Verify that the method of reading this default action counter state is documented for the control plane API. I believe that Antonin Bas said that it can be accessed using the same API call used to read a DirectCounter value associated with a table entry, except that the key in the API call should be empty.

TBD: Should a single table be restricted to have at most one DirectCounter associated with it, or should it be allowed to have more than one?

## 4.6.4. Example program using counters

The following partial P4 program demonstrates the instantiation and updating of Counter and DirectCounter externs.

```
typedef bit<48> ByteCounter_t;
typedef bit<32> PacketCounter_t;
typedef bit<80> PacketByteCounter_t;
const PortId_t NUM_PORTS = 512;
struct headers {
    ethernet t
                     ethernet;
    ipv4_t
                     ipv4;
}
control ingress(inout headers hdr,
                inout metadata user_meta,
                PacketReplicationEngine pre,
                in psa_ingress_input_metadata_t istd,
                out psa_ingress_output_metadata_t ostd)
{
    Counter<ByteCounter_t, PortId_t>((bit<32>) NUM_PORTS, CounterType_t.BYTES)
        port_bytes_in;
    DirectCounter<PacketByteCounter_t>(CounterType_t.PACKETS_AND_BYTES)
        per_prefix_pkt_byte_count;
    action next hop(PortId t oport) {
        per_prefix_pkt_byte_count.count();
        send_to_port(ostd, oport);
    action default_route_drop() {
        per_prefix_pkt_byte_count.count();
        ingress_drop(ostd);
    table ipv4_da_lpm {
```

4.7. Meters 4. PSA EXTERNS

```
key = { hdr.ipv4.dstAddr: lpm; }
        actions = {
            next_hop;
            default_route_drop;
        }
        default_action = default_route_drop;
       psa_direct_counters = {
            // table ipv4_da_lpm owns this DirectCounter instance
           per_prefix_pkt_byte_count
       };
   }
   apply {
       port_bytes_in.count(istd.ingress_port);
        if (hdr.ipv4.isValid()) {
            ipv4_da_lpm.apply();
        }
   }
}
control egress(inout headers hdr,
               inout metadata user_meta,
               BufferingQueueingEngine bqe,
               in psa_egress_input_metadata_t istd,
               out psa_egress_output_metadata_t ostd)
{
   Counter<ByteCounter_t, PortId_t>((bit<32>) NUM_PORTS, CounterType_t.BYTES)
       port_bytes_out;
   apply {
        // By doing these stats updates on egress, then because
        // multicast replication happens before egress processing,
        // this update will occur once for each copy made, which in
        // this example is intentional.
        port_bytes_out.count(istd.egress_port);
}
```

#### 4.7. Meters

Meters (RFC 2698) are a more complex mechanism for keeping statistics about packets, most often used for dropping or "marking" packets that exceed an average packet or bit rate. To mark a packet means to change one or more of its quality of service values in packet headers such as the 802.1Q PCP (priority code point) or DSCP (differentiated service code point) bits within the IPv4 or IPv6 type of service byte. The meters specified in the PSA are 3-color meters.

PSA meters do not require any particular drop or marking actions, nor do they automatically implement those behaviors for you. Meters keep enough state, and update their state during <code>execute()</code> method calls, in such a way that they return a <code>GREEN</code> (also known as conform), <code>YELLOW</code> (exceed), or <code>RED</code> (violate) result. See RFC 2698 for details on the conditions under which one of these three results is returned. The P4 program is responsible for examining that returned result, and making changes to packet forwarding behavior as a result.

RFC 2698 describes "color aware" and "color blind" variations of meters. The Meter and DirectMeter externs implement both. The only difference is in which execute method you use when updating them. See the comments on the extern definitions below.

Similar to counters, there are two flavors of meters: indexed and direct. (Indexed) meters are

4.7. Meters 4. PSA EXTERNS

addressed by index, while direct meters always update a meter state corresponding to the matched table entry or action, and from the control plane API are addressed using P4Runtime table entry as key.

There are many other similarities between counters and meters, including:

- The number of independently updatable meter values.
- Where meter updates are allowed in a P4 program.
- For BYTES type meters, the packet length used in the update is determined by the PSA implementation, and can vary from one PSA implementation to another.

Further similarities between direct counters and direct meters include:

- DirectMeter execute method calls must be performed within actions invoked by the table that owns the DirectMeter instance. It is optional for such an action to call the execute method.
- There must be a meter state associated with a DirectMeter instance's owner table, that can be updated when the table result is a miss. As for a DirectCounter, this state only needs to exist if a default action is assigned to the table.

The table attribute to specify that a table owns a DirectMeter instance is psa\_direct\_meters. The value of this table attribute is a list of meter instances.

As for counters, if you call the execute(idx) method on an indexed meter and idx is at least the number of meter states, so idx is out of range, no meter state is updated. The execute call still returns a value of type MeterColor\_t, but the value is undefined – programs that wish to have predictable behavior across implementations must not use the undefined value in a way that affects the output packet or other side effects. The example code below shows one way to achieve predictable behavior. Note that this undefined behavior cannot occur if the value of  $n_meters$  of an indexed meter is  $2^W$ , and the type S used to construct the meter is bit<W>, since the index value could never be out of range.

```
#define METER1_SIZE 100
Meter<bit<7>>(METER1_SIZE, MeterType_t.BYTES) meter1;
bit<7> idx;
MeterColor_t color1;

// ... later ...

if (idx < METER1_SIZE) {
    color1 = meter1.execute(idx, MeterColor_t.GREEN);
} else {
    // If idx is out of range, use a default value for color1. One
    // may also choose to store an error flag in some metadata field.
    color1 = MeterColor_t.RED;
}</pre>
```

Any implementation will have a finite range that can be specified for the Peak Burst Size and Committed Burst Size. An implementation should document the maximum burst sizes they support, and if the implementation internally truncates the values that the control plane requests to something more coarse than any number of bytes, that should also be documented. It is recommended that the maximum burst sizes be allowed as large as the number of bytes that can be transmitted across the implementation's maximum speed port in 100 milliseconds.

Implementations will also have finite ranges and precisions that they support for the Peak Information Rate and Committed Information Rate. An implementation should document the maximum rate it supports, as well as the precision it supports for implementing requested rates. It is recommended that the maximum rate supported be at least the rate of the implementation's fastest port,

4.7. Meters 4. PSA EXTERNS

and that the actual implemented rate should always be within plus or minus 0.1% of the requested rate.

```
4.7.1. Meter types
enum MeterType_t {
   PACKETS,
    BYTES
}
4.7.2. Meter colors
enum MeterColor_t { RED, GREEN, YELLOW };
4.7.3. Meter
// Indexed meter with n_meters independent meter states.
extern Meter<S> {
 Meter(bit<32> n_meters, MeterType_t type);
  // Use this method call to perform a color aware meter update (see
  // RFC 2698). The color of the packet before the method call was
  // made is specified by the color parameter.
  MeterColor_t execute(in S index, in MeterColor_t color);
  // Use this method call to perform a color blind meter update (see
  // RFC 2698). It may be implemented via a call to execute(index,
  // MeterColor_t.GREEN), which has the same behavior.
  MeterColor_t execute(in S index);
  /*
  @ControlPlaneAPI
   reset(in MeterColor_t color);
    setParams(in S index, in MeterConfig config);
    getParams(in S index, out MeterConfig config);
  }
}
4.7.4. Direct Meter
extern DirectMeter {
 DirectMeter(MeterType_t type);
  // See the corresponding methods for extern Meter.
  MeterColor_t execute(in MeterColor_t color);
  MeterColor_t execute();
  /*
  @ControlPlaneAPI
```

4.8. Registers 4. PSA EXTERNS

```
reset(in TableEntry entry, in MeterColor_t color);
void setConfig(in TableEntry entry, in MeterConfig config);
void getConfig(in TableEntry entry, out MeterConfig config);
}
*/
}
```

## 4.8. Registers

Registers are stateful memories whose values can be read and written during packet forwarding under the control of the P4 program. They are similar to counters and meters in that their state can be modified as a result of processing packets, but they are far more general in the behavior they can implement.

Although you may not use register contents directly in table match keys, you may use the read() method call on the right-hand side of an assignment statement, which retrieves the current value of the register. You may copy the register value into metadata, and it is then available for matching in subsequent tables.

A simple usage example might be to verify that a "first packet" was seen for a particular type of flow. A register cell would be allocated to the flow, initialized to "clear". When the protocol signaled a "first packet", the table would match on this value and update the flow's cell to "marked". Subsequent packets in the flow could would be mapped to the same cell; the current cell value would be stored in metadata for the packet and a subsequent table could check that the flow was marked as active.

Another example using registers is given below. It implements a packet and byte counter, where the byte counter can be updated by a packet length specified in the P4 program, rather than one chosen by the PSA implementation.

```
const PortId_t NUM_PORTS = 512;

// It would be more convenient to use a struct type to represent the
// state of a combined packet and byte count, and many other compound
// values one might wish to store in a Register instance. However,
// the latest p4test as of 2017-Aug-13 does not allow a struct type to
// be returned from a method call like Register.read().

#define PACKET_COUNT_WIDTH 32
#define BYTE_COUNT_WIDTH 48
//#define PACKET_BYTE_COUNT_WIDTH (PACKET_COUNT_WIDTH + BYTE_COUNT_WIDTH)
```

4.8. Registers 4. PSA EXTERNS

```
#define PACKET_BYTE_COUNT_WIDTH 80
#define PACKET_COUNT_RANGE (PACKET_BYTE_COUNT_WIDTH-1):BYTE_COUNT_WIDTH
#define BYTE_COUNT_RANGE (BYTE_COUNT_WIDTH-1):0
typedef bit<PACKET_BYTE_COUNT_WIDTH> PacketByteCountState_t;
action update_pkt_ip_byte_count (inout PacketByteCountState_t s,
                                 in bit<16> ip_length_bytes)
{
    s[PACKET COUNT RANGE] = s[PACKET COUNT RANGE] + 1;
    s[BYTE_COUNT_RANGE] = (s[BYTE_COUNT_RANGE] +
                           (bit<BYTE_COUNT_WIDTH>) ip_length_bytes);
}
control ingress(inout headers hdr,
                inout metadata user_meta,
                PacketReplicationEngine pre,
                in psa_ingress_input_metadata_t istd,
                out psa_ingress_output_metadata_t ostd)
{
    Register<PacketByteCountState_t, PortId_t>((bit<32>) NUM_PORTS)
        port_pkt_ip_bytes_in;
    apply {
        ostd.egress_port = 0;
        if (hdr.ipv4.isValid()) {
            @atomic {
                PacketByteCountState_t tmp;
                tmp = port_pkt_ip_bytes_in.read(istd.ingress_port);
                update_pkt_ip_byte_count(tmp, hdr.ipv4.totalLen);
                port_pkt_ip_bytes_in.write(istd.ingress_port, tmp);
            }
        }
    }
}
```

Note the use of the <code>Qatomic</code> annotation in the block enclosing the <code>read()</code> and <code>write()</code> method calls on the <code>Register</code> instance. It is expected to be common that register accesses will need the <code>Qatomic</code> annotation around portions of your program in order to behave as you desire. As stated in the P4\_16 specification, without the <code>Qatomic</code> annotation in this example, an implementation is allowed to process two packets P1 and P2 in parallel, and perform the register access operations in this order:

```
// Possible order of operations for the example program if the
// @atomic annotation is _not_ used.

tmp = port_pkt_ip_bytes_in.read(istd.ingress_port); // for packet P1
tmp = port_pkt_ip_bytes_in.read(istd.ingress_port); // for packet P2

// At this time, if P1 and P2 came from the same ingress_port,
// each of their values of tmp are identical.

update_pkt_ip_byte_count(tmp, hdr.ipv4.totalLen); // for packet P1
```

4.9. Random 4. PSA EXTERNS

```
update_pkt_ip_byte_count(tmp, hdr.ipv4.totalLen);  // for packet P2
port_pkt_ip_bytes_in.write(istd.ingress_port, tmp);  // for packet P1
port_pkt_ip_bytes_in.write(istd.ingress_port, tmp);  // for packet P2
// The write() from packet P1 is lost.
```

Since different implementations may have different upper limits on the complexity of code that they will accept within an <code>@atomic</code> block, we recommend you keep them as small as possible, subject to maintaining your desired correct behavior.

Individual counter and meter method calls need not be enclosed in **Catomic** blocks to be safe — they guarantee atomic behavior of their individual method calls, without losing any updates.

As for indexed counters and meters, access to an index of a register that is at least the size of the register is out of bounds. An out of bounds write has no effect on the state of the system. An out of bounds read returns an undefined value. See the example in Section 4.7 for one way to write code to guarantee avoiding this undefined behavior. Out of bounds register accesses are impossible for a register instance with type S declared as bit<W> and size  $2^W$  entries.

#### 4.9. Random

The random extern provides a reliable, target specific number generator in the min .. max range.

The set of distributions supported by the Random extern. \TODO: should this be removed in favor of letting the extern return whatever distribution is supported by the target?

```
enum RandomDistribution {
    PRNG,
    Binomial,
    Poisson
}

extern Random<T> {
    Random(RandomDistribution dist, T min, T max);
    T read();

    /*
    @ControlPlaneAPI
    {
        void reset();
        void setSeed(in T seed);
    }
    */
}
```

#### 4.10. Action Profile

Action profiles are used as table implementation attributes.

Action profiles implement a mechanism to populate table entries with actions and action data. The only data plane operation required is to instantiate this extern. When the control plane adds entries (members) into the extern, they are essentially populating the corresponding table entries.

```
extern ActionProfile {
   /// Construct an action profile of 'size' entries
   ActionProfile(bit<32> size);
   /*
   @ControlPlaneAPI
```

4.11. Action Selector 4. PSA EXTERNS

```
{
    entry_handle add_member (action_ref, action_data);
    void delete_member (entry_handle);
    entry_handle modify_member (entry_handle, action_ref, action_data);
}
*/
}
```

#### 4.11. Action Selector

Action selectors are used as table implementation attributes.

Action selectors implement another mechanism to populate table entries with actions and action data. They are similar to action profiles, with additional support to define groups of entries. Action selectors require a hash algorithm to select members in a group. The only data plane operation required is to instantiate this extern. When the control plane adds entries (members) into the extern, they are essentially populating the corresponding table entries.

```
extern ActionSelector {
  /// Construct an action selector of 'size' entries
  /// @param algo hash algorithm to select a member in a group
  /// Oparam size number of entries in the action selector
  /// @param outputWidth size of the key
  ActionSelector(HashAlgorithm_t algo, bit<32> size, bit<32> outputWidth);
  @ControlPlaneAPI
  {
     entry_handle add_member
                                     (action_ref, action_data);
     void
                  delete_member
                                     (entry_handle);
     entry_handle modify_member
                                     (entry_handle, action_ref, action_data);
     group_handle create_group
                                     ();
     void
                  delete_group
                                     (group_handle);
                                    (group_handle, entry_handle);
     void
                  add_to_group
     void
                  delete_from_group (group_handle, entry_handle);
  }
}
```

#### 4.12. Packet Generation

\TODO: is generating a new packet and sending it to the stream or is it adding a header to the current packet and sending it to the stream (copying or redirecting).

```
extern Digest<T> {
   Digest(PortId_t receiver); /// define a digest stream to receiver
   void emit(in T data); /// emit data into the stream

   /*
   @ControlPlaneAPI
   {
      // TBD
      // If the type T is a named struct, the name should be used
      // to generate the control-plane API.
   }
```

4.13. Parser Value Sets 4. PSA EXTERNS

```
*/
}
```

#### 4.13. Parser Value Sets

A parser value set is a named set of values that may be used during packet header parsing time to make decisions. You may use control plane API calls to add values to a set, and remove values from a set, at run time, much like P4 tables. Unlike tables, they may not have actions associated with them. They may only be used to determine whether a particular value is in the set, returning a Boolean value. That Boolean value can then be used in a select statement to control parsing (see examples below).

```
extern ValueSet<D> {
   ValueSet(int<32> size):
   bool is_member(in D data);
   /*
   @ControlPlaneAPI
   message ValueSetEntry {
       uint32 value_set_id = 1;
        // FieldMatch allows specification of exact, lpm, ternary, and
        // range matching on fields for tables, and these options are
        // permitted for the ValueSet extern as well.
        repeated FieldMatch match = 2;
   }
   // ValueSetEntry should be added to the 'message Entity'
   // definition, inside its 'oneof Entity' list of possibilities.
   */
}
```

The control plane API excerpt above is intended to be added as part of the P4Runtime API<sup>1</sup>.

The control plane API for a ValueSet is similar to that of a table, except only match fields may be specified, with no actions. This includes API calls that specify ternary or range matching, although for ValueSets these do not require specifying any priority values, since the only result of a ValueSet is\_member call is "in the set" or "not in the set".

If a PSA target can do so, it should implement control plane API calls involving ternary or range matching using ternary or range matching capabilities in the target, consuming the minimal table entries possible.

However, a PSA target is allowed to implement such control plane API calls by "expanding" them into as many exact match entries as needed to have the same behavior. For example, a control plane API call adding all values in the range 5 through 8 may be implemented as adding the four separate exact match values 5, 6, 7, and 8.

The parser definition below shows an example that uses two ValueSet instances called tpid\_types and trill\_types.

<sup>&</sup>lt;sup>1</sup>The P4Runtime API, defined as a Google Protocol Buffer .proto file, can be found at https://github.com/p4lang/PI/blob/master/proto/p4/p4runtime.proto

4.13. Parser Value Sets 4. PSA EXTERNS

```
ValueSet<bit<16>>(4) tpid_types;
    ValueSet<bit<16>>(2) trill_types;
    state start {
        buffer.extract(parsed_hdr.ethernet);
        transition select(parsed_hdr.ethernet.etherType) {
            0x0800: parse_ipv4;
            0x86DD: parse_ipv6;
            default: dispatch_tpid_value_set;
        }
    }
    state dispatch_tpid_value_set {
        bool is_tpid = tpid_types.is_member(parsed_hdr.ethernet.etherType);
        transition select(is_tpid) {
            true: parse_vlan_tag;
            default: dispatch_trill_value_set;
        }
    }
    state dispatch_trill_value_set {
        bool is_trill = trill_types.is_member(parsed_hdr.ethernet.etherType);
        transition select(is_trill) {
            true: parse_trill;
            default: accept;
        }
    }
    state parse_vlan_tag {
        // extract VLAN 802.1Q header here
        transition accept;
    }
    state parse_trill {
        // extract TRILL header here
        transition accept;
    state parse_ipv4 {
        transition accept;
    state parse_ipv6 {
        transition accept;
}
The second example (below) has the same parsing behavior as the example above, but combines the
two parse states dispatch_tpid_value_set and dispatch_trill_value_set into one.
    state dispatch_tpid_value_set {
        bool is_tpid = tpid_types.is_member(parsed_hdr.ethernet.etherType);
        bool is_trill = trill_types.is_member(parsed_hdr.ethernet.etherType);
        transition select(is_tpid, is_trill) {
                       _): parse_vlan_tag;
            (true,
            (false, true): parse_trill;
            default: accept;
        }
```

The third example (below) demonstrates one way to have a ValueSet that matches on multiple

4.14. Timestamps 4. PSA EXTERNS

fields, by making the type D a struct containing multiple bit vectors.

```
struct CustomValueSet1_t {
   bit<16> etherType;
   bit<8> partialMacAddress;
}
parser IngressParserImpl(packet_in buffer,
                         out headers parsed_hdr,
                         inout metadata user_meta,
                         in psa_ingress_parser_input_metadata_t istd,
                         out psa_parser_output_metadata_t ostd)
{
   ValueSet<CustomValueSet1_t>(2) trill_types;
   state dispatch_tpid_value_set {
       bool is_trill =
            trill_types.is_member({parsed_hdr.ethernet.etherType,
                                   parsed_hdr.ethernet.dstAddr[7:0]});
        transition select(is_trill) {
            true: parse_vlan_tag;
            default: accept;
        }
   }
   // ... etc.
```

A PSA compliant implementation is not required to support any use of a ValueSet is\_member method call return value, other than directly inside of a select expression. For example, a program fragment like the one shown below may be rejected, and thus P4 programmers striving for maximum portability should avoid writing such code.

```
bool is_tpid = tpid_types.is_member(parsed_hdr.ethernet.etherType);
is_tpid = is_tpid && (parsed_hdr.ethernet.dstAddr[47:40] == 0xfe);
transition select(is_tpid) {
    // ...
```

## 4.14. Timestamps

A PSA implementation provides an ingress\_timestamp value for every packet in the ingress control block, as a field in the struct with type psa\_ingress\_input\_metadata\_t. This timestamp should be close to the time that the first bit of the packet arrived to the device, or alternately, to the time that the device began parsing the packet. This timestamp is *not* automatically included with the packet in the egress control block. A P4 program wishing to use the value of ingress\_timestamp in egress code must copy it to a user-defined metadata field that reaches egress.

A PSA implementation also provides an egress\_timestamp value for every packet in the egress control block, as a field of the struct with type psa\_egress\_input\_metadata\_t.

One expected use case for timestamps is to store them in tables or Register instances to implement checking for timeout events for protocols, where precision on the order of milliseconds is sufficient for most protocols.

Another expected use case is INT (Inband Network Telemetry<sup>2</sup>), where precision on the order of microseconds or smaller is necessary to measure queueing latencies that differ by those amounts.

<sup>2</sup>http://p4.org/p4/inband-network-telemetry

4.14. Timestamps 4. PSA EXTERNS

It takes only 0.74 microseconds to transmit a 9 Kbyte Ethernet jumbo frame on a 100 gigabit per second link.

For these applications, it is recommended that an implementation's timestamp increments at least once every microsecond. Incrementing once per clock cycle in an ASIC or FPGA implementation would be a reasonable choice. The timestamp should increment at a constant rate over time. For example, it should not be a simple count of clock cycles in a device that implements dynamic frequency scaling<sup>3</sup>.

Timestamps are of type Timestamp\_t, which is type bit<W> for a value of W defined by the implementation. Timestamps are expected to wrap around during the normal passage of time. It is recommended that an implementation pick a rate of advance and a bit width such that wrapping around occurs at most once every hour. Making the wrap time this long (or longer) makes timestamps more useful for several use cases.

- Checking for timeouts of protocol hello / keep-alive traffic that is on the order of seconds or minutes.
- If timestamps are placed into packets without converting them to other formats, then external data analysis systems using those timestamps will in many cases need to do so, e.g. to compare timestamps stored in packets by different PSA devices. These systems will need different formulas and/or parameters to perform this conversion for each wrap period, or to add extra external time references to the recorded data. The extra data required for accurate conversion is lower, and the likelihood of conversion mistakes is lower, if the timestamp values wrap less often.
- If timestamps are converted to other formats within a P4 program, it will need access to parameters that are likely to change every wrap time, e.g. at least a "base value" to add some calculated value to. A straightforward way to do this requires the control plane to update these values at least once or twice per timestamp wrap time.
- Programs that wish to use (egress\_timestamp ingress\_timestamp) to calculate the queueing latency experienced by a packet need the wrap time to exceed the maximum queueing latency.

Examples of the number of bits required for wrap times of at least one hour:

- A 32-bit timestamp advancing by 1 per microsecond takes 1.19 hours to wrap.
- A 42-bit timestamp advancing by 1 per nanosecond takes 1.22 hours to wrap.

A PSA implementation is not required to implement time synchronization, e.g. via PTP<sup>4</sup> or NTP<sup>5</sup>. TBD: This text has been written assuming that it is more important for timestamps to be increasing at a constant rate, with no sudden "jumps" due to time synchronization events. Is this what people want from timestamps?

TBD: Some time synchronization methods avoid sudden "jumps" by temporarily speeding up or slowing down the rate of increase by a small percentage, until the desired synchronization is achieved. (TBD: which ones? citation?). Would anyone mind if PSA implementations were allowed to do this with their timestamp values?

The control plane API excerpt below is intended to be added as part of the P4Runtime API<sup>1</sup>.

```
// The TimestampInfo and Timestamp messages should be added to the
// "oneof" inside of message "Entity".

// TimestampInfo is only intended to be read. Attempts to update this
// entity have no effect, and should return an error status that the
```

<sup>3</sup>https://en.wikipedia.org/wiki/Dynamic\_frequency\_scaling

 $<sup>^{4} \</sup>verb|https://en.wikipedia.org/wiki/Precision_Time_Protocol$ 

<sup>5</sup>https://en.wikipedia.org/wiki/Network\_Time\_Protocol

<sup>&</sup>lt;sup>1</sup>The P4Runtime API, defined as a Google Protocol Buffer .proto file, can be found at https://github.com/p4lang/PI/blob/master/proto/p4/p4runtime.proto

4.14. Timestamps 4. PSA EXTERNS

```
// entity is read only.
message TimestampInfo {
  // The number of bits in the device's 'Timestamp_t' type.
  uint32 size_in_bits = 1;
  // The timestamp value of this device increments
  // 'increments_per_period' times every 'period_in_seconds' seconds.
 uint64 increments_per_period = 2;
  uint64 period_in_seconds = 3;
}
// The timestamp value can be read or written. Note that if there are
// already timestamp values stored in tables or 'Register' instances,
// they will not be updated as a result of writing this timestamp
// value. Writing the device timestamp is intended only for
// initialization and testing.
message Timestamp {
  bytes value = 1;
}
```

For every packet P that is processed by ingress and then egress, with the minimum possible latency in the packet buffer, it is guaranteed that the egress\_timestamp value for that packet will be the same as, or slightly larger than, the ingress\_timestamp value that the packet was assigned on ingress. By "slightly larger than", we mean that the difference (egress\_timestamp - ingress\_timestamp) should be a reasonably accurate estimate of this minimum possible latency through the packet buffer, perhaps truncated down to 0 if timestamps advance more slowly than this minimum latency.

Consider two packets such that at the same time (e.g. the same clock cycle), one is assigned its value of ingress\_timestamp near the time it begins parsing, and the other is assigned its value of egress\_timestamp near the time that it begins its egress processing. It is allowed that these timestamps differ by a few tens of nanoseconds (or by one "tick" of the timestamp, if one tick is larger than that time), due to practical difficulties in making them always equal.

Recall that the binary operators + and - on the bit<W> type in P4 are defined to perform wrap-around unsigned arithmetic. Thus even if a timestamp value wraps around from its maximum value back to 0, you can always calculate the number of ticks that have elapsed from timestamp t1 until timestamp t2 using the expression (t2-t1) (if more than  $2^W$  ticks have elapsed, there will be aliasing of the result). For example, if timestamps were W >= 4 bits in size,  $t1 = 2^W - 5$ , and t2 = 3, then (t2-t1) = 8.

It is sometimes useful to minimize storage costs by discarding some bits of a timestamp value in a P4 program for use cases that do not need the full wrap time or precision. For example, an application that only needs to detect protocol timeouts with an accuracy of 1 second can discard the least significant bits of a timestamp that change more often than every 1 second.

Another example is an application that needed full precision of the least significant bits of a timestamp, but the combination of the control plane and P4 program are designed to examine all entries of a Register array where these partial timestamps are stored more often than once every 5 seconds, to prevent wrapping. In that case, the P4 program could discard the most significant bits of the timestamp so that the remaining bits wrap every 8 seconds, and store those partial timestamps in the Register instance.

# 5. Programmable blocks

The following declarations provide a template for the programmable blocks in the PSA. The P4 programmer is responsible for implementing controls that match these interfaces and instantiate them in a package definition.

It uses the same user-defined metadata type IM and header type IH for all ingress parsers and control blocks. The egress parser and control blocks can use the same types for those things, or different types, as the P4 program author wishes.

```
parser IngressParser<H, M>(packet_in buffer,
                           out H parsed_hdr,
                           inout M user_meta,
                           in psa_ingress_parser_input_metadata_t istd,
                           out psa_parser_output_metadata_t ostd);
control Ingress<H, M>(inout H hdr, inout M user_meta,
                      PacketReplicationEngine pre,
                      in psa_ingress_input_metadata_t istd,
                      out psa_ingress_output_metadata_t ostd);
parser EgressParser<H, M>(packet_in buffer,
                          out H parsed_hdr,
                          inout M user_meta,
                          in psa_egress_parser_input_metadata_t istd,
                          out psa_parser_output_metadata_t ostd);
control Egress<H, M>(inout H hdr, inout M user_meta,
                     BufferingQueueingEngine bqe,
                     in psa_egress_input_metadata_t istd,
                     out psa_egress_output_metadata_t ostd);
control ComputeChecksum<H, M>(inout H hdr, inout M user_meta);
control Deparser<H>(packet_out buffer, in H hdr);
package PSA_Switch<IH, IM, EH, EM>(IngressParser<IH, IM> ip,
                                   Ingress<IH, IM> ig,
                                   ComputeChecksum<IH, IM> ic,
                                   Deparser<IH> id,
                                   EgressParser<EH, EM> ep,
                                   Egress<EH, EM> eg,
                                   ComputeChecksum<EH, EM> ec,
                                   Deparser<EH> ed);
```