

SystemVerilog Verification UVM Workshop

Lab Guide

40-I-055-SLG-007 2019.06

Synopsys Customer Education Services 690 E. Middlefield Road Mountain View, California 94043

Workshop Registration: https://training.synopsys.com

Copyright Notice and Proprietary Information

© 2019 Synopsys, Inc. All rights reserved. This software and documentation contain confidential and proprietary information that is the property of Synopsys, Inc. The software and documentation are furnished under a license agreement and may be used or copied only in accordance with the terms of the license agreement. No part of the software and documentation may be reproduced, transmitted, or translated, in any form or by any means, electronic, mechanical, manual, optical, or otherwise, without prior written permission of Synopsys, Inc., or as expressly provided by the license agreement.

Destination Control Statement

All technical data contained in this publication is subject to the export control laws of the United States of America. Disclosure to nationals of other countries contrary to United States law is prohibited. It is the reader's responsibility to determine the applicable regulations and to comply with them.

Disclaimer

SYNOPSYS, INC., AND ITS LICENSORS MAKE NO WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, WITH REGARD TO THIS MATERIAL, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

Trademarks

Synopsys and certain Synopsys product names are trademarks of Synopsys, as set forth at http://www.synopsys.com/Company/Pages/Trademarks.aspx.

All other product or company names may be trademarks of their respective owners.

Third-Party Links

Any links to third-party websites included in this document are for your convenience only. Synopsys does not endorse and is not responsible for such websites and their practices, including privacy practices, availability, and content.

Synopsys, Inc. 690 E. Middlefield Road Mountain View, CA 94043 www.synopsys.com

Document Order Number: 40-I-055-SLG-007 SystemVerilog Verification UVM Workshop Lab Guide 1

UVM Test & Messages

Learning Objectives

After completing this lab, you should be able to:

- Create a simple UVM test
- Embed report messages
- Compile the test
- Run the simulation and observe results
- Add environment to test
- Compile and run simulation to observe results



Lab Duration: 45 minutes

Getting Started

UVM consists of a set of coding guidelines with a set of base classes and macros. The set of base classes and macros assist you in developing testbenches that are consistent in look and feel. The set of coding guidelines enable you to develop testbench components which are robust and highly re-usable. As a result, you will spend less time modifying, maintaining the verification infrastructure and more time verifying your designs.

In this first lab, you will start the process of build a UVM verification environment using the UVM base classes and macros following the UVM coding guidelines:

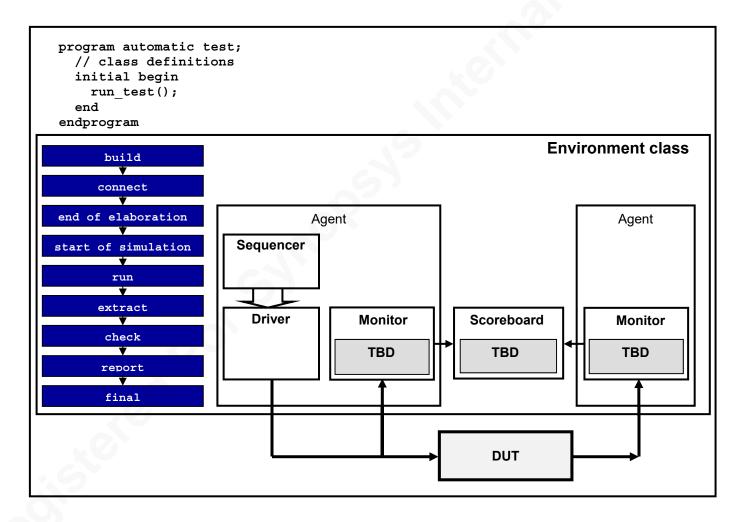


Figure 1. Lab 1 Testbench Architecture

Lab Overview

After you log in, you will see three directories: labs, solutions and rtl.

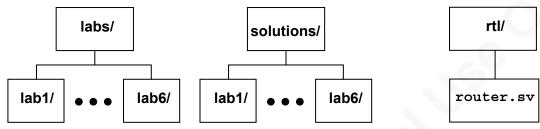


Figure 2. Lab Directory Structure

For each individual lab, you will work in the specified lab directory. Should you have a question during the lab and want to know what the potential solution is, you can flip through to end of the lab to find solution code.

The work flow for this lab is illustrated as follows.

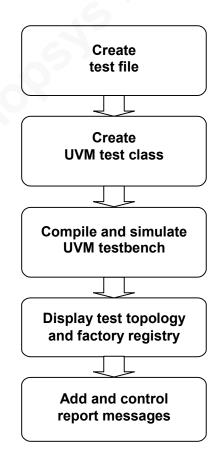


Figure 3. Lab 1 Flow Diagram

Building a UVM Testbench

Task 1. Create a Simple Test

For this first task, you will create a simple test and a program block to execute this simple test. Use the lecture material as your reference.

1. Go into lab1 directory:

```
> cd labs/lab1
```

Every test in Verilog has an entry point. This is done in an initial block.

The initial block can be coded inside either a program or a module. Executing testbench code in program block will ensure better protection against race conditions than executing the code in module. For this reason, in the labs, we are going to run the testbench code in a program.

Inside the **program** block, the **import uvm_pkg::*;** statement enables access to all the UVM features. The three most important elements of the **uvm_pkg** are:

```
1 - the UVM execution manager (accessed via uvm_root::get())
2 - the UVM factory (accessed via uvm_factory::get())
3 - the UVM configuration database (uvm config db).
```

To start UVM execution, you must start the UVM execution manager by calling the run test() method in an intial block.

- 2. Open a new file, call it test.sv
- **3.** Enter the following test code:

```
program automatic test;
import uvm_pkg::*;
initial begin
   $timeformat(-9, 1, "ns", 10); // Format Verilog time
   run_test();
end
endprogram
```

4. Compile this simple UVM testbench using vcs:

```
> vcs -sverilog -ntb opts uvm-1.2 test.sv
```

The -sverilog switch enables VCS to recognize SystemVerilog code. The -ntb_opts uvm-1.2 switch enables VCS to look for the uvm_pkg in the VCS installation directory. The test.sv file is the file that you just created.

5. Simulate this UVM testbench and store the output in simv.log file:

```
> simv -l simv.log
```

You should see the following fatal error:

```
UVM_FATAL @ 0.0ns: reporter [NOCOMP] No components instantiated. You
must either instantiate at least one component before calling run_test
or use run_test to do so. To run a test using run_test, use
+UVM_TESTNAME or supply the test name in the argument to run_test().
Exiting simulation.
...
--- UVM Report Summary ---

** Report counts by severity
UVM_INFO: 1
UVM_WARNING: 0
UVM_ERROR: 0
UVM_FATAL: 1

** Report counts by id
[NOCOMP] 1
[UVM/RELNOTES] 1
```

There are two reason for this fatal error:

First, you don't have any UVM test class.

Second, even if you had a UVM test class, you did not specify the test to be executed via the **+UVM_TESTNAME** switch.

You will correct this by creating the test class first.

6. Open a new file, call it test collection.sv. Enter the following code:

```
class test_base extends uvm_test;
    `uvm_component_utils(test_base)
    function new(string name, uvm_component parent);
      super.new(name, parent);
    endfunction
endclass
```

Some explanations are needed for this code.

The test class (test_base) is created by extending from the uvm_test base class.

```
class test_base extends uvm_test;
...
endclass
```

As was mentioned earlier, there are three key elements of the UVM package that you must understand and apply them to your UVM testbench.

One of them is the UVM factory.

Every UVM class that you create must be registered into this UVM factory. The UVM package provides a macro to simplify this process. The macro for a component class is: `uvm_component_utils. The name that you enter into the argument of the macro must match the class name:

You will see the effects and benefits of registering user classes into the UVM factory in the next lab (lab2). For now, consider this as a requirement.

```
class test_base extends uvm_test;
   `uvm_component_utils(test_base)
```

Once you register a class into the UVM factory, you will use the UVM factory to construct UVM testbench objects. The UVM factory requires that you define the constructor **new()** for component classes in a very specific way:

```
function new(string name, uvm_component parent);
  super.new(name, parent);
endfunction
```

There must only be two arguments to the constructor — a **string** field for the instance name of the object and a **uvm_component** field for the object's structural parent. These two fields must be passed on to the base class via the **super.new()** call. Again, this is a requirement that you must obey in order to use the UVM factory.

7. Save and close the file.

Once you have the test class defined, you will need to include this file to be compiled as part of your test.sv code. (A better alternative is to embed the code inside a SystemVerilog package, then import the package into the program file. This will be done for you in subsequent labs.)

8. Open the **test.sv** file in an editor.

9. Add the following include statement:

```
program automatic test;
import uvm_pkg::*;
include "test_collection.sv"
initial begin
   ...
end
endprogram
```

Compile and simulate this code again. This time, use the **+UVM_TESTNAME** switch to specify the test for the UVM execution manager (one of the three key elements of the UVM package) to run.

10. Compile & simulate:

```
> vcs -sverilog -ntb_opts uvm-1.2 test.sv
> simv -l simv.log +UVM TESTNAME=test base
```

At the end of simulation, you should see something like the following:

```
UVM_INFO @ 0.0ns: reporter [RNTST] Running test test_base...
--- UVM Report Summary ---
** Report counts by severity

UVM_INFO : 2

UVM_WARNING : 0

UVM_ERROR : 0

UVM_FATAL : 0
```

Before proceeding, let's make sure you understand what's happening here.

Question 1.	Which one of the three key UVM elements of the UVM package is responsible for reading the +UVM_TESTNAME switch?
Question 2.	What code in the test.sv file caused this key element to run and look at the +UVM_TESTNAME switch?
Question 3.	How does this key element make use of the test class name provided via the +UVM_TESTNAME switch?

The object in UVM that reads the **+UVM_TESTNME** switch is the UVM execution manager (**uvm_root**) which you started via **run_test()**. It makes use of the UVM factory to create the top test object from the class name provided.

This top test object is called uvm_test_top. The uvm_test_top object sits at the top of the entire UVM test hierarchy. It is the root parent of all your UVM test components.


Since the UVM execution manager is the creator of the test object, it is also aware of the entire UVM component structural hierarchy from test on down.

The UVM execution manager is a singleton object of the uvm_root class. You can retrieve the handle to this manger by calling uvm_root::get(). You can use this handle to print the test structural topology.

- 11. Open the test_collection.sv file in an editor.
- 12. Add the following start of simulation phase method to the test_base class:

```
class test_base extends uvm_test;
   `uvm_component_utils(test_base)
   function new(string name, uvm_component parent);
    super.new(name, parent);
   endfunction
   virtual function void start_of_simulation_phase(uvm_phase phase);
    super.start_of_simulation_phase(phase);
    uvm_root::get().print_topology();
   endfunction
endclass
```

13. Compile & simulate this code (a Makefile is provided to simply typing):

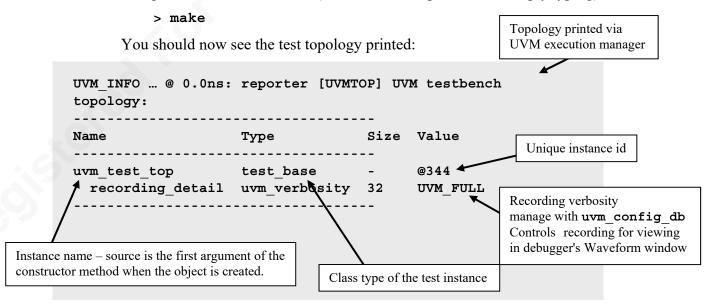

At this point, you only have the test_base class object called uvm test top. So, that's all you see.

As your test bench becomes more complex, you will find this set of information to be very helpful during debugging sessions.

It is also useful for debugging to see all the user classes registered in the UVM factory. You can get this information by doing the following steps.

- 14. Open the test collection.sv file in an editor.
- **15.** Add a statement to print factory registry:


```
virtual function void start_of_simulation_phase(uvm_phase phase);
super.start_of_simulation_phase(phase);
uvm_root::get().print_topology();
uvm_factory::get().print();
endfunction

uvm_factory::get() returns the handle
to the UVM factory singleton object. Calling
the print() method of the singleton object
displays the user registered classes.
```

16. Compile & simulate:

> make

You should now see the factory registry content:

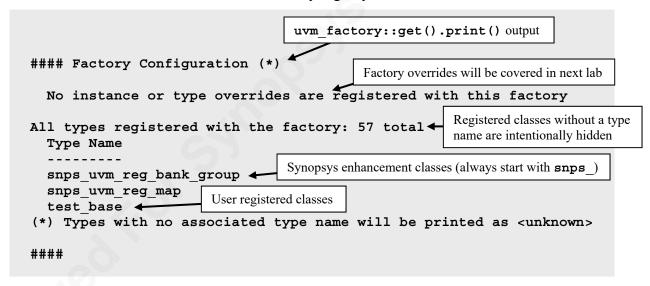

Task 2. Debugging Essentials

One common problem encountered when running a test is hung simulation. Simulation starts then hangs at some point during simulation. The cause is usually due to a zero-time infinite loop or a broken (unconnected) communication link or a dead locked code.

To debug this, it is helpful to find out at what point did the simulation hang and how did the simulation get to that point. You can embed a trace statement as the first executeable statement (after calling the super method) of a method to enable this.

- 1. Open the test collection.sv file with an editor
- **2.** Add the following UVM report messages:

```
class test_base extends uvm_test;
   `uvm_component_utils(test_base)
function new(string name, uvm_component parent);
   super.new(name, parent);
   `uvm_info("TRACE", $sformatf("%m"), UVM_HIGH);
endfunction
virtual function void start_of_simulation_phase(uvm_phase phase);
   super.start_of_simulation_phase(phase);
   `uvm_info("TRACE", $sformatf("%m"), UVM_HIGH);
   uvm_root::get().print_topology();
   uvm_factory::get().print();
endfunction
endclass
```

In the UVM report message macro, the first argument is the **ID** of the message. Choose it carefully by picking a brief name that is likely to be unique. It will be very useful when you need to control the report messages to display. In this code, we want to clearly show that the message is intended for tracing the execution of all user methods. Thus, the **ID** is set to **TRACE**.

It is helpful in debugging to know the method name and the file context. The second argument, \$sformatf("%m"), will give you this information.

The third argument of the report message macro is the verbosity of the message. By setting it to UVM_HIGH, this message will be filtered out in normal execution (only UVM_NONE, UVM_LOW and UVM_MEDIUM messages are displayed by default). But, you will be able to enable the message via a run-time switch during debugging sessions.

3. Compile & simulate this code

> make

You should see the same display as before. None of the added **TRACE** report messages are displayed.

4. Run the simulation with verbosity set to **UVM HIGH**:

> make verbosity=UVM HIGH


This sets the run-time switch **+UVM VERBOSITY=UVM HIGH**.

Do you see the messages? Hard to read?

5. Try this:

> grep TRACE simv.log

Now, you can clearly see that the only thing that happened during this test run was that the test_base instance uvm_test_top was constructed and its start_of_simulation_phase method was executed afterwards.

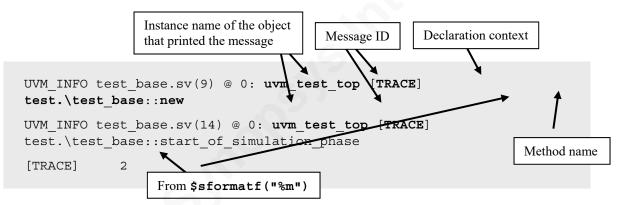

There are other ways you can make use of the ID field.

You may want to turn on **TRACE** report messages without affecting other report messages. This can be done via the **+uvm** set **verbosity** switch.

6. Run and save the simulation log:

> make verbosity=UVM DEBUG log=simv.log.debug

Look at the simulation result in the **simv.log.debug** file. You will see that every report message is captured. This, in a typical debugging session, will overwhelm you with too much data. Debugging then becomes very difficult.

You can use the **+uvm_set_verbosity** switch to apply the verbosity to only the area of debugging that you are interested in.

7. Run the simulation with verbosity set to **UVM DEBUG** only for the **TRACE** id:

> make plus=uvm set verbosity=*,TRACE,UVM DEBUG,time,0

Note: plus is the mechanism built into the Makefile to allow the user to specify any run-time switches.

8. Compare the two simulation results:

```
> tkdiff simv.log.debug simv.log
```

By using the uvm_set_verbosity switch and selecting the ID to display, you can control and manage the UVM report messages without being overwhelmed.

Recall these statements in the start_of_simulation_phase method:

```
uvm_root::get().print_topology();
uvm_factory::get().print();
```

You may want to control these two print statements also. Unfortunately, these print statements are not easily filtered out.

What you can do, though, is to wrap the code you want to control around a user created report message.

- 9. Open the test collection.sv file with an editor
- 10. Wrap the print statements as user defined UVM report messages:

```
class test base extends uvm test;
  `uvm component utils(test base)
  function new(string name, uvm component parent);
    super.new(name, parent);
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
 endfunction
 virtual function void start of simulation phase (uvm phase phase);
    super.start of simulation phase(phase);
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
   if (uvm report enabled(UVM MEDIUM, UVM INFO, "TOPOLOGY")) begin
      uvm root::get().print topology();
    end
   if (uvm report enabled(UVM MEDIUM, UVM INFO, "FACTORY")) begin
      uvm factory::get().print();
    end
  endfunction
endclass
```

11. Compile & simulate the modified code:

```
> make
```

Again, you should see the same display as before. The topology and the factory registry are printed. The **TRACE** report messages are not displayed.

12. Simulate with **TOPOLOGY** verbosity at **UVM_NONE** everything else at **UVM HIGH**

```
> make verbosity=UVM_HIGH
plus=uvm set verbosity=\*,TOPOLOGY,UVM NONE,time,0
```

Now, the **TOPOLOGY** message is filtered out, but you see everything else at the **UVM HIGH** verbosity.

The impact of filtering will be much more obvious when you deal with a real testbench.

Task 3. Add in an Environment

An environment with an agent which contains a sequencer and driver has been created for you. These classes are the same as shown in the lecture.

1. Bring in the environment and transaction files

```
> make environment
```

Add these to the test.sv file.

- 2. Open the test.sv file with an editor
- **3.** Add the following include statements (must be in the order shown!)

```
program automatic test;
import uvm_pkg::*;

include "packet.sv"

include "driver.sv"

include "input_agent.sv"

include "router_env.sv"

include "test_collection.sv"
```


- 4. Open the test collection.sv file with an editor
- 5. Instantiate and construct an environment object in the test class:

```
class test_base extends uvm_test;
  // Other code not shown
  router_env env;
  virtual function void build_phase(uvm_phase phase);
    super.build_phase(phase);
    `uvm_info("TRACE", $sformatf("%m"), UVM_HIGH);
    env = router_env::type_id::create("env", this);
  endfunction
    Use factory to create object
```

6. Compile and simulate this simple UVM testbench:

> make

You should see a fuller topology and the factory content. (You will see recording_details in additional to what's shown below)

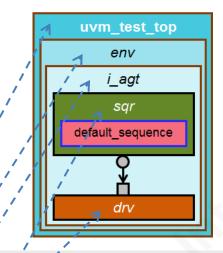

```
UVM_INFO @ 0.0ns: reporter [UVMTOP] UVM testbench topology:
Name
                                                 Size Value
uvm test top
                          test base
                                                       @344
 env
                        router env
                                                     @356
                                                     @364
    i_agt
                        input_agent
     drv /
                                                     @496
                         driver
                        uvm_analysis_port
       rsp/ port
       seq_item_port
                       uvm_seq_item_pull_port -
                                                       @504
                        uvm sequencer
                                                       @373
       rsp_export
                        uvm_analysis export
                                                       @381
       seq_item_export uvm_seq_item_pull_imp
                                                       @487
       arbitration_queue array
                                                 0
       lock queue
                          array
       num last reqs
                                                       'd1
                         integral
       num_last_reqs integral num_last_rsps integral
                                                       'd1
#### Factory Configuration (*)
 No instance or type overrides are registered with this
factory
All types registered with the factory: 58 total
  Type Name
 driver
  input agent
 router env
  snps_uvm_reg_bank_group
  snps uvm reg map
  test base
```

7. Simulate with **TOPOLOGY** verbosity set to **UVM_NONE** everything else to **UVM HIGH**

```
> make verbosity=UVM_HIGH
plus=uvm set verbosity=\*,TOPOLOGY,UVM NONE,time,0
```

You can begin to see the impact of the UVM report message filtering.

UVM provides you with a great deal of control over what report messages to generate. Choose the report message IDs carefully. They can become very handy during debugging.

Task 4. Creating User Packages

(The following is information only. No action is required.)

To enable better management of class names and compiled binaries, it is highly useful to include these class codes inside SystemVerilog packages.

For the subsequent labs, the files you have been working with will be moved inside packages. This will be done for you.

Be aware that package coding guidelines vary from company to company and project to project. It is highly recommended that once you return back to your home environment, consult your project manager and include your class code inside packages as directed by the project and company coding guidelines.

You are done with Lab 1!

Answers / Solutions

test.sv Solution:

```
program automatic test;
import uvm_pkg::*;
include "packet.sv"
include "driver.sv"
include "input_agent.sv"
include "router_env.sv"
include "test_collection.sv"
initial begin
   $timeformat(-9, 1, "ns", 10);
   run_test();
end
endprogram
```

test collection.sv Solution:

```
class test base extends uvm test;
  `uvm component utils(test base)
 router env env;
  function new(string name, uvm component parent);
    super.new(name, parent);
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
  endfunction
 virtual function void build phase (uvm phase phase);
    super.build phase(phase);
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
    env = router env::type id::create("env", this);
  endfunction
 virtual function void start of simulation phase (uvm phase phase);
    super.start_of_simulation phase(phase);
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
    if (uvm report enabled(UVM MEDIUM, UVM INFO, "TOPOLOGY")) begin
     uvm root::get().print topology();
    if (uvm report enabled(UVM MEDIUM, UVM INFO, "FACTORY")) begin
      uvm factory::get().print();
  endfunction
endclass
```

2

Stimulus Generation

Learning Objectives

After completing this lab, you should be able to:

- Create a UVM transaction class
- Generate UVM transaction objects in a sequence
- Configure the sequencer to execute the sequence in a desired phase
- Override existing transaction objects in environment with modified transaction class objects



Lab Duration: 30 minutes

Getting Started

In Lab 1, you wrote a simple UVM test. But, it didn't do anything. You can experiment with the debugging switches, but nothing more.

In this lab, you will develop a transaction class and a sequence class so that the embedded environment can generate and process transaction objects.

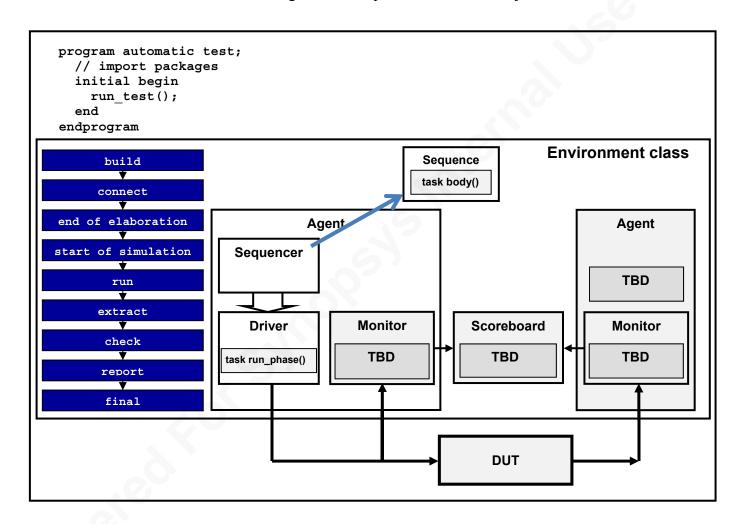


Figure 1. Lab 2 Testbench Architecture

Lab Overview

The work flow for this lab is illustrated as follows.

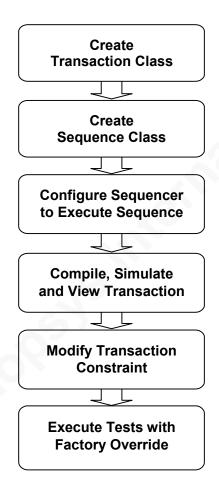


Figure 2. Lab 2 Flow Diagram

Generating UVM Transactions

Task 1. Go into lab2 Working Directory


1. CD into the lab2 directory

> cd ../lab2

Task 2. Review the Simple UVM Environment

In the previous lab, you constructed an environment in the test class.

This environment consists of a basic UVM component structure: environment (router_env), agent (input_agent), driver (driver) and sequencer (uvm sequencer).

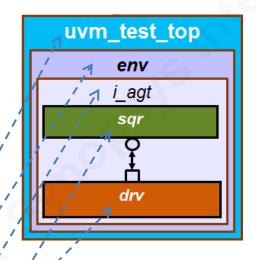

```
UVM INFO @ 10.0 ms: reporter [UVMTOP] UVM testbench topology:
                                                        Size Value
uvm test top
                            test base
                                                              @457
                            router env
    i_agt
                            input agent
                                                              @473
                            driver
                                                              @608
        rsp_port uvm_analysis_port -
seq_item_port uvm_seq_item_pull_port -
                                                              @625
                            uvm sequencer
                                                              @485
        rsp_export uvm_analysis_export seq_item_export uvm_seq_item_pull_imp
                                                              @493
                                                              @599
        arbitration queue array
                                                        0
        lock queue
                             array
        num_last_reqs
                                                       32
                                                               'd1
                             integral
        num last rsps
                             integral
```

Task 3. Review Class Organization

Also, in the previous lab, all the class files were included into the program block.

```
program automatic test;
import uvm_pkg::*;
  `include "packet.sv"
  `include "driver.sv"
  `include "input_agent.sv"
  `include "router_env.sv"
  `include "test_collection.sv"
initial begin
    $timeformat(-9, 1, "ns", 10);
    run_test();
end
endprogram
```

This is not an efficient way to manage class files. One downside of this type of implementation is that the test.sv file would need to be modified whenever a new test file is created. That's impractical and sometimes impossible.

A better way to manage these files is to organize them as packages. This is done for you. For the labs, you will be making use of three packages located in the packages directory: router_stimulus_pkg, router_env_pkg and router_test_pkg.

The router_stimulus_pkg contains the base transaction class.

```
package router_stimulus_pkg;
import uvm_pkg::*;
include "packet.sv"
endpackage
```

The router env pkg contains the structural component classes.

```
package router_env_pkg;
import uvm_pkg::*;
import router_stimulus_pkg::*;
`include "driver.sv"
`include "input_agent.sv"
`include "router_env.sv"
endpackage
```

The router_test_pkg contains the test specific classes.

```
package router_test_pkg;
import uvm_pkg::*;
import router_stimulus_pkg::*;
import router_env_pkg::*;
`include "test_collection.sv"
endpackage
```

Once the files are organized this way, you will find your management of files becomes easier. If you also make use of partition compile in **vcs**, it can also reduce your compilation time.

Task 4. Update Program Block

With the packages provided, you will no longer need to include the class files into the program block.

- 1. Open the test.sv file with an editor.
- 2. Replace the include statements with import of the router_test_pkg


The Makefile has been updated to make use of the packages.

3. Compile and run simulation.

> make

You should see the same result as the previous lab. The reorganization of class files does not change the behavior of the test.

In the execution of the test, no stimulus was generated. You need a transaction class (packet) and a sequence class (packet_sequence) that constructs and randomizes the transaction objects. Then, configure the sequencer to execute the sequence in a desired phase so that transaction objects created in the sequence can be passed on to the driver in the desired task phase.

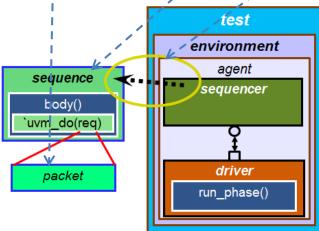

Task 5. Register the Packet Class into Factory

1. Open the packet.sv file with an editor.

packet


- 2. Look for: "// Lab 2: Task 5, Step 2" and enter the following:
 - Register the class into the UVM factory
 - Enable all fields to be processed (except the sa field, see comment)
- Look for: "// Lab 2: Task 5, Step 3"
 - Define the constructor method

Note: There is a major difference between transaction class constructor and component class constructor. In transaction class constructor, there is no parent component handle in the argument list.

4. Save and close the file

Task 6. Generate Stimulus Transaction

- 1. Open the packet_sequence.sv file with an editor
- Look for: "// Lab 2: Task 6, Step 2"
 - You are required to parameterize the sequence class with the sequence_item class that the sequence is designed to generate for the driver to process.

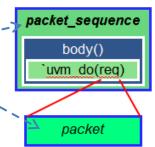

When implementing the sequence class, one must define the **body** () task in which stimulus are generated.

- Look for: "// Lab 2: Task 6, Step 3"
 - Create the **body** () method as described in the comment

One BIG caution before leaving the sequence class – UVM-1.2 was released on June 24, 2014. Unfortunately, some of the mechanisms implemented in UVM-1.1 have been deprecated and will not compile with UVM-1.2. One of these is the objection mechanism in sequence classes. Please read the comments as directed by the following two Steps.

- 4. Locate the constructor **new()** method and read the comments in the method.
- 5. Locate the pre_start() and post_start() methods and read the comments.


Please make sure you understand what's going with the objection handling. This will save you a lot of headaches later.

6. Save and close the file.

Task 7. Configure Sequencer to execute Sequence

With the packet and the packet_sequence classes completed, you now have the mechanism for generating stimulus in UVM. The last step in this process is to configure the sequencer to execute the sequence.

- 1. Open the router env.sv file with an editor
- 2. Look for "// Lab 2: Task 7, Step 2"
 - Set the i_agt's sequencer (sqr) to execute packet_sequence as the default sequence in the main phase

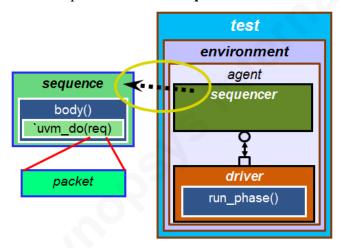

3. Save and close the file

Task 8. Include Sequence Class in Stimulus Package


The sequence class needs to be compiled. The proper place for this is as part of the stimulus package.

- 1. Open packages/router_stimulus_pkg.sv file with an editor
- 2. Add an include statement for the packet sequence.sv file
- 3. Save and close the file
- 4. Use **make** to compile and run simulation.
 - > make
- **5.** Take a look at the simulation result:
 - > less simv.log

You should see that ten packets were printed. You are now able to generate stimulus for the driver to process.

Task 9. Execute Tests with Override

The goal of UVM is to simplify the development and execution of individual tests. One way to achieve this goal in UVM is to make use of the factory override feature.

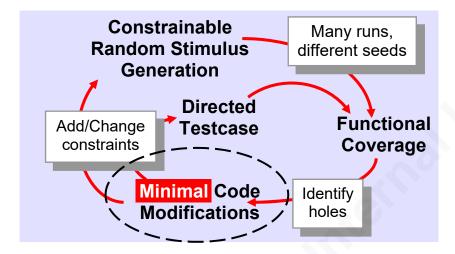

In this task, you will constrain the destination address (da) for the test to 3.

- 1. Open the packet da 3.sv file in an editor
- 2. Look for the ToDo comments and write a constraint to set destination address (da) to 3
- 3. Save and close the file

Task 10. Include Class in Stimulus Package

- 1. Open packages/router stimulus pkg.sv file with an editor
- 2. Add an include statement for the packet da 3.sv file
- 3. Save and close the file

Task 11. Create a Test to Use the Modified Packet Class

- 1. Open test collection.sv file in an editor
- Look for "// Lab 2: Task 11, Step 2"
- 3. Use instance override to configure the sequence to use packet_da_3 instead of packet
- **4.** Save and close the file

Task 12. Compile And Simulate with New Test

- 1. Compile and simulate the testbench
 - > make test=test da 3 inst
- 2. Check to see that the destination address for thes packets are all 3
 - > grep -w da simv.log
- 3. Check to see that the **Factory Configuration** report displays the **Instance**Overrides correctly
 - > less simv.log
- **4.** Constrast it with running the fully randomized test:
 - > make

Task 13. Execute Override with run-time Switch

For the factory override, you actually don't need to write a test. You can do the same thing with a run-time switch.

- 1. Try instance override (you should type out the full path instead of wildcard):
 - > make plus=uvm_set_inst_override=packet,packet_da_3,*.req
- **2.** Try type override (no path required)
 - > make plus=uvm_set_type_override=packet,packet_da_3

So long as you have a path to an object creation, you can override any of the classes that you registered into the factory. For the user, it means that once you have created all the classes that you need, you will not need to write another test or re-compile. You can use the run-time switches to pick and choose the overrides to accomplish what you want to test.

You are done with Lab 2!

Answers / Solutions

test collection.sv Solution:

```
class test base extends uvm test;
  `uvm component utils(test base)
  router env env;
  function new(string name, uvm component parent);
    super.new(name, parent);
    `uvm_info("TRACE", $sformatf("%m"), UVM HIGH);
  endfunction: new
  virtual function void build_phase(uvm_phase phase);
    super.build phase(phase);
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
    env = router env::type id::create("env", this);
  endfunction: build phase
  virtual function void final phase (uvm phase phase);
    super.final phase(phase);
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
    if (uvm report enabled(UVM MEDIUM, UVM INFO, "TOPOLOGY")) begin
     uvm root::get().print topology();
    end
    if (uvm report enabled(UVM MEDIUM, UVM INFO, "FACTORY")) begin
     uvm factory::get().print();
    end
  endfunction: final phase
endclass: test base
class test da 3 inst extends test base;
  `uvm component utils(test da 3 inst)
  function new(string name, uvm component parent);
    super.new(name, parent);
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
  endfunction
  virtual function void build phase (uvm phase phase);
    super.build phase(phase);
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
    set inst override by type("env.i agt.sqr.packet sequence.req",
packet::get type(), packet da 3::get type());
 endfunction
endclass
```

packet.sv Solution:

```
class packet extends uvm_sequence_item;
  rand bit [3:0] sa, da;
  rand bit [7:0] payload[$];
    `uvm_object_utils_begin(packet)
       `uvm_field_int(sa, UVM_ALL_ON) | UVM_NOCOMPARE)
       `uvm_field_int(da, UVM_ALL_ON)
       `uvm_field_queue_int(payload, UVM_ALL_ON)
       `uvm_object_utils_end
       constraint valid {
       payload.size inside {[1:10]};
    }
    function new(string name = "packet");
       super.new(name);
       `uvm_info("TRACE", $sformatf("%m"), UVM_HIGH);
       endfunction: new
endclass: packet
```

router env.sv Solution:

```
class router_env extends uvm_env;
   `uvm_component_utils(router_env)

input_agent i_agt;

function new(string name, uvm_component parent);
   super.new(name, parent);
   `uvm_info("TRACE", $sformatf("%m"), UVM_HIGH);
   endfunction: new

virtual function void build_phase(uvm_phase phase);
   super.build_phase(phase);
   `uvm_info("TRACE", $sformatf("%m"), UVM_HIGH);

   i_agt = input_agent::type_id::create("i_agt", this);

   uvm_config_db #(uvm_object_wrapper)::set(this, "i_agt.sqr.main_phase",
   "default_sequence", packet_sequence::get_type());
   endfunction: build_phase
endclass: router_env
```

packet sequence.sv Solution:

```
class packet sequence extends uvm sequence #(packet);
  `uvm object utils(packet sequence)
 function new(string name = "packet sequence");
    super.new(name);
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
    `ifndef UVM VERSION 1 1
     set automatic phase objection(1);
    `endif
 endfunction: new
 virtual task body();
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
   repeat (10) begin
      `uvm do(req);
 endtask: body
  `ifdef UVM VERSION 1 1
 virtual task pre start();
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
   if ((get_parent_sequence() == null) && (starting_phase != null)) begin
     starting phase.raise objection(this);
    end
 endtask: pre start
 virtual task post start();
    `uvm info("TRACE", $sformatf("%m"), UVM_HIGH);
   if ((get parent sequence() == null) && (starting phase != null)) begin
     starting phase.drop objection(this);
    end
 endtask: post start
  `endif
endclass: packet sequence
```

3

Component Configuration

Learning Objectives

After completing this lab, you should be able to:


- Add DUT virtual interfaces to driver
- Add configuration fields to driver
- Add physical device drivers to driver
- Add DUT virtual interfaces to reset sequence
- Add physical device drivers to reset sequence
- Compile and simulate



Lab Duration: 60 minutes

Getting Started

In Lab 2, you were able to generate stimulus. In this lab, you will add physical interface to the driver and drive the stimulus through the DUT.

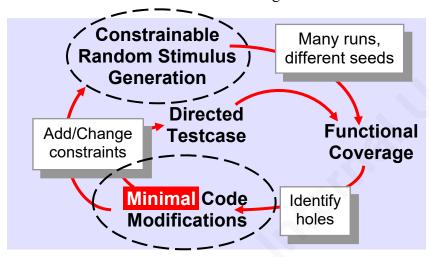

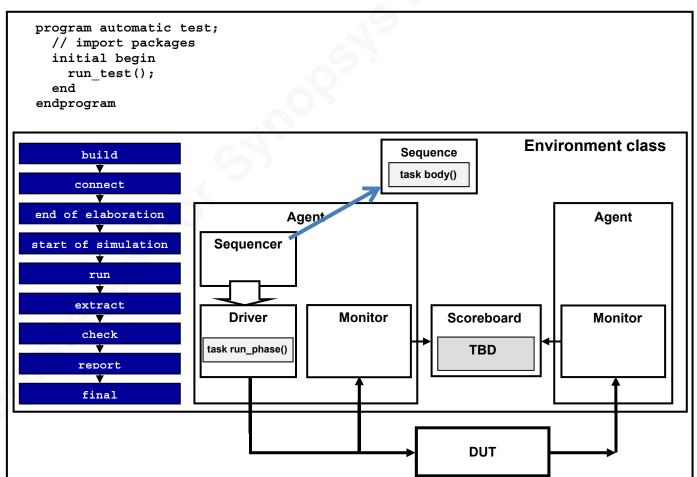


Figure 1. Lab 3 Testbench Architecture

Lab Overview

The work flow for this lab is illustrated as follows:

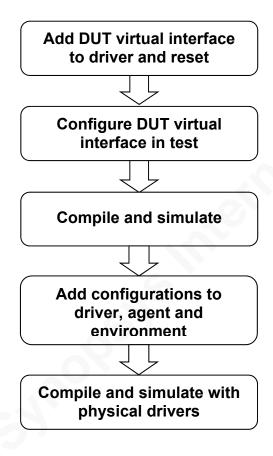


Figure 2. Lab 3 Flow Diagram

Implement Configurable Environment

Up to this point, you have not driven any test stimulus through the DUT. In order to do this, you need to embed and configure DUT virtual interfaces in physical drivers and implement the device driver code.

In this lab, you will add the DUT virtual interface and other configuration fields to the driver, reset sequence, agent and environment. The device driver code will be written for you.

Task 1. Go into lab3 Working Directory

1. CD into the lab3 directory

```
> cd ../lab3
```

Task 2. Add Interface and Configuration to Driver

- 1. Open driver.sv file in an editor
- 2. Create a DUT virtual interface (router io) handle, call it vif:

```
class driver extends uvm_driver #(packet);
  virtual router_io vif;
```

3. Add the ability to designate the driver to only drive a chosen port with an int property called port id with the default value of -1:

```
int port_id = -1;
```

This port_id is meant to configure the driver to only drive packets of matching source address (sa). If the incoming packet's sa does not match the driver's port_id, that packet will be dropped.

If port_id is not set (-1), the driver will accept and drive all incoming packets. For this lab, you will leave the port_id at the default value of -1. In the next lab, you will make use of the port_id.

4. Add port_id field to uvm_component_utils:

Notice that the virtual interface handle (vif) is not added to the uvm_component_utils macro list. This is because there is no support in the uvm component utils macro to accommodate virtual interfaces.

5. Add the following code to retrieve the virtual interface in build phase:

```
virtual function void build_phase(uvm_phase phase);
super.build_phase(phase);
`uvm_info("TRACE", $sformatf("%m"), UVM_HIGH);
uvm_config_db#(virtual router_io)::get(this, "", "vif", vif);
endfunction
Retrieve DUT virtual interface
and store handle in vif

vif();
```

Notice that the above code does not manually retrieve **port_id** field from the config_db. The reason is that properties listed via the **`uvm_field** macro is automatically retrieved from the config_db in the build phase of the base class. So, there is no need to retrieve the field manually.

6. Check the configuration properties in end_of_elaboration phase:

```
virtual function void end_of_elaboration_phase(uvm_phase phase);
super.end_of_elaboration_phase(phase);
if (!(port_id inside {-1, [0:15]})) begin
    `uvm_fatal("CFGERR", $sformatf("port_id must be {-1, [0:15]}, not %0d!",port_id));
end
if (vif == null) begin
    `uvm_fatal("CFGERR", "Interface for Driver not set");
end
endfunction
```

7. Locate the run phase () method and add the following:

Drive packet only if port_id matches req.sa or is -1

Check port_id to see if the driver should accept or drop the packet. If port_id is -1, or if port_id matches req object's sa field, call send() method to drive the content of the req object through the DUT. Otherwise, drop the req object without processing.

```
sif (port_id inside { -1, req.sa }) begin
    send(req);
    `uvm_info("DRV_RUN", {"\n", req.sprint()}, UVM_MEDIUM);
end
seq_item_port.item_done();
```

To save lab time, the **start_of_simulation_phase()** method and the physical device driver methods are done for you.

8. Save and close the file

Task 3. Agent Configuration

The agent contains the sequencer, driver and monitor. The agent should be treated by the higher layer structural components (environement, test) as a black box. This means that configuration of the sequencer, driver and monitors inside the agent should be done by the agent. The higher structural components should configure only the agent, not the individual components within the agent. The agent would then configure its own children components.

Since the configuration calls are the same as what you have already done, there is no learning point in going through a typing exercise to enter the code in the agent. All the configuration code have been done for you in input agent.sv.

Take a look at the code if you are interested. Otherwise, continue to the next task.

Task 4. Compile and Simulate

1. Compile and simulate the testbench

> make

You should see the following fatal error:

```
UVM_INFO @ 0.0ns: reporter [RNTST] Running test test_base...

UVM_FATAL driver.sv(94) @ 0.0ns: uvm_test_top.env.i_agt.drv

[CFGERR] Interface for Driver not set
--- UVM Report Summary ---
** Report counts by severity

UVM_INFO: 1

UVM_WARNING: 0

UVM_ERROR: 0

UVM_FATAL: 1
```

Even though the DUT virtual interface was added in the driver, you have not yet configured it in the test. This is a fatal error that you must correct.

Task 5. Store Interfaces in Resource Database

The interfaces of the DUT are static, the proper place to store the handles to these interfaces into the resource database is the **program/module** where **run_test()** is called. There are two interfaces that the test need access to: the router port io and the router reset signal.

- 1. Open test.sv file in an editor
- 2. Populate the resoure data base with the interfaces needed by the test
- 3. Save and close the file

Task 6. Configuration Agents in Test

The proper place to configure the physical agents to use these interfaces is in the base test.

- 1. Open test collection.sv file in an editor
- 2. Declare the two virtual interface handles to the interfaces

```
class test_base extends uvm_test;
  `uvm_component_utils(test_base)
  router_env env;
  virtual router_io router_vif;
  virtual reset_io reset_vif;
```

- 3. Locate the build phase method in test base class
- **4.** Retrieve the interfaces from resource database
- 5. Then configure the agent with these interfaces
- **6.** Save and close the file

Task 7. Compile And Debug The Program

1. Compile and simulate the testbench.

```
> make
```

How many packets did the driver process? (Hint: DRV_RUN count)

But, did these packets propagate correctly through the DUT? Check it in the DVE waveform window.

2. Check the behavior in debugger window

```
> make dve
```

Or,

> make verdi

You should see that all output values are red (unknown)! This is because the DUT must be reset before it can successfully process inputs.

3. Exit debugger

Task 8. Generate Reset Transactions

In this task, you will develop the reset sequence to perform a DUT reset.

- 1. Open the reset sequence.sv file in an editor
- 2. In body () task
 - De-assert reset for 2 cycles
 - Then, assert reset for 1 cycle
 - Followed by de-assert for 15 cycles

```
task body();
   `uvm_info("TRACE", $sformatf("%m"), UVM_HIGH);

   `uvm_do_with(req, {kind == DEASSERT; cycles == 2;});
   `uvm_do_with(req, {kind == ASSERT; cycles == 1;});
   `uvm_do_with(req, {kind == DEASSERT; cycles == 15;});
endtask
```

3. Save and close the file

To save lab time, this file is included in the router stimulus package for you.

Task 9. Compile And Simulate with Reset Sequence

- 1. Compile and simulate the testbench.
 - > make

Did it work? Check it in the DVE waveform window.

2. Open the debugger

```
> make dve
Or,
> make verdi
```

You should now see that the output signals no longer are red. However, the sequence was designed to send 10 packets through the DUT. In the waveform window, this is not what you are seeing (you may need to adjust the waveform window to see all 16 frame signals). There is still a problem.

3. Exit debugger

Task 10. Control Signal De-Assertion Sequence

With the reset agent and reset sequence, the only thing that happened was the assertion and de-assertion of the reset signal. How about the control signals of the interfaces? The reset agent and the reset sequence should not be responsible for taking care of all signals of the DUT. Doing so complicates the development of individual tests and integration.

There are two ways to resolve this problem. One, create and configure a sequence to de-assert the control signals. Or, two, de-assert the control signals within the driver's reset phase() method.

For flexible controls of reset priorities, you should de-assert the control signals with sequences. De-asserting the control signals in the driver's **reset_phase()** is discouraged.

A sequence to de-assert the router input control signals has been done for you in router input port reset sequence.sv.

Take a look at the code if you are interested. Otherwise, configure this sequence to be executed at the reset phase.

- 1. Open the router env.sv file in an editor
- 2. Configure the input agent's (i_agt) sequencer (sqr) to execute the router input port reset sequence at the reset phase.
- 3. Save and close the file

Task 11. Compile & Simulate with Driver Reset Phases

- 1. Compile and simulate the testbench.
 - > make
- **2.** Open the debugger
 - > make dve

Or.

> make verdi

You should now see the correct behavior: 10 packets came out of the DUT.

A test has been written for you that executes a sequence which sets the da to 3 and generates 20 packets.

- **3.** Run this test:
 - > make test=test da 3 seq
- **4.** Take a look at the debugger waveform window again

You should see that 20 packets came out of output port 3.

Congratulations, you have completed the regular portion of Lab 3!


If desired, you can continue with UVM transaction debugging in the following pages.

Optional: DVE Transaction Debugging

It is very helpful to view the transaction being processed alongside the DUT waveforms. The following steps will take you through a simple example.

1. Take a look at the run-time command:


You should see the following:

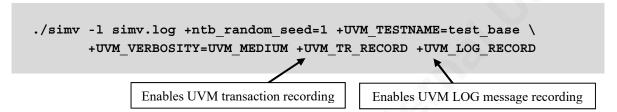

2. Start DVE in post-processing mode with transaction debugging:

> make dve tr

You should see the following panes in the lower portion of the DVE window:

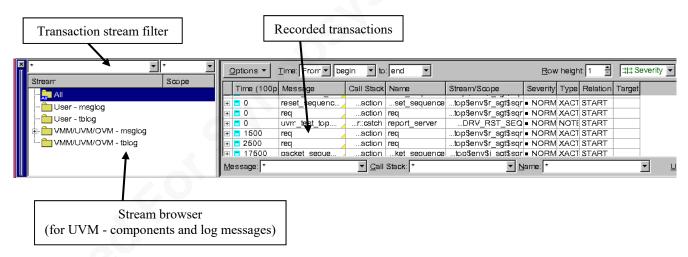


For UVM, the automatically recorded streams are the UVM sequence item transactions and the UVM log messages. For this lab, you will only be looking at the **VMM/UVM/OVM** - **mslog** folder.




3. Click on the + symbol of the VMM/UVM/OVM - msglog folder to expand it

In the expanded window, you should see that recorded streams are displayed. There are two typical streams: sequencer transaction streams and UVM log (message id) streams. Each stream may contain a series of transaction over time associated with the source of the stream.

Note: Use the filter text field to narrow down what get displayed in the stream browser window if there are too many streams.

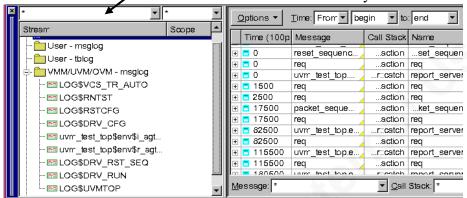

4. Click on uvm_test_top\$env\$i_agt\$sqr to see the sequence and sequence_items/ransaction stream that the sequencer generated

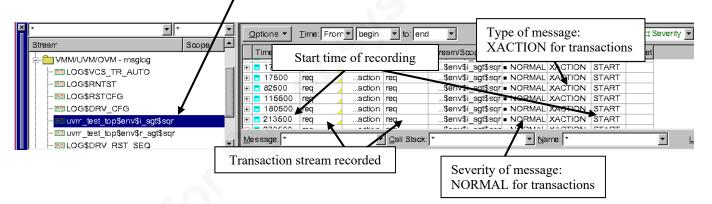


The UVM `uvm_info/warning/error/fatal macro generated log messages are also recorded if +UVM_LOG_RECORD run-time is applied during simulation (as has been done in the lab).


```
class driver extends uvm_driver #(packet);
  // other code not shown
  virtual task run_phase(uvm_phase phase);
    `uvm_info("TRACE", $sformatf("%m"), UVM_HIGH);
  forever begin
    seq_item_port.get_next_item(req);
    if (port_id inside { -1, req.sa }) begin
        send(req);
        `uvm_info("DRV_RUN", {"\n", req.sprint()}, UVM_MEDIUM);
        end
...
```

For example, in the driver code, a `uvm_info is embedded with message id of DRV RUN. This shows up in the browser window under LOG\$DRV RUN.

5. Click on LOG\$DRV RUN in the browser window to see all the log messages

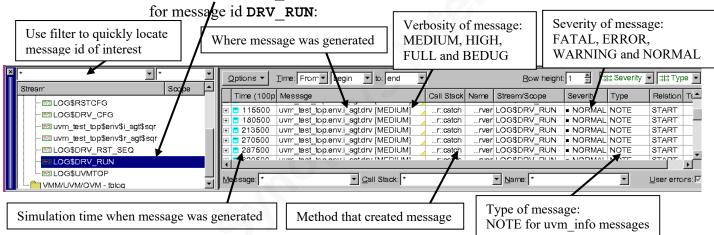


At the upper right hand corner of the transaction pane, there are two dropdown tabs for severity and type. Clicking on them will enable you to display only the severities and types of the messages of interest:

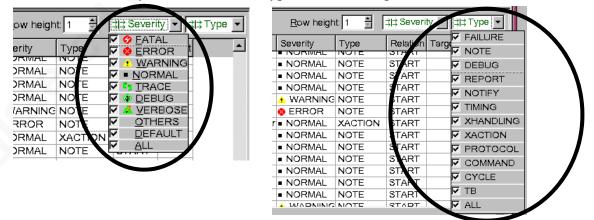


Once you located the transaction and UVM log messages, you would typically want to see the transaction/log message on the Wave window. One quick way of finding a stream is to make use of the stream filter.

6. In the stream filter text field enter *sqr

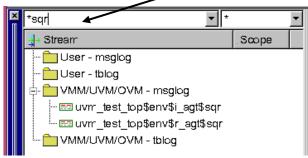


As you type, you should notice that the stream source browser window is updated dynamically to show you the result of the filter.

- 7. Click on uvm_test_top\$env\$r_agt\$sqr
 This will display the reset_sequence and reset_tr object req.
- 8. Click on the + symbol of reset sequence and req in the transaction pane

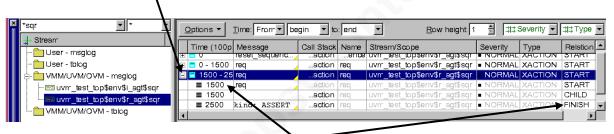


You will see the START and FINISH times of the transaction


9. Click on the Right Mouse Button on the transaction, add it to Wave window

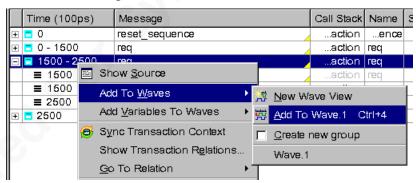


10. In the Wave window, click on the zoom in button a few time to see the reset sequence fully displayed at the start time and clear at the finish time.

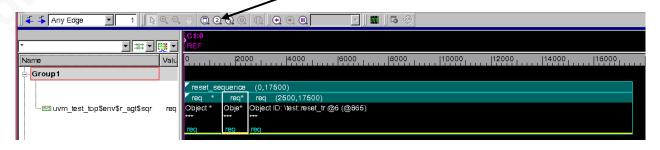


11. Go back to DVE Hierarchy window. This time, in Stream browser pane, add uvm test top\$env\$i agt\$sqr to the Wave window.

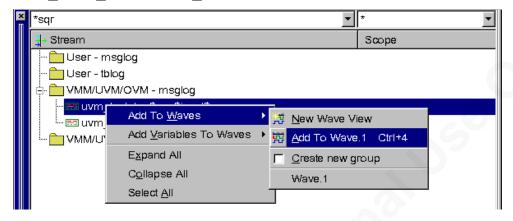

You should see packet_sequence and its associated sequence_item displayed. (You may need to zoom out)

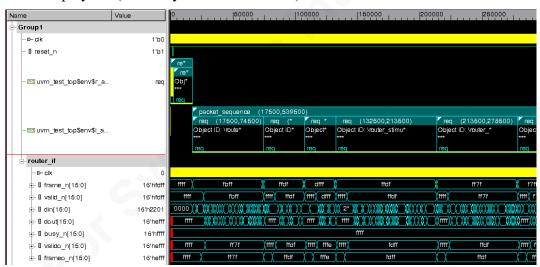

12. Place the cursor over each transaction heading (req) to see the content of that transaction

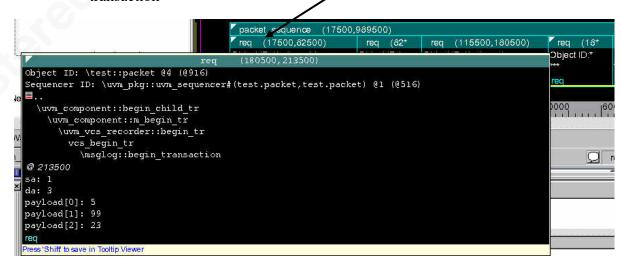


Component Configuration
SystemVerilog UVM Workshop

For the UVM log messages, you can do the same thing.


13. In the Stream browser pane, change to filter to LOG* You will now see only the log message streams.



14. Right-click on LOG\$DRV_RUN and add the stream to the Wave window

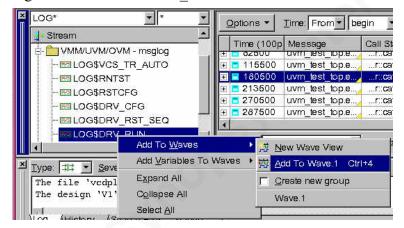

Once again, you can place the cursor over the message heading to see the content of the message. One thing you should notice, UVM log messages do not have start and finish time. Yet, in the display, the UVM log messages span time. This is not entirely accurate, but is done for visualization. The simulation time at which the UVM log message is generated is treated by DVE as the start time. The UVM log message then persists until the next UVM log message of that stream is generated. So, in DVE, once the UVM log message stream starts, you will never see a gap in between the messages.

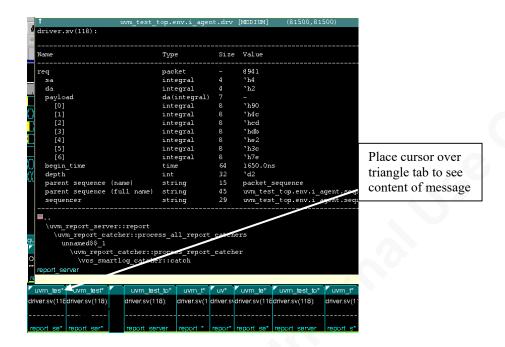

The knowledge that you gained in this exercise may help you to debug your code in future labs. The rest of the lab is left for you to do your own exploration.


You have completed the optional dve portion of Lab 3!

Optional: Verdi Transaction Debugging


Caution: The features show below are lea features and not part of general release. If you have any questions on the availability of these features in your environment, please consult with your Synopsys Sales Rep.

- **1.** Take a look at the compile-time command:
 - > make compile -n

You should see the following:

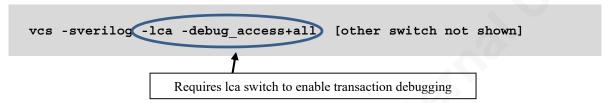


- **2.** Take a look at the run-time command:
 - > make verdi_tr -n

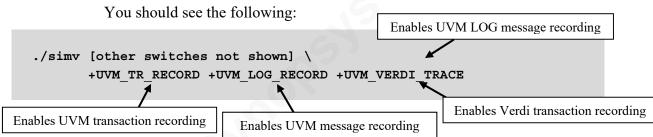


- **3.** Start Verdi in post-processing mode with transaction debugging:
 - > make verdi tr
- **4.** Open the transaction debugging window:

Click the Window tab and select Transaction Debug Mode

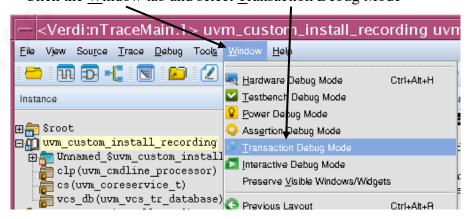


In the Hier. Tree pane you should see \$trans root:

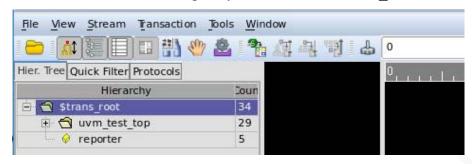


5. Use the right middle mouse button, click on the symbol of **uvm_test_top** and select **Expand All** to fully expand out the component hierarchy.


What you see is the complete collection of components in which uvm transactions and uvm report messages are captured.

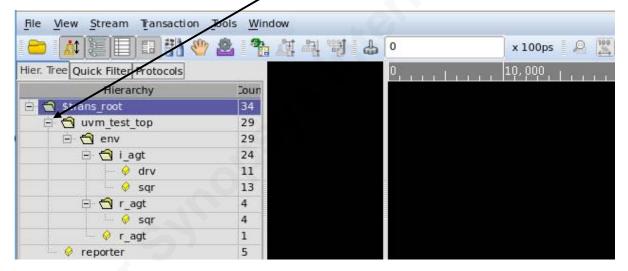


- 6. Using the middle mouse button, click, drag and drop the **i_agt**'s **sqr** content into the waveform window
- 7. Then, click on to zoom out to see the recorded transactions

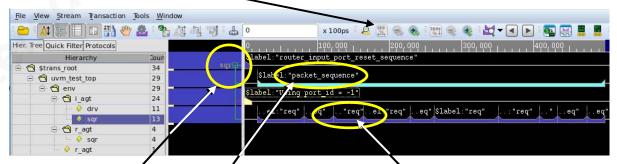


You should see that the recorded transaction shows the name of the component that recorded the transaction. If the transaction recording was done via a sequence, it not only shows the individual sequence item, it also shows the sequence that generated the sequence item.

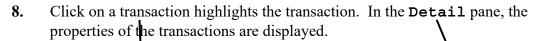

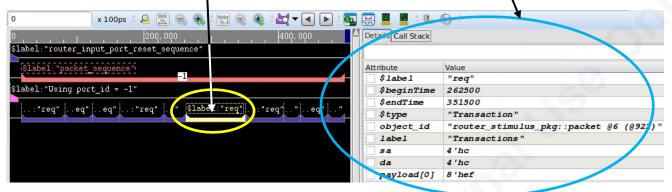

9. Drag and drop the driver (**drv**)'s report message recordings into the waveform window


You should see something a little different.

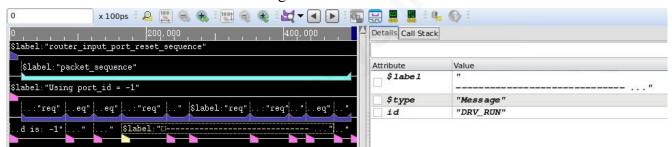

Instead of spanning time like you see . The difference is that transaction processing typically spans time, whereas report messages are issued at an instance of time.


During debugging, there are generally two things that you want to see with respect to the transaction and message – where was it generated and how is it related to DUT behavior (timing diagram).

10. Click on the Call Stack tab

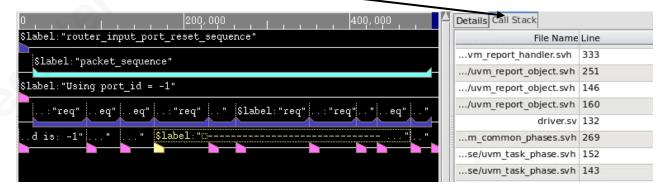

You will see the call stack trace of how the transaction/message was generated. But, because the actual recording is done by the UVM base classes, it can be very difficult to figure out what to do here.


11. For transaction tracing, click on a transaction to highlight it

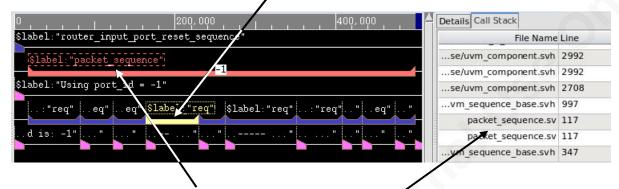

Look for the sequence name in the wavename

12. Double click on the corresponding file name in the Call Stack pane.

This will open a source code window with the line that generated the transaction highlighted.

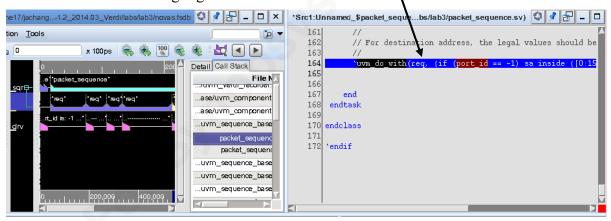

Typically, the window is too small to be useful for debugging. You can undock this window.


13. Click on to undock the window

The source code window should now be undocked and can be re-sized to meet your debugging needs.

```
0 4 6
*Src1:Unnamed $packet sequence sv 117(/home/ins461/labs/lab3/packet sequence.sv)
   113
             // There are changes from UVM-1.1 and 1.2 to IEEE UVM
   114
   115
             // For UVM-1.1 & UVM-1.2
   116
              ifndef UVM_VERSION
   117
               `uvm_do_with(req, {if (port_id == -1) sa inside {[0:15]}; else sa == port_id; da inside valid_da;})
             // For IEEE UVM
   118
   119
             else
   120
                uwm_do(req,,, {if (port_id == -1) sa inside {[0:15]}; else sa == port_id; da inside valid_da;});
   121
             endif
   122
   123
           end
   124
        endtask: body
```


To sync the transaction to waveform do the following:

14. Open a waveform window by clicking on the up button

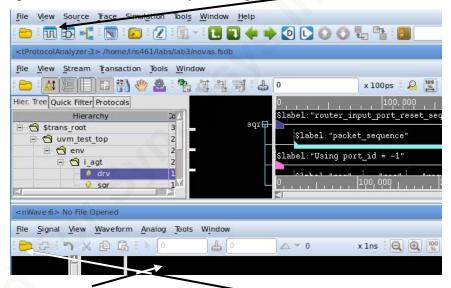


The nwave window is empty, but the folder button is enabled.


15. Click on , double-click on the novas.fsdb file, then click on OK

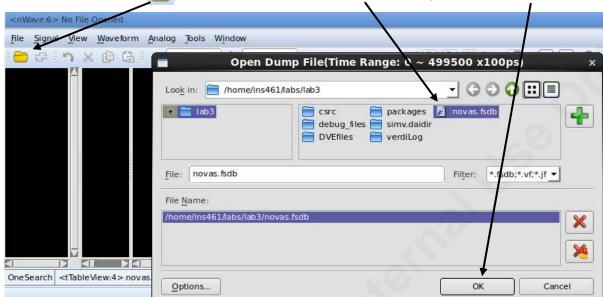


You will now see waves button enabled.

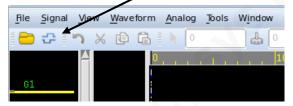

- 16. Click on the waves button
- 17. In the Get Signals widow, click on router_test_top to see the interfaces

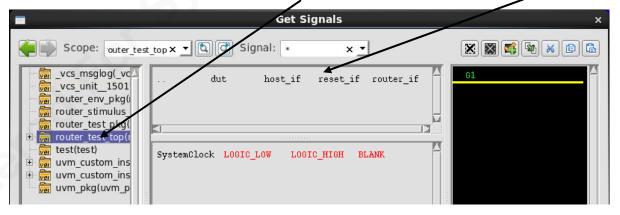


18. Drag and drop reset_if and router_if in the Get Signals window into the nwave window then click on OK

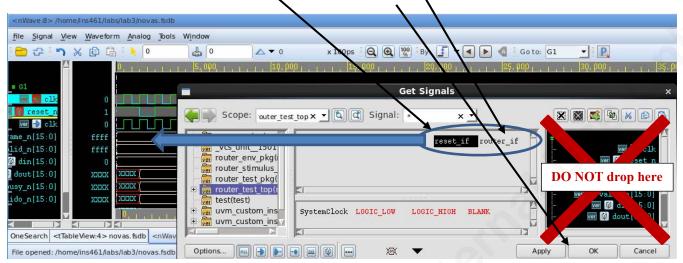


What will be very useful for debugging is to visually see the relationship between the DUT waveform and the transaction begin processed.

19. In nWave window, click on Window and select Sync All Waveform by and enable All

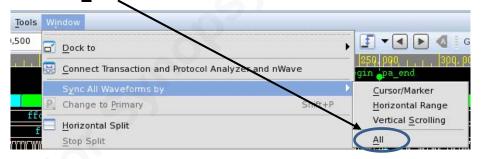


- 20. Click on Window again and select Change to Primary
- 21. In tProtocolAnalyzer window, click on View

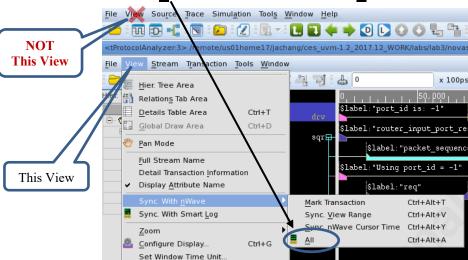

22. And enable All three with Sync with nWave

- 23. Click on line in both tProtocolAnalyzer and nWave windows
- 24. Then click on any transaction in the tProtocolAnalyzer window You will now see the time span in which the transaction was in-flight.

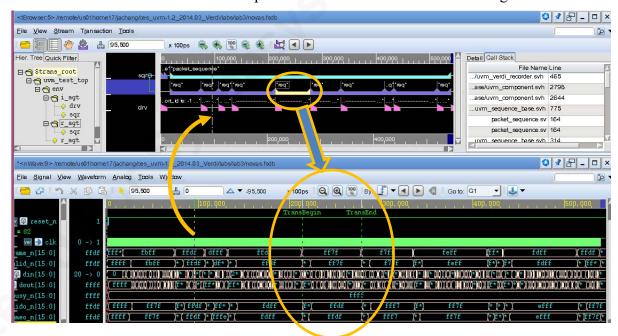

25. Conversely, click in the nwave window, you will see the cursor in the tProtocolAnalyzer window is sync'ed to the same simulation time.

By making using of the ability to see transactions and report messages alongside the DUT waveform, you will find debugging to be less of a chore.

Congratulations, you have completed the Verdi portion of Lab 3!

Answers / Solutions

test collection.sv Solution:

```
class test base extends uvm test;
  `uvm component utils(test base)
 router env env;
 virtual router io router vif;
 virtual reset io reset vif;
  function new(string name, uvm component parent);
    super.new(name, parent);
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
  endfunction: new
 virtual function void build phase (uvm phase phase);
    super.build phase(phase);
    `uvm_info("TRACE", $sformatf("%m"), UVM_HIGH);
    env = router env::type id::create("env", this);
    uvm resource db#(virtual router io)::read by type("router vif",
router vif, this);
   uvm resource db#(virtual reset io)::read by type("reset vif",
reset vif, this);
   uvm config db#(virtual router io)::set(this, "env.i agt", "vif",
router vif);
   uvm config db#(virtual reset io)::set(this, "env.r agt", "vif",
reset vif);
  endfunction: build phase
 virtual function void final phase (uvm phase phase);
    super.final phase(phase);
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
    if (uvm report enabled(UVM MEDIUM, UVM INFO, "TOPOLOGY")) begin
     uvm root::get().print topology();
    end
    if (uvm report enabled(UVM MEDIUM, UVM INFO, "FACTORY")) begin
     uvm factory::get().print();
  endfunction: final phase
endclass: test base
class test da 3 inst extends test base;
  `uvm component utils(test da 3 inst)
  function new(string name, uvm component parent);
    super.new(name, parent);
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
  endfunction: new
```

```
virtual function void build phase (uvm phase phase);
    super.build phase(phase);
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
    set_inst_override_by_type("env.i_agt.sqr.*", packet::get_type(),
packet da 3::get type());
  endfunction: build phase
endclass: test da 3 inst
class test da 3 type extends test base;
  `uvm component utils(test da 3 type)
  function new(string name, uvm component parent);
    super.new(name, parent);
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
  endfunction: new
 virtual function void build phase (uvm phase phase);
    super.build phase(phase);
    `uvm_info("TRACE", $sformatf("%m"), UVM HIGH);
    set type override by type(packet::get type(),
packet da 3::get type());
  endfunction: build phase
endclass: test da 3 type
class test da 3 seq extends test base;
  `uvm component utils(test da 3 seq)
  function new(string name, uvm component parent);
    super.new(name, parent);
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
  endfunction: new
 virtual function void build phase (uvm phase phase);
    packet sequence::int q t valid da = {3};
    super.build phase(phase);
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
    uvm config db#(packet sequence::int q t)::set(this,
"env.i agt.sgr.packet sequence", "valid da", valid da);
   uvm config db#(int)::set(this, "env.i agt.sqr.packet sequence",
"item count", 20);
  endfunction: build phase
endclass: test da 3 seq
```

router env.sv Solution:

```
class router env extends uvm env;
  input_agent i_agt;
  reset agent r agt;
  `uvm component utils(router env)
  function new(string name, uvm component parent);
    super.new(name, parent);
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
  endfunction
 virtual function void build phase (uvm phase phase);
    super.build phase(phase);
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
    i_agt = input_agent::type_id::create("i_agt", this);
   uvm config db #(uvm object wrapper)::set(this,
"i_agt.sqr.reset_phase", "default_sequence",
router input port reset sequence::get type());
    uvm config db #(uvm object wrapper)::set(this,
"i agt.sqr.main phase", "default sequence", packet sequence::get type());
    r agt = reset agent::type id::create("r agt", this);
    uvm config db #(uvm object wrapper)::set(this,
"r agt.sqr.reset phase", "default sequence", reset sequence::get type());
  endfunction
endclass
```

driver.sv Solution:

```
class driver extends uvm driver #(packet);
  virtual router io vif;
                                   // DUT virtual interface
                    port id = -1; // Driver's designated port
  int
  `uvm component utils begin(driver)
    `uvm field int(port id, UVM ALL ON | UVM DEC)
  `uvm component utils end
  function new(string name, uvm component parent);
    super.new(name, parent);
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
  endfunction: new
  virtual function void build phase (uvm phase phase);
    super.build phase(phase);
    `uvm_info("TRACE", $sformatf("%m"), UVM HIGH);
    uvm confiq db#(virtual router io)::get(this, "", "vif", vif);
  endfunction: build phase
 virtual function void end of elaboration phase (uvm phase phase);
    super.end of elaboration phase(phase);
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
    if (!(port_id inside {-1, [0:15]})) begin
      `uvm fatal("CFGERR", $sformatf("port id must be {-1, [0:15]}, not
%0d!", port id));
    end
    if (vif == null) begin
      `uvm fatal("CFGERR", "Interface for Driver not set");
  endfunction: end of elaboration phase
 virtual function void start of simulation phase (uvm phase phase);
    super.start of simulation phase(phase);
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
    `uvm info("DRV CFG", $sformatf("port id is: %0d", port id),
UVM MEDIUM);
  endfunction: start of simulation phase
  virtual task run phase (uvm phase phase);
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
    forever begin
      seq item port.get next item(req);
      if (port id inside { -1, req.sa }) begin
        `uvm info("DRV RUN", {"\n", req.sprint()}, UVM MEDIUM);
      seq item port.item done();
  endtask: run phase
  // See file for device drivers
endclass: driver
```

router input port reset sequence.sv Solution:

```
class router input port reset sequence extends uvm sequence #(packet);
                                   // DUT virtual interface
  virtual router io vif;
                    port_id = -1; // Driver's designated port
  int
  `uvm object utils begin(router input port reset sequence)
    `uvm field int(port id, UVM DEFAULT | UVM DEC)
  `uvm component utils end
  function new(string name="router input port reset sequence");
    super.new(name);
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
    `ifndef UVM VERSION 1 1
    set automatic phase objection(1);
    `endif
  endfunction: new
  virtual task pre start();
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
    `ifdef UVM VERSION 1 1
    if ((get_parent_sequence() == null) && (starting_phase != null)) begin
      starting phase.raise objection(this);
    end
    `endif
   uvm config db#(int)::get(get sequencer(), "", "port id", port id);
    if (!(port id inside {-1, [0:15]})) begin
      `uvm_fatal("CFGERR", $sformatf("port_id must be {-1, [0:15]}, not
%0d!", port_id));
    end
    `uvm info("DRV RST SEQ", $sformatf("Using port id = %0d", port id),
UVM MEDIUM);
    uvm confiq db#(virtual router io)::get(get sequencer(), "", "vif", vif);
    if (vif == null) begin
      `uvm fatal("CFGERR", "Interface for the Driver Reset Sequence not
set");
    end
  endtask: pre start
  `ifdef UVM VERSION 1 1
  virtual task post start();
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
    if ((get parent sequence() == null) && (starting phase != null)) begin
      starting phase.drop objection(this);
    end
  endtask: post start
  `endif
  virtual task body();
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
    if (port_id == -1) begin
     vif.frame n = '1;
     vif.valid n = '1;
     vif.din = '0;
    end else begin
     vif.frame n[port id] = '1;
     vif.valid n[port id] = '1;
     vif.din[port id] = '0;
    end
  endtask: body
endclass: router_input_port_reset_sequence
```

reset tr.sv

```
class reset_tr extends uvm_sequence_item;
  typedef enum {ASSERT, DEASSERT} kind_e;
  rand kind_e kind;
  rand int unsigned cycles = 1;

  `uvm_object_utils_begin(reset_tr)
    `uvm_field_enum(kind_e, kind, UVM_ALL_ON)
    `uvm_field_int(cycles, UVM_ALL_ON)
  `uvm_object_utils_end

function new(string name = "reset_tr");
  super.new(name);
  `uvm_info("TRACE", $sformatf("%m"), UVM_HIGH);
  endfunction: new
endclass
```

reset sequence.sv Solution:

```
class reset sequence extends uvm sequence #(reset tr);
  `uvm object utils(reset sequence)
  function new(string name = "reset sequence");
    super.new(name);
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
    `ifndef UVM VERSION 1 1
    set automatic phase objection(1);
    `endif
  endfunction
  virtual task body();
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
    `uvm do with(req, {kind == DEASSERT; cycles == 2;});
    `uvm_do_with(req, {kind == ASSERT; cycles == 1;});
    `uvm do with(req, {kind == DEASSERT; cycles == 15;});
  endtask
  `ifdef UVM VERSION 1 1
  virtual task pre start();
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
    if ((get parent sequence() == null) && (starting phase != null)) begin
      starting phase.raise objection(this);
    end
  endtask
  virtual task post start();
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
    if ((get parent sequence() == null) && (starting phase != null)) begin
      starting phase.drop objection(this);
    end
  endtask
  `endif
Endclass
```

Component Configuration SystemVerilog UVM Workshop Lab 3-31

This page was intentionally left blank.

4

Monitors and Scoreboard

Learning Objectives

After completing this lab, you should be able to:


- Implement TLM analysis port in monitor
- Add the monitor to agent
- Implement a scoreboard using uvm in order class comparator
- Add scoreboard and an array of agents to the environment
- Compile and simulate



Lab Duration: 60 minutes

Getting Started

Through Lab 3, you have begun to drive the stimulus sequence through the DUT. You now need to add monitors and scoreboards into the environment to enable self-check.

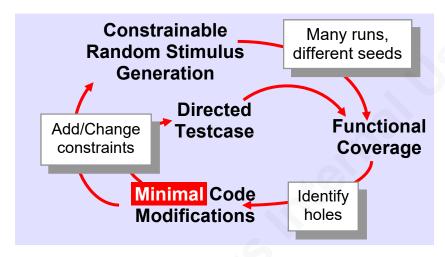

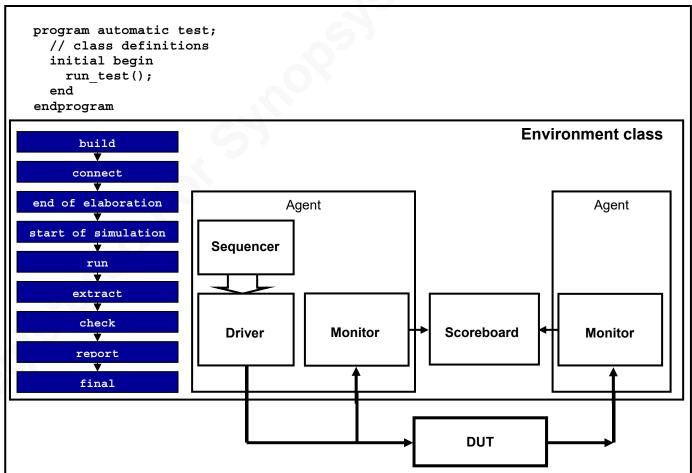


Figure 1. Lab 4 Testbench Architecture

Lab Overview

The work flow for this lab is illustrated as follows:

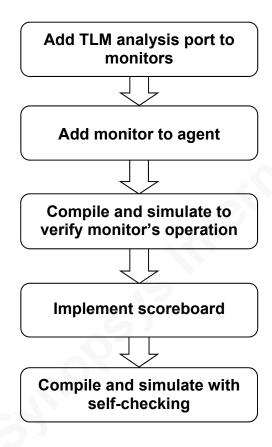


Figure 2. Lab 4 Flow Diagram

Implement Monitors and Scoreboard

You have now driven the test stimulus sequence through the DUT.

In this lab, you will add self-checking into the environment.

Task 1. Go into lab4 Working Directory

1. CD into the lab4 directory

```
> cd ../lab4
```

Task 2. Implement TLM Analysis Port in Monitor

Monitors and drivers have similarities and differences.

Similarities: both need access to DUT virtual interface. For the labs in this workshop, both need to be configured to handle a specified port of the DUT.

Differences: driver has a built-in TLM port for communication with the sequencer, but monitors require the implementer to create the required TLM port(s).

Two monitor types will be needed for the lab, one for monitoring the input to the DUT and one for monitoring the output of the DUT. The input monitor is called **iMonitor**. The output monitor is called **oMonitor**.

In this task, you will implement TLM analysis port in the input monitor. The physical device drivers and the fields identical to the driver are coded for you.

- 1. Open iMonitor.sv file in an editor
- 2. Inside the class, add a TLM analysis port object handle typed to packet

3. In the build phase, construct the analysis port object

```
virtual function void build_phase(uvm_phase phase);
  super.build_phase(phase);
  ...
  analysis_port = new("analysis_port", this);
endfunction
```

Note: TLM ports in UVM do not have factory support. You cannot construct the TLM port with the proxy create() method. You must construct it with the constructor new().

4. Locate the forever loop in the run phase

Inside the monitor's forever loop, you need to call the device driver to reconstruct the packet that was observed on the DUT physical signals. Then, use the TLM analysis port to pass it on to all other components requiring the observed transaction. Step 5 will take you through this.

- **5.** Do the following inside the forever loop:
 - Construct the packet object (tr) to store the observed transaction
 - Set the source address (sa) field of the packet object to port_id

 (The destination address (da) field will be populated by the device driver)
 - Call get_packet() method (device driver) to retrieve the observed transaction
 - Use **uvm** info macro to display the content of the observed transaction
 - Pass the observed transaction to all interested components via the TLM analysis port

```
virtual task run_phase(uvm_phase phase);
...
forever begin
   tr = packet::type_id::create("tr", this);
   tr.sa = this.port_id;
   get_packet(tr);
   `uvm_info("Got_Input_Packet", {"\n", tr.sprint()}, UVM_MEDIUM);
   analysis_port.write(tr);
   end
endtask
```

6. Save and close the file.

Task 3. Update Agent

The **input_agent** class currently only contains a sequencer and a driver. You need to add a monitor to the agent to complete the class definition.

- 1. Open input_agent.sv file in an editor
- **2.** Add the following to the class:
 - An instance of iMonitor called mon
 - An instance of uvm_analysis_port #(packet) called analysis port

Agents can operate in one of two possible modes: active or passive. When configured to operate in the active mode, all three members (sequencer, driver and monitor) must be constructed. If the agent was configured to operate in the passive mode, only the monitor will be constructed. In the active mode, the sequencer's TLM port also need to be connected the driver's TLM port.

In the **uvm_agent** base class, the **is_active** flag is built in for this purpose. You will construct and connect the sub-component based on the state of this flag.

- 3. In the build phase () method check the state of the is active flag
 - If flag is **UVM_ACTIVE**, create the sequencer (**sqr**) and driver (**drv**) objects
- 4. Regardless of the state of **is_active** flag, construct the monitor (**mon**) object.
- 5. Construct the analysis_port object
- 6. In the connect phase () method, again, check the is active flag
 - If is_active flag is UVM_ACTIVE, connect the driver's TLM port (seq_item_port) to sequencer's TLM port (seq_item_export)
- 7. Connect the monitor's analysis port to the agent's pass-through analysis port
- **8.** Save and close the file

Task 4. Update Environment & Test to Enable All Ports

The existing environment only has one instance of the input agent. Whereas the DUT has 16 ports that need to be tested. In this task, you will change the single instance of the agent in the environment to an array of 16 agents. Because there are 16 individual agents, they will each need to be configured to a dedicated port. Each will also need to handle the de-assertion of the control signals.

- 1. Open the router env.sv file in an editor
- 2. Change the single instance of input agent to an array of 16 agents
- 3. In the build phase, change the construction of the single instance of input agent to construct each input agent within the array
- **4.** And, configure each agent as follows:
 - For each agent, set a dedicated port id value
 - Configure the sequencer's **default_sequence** for **reset_phase** to execute **router input port reset sequence**
 - Configure the sequencer's **default_sequence** for **main_phase** to execute **packet sequence**
- 5. Save and close the file

- 6. Open the test collection.sv file in an editor
- 7. In build phase of test_base class, configure all input agents to use the router_vif interface.
- **8.** Save and close the file

Task 5. Compile and Simulate

1. Compile and simulate the testbench

> make

You should see that 160 packets were processed (16 ports X 10 items each)

Task 6. Implement TLM Port in Scoreboard

A very basic scoreboard has been created for you using the in-order comparator.

1. Open the scoreboard.sv file in an editor

An in-order comparator has been implemented for you.

In-order comparator typed to check packet objects

```
class scoreboard extends uvm_scoreboard;
  typedef uvm_in_order_class_comparator #(packet) packet_cmp;
  packet_cmp comparator;
```

You need to add two TLM pass-through exports to connect the comparator to the input monitor and the output monitor.

2. Add the following TLM pass-through exports:

Passing iMonitor packet to comparator

```
uvm_analysis_export #(packet) before_export; '
uvm_analysis_export #(packet) after_export;
```

Passing oMonitor packet to comparator

3. In build phase, construct the comparator and the pass-through analysis exports

```
virtual function void build_phase(uvm_phase phase); ...;
  comparator = packet_cmp::type_id::create("comparator", this);
  before_export = new("before_export", this);
  after_export = new("after_export", this);
endfunction
```

4. In connect phase, connect the pass-through exports to the comparator

```
this.before_export.connect(comparator.before_export);
this.after_export.connect(comparator.after_export);
```

5. Save and close the file

Task 7. Update the Environment Class

1. Open router env.sv file in an editor.

For the scoreboard to work, you will also need an agent at the output of the DUT. This is done for you. It is the **output agent** class.

2. Inside the environment class, add an instance of **scoreboard** and an array of output agents

```
class router_env extends uvm_env;
...
scoreboard sb;
output_agent o_agt[16];
```

- **3.** In the build phase do the following:
 - Construct the scoreboard and the output agent objects
 - Configure the output agent objects to dedicated port

```
virtual function void build_phase(uvm_phase phase);
...
sb = scoreboard::type_id::create("sb", this);
foreach (o_agt[i]) begin
  o_agt[i] = output_agent::type_id::create($sformatf("o_agt[%0d]",i),this);
  uvm_config_db #(int)::set(this, o_agt[i].get_name(), "port_id", i);
end
endfunction
```

4. In the connect phase, connect the scoreboard to the agents' analysis ports:

```
virtual function void connect_phase(uvm_phase phase);
  `uvm_info("TRACE", $sformatf("%m"), UVM_HIGH);
  foreach (i_agt[i]) begin
    i_agt[i].analysis_port.connect(sb.before_export);
  end
  foreach (o_agt[i]) begin
    o_agt[i].analysis_port.connect(sb.after_export);
  end
endfunction
```

- **5.** Save and close the file
- 6. Open the test collection.sv file in an editor

- 7. In build phase of test_base class, configure all output agents to use the router vif interface
- 8. In report phase of test_base class, print the scoreboard content
- **9.** Save and close the file.

Task 8. Compile And Debug The Program

1. Compile and run the simulation

> make

You should see something like the following message at end of simulation:

```
** Report counts by id
[Comparator Match] 141
[Comparator Mismatch] 18
[DRV_RUN] 160
[Got_Input_Packet] 160
[Got_Output_Packet] 159
[MISCMP] 36
[RNTST] 1
[Scoreboard_Report] 1
[UVMTOP] 1
```

The simulation is reporting that 160 packets were detected in the input but only 159 packets were observed at the output.

(Ignore the Mismatches for now. It will be solved in a coming step)

This is the expected behavior. The cause of the missing output is due to the latency of the transaction flowing through the DUT. Since the objection were only raised and dropped on the input side, as soon as the input is done, as far as the UVM simulation is concerned, everything is done because there are no existing objections.

This is a common problem in UVM testbench. There are multiple ways to solve this problem.

One way to correct this is to take care of the expected latency on the input side by implementing an objection drain time. If an objection drain time is set, then when the objection count reaches 0, the phase must wait for the drain time to elapse before terminating the phase. If another objection is raised during the drain time, the phase objection mechanism starts over and waits for objection count to reach 0 again.

A better way to address the issue is to detect the expected queue in the comparator is empty. You will try out both ways.

Because the UVM comparator does not support detection of expected queue being empty, you will apply the drain time mechanism first.

- 2. Open the test collection.sv file
- 3. Locate test_base class
- 4. In the main_phase () method, retrieve the objection handle for the phase, then set drain time to 1 us. This should be sufficient for the lab DUT.

```
virtual task main_phase(uvm_phase phase);
  uvm_objection objection;
  super.main_phase(phase);
  objection = phase.get_objection();
  objection.set_drain_time(this, lus);
endtask
```

- **5.** Save and close the file
- **6.** Compile and run the simulation again:

> make

You should see all 160 packets on the output observed.

However, due to the basic nature of the UVM comparator and scoreboard, you should also see that there are mismatches.

```
** Report counts by id
[Comparator Match] 138
[Comparator Mismatch] 22
[DRV_RUN] 160
[Got_Input_Packet] 160
[Got_Output_Packet] 160
[MISCMP] 36
```

Is this a testbench problem or a DUT problem? One way to isolate the problem is to just test one port.

7. Compile and run the simulation on destination address 3:

```
> make test=test_da_3_seq
```

You should see that 320 packets (20 packets per input port) were successfully matched. If you see other errors, then you have made mistakes in your testbench code that must be corrected.

If it passes, what's the problem? The problem is that UVM only provides a mechanism for checking in-order transaction comparison. The DUT you are testing can have simultaneous input and output packet observed at different ports. Which one of these output packet will be checked against the input packet? It is non-deterministic. Thus the lab problem arises.

This is another problem related to the in-order comparator.

How can one solve this problem? If the transactions are truly out-of-order, then one must write an out-of-order scoreboard from scratch. If the transactions are in-order on a port by port basis, but runs into race conditions among multiple ports, then the uvm_in_order_class_comparator class can still be used to implement a multi-stream scoreboard.

A multi-stream scoreboard has been coded for you. Try it out in the next step.

- 8. Open the router env pkg.sv file in the packages directory
- 9. Add the ms scoreboard.sv file to the package

```
`include "ms scoreboard.sv"
```

- 10. Open the test collection.sv file in an editor
- 11. Override the instance of the scoreboard to be an instance of the ms scoreboard:

```
set_type_override_by_type(scoreboard::get_type(),ms_scoreboard::get_type());
```

12. Compile and simulate the testbench.

> make

Everything should now match!

Task 9. End Test Properly!

Ending a test based on the drain time should bother you. The reason that you were shown the drain time mechanism is that it can be useful during debugging when there are uncertainties of what may be going wrong. But, it is not to be used for production worthy tests.

The most common way to detect when to end the test is to depend on the scoreboard. Within the scoreboard, there is typically a mechanism built-in to detect when the expected queue reaches empty state. This state is when the test should terminate. Such a mechanism is provided in the ms_scoreboard class. You can enable the mechanism by calling the wait_for_done() method.

Take a look at the class code if interested. Otherwise, modify the test to use this mechanism

- 1. Open the test collection.sv file in an editor
- 2. Comment out the entire main_phase () method where the drain time code resides
- 3. In the shutdown phase, call the scoreboard's wait for done () method

4. Compile and simulate the testbench.

> make

You should see that only 159 packets on the output observed. Test terminated too early again! What happened?

```
** Report counts by id
...
[Comparator Match] 159
...
[Got_Input_Packet] 160
[Got_Output_Packet] 159
```

Remember the way that UVM task phases work. If one does not raise objection in a task phase, that phase may terminate in 0 time.

This is what's happening with your code. Even though you called the scoreboard's **wait_for_done()** method to wait for the expected queue to empty, without raising the phase objection, the shutdown phase terminated in 0 time. Thus, the wait never happened.

- 5. Edit the test collection.sv file
- 6. Add raise and drop phase objection around the call to wait for done ()
- 7. Compile and simulate the testbench.
 - > make

All should now match!

8. Check the waveform

```
> make dve
```

Or,

> make verdi

You should see that packets were driven through the DUT.

9. Run the destination address is 3 and 20 packets test:

```
> make test=test_da_3_seq
```

10. Take a look at the waveform again

You should see that 320 packets were driven through port 3.

Congratulations, you have completed Lab 4!

Answers / Solutions

test collection.sv Solution:

```
class test base extends uvm test;
  `uvm component utils(test base)
  router env env;
 virtual router io router vif;
 virtual reset io reset vif;
  function new(string name, uvm component parent);
    super.new(name, parent);
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
  endfunction: new
 virtual function void build phase (uvm phase phase);
    super.build phase(phase);
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
    env = router env::type id::create("env", this);
    uvm resource db#(virtual router io)::read by type("router vif",
router_vif, this);
    uvm resource db#(virtual reset io)::read by type("reset vif",
reset vif, this);
   uvm config db#(virtual router io)::set(this, "env.i agt[*]", "vif",
router vif);
   uvm confiq db#(virtual router io)::set(this, "env.o aqt[*]", "vif",
router vif);
   uvm confiq db#(virtual reset io)::set(this, "env.r aqt", "vif",
reset vif);
set type override by type(scoreboard::get type(), ms scoreboard::get type(
));
  endfunction: build phase
  virtual task main phase (uvm phase phase);
    uvm objection objection;
    super.main phase(phase);
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
    objection = phase.get objection();
    objection.set drain time(this, lus);
 endtask: main phase
 virtual task shutdown phase(uvm phase phase);
    super.shutdown phase(phase);
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
    phase.raise objection(this);
    env.sb.wait for done();
    phase.drop objection(this);
  endtask: shutdown phase
// Other code left out. See file for content.
endclass: test base
```

router env.sv Solution:

Lab 4

```
class router env extends uvm env;
  `uvm component utils(router env)
  reset agent r agt;
  input agent i agt[16];
  scoreboard sb;
 output agent o agt[16];
  function new(string name, uvm_component parent);
    super.new(name, parent);
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
  endfunction
 virtual function void build phase (uvm phase phase);
    super.build phase(phase);
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
    r agt = reset agent::type id::create("r agt", this);
    uvm config db #(uvm object wrapper)::set(this, "r agt.sqr.reset phase",
"default sequence", reset sequence::get type());
    foreach (i agt[i]) begin
      i_agt[i] = input_agent::type id::create($sformatf("i agt[%0d]", i),
this);
      uvm config db #(int)::set(this, i agt[i].get name(), "port id", i);
      uvm confiq db #(uvm object wrapper)::set(this, {i aqt[i].get name(),
".", "sqr.reset phase"}, "default sequence",
router input port reset sequence::get type());
     uvm config db #(uvm object wrapper)::set(this, {i agt[i].get name(),
".", "sqr.main phase"}, "default sequence", packet sequence::get type());
    end
    sb = scoreboard::type id::create("sb", this);
    foreach (o aqt[i]) begin
      o agt[i] = output agent::type id::create($sformatf("o agt[%0d]", i),
this);
      uvm config db #(int)::set(this, o agt[i].get name(), "port id", i);
    end
  endfunction
 virtual function void connect phase (uvm phase phase);
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
    foreach (i agt[i]) begin
      i agt[i].analysis port.connect(sb.before export);
    foreach (o agt[i]) begin
      o aqt[i].analysis port.connect(sb.after export);
    end
  endfunction
endclass
```

input agent.sv Solution:

```
typedef uvm sequencer #(packet) packet sequencer;
class input agent extends uvm agent;
 packet sequencer
                       sqr;
 driver
                       drv;
 virtual router io
                       vif;
 int
                       port id = -1;
 iMonitor
                       mon;
 uvm analysis port #(packet) analysis_port;
  `uvm component utils(input agent)
 function new(string name, uvm component parent);
    super.new(name, parent);
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
 endfunction: new
 virtual function void build phase (uvm phase phase);
    super.build phase(phase);
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
    if (is active == UVM ACTIVE) begin
     sqr = packet sequencer::type id::create("sqr", this);
     drv = driver::type id::create("drv", this);
    end
   mon = iMonitor::type_id::create("mon", this);
    analysis port = new("analysis port", this);
   uvm config db#(int)::get(this, "", "port id", port id);
   uvm config db#(virtual router io)::get(this, "", "vif", vif);
   uvm confiq db#(int)::set(this, "*", "port id", port id);
    uvm config db#(virtual router io)::set(this, "*", "vif", vif);
  endfunction: build phase
 virtual function void connect phase (uvm phase phase);
    super.connect phase(phase);
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
    if (is active == UVM ACTIVE) begin
     drv.seq item port.connect(sqr.seq item export);
    end
    mon.analysis port.connect(this.analysis port);
 endfunction: connect phase
 virtual function void end of elaboration phase (uvm phase phase);
    super.end of elaboration phase(phase);
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
    if (!(port id inside {-1, [0:15]})) begin
      `uvm fatal("CFGERR", $sformatf("port id must be {-1, [0:15]}, not
%0d!", port id));
    end
    if (vif == null) begin
      `uvm fatal("CFGERR", "Interface for input agent not set");
 endfunction: end of elaboration phase
endclass: input agent
```

iMonitor.sv Solution:

```
class iMonitor extends uvm monitor;
  virtual router io vif;
  int
                    port id = -1;
 uvm analysis port #(packet) analysis port;
  `uvm component utils begin(iMonitor)
    `uvm field int(port id, UVM ALL ON | UVM DEC)
  `uvm component utils end
  function new(string name, uvm component parent);
    super.new(name, parent);
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
  endfunction
 virtual function void build phase (uvm phase phase);
    super.build phase(phase);
    `uvm_info("TRACE", $sformatf("%m"), UVM HIGH);
    uvm config db#(virtual router io)::get(this, "", "vif", vif);
    analysis port = new("analysis port", this);
  endfunction
 virtual function void end_of_elaboration_phase(uvm_phase phase);
    super.end of elaboration phase(phase);
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
    if (!(port id inside {-1, [0:15]})) begin
      `uvm fatal("CFGERR", $sformatf("port id must be {-1, [0:15]}, not
%0d!", port id));
    end
    if (vif == null) begin
      `uvm fatal("CFGERR", "Interface for iMonitor not set");
  endfunction: end of elaboration phase
 virtual task run phase (uvm phase phase);
    packet tr;
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
    forever begin
      tr = packet::type id::create("tr", this);
     tr.sa = this.port id;
     get packet(tr);
      `uvm info("Got Input Packet", {"\n", tr.sprint()}, UVM MEDIUM);
     analysis port.write(tr);
    end
 endtask
  // See file see device driver code
  //
endclass: iMonitor
```

oMonitor.sv Solution:

```
class oMonitor extends uvm monitor;
  int port id = -1;
 virtual router io vif;
  uvm analysis port #(packet) analysis port;
  `uvm component utils begin (oMonitor)
    `uvm field int(port id, UVM ALL ON | UVM DEC)
  `uvm_component utils end
  function new(string name, uvm component parent);
    super.new(name, parent);
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
  endfunction
  function void build phase (uvm phase phase);
    super.build phase(phase);
    uvm config db#(virtual router io)::get(this, "", "vif", vif);
    analysis port = new("analysis port", this);
  endfunction
 virtual function void end of elaboration phase (uvm phase phase);
    super.end of elaboration phase(phase);
    `uvm_info("TRACE", $sformatf("%m"), UVM_HIGH);
    if (!(port id inside {-1, [0:15]})) begin
      `uvm fatal("CFGERR", $sformatf("port id must be {-1, [0:15]}, not
%0d!", port id));
    if (vif == null) begin
      `uvm fatal("CFGERR", "Interface for oMonitor not set");
  endfunction: end of elaboration phase
 virtual task run phase(uvm phase phase);
    packet tr;
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
    forever begin
      tr = packet::type id::create("tr", this);
      tr.da = this.port id;
      this.get packet(tr);
      `uvm info("Got Output Packet", {"\n", tr.sprint()}, UVM MEDIUM);
      analysis port.write(tr);
   end
  endtask
  // See file for the device driver code
endclass: oMonitor
```

scoreboard.sv Solution:

```
class scoreboard extends uvm scoreboard;
  typedef uvm in order class comparator #(packet) packet cmp;
 packet cmp comparator;
 uvm analysis export #(packet) before export;
 uvm analysis export #(packet) after export;
  `uvm component utils(scoreboard)
  function new(string name, uvm component parent);
    super.new(name, parent);
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
  endfunction: new
 virtual function void build phase (uvm phase phase);
    super.build phase(phase);
    `uvm_info("TRACE", $sformatf("%m"), UVM_HIGH);
   comparator = packet cmp::type id::create("comparator", this);
   before export = new("before export", this);
   after export = new("after export", this);
  endfunction: build phase
 virtual function void connect phase (uvm phase phase);
    super.connect phase(phase);
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
    this.before export.connect(comparator.before export);
   this.after export.connect(comparator.after export);
  endfunction: connect phase
 virtual function string convert2string();
   return $sformatf("Comparator Matches = %0d, Mismatches = %0d",
comparator.m_matches, comparator.m mismatches);
  endfunction: convert2string
  // The following are supplemental methods for detecting end of test and
reporting results.
 // They will be implemented in the derived classes.
 virtual task wait for done(); endtask
 virtual function void set timeout (realtime timeout); endfunction
 virtual function realtime get timeout(); endfunction
endclass: scoreboard
```

ms scoreboard.sv Solution:

```
class ms scoreboard extends scoreboard;
  `uvm analysis imp decl( before)
  `uvm analysis imp decl( after)
 uvm analysis imp before #(packet, ms scoreboard) ms before export;
 uvm analysis imp after #(packet, ms scoreboard) ms after export;
 packet cmp comparator[16];
 int count = 0;
 realtime timeout = 10us;
  `uvm component utils(ms scoreboard)
  function new(string name, uvm component parent);
    super.new(name, parent);
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
 endfunction: new
 virtual function void build phase (uvm phase phase);
    super.build phase(phase);
    `uvm info("TRACE", $sformatf("%m"), UVM_HIGH);
    ms before export = new("ms before export", this);
    ms after export = new("ms after export", this);
    for (int i=0; i < 16; i++) begin
      comparator[i] = uvm in order class comparator
#(packet)::type id::create($sformatf("comparator %0d", i), this);
 endfunction: build phase
 virtual function void connect phase (uvm phase phase);
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
   before export.connect(ms before export);
    after export.connect(ms after export);
 endfunction: connect phase
 virtual function void write before (packet pkt);
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
    comparator[pkt.da].before export.write(pkt);
    count++;
 endfunction: write before
 virtual function void write after (packet pkt);
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
    comparator[pkt.da].after export.write(pkt);
    count - - :
 endfunction: write_after
 virtual task wait for done();
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
    fork
     begin
        fork
          wait(count == 0);
          begin
            #timeout;
```

Monitors and Scoreboard SystemVerilog UVM Workshop

```
`uvm warning("TIMEOUT", $sformatf("Scoreboard has %0d
unprocessed expected objects", count));
         end
        join any
        disable fork;
      end
    join
  endtask: wait for done
 virtual function void set_timeout(realtime timeout);
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
    this.timeout=timeout;
  endfunction: set timeout
 virtual function realtime get timeout();
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
    return (timeout);
  endfunction: get timeout
 virtual function string convert2string();
    foreach (comparator[i]) begin
      convert2string = {convert2string, $sformatf("Comparator[%0d]
Matches = %0d, Mismatches = %0d\n", i, comparator[i].m matches,
comparator[i].m mismatches) } ;
    end
  endfunction: convert2string
endclass: ms scoreboard
```

5

Managing Sequences

Learning Objectives

After completing this lab, you should be able to:


- Develop a top level sequence to control reset sequence execution order
- Implement test to execute the next sequence



Lab Duration: 30 minutes

Getting Started

Through the first four labs, you have developed a complete verification platform to exercise the DUT. In the next two labs, you will expand the testbench to add greater flexibility for even more productivity.

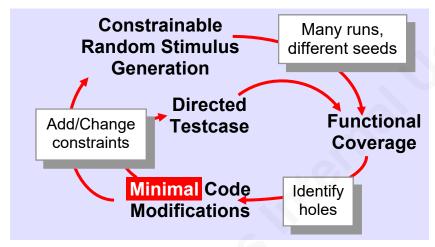

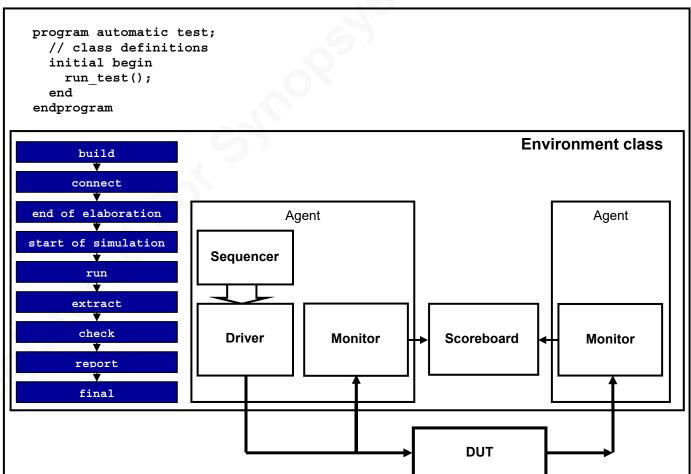


Figure 1. Lab 5 Testbench Architecture

Lab Overview

The work flow for this lab is illustrated as follows:

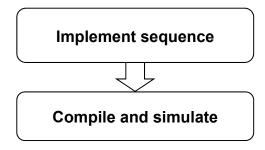



Figure 2. Lab 5 Flow Diagram

Reset Sequence

In lab 4, you successfully drove all input and output ports. All packets were verified to have been processed correctly by the DUT.

However, if you look carefully at the reset execution, you will see that it is not technically correct.


The input signal into the DUT at time 0 should not be at a known value without the reset signal being asserted.

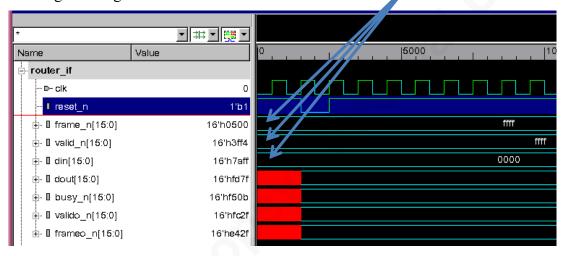

The cause of this incorrect timing is due to each agent's sequencer being configured to execute their own reset sequence in the reset phase without any knowledge or dependency on any other sequence that may be going on at the same time.

From lab 4:

The correct way to handle the external signals is to have the signals default to their default states (x for logic, z for wire) at time 0. Then, in testbench, set these signals to the properly reset value when the reset signal is detected.

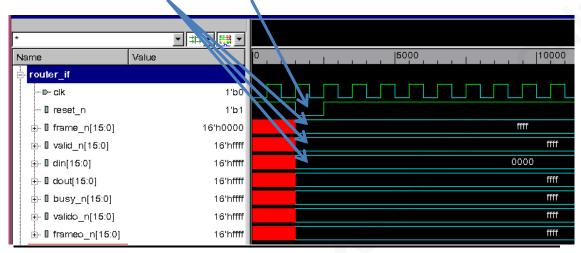

The way to manage this in UVM is to implement a top reset sequence and a top reset sequencer.

Task 1. Implement Top Reset Sequence

For this task, you will create a top reset sequence to manage the execution of the existing reset sequence and router input port reset sequence.

To reduce lab time, the top reset sequencer is created for you.

- 1. CD into the lab5 directory and open top_reset_sequencer.sv to take a look and make sure you understand why the sequencer is declared as it is
- 2. Exit the file
- 3. Open top reset sequence.sv file in an editor
- 4. Inside the class, use the `uvm_declare_p_sequencer macro to specify the associated sequencer type
- 5. Continuing in the class, create a reset_sequence handle called r_seq and a router_input_port_reset_sequence handle called i_seq
- **6.** Inside the **body** () method do the following:
 - Execute the **reset_sequence** instance with the parent sequencer's **r** sq**r**
 - Iterate through the parent sequencer's **pkt_sqr** queue and execute the the **router input port reset sequence**
- 7. Save and close the file

Task 2. Execute Top Sequence in Test

Because top sequence executions are test specific, you will manage them in the test class.

- 1. Open test collection.sv file in an editor
- 2. Inside the test_base class, create a top_reset_sequencer handle called top reset sqr
- 3. In the build phase, construct this sequencer

Because the top reset sequence will control all reset sequence executions, you will need to turn off the existing reset sequence executions in the environment. Otherwise, both sequences will run.

- 4. Turn off the r_agt's sequencer execution at the reset phase by setting "default sequence" to null
- 5. And, turn off all the i_agt's sequencer execution at the reset phase by setting "default_sequence" to null
- **6.** Then, configure the top reset sequencer to execute the top reset sequence at the reset phase


- 7. In the connect_phase, push the input agent's sequencers onto the top reset sequencer's pkt sqr queue.
- 8. Continuing in the connect_phase, set the top sequencer's r_sqr handle to reference the reset agent's sequencer (r agt.sqr)
- **9.** Compile and simulate the testbench to see if this works

```
> make
```

You should see a bunch of scoreboard mismatches! What happened?

- 10. Bring up debugger to see what's happening
 - > make dve or make verdi

The input signals were not set to a known value at reset!

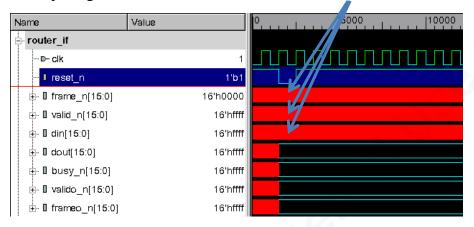

The reason is because, in the top sequence, each of the sequences was executed sequentially. Not concurrently as they needed to be.

Let's correct this.


Task 3. Execute Sequences Concurrently

- 1. Open top reset sequence.sv file in an editor
- 2. Comment out the code from Task 1, Step 6 and un-comment the following code:

```
fork
        `uvm_do_on(r_seq, p_sequencer.r_sqr);
    foreach (p_sequencer.pkt_sqr[i]) begin
        fork
            int j = i;
            `uvm_do_on(i_seq, p_sequencer.pkt_sqr[j]);
            join_none
        end
        join
```

3. Save and close the file

- **4.** Compile and simulate the testbench to see if this works
 - > make
- 5. Did it work? Are you sure? View it in debugger to make sure

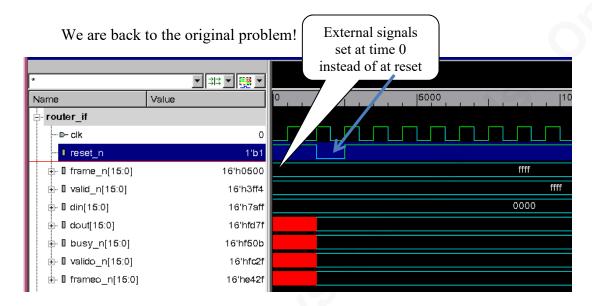

This is a common issue that test developers face. Within a given phase, multiple sequences need to execute concurrently, yet each sequence may need to wait for a specific condition to happen before execution starts.

One way to handle this is to make use of the uvm event mechanism.

Task 4. Implementing uvm_event for Synchronization

An uvm_event called "reset" is already embedded in the reset monitor. Take a quick look at how it is done.

- 1. Open reset agent.sv file in an editor
- 2. Locate the reset_monitor class

Inside the class, you will see the following:

The last line uses the uvm_event_pool class to get the uvm_event singleton object called "reset".

If the "reset" uvm_event singleton object doesn't already exist, it is created now.

The intent of creating this "reset" uvm_event singleton object is to let all observers who are interested in the occurrence of a system reset use this singleton object and watch for reset occurrences.

3. Locate the detect() method and take a look at how the event is handled

```
virtual task detect(reset tr tr);
  @(vif.reset n);
  assert(!$isunknown(vif.reset n));
                                              "reset" event is triggered
  if (vif.reset n == 1'b0) begin
                                             (turned on) at the detection
    tr.kind = reset tr::ASSERT;
                                              of assertion of reset signal
    reset event.trigger(); ___
  end else begin
    tr.kind = reset tr::DEASSERT;
    reset event.reset();
                                       "reset" event is reset
  end
                                   (turned off) at the detection
endtask: detect
                                  of de-assertion of reset signal
```


- **4.** Close the file
- 5. Open top reset sequence.sv file in an editor
- 6. Add the "reset" uvm event singleton object to the sequence class
- 7. Comment out the code from Task 3, Step 2 and un-comment the following code:

```
fork
  `uvm do on(r seq, p sequencer.r sqr);
                                                      Wait for the "reset"
  foreach (p sequencer.pkt sqr[i]) begin
                                                      uvm event to turn
    fork
                                                      on before executing
      int j = i;
                                                        the driver reset
      begin
                                                          sequence
        reset event.wait on();
         `uvm do on(i seq, p sequencer.pkt sqr[j]);
      end
    join none
  end
join
```

- **8.** Save and close the file
- **9.** Compile and simulate the testbench to see if this works

> make

10. Did it work? Again bring up debugger to make sure You should now see the following correct timing:

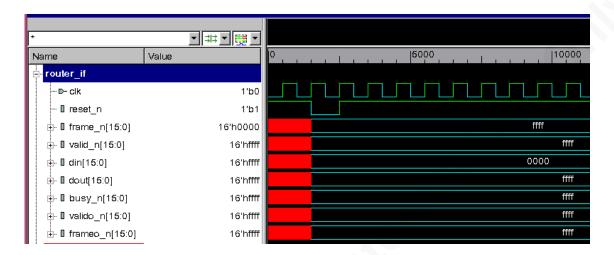

Congratulations, you have completed Lab 5!

Answers / Solutions

top reset sequencer.sv Solution:

```
class top_reset_sequencer extends uvm_sequencer;
   `uvm_component_utils(top_reset_sequencer)
   typedef uvm_sequencer#(reset_tr) reset_sequencer;
   typedef uvm_sequencer#(packet) packet_sequencer;
   reset_sequencer   r_sqr;
   packet_sequencer pkt_sqr[$];
   function new(string name, uvm_component parent);
     super.new(name, parent);
     `uvm_info("TRACE", $sformatf("%m"), UVM_HIGH);
   endfunction
endclass
```

top reset sequence.sv Solution:

```
class top reset sequence extends uvm sequence;
  `uvm object utils(top reset sequence)
  `uvm declare p sequencer(top reset sequencer)
 reset sequence
                                    r seq;
 router input port reset sequence i seq;
 uvm event reset event = uvm event pool::qet qlobal("reset");
 function new(string name="top reset sequence");
   super.new(name);
    `uvm info("TRACE", $sformatf("%m"), UVM_HIGH);
    `ifndef UVM VERSION 1 1
    set automatic phase objection(1);
    `endif
 endfunction
 virtual task body();
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
   fork
      `uvm do on(r seq, p sequencer.r sqr);
      foreach (p sequencer.pkt sqr[i]) begin
        fork
          int j = i;
         begin
            reset event.wait on();
            `uvm do on(i seq, p sequencer.pkt sqr[j]);
          end
       join none
     end
   join
 endtask
  `ifdef UVM_VERSION_1_1
 virtual task pre start();
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
   if ((get parent sequence() == null) && (starting phase != null))
      starting phase.raise objection(this);
 endtask
 virtual task post start();
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
```

Top Reset Sequence SystemVerilog UVM Workshop Lab 5-11

```
if ((get_parent_sequence() == null) && (starting_phase != null))
    starting_phase.drop_objection(this);
endtask
  `endif
endclass
```

test collection.sv Solution:

```
class test base extends uvm test;
  `uvm component utils(test base)
  router env env;
  virtual router_io router_vif;
  virtual reset io reset vif;
  top reset sequencer top reset sqr;
  function new(string name, uvm component parent);
    super.new(name, parent);
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
  endfunction: new
 virtual function void build phase (uvm phase phase);
    super.build phase(phase);
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
   env = router_env::type_id::create("env", this);
   uvm resource db#(virtual router io)::read by type("router vif", router vif,
this);
   uvm resource db#(virtual reset io)::read by type("reset vif", reset vif,
   uvm config db#(virtual router io)::set(this, "env.i_agt[*]", "vif",
router vif);
    uvm confiq db#(virtual router io)::set(this, "env.o aqt[*]", "vif",
router vif);
    uvm config db#(virtual reset io)::set(this, "env.r agt", "vif", reset vif);
    top_reset_sqr = top_reset_sequencer::type_id::create("top_reset_sqr", this);
    uvm_config_db #(uvm_object_wrapper)::set(this, "env.r_agt.sqr.reset_phase",
"default sequence", null);
    uvm_config_db #(uvm_object_wrapper)::set(this,
"env.i agt[*].sqr.reset phase", "default sequence", null);
    uvm confiq db #(uvm object wrapper)::set(this, "top reset sqr.reset phase",
"default sequence", top reset sequence::get type());
  endfunction: build phase
 virtual function void connect phase(uvm_phase phase);
    super.connect phase(phase);
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
    foreach (env.i agt[i]) begin
      top reset sqr.pkt sqr.push back(env.i agt[i].sqr);
    end
    top_reset_sqr.r_sqr = env.r_agt.sqr;
  endfunction: connect phase
// Other code not shown
endclass: test base
```

6

UVM Register Abstraction Layer (RAL)

Learning Objectives

After completing this lab, you should be able to:


- Write a register access sequence without UVM register abstraction
- Compile and verify front door access for registers are working correctly
- Describe registers in .ralf format
- Convert .ralf format to UVM register abstraction
- Create adopter class
- Add UVM register model and adopter to environment
- Develop a register access sequence using UVM register abstraction
- Compile and simulate with UVM register sequence



Lab Duration: 60 minutes

Getting Started

The testbench is now reasonably complete. The only major thing that is lacking is accessing registers within the DUT. In this lab, you will implement the UVM register abstraction to access the DUT registers.

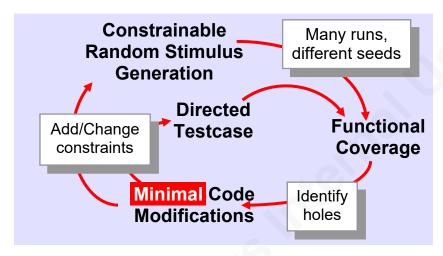

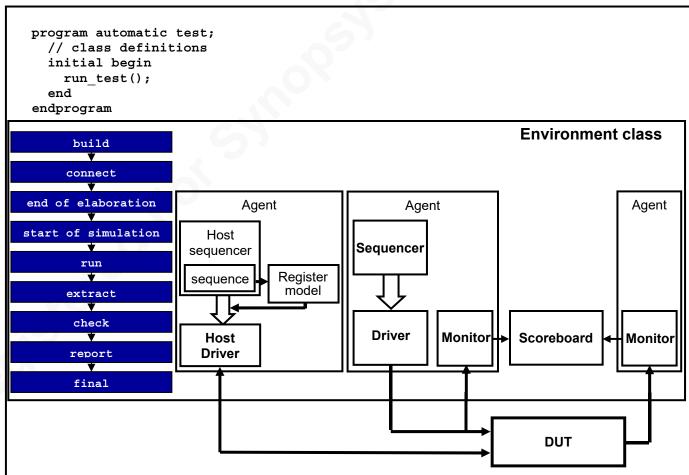


Figure 1. Lab 6 Testbench Architecture

Lab Overview

The work flow for this lab is illustrated as follows:

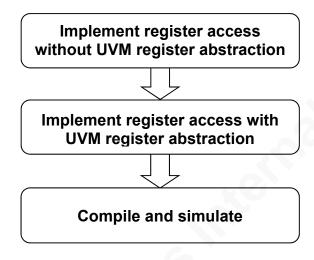


Figure 2. Lab 6 Flow Diagram

Implement UVM Register Abstraction


Task 1. Go into lab6 Working Directory

- 1. CD into the lab6 directory
 - > cd ../lab6

The router RTL has been modified with registers and memories. For this lab, you will be developing an environment and sequence to use these registers and memories.

The following are the specs for the registers:

- The word width is 16 bits for each register/memory
- The address is word address based (not byte address).

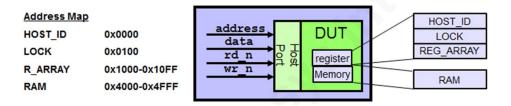

At address 0x0000, two read-only fields exist: chip id (CHIP_ID) and revsion id (REV ID). The static values are as shown in the following table.

HOST ID Pogistor		
HOST_ID Register		
Field	CHIP_ID	REV_ID
Bits	15-8	7-0
Mode	ro	ro
Reset	0x5A	0x03

At address 0x0100, there is a port locking field (LOCK). If a bit has the value of 1, the corresponding port of the router will be disabled. To enable a port, the LOCK bit must be cleared with a write-one-to-clear. (writing a one to that bit location will clear the bit). The default value is 16'hffff, meaning that all ports are disabled at reset. The reading and writing of the field is word based.

LOCK Register	
Field	LOCK
Bits	15-0
Mode	w1c
Reset	0xffff

At address 0x1000 - 0x10FF, there is an array of registers (R_ARRAY[256]). These registers can be written and read. The reset values are 16'h0000.

R_ARRAY[256] Registers	
Field	H_REG
Bits	15-0
Mode	rw
Reset	0x0000

There is also 4K words of RAM located at address 0x4000 - 0x4FFFF.

RAM (4K)	
Bits	15-0
Mode	rw

Task 2. Add Host Agent to Environment

The host agent class has been created for you. (Just like all other agents with driver, monitor and sequencer) Add it to the router environment.

- 1. Open router env.sv file in an editor
- 2. In the class, declare a host agent handle, call it h agt
- 3. In build phase, construct the h agt object
- 4. Save and close the file

Task 3. Configure Host Agent with Interface

The configuration of the host interface is done for you. Take a look at the test.sv and test_collection.sv files if interested. Otherwise, continue on to Task 4.

Task 4. Add Host Reset to Top Reset Sequence

Like all other agents, you need to execute a reset sequence for the host interface at the reset phase. To conserve lab time, this sequence is written for you. If interested, take a look at the host_reset_sequence class in the host_sequence.sv file. Otherwise, add this host_reset_sequence to the top reset sequence.

- 1. Open top_reset_sequencer.sv file in an editor
- 2. Add a host_sequencer handle, call it h_sqr
- **3.** Save and close the file
- 4. Open top reset sequence.sv file in an editor

- 5. Create a host reset sequence handle called h seq
- 6. In the body () method, within the fork-join structure, add a thread to execute the host_reset_sequence with the parent sequencer's h_sqr when reset is detected
- 7. Save and close the file

You need to make the host agent accessible via the top reset sequencer.

- 8. Open test collection.sv in an editor
- 9. Locate the connect phase () method
- **10.** Assign the host sequencer handle in the top reset sequencer to reference the host sequencer in the environment
- 11. Save and close the file
- **12.** Compile and run simulation

```
> make
```

You will see a UVM_WARNING message. This is expected at this juncture of the testbench development. Ignore this for now.

13. Open up a debugger window

```
> make dve or make verdi
```

14. Check the waveform and make sure that the reset set the host control signals (wr n, rd n) are de-asserted as a result of the reset.

Once the reset works, DUT register access development can begin.

Task 5. Create Sequence without Register Abstraction

The first step in implementing DUT register access is to implement all classes supporting the access without UVM register abstraction.

The host data class is created for you in host_data.sv. It's pretty simple. It contains data and address field with two possible kinds of operation: read and write.

```
class host_data extends uvm_sequence_item;
  rand uvm_access_e kind;
  rand uvm_status_e status;
  rand bit[15:0] addr;
  rand bit[15:0] data;
  ...
endclass
```

Generate a few transaction to verify that the interface works.

- 1. Open host sequence.sv file in an editor
- 2. In host_bfm_sequence class, create a body () method to do the following:
 - Read and check the content of the **HOST_ID** register at address 'h0 (The value must be 'h5A03)
 - Read and check the content of the LOCK register at address 'h0100 (The value must be 'hffff after reset)
 - Write all one's ('1) to the register to enable all ports
 - Read and check the content of the **LOCK** register to verify it is now '0
 - Write gray code pattern to the R ARRAY
 - Read back and check the content of the R ARRAY for gray code pattern
 - Write walking one's to the RAM
 - Read back and check the content of the RAM for walking one's
- **3.** Save and close the file

Task 6. Execute the Host BFM Sequence

- 1. Open test collection.sv in an editor
- 2. Locate the test host bfm class
- 3. In the build phase () method
 - Turn off all sequencer execution at configure phase and main phase
 - Configure the host agent to execution the **host_bfm_sequence** at the main phase.
- 4. Save and close the file
- **5.** Verify the DUT registers can be accessed:
 - > make test=test host bfm

Task 7. Attempt to Drive Packets through DUT

Once the DUT register access is verified, try to execute test_base and see if packets can be driven through the DUT.

- 1. Execute test base:
 - > make

The expected result is: input packets are seen, but no output packets are observed. It is because the router has been modified to disable all output ports by default. You will need to write to DUT control register to unlock the ports.

Rather than using a non-RAL sequence to unlock the ports, implement RAL. Then use the RAL abstraction to unlock the ports.

Task 8. Create the Register Abstraction (.ralf) File

The first step in RAL implementation is to create an abstraction file to describe the registers. When using Synopsys' ralgen, the file is a .ralf file.

- 1. Open host.ralf file in an editor
- 2. Create the RAL register definitions to represent the following set of registers and memory in the host.ralf file

Hint: reference the lecture slides (or the solution page)

For this task, just populate the register and memory field definitions. The block definition is done for you in the file. The system definition is not necessary for this lab. (You are verifying the DUT at the block level)

Mode

ro Read Only

rw Read/Write

w1c Write 1 clears field

HOST_ID Register		
Field	CHIP_ID	REV_ID
Bits	15-8	7-0
Mode	ro	ro
Reset	0x5A	0x03

Address Map

HOST_ID 0x0000

LOCK 0x0100

R_ARRAY 0x1000-0x10FF

RAM 0x4000-0x4FFF

LOCK Register	
Field	LOCK
Bits	15-0
Mode	w1c
Reset	0xffff

R_ARRAY[256] Registers	
Field	H_REG
Bits	15-0
Mode	rw
Reset	0x0000

RAM (4K)	
Bits	15-0
Mode	rw

3. Close the file when done

Task 9. Generate UVM Register Classes

- 1. Convert the RAL file content into UVM register classes with ralgen:
 - > ralgen -uvm -t host regmodel host.ralf


You should see a file called ral_host_regmodel.sv created by ralgen. If interested, take a look at the content. Otherwise, continue to the next task.

Task 10. Create Sequence Using UVM Registers

- 1. Open host sequence.sv file in an editor
- 2. Locate the RAL sequence base class called host ral sequence base
- 3. Inside the class, create an instance of ral_block_host_regmodel called regmodel
- 4. In the pre_start() method, use uvm_config_db to retrieve the register model
- 5. Locate the RAL test sequence class called host ral test sequence
- 6. Inside the class, define a body() task that configures the DUT register with the exact same information as host_bfm_sequence, except use UVM register representation rather than direct access.
- 7. When done, save and close the file.

Task 11. Implement UVM Register Translator

In order for the UVM Register content to be processed correctly by the host driver, you must implement a UVM register to host bus and host bus to UVM register translator.

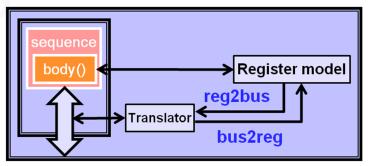

- 1. Open the host data.sv file in an editor
- 2. Locate class reg adapter
- 3. In the reg2bus() method, copy the generic UVM register (rw argument of method) content into a host_data object and return the host_data handle.

- 4. In the bus2reg() method, check to see that the uvm_sequence_item (bus_item) from the argument is a host_data type. Then, copy the host_data object content into the UVM register object (rw).
 - Reference the lecture slides for exact syntax.
- 5. When done, save and close the file.

Task 12. Instantiate RAL Model in Environment

- 1. Open router env.sv in an editor
- 2. Inside the class
 - Declare a ral_block_host_regmodel handle call it regmodel
 - Declare a reg adapter handle, call it adapter


3. In the build phase construct the adapter object

```
adapter = reg_adapter::type_id::create("adapter", this);
```

- 4. Continuing in the build phase, use uvm_config_db to retrieve regmodel
- 5. If regmodel is null do the following:
 - Add a string called hdl path
 - Retrieve hdl path from uvm config db. If not found issue warning.
 - Contruct the regmodel object
 - Call the regmodel's build() method to build the RAL representation
 - Lock regmodel and create the address map with lock model () method
 - Set hdl root path using regmodel's set hdl path root() method.

6. In all cases, configure the host agent to use the regmodel

7. In connect phase, tie the regmodel's address map to a specific sequencer by calling the set_sequencer() method. In the argument, pass in sequencer handle (h agt.sqr) and RAL translator handle (adapter).

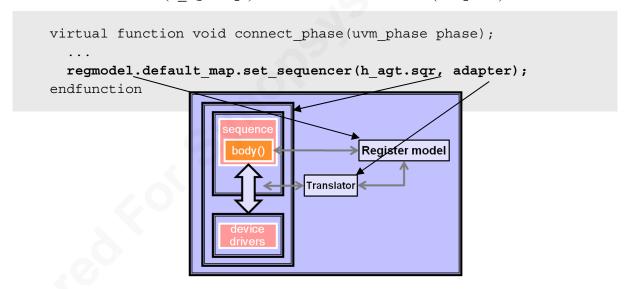

8. When done, save and close the file.

Task 13. Enable DPI Backdoor and Create RAL Test

Execute the RAL sequence in a test.

- 1. Open test collection.sv file in an editor
- 2. In test base class, set the remaining hdl path for DPI backdoor access
- 3. Locate the test_host ral class
- 4. In the build phase, turn off sequences at the configure and main phase

- 5. Then, set the host agent's sequencer at the main_phase to execute host ral test sequence
- **6.** Save and close the file

Task 14. Compile And Simulate

To verify that the RAL implementation works, execute the host_ral_test_sequence with test_host_ral.

- 1. Compile and simulate the testbench.
 - > make test=test host ral

You should see the same results as test_host_bfm.

Task 15. Unlock Ports with RAL Sequence

Now that the RAL access is working, use RAL to enable all ports. The sequence is already written for you. It is called ral_port_unlock_sequence. You just need to uncomment the code and run this sequence during configure phase to unlock all the ports.

- 1. Open host_sequence.sv file in an editor
- 2. Locate and uncomment class ral_port_unlock_sequence
 Take a look at the content and make sure you understand what this sequence is doing.
- 3. Save and close the file
- 4. Open router env.sv file in an editor
- 5. In the build phase, configure the host_agent to execute the ral_port_unlock_sequence at the configure phase.
- **6.** Save and close the file

Task 16. Compile And Simulate

- 1. Compile and simulate the testbench.
 - > make

You should see that all packets are successfully processed by the DUT once again.

Task 17. Implement Explicit Predictor

Once you have verified the RAL operation, you should also set up the predictor. The predictor will be needed for the next to last step – self test.

- 1. Open router env.sv in an editor
- 2. Inside the class, use typedef to create a uvm_reg_predictor parameterized to host_data called hreg_predictor
- 3. Declare a handle of hreg predictor called hreg predict

```
typedef uvm_reg_predictor #(host_data) hreg_predictor;
hreg_predictor hreg_predict;
```

4. In build phase, construct the predictor object

```
hreg_predict = hreg_predictor::type_id::create("h_reg_predict", this);
```

- 5. In connect phase
 - Turn off auto predict
 - Set the map of the predictor to the regmodel's map
 - Set the predictor's adapter to the adapter
 - Connect host agent's analysis port of the predictor's bus in analysis port

```
regmodel.default_map.set_auto_predict(0);
hreg_predict.map = regmodel.get_default_map();
hreg_predict.adapter = adapter;
h_agt.analysis_port.connect(hreg_predict.bus_in);
```

- **6.** Save and close the file
- 7. Compile and simulate the testbench
 - > make

Everything should still pass. Now you can also run self-tests in the next task.

Task 18. Executing RAL Self-Test

- 1. Open test collection.sv in an editor
- 2. Locate the test_ral selftest class at the bottom of the file
- **3.** Uncomment the code for the RAL self test

```
class test ral selftest extends test base;
 `uvm component utils(test ral selftest)
string
                        seq name="uvm reg bit bash seq";
uvm reg sequence
                        selftest seq;
virtual reset sequence v reset seq;
function new(string name, uvm component parent);
  super.new(name, parent);
endfunction
virtual function void build phase (uvm phase phase); super.build phase (phase);
 uvm confiq db #(uvm object wrapper)::set(this,"*","default sequence",null);
endfunction
virtual task run phase (uvm phase phase);
 phase.raise objection(this, "Starting reset tests");
 v reset seq = virtual reset sequence::type id::create("v reset seq", this);
 v reset seg.start(env.v reset sqr);
 clp.get arg value("+seq=", seq name);
 $cast(selftest seq, factory.create object by name(seq name));
 selftest seq.model = env.reqmodel;
 selftest seq.start(env.h agt.sqr);
 phase.drop objection(this, "Done with register tests");
endtask
endclass
```

- **4.** Save and close the file
- 5. Compile and simulate the testbench to run the bit bash test

```
> make test=test ral selftest
```

You should see that each bit of the registers is verified.

Note that through the seq run-time switch, you can pick any RAL test sequence to execute without re-compilation like the following:

```
> make test=test ral selftest seq=uvm reg hw reset seq
```

Task 19. Turn on Functional Coverage

The ralgen utility is capable of creating functional coverage for the DUT registers. The user guide is at: \$VCS_HOME/doc/UserGuide/pdf/uvm_ralgen_ug.pdf. There are three types of functional coverage that ralgen can create: Register Bits coverage, Address Map coverage and Field Values coverage. The switches are: -c b for Register Bits coverage; -c a for Address Map coverage; -c f for Field Value coverage.

For this lab, try the Register Bits Coverage.

1. Re-run ralgen to add Register Bits coverage:

```
> ralgen -uvm -c b -t host regmodel host.ralf
```

ralgen embedded functional coverage in the register model. You need to enable the coverage collection in the test.

- 2. Open test collection.sv in an editor
- 3. In test_base's end_of_elaboration_phase() method (to allow for all structural changes to be completed), turn on coverage for the regmodel:

```
env.regmodel.set_coverage(UVM_CVR_ALL);
```

- 4. Open test.sv in an editor
- 5. In the initial block the following is done for you to enable RAL coverage:

```
uvm_reg::include_coverage("*", UVM_CVR_ALL);
```

- **6.** Compile and simulate the testbench
 - > make
- 7. Generate coverage report:
 - > make cover
- **8.** Take a look at the coverage report:
 - > firefox urgReport/groups.html &

Congratulations, you have completed Lab 6!

Answers / Solutions

test.sv Solution:

```
program automatic test;
import uvm_pkg::*;
import router_test_pkg::*;
initial begin
   uvm_resource_db#(virtual router_io)::set("router_vif", "",
router_test_top.router_if);
   uvm_resource_db#(virtual reset_io)::set("reset_vif", "",
router_test_top.reset_if);
   uvm_resource_db#(virtual host_io)::set("host_vif", "",
router_test_top.host_if);

$timeformat(-9, 1, "ns", 10);
   uvm_reg::include_coverage("*", UVM_CVR_ALL);
   run_test();
end
endprogram
```

test collection.sv Solution:

```
class test base extends uvm test;
  `uvm component utils(test base)
  uvm cmdline processor clp = uvm cmdline processor::get inst();
 router env env;
 virtual router io
                       router vif;
 virtual reset io
                       reset vif;
 virtual host io
                       host vif;
  top reset sequencer top reset sqr;
  function new(string name, uvm component parent);
    super.new(name, parent);
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
  endfunction: new
 virtual function void build phase (uvm phase phase);
    super.build phase(phase);
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
    env = router env::type id::create("env", this);
   uvm resource db#(virtual router io)::read by type("router vif",
router vif, this);
    uvm resource db#(virtual reset io)::read by type("reset vif",
reset vif, this);
   uvm confiq db#(virtual router io)::set(this, "env.i aqt[*]", "vif",
router vif);
   uvm config db#(virtual router io)::set(this, "env.o agt[*]", "vif",
router vif);
   uvm confiq db#(virtual reset io)::set(this, "env.r aqt", "vif",
reset vif);
    top reset sqr = top reset sequencer::type id::create("top reset sqr",
this);
    uvm resource db#(virtual host io)::read by type("host_vif", host_vif,
   uvm config db#(virtual host io)::set(this, "env.h agt", "vif",
host vif);
   uvm config db #(uvm object wrapper)::set(this,
"env.*.sqr.reset phase", "default sequence", null);
    uvm config db #(uvm object wrapper)::set(this,
"top_reset_sqr.reset phase", "default sequence",
top reset sequence::get type());
    uvm confiq db #(string)::set(this, "env", "hdl path",
"router test top.dut");
set type override by type(scoreboard::get type(), ms scoreboard::get type(
endfunction: build phase
```

```
virtual function void connect phase (uvm phase phase);
    super.connect phase(phase);
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
    foreach (env.i agt[i]) begin
     top reset sqr.pkt sqr.push back(env.i agt[i].sqr);
    end
    top reset_sqr.r_sqr = env.r_agt.sqr;
    top reset sqr.h sqr = env.h agt.sqr;
  endfunction: connect phase
 virtual function void end of elaboration phase (uvm phase phase);
    super.end of elaboration phase(phase);
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
    env.regmodel.set coverage(UVM CVR ALL);
  endfunction: end of elaboration phase
 virtual task shutdown phase(uvm phase phase);
    super.shutdown phase(phase);
    `uvm_info("TRACE", $sformatf("%m"), UVM HIGH);
    phase.raise objection(this);
    env.sb.wait_for_done();
    phase.drop objection(this);
  endtask: shutdown phase
 virtual function void report phase (uvm phase phase);
    super.report phase(phase);
    `uvm_info("TRACE", $sformatf("%m"), UVM_HIGH);
    `uvm info("SB REPORT", {"\n", env.sb.convert2string()}, UVM MEDIUM);
  endfunction: report phase
 virtual function void final phase (uvm phase phase);
    super.final phase(phase);
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
    if (uvm report enabled(UVM DEBUG, UVM INFO, "TOPOLOGY")) begin
     uvm root::get().print topology();
    end
    if (uvm report enabled(UVM DEBUG, UVM INFO, "FACTORY")) begin
     uvm factory::get().print();
    end
  endfunction: final phase
endclass: test base
class test da 3 inst extends test base;
  `uvm component utils(test da 3 inst)
  function new(string name, uvm component parent);
    super.new(name, parent);
    `uvm_info("TRACE", $sformatf("%m"), UVM HIGH);
 endfunction: new
```

Lab 6-18

UVM Register Abstraction SystemVerilog UVM Workshop

```
virtual function void build phase (uvm phase phase);
    super.build phase(phase);
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
    set_inst_override_by_type("env.i_agt[*].sqr.*", packet::get_type(),
packet da 3::get type());
  endfunction: build phase
endclass: test_da 3 inst
class test da 3 type extends test base;
  `uvm component utils(test da 3 type)
  function new(string name, uvm component parent);
    super.new(name, parent);
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
  endfunction: new
 virtual function void build phase (uvm phase phase);
    super.build phase(phase);
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
    set_type_override_by_type(packet::get_type(),
packet da 3::get type());
  endfunction: build phase
endclass: test da 3 type
class test da 3 seq extends test base;
  `uvm component utils(test da 3 seq)
  function new(string name, uvm component parent);
    super.new(name, parent);
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
  endfunction: new
 virtual function void build phase (uvm phase phase);
    packet_sequence::int_q_t valid da = {3};
    super.build phase(phase);
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
    uvm config db#(packet sequence::int q t)::set(this,
"env.i_agt[*].sqr.packet_sequence", "valid_da", valid_da);
   uvm config db#(int)::set(this, "env.i agt[*].sqr.packet sequence",
"item count", 20);
  endfunction: build phase
endclass: test da 3 seq
class test host bfm extends test base;
  `uvm component utils(test host bfm)
  function new(string name, uvm component parent);
    super.new(name, parent);
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
  endfunction: new
  virtual function void build phase (uvm phase phase);
    super.build phase(phase);
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
    uvm config db #(uvm object wrapper)::set(this,
"env.*.configure phase", "default sequence", null);
```

UVM Register Abstraction SystemVerilog UVM Workshop

```
uvm confiq db #(uvm object wrapper)::set(this, "env.*.main phase",
"default sequence", null);
    uvm config db #(uvm object wrapper)::set(this,
"env.h_agt.sqr.main_phase", "default_sequence",
host bfm sequence::get type());
  endfunction: build phase
endclass: test host bfm
class test host ral extends test base;
  `uvm component utils(test host ral)
  function new(string name, uvm component parent);
    super.new(name, parent);
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
  endfunction: new
 virtual function void build phase (uvm phase phase);
    super.build phase(phase);
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
    uvm_config_db #(uvm_object_wrapper)::set(this,
"env.*.configure phase", "default sequence", null);
    uvm config db #(uvm object wrapper)::set(this, "env.*.main phase",
"default sequence", null);
    uvm config db #(uvm object wrapper)::set(this,
"env.h agt.sqr.main phase", "default sequence",
host ral test sequence::get type());
  endfunction: build phase
endclass: test host ral
class test ral selftest extends test base;
  `uvm component utils(test ral selftest)
                         seq name="uvm reg bit bash seq";
  string
                         selftest seq;
  uvm req sequence
  top reset sequence
                        top reset seq;
  function new(string name, uvm component parent);
    super.new(name, parent);
    `uvm_info("TRACE", $sformatf("%m"), UVM_HIGH);
  endfunction: new
 virtual function void build phase (uvm phase phase);
    super.build phase(phase);
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
   uvm config db
#(uvm object wrapper)::set(this,"*","default sequence",null);
 endfunction: build phase
 virtual task run phase(uvm phase phase);
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
    phase.raise_objection(this, "Starting reset tests");
    top_reset_seq = top_reset_sequence::type id::create("top reset seq",
this);
    top reset seq.start(top reset sqr);
    clp.get arg value("+seq=", seq name);
```

Lab 6-20

UVM Register Abstraction SystemVerilog UVM Workshop

```
$cast(selftest_seq,
uvm_factory::get().create_object_by_name(seq_name));
    selftest_seq.model = env.regmodel;
    selftest_seq.start(env.h_agt.sqr);
    phase.drop_objection(this, "Done with register tests");
    endtask: run_phase
endclass: test_ral_selftest
```

host data.sv Solution:

```
class host data extends uvm sequence item;
  rand uvm access e kind;
 rand uvm status e status;
 rand bit [15:0]
                   addr:
 rand bit[15:0]
                    data:
  `uvm object utils begin(host data)
    `uvm field int(addr, UVM ALL ON)
    `uvm field_int(data, UVM_ALL_ON)
    `uvm field enum(uvm access e, kind, UVM ALL ON)
    `uvm field enum(uvm status e, status, UVM ALL ON)
  `uvm object utils end
  constraint valid { addr inside {'h0, 'h100, ['h1000:'h10ff],
['h4000:'h4ffff]}; }
  function new(string name="host data");
    super.new(name);
    `uvm info("Trace", $sformatf("%m"), UVM HIGH);
    status.rand mode(0);
  endfunction
endclass
class reg adapter extends uvm reg adapter;
  `uvm_object_utils(reg_adapter)
  function new(string name="reg adapter");
    super.new(name);
    `uvm info("Trace", $sformatf("%m"), UVM HIGH);
  endfunction
 virtual function uvm sequence item req2bus(const ref uvm req bus op rw);
   host data tr;
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
   tr = host data::type id::create("tr");
    tr.addr = rw.addr;
    tr.data = rw.data;
    tr.kind = rw.kind;
   return tr;
 endfunction
 virtual function void bus2req(uvm sequence item bus item, ref
uvm req bus op rw);
   host data tr;
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
    if (!$cast(tr, bus item)) begin
      `uvm fatal("NOT HOST REG TYPE", "bus item is not correct type");
    end
   rw.addr = tr.addr;
   rw.data = tr.data;
   rw.kind = tr.kind;
    rw.status = tr.status;
  endfunction
endclass
```

host sequence.sv Solution:

```
class host sequence base extends uvm sequence #(host data);
  `uvm object utils(host sequence base)
 virtual host io
                    vif;
 uvm sequencer base p sqr;
  function new(string name = "host sequence base");
    super.new(name);
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
    `ifndef UVM VERSION 1 1
    set automatic phase objection(1);
    `endif
 endfunction
 virtual task pre start();
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
    p sqr = get sequencer();
    `ifdef UVM VERSION 1 1
    if ((get parent sequence() == null) && (starting phase != null)) begin
      starting phase.raise objection(this);
    end
    `endif
    if (uvm config db#(virtual host io)::get(p sqr.get parent(), "", "vif",
vif)) begin
      `uvm info("HOST SEQ CFG", "Has access to host interface", UVM HIGH);
    end
 endtask
  `ifdef UVM VERSION 1 1
 virtual task post start();
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
    if ((get parent sequence() == null) && (starting phase != null)) begin
      starting phase.drop objection(this);
    end
 endtask
  `endif
endclass
class host reset sequence extends host sequence base;
  `uvm object utils(host reset sequence)
  function new(string name = "host reset sequence");
    super.new(name);
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
 endfunction
 virtual task body();
   vif.wr n = 1'b1;
   vif.rd n = 1'b1;
   vif.address ='z;
   vif.data = 'z;
 endtask
endclass
class host bfm sequence extends host sequence base;
  `uvm object utils(host bfm sequence)
  function new(string name = "host bfm sequence");
    super.new(name);
```

UVM Register Abstraction SystemVerilog UVM Workshop

```
`uvm info("TRACE", $sformatf("%m"), UVM HIGH);
  endfunction
 virtual task body();
    `uvm_info("TRACE", $sformatf("%m"), UVM_HIGH);
    `uvm do with(req, {addr == 'h0; kind == UVM READ;});
    if (req.data != 'h5a03) begin
      `uvm fatal("BFM ERR", $sformatf("HOST ID is %4h instead of 'h5a03",
req.data));
    end else begin
      `uvm info("BFM TEST", $sformatf("HOST ID is %4h the expected value is
'h5a03", req.data), UVM MEDIUM);
    end
    `uvm do with(req, {addr == 'h100; kind == UVM READ;});
    if (req.data != '1) begin
      `uvm fatal("BFM ERR", $sformatf("LOCK is %4h instead of 'hffff",
req.data));
    end
    `uvm_do_with(req, {addr == 'h100; data == '1; kind == UVM_WRITE;});
    `uvm do with(req, {addr == 'h100; kind == UVM READ;});
    if (req.data != '0) begin
      `uvm fatal("BFM ERR", $sformatf("LOCK is %4h instead of 'h0000",
req.data));
    end else begin
      `uvm info("BFM TEST", $sformatf("LOCK is %4h the expected value is
'h0000", req.data), UVM MEDIUM);
    end
    for (int i=0; i<256; i++) begin
      `uvm do with(req, {addr == 'h1000+i; data == (i ^ (i >> 1)); kind ==
UVM WRITE; });
    end
    for (int i=0; i<256; i++) begin
      `uvm_do_with(req, {addr == 'h1000+i; kind == UVM READ;});
      if (req.data != (i ^ (i >> 1))) begin
        `uvm fatal("BFM ERR", $sformatf("R ARRAY is %4h instead of %4h",
req.data, i^{(i)} (i >> 1);
      end
    `uvm info("BFM TEST", "R ARRAY contains the expected values",
UVM MEDIUM);
endclass
class host ral sequence base extends uvm reg sequence #(host sequence base);
  `uvm object utils(host ral sequence base)
 ral_block_host_regmodel regmodel;
  function new(string name = "host ral sequence base");
    super.new(name);
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
 endfunction
 virtual task pre start();
    super.pre start();
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
    if (!uvm confiq db#(ral block host regmodel)::get(p sqr.get parent(), "",
"regmodel", regmodel)) begin
```

```
`uvm info("RAL CFG", "reqmodel not set through configuration. Make
sure it is set by other mechanisms", UVM MEDIUM);
    if (regmodel == null) begin
      `uvm fatal("RAL CFG", "regmodel not set");
 endtask
endclass
class host ral test sequence extends host ral sequence base;
  `uvm object utils(host ral test sequence)
  function new(string name = "host ral test sequence");
    super.new(name);
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
 endfunction
 virtual task body();
   uvm status e status;
    uvm req data t data;
    regmodel.HOST ID.read(.status(status), .value(data), .path(UVM BACKDOOR),
.parent(this));
    if (data != 'h5a03) begin
      `uvm fatal("RAL ERR", $sformatf("HOST ID is %4h instead of 'h5a03",
data));
    end else begin
      `uvm info("RAL TEST", $sformatf("HOST ID is %4h the expected value is
'h5a03", data), UVM MEDIUM);
    regmodel.LOCK.read(.status(status), .value(data), .path(UVM BACKDOOR),
.parent(this));
    if (data != 'hffff) begin
      `uvm fatal("RAL ERR", $sformatf("LOCK is %4h instead of 'hffff",
data));
    end
    regmodel.LOCK.write(.status(status), .value('1), .path(UVM FRONTDOOR),
.parent(this));
    regmodel.LOCK.read(.status(status), .value(data), .path(UVM BACKDOOR),
.parent(this));
    if (data != '0) begin
      `uvm fatal("RAL ERR", $sformatf("LOCK is %4h instead of 'h0000",
data));
    end else begin
      `uvm info("RAL TEST", $sformatf("LOCK is %4h the expected value is
'h0000", data), UVM MEDIUM);
    end
    for (int i=0; i<256; i++) begin
      regmodel.R ARRAY[i].write(.status(status), .value(i ^ (i >> 1)),
.path(UVM FRONTDOOR), .parent(this));
    for (int i=0; i<256; i++) begin
      regmodel.R ARRAY[i].read(.status(status), .value(data),
.path(UVM BACKDOOR), .parent(this));
    if (data != (i ^ (i >> 1))) begin
```

```
`uvm fatal("RAL ERR", $sformatf("R ARRAY is %4h instead of %4h",
data, i ^ (i >> 1)));
   end
    `uvm info("RAL TEST", "R ARRAY contains the expected values",
UVM MEDIUM);
  endtask
endclass
class ral port unlock sequence extends host ral sequence base;
  `uvm object utils(ral port unlock sequence)
  function new(string name = "ral port unlock sequence");
    super.new(name);
    `uvm_info("TRACE", $sformatf("%m"), UVM_HIGH);
  endfunction
 virtual task body();
   uvm status e status;
   uvm reg data t data;
   regmodel.LOCK.write(.status(status), .value('1), .path(UVM FRONTDOOR),
.parent(this));
 endtask
endclass
```

host.ralf Solution:

```
register HOST ID {
  field REV ID {
   bits 8;
    access ro;
   reset 'h03;
  field CHIP ID {
   bits 8;
    access ro;
   reset 'h5a;
register LOCK {
 field LOCK {
   bits 16;
   access w1c;
    reset 'hffff;
register R ARRAY {
  field H_REG {
   bits \overline{16};
   access rw;
   reset 'h0000;
memory RAM {
 size 4k;
 bits 16;
 access rw;
block host regmodel {
 bytes 2;
 register HOST ID
                           (host id)
                                           @'h0000;
 register PORT LOCK (lock)
                                           @'h0100;
  register REG ARRAY[256] (host reg[%d]) @'h1000; # array must specify HDL
index
                                           @'h4000;
  memory
           RAM
                           (ram)
```

router env.sv Solution:

```
class router env extends uvm env;
  `uvm component utils(router env)
              r_agt;
  reset agent
 input agent i_agt[16];
  output agent o agt[16];
  scoreboard
               sb;
 host agent h agt;
  ral block host regmodel regmodel;
  reg adapter adapter;
  typedef uvm req predictor #(host data) hreq predictor;
 hreq predictor hreq predict;
  function new(string name, uvm component parent);
    super.new(name, parent);
    `uvm_info("TRACE", $sformatf("%m"), UVM_HIGH);
  endfunction: new
 virtual function void build phase (uvm phase phase);
    super.build phase(phase);
    `uvm info("TRACE", $sformatf("%m"), UVM_HIGH);
    r agt = reset agent::type id::create("r agt", this);
    uvm config db #(uvm object wrapper)::set(this, "r agt.sqr.reset phase",
"default sequence", reset sequence::qet type());
    foreach (i agt[i]) begin
      i agt[i] = input agent::type id::create($sformatf("i agt[%0d]", i),
this);
     uvm config db #(int)::set(this, i agt[i].get name(), "port id", i);
     uvm config db #(uvm object wrapper)::set(this, {i agt[i].get name(),
".", "sqr.reset_phase"}, "default_sequence",
router input port reset sequence::get type());
     uvm config db #(uvm object wrapper)::set(this, {i agt[i].get name(),
".", "sqr.main phase"}, "default sequence", packet sequence::get type());
    sb = scoreboard::type id::create("sb", this);
    foreach (o agt[i]) begin
      o agt[i] = output agent::type id::create($sformatf("o agt[%0d]", i),
this);
      uvm config db #(int)::set(this, o agt[i].get name(), "port id", i);
   end
   h_agt = host_agent::type_id::create("h_agt", this);
    adapter = reg adapter::type id::create("adapter", this);
   uvm confiq db #(ral block host reqmodel)::get(this, "", "reqmodel",
regmodel);
    if (regmodel == null) begin
      string hdl path;
```

```
`uvm info("HOST CFG", "Self constructing regmodel", UVM MEDIUM);
      if (!uvm config db #(string)::get(this, "", "hdl path", hdl path))
begin
        `uvm warning("HOST CFG", "HDL path for DPI backdoor not set!");
      regmodel = ral block host regmodel::type id::create("regmodel", this);
      regmodel.build();
      regmodel.lock model();
      regmodel.set hdl path root(hdl path);
    end
    uvm config db #(ral block host regmodel)::set(this, h agt.get name(),
"regmodel", regmodel);
    uvm config db #(uvm object wrapper)::set(this, {h agt.get name(), ".",
"sqr.configure phase"}, "default sequence",
ral port unlock_sequence::get_type());
    hreg predict = hreg predictor::type id::create("h reg predict", this);
  endfunction: build phase
 virtual function void connect phase (uvm phase phase);
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
    foreach (i agt[i]) begin
      i aqt[i].analysis port.connect(sb.before export);
    foreach (o agt[i]) begin
      o agt[i].analysis port.connect(sb.after export);
    end
    regmodel.default map.set sequencer(h agt.sqr, adapter);
    regmodel.default map.set auto predict(0);
    hreg predict.map = regmodel.get default map();
    hreq predict.adapter = adapter;
    h agt.analysis port.connect(hreg predict.bus in);
  endfunction: connect phase
endclass: router env
```

top reset sequence.sv Solution:

```
class top reset sequence extends uvm sequence;
  `uvm object utils(top reset sequence)
  `uvm_declare_p_sequencer(top_reset_sequencer)
 reset sequence
                                    r seq;
 router input port reset sequence i seq;
 uvm event reset event = uvm event pool::get global("reset");
 host reset sequence
                        h_seq;
 function new(string name="virtual reset sequence");
    super.new(name);
    `uvm_info("TRACE", $sformatf("%m"), UVM_HIGH);
    `ifndef UVM VERSION 1 1
    set automatic phase objection(1);
    `endif
 endfunction: new
 virtual task body();
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
    fork
      `uvm do on(r seq, p sequencer.r sqr);
      foreach (p_sequencer.pkt_sqr[i]) begin
        int j = i;
        fork
          begin
            reset event.wait on();
            `uvm do on(i seq, p sequencer.pkt sqr[j]);
          end
        join none
      end
      begin
        reset event.wait on();
        `uvm_do_on(h_seq, p_sequencer.h_sqr);
      end
    join
 endtask: body
  `ifdef UVM VERSION 1 1
 virtual task pre start();
    `uvm_info("TRACE", $sformatf("%m"), UVM_HIGH);
    if ((get parent sequence() == null) && (starting phase != null)) begin
      starting phase.raise objection(this);
   end
 endtask: pre start
 virtual task post start();
    `uvm info("TRACE", $sformatf("%m"), UVM HIGH);
    if ((get parent sequence() == null) && (starting phase != null)) begin
      starting phase.drop objection(this);
   end
 endtask: post start
  `endif
endclass: top reset sequence
```